

# 23E AUTOMATIC TRANSMISSION W5A51 <AWD>

## CONTENTS

### GENERAL SPECIFICATIONS

### SERVICE SPECIFICATIONS

### LUBRICANT

### SPECIAL TOOLS

### ON-VEHICLE SERVICE

AUTOMATIC TRANSMISSION FLUID CHECK

AUTOMATIC TRANSMISSION FLUID  
REPLACEMENT

TRANSFER CASE OIL CHECK

TRANSFER CASE OIL REPLACEMENT

SELECTOR LEVER OPERATION CHECK

KEY INTERLOCK STRUCTURE CHECK

SHIFT LOCK STRUCTURE CHECK

### TRANSMISSION CONTROL

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

SELECTOR LEVER ASSEMBLY

CHECKING MANUAL CONTROL SWITCH  
ASSEMBLY CIRCUIT

### TRANSMISSION SHIFT LOCK

REMOVAL AND INSTALLATION

TRANSMISSION SHIFT LOCK

### TRANSMISSION ASSEMBLY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

#### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

Section titles with the asterisk (\*) in the table of contents in each group indicate operations requiring warnings.

**TRANSFER ASSEMBLY**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

**GENERAL INFORMATION**

CONSTRUCTION DIAGRAM

POWER TRAIN