

36 PARKING BRAKE

CONTENTS

GENERAL INFORMATION

CONSTRUCTION DIAGRAM

SERVICE SPECIFICATIONS

LUBRICANTS

ON-VEHICLE SERVICE

PARKING BRAKE LEVER STROKE CHECK

LINING RUNNING-IN

REPLACING DUST BOOT

PARKING BRAKE SWITCH CHECK

PARKING BRAKE LEVER

REMOVAL AND INSTALLATION

PARKING BRAKE CABLE

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

PARKING BRAKE

REMOVAL AND INSTALLATION

PARKING BRAKE

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

INSPECTION

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.