

51 EXTERIOR

CONTENTS

SERVICE SPECIFICATION

SEALANT AND ADHESIVE

SPECIAL TOOLS

FRONT BUMPER <MAGNA/VERADA>

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY <MAGNA>

DISASSEMBLY AND REASSEMBLY <VERADA>

FRONT BUMPER <VR-X>

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

REAR BUMPER <MAGNA SEDAN>

REMOVAL AND INSTALLATION

REAR BUMPER <VERADA SEDAN>

REMOVAL AND INSTALLATION

REAR BUMPER <WAGON>

REMOVAL AND INSTALLATION

GRILLES AND GARNISHES

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

MOULDINGS

REMOVAL AND INSTALLATION

AERO PARTS

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

REAR SPOILER

REMOVAL AND INSTALLATION

WINDSHIELD WIPER AND WASHER

REMOVAL AND INSTALLATION

REAR WIPER AND WASHER

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINTS

INSTALLATION SERVICE POINT

INSPECTION

DOOR MIRROR

REMOVAL AND INSTALLATION

INSPECTION

ROOF RACK

REMOVAL AND INSTALLATION

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.