

52A INTERIOR

CONTENTS

SPECIAL TOOLS

INSTRUMENT PANEL

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

FLOOR CONSOLE

REMOVAL AND INSTALLATION

TRIMS<SEDAN>

REMOVAL AND INSTALLATION

TRIMS<SEDAN>

REMOVAL AND INSTALLATION

TRIMS<WAGON>

REMOVAL AND INSTALLATION

HEADLINING AND INSIDE REAR VIEW

MIRROR<SEDAN>

REMOVAL AND INSTALLATION

HEADLINING AND INSIDE REAR VIEW

MIRROR<WAGON>

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

FRONT SEAT

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINT

INSPECTION

REAR SEAT<SEDAN>

REMOVAL AND INSTALLATION

REAR SEAT<WAGON>

REMOVAL AND INSTALLATION

FRONT SEAT BELT

REMOVAL AND INSTALLATION

INSPECTION

REAR SEAT BELT<SEDAN>

REMOVAL AND INSTALLATION

REAR SEAT BELT<WAGON>

REMOVAL AND INSTALLATION

REAR CENTRE SEAT BELT<WAGON>

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.