

52B SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

GENERAL INFORMATION

SEAT BELT WITH PRE-TENSIONER
CONSTRUCTION DIAGRAM
WARNING/CAUTION LABELS

SRS SERVICE PRECAUTIONS

SPECIAL TOOLS

TEST EQUIPMENT

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS
TROUBLESHOOTING
DIAGNOSIS FUNCTION
INSPECTION CHART FOR DIAGNOSIS
TROUBLE CODES
INSPECTION PROCEDURE CLASSIFIED BY
DIAGNOSIS CODE
SRS WARNING LIGHT CHECK
INSPECTION CHART FOR TROUBLE
SYMPTOMS
INSPECTION PROCEDURE FOR TROUBLE
SYMPTOMS

SRS MAINTENANCE

SRS COMPONENT VISUAL CHECK

POST-COLLISION DIAGNOSIS

SRS-ECU MEMORY CHECK
REPAIR PROCEDURE

INDIVIDUAL COMPONENT SERVICE

SRS AIR BAG CONTROL UNIT (SRS-ECU)

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINT
INSTALLATION SERVICE POINTS
INSPECTION

AIR BAG MODULES AND CLOCK SPRING

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINTS
INSTALLATION SERVICE POINTS
INSPECTION

CAUTION

- Carefully read and observe the information in the SRS SERVICE PRECAUTIONS prior to any service.
- For information concerning troubleshooting or maintenance, always observe the procedures in the Troubleshooting or the SRS Maintenance sections, respectively.
- If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the INDIVIDUAL COMPONENT SERVICE section for the components involved.
- If you have any questions about the SRS, please contact your local distributor.

FRONT SEATBELTS WITH PRETENSIONER

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

INSPECTION

**AIR BAG MODULE DISPOSAL
PROCEDURES**

UNDEPLOYED AIR BAG MODULE DISPOSAL

DEPLOYED AIR BAG MODULE DISPOSAL

**SEAT BELT WITH PRETENSIONER
DISPOSAL PROCEDURE**

DEPLOYED PRETENSIONER FITTED SEAT
BELT DISPOSAL
