

54 CHASSIS ELECTRICAL

CONTENTS

HOW TO READ CONFIGURATION DIAGRAMS

HOW TO READ CIRCUIT DIAGRAMS

MARKINGS FOR CONNECTOR EARTHING

WIRE COLOUR CODES

ABBREVIATION SYMBOLS

SPECIAL TOOLS

BATTERY

ON-VEHICLE SERVICE

FLUID LEVEL AND SPECIFIC GRAVITY CHECK

BATTERY INSPECTION

BATTERY CHARGING

IGNITION SWITCH

REMOVAL AND INSTALLATION

BODY ELECTRONICS MODULE (BEM)

SPECIAL TOOLS

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS
TROUBLESHOOTING

DIAGNOSIS FUNCTION

BASIC TEST MODE (BTM) PROCEDURE

FLASH CODE REFERENCE TABLE

OUTPUT TEST CHECKLIST

INPUT TEST CHECKLIST

INSPECTION CHART FOR TROUBLE
SYMPTOMS

IMMOBILISER

DIAGNOSIS FUNCTION

DIAGNOSIS CODES

INSPECTION CHART FOR IMMOBILISER
SYSTEM DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS
CODES

BEM PINOUT REFERENCE TABLE

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

ON-VEHICLE SERVICE
IMMOBILISER TEACHING OPTIONS
MUT-II IMMOBILISER MENU

RF TRANSMITTER

BATTERY TESTING
BATTERY REPLACEMENT
PROGRAMMING RF TRANSMITTERS

COMBINATION METERS

SPEEDOMETER CHECK <2WD>
TACHOMETER CHECK
FUEL GAUGE TEST <2WD>
LOW FUEL WARNING LAMP
FUEL GAUGE UNIT CHECK
FUEL GAUGE CHECK <AWD>
INSPECTION
LOW FUEL WARNING LAMP
ENGINE COOLANT TEMPERATURE GAUGE
TEST
ENGINE COOLANT TEMPERATURE GAUGE
UNIT CHECK

COMBINATION METERS

REMOVAL AND INSTALLATION

TRIP COMPUTER

SERVICE SPECIFICATIONS
SPECIAL TOOLS
PRELIMINARY TROUBLE SYMPTOM CHECKS
INSPECTION CHART FOR TROUBLE
SYMPTOMS
TRIP COMPUTER SETTING PROCEDURE
CENTRE MESSAGE DISPLAY
REMOVAL AND INSTALLATION
EXTERIOR LAMPS
HEADLAMPS
ON-VEHICLE SERVICE
HEADLIGHT AIMING
LUMINOUS INTENSITY MEASUREMENT

HEADLAMP, POSITION LAMP ASSEMBLY AND
FRONT TURN SIGNAL LAMP ASSEMBLY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

SIDE TURN SIGNAL LAMP

REMOVAL AND INSTALLATION

FOG LAMP

FOG LAMP AIMING

REMOVAL AND INSTALLATION

REAR COMBINATION LAMP AND REAR LID
LAMP

REMOVAL AND INSTALLATION

HIGH MOUNTED STOP LAMP

REMOVAL AND INSTALLATION

RHEOSTAT

REMOVAL AND INSTALLATION

HAZARD WARNING LAMP SWITCH

REMOVAL AND INSTALLATION

HORN

AUDIO UNIT

QUICK-REFERENCE TROUBLESHOOTING
CHART

AUDIO UNIT

REMOVAL AND INSTALLATION

SPEAKERS

REMOVAL AND INSTALLATION

ANTENNA

REMOVAL AND INSTALLATION

ANTENNA

INSPECTION

ANTENNA POLE REPLACEMENT

REAR WINDOW DEFOGGER

ON-VEHICLE SERVICE

PRINTED-HEATER LINE CHECK

STEERING REMOTE CONTROL AND SLIP RING

REMOVAL AND INSTALLATION