

2007 MITSUBISHI OUTLANDER BODY REPAIR MANUAL

FOREWORD

This manual has been prepared for the use of all service mechanics engaged in the body repair service. Body dimensions, welded panel replacement procedures, body sealing application instructions, and all the other information required to provide quick and accurate body repair service are contained herein. One especially important point is the welding method. All of the vehicle's original strength and durability can be maintained by following the welding procedures contained in this manual.

Now that, in order to maximize the efficiency of the repair work, first, both the extent of the damage and the replacement parts that are needed must be calculated accurately, and then the actual work must be performed accurately and efficiently.

The publications shown on the following page are also available, and should be used in conjunction with this manual.

TECHNICAL INFORMATION MANUAL

SERVICE MANUAL CD
PARTS CATALOG

MSSP-207B-2007
MSCD-007B-2007
BUM6W507A_



MITSUBISHI MOTORS
North America Inc.

Mitsubishi Motors Corporation reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured.

©2006 Mitsubishi Motors Corporation
All Rights Reserved
Printed in USA
MSSP-407B-2007

GROUP INDEX

BODY CONSTRUCTION	1
BODY DIMENSIONS	2
WELDED PANEL REPLACEMENT..	3
CORROSION PROTECTION	4
SYNTHETIC-RESIN PARTS	5
BODY COLOR	6
REFERENCE MATERIAL	8
BASE OF BODY REPAIR	9

MANUAL DESCRIPTION

CONTENTS

The first page of this manual contains a table of contents which lists the name of vehicle models and groups within each model.

TEXT

The vehicles to which the information in the text pertains are generally designated according to their body classification. In some cases, other limiting designations such as model name, type of drive system, etc., are given. If there are no such limiting designations, the information can be assumed to cover all models.

PAGE NUMBERS

All pages are numbered consecutively within each model. The page number can be found on the upper left or right of each page.

SECTION TITLES

The group titles and section titles can be found at the upper center of each page.

