


WELCOME TO THE MITSUBISHI FAMILY

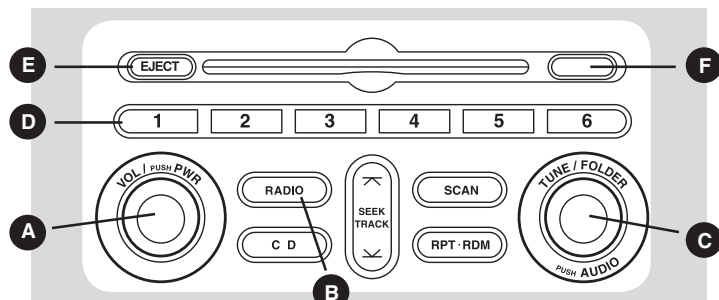

AUDIO SYSTEM (WITHOUT NAVIGATION)

Press **VOL/PWR** button (A) to turn on and off the audio system. Turn for volume control.


To select a station, press the **RADIO** button (B) to select the desired band (AM/FM/SAT).

Turn the **TUNE** button (C) to your desired station or channel.

To store a station, tune to the station you wish to store, and press one of the numbered memory buttons (D) until you hear a beep.

To load a single CD, insert the CD (label side up) into the CD slot. The CD will play automatically.

To load multiple CD's (if equipped), press the **LOAD/EJECT** button (E), then press one of the memory/disc select buttons (D). When the **READY** button (F) lights up, insert the CD. Continue one disc at a time until all the CD's are loaded.

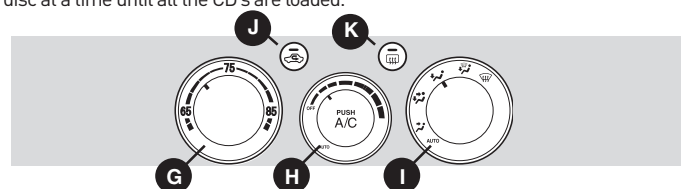

CLIMATE CONTROL

TEMPERATURE CONTROL DIAL (G): Turn clockwise to make the air warmer or counter clockwise to make the air cooler.

BLOWER SPEED SELECTION DIAL (H): Turn to set the blower speed to a comfortable level. Select **AUTO** for automatic blower and temperature control (if equipped with automatic climate control). Press dial in to turn air conditioning on or off.

MODE SELECTION DIAL (I): Turn to direct air flowing through the vents. Select **AUTO** for automatic air direction.

 
RE-CIRCULATION BUTTON (J): Press button to have air re-circulate in the cabin for quicker cooling or heating. Note that fog and mildew can build up if the button is kept on all the time.

REAR DEFROSTER BUTTON (K): Press to turn on rear defroster.


CLOCK

Press **H** to set the hour (L).

Press **M** to set the minutes (M).



*Please note that the illustrations in this Feature Guide may not match your model exactly. This Feature Guide is intended to assist you with the unique features and functions of your new Mitsubishi vehicle. It is not a substitute for your Owner's Manual. We encourage you to review your Owner's Manual and other supplementary booklets to have a better understanding of your vehicle's features, capabilities and limitations.

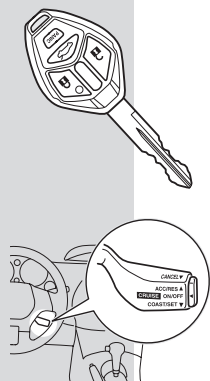

KEYLESS ENTRY SYSTEM

UNLOCK: Press once to unlock the driver's side door. Press twice to unlock all the doors.

LOCK: Press to lock the doors and trunk or liftgate.

TRUNK: Press and hold to unlock the trunk or liftgate (if equipped).

CRUISE CONTROL

ON/OFF turns cruise control ON and OFF. Must be ON to set a speed.

COAST SET sets the cruise speed.

ACC RES increases the set speed, or returns to the original set speed.

CANCEL ends constant-speed driving.

HEADLAMPS

Rotate the outer knob to the first position to turn on the tail, parking and dash lights.

Rotate the outer knob to the second position to turn on the headlamps.

Pull the lever toward you to activate or flash the high beams.

FRONT AND REAR WIPERS AND WASHER

To turn on the wipers, move the switch down.

The rear wipers (if equipped) are controlled by the end of the switch.

TRUNK RELEASE (GALANT)

To open the trunk, pull up on the release lever located on the floor to the left of the driver's seat.

FUEL DOOR

Galant: Push on the left side of the fuel door and grab the door as it opens.


Eclipse: Slip finger under lip to open fuel door (not pictured).

Endeavor: Slip finger under lip to open fuel door (not pictured).

BLUETOOTH® HANDS-FREE PHONE INTERFACE

To pair a phone refer to your phone's owner manual and www.mitsubishicars.com/Bluetooth link. Follow the instructions for your phone's make and model.

SEAT ADJUSTMENTS

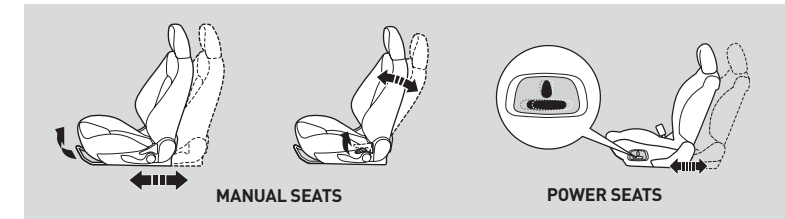

MANUAL SEATS

To move the front seat forward or backward, raise the lever located on the bottom front of the seat and slide the seat into the desired position; release the lever to lock in place.

To change the seatback angle, lean forward slightly while raising the lever on the left of the seat. Then lean back to a comfortable position and release the lever to lock in place.


POWER SEATS (IF EQUIPPED)

To move the front seat forward or backward, move the lower switch forward or backward to a comfortable position.

To change the seatback angle, move the upper switch forward or backward to the desired seatback angle.

HEATED SEATS (IF EQUIPPED)


Press **HI** for quick heating or **LOW** to keep the seat warm.

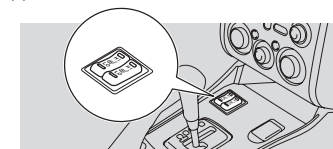

STEERING WHEEL AUDIO REMOTE CONTROL SWITCH (If so equipped)


The remote control switches are located on the rear surface of the steering wheel. Reach behind the wheel to access the switches.

These can be used when the ignition switch is in the "ON" position.

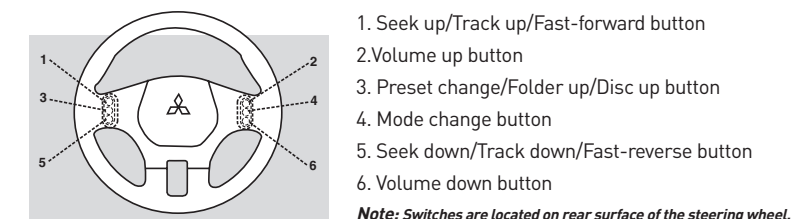

Note: Switches are located on rear surface of the steering wheel.

INSTRUMENT PANEL WARNING LIGHTS

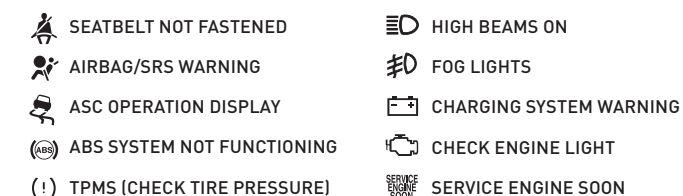

ROADSIDE ASSISTANCE AVAILABLE 24/7

1-888-648-7820

See www.mitsubishicars.com for owner information.