



## 2017 MIRAGE FAMILY



**Owner's Handbook**

Thank you for buying a Mitsubishi Mirage. There's no doubt you've already realized how well your car drives on the open road. What you may not know is all the great features that help your car perform the way it does. In the pages ahead we're going to run through the basics and prepare you for the road.

We hope you will visit the Mitsubishi Owner's site where we store the latest Mitsubishi news and special offers. Here you can also keep track of your car's warranty and servicing needs, get Roadside Assistance Information and tap into other owner-centric details. Just log on to **[www.MitsubishiCars.com/ownersonly](http://www.MitsubishiCars.com/ownersonly)**.

## Table of Contents

Driver's View .....	2-3
Controls .....	4
Own the Road .....	5
Technology .....	6
AC and Audio System .....	7
Audio/Bluetooth® .....	8
FAQ's .....	9

Some of the information contained in this booklet may not be correct due to product changes which may have occurred after the time it was published. Mitsubishi Motors North America, Inc. reserves the right to make changes at any time, without notice, to prices, color, materials, specification and models.



 
## Driver's View



- 1** Side Mirror Adjustment..... Page 4
- 2** Headlights ..... Page 4
- 3** Windshield Wiper Lever..... Page 4
- 4** Seat Heaters..... Page 4
- 5** Cruise Control (if equipped) ..... Page 5
- 6** Multi-Information Display (MID) ..... Page 5
- 7** ASC Off Switch..... Page 6
- 8** Start/Stop Engine Switch  
(if equipped with F.A.S.T.-key)..... Page 6
- 9** Climate Controls..... Page 7
- 10** Audio System..... Page 7-8
- 11** Audio Remote Control Switches  
(if equipped)..... Page 8
- 12** Bluetooth® Controls (if equipped) ..... Page 8



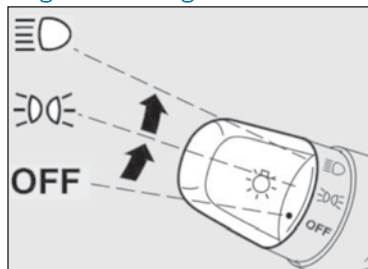


### Regular Headlights



-  Headlights and other lights on.
  -  Parking, tail, front and rear sidemarker lights, license plate and instrument panel lights on.
  - OFF** All lights off.
- Pull lever toward driver to activate high beams.

 
### Side Mirror Adjustment

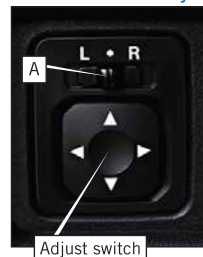

The side mirrors can be adjusted when the ignition switch is in the "ON" or "ACC" position or the operation mode is put in ON or ACC.

Move the lever (A) to the same side as the mirror you wish to adjust.

### Windshield Wipers (Mirage)

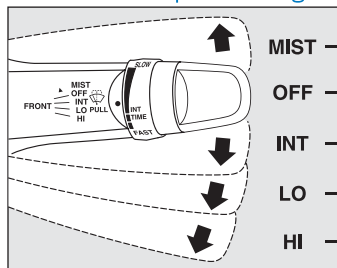 


- MIST** — The wipers will operate once.
- OFF** — OFF
- INT** — Intermittent (Speed sensitive)
- LO** — Slow
- HI** — Fast

### Seat Heater Switch (if equipped)



 
- | Position | Action            |
|----------|-------------------|
| HI       | For quick heating |
| NEUTRAL  | Heater off        |
| LO       | Keeps seat warm   |

### Windshield Wipers (G4)

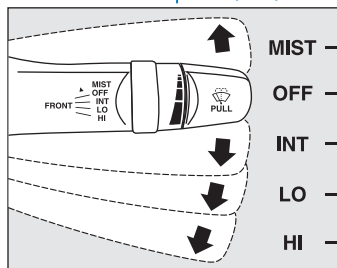

- MIST** — The wipers will operate once.
- OFF** — OFF
- INT** — Intermittent (Speed sensitive)
- LO** — Slow
- HI** — Fast

### Rear Window Wiper and Washer (Mirage Hatchback Only)

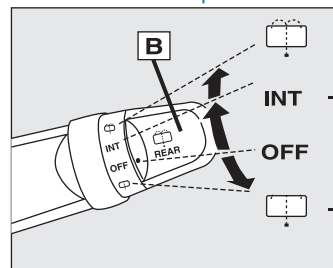 

- Turn the knob **B** to operate the rear window wiper.
- INT** — The wiper operates continuously for several seconds then operates intermittently at intervals of about 8 seconds.
- OFF** — Washer fluid is sprayed, the wiper will automatically operate 2 or 3 times.



## Cruise Control (if equipped)



 
- A** - CRUISE CONTROL ON/OFF switch  
Used to turn on and off the cruise control.
- B** - SET - switch  
Used to reduce the set speed and to set the desired speed.
- C** - RES + switch  
Used to increase the set speed and to return to the original set speed.
- D** - CANCEL switch  
Used to deactivate the set speed driving.

### NOTE:

When operating the cruise control switches, press the cruise control switches correctly. The set speed driving may be deactivated automatically if two or more switches of the cruise control are pressed at the same time.

## Multi-Information Display Switch

Each time you lightly press the multi-information display switch (A), the display switches in the following order.

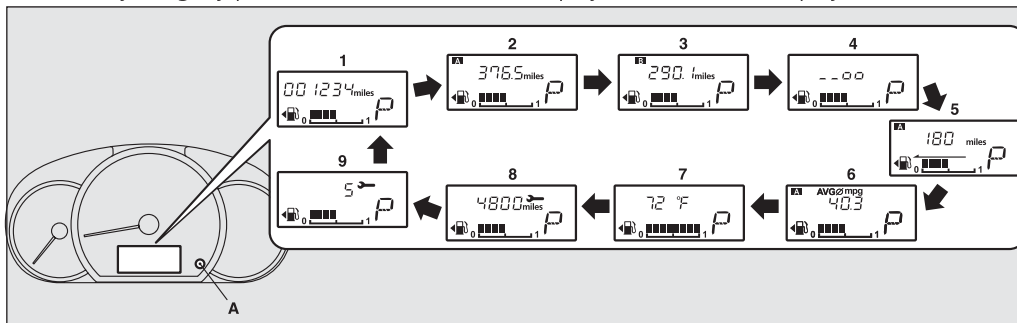

### NOTE

- When the ignition switch or the operation mode is in OFF, the driving range display and average fuel consumption display are not displayed.
- While driving, the service reminder is not displayed even if you operate the multi-information display switch.

## Temperature Indicator Lamp Operation

1. Temperature Indicator Illuminated Green

When the temperature indicator lamp is illuminated Green this indicates the engine has not reached normal operating temperature.

**NOTE:** This will result in cooler heater outlet temperatures until engine reaches normal operating temperatures.

 
2. Temperature Indicator Lamp Off

When the temperature indicator lamp is Off this indicates the engine is at normal operating temperature.

3. Temperature Indicator Lamp Illuminated Red

When the temperature indicator is illuminated Red this indicates the engine is overheating.

**NOTE:** If the engine is overheating, find a safe place to park the vehicle, then shut the engine off and call Roadside Assistance as continued driving could cause the engine to fail.

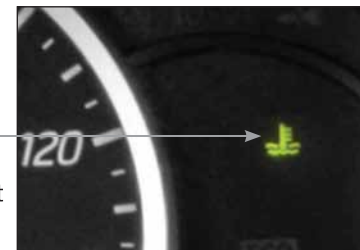


1. Odometer
2. Trip Odometer - A
3. Trip Odometer - B
4. Miles to Empty/ Instrument Panel Light Dimmer Control  
*Note - Dimmer control is able to be used when the small (position) light or headlight is in the ON position. Press and hold the Multi-Information Display Switch to cycle through the different illumination positions*
5. Driving range display
6. Average fuel consumption display
7. Outside Temperature
8. Service reminder (distance)
9. Service reminder (months) (Mirage hatchback model only)



## TECHNOLOGY
 
### Keyless Entry System

#### Mirage Key

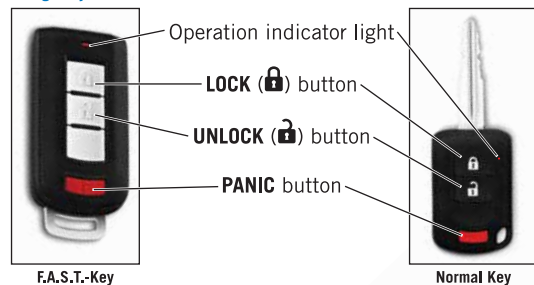

#### Mirage G4 Key

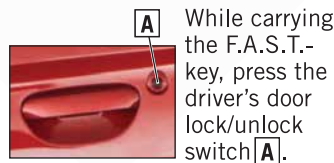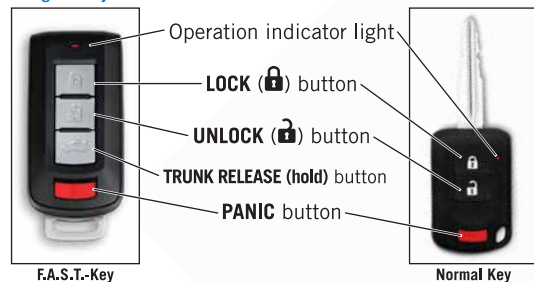  

While carrying the F.A.S.T.-key, press the driver's door lock/unlock switch **A**.

#### If the F.A.S.T.-key is not operating properly

Remove the key from the F.A.S.T.-key remote and unlock the door manually. Then, insert the F.A.S.T.-key into the key slot in the floor console. Starting the engine and changing the operation mode should be now possible. Remove the F.A.S.T.-key from the key slot after starting the engine or changing the operation mode.

### Start/Stop Engine Switch (if equipped with F.A.S.T.-key)



While carrying the F.A.S.T.-key within the operating range, the Start/Stop button can be used to start the engine.

- Move the selector lever in "P" position and hold the brake pedal down. Push the Start/Stop button.
- To stop the engine, stop the vehicle completely and move the selector lever to "P" then press the Start/Stop button.

\* **If you have to bring the engine to an emergency stop while driving,**

**press and hold the Start/Stop button for 3 seconds or more, or press it quickly 3 times or more.**

- If you press the Start/Stop button without depressing the brake pedal, you can change the operation mode in the order of OFF, ACC, ON, OFF.
- If the engine cannot be started or the operation mode cannot be changed, check the position of the F.A.S.T.-key or the battery performance of the F.A.S.T.-key.

### Active Stability Control (ASC) Off Switch



You can deactivate the system by pressing down the "ASC OFF" switch for 3 seconds or longer.

When the ASC is deactivated, the indicator will turn on. To reactivate the ASC, momentarily press the "ASC OFF" switch; the indicator is turned off.

### Tire Pressure Monitoring System (TPMS)



The Tire Pressure Monitoring System warning light illuminates when one or more of your tires is significantly under inflated. Please note that changes in the outside temperature may decrease tire pressure causing the TPMS light to turn on. If the TPMS light remains illuminated, check your tire pressure.

If the warning light illuminates, take the necessary measures referring to the owner's manual.

### ECO indicator



This indicator will be displayed when fuel efficient driving is achieved.

## Entering Frequencies to Memory



 
### To enter frequencies into the memory (AM/FM)

1. Press **A** to turn on the audio system.
2. Press **B** to select the desired band (AM/FM).
3. Press **C** to Seek Station.
4. Hold down one of the Memory select buttons **D** (1-6) until it beeps in order to save that station to memory.

## Setting the Clock

1. Press and hold the **⌚** button and the clock display flashes.
2. Turn the SEL (Select) **A** switch either clockwise or counterclockwise to adjust the "hours" digit.
3. When the "hours" digit is adjusted, press the **⌚** button to flash the "minutes" digit.
4. Turn the SEL switch either clockwise or counterclockwise to adjust the "minutes" digit.
5. When the time is set, press the **⌚** button to stop the clock display from flashing.

## Manual Air Conditioning

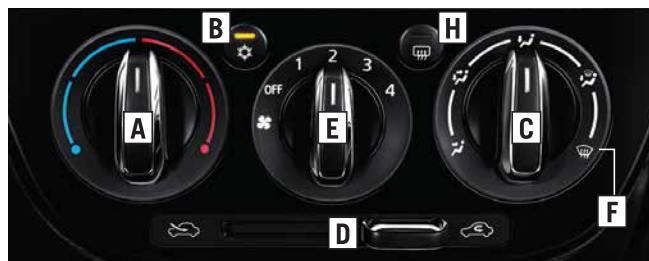

- A** - Temperature Control Dial/Switch
- B** - Air conditioning switch
- C** - Mode Selection Dial/Switch

- D** - Air Selection Lever/Switch
- E** - Blower Speed Selection Dial/Switch
- F** - Defogger switch

## Automatic Air Conditioning (if equipped)



- G** - AUTO switch
- H** - Electric rear window defogger switch
- I** - OFF switch



## Connecting a USB or Smartphone Device (if equipped)

### Connecting a USB or Smartphone Device

1. Park your vehicle in a safe place and turn the ignition to the LOCK position.
2. Plug in the USB connecting cable that is supplied with your device and connect the USB end into the USB input located in the glove box.
3. Turn the ignition switch to the "ACC" position. Turn on the audio system.
4. Press **MEDIA** button to switch to the USB mode.

The input mode changes as follows:

**CD -> USB -> Bluetooth®**

5. Depending on your USB device, it may take longer for playback to start.
6. Once the device is selected, playback starts.



*The phone and cord are not included in the purchase of the vehicle.*

## Audio Remote Control Switches (if equipped)



## Bluetooth® Controls (if equipped)

For a list of compatible Bluetooth devices, please go to <http://www.mitsubishicars.com/owners>



- A SPEECH button:**  
Change to voice recognition
- B PICK-UP button:**  
Answer an incoming call
- C HANG-UP button**  
End a call or voice recognition

## Bluetooth® Settings

When you touch the **Bluetooth** key from the Settings menu, you can set various functions related to the Bluetooth feature.

### Activating Bluetooth® feature

1. Stop your vehicle in a safe area, put the gearshift lever in the "N" (Neutral) position (manual transaxle), or the selector lever in the "P" (PARK) position (continuously variable transmission (CVT)), and pull the parking brake lever.
2. Press the **SPEECH** button.
3. Say "Setup."
4. Say "Pairing Options."
5. The voice guide will say "Select one of the following: pair, edit, delete, or list." Say "Pair."

**NOTE:** Please refer to your Owner's Manual for more detailed information on how to use your audio system.

**Q: Is my phone compatible with the factory Mitsubishi Bluetooth® Hands Free System?**

A: Check the list of compatible phones, [www.mitsubishicars.com/owners](http://www.mitsubishicars.com/owners) to see if the phone is Bluetooth® supported.

**Q: How do I use Bluetooth® Audio (if equipped)?**

A: Please refer to your Owner's Manual for instructions.

**Q: Why does my Anti-Lock Braking System (ABS) make a noise?**

A: Each time your vehicle is started and driven a short distance, you will hear the sound of the ABS motor operating from the right front engine compartment. This is the normal sound the Anti-Lock Braking System makes when performing a self check.

**Q: Why does the Audio System take so long to upload my music from my audio music device?**

A: The Mitsubishi system can read multiple device structures in order to catalog the music files for easy playing and listening. Depending on the amount of music you have on your device, this may take a few minutes.

**Q: How can I play music from my portable music player through the stereo system in my vehicle when equipped with the Bluetooth® Phone System?**

A: Once your device is paired to the Bluetooth® Phone System, you can stream music from your device to your vehicle's sound system. No wires or cords. Your music stops and restarts at the same song when you exit and when you re-enter the vehicle. Voice commands are not available.

**Q: My Mirage has a 12V accessory outlet. What devices can I plug in to it?**

A: This outlet is protected with a 15 amp fuse. Always check the current draw rating of any device prior to use in the vehicle. If the device is rated above 10 amps, this could lead to circuit overload and the electrical fuse opening (no current flow).

**Q: How can I get the MPG stated on the window sticker?**

A: Vehicle driving styles will greatly affect MPG. Avoid sudden starts from a stop and let the vehicle coast to a traffic light. Both of these styles will increase mileage and reduce brake lining wear.

- Vehicles are designed to achieve the best fuel mileage when they are driven at the speed limits on the freeway. Avoid driving over 65 mph.
- Under inflated tires will increase rolling resistance and will reduce fuel mileage. Check tire pressure frequently to increase miles per gallon. Proper tire pressure also ensures optimum tire performance (including tire wear.)

**Q: Why does my check engine light come on after I put gas in my car?**

A: There are many reasons why your check engine light may illuminate. Before calling your dealership, make sure the fuel cap is fully engaged and you have heard three clicks when tightening it. After checking and hearing three clicks and the light is still on, contact your dealership.

**Q: How do I use the emergency key when the F.A.S.T.-key battery or vehicle battery is run down?**

A: If your Mirage is equipped with a Start/Stop Engine switch and the door does not open, take the key out from the fob and unlock the front passenger door manually. Put the key back into the fob and insert it into the slot provided below the Climate Control Switches. Starting the engine and charging the operation mode should now be possible. Remove the F.A.S.T.-key from the key slot after starting the engine or charging the operation mode.



**2017 MIRAGE FAMILY**

**[www.mitsubishicars.com](http://www.mitsubishicars.com)**