
13B MULTIPPOINT FUEL INJECTION (MPI)

CONTENTS

GENERAL INFORMATION	13B-4		
SERVICE SPECIFICATIONS	13B-11		
SEALANT	13B-11		
SPECIAL TOOLS	13B-12		
TROUBLESHOOTING	13B-15		
ON-VEHICLE SERVICE	13B-85		
FUEL PUMP CONNECTOR DISCONNECTION (HOW TO REDUCE FUEL PRESSURE)	13B-85	CONTROL RELAY AND FUEL PUMP RELAY CONTINUITY CHECK	13B-93
FUEL PUMP OPERATION CHECK ..	13B-86	INTAKE AIR TEMPERATURE SENSOR CHECK	13B-93
THROTTLE BODY (THROTTLE VALVE AREA) CLEANING	13B-86	ENGINE COOLANT TEMPERATURE SENSOR CHECK	13B-93
THROTTLE POSITION SENSOR ADJUSTMENT	13B-87	THROTTLE POSITION SENSOR CHECK	13B-94
BASIC IDLE SPEED ADJUSTMENT .	13B-88	OXYGEN SENSOR CHECK <Vehicles for General Export with catalytic converter, Brazil, Australia>	13B-95
FUEL PRESSURE TEST	13B-90	MIXTURE ADJUSTING SCREW (VARIABLE RESISTOR) CHECK <Vehicles for General Export without catalytic converter, South Africa, GCC>	13B-96
COMPONENT LOCATION	13B-92	INJECTOR CHECK	13B-97
		IDLE SPEED CONTROL (ISC) SERVO (STEPPER MOTOR) CHECK	13B-98
		INJECTOR	13B-100
		THROTTLE BODY	13B-102
