

---

# 13D DIESEL FUEL

## <4M41>

### CONTENTS

<b>SERVICE SPECIFICATIONS .....</b>	<b>13D-2</b>	<b>ENGINE COOLANT TEMPERATURE</b>	
<b>SEALANT .....</b>	<b>13D-2</b>	<b>SENSOR CHECK .....</b>	<b>13D-43</b>
<b>SPECIAL TOOLS .....</b>	<b>13D-3</b>	<b>EVACUATION OF WATER FROM</b>	
<b>TROUBLESHOOTING .....</b>	<b>13D-4</b>	<b>FUEL FILTER .....</b>	<b>13D-44</b>
<b>ON-VEHICLE SERVICE .....</b>	<b>13D-41</b>	<b>FUEL FILTER CARTRIDGE</b>	
INJECTION TIMING CHECK AND		<b>REPLACEMENT .....</b>	<b>13D-44</b>
ADJUSTMENT .....	13D-41	<b>EVACUATION OF AIR FROM FUEL</b>	
IDLE SPEED CHECK AND		<b>LINE .....</b>	<b>13D-44</b>
ADJUSTMENT .....	13D-41	<b>FUEL INJECTION PUMP CHECK ...</b>	<b>13D-45</b>
ACCELERATOR PEDAL POSITION		<b>INTAKE AIR RESTRICTION</b>	
SENSOR (APS) ADJUSTMENT .....	13D-41	<b>EQUIPMENT CHECK .....</b>	<b>13D-47</b>
CONTROL RELAY CONTINUITY		<b>INJECTION NOZZLE CHECK AND</b>	
CHECK .....	13D-42	<b>ADJUSTMENT .....</b>	<b>13D-48</b>
ACCELERATOR PEDAL POSITION		<b>INJECTION NOZZLE .....</b>	<b>13D-49</b>
SENSOR (APS) CHECK .....	13D-42	<b>INJECTION PUMP .....</b>	<b>13D-53</b>
IDLE SWITCH CHECK .....	13D-42	<b>ENGINE-ECU .....</b>	<b>13D-56</b>
BOOST AIR TEMPERATURE SENSOR			
(INTAKE AIR TEMPERATURE SENSOR)			
CHECK .....	13D-43		

---