
16 ENGINE ELECTRICAL

CONTENTS

CHARGING SYSTEM

GENERAL INFORMATION	16-3
OPERATION	16-3
SYSTEM DIAGRAM	16-3
ALTERNATOR SPECIFICATIONS ...	16-5
SERVICE SPECIFICATIONS	16-5
SPECIAL TOOLS	16-5
ON-VEHICLE SERVICE	16-6
ALTERNATOR OUTPUT LINE VOLTAGE DROP TEST	16-6
OUTPUT CURRENT TEST	16-7
REGULATED VOLTAGE TEST	16-10
WAVEFORM CHECK USING AN ANALYZER	16-12
ALTERNATOR	16-14

STARTING SYSTEM

GENERAL INFORMATION	16-22
SERVICE SPECIFICATIONS	16-23
STARTER MOTOR	16-23
<6G7-MPI>	16-26
<6G7-GDI>	16-27
<4M4>	16-28
STARTER MOTOR PARTS CLEANING	16-31
BRUSH AND SPRING REPLACEMENT	16-34
ARMATURE TEST	16-34

IGNITION SYSTEM

GENERAL INFORMATION	16-35
SYSTEM DIAGRAM	16-35
IGNITION COIL SPECIFICATION ...	16-36
SPARK PLUG SPECIFICATION	16-36
IGNITION COIL SPECIFICATION ...	16-37
SPARK PLUG SPECIFICATION	16-37
SERVICE SPECIFICATIONS	16-37
IGNITION COIL	16-37
SPARK PLUG	16-37
RESISTIVE CORD <6G7-MPI>	16-37
SPECIAL TOOL	16-37
ON-VEHICLE SERVICE	16-38
IGNITION COIL CHECK <6G7-MPI> .	16-38
POWER TRANSISTOR CONTINUITY CHECK <6G7-MPI>	16-38
IGNITION COIL (WITH BUILT-IN POWER TRANSISTOR) CHECK <6G7-GDI> .	16-39
RESISTIVE CORD CHECK <6G7-MPI>	16-40
SPARK PLUG CHECK AND CLEANING <General Export>	16-41
SPARK PLUG CHECK <Taiwan, Australia>	16-41
SPARK PLUG CHECK AND CLEANING <Hong Kong>	16-42
IGNITION FAILURE SENSOR CHECK <6G7-GDI>	16-43
CAMSHAFT POSITION SENSOR CHECK	16-43

CRANK ANGLE SENSOR CHECK ...	16-43
DETONATION SENSOR CHECK <Taiwan, Hong Kong>	16-43
WAVEFORM CHECK USING AN ANALYZER (Ignition Primary and Secondary Voltage Waveforms) <6G7-MPI> Ignition Secondary Voltage Waveform Check	16-43
Ignition Primary Voltage Waveform Check	16-47
IGNITION COIL	16-51
CRANK ANGLE SENSOR	16-53
CAMSHAFT POSITION SENSOR ..	16-54
DETONATION SENSOR <GDI>	16-55

GLOW SYSTEM

GENERAL INFORMATION	16-56
SELF-REGULATING GLOW SYSTEM	16-56
SERVICE SPECIFICATIONS	16-57
SEALANT	16-57
ON-VEHICLE SERVICE	16-58
SELF-REGULATING GLOW SYSTEM CHECK	16-58
GLOW & EGR CONTROL UNIT <Vehicles with EGR> OR GLOW CONTROL UNIT <Vehicles without EGR> CHECK	16-60
ENGINE-ECU CHECK <4M41>	16-62
GLOW PLUG RELAY CHECK	16-63
GLOW PLUG CHECK	16-64
ENGINE COOLANT TEMPERATURE SENSOR CHECK	16-64
GLOW PLUG	16-65