
17 ENGINE AND EMISSION CONTROL

CONTENTS

ENGINE CONTROL SYSTEM

GENERAL INFORMATION	17-4
SERVICE SPECIFICATIONS	17-4
ON-VEHICLE SERVICE	17-4
ACCELERATOR CABLE CHECK AND ADJUSTMENT <6G7-MPI, 4M40> ...	17-4
ACCELERATOR CABLE AND PEDAL	17-5
REMOVAL AND INSTALLATION	17-5

AUTO-CRUISE CONTROL SYSTEM

GENERAL INFORMATION	17-10
SPECIAL TOOL	17-12
TROUBLESHOOTING	17-13
ON-VEHICLE SERVICE	17-40
AUTO-CRUISE CONTROL	17-44

EMISSION CONTROL SYSTEM <6G7-GDI>

GENERAL INFORMATION	17-46
SERVICE SPECIFICATIONS	17-47
SPECIAL TOOL	17-47

VACUUM HOSE

VACUUM HOSE PIPING DIAGRAM .	17-47
VACUUM CIRCUIT DIAGRAM	17-48
VACUUM HOSE CHECK	17-48
VACUUM HOSE INSTALLATION	17-48

CRANKCASE EMISSION CONTROL SYSTEM

GENERAL INFORMATION	17-49
SYSTEM DIAGRAM	17-49
COMPONENT LOCATION	17-49
POSITIVE CRANKCASE VENTILATION SYSTEM CHECK	17-50
PCV VALVE CHECK	17-50

EVAPORATIVE EMISSION CONTROL SYSTEM

GENERAL INFORMATION	17-51
SYSTEM DIAGRAM	17-51
COMPONENT LOCATION	17-51
PURGE CONTROL SYSTEM CHECK	17-52
PURGE PORT VACUUM CHECK	17-52
PURGE CONTROL SOLENOID VALVE CHECK	17-53

EXHAUST GAS RECIRCULATION (EGR) SYSTEM	
GENERAL INFORMATION	17-54
OPERATION	17-54
SYSTEM DIAGRAM	17-54
COMPONENT LOCATION	17-54
EXHAUST GAS RECIRCULATION (EGR) CONTROL SYSTEM CHECK .	17-55
EGR VALVE (STEPPER MOTOR) CHECK	17-55
EGR VALVE	17-57
CANISTER	17-58
CATALYTIC CONVERTER	17-59

EMISSION CONTROL SYSTEM <6G7-MPI>	
GENERAL INFORMATION	17-60
EMISSION CONTROL DEVICE REFERENCE TABLE	17-60
SERVICE SPECIFICATIONS	17-61
VACUUM HOSE	
VACUUM HOSE PIPING DIAGRAM .	17-61
VACUUM CIRCUIT DIAGRAM	17-64
VACUUM HOSE CHECK	17-71
VACUUM HOSE INSTALLATION	17-71
CRANKCASE EMISSION CONTROL SYSTEM	
GENERAL INFORMATION	17-71
SYSTEM DIAGRAM	17-71
COMPONENT LOCATION	17-72
POSITIVE CRANKCASE VENTILATION SYSTEM CHECK	17-72
PCV VALVE CHECK	17-72

EVAPORATIVE EMISSION CONTROL SYSTEM <VEHICLES FOR GENERAL EXPORT WITH CATALYTIC CONVERTER, BRAZIL, TAIWAN, AUSTRALIA, CHINA>	
GENERAL INFORMATION	17-73
SYSTEM DIAGRAM	17-73
COMPONENT LOCATION	17-74
PURGE CONTROL SYSTEM CHECK	17-75
PURGE PORT VACUUM CHECK <Vehicles except for Australia>	17-76
PURGE PORT VACUUM CHECK <Vehicles for Australia>	17-77
PURGE CONTROL SOLENOID VALVE CHECK	17-77
EVAPORATIVE EMISSION CONTROL SYSTEM <VEHICLES FOR GCC>	
GENERAL INFORMATION	17-78
PURGE PORT VACUUM CHECK	17-78
CHECK VALVE CHECK	17-78
EXHAUST GAS RECIRCULATION (EGR) SYSTEM <VEHICLES EXCEPT AUSTRALIA>	
GENERAL INFORMATION	17-79
OPERATION	17-79
SYSTEM DIAGRAM	17-79
COMPONENT LOCATION	17-80
EXHAUST GAS RECIRCULATION (EGR) CONTROL SYSTEM CHECK .	17-82
VACUUM CONTROL VALVE CHECK <VEHICLES FOR TAIWAN>	17-84
EGR VALVE CHECK	17-84
EGR PORT VACUUM CHECK <VEHICLES FOR TAIWAN>	17-85
EGR PORT VACUUM CHECK <VEHICLES EXCEPT TAIWAN>	17-85
EGR CONTROL SOLENOID VALVE CHECK	17-86

CANISTER	17-87	CHECK AT THE GLOW & EGR	
CATALYTIC CONVERTER	17-90	CONTROL UNIT	17-97
GENERAL INFORMATION	17-90	HARNESS-SIDE CONNECTOR TERMINAL	
		RESISTANCE AND CONTINUITY CHECK	
		CHART	17-97
EMISSION CONTROL SYSTEM			
<4M40-VEHICLES WITH EGR>		EMISSION CONTROL SYSTEM <4M41>	
GENERAL INFORMATION	17-92	GENERAL INFORMATION	17-98
SERVICE SPECIFICATIONS	17-92	SERVICE SPECIFICATIONS	17-98
SPECIAL TOOL	17-92	EXHAUST GAS RECIRCULATION (EGR)	
EXHAUST GAS RECIRCULATION (EGR)		SYSTEM	
GENERAL INFORMATION	17-93	GENERAL INFORMATION	17-99
SYSTEM DIAGRAM	17-93	SYSTEM DIAGRAM	17-99
COMPONENT LOCATION	17-93	COMPONENT LOCATION	17-99
FUNCTION CHECK	17-94	FUNCTION CHECK	17-100
EGR SOLENOID VALVE OPERATION		EGR SOLENOID VALVE OPERATION	
CHECK	17-94	CHECK	17-100
EGR SOLENOID VALVE RESISTANCE		EGR SOLENOID VALVE RESISTANCE	
CHECK	17-95	CHECK	17-101
LEVER POSITION SENSOR (LPS)		ACCELERATOR PEDAL POSITION SENSOR	
ADJUSTMENT	17-95	(APS), ENGINE COOLANT TEMPERATURE	
ENGINE SPEED SENSOR CHECK ..	17-96	SENSOR, INTAKE AIR TEMPERATURE	
SOLENOID TIMER CHECK	17-96	SENSOR, FUEL TEMPERATURE SENSOR	
ENGINE COOLANT TEMPERATURE		CHECK	17-101
SENSOR CHECK	17-96	CHECK AT ENGINE-A/T-ECU	17-101
		CATALYTIC CONVERTER	17-102