

---

# 22 MANUAL TRANSMISSION

## CONTENTS

<b>GENERAL INFORMATION .....</b>	<b>22-2</b>		
<b>LUBRICANTS .....</b>	<b>22-2</b>		
<b>SEALANTS .....</b>	<b>22-2</b>		
<b>SPECIAL TOOL .....</b>	<b>22-2</b>		
<b>TROUBLESHOOTING &lt;SS4 II&gt; ....</b>	<b>22-3</b>		
<b>ON-VEHICLE SERVICE .....</b>	<b>22-5</b>		
TRANSMISSION OIL CHECK .....	22-5		
OIL REPLACEMENT .....	22-5		
4WD DETECTION SWITCH CONTINUITY CHECK <PART TIME 4WD> .....	22-6		
		HIGH/LOW DETECTION SWITCH CONTINUITY CHECK <PART TIME 4WD> .....	22-6
		<b>TRANSMISSION CONTROL &lt;PART TIME 4WD&gt; .....</b>	<b>22-7</b>
		<b>TRANSMISSION CONTROL&lt;SS4 II&gt;</b>	<b>22-8</b>
		<b>TRANSMISSION ASSEMBLY .....</b>	<b>22-9</b>
		<b>4WD INDICATOR-ECU/ TRANSFER-ECU .....</b>	<b>22-16</b>

---