
26 FRONT AXLE

CONTENTS

GENERAL INFORMATION	26-2	SOLENOID VALVE OPERATION	
SERVICE SPECIFICATIONS	26-4	CHECK	26-12
LUBRICANTS	26-4	HUB AND KNUCKLE ASSEMBLY .	26-13
SEALANTS	26-5	DRIVE SHAFT	26-16
SPECIAL TOOLS	26-5	INNER SHAFT, HOUSING TUBE ...	26-24
ON-VEHICLE SERVICE	26-10	FREEWHEEL CLUTCH ASSEMBLY,	
WHEEL BEARING BACKLASH CHECK	26-10	DIFFERENTIAL CARRIER	26-28
FRONT AXLE TOTAL BACKLASH		FREEWHEEL CLUTCH ASSEMBLY	26-31
CHECK	26-10	DIFFERENTIAL CARRIER	26-34
FRONT AXLE GEAR OIL LEVEL		SOLENOID VALVE, VACUUM PIPE,	
CHECK	26-11	VACUUM TANK	26-49
DIFFERENTIAL CARRIER OIL SEAL		FRONT DIFFERENTIAL MOUNT ...	26-51
REPLACEMENT	26-11		
