
35A BASIC BRAKE SYSTEM

CONTENTS

GENERAL INFORMATION	35A-3	BLEEDING <Vehicles with ABS>	35A-27
SERVICE SPECIFICATIONS	35A-5	BLEEDING <Vehicles without ABS> ..	35A-30
LUBRICANTS	35A-6	BRAKE FLUID LEVEL SENSOR CHECK	35A-31
SEALANT	35A-6	DISC BRAKE PAD CHECK AND REPLACEMENT	35A-31
SPECIAL TOOLS	35A-6	DISC BRAKE ROTOR CHECK	35A-33
TROUBLESHOOTING		BRAKE DISC THICKNESS CHECK ..	35A-33
<Vehicles with ABS>	35A-8	BRAKE DISC RUN-OUT CHECK AND CORRECTION	35A-34
ON-VEHICLE SERVICE	35A-20	BRAKE PEDAL	35A-35
BRAKE PEDAL CHECK AND ADJUSTMENT	35A-20	HYDRAULIC BRAKE BOOSTER (HBB)	
HYDRAULIC BRAKE BOOSTER (HBB) OPERATION CHECK <Vehicles with ABS>	35A-21	<Vehicles with ABS>	35A-37
HBB CHECK <Vehicles with ABS> ...	35A-24	HBB BUZZER <Vehicles with ABS>	35A-41
HBB MOTOR RELAY CONTINUITY CHECK <Vehicles with ABS>	35A-25	MASTER CYLINDER AND BRAKE BOOSTER <Vehicles without ABS>	35A-42
BRAKE BOOSTER OPERATING TEST <Vehicles without ABS>	35A-25	MASTER CYLINDER	35A-45
CHECK VALVE OPERATION CHECK <Vehicles without ABS>	35A-26	FRONT DISC BRAKE	35A-46
LOAD SENSING SPRING LENGTH CHECK AND ADJUSTMENT <Vehicles without ABS>	35A-26	REAR DISC BRAKE	35A-51
LOAD SENSING PROPORTIONING VALVE FUNCTION TEST <Vehicles without ABS>	35A-26	LOAD SENSING PROPORTIONING VALVE <Vehicles without ABS> ...	35A-56
