

# 37A STEERING

## CONTENTS

<b>GENERAL INFORMATION .....</b>	<b>37A-2</b>	<b>POWER STEERING FLUID LEVEL CHECK .....</b>	<b>37A-9</b>
<b>SERVICE SPECIFICATIONS .....</b>	<b>37A-3</b>	<b>POWER STEERING FLUID REPLACEMENT .....</b>	<b>37A-9</b>
<b>LUBRICANTS .....</b>	<b>37A-4</b>	<b>POWER STEERING SYSTEM BLEEDING .....</b>	<b>37A-9</b>
<b>SEALANT AND ADHESIVE .....</b>	<b>37A-4</b>	<b>OIL PUMP PRESSURE TEST .....</b>	<b>37A-10</b>
<b>SPECIAL TOOLS .....</b>	<b>37A-4</b>	<b>POWER STEERING OIL PRESSURE SWITCH CHECK &lt;6G7, 4M41&gt; .....</b>	<b>37A-11</b>
<b>ON-VEHICLE SERVICE .....</b>	<b>37A-7</b>	<b>BALL JOINT DUST COVER CHECK ..</b>	<b>37A-11</b>
STEERING WHEEL FREE PLAY CHECK .....	37A-7	<b>STEERING WHEEL AND SHAFT ..</b>	<b>37A-12</b>
STEERING ANGLE CHECK .....	37A-7	<b>POWER STEERING GEAR BOX AND LINKAGE .....</b>	<b>37A-15</b>
TIE ROD END BALL JOINT STARTING TORQUE CHECK .....	37A-7	<b>POWER STEERING OIL PUMP ....</b>	<b>37A-29</b>
STATIONARY STEERING EFFORT CHECK .....	37A-8	<b>POWER STEERING OIL HOSES ...</b>	<b>37A-34</b>
STEERING WHEEL RETURNABILITY CHECK .....	37A-8		
OIL PUMP BELT TENSION CHECK <6G7> .....	37A-8		

### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

#### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

#### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).