

---

# 52A INTERIOR

## CONTENTS

SERVICE SPECIFICATIONS .....	52A-3	REAR/SECOND SEAT .....	52A-24
SPECIAL TOOL .....	52A-3	THIRD SEAT	
INSTRUMENT PANEL		<FACE-TO-FACE BENCH SEAT> ..	52A-40
<L.H. DRIVE VEHICLES> .....	52A-4	THIRD SEAT	
INSTRUMENT PANEL		<NORMAL BENCH SEAT> .....	52A-42
<R.H. DRIVE VEHICLES> .....	52A-8	FRONT SEAT BELT .....	52A-45
FLOOR CONSOLE .....	52A-12	REAR SEAT BELT <SOUTH AFRICA- SHORT WHEELBASE> .....	52A-47
TRIMS .....	52A-13	SECOND/THIRD SEAT BELT	
SUNVISOR HOLDER .....	52A-17	<LONG WHEELBASE> .....	52A-48
FRONT SEAT .....	52A-18		

### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

#### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

#### NOTE

The SRS includes the following components: front impact sensors, SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).

---