
52B

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

GENERAL INFORMATION	52B-2	WARNING/CAUTION LABELS	52B-27
SRS SERVICE PRECAUTIONS	52B-3	FRONT IMPACT SENSORS	52B-28
SPECIAL TOOLS	52B-5	SRS AIR BAG CONTROL UNIT (SRS-ECU)	52B-30
TEST EQUIPMENT	52B-6	AIR BAG MODULES AND CLOCK SPRING	52B-32
TROUBLESHOOTING	52B-7	SIDE IMPACT SENSOR	52B-41
SRS MAINTENANCE	52B-19	AIR BAG MODULE DISPOSAL PROCEDURES	52B-43
POST-COLLISION DIAGNOSIS	52B-23		
INDIVIDUAL COMPONENT SERVICE	52B-26		

CAUTION

- Carefully read and observe the information in the SERVICE PRECAUTIONS (P.52B-3.) prior to any service.
 - For information concerning troubleshooting or maintenance, always observe the procedures in the Troubleshooting (P.52B-7.) section.
 - If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the INDIVIDUAL COMPONENT SERVICE section (P.52B-26.) for the components involved.
 - If you have any questions about the SRS, please contact your local distributor.
-