
54A CHASSIS ELECTRICAL

CONTENTS

BATTERY	54A-4	TACHOMETER CHECK	54A-31
SERVICE SPECIFICATIONS	54A-4	FUEL GAUGE UNIT CHECK	54A-32
ON-VEHICLE SERVICE	54A-4	ENGINE COOLANT TEMPERATURE GAUGE UNIT CHECK	54A-33
ELECTROLYTE LEVEL AND SPECIFIC GRAVITY CHECK	54A-4	COMBINATION METER	54A-34
CHARGING	54A-5	HEADLAMP ASSEMBLY	54A-37
BATTERY TEST	54A-5	SERVICE SPECIFICATIONS	54A-37
IGNITION SWITCH AND IMMOBILIZER <PETROL>	54A-6	SPECIAL TOOL	54A-37
SPECIAL TOOLS	54A-6	TROUBLESHOOTING	54A-37
TROUBLESHOOTING	54A-6	ON-VEHICLE SERVICE	54A-37
IMMOBILIZER-ECU CHECK	54A-10	HEADLAMP AIMING ADJUSTMENT .	54A-37
IGNITION SWITCH AND IMMOBILIZER-ECU	54A-11	LUMINANCE MEASUREMENT	54A-39
IGNITION SWITCH AND IMMOBILIZER <DIESEL>	54A-14	HEADLAMP BULB REPLACEMENT .	54A-40
SPECIAL TOOLS	54A-14	AUTOMATIC HEADLAMP LIGHTING AND HEADLAMP AUTOMATIC CUT-OFF ADJUSTMENT PROCEDURE <Hong Kong>	54A-40
TROUBLESHOOTING	54A-14	HEADLAMP ASSEMBLY	54A-41
IMMOBILIZER-ECU CHECK	54A-18	FOG LAMPS	54A-43
IGNITION SWITCH AND IMMOBILIZER-ECU	54A-19	SERVICE SPECIFICATIONS	54A-43
COMBINATION METER	54A-23	SPECIAL TOOLS	54A-43
SERVICE SPECIFICATIONS	54A-23	TROUBLESHOOTING	54A-43
SEALANTS	54A-24	ON-VEHICLE SERVICE	54A-43
SPECIAL TOOLS	54A-24	FOG LAMP AIMING CHECK	54A-43
TROUBLESHOOTING	54A-24	FOG LAMPS	54A-45
ON-VEHICLE SERVICE	54A-31	SIDE TURN-SIGNAL LAMPS	54A-46
SPEEDOMETER CHECK	54A-31	SPECIAL TOOL	54A-46
		SIDE TURN-SIGNAL LAMPS	54A-47

ROOM LAMP	54A-47	TROUBLESHOOTING FOR CENTER DISPLAY	54A-54
TROUBLESHOOTING	54A-47	TROUBLESHOOTING FOR RV METER	54A-68
ON-VEHICLE SERVICE	54A-47	CLOCK, RV METER OR CENTER DISPLAY	54A-84
ROOM LAMP DELAY-OFF TIME ADJUSTMENT PROCEDURE	54A-47	RADIO/TAPE PLAYER	54A-85
REAR COMBINATION LAMPS	54A-48	TROUBLESHOOTING	54A-85
SPECIAL TOOLS	54A-48	RADIO AND CD AUTO CHANGER .	54A-98
TROUBLESHOOTING	54A-48	FRONT SPEAKERS	54A-99
REAR COMBINATION LAMPS	54A-48	REAR SPEAKERS	54A-99
HIGH-MOUNTED STOP LAMP	54A-49	MAST ANTENNA AND MOTOR ANTENNA	54A-103
COLUMN SWITCH	54A-49	GLASS ANTENNA	54A-103
SPECIAL TOOL	54A-49	DEFOGGER	54A-104
HAZARD WARNING LAMP SWITCH	54A-51	TROUBLESHOOTING	54A-104
SPECIAL TOOL	54A-51	ON-VEHICLE SERVICE	54A-104
HAZARD WARNING LAMP SWITCH	54A-51	PRINTED HEATER CHECK	54A-104
HORN	54A-52	DEFOGGER RELAY CONTINUITY CHECK	54A-104
CIGARETTE LIGHTER	54A-52	THEFT-ALARM SYSTEM	54A-105
ACCESSORY SOCKET	54A-52	TROUBLESHOOTING	54A-105
RHEOSTAT	54A-53	THEFT ALARM HORN	54A-106
CLOCK, RV METER OR CENTER DISPLAY	54A-54		