
55A HEATER, AIR CONDITIONER & VENTILATION <MANUAL A/C>

CONTENTS

SERVICE SPECIFICATIONS	55A-4		
LUBRICANTS	55A-4		
TROUBLESHOOTING			
<FRONT HEATER, FRONT A/C> ...	55A-5		
TROUBLESHOOTING <REAR HEATER, REAR COOLER>	55A-7		
CHECK AT THE REAR A/C CONTROL UNIT TERMINALS	55A-8		
ON-VEHICLE SERVICE	55A-9		
REFRIGERANT LEVEL TEST THROUGH PERFORMANCE TEST	55A-9		
MAGNETIC CLUTCH TEST <6G7> ..	55A-10		
MAGNETIC CLUTCH TEST <4M40> .	55A-10		
RECEIVER DRIER TEST	55A-10		
COMPRESSOR DRIVE BELT ADJUSTMENT	55A-10		
DUAL PRESSURE SWITCH CHECK .	55A-11		
CHARGING	55A-12		
PERFORMANCE TEST	55A-16		
REFRIGERANT LEAK REPAIR	55A-18		
COMPRESSOR NOISE	55A-18		
FRONT BLOWER RELAY AND REAR BLOWER RELAY CONTINUITY CHECK <VEHICLES WITH REAR BLOWER UNIT>	55A-19		
		CONTINUITY CHECK OF A/C COMPRESSOR RELAY AND CONDENSER FAN RELAY	55A-19
		IDLE-UP OPERATION CHECK	55A-20
		VACUUM ACTUATOR CHECK <4M40>	55A-21
		IDLE-UP SOLENOID VALVE CHECK <4M40>	55A-22
		LEVER POSITION SWITCH CHECK <4M40 (A/T)>	55A-23
		CLEAN AIR FILTER REPLACEMENT PROCEDURE	55A-24
		FRONT A/C	55A-24
		AIR CONDITIONER CONTROL PANEL ASSEMBLY AND A/C SWITCH	55A-24
		HEATER UNIT AND BLOWER ASSEMBLY	55A-28
		BLOWER MOTOR AND RESISTOR .	55A-31
		INSIDE/OUTSIDE AIR CHANGEOVER DAMPER MOTOR	55A-32
		AUTOMATIC COMPRESSOR-ECU AND AIR THERMO SENSOR ASSEMBLY .	55A-33
		REAR HEATER AND REAR COOLER	55A-34
		REAR A/C SWITCH, FRONT REAR FAN SWITCH	55A-34

REAR A/C CONTROL UNIT	55A-36
REAR HEATER UNIT <FLOOR CONSOLE>	55A-36
REAR HEATER UNIT <FLOOR CONSOLE> DISASSEMBLY AND REASSEMBLY .	55A-37
REAR HEATER UNIT AND REAR BLOWER ASSEMBLY <QUARTER TRIM>	55A-39
COMPRESSOR	55A-43
CONDENSER ASSEMBLY AND CONDENSER FAN	55A-47
REFRIGERANT LINE	55A-49

ENGINE COOLANT TEMPERATURE SWITCH <4M40>	55A-55
IDLE-UP SYSTEM <4M40>	55A-57
LEVER POSITION SWITCH AND TIMER CONTROLLER <4M40-A/T>	55A-58
DUCTS	55A-60
FRONT A/C DUCT	55A-60
REAR A/C DUCT	55A-61
COOL BOX	55A-62
VENTILATION	55A-62