

GROUP 34


REAR SUSPENSION


GENERAL

OUTLINE OF CHANGE

Due to the change on the trailing arm bushing, the replacement procedure for the bushing has been established.

SPECIAL TOOL

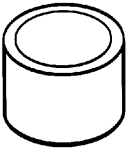Tool	Number	Name	Use
 MB991446	MB991446	Spacer, bush remover and installer	Trailing arm bushing removal and press-fitting

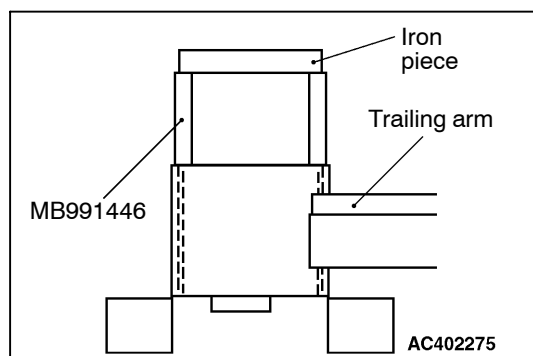

TRAILING ARM ASSEMBLY

BUSHING REPLACEMENT

1. Use the special tool spacer, bush remover and installer (MB991446) to drive out and press fit the trailing arm bushing.
2. Before installing the bushing, apply an ample amount of soapy water on the bushing and the pipe of the trailing arm. Then, press in the bushing so that the arrow mark on the bushing is within the area shown and that the bushing protrudes equally from the edges of the pipe.

