

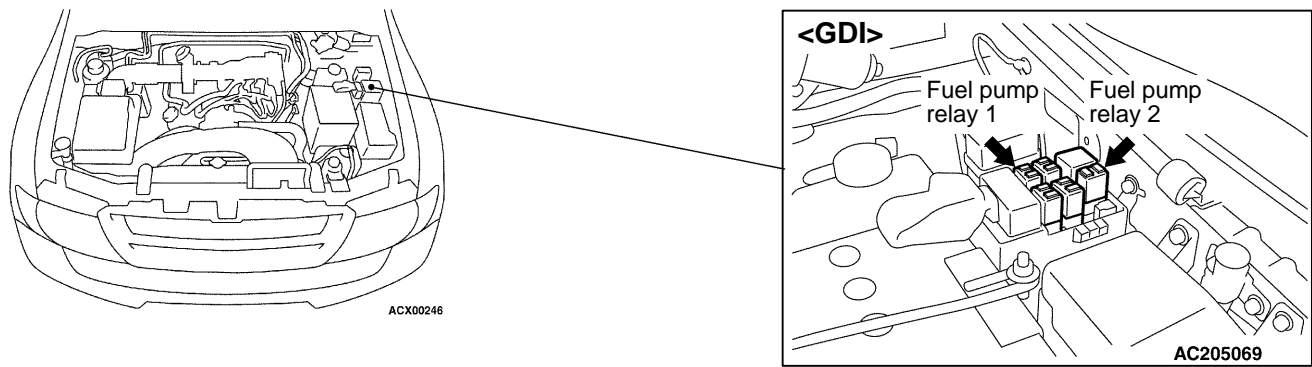
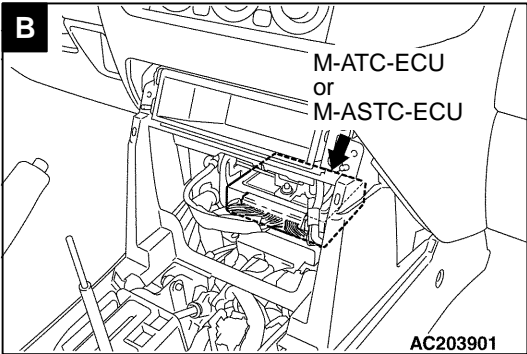


RELAY

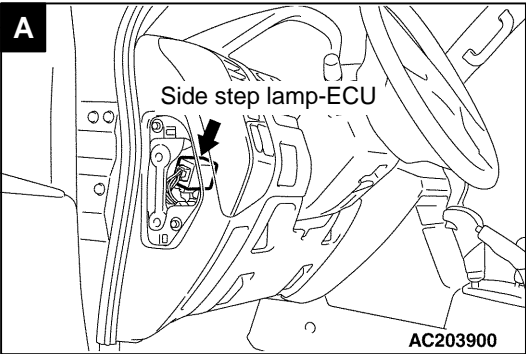

ECU

Name	Symbol	Name	Symbol
M-ASTC-ECU	B	Side step lamp-ECU	A
M-ATC-ECU	B		

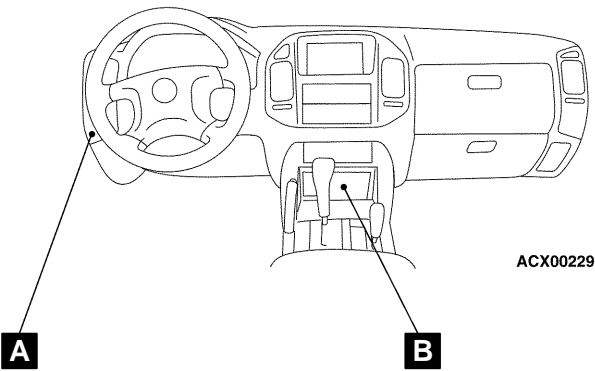

SENSOR

Main
IndexGroup
TOC

Name	Symbol	Name	Symbol
G and yaw rate sensor <M-ASTC>	D	Pressure sensor	LHD B
G sensor <M-ATC>	D		RHD A
Left bank oxygen sensor <MPI-Hong Kong>	E	Right bank oxygen sensor <MPI-Hong Kong>	E
Oxygen sensor <GDI-except for Hong Kong>	F	Steering wheel sensor <M-ASTC>	C

