

# 3 DRIVE-CONTROL COMPONENTS

## CONTENTS

<b>FRONT SUSPENSION</b> .....	<b>2</b>	<b>Sensor</b> .....	<b>9</b>
<b>REAR SUSPENSION</b> .....	<b>2</b>	<b>Actuator</b> .....	<b>10</b>
<b>HYDRAULIC BRAKE BOOSTER (HBB)</b>		<b>M-ASTC-ECU, M-ATC-ECU</b> .....	<b>13</b>
<b>&lt;VEHICLES WITH M-ASTC, M-ATC&gt;</b> .....	<b>3</b>	<b>System Operation</b> .....	<b>21</b>
Accumulator .....	3	<b>CAN</b> .....	<b>25</b>
Motor Relay .....	3	Operation Description .....	25
ECU .....	3		
<b>    MITSUBISHI ACTIVE STABILITY AND</b>			
<b>    TRACTION CONTROL SYSTEM (M-ASTC),</b>			
<b>    MITSUBISHI ACTIVE TRACTION CONTROL</b>			
<b>    SYSTEM (M-ATC)</b> .....	<b>4</b>		