



Fastener Tightening Specifications


Application	Specification	
	Metric	English
Instrument Panel Cluster Assembly Screws	3 N·m	27 lb in
Drivers Information Display Switch Screws	2 N·m	18 lb in

Instrument Cluster Schematics

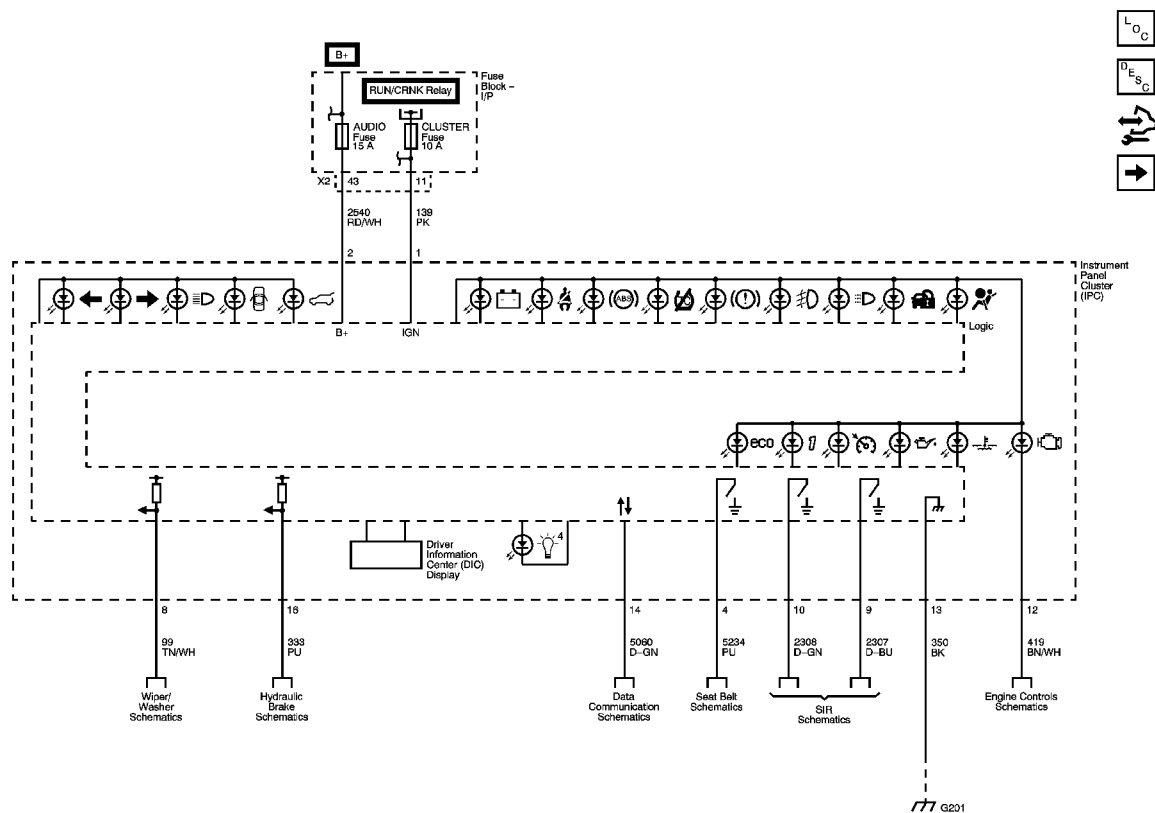

Instrument Panel Cluster - Gages

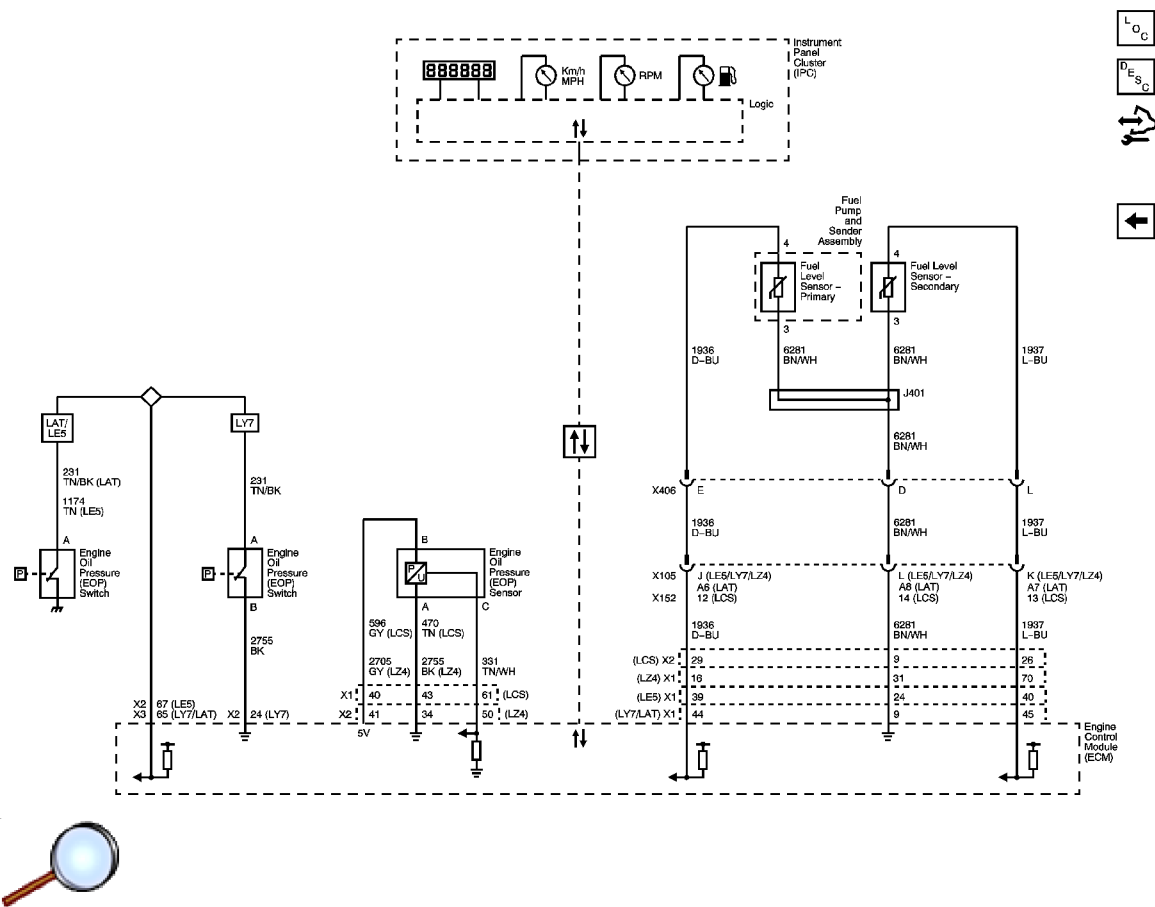


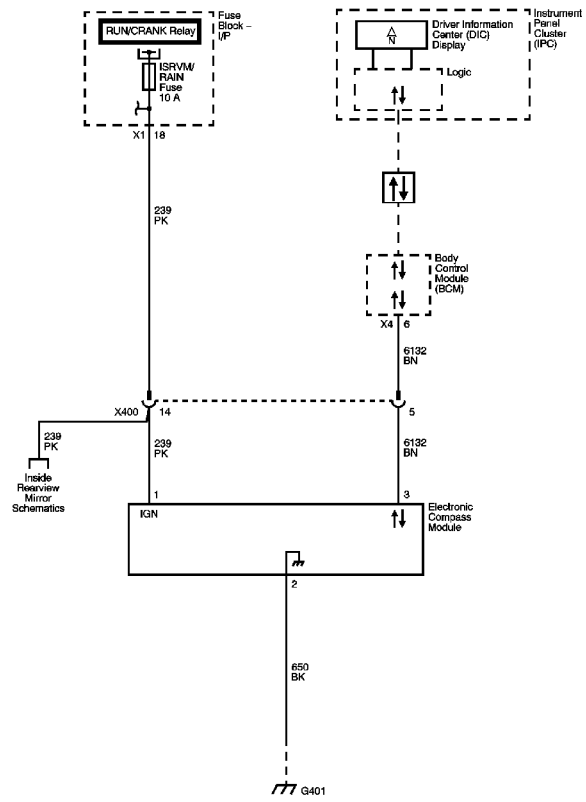




Audible Warnings Schematics

Audible Warnings Schematics

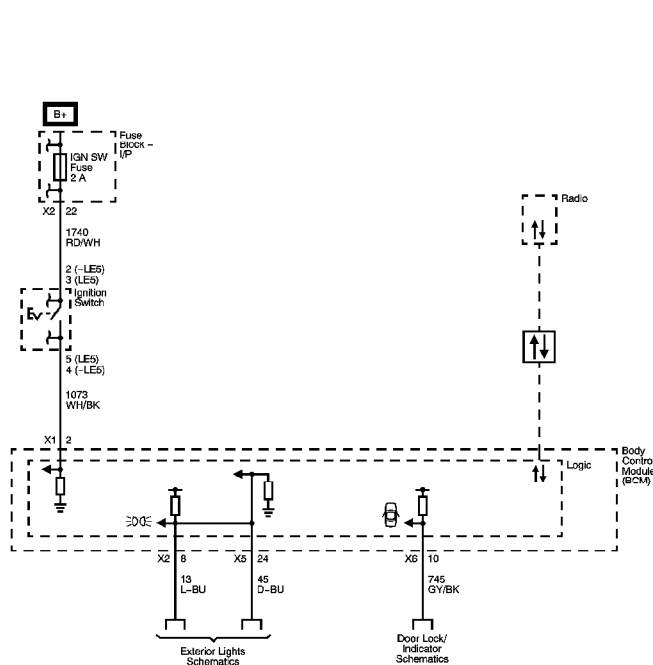


Electronic Compass Module Replacement

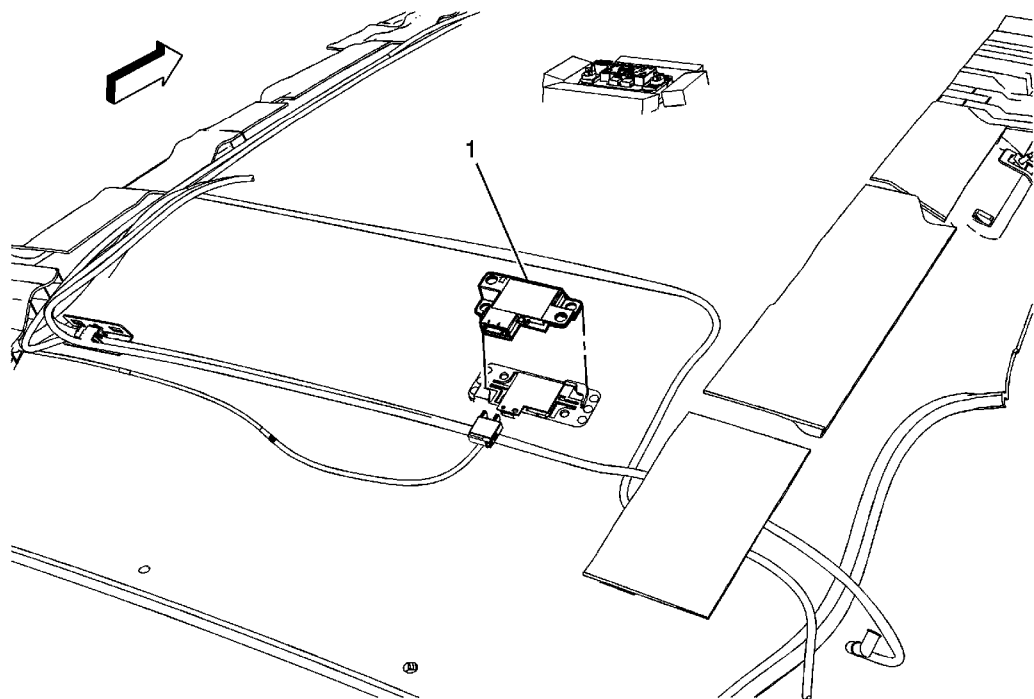


Callout	Component Name
Preliminary Procedure	
Lower the Headlining Trim Panel. Refer to Headlining Trim Panel Replacement .	
1	<div>Electronic Compass Module</div> <div>Procedure</div> <div><div>1. Disconnect the electrical connectors.</div><div>2. For programming and set up information, refer to Control Module References.</div><div>3. Unsnap the electronic compass module from the bracket.</div></div>

Driver Information Display Switch Replacement

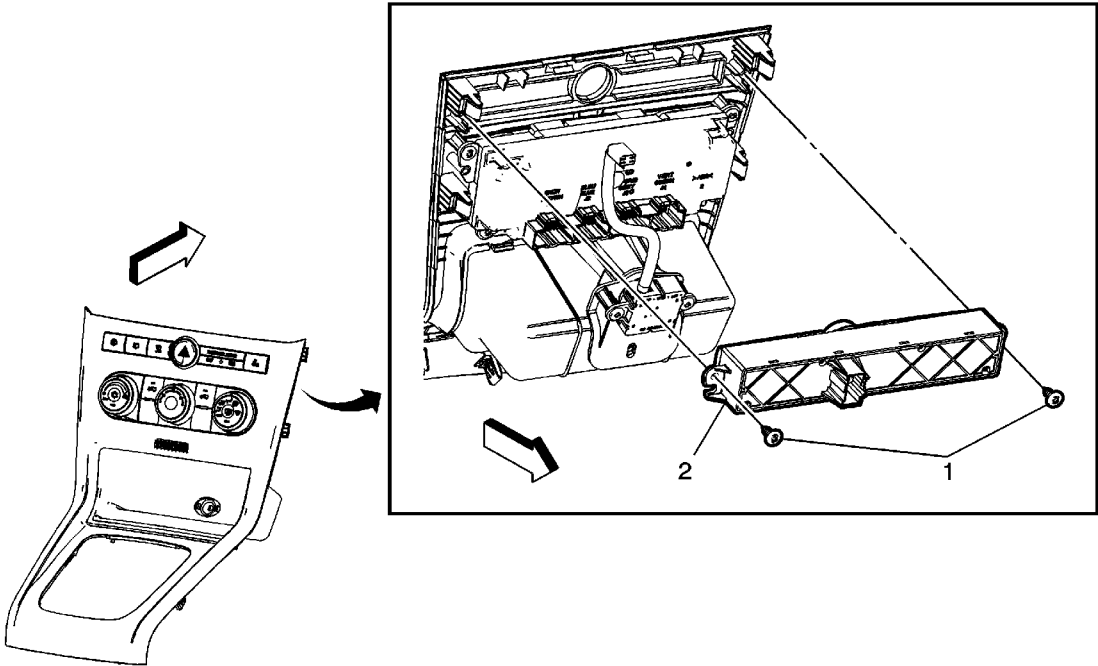

Callout	Component Name
Preliminary Procedure	
Remove the front floor console trim plate. Refer to Front Floor Console Accessory Trim Plate Replacement .	
1	Driver Information Display Switch Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Driver Information Display Assembly

Instrument Cluster Replacement

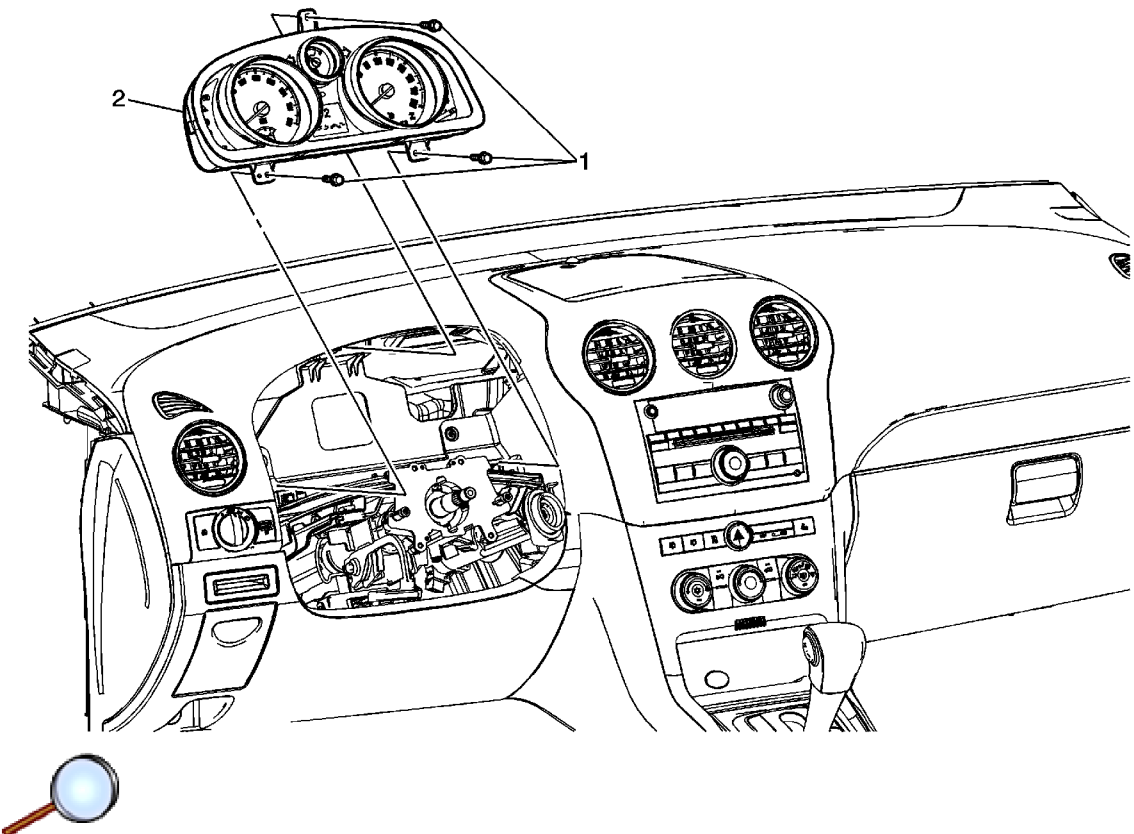

Callout	Component Name
Preliminary Procedure	
Remove the upper steering column trim cover assembly. Refer to Steering Column Upper Trim Cover Replacement .	
1	<p>Instrument Panel Cluster Screw (Qty: 3)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 3 N·m (27 lb in)</p>
2	<p>Instrument Panel Cluster Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disconnect the electrical connections.2. When replacing the cluster assembly, refer to Control Module References for programing and setup information.