# JUNCTION BLOCK (J/B)

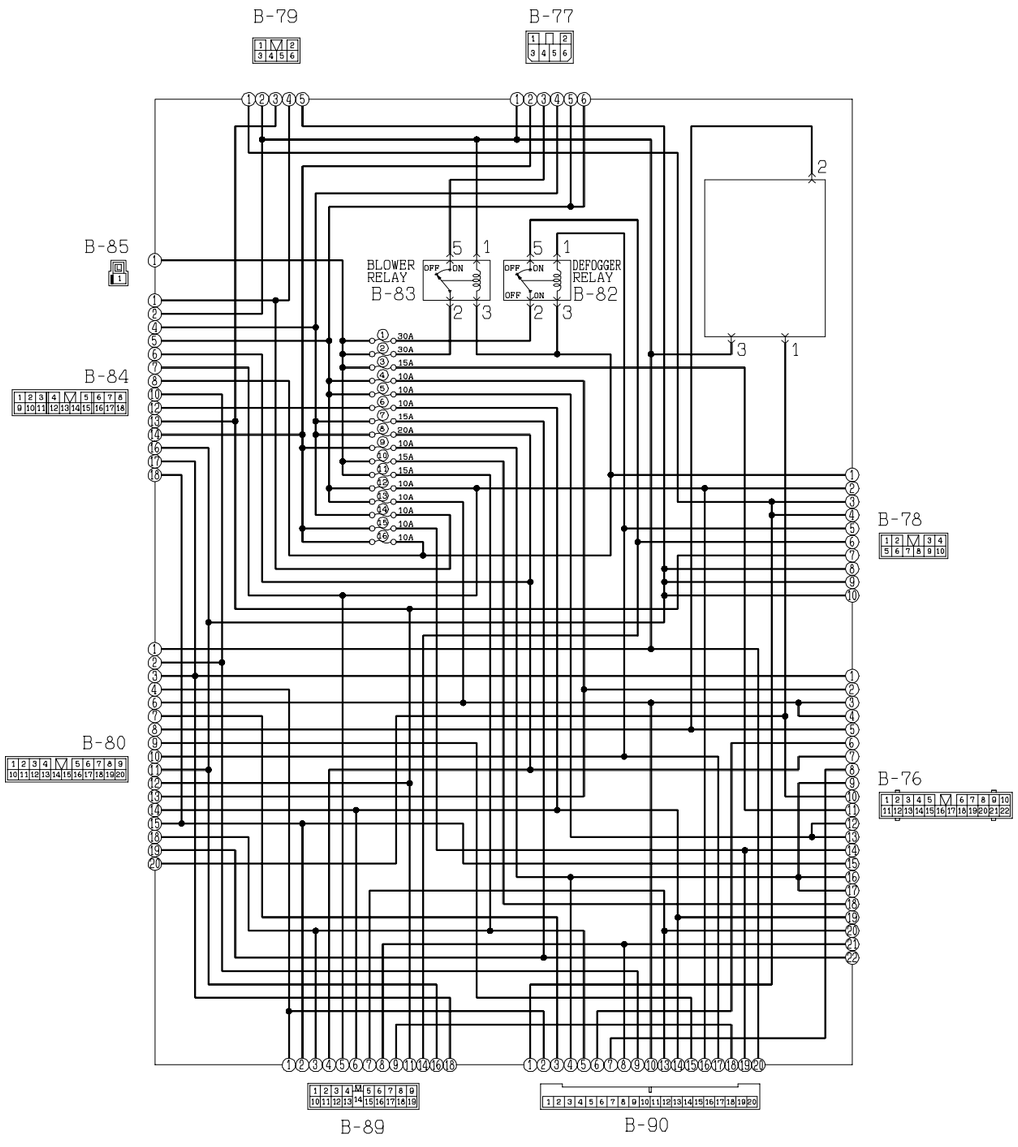

**Front side**

**Reverse side**

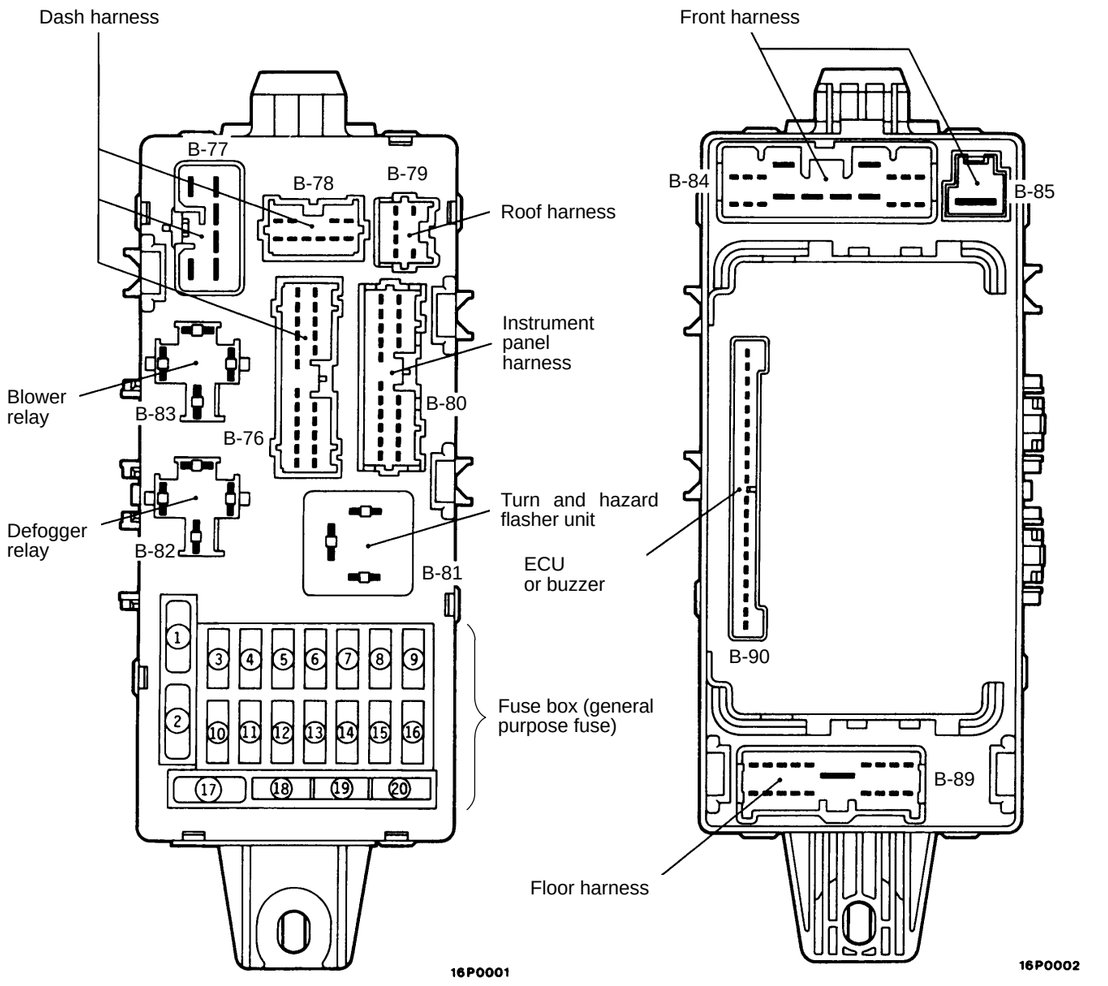


16P0001

16P0002

16AE111N

# CENTRALISED JUNCTION

## FUSIBLE LINK (Relay box in engine compartment)

| No. | Used Circuit | Type | Colour of housing | Rated capacity |
|---|---|---|---|---|
| 19 | Ignition switch | Connector type | Pink | 30 |
| 20 | Power window, sunroof, power seat, exclusive fuse Nos. 18 and 20 | Connector type | Green | 40 |
| 21 | Headlamp | Connector type | Green | 40 |
| 22 | ABS | Connector type | Yellow | 60 |
| 23 | Fusible link Nos. 2 and 3, charging | Screwed-in type | White | 120 |
| 24 | Exclusive fuse No. 17, general purpose fuse Nos. 1, 2, 3, 10 and 11 | Screwed-in type | Yellow | 60 |

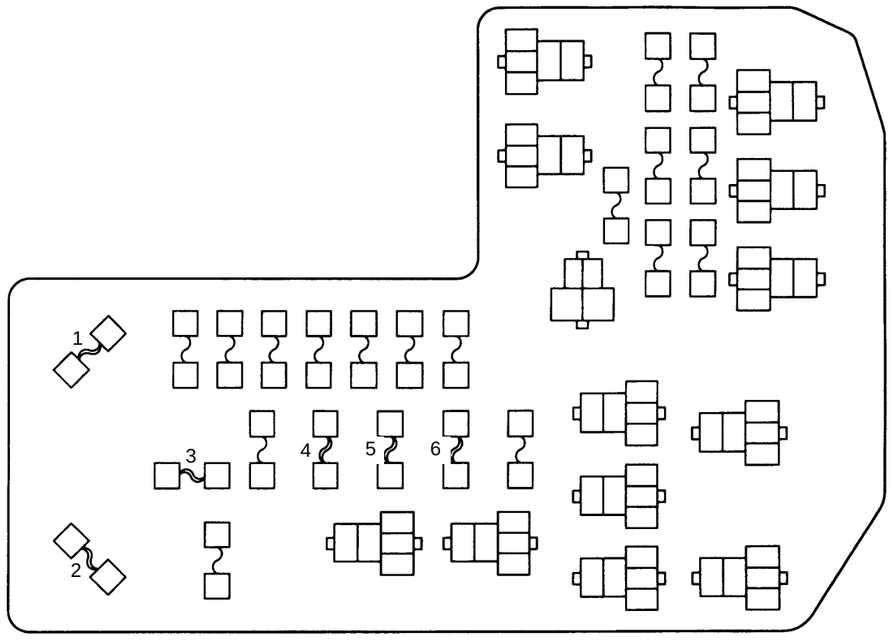


16P0011

## DEDICATED FUSE (Relay box and fuse box)

| Power supply circuit | No. | Rated capacity (A) | Housing colour | Circuit |
|---|---|---|---|---|
| Taillamp relay | 1 | – | – | |
| | 2 | 10 | Red | Ashtray illumination, audio system, shift indicator lamp, sunroof switch illumination, combination meter illumination, centre message display switch illumination, rheostat, traction control switch illumination, rear combination lamp, rear lid lamp, auto air conditioning illumination, glove box lamp. |
| Headlamp relay (LO) | 3 | 15 | Red | Headlamp circuit |
| | 4 | 15 | Red | |
| Headlamp relay (HI) | 5 | 10 | Blue | Headlamp circuit |
| | 6 | 10 | Blue | |
| Fog lamp relay | 7 | 15 | Blue | Fog lamp |
| Battery | 8 | 20 | Red | Automatic A/C, cooling |
| | 9 | 20 | Yellow | Audio |
| | 10 | 10 | – | IOD |
| | 11 | 15 | Red | Traction Control, engine control, ELC-4A/T, A/C, centre display, ABS, SRS, cruise control, combination meter, BEM, trunk lid and fuel door opener, personal lamp, room illumination lamp, trunk room lamp, ign key illumination lamp, clock |
| | 12 | – | – | Horn |
| | 13 | 10 | Blue | Turn signal, hazard lamp, theft, central locking, keyless entry |
| IG switch ACC. | 14 | | | |
| Battery | 15 | 20 | Yellow | Engine control, ELC-4A/T |
| | 16 | 20 | Yellow | Charging |
| | 17 | 10 | Red | Automatic air conditioner, engine control |
| | 18 | – | – | – |
| – | 19 | – | – | – |

Main Index
54 Index
54C BASE
A
B
C
D
E
F
G
H
J
K

**RELAY BOX (in engine compartment)**

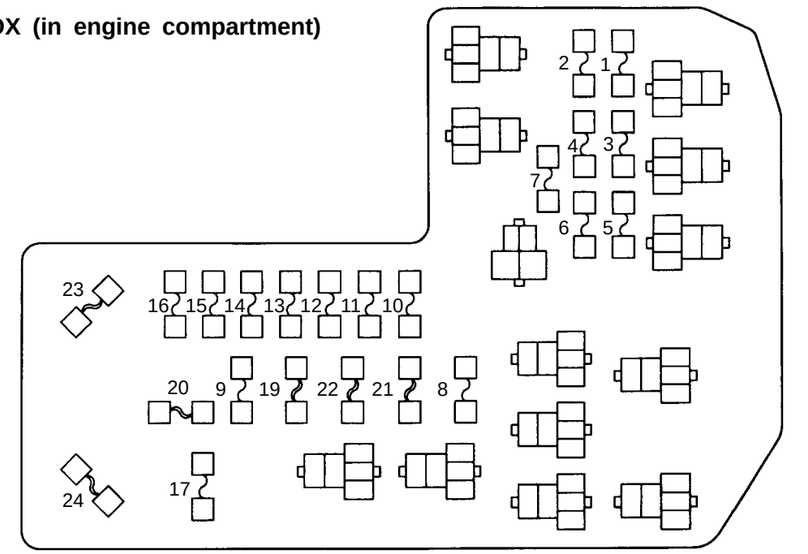


16P0011

**FUSE BOX (next to junction box)**

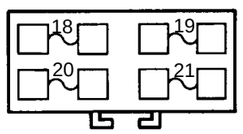


16P0012

16AE112N

## MULTI-PURPOSE FUSE (In junction block)

| Power supply circuit | | No. | Rated capacity (A) | Housing colour | Circuit |
|---|---|---|---|---|---|
| Battery | | 1 | 30 | Pink | Defogger |
| | | 2 | 30 | Pink | Blower motor |
| | | 3 | 15 | Blue | Stop lamp, A/T-ECU |
| Ignition switch | IG1 | 4 | 10 | Red | Hazard switch, SRS-ECU |
| | | 5 | 10 | Red | A/T–ECU, engine and A/T–ECU |
| | ACC | 6 | 10 | Red | Audio system, cruise-ECU, centre display, combination meter, power antenna |
| | | 7 | 15 | Blue | Phone connector, ACC socket |
| | | 8 | 20 | Yellow | Washer / wiper switch, rear washer / wiper motor, rear intermittent wiper relay, wiper motor, rear washer / wiper switch, remote mirror switch, audio remote control |
| | IG2 | 9 | 10 | Red | ABS-ECU, traction control |
| Battery | | 10 | 20 | Yellow | Central door locking / Keyless entry, Hazard alarm |
| | | 11 | 15 | Blue | Audio system, ignition key cylinder lamp, trunk lid and fuel door opener, power antenna, phone, central door locking |
| Ignition switch IG1 | | 12 | 10 | Red | Alternator relay, motor antenna |
| | | 13 | 10 | Red | Sun roof, ABS, wiper motor, analog meter, centre display, speed sensor, cruise control, SRS-ECU |
| Ignition switch | ACC | 14 | 10 | Red | E/C mirror |
| | IG2 | 15 | 10 | Red | Spare |
| | | 16 | 10 | Red | Blower relay, defogger relay, A/C-ECU |
| – | | 17 | 30 | Pink | Spare |
| | | 18 | 10 | Red | |
| | | 19 | 15 | Blue | |
| | | 20 | 20 | Yellow | |

JUNCTION BOX

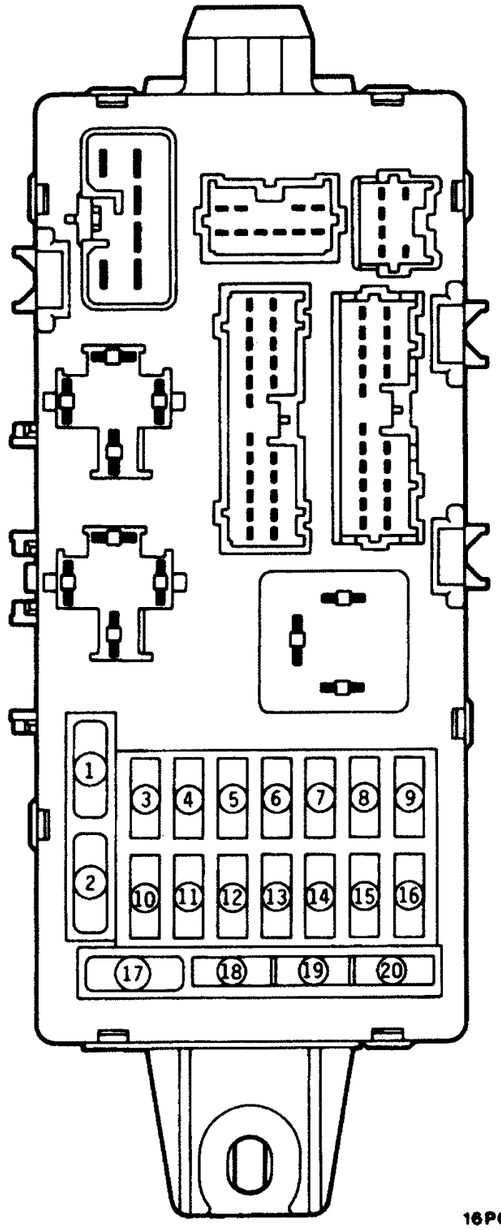


16P0001

FUSE BOX

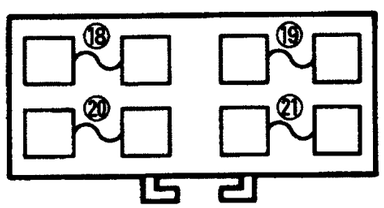


16P0012

Main Index
54 Index
54C BASE
A
B
C
D
E
F
G
H
J
K

## CENTRALISED RELAY (Relay box in engine compartment)

| Connector No. | Name | Connector No. | Name |
|---|---|---|---|
| A-15X | Power window relay | A-22X | Radiator fan relay (LO) |
| A-16X | A/C compressor relay | A-23X | Taillamp relay |
| A-17X | Horn relay | A-24X | Headlamp relay (LO) |
| A-18X | Fog lamp relay | A-25X | Headlamp relay (HI) |
| A-19X | Alternator relay | A-26X | Radiator fan relay (MI) |
| A-20X | Condenser fan relay (LO) | A-27X | Radiator fan relay (HI) |
| A-21X | Condenser fan relay (HI) | | |

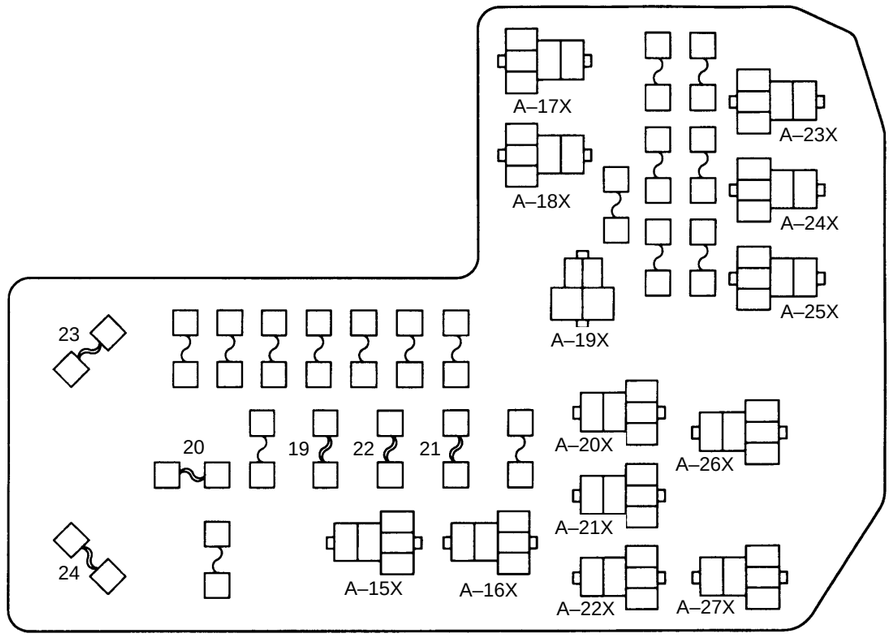


16P0011

# POWER DISTRIBUTION SYSTEM

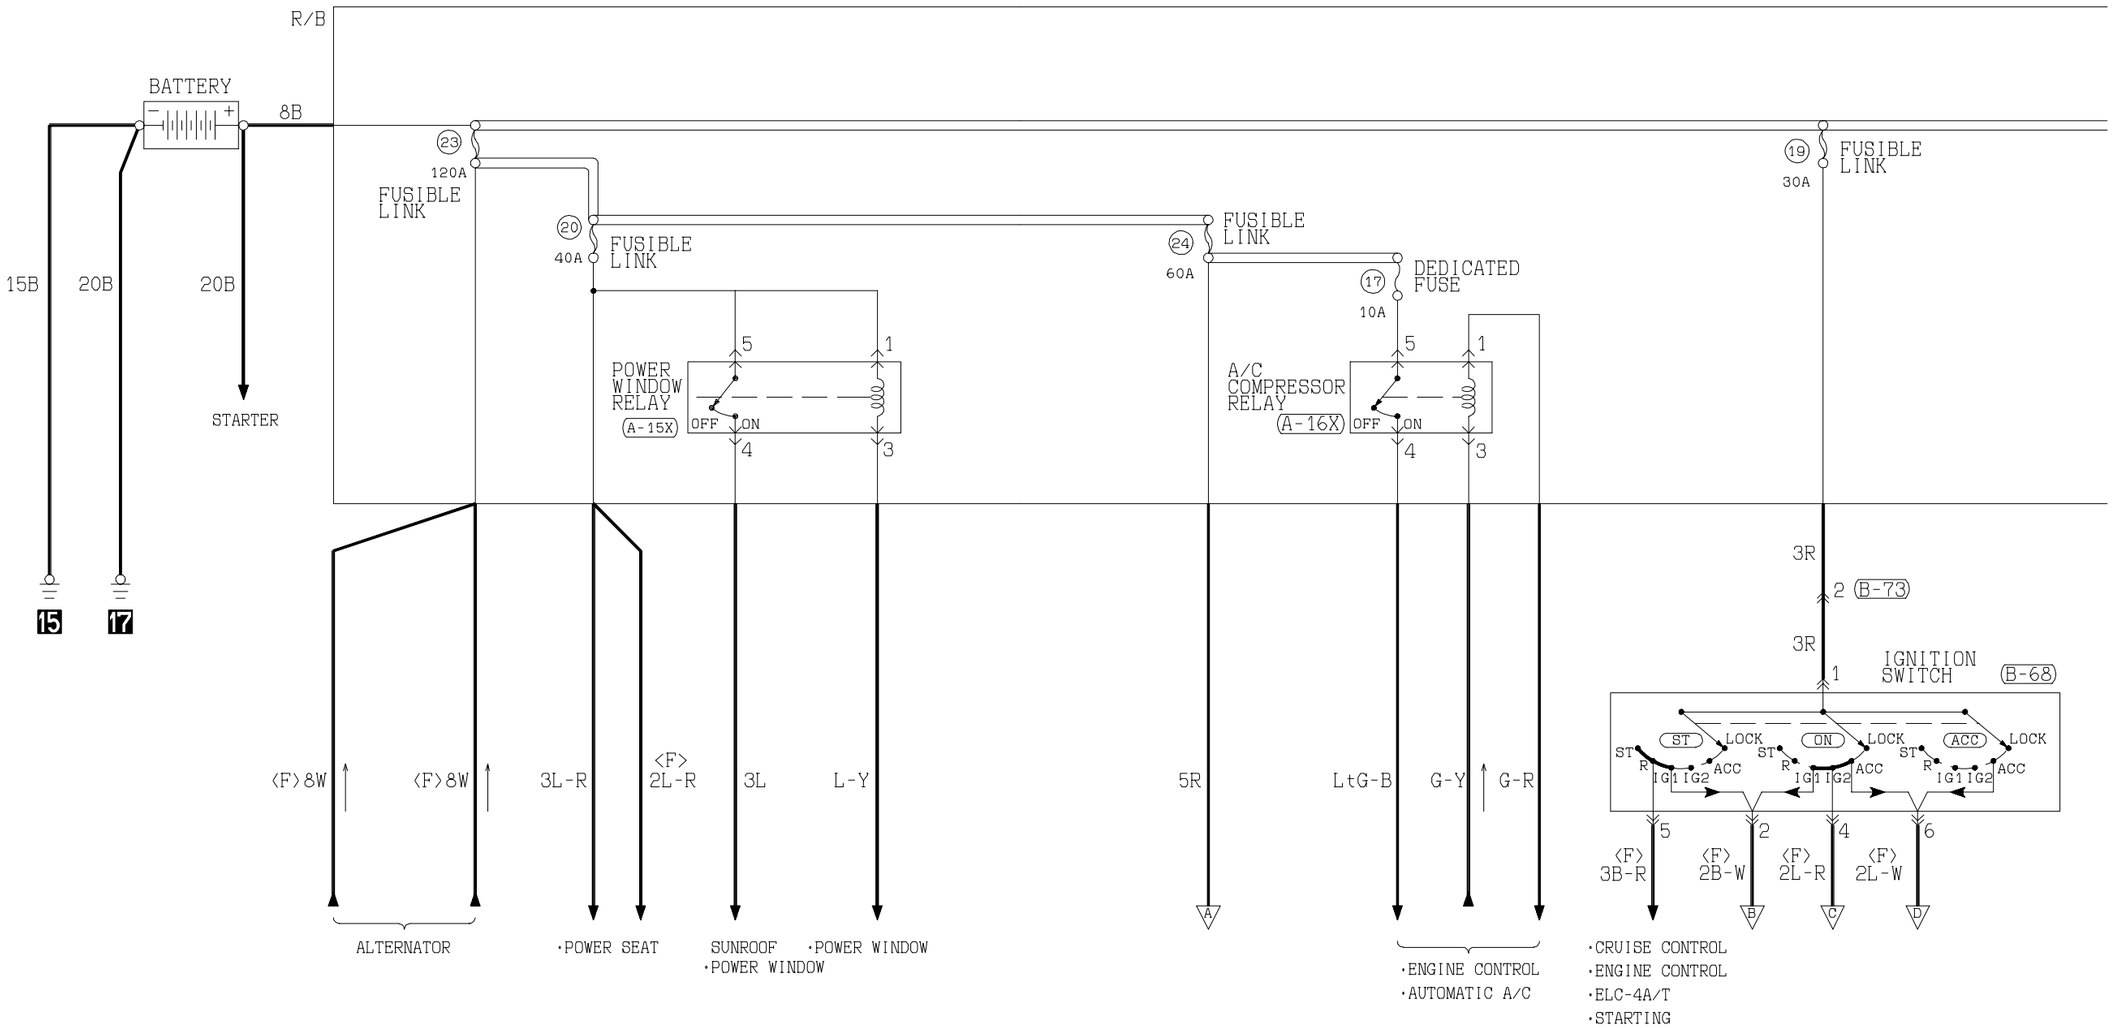


A-15X



A-16X

B-68

B-73

36TJ001D AA

36TJ001D AB

# POWER DISTRIBUTION SYSTEM (CONTINUED)

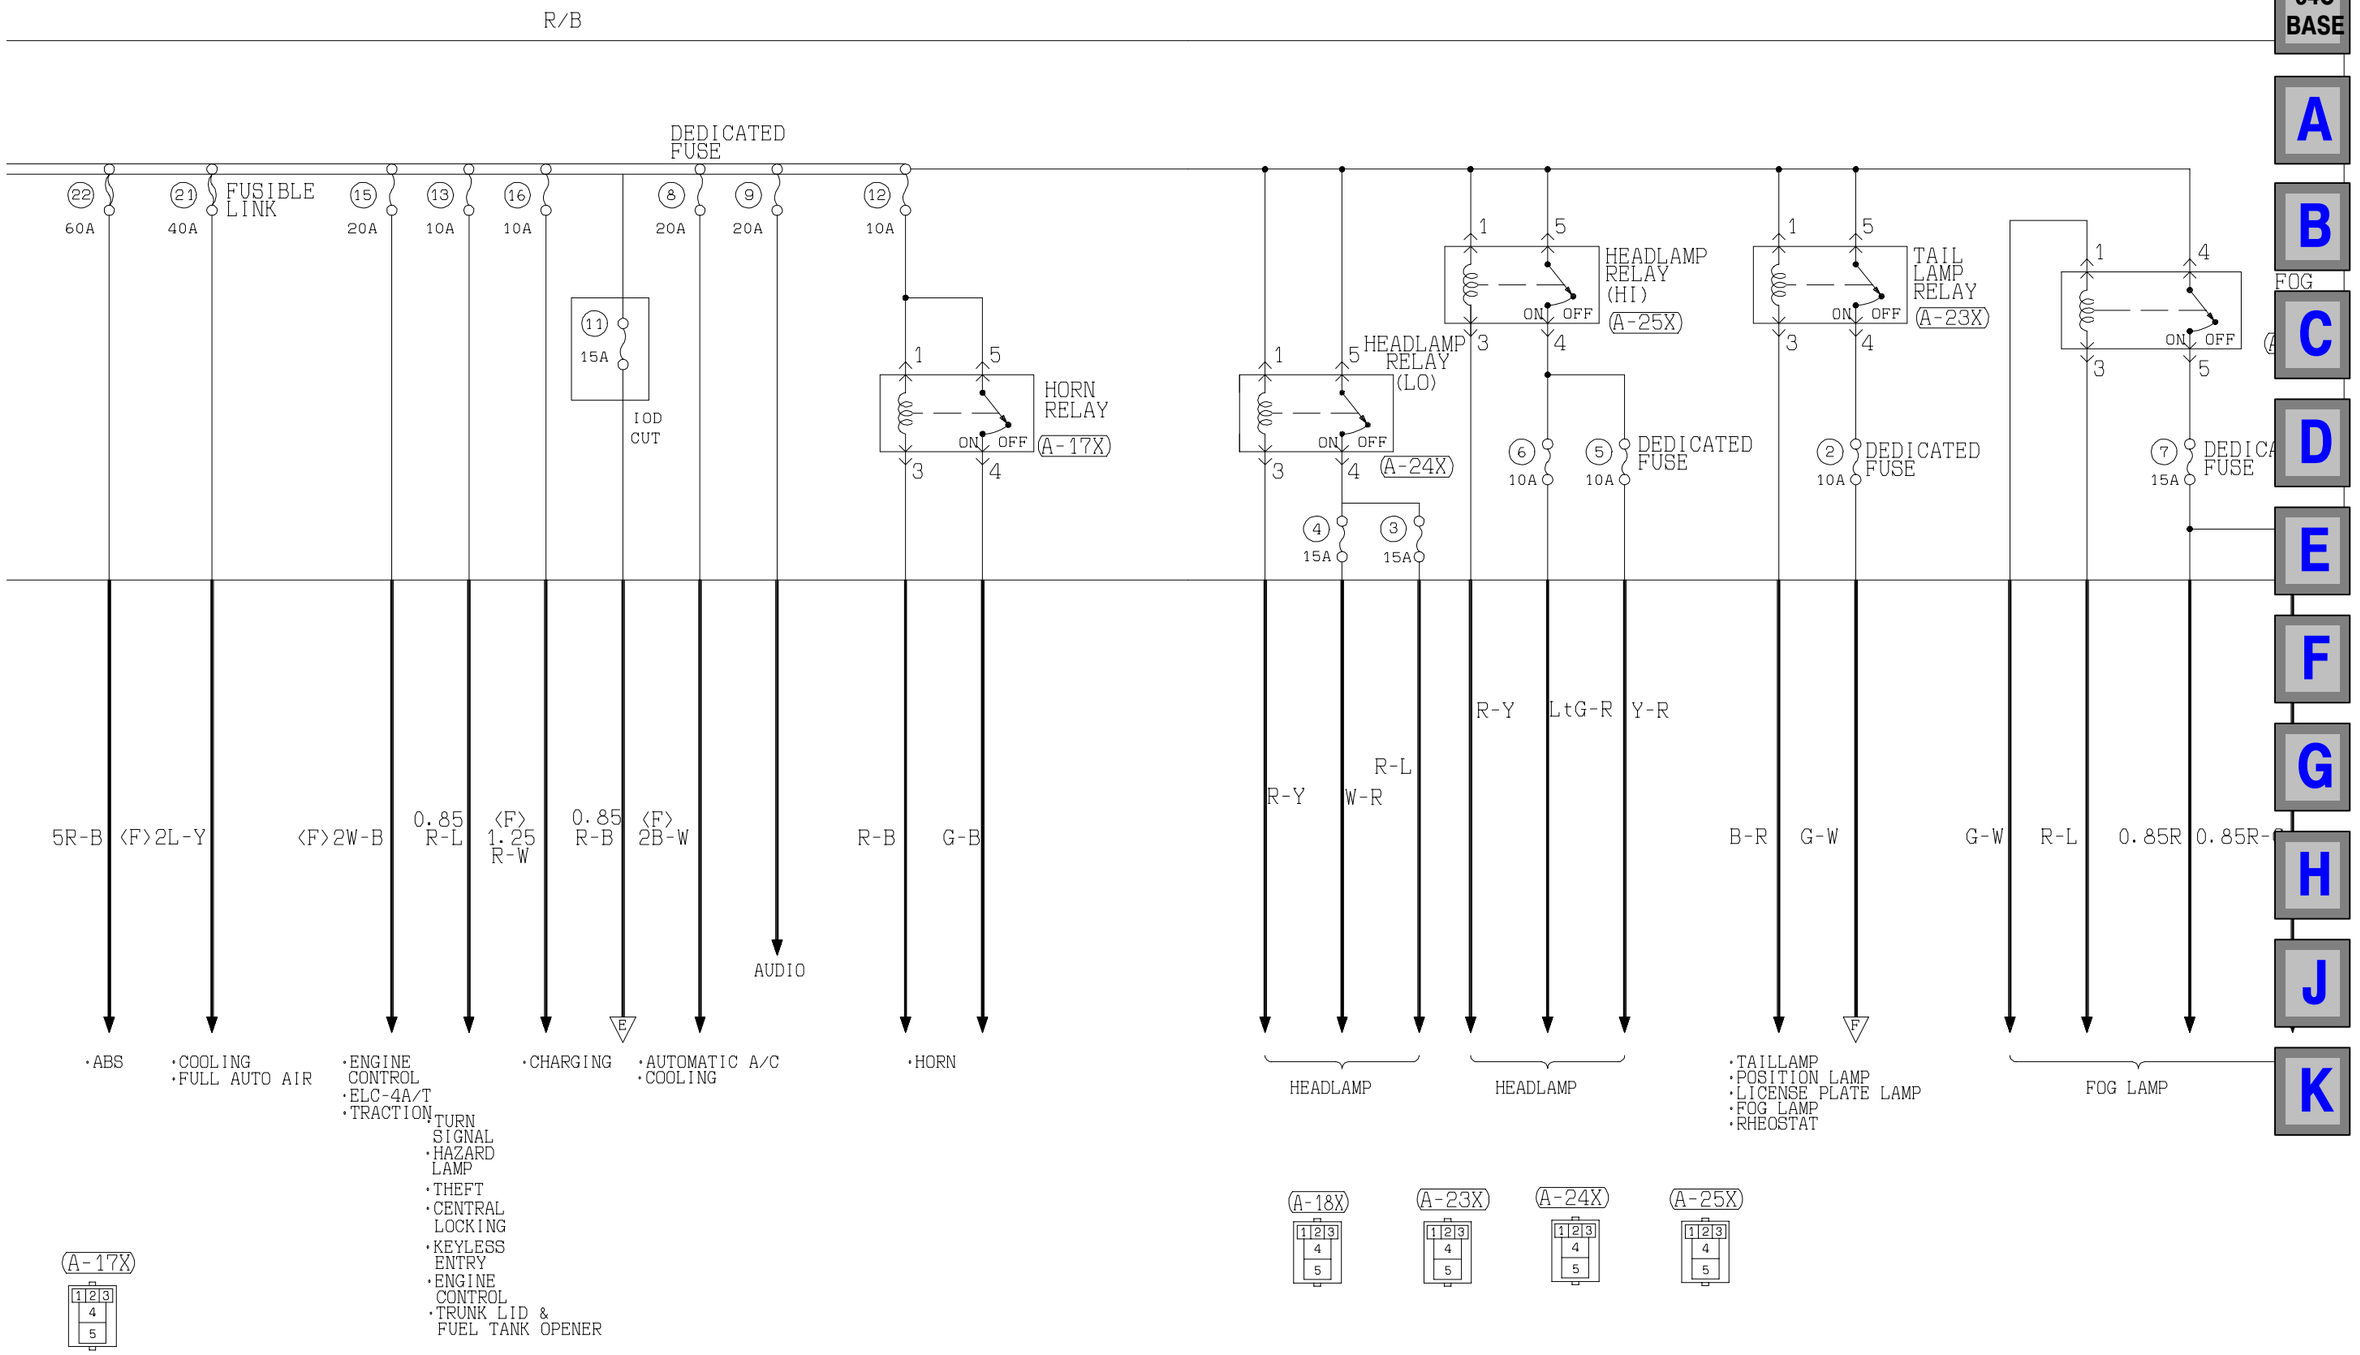


36TJ001D BA

36TJ001D BB

# POWER DISTRIBUTION SYSTEM (CONTINUED)

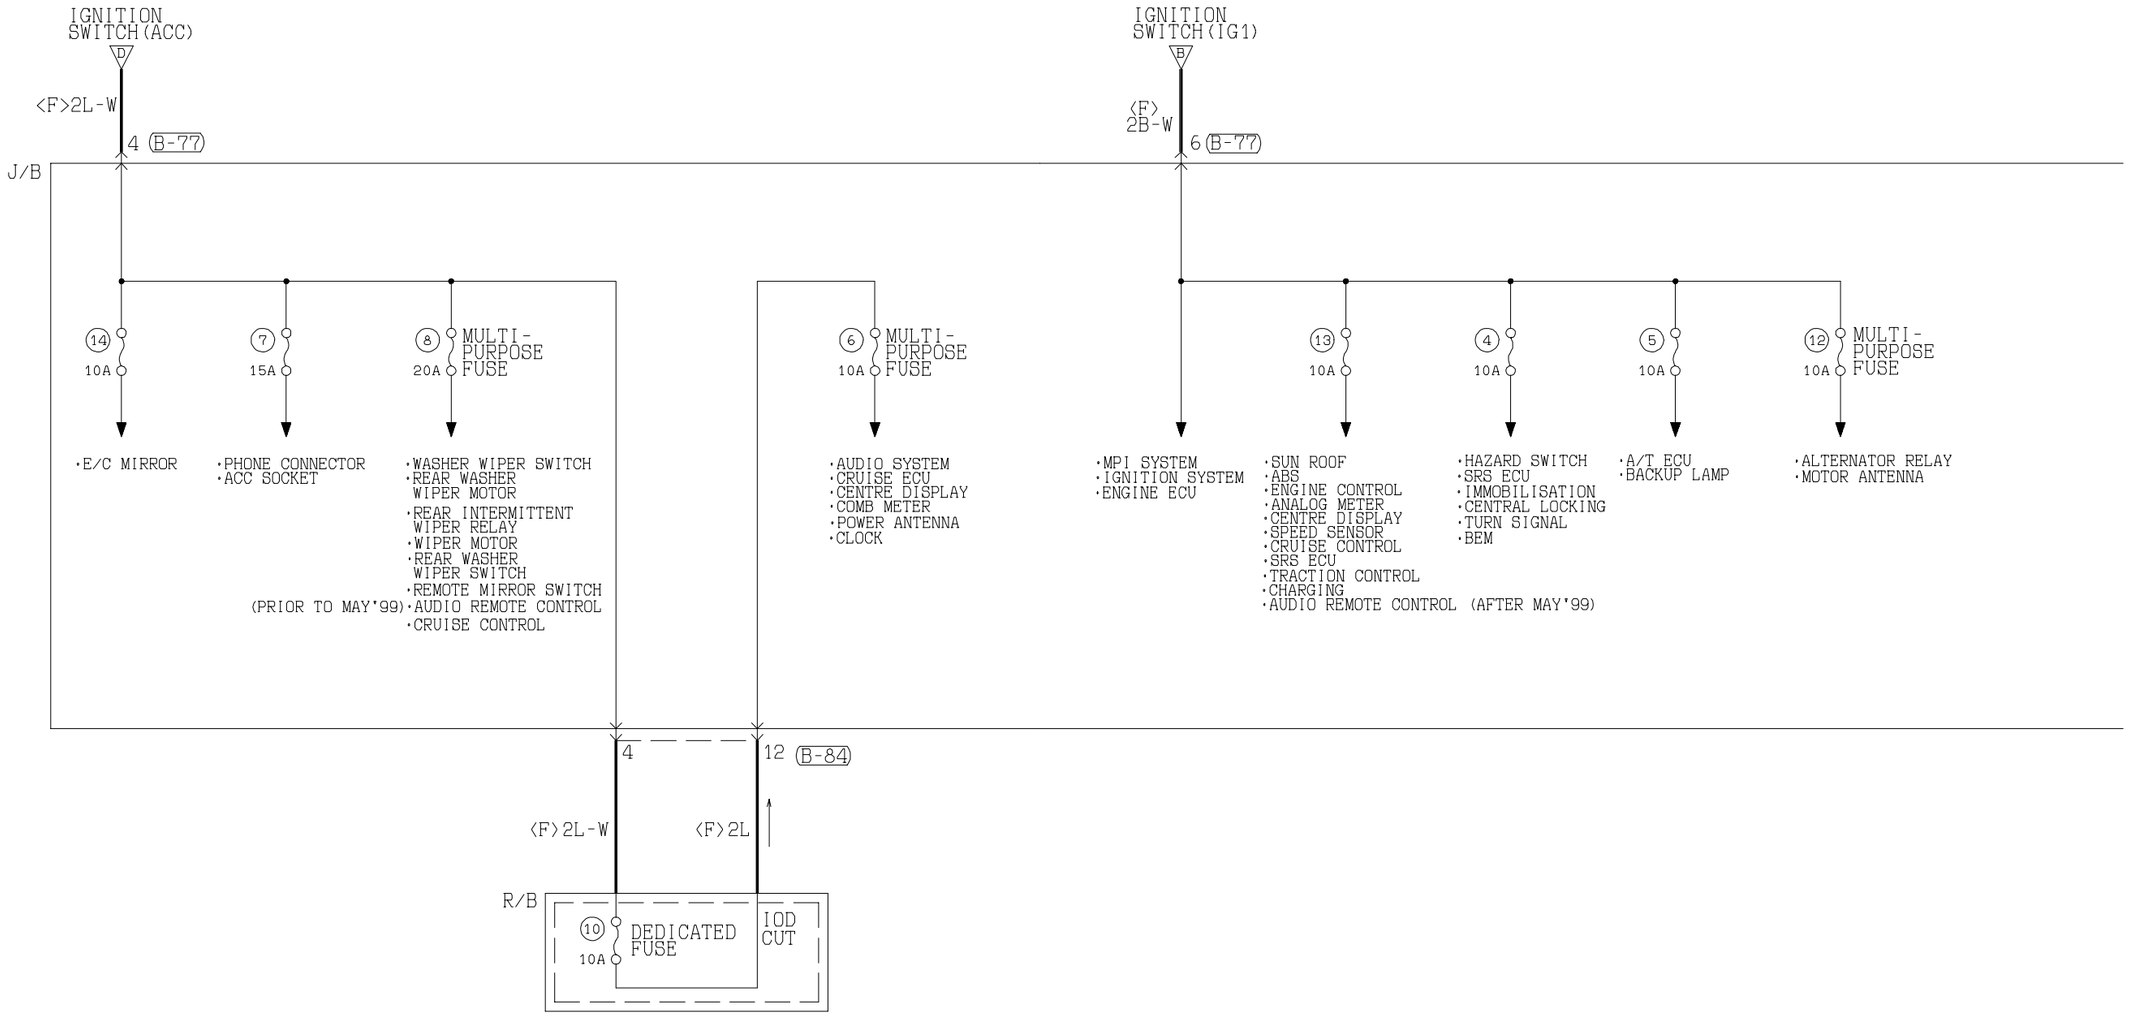




36TJ001D CA

36TJ001D CB

# POWER DISTRIBUTION SYSTEM (CONTINUED)

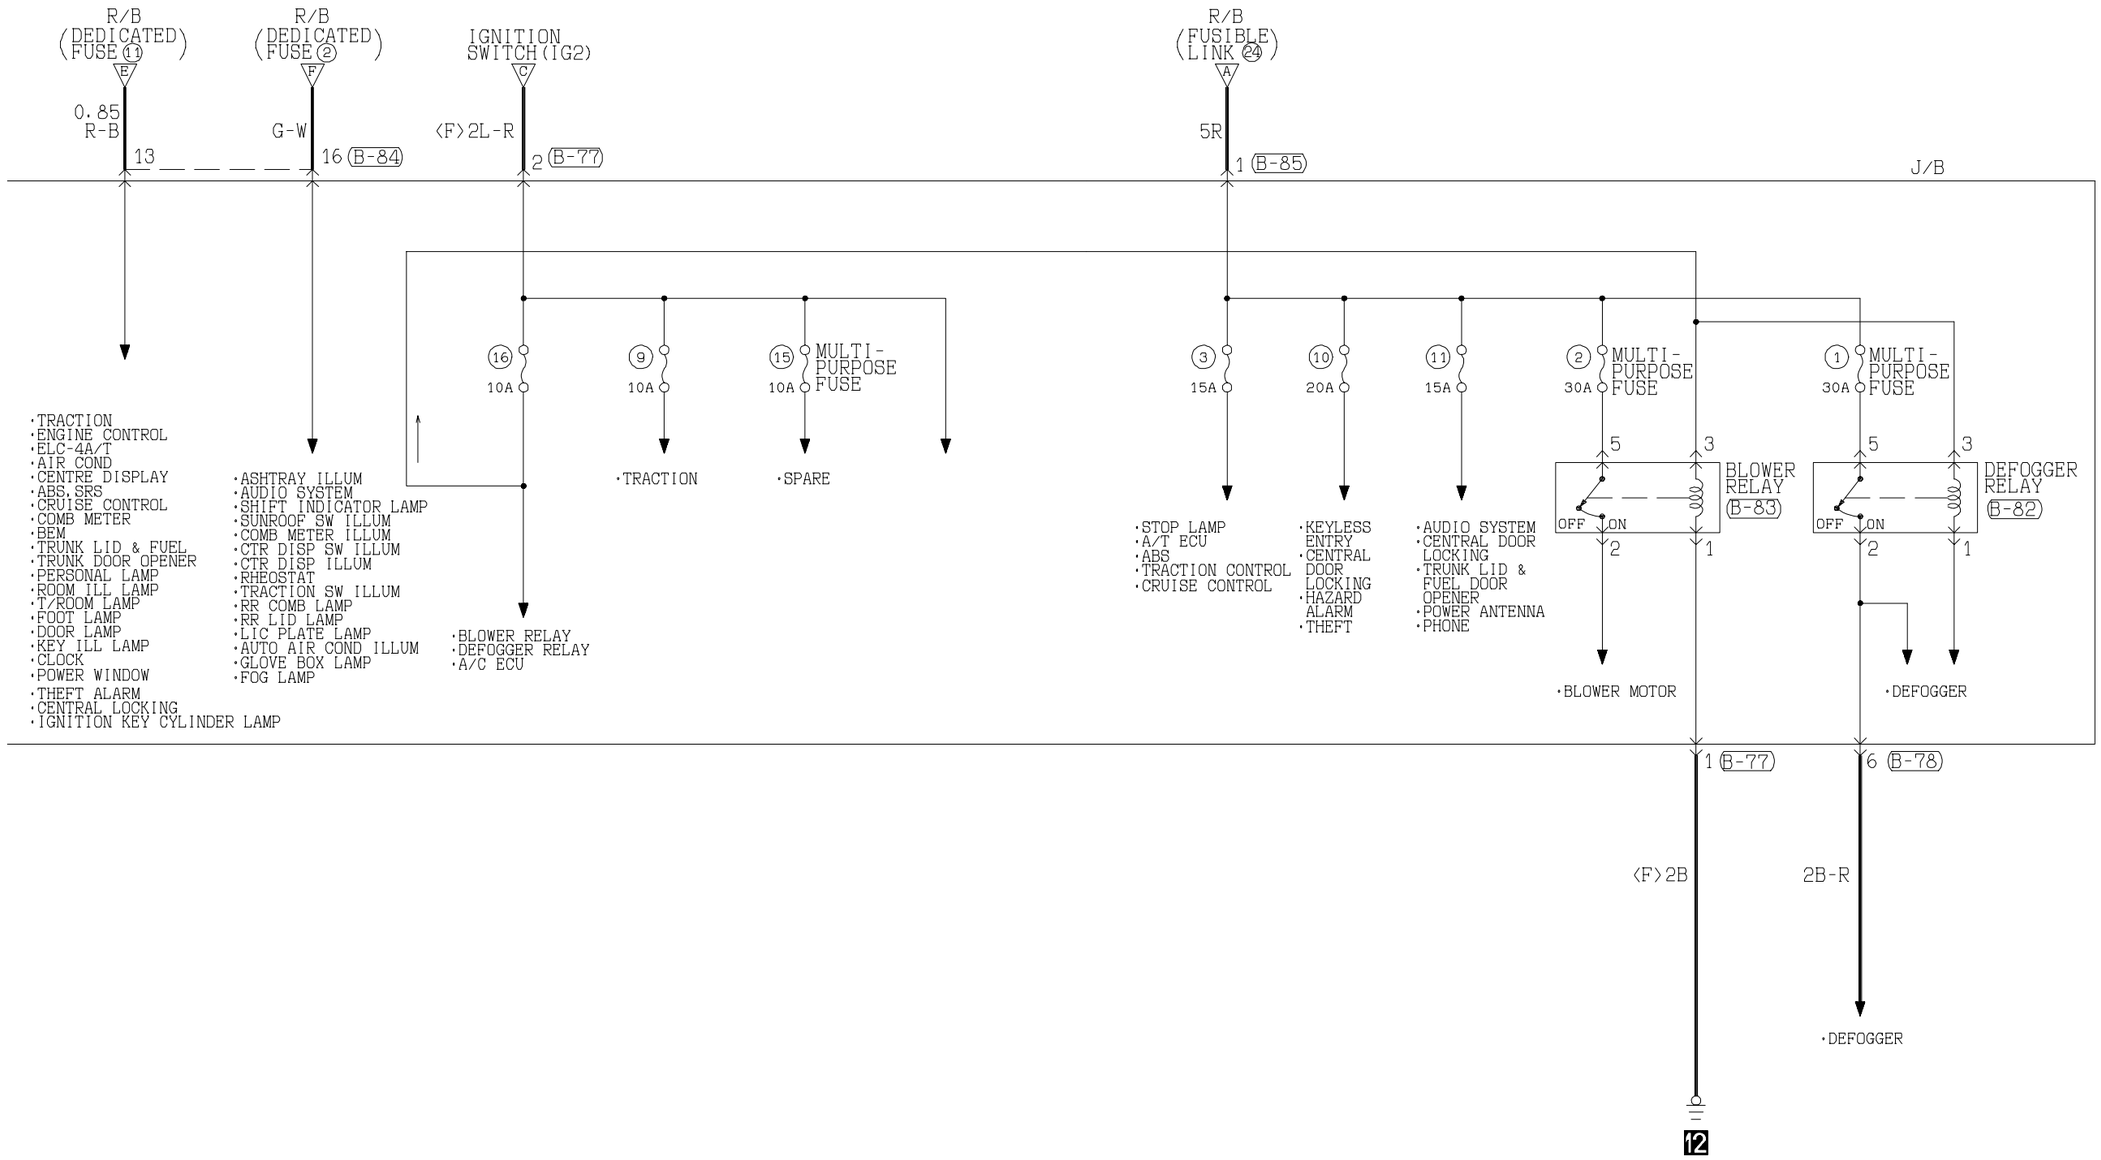

36TJ001D DA

36TJ001D DB

# STARTING SYSTEM

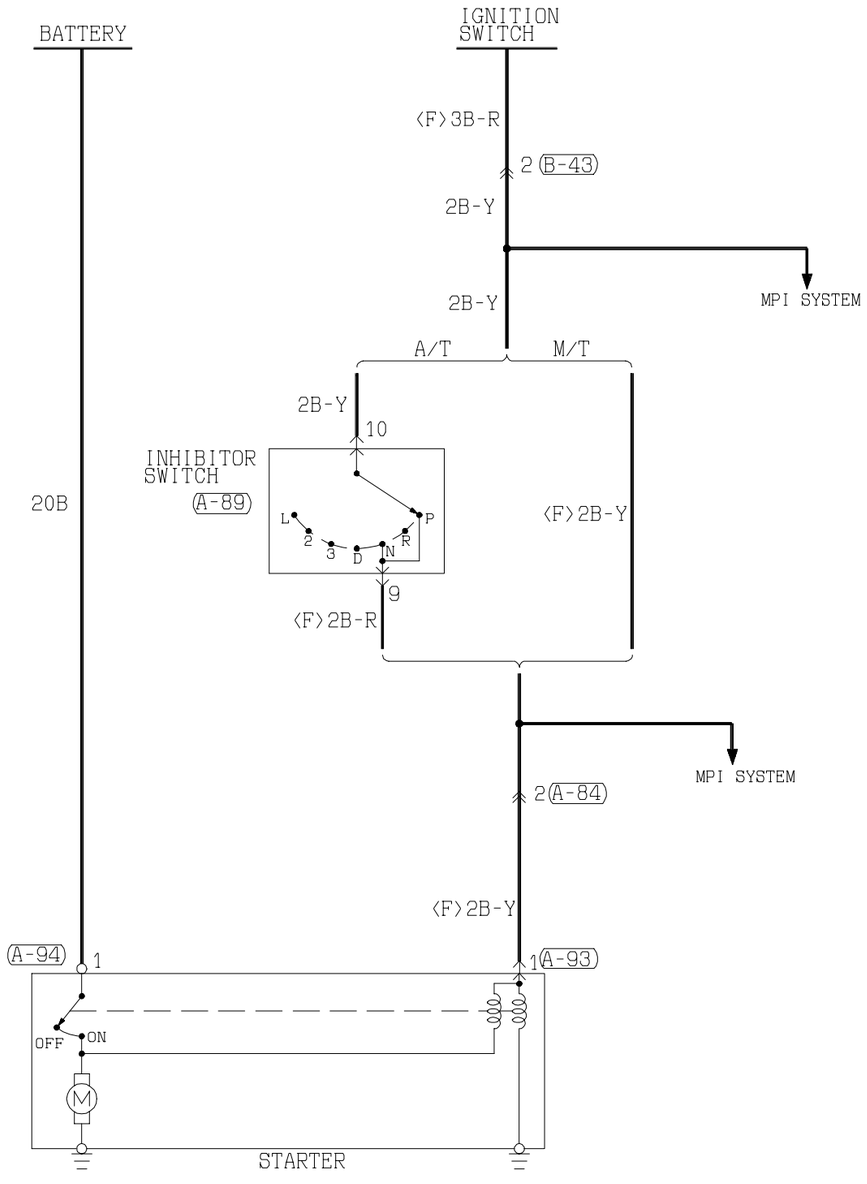

# IGNITION SYSTEM

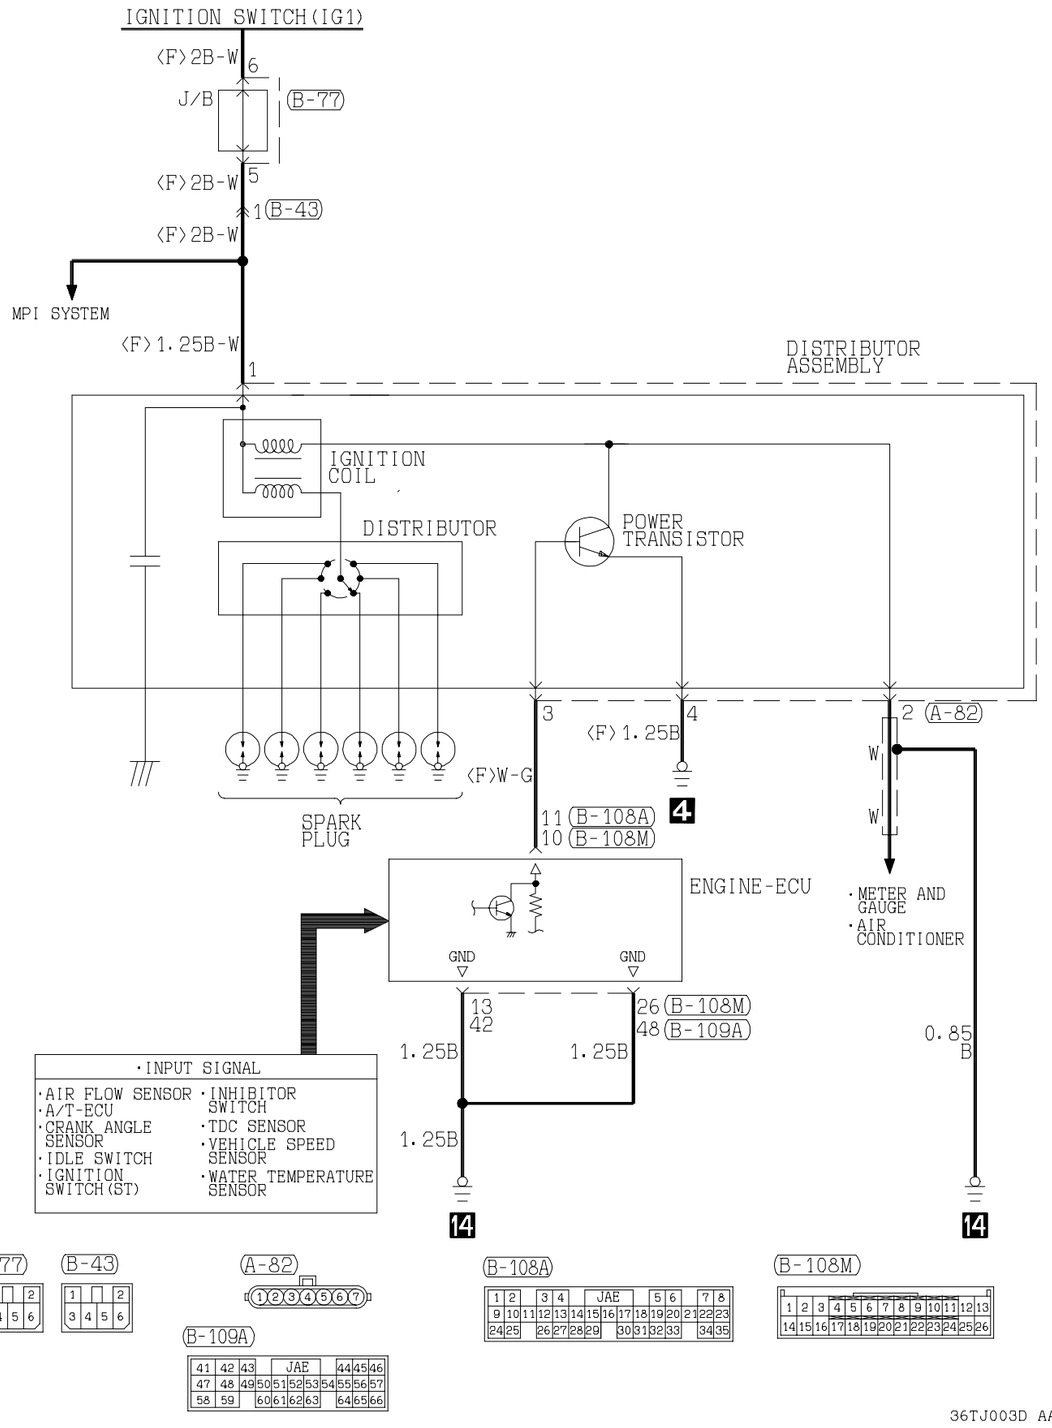


36TJ003D AA

# CHARGING SYSTEM

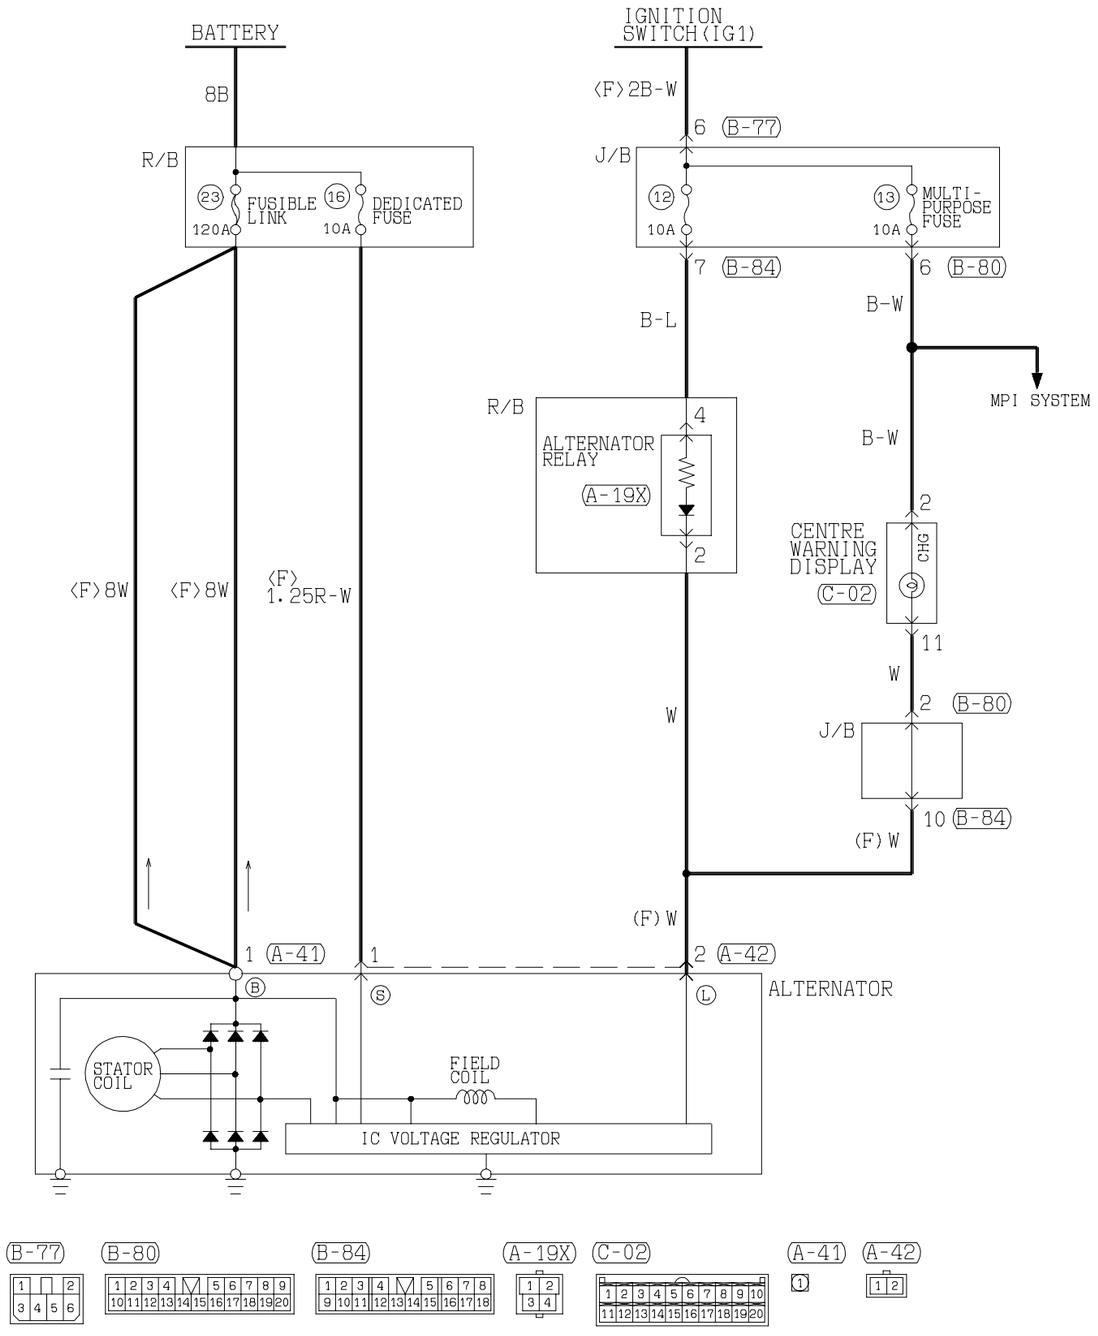

# MPI SYSTEM <Manual Transmission Vehicles>

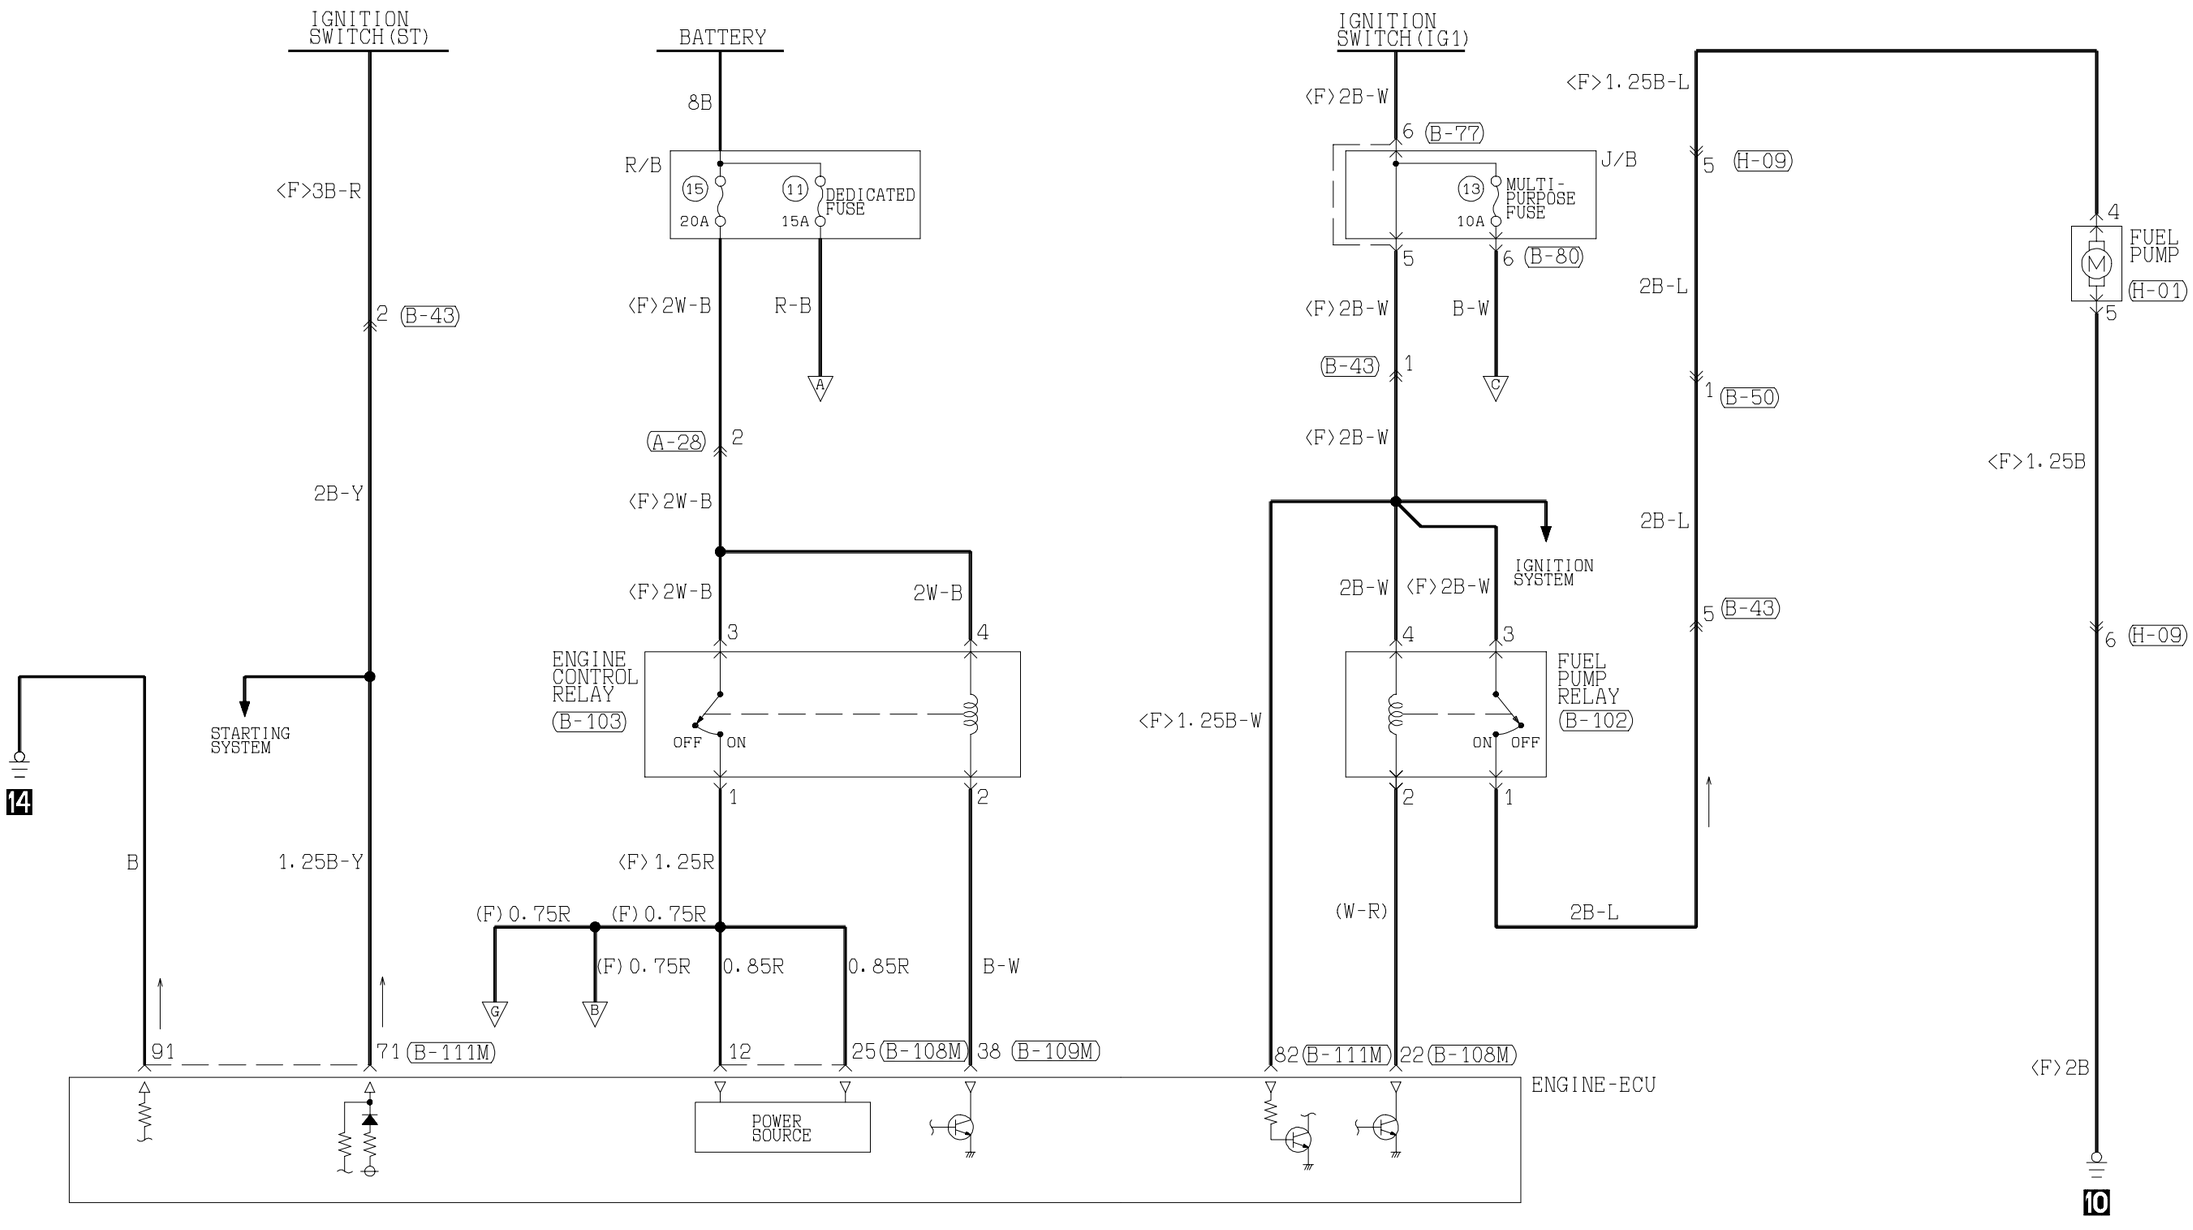


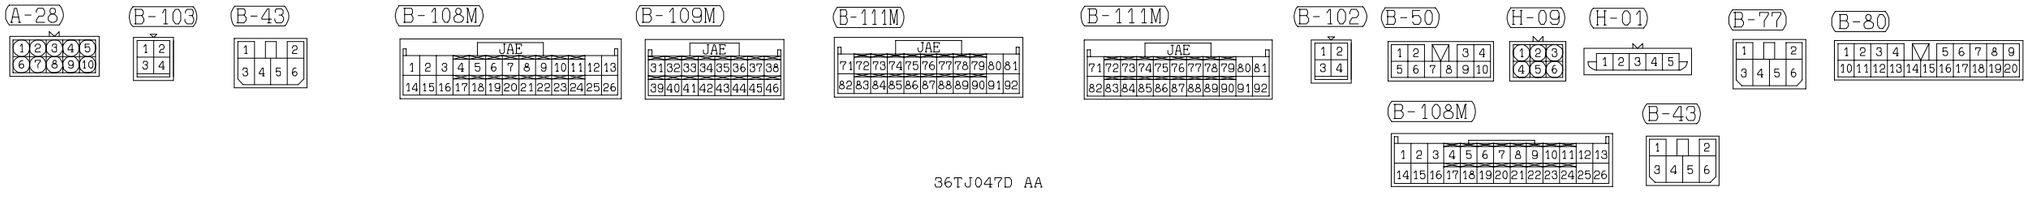


36TJ047D AA

36TJ047D AB

# MPI SYSTEM <Manual Transmission Vehicles> (CONTINUED)

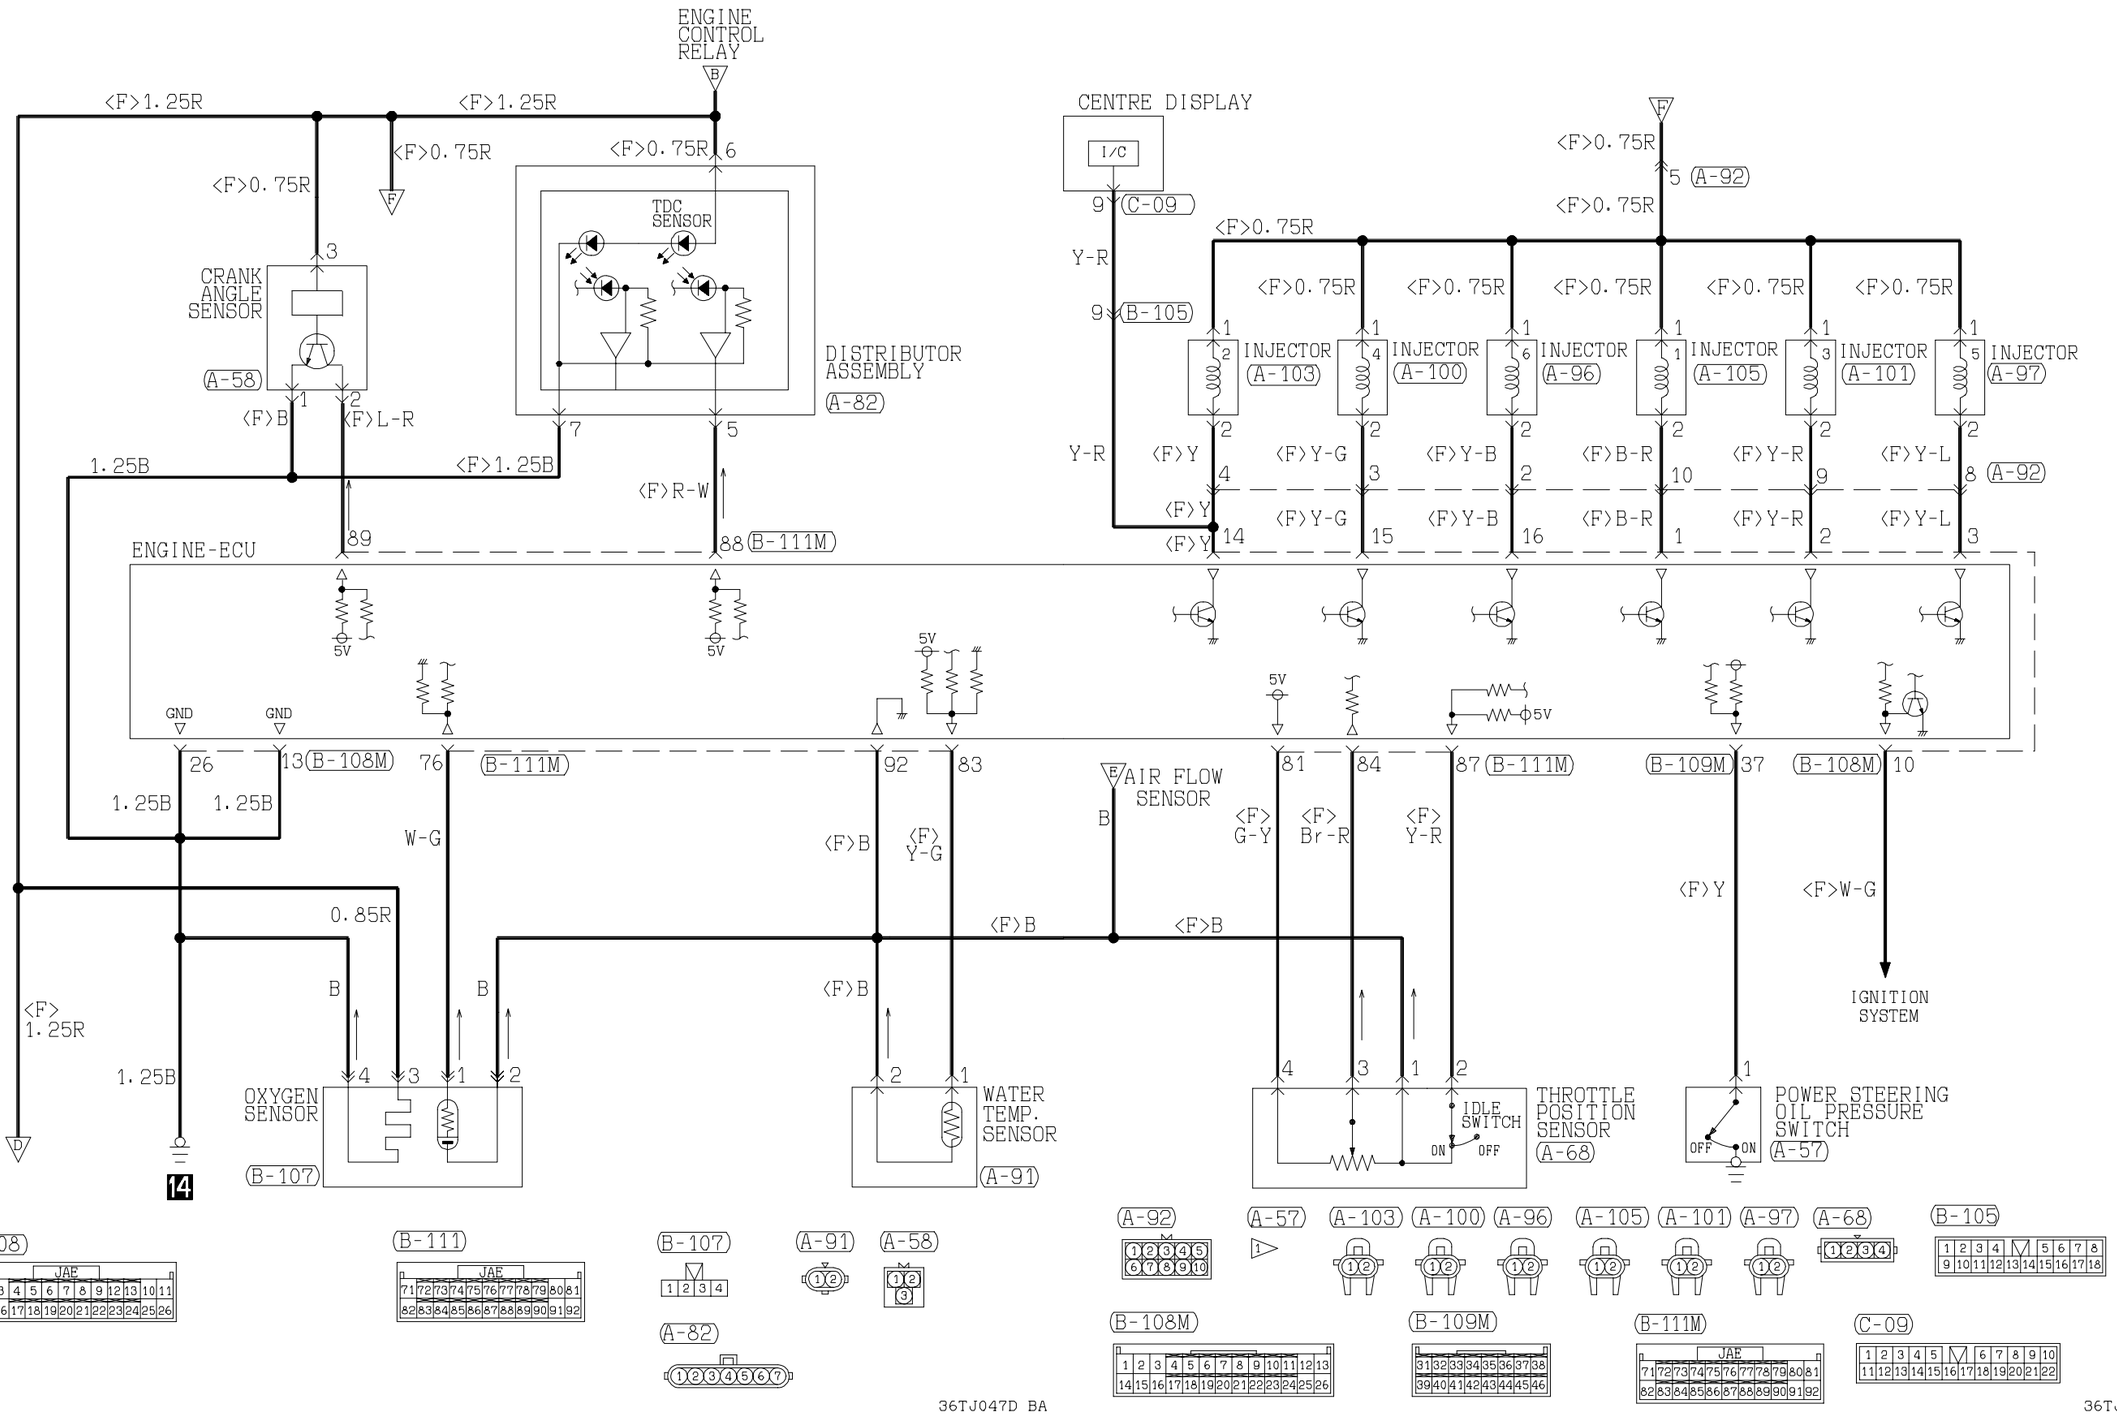

# MPI SYSTEM <Manual Transmission Vehicles> (CONTINUED)

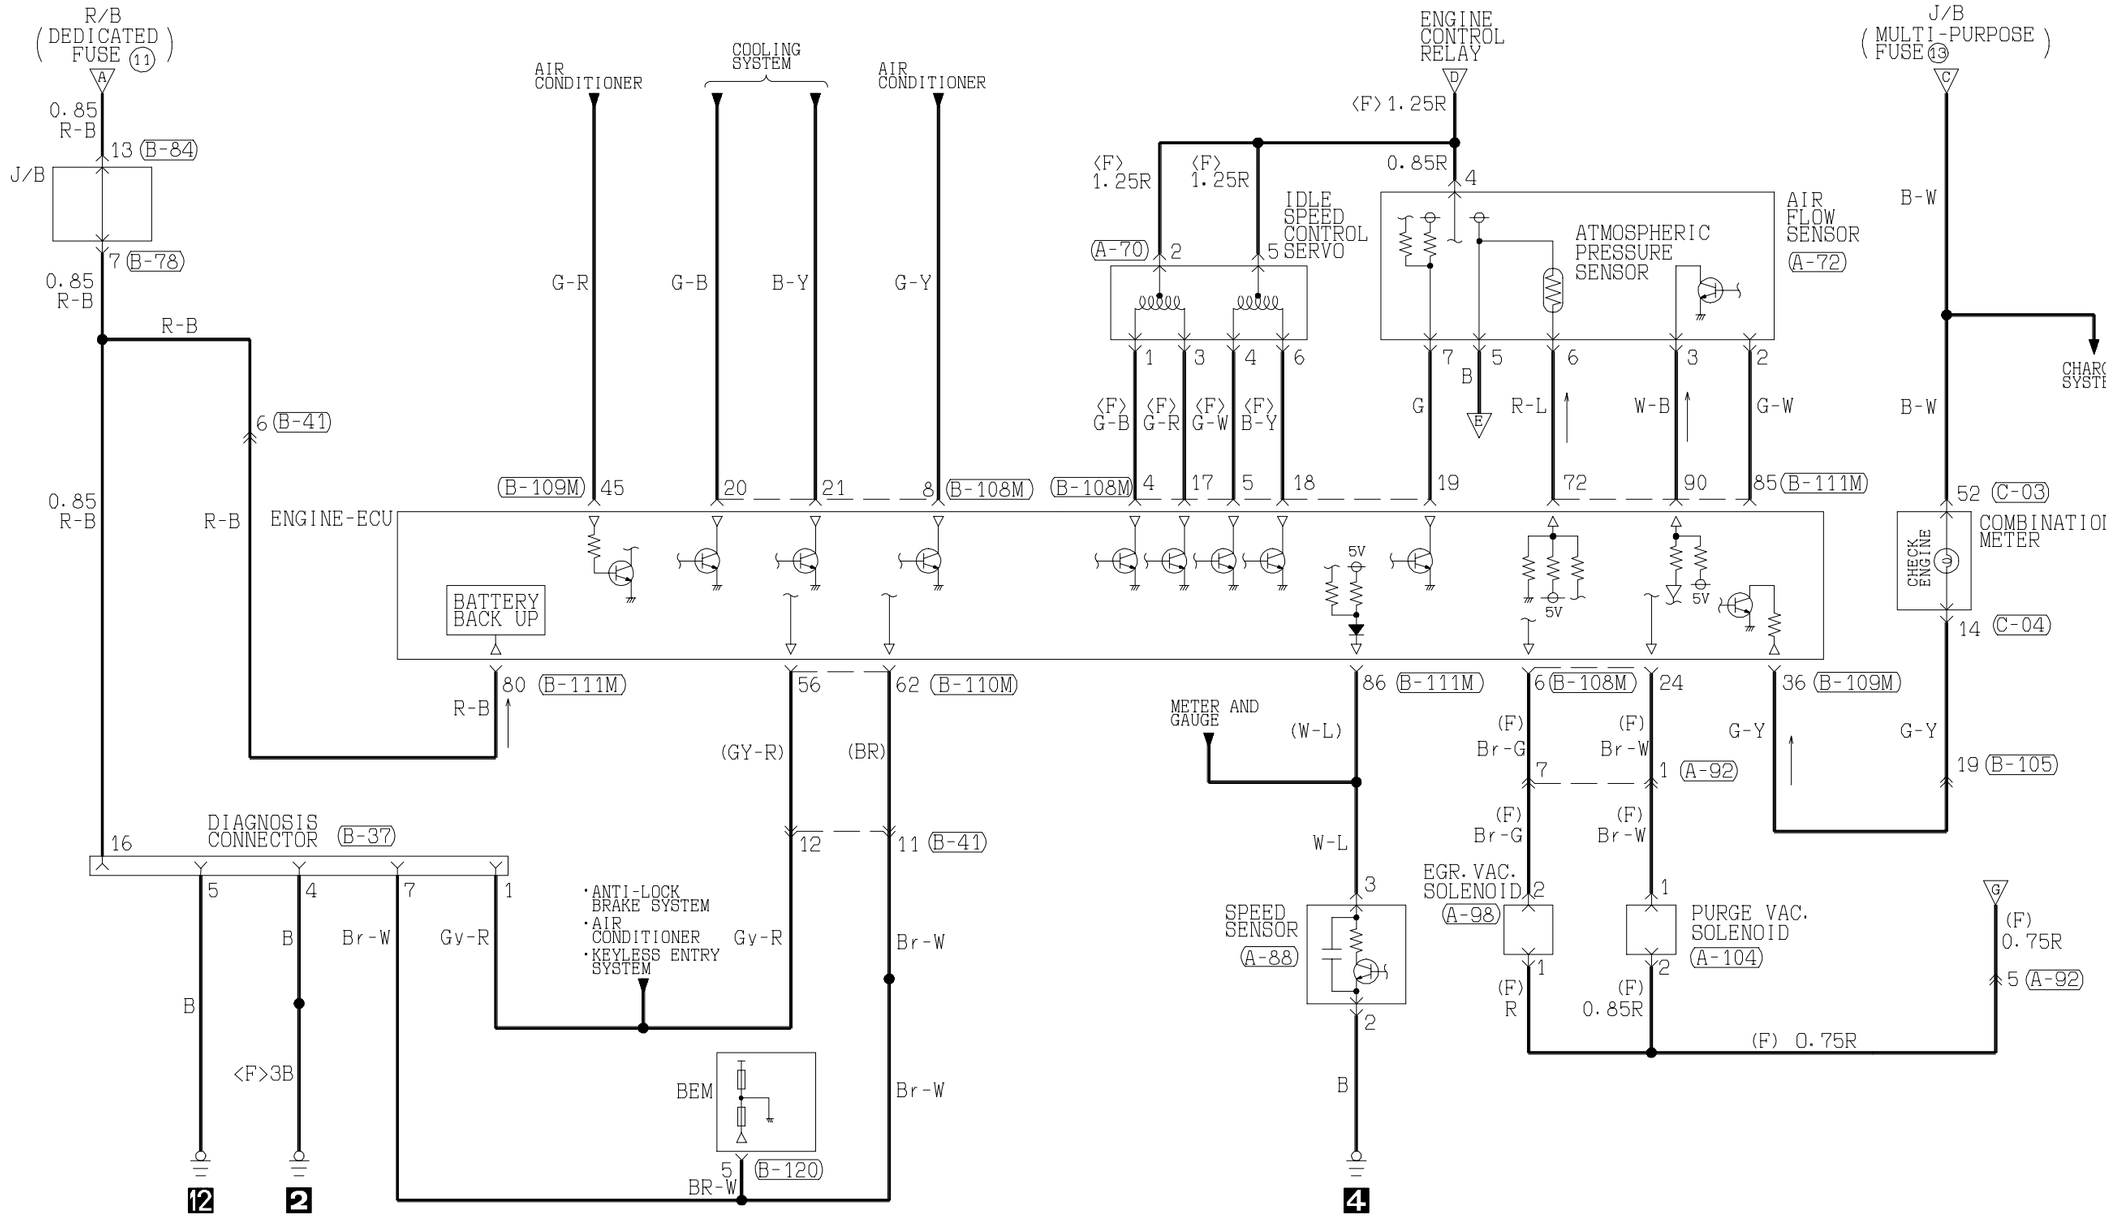


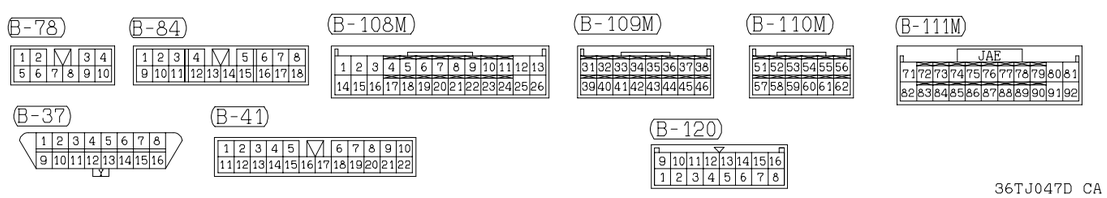


36TJ047D CA

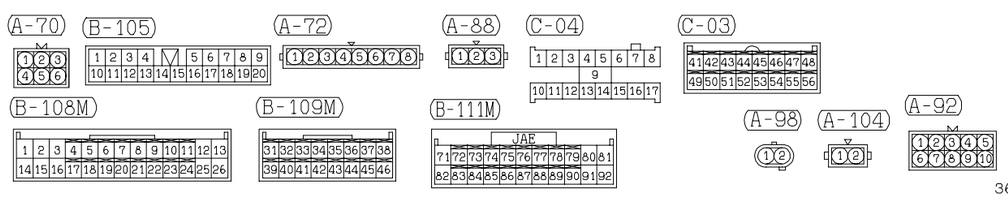


36TJ047D CB

# MPI SYSTEM <Automatic Transmission Vehicles>

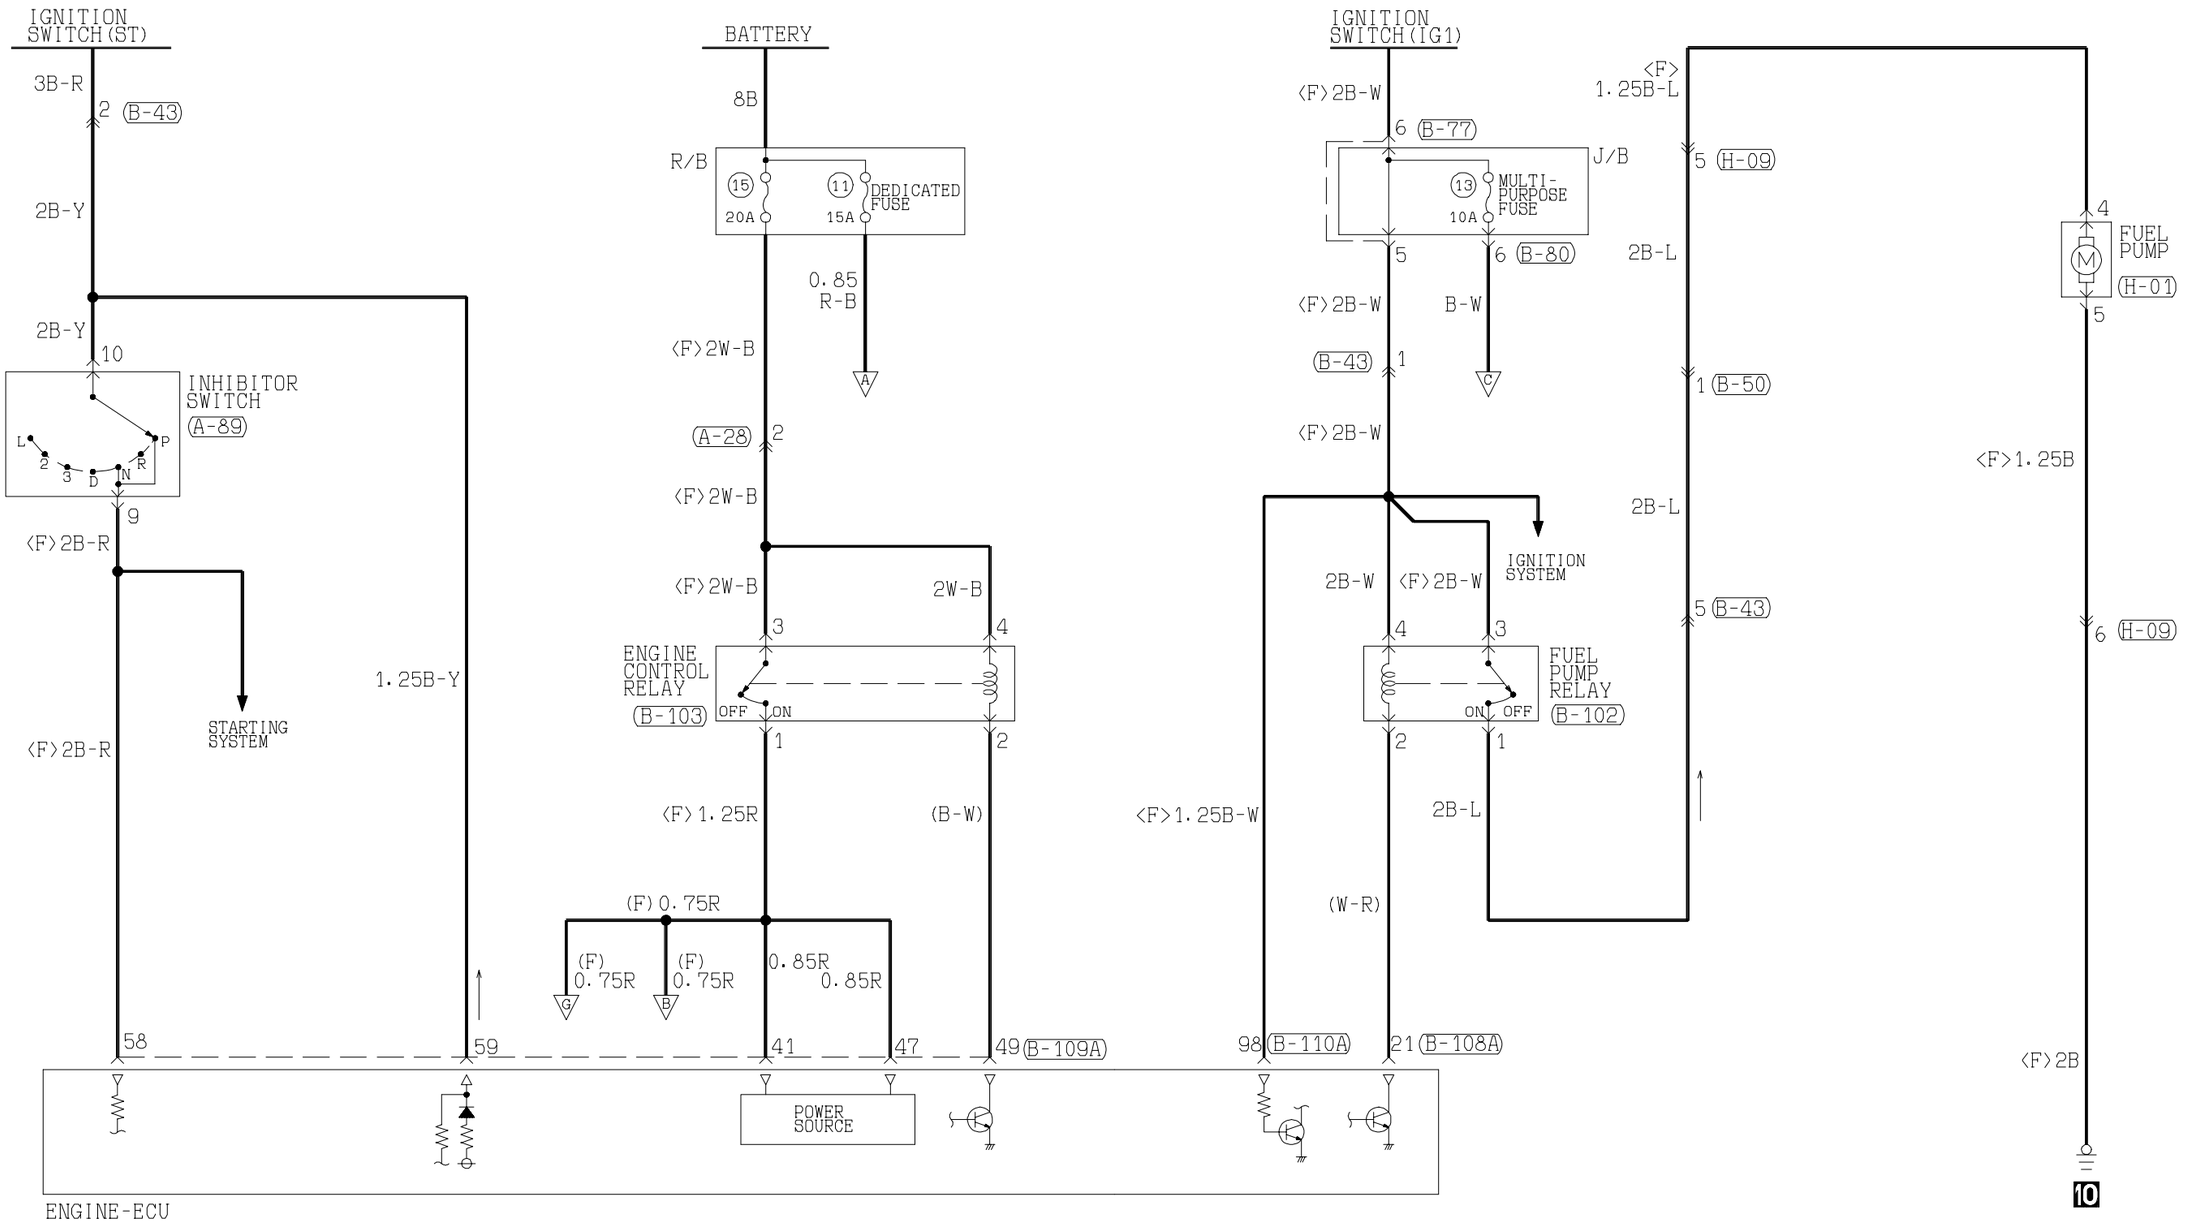


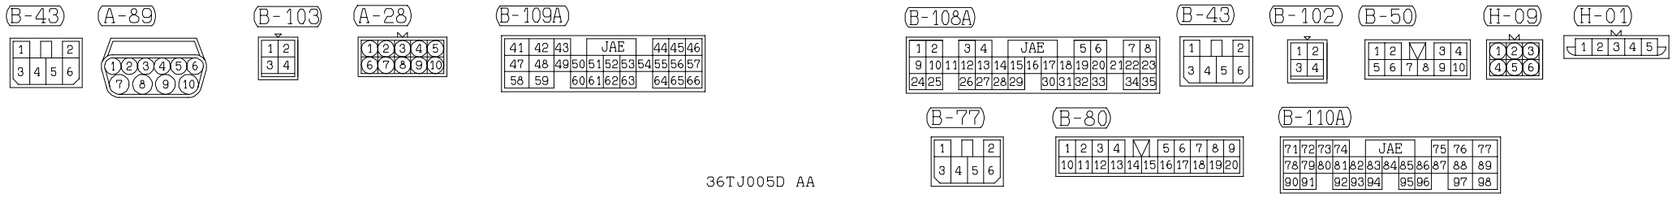


36TJ005D AA

36TJ005D AB

# MPI SYSTEM <Automatic Transmission Vehicles> (CONTINUED)

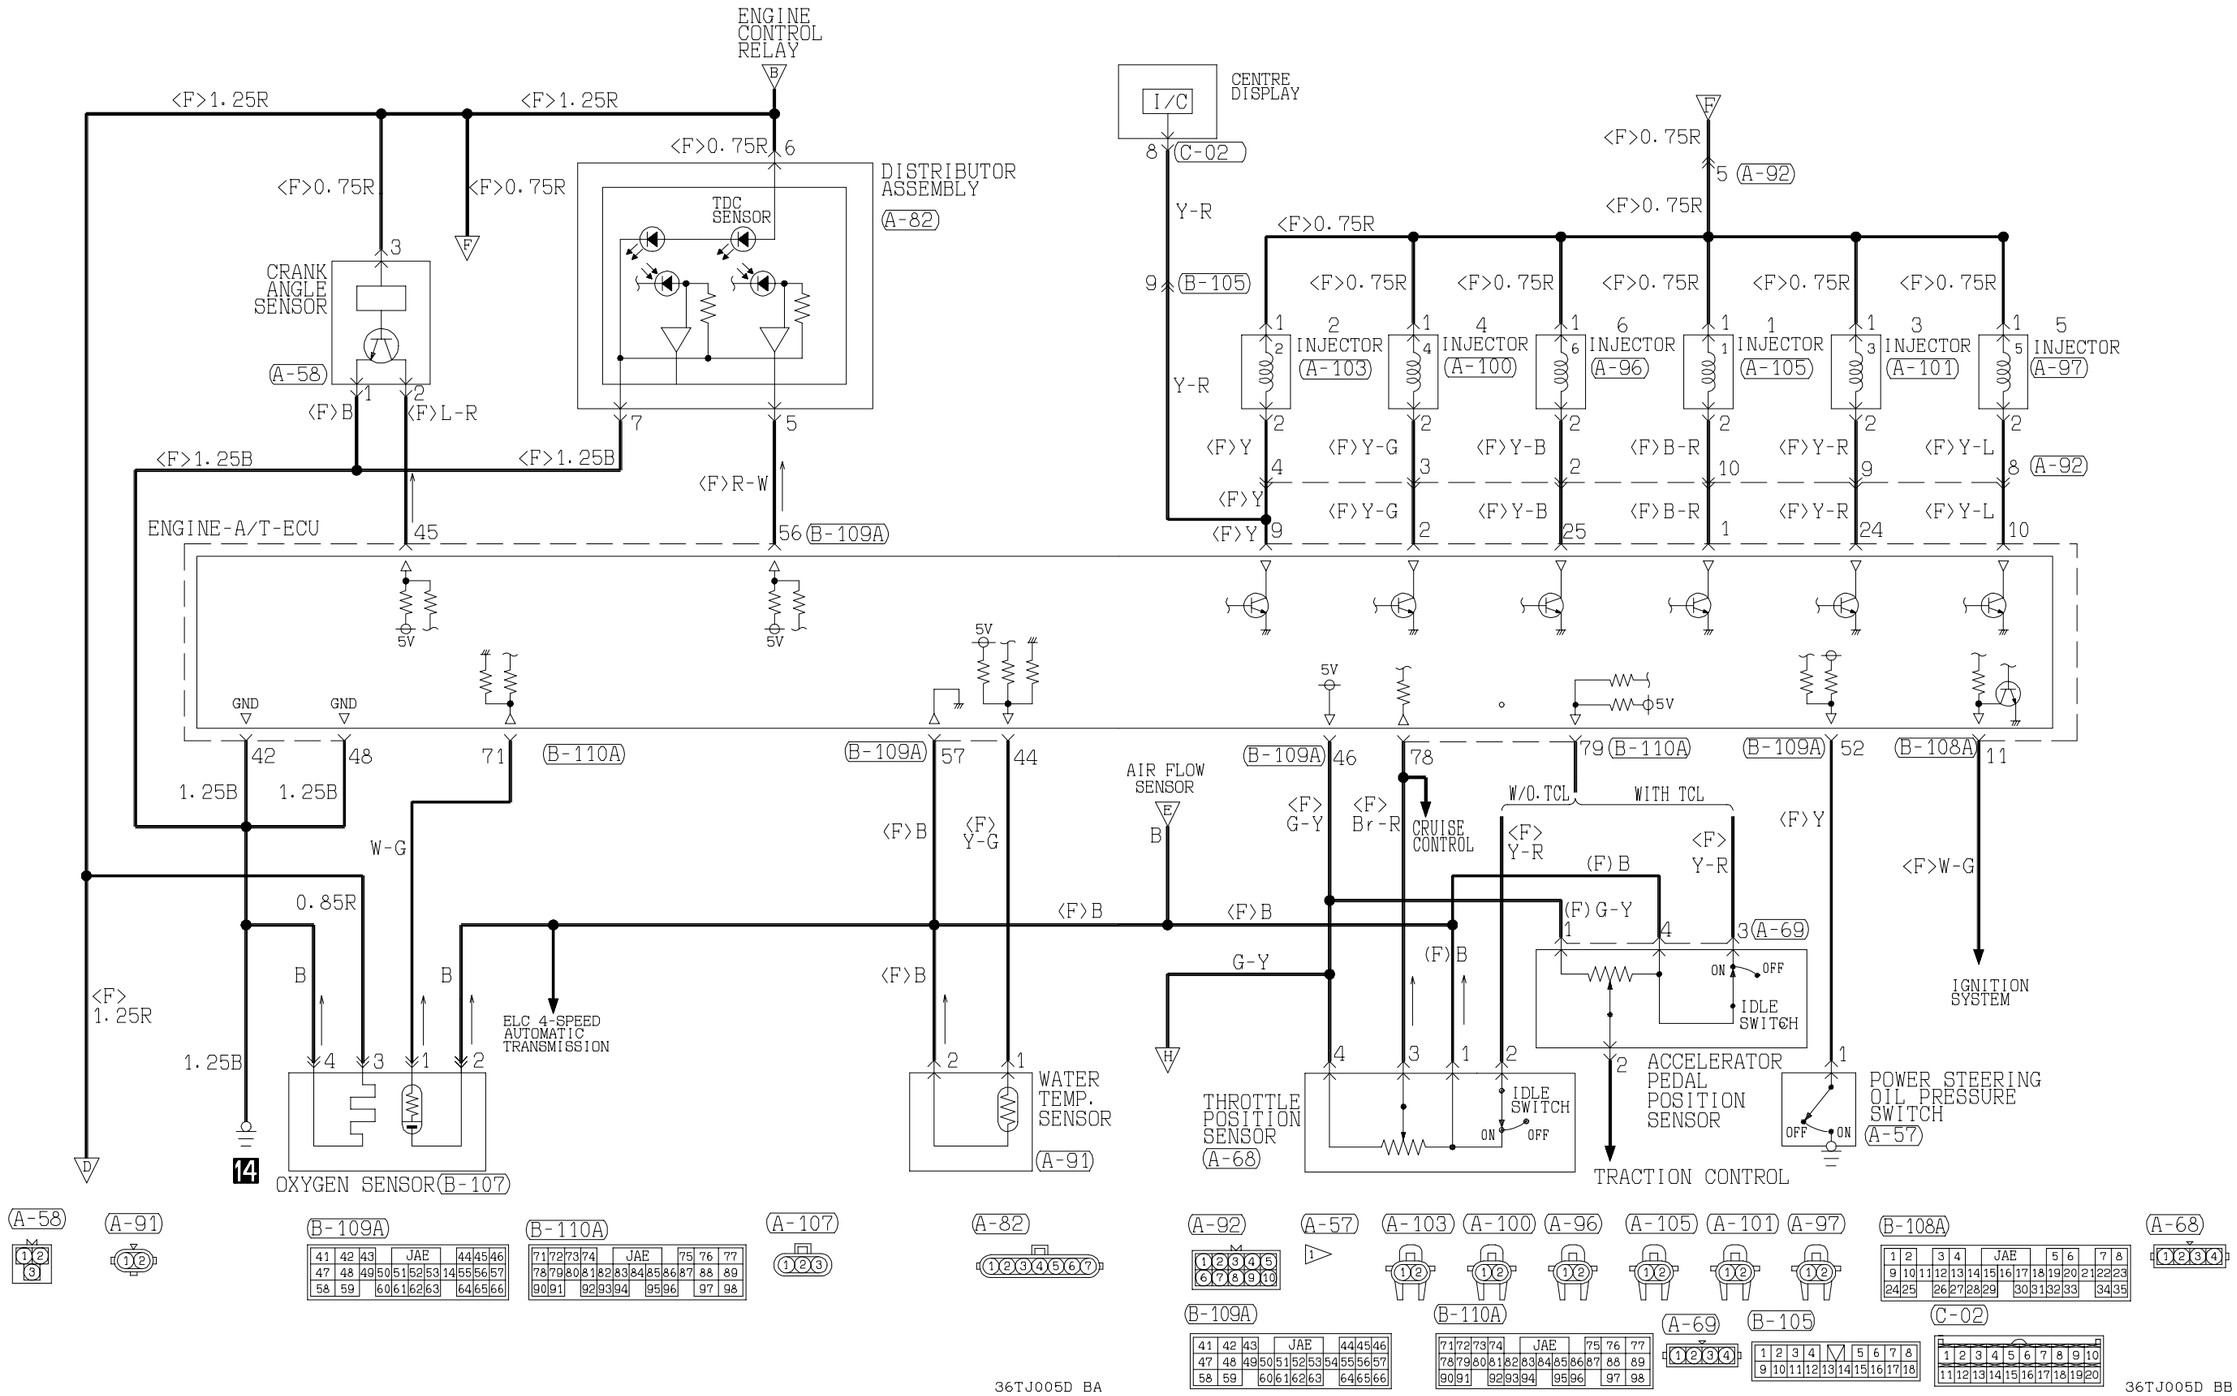

# MPI SYSTEM <Automatic Transmission Vehicles> (CONTINUED)

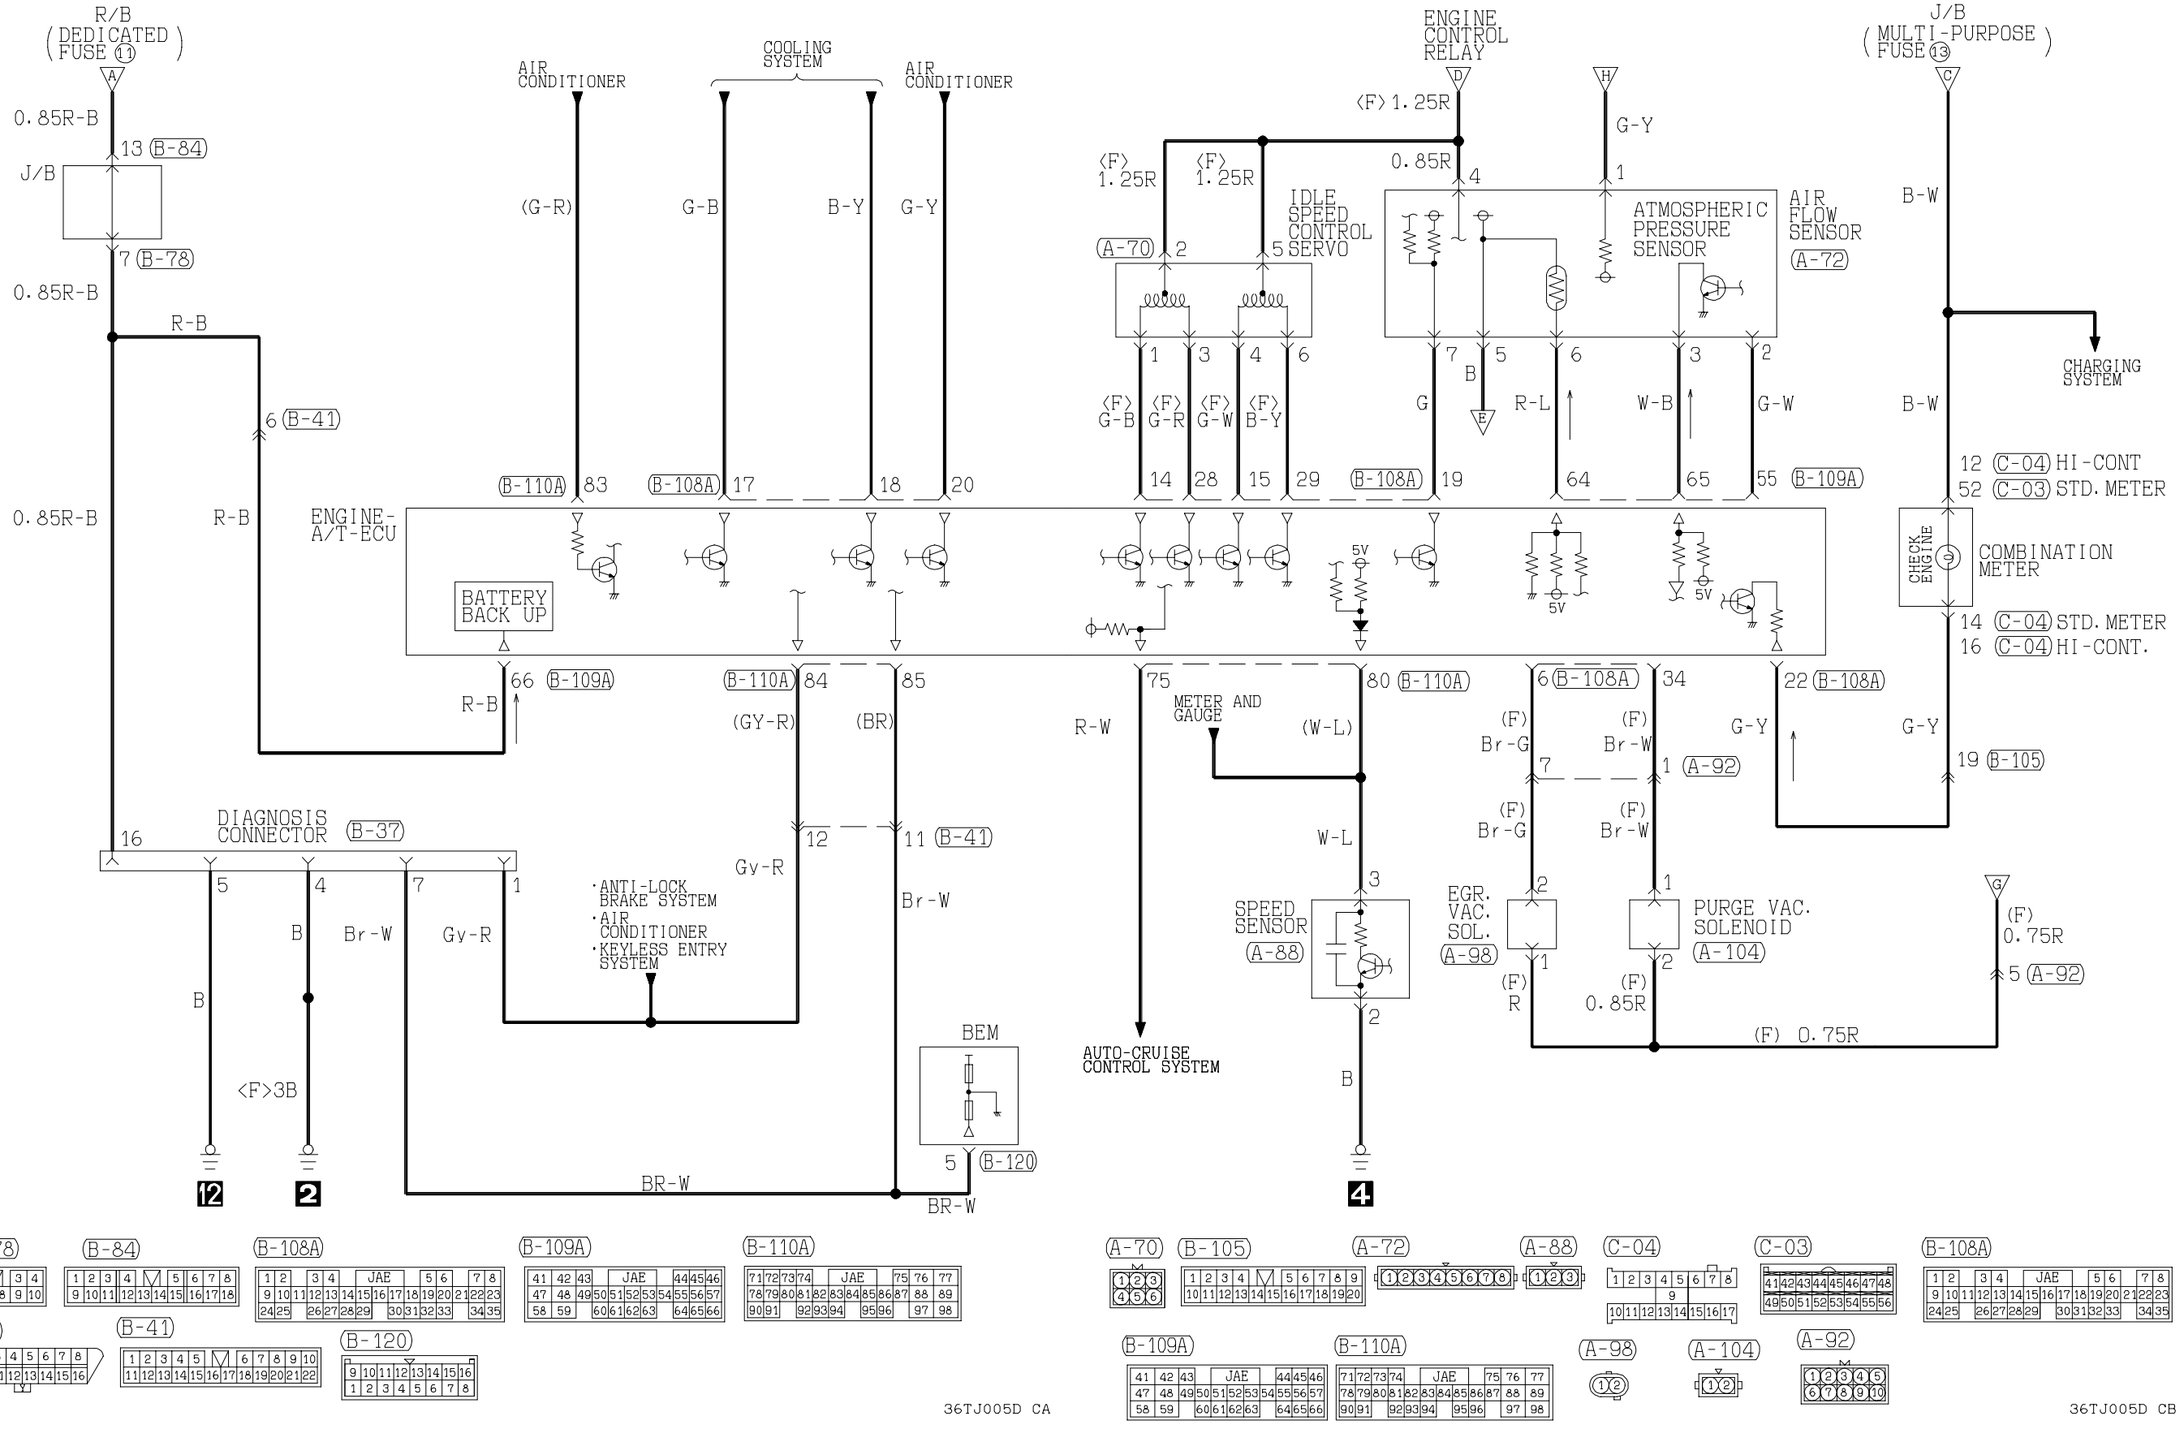





36TJ005D CA

36TJ005D CB

# COOLING SYSTEM <MAGNA & SPORTS>

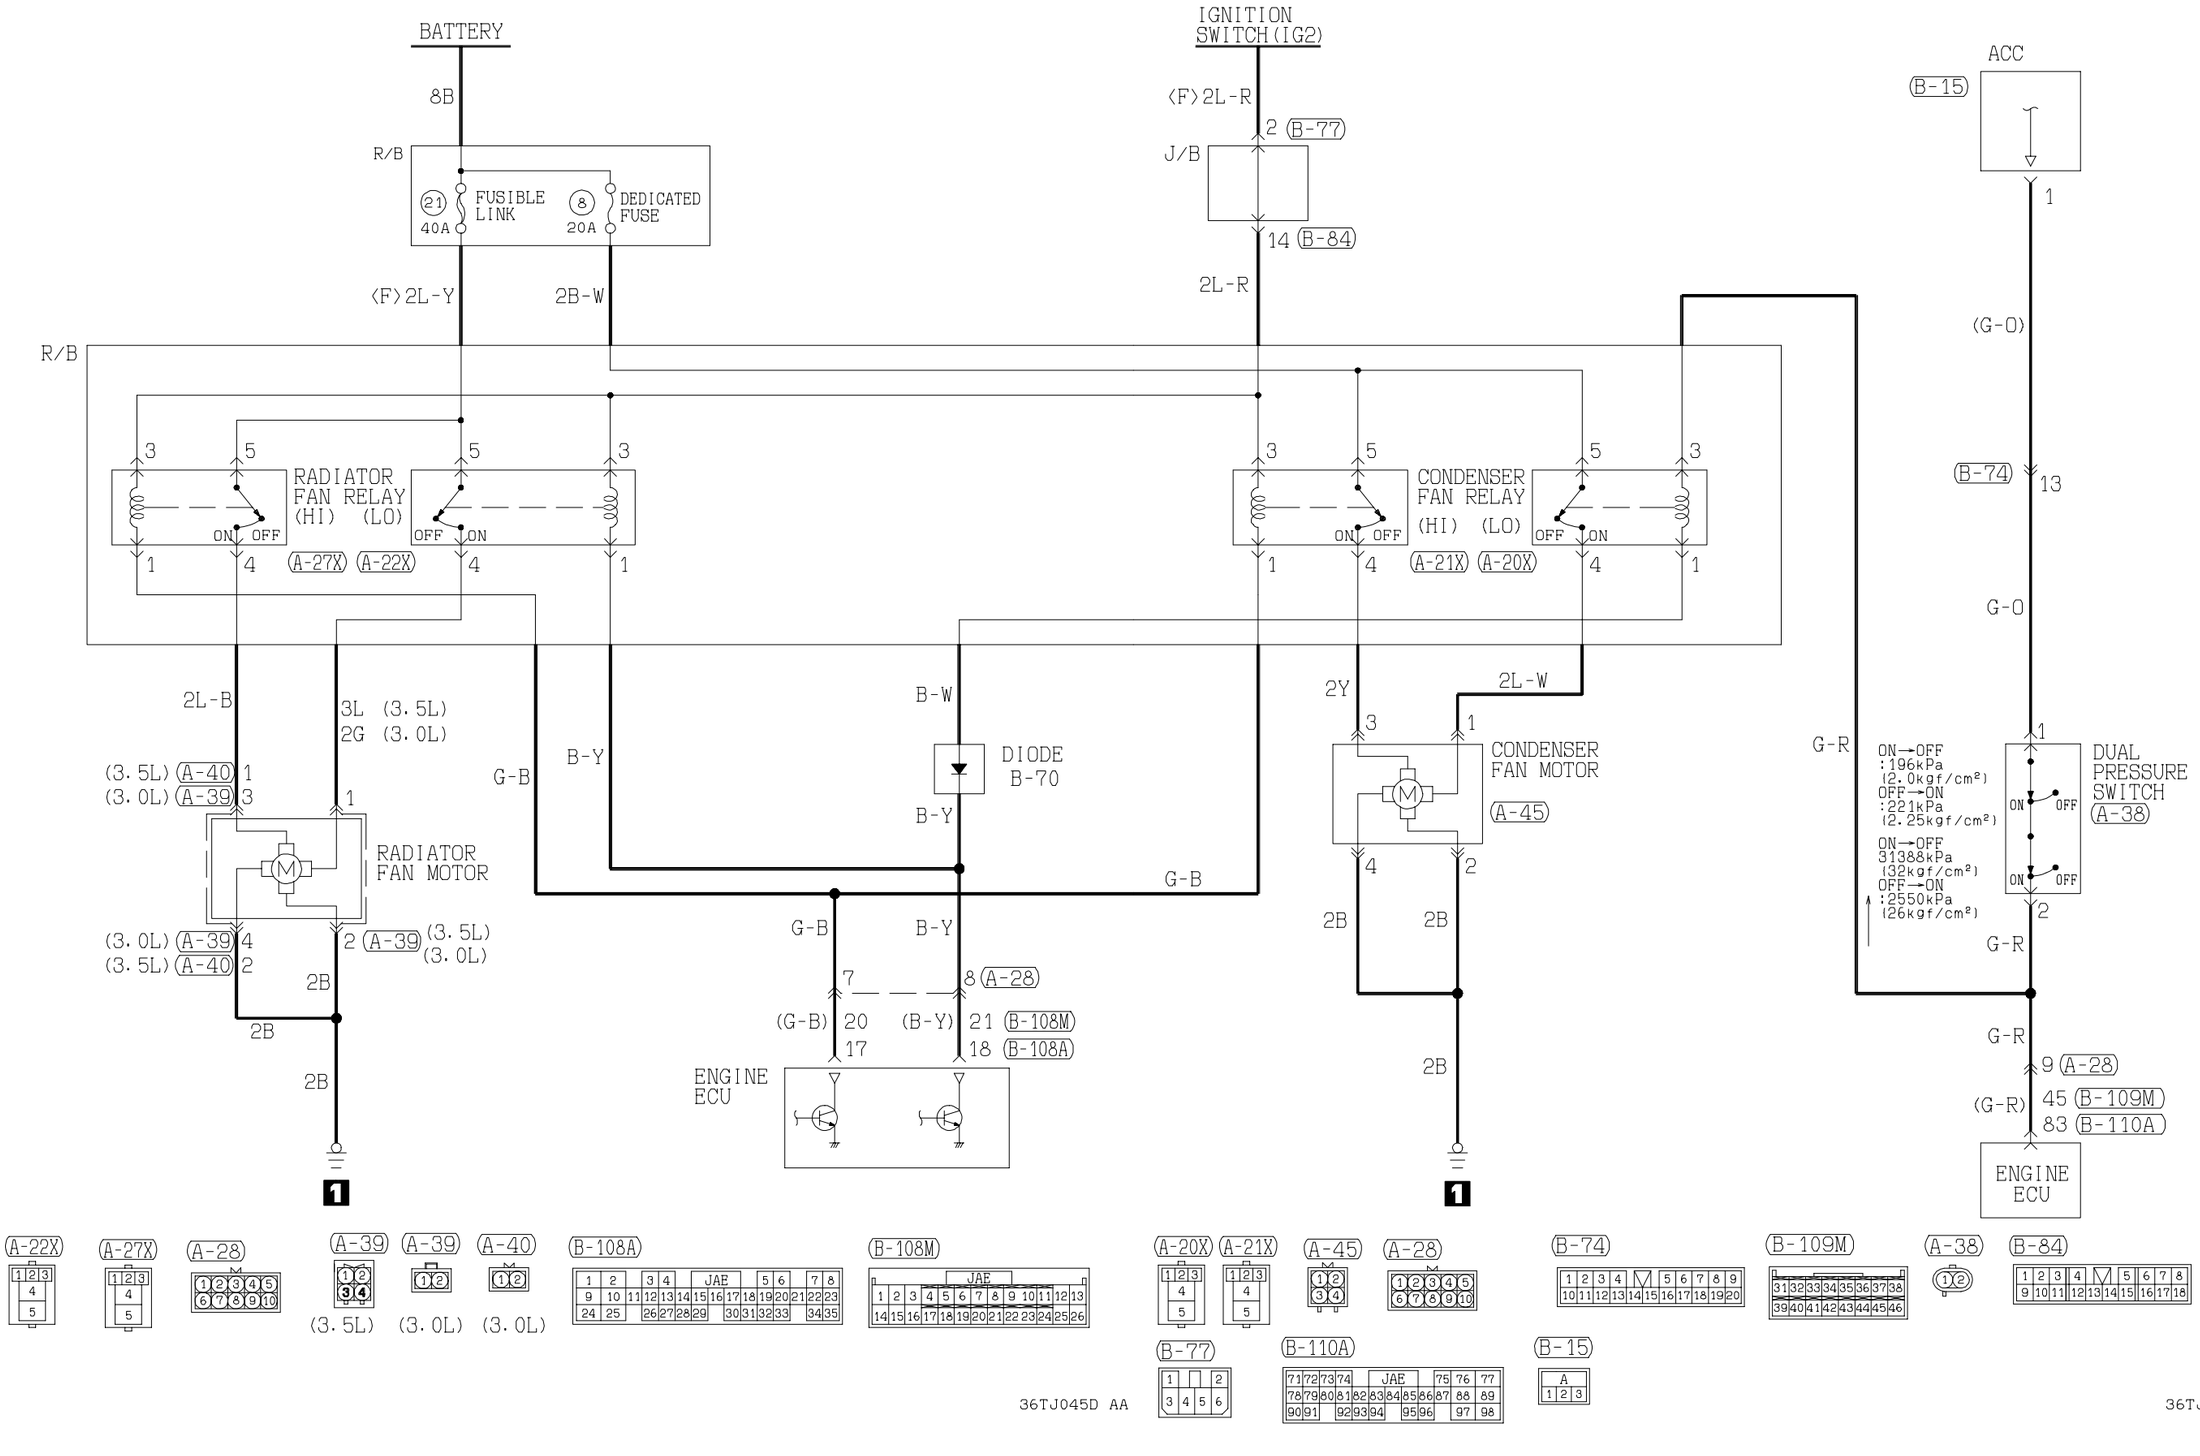





36TJ045D AA

36TJ045D AB

# COOLING SYSTEM <VERADA>

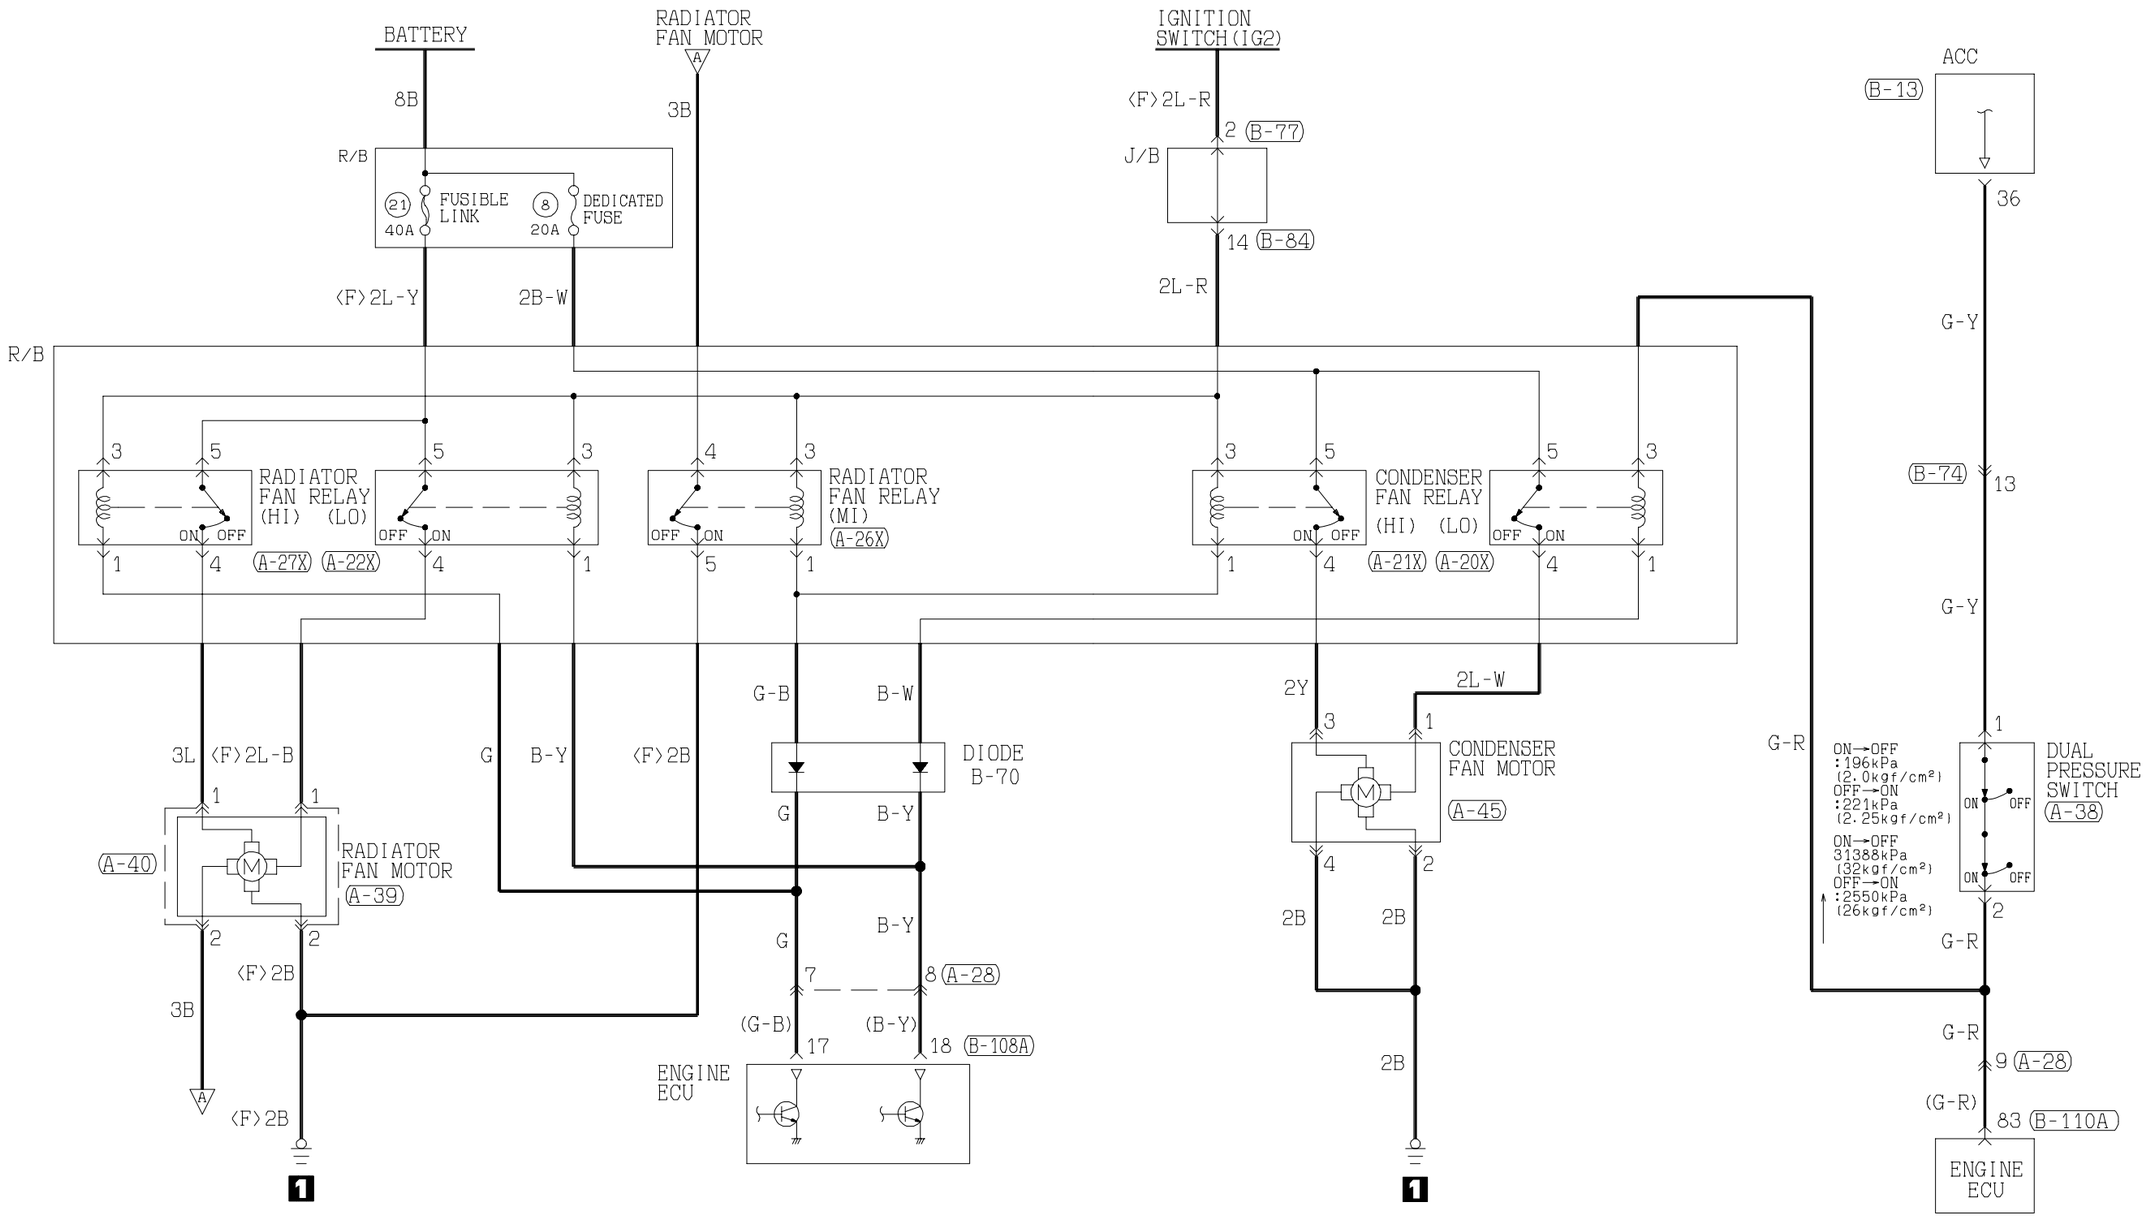





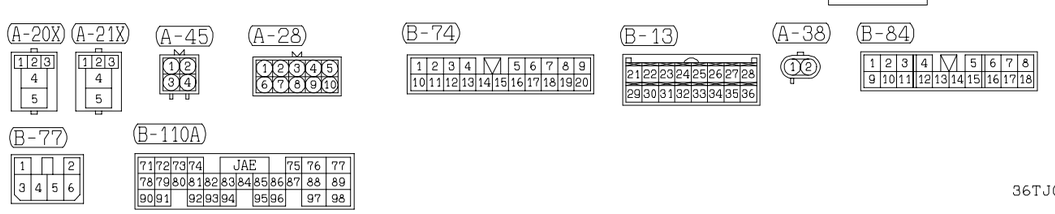


36TJ006D AA

36TJ006D AB

# ELC 4-SPEED AUTOMATIC TRANSMISSION

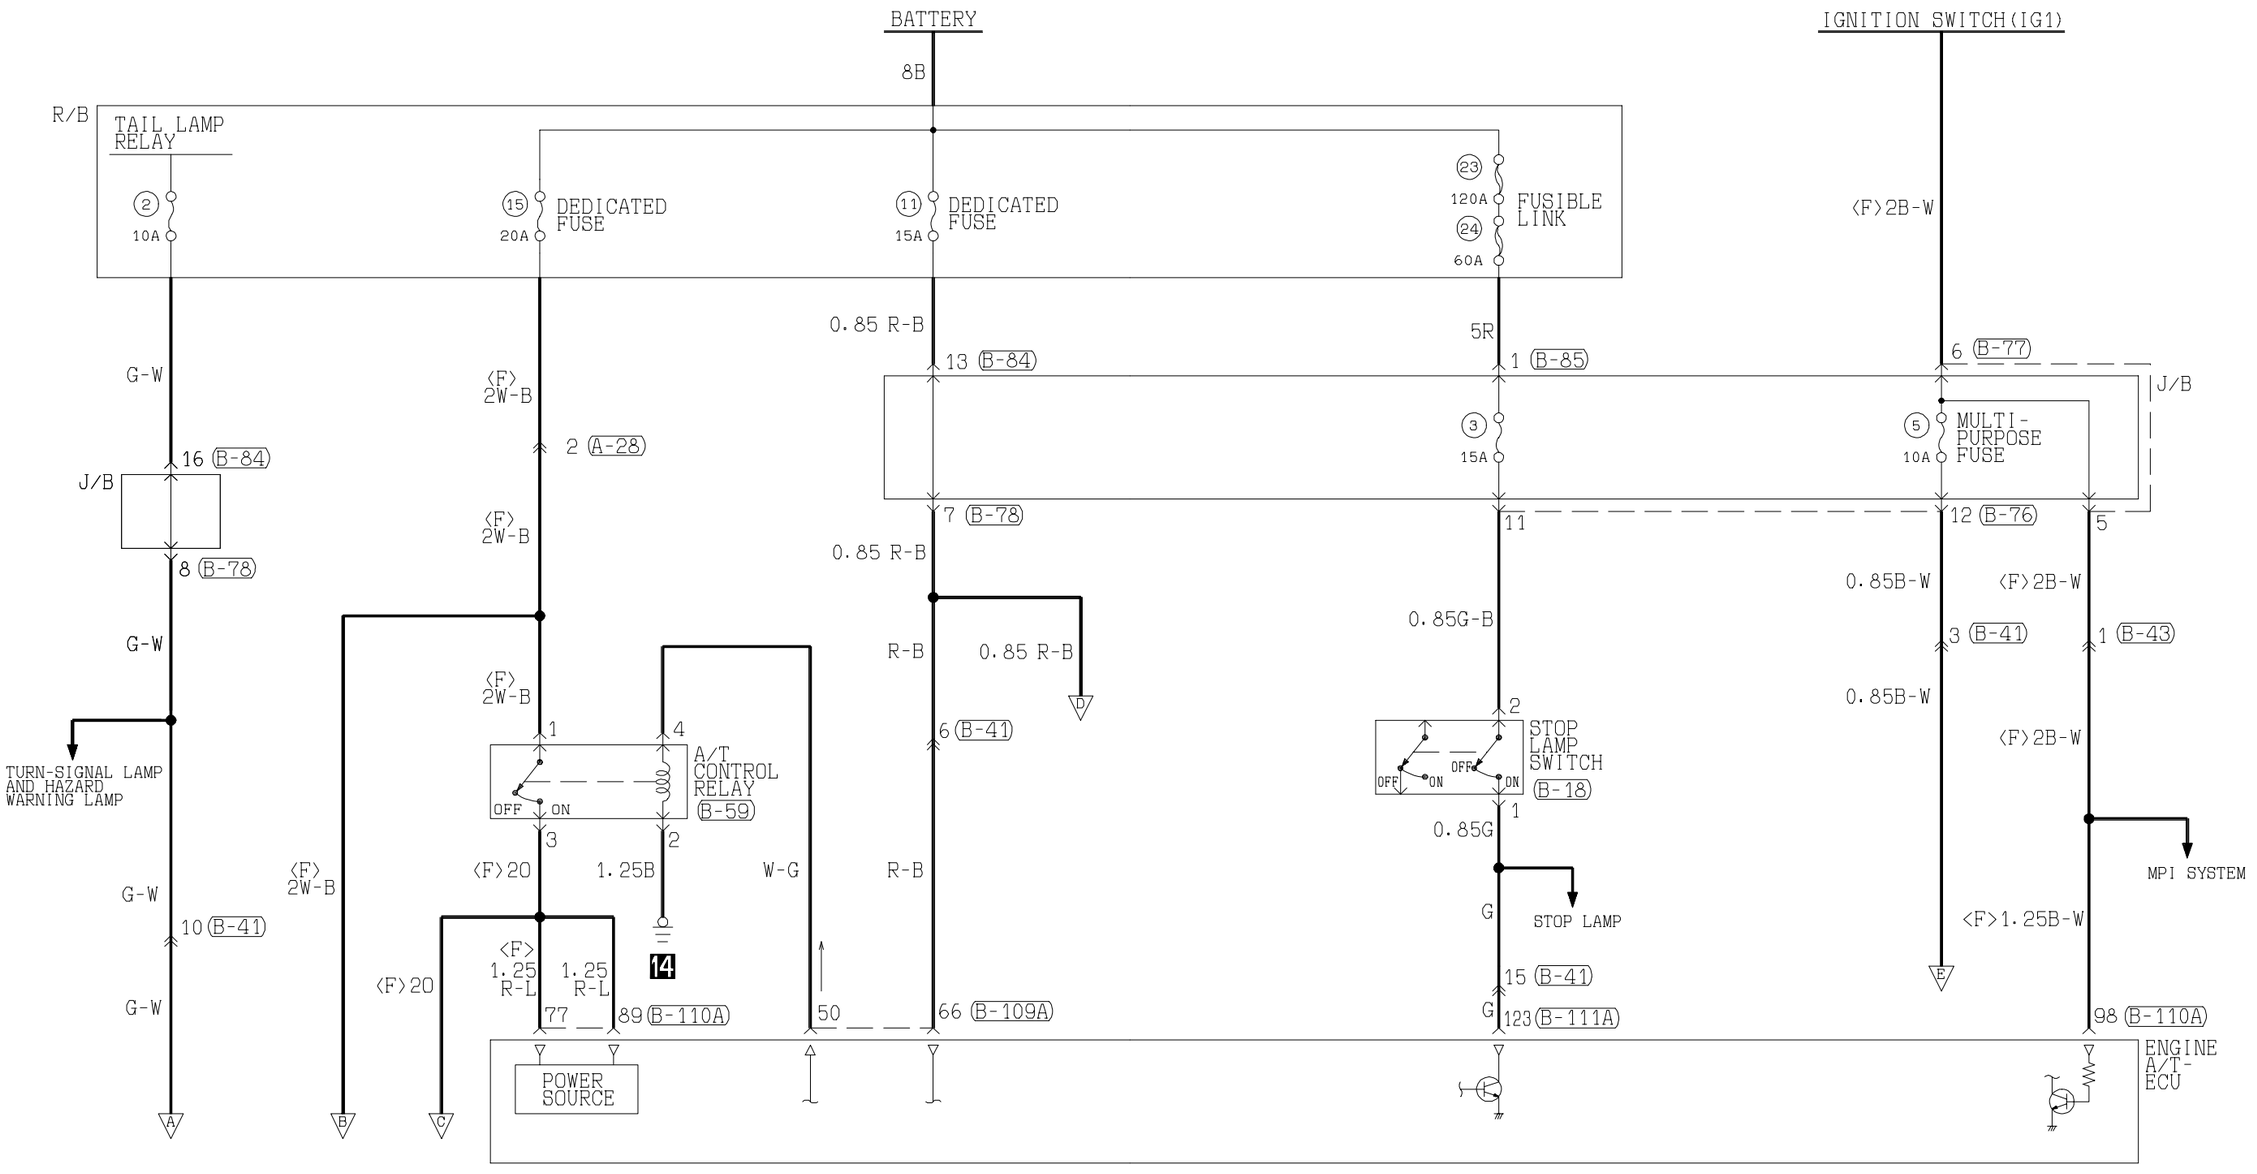


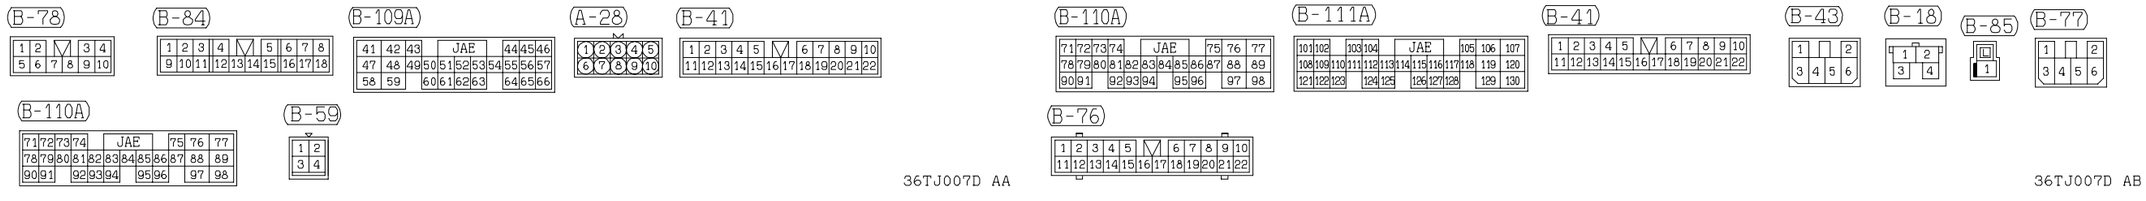


36TJ007D AA

36TJ007D AB

# ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

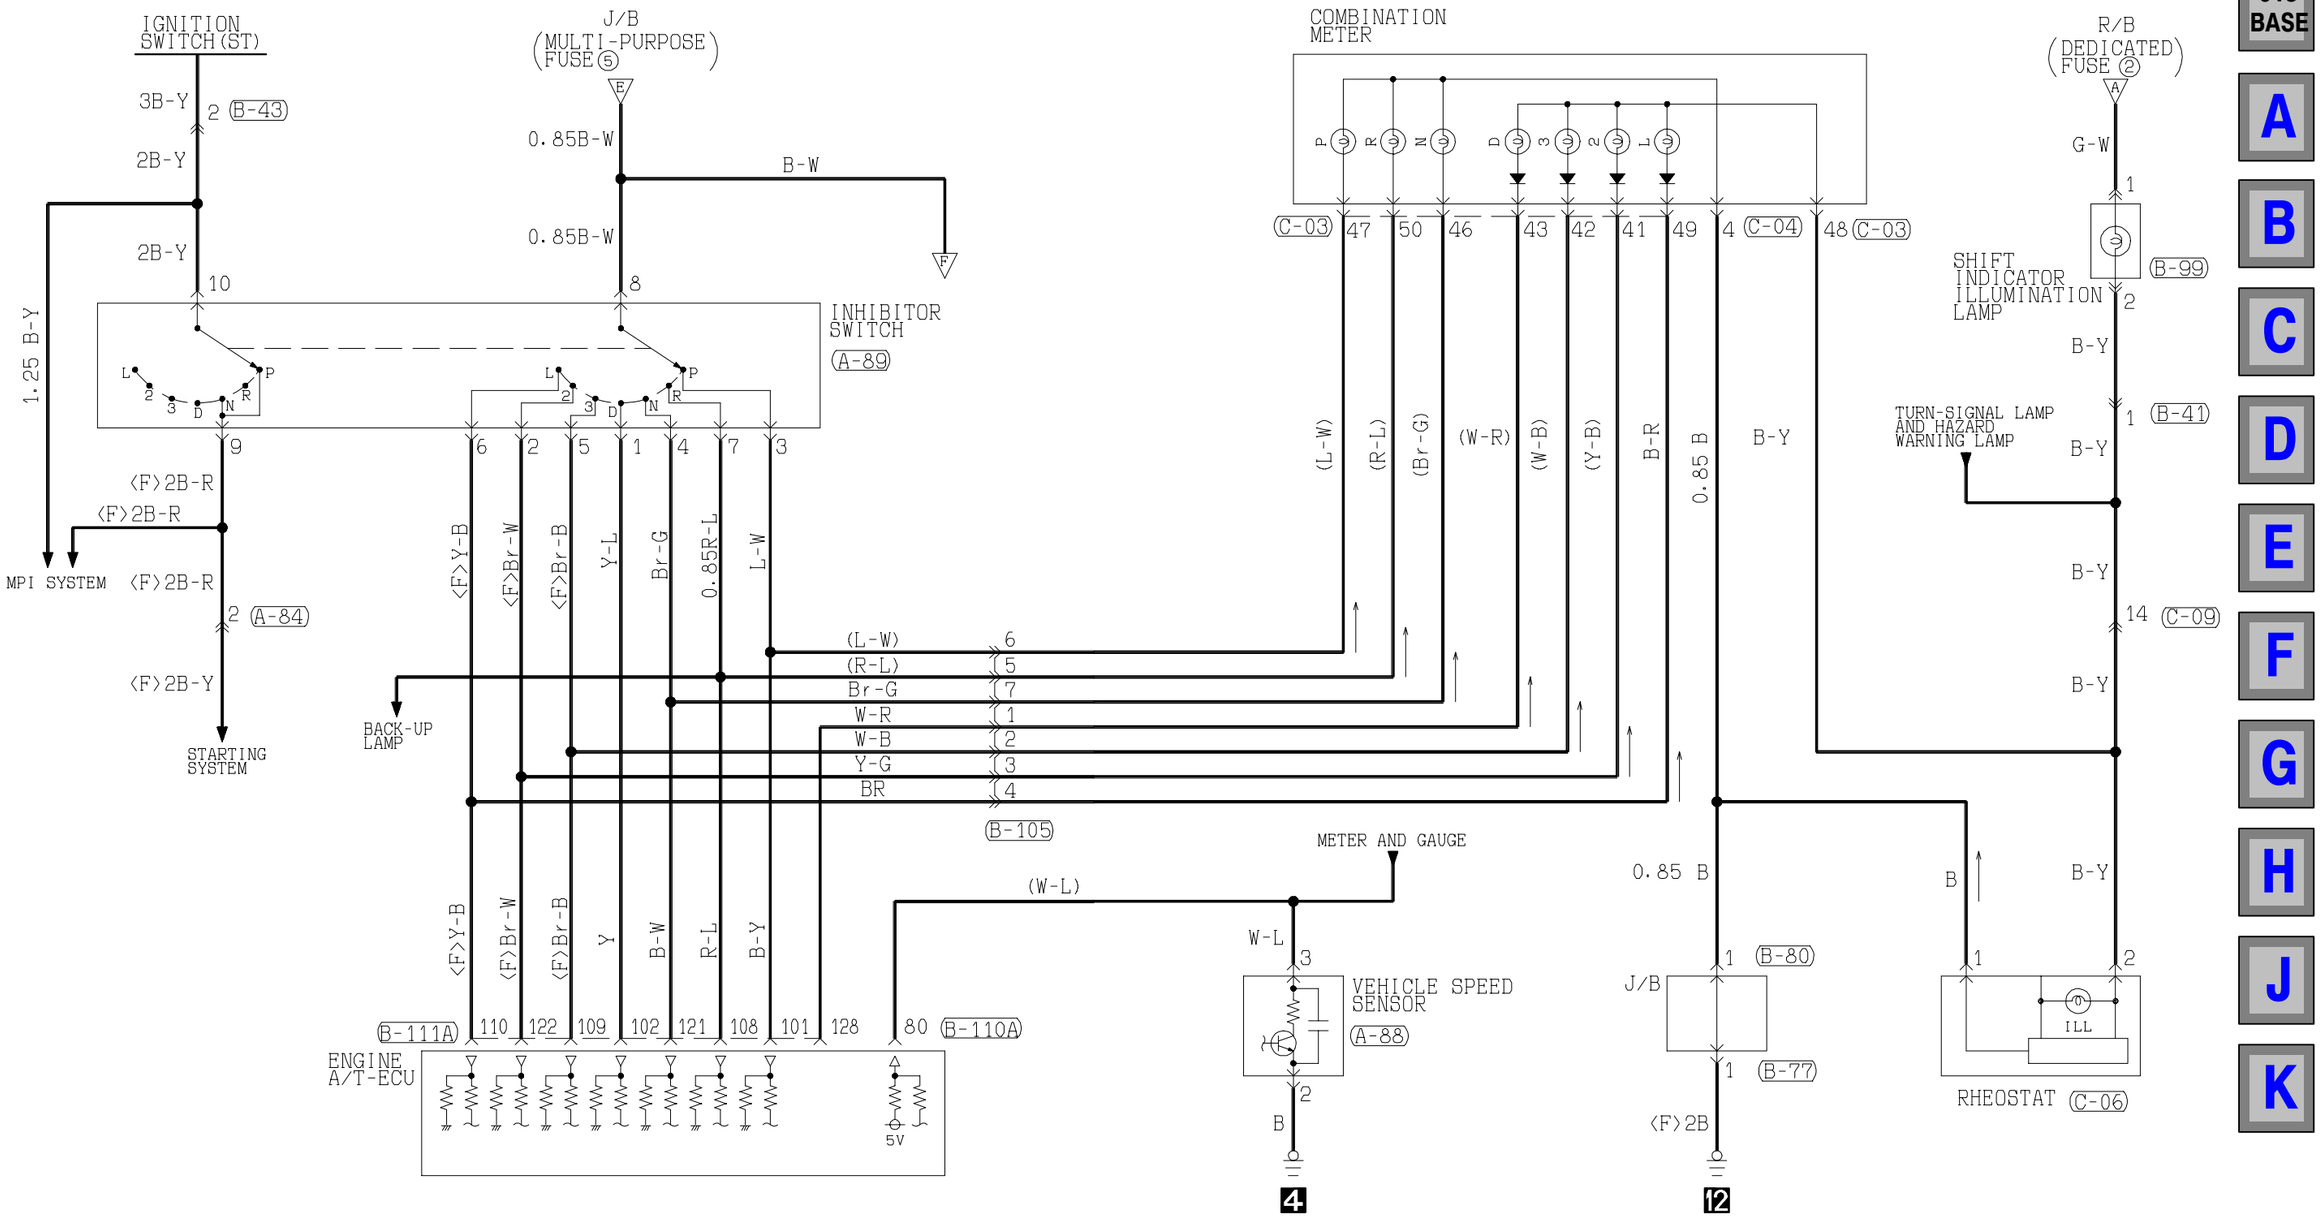


4

12

(B-105)



(B-43)

(A-89)



(A-84)

(B-110A)



(B-111A)



(A-88)

(C-04)



(C-03)



(B-41)



(C-06)

(B-99)

(C-09)



(B-77)



(B-80)



36TJ007D BA

36TJ007D BB

# ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

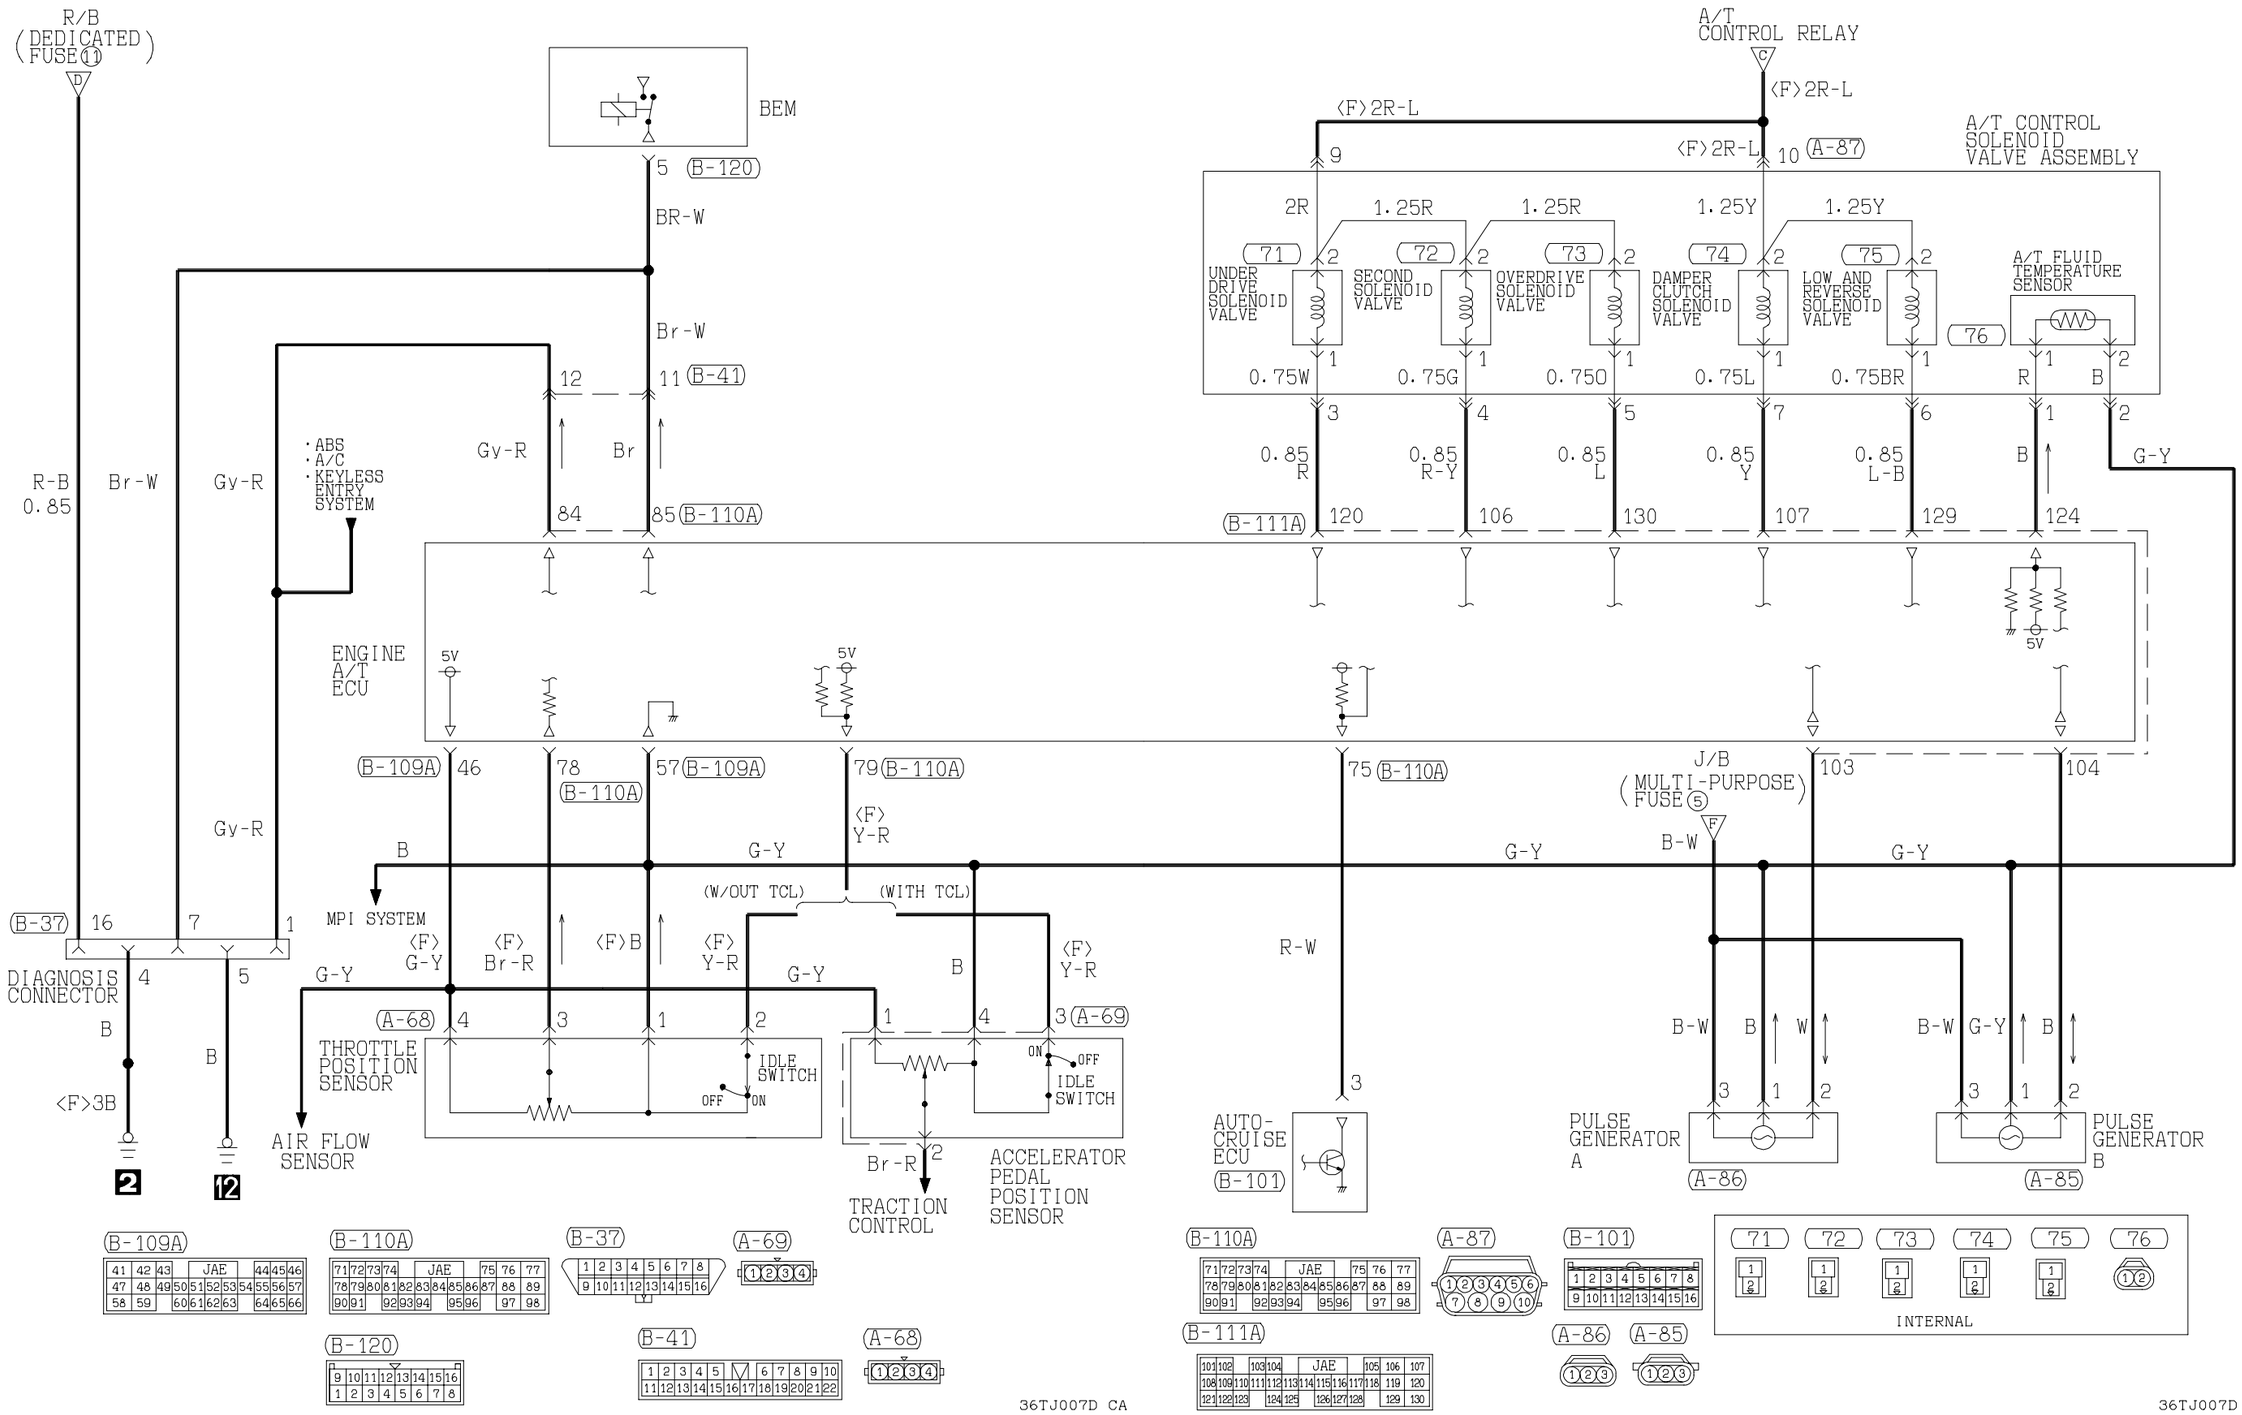

# ELC 4-SPEED AUTOMATIC TRANSMISSION (CONTINUED)

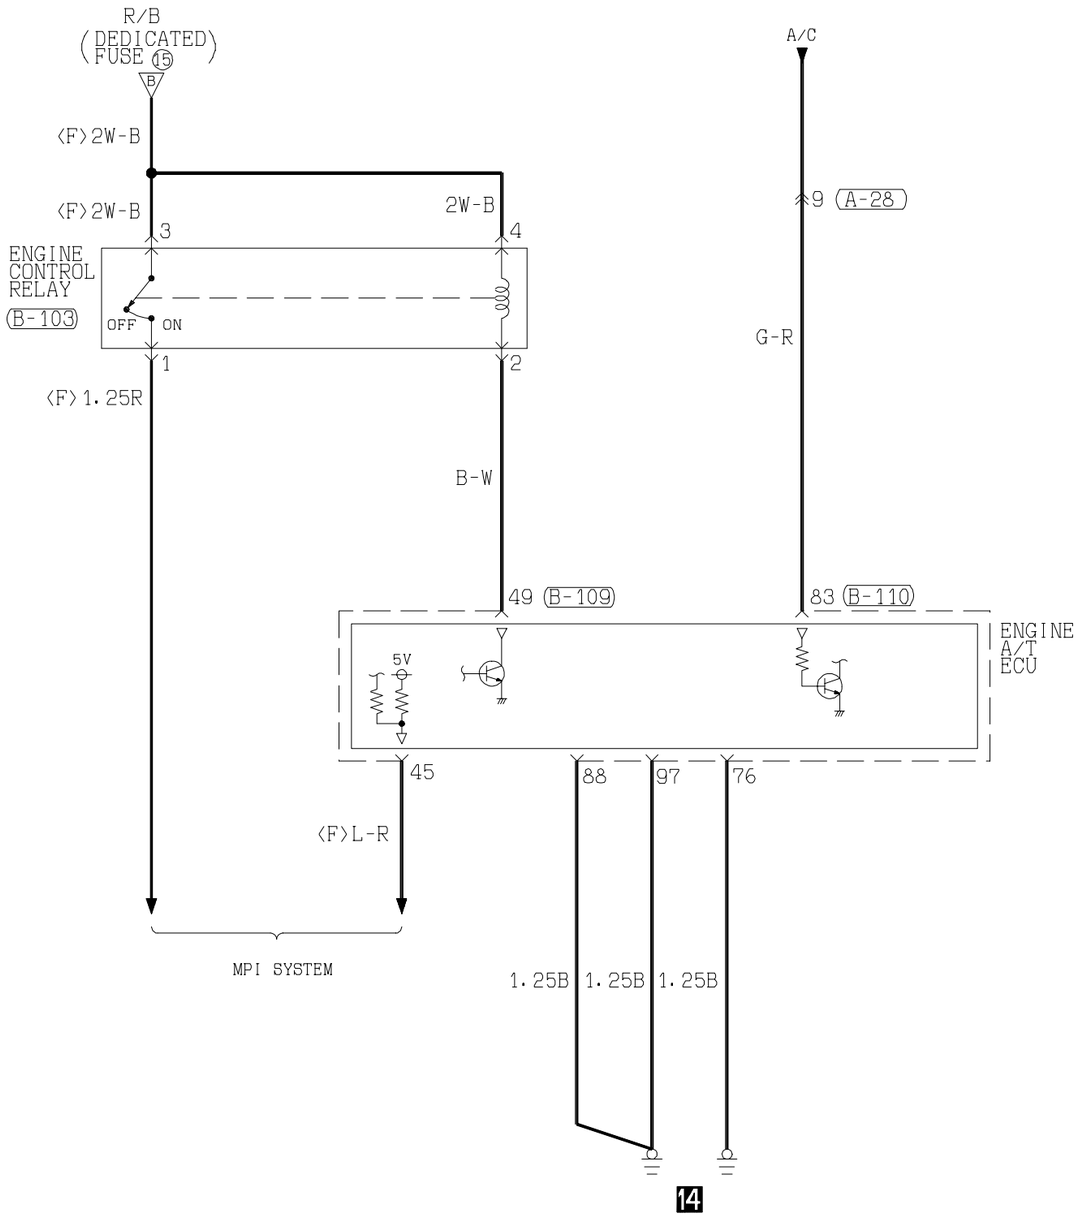


B-109

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 41 | 42 | 43 | JAE | | | | | 44 | 45 | 46 | | |
| 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | | |
| 58 | 59 | | 60 | 61 | 62 | 63 | | 64 | 65 | 66 | | |

B-110

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 71 | 72 | 73 | 74 | JAE | | | | 75 | 76 | 77 | | |
| 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | |
| 90 | 91 | | 92 | 93 | 94 | | 95 | 96 | | 97 | 98 | |

B-103

| | |
|---|---|
| 1 | 2 |
| 3 | 4 |

A-28

| | | | | |
|---|---|---|---|---|
| 1 | 2 | 3 | 4 | 5 |
| 6 | 7 | 8 | 9 | 10 |

# ELC 4-SPEED AUTOMATIC TRANSMISSION <VERADA>
# ELC 5-SPEED AUTOMATIC TRANSMISSION <SPORTS>

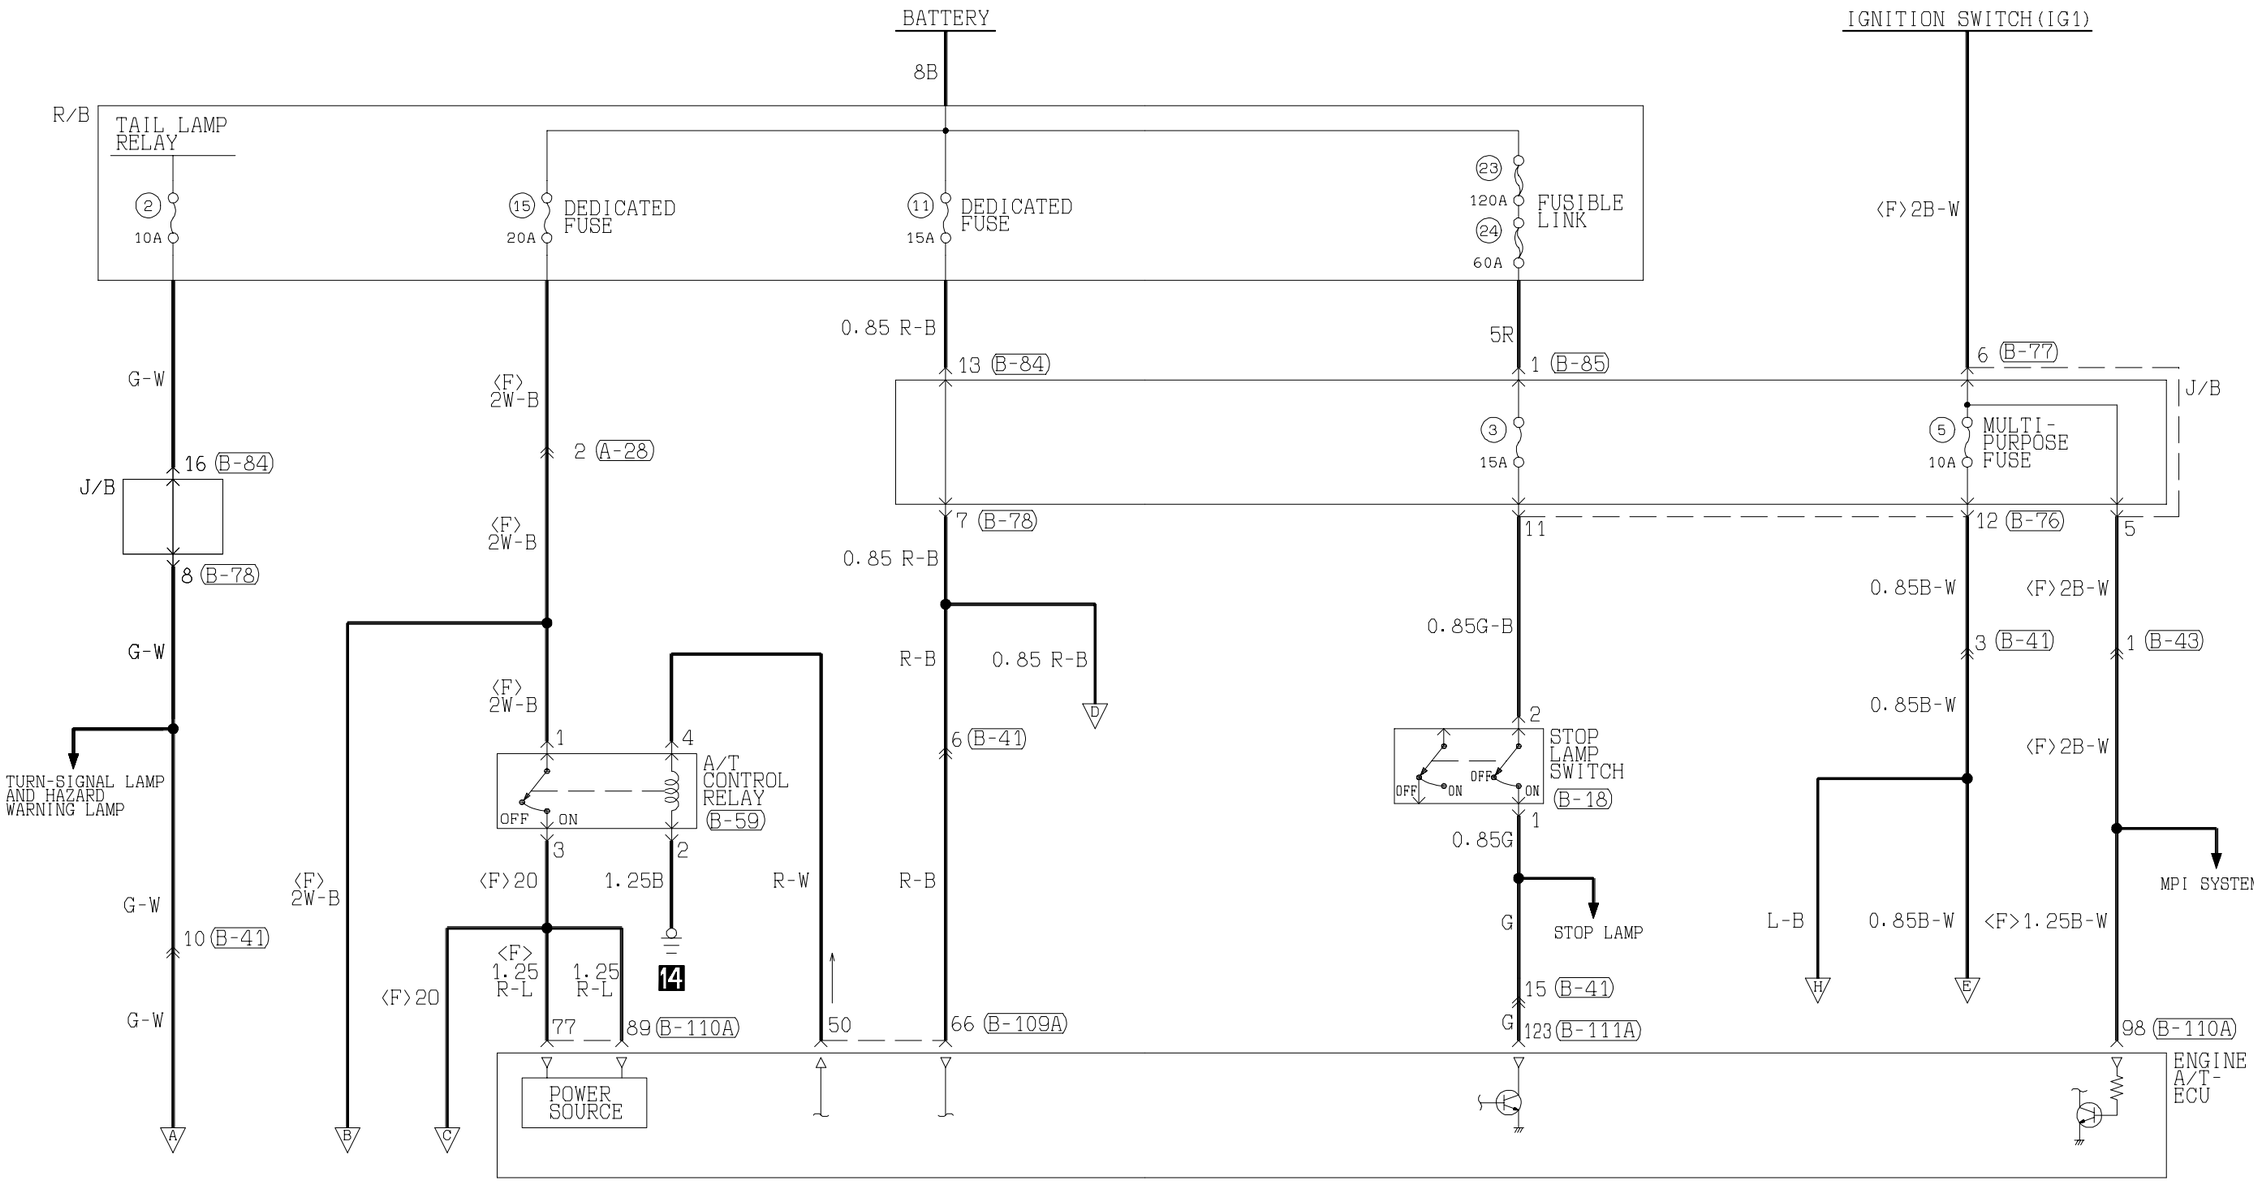


B-78

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 1 | 2 | | 3 | 4 | | | |
| 5 | 6 | 7 | 8 | 9 | 10 | | |

B-84

| | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 2 | 3 | 4 | | 5 | 6 | 7 | 8 | | | | | | | | | |
| 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | | | | | | | | |

B-109A

| | | | | | | | | | | | | | | | | |

# ELC 4-SPEED AUTOMATIC TRANSMISSION <VERADA>
# ELC 5-SPEED AUTOMATIC TRANSMISSION <SPORTS>
# (CONTINUED)

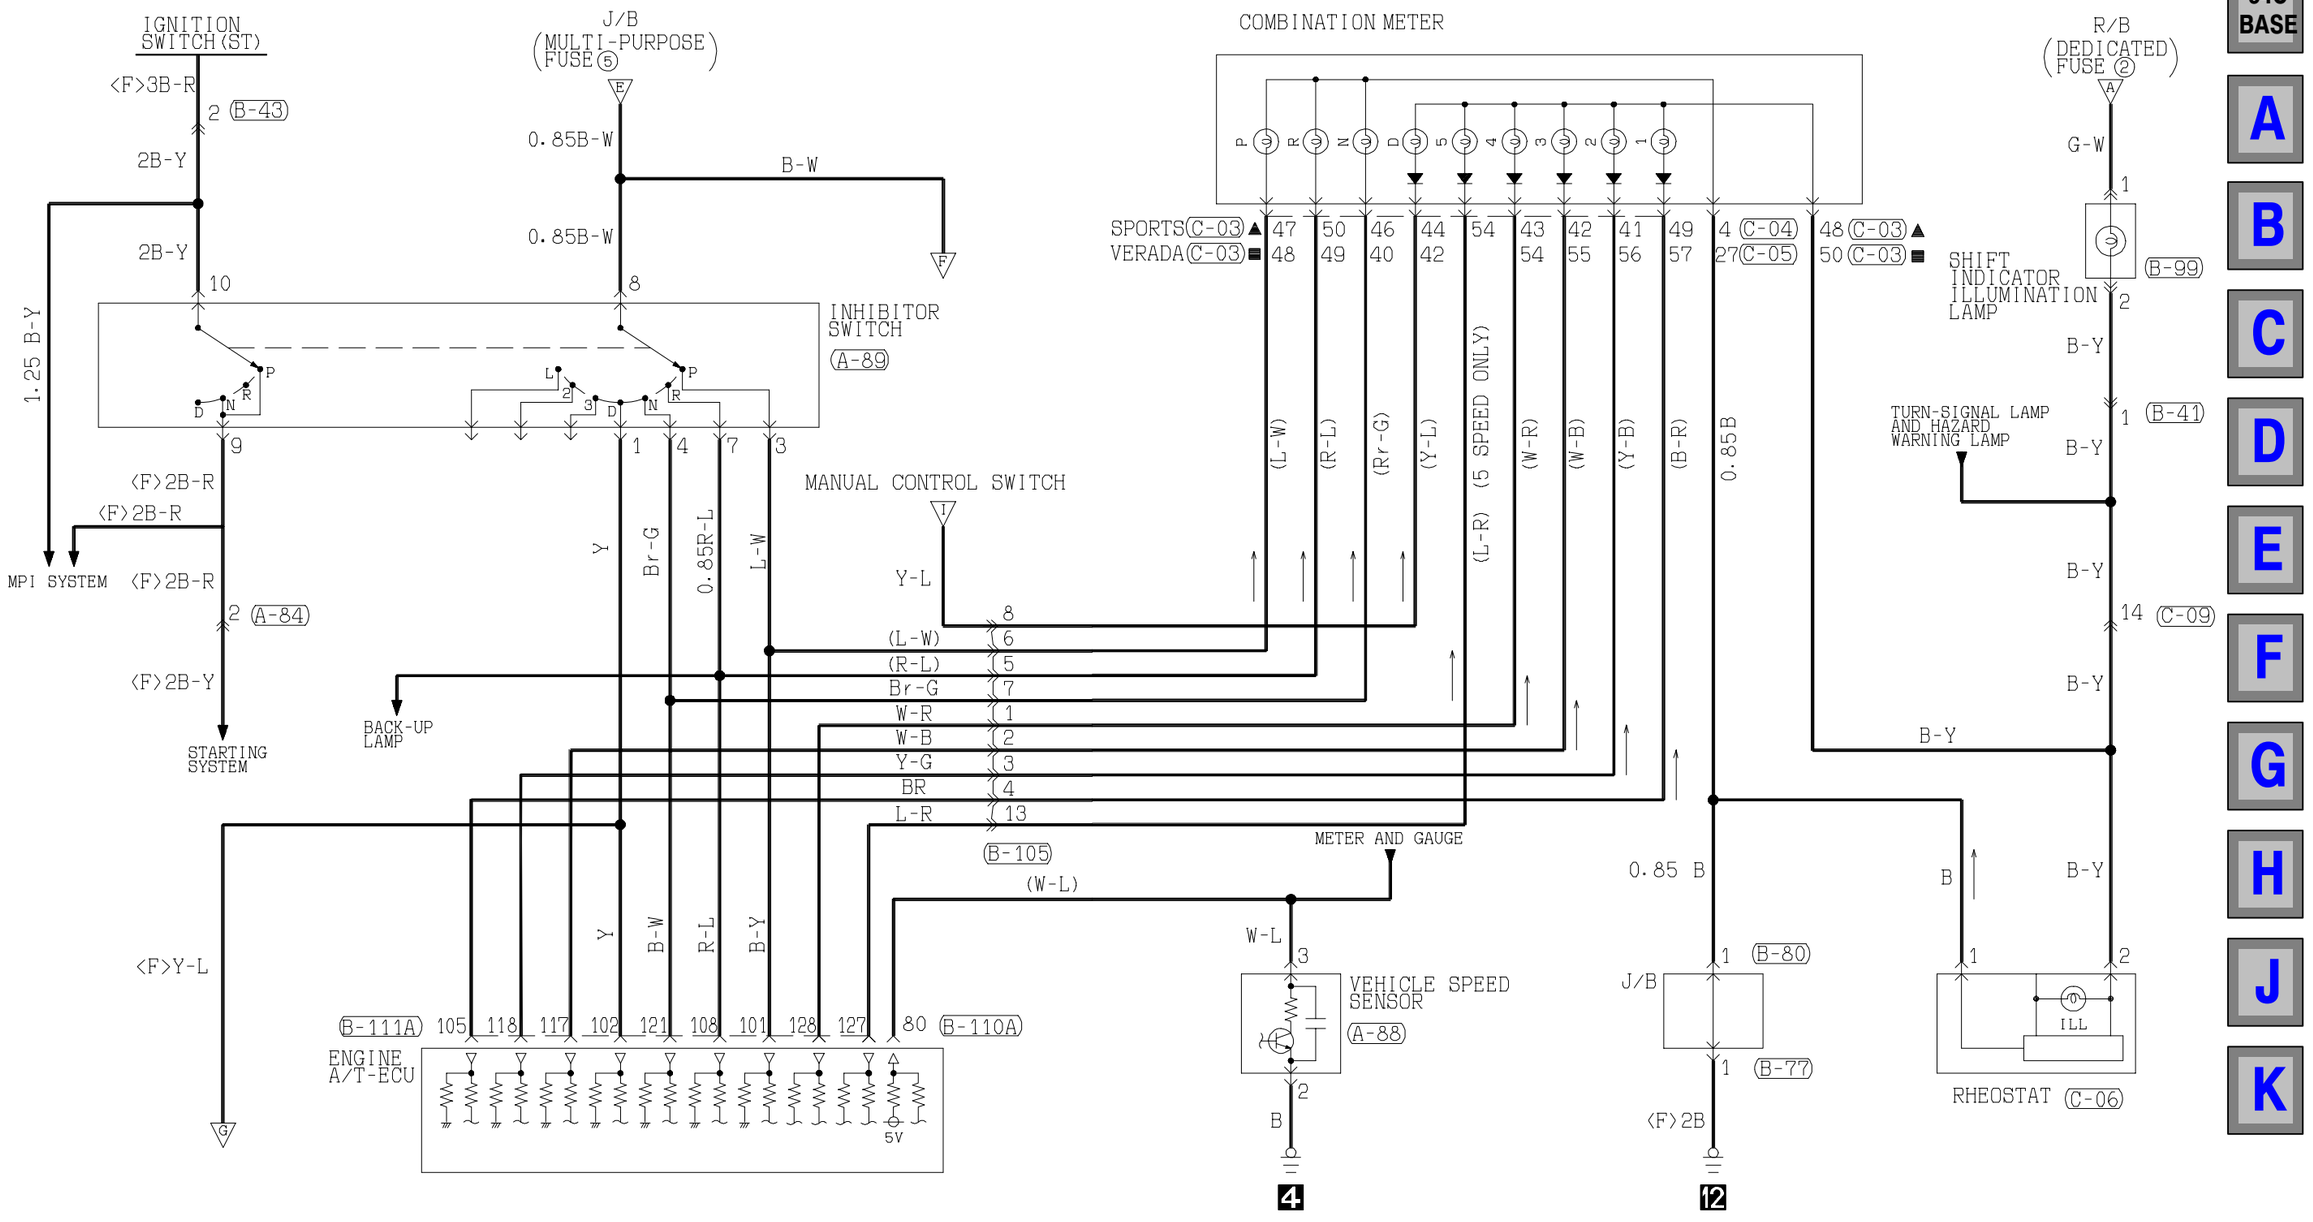





36TJ072D BA

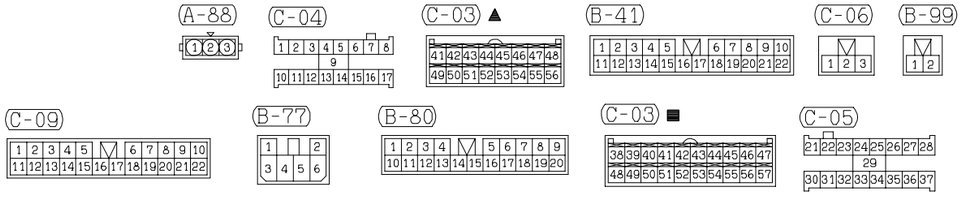


36TJ072D BB

# ELC 4-SPEED AUTOMATIC TRANSMISSION <VERADA>
# ELC 5-SPEED AUTOMATIC TRANSMISSION <SPORTS>
# (CONTINUED)

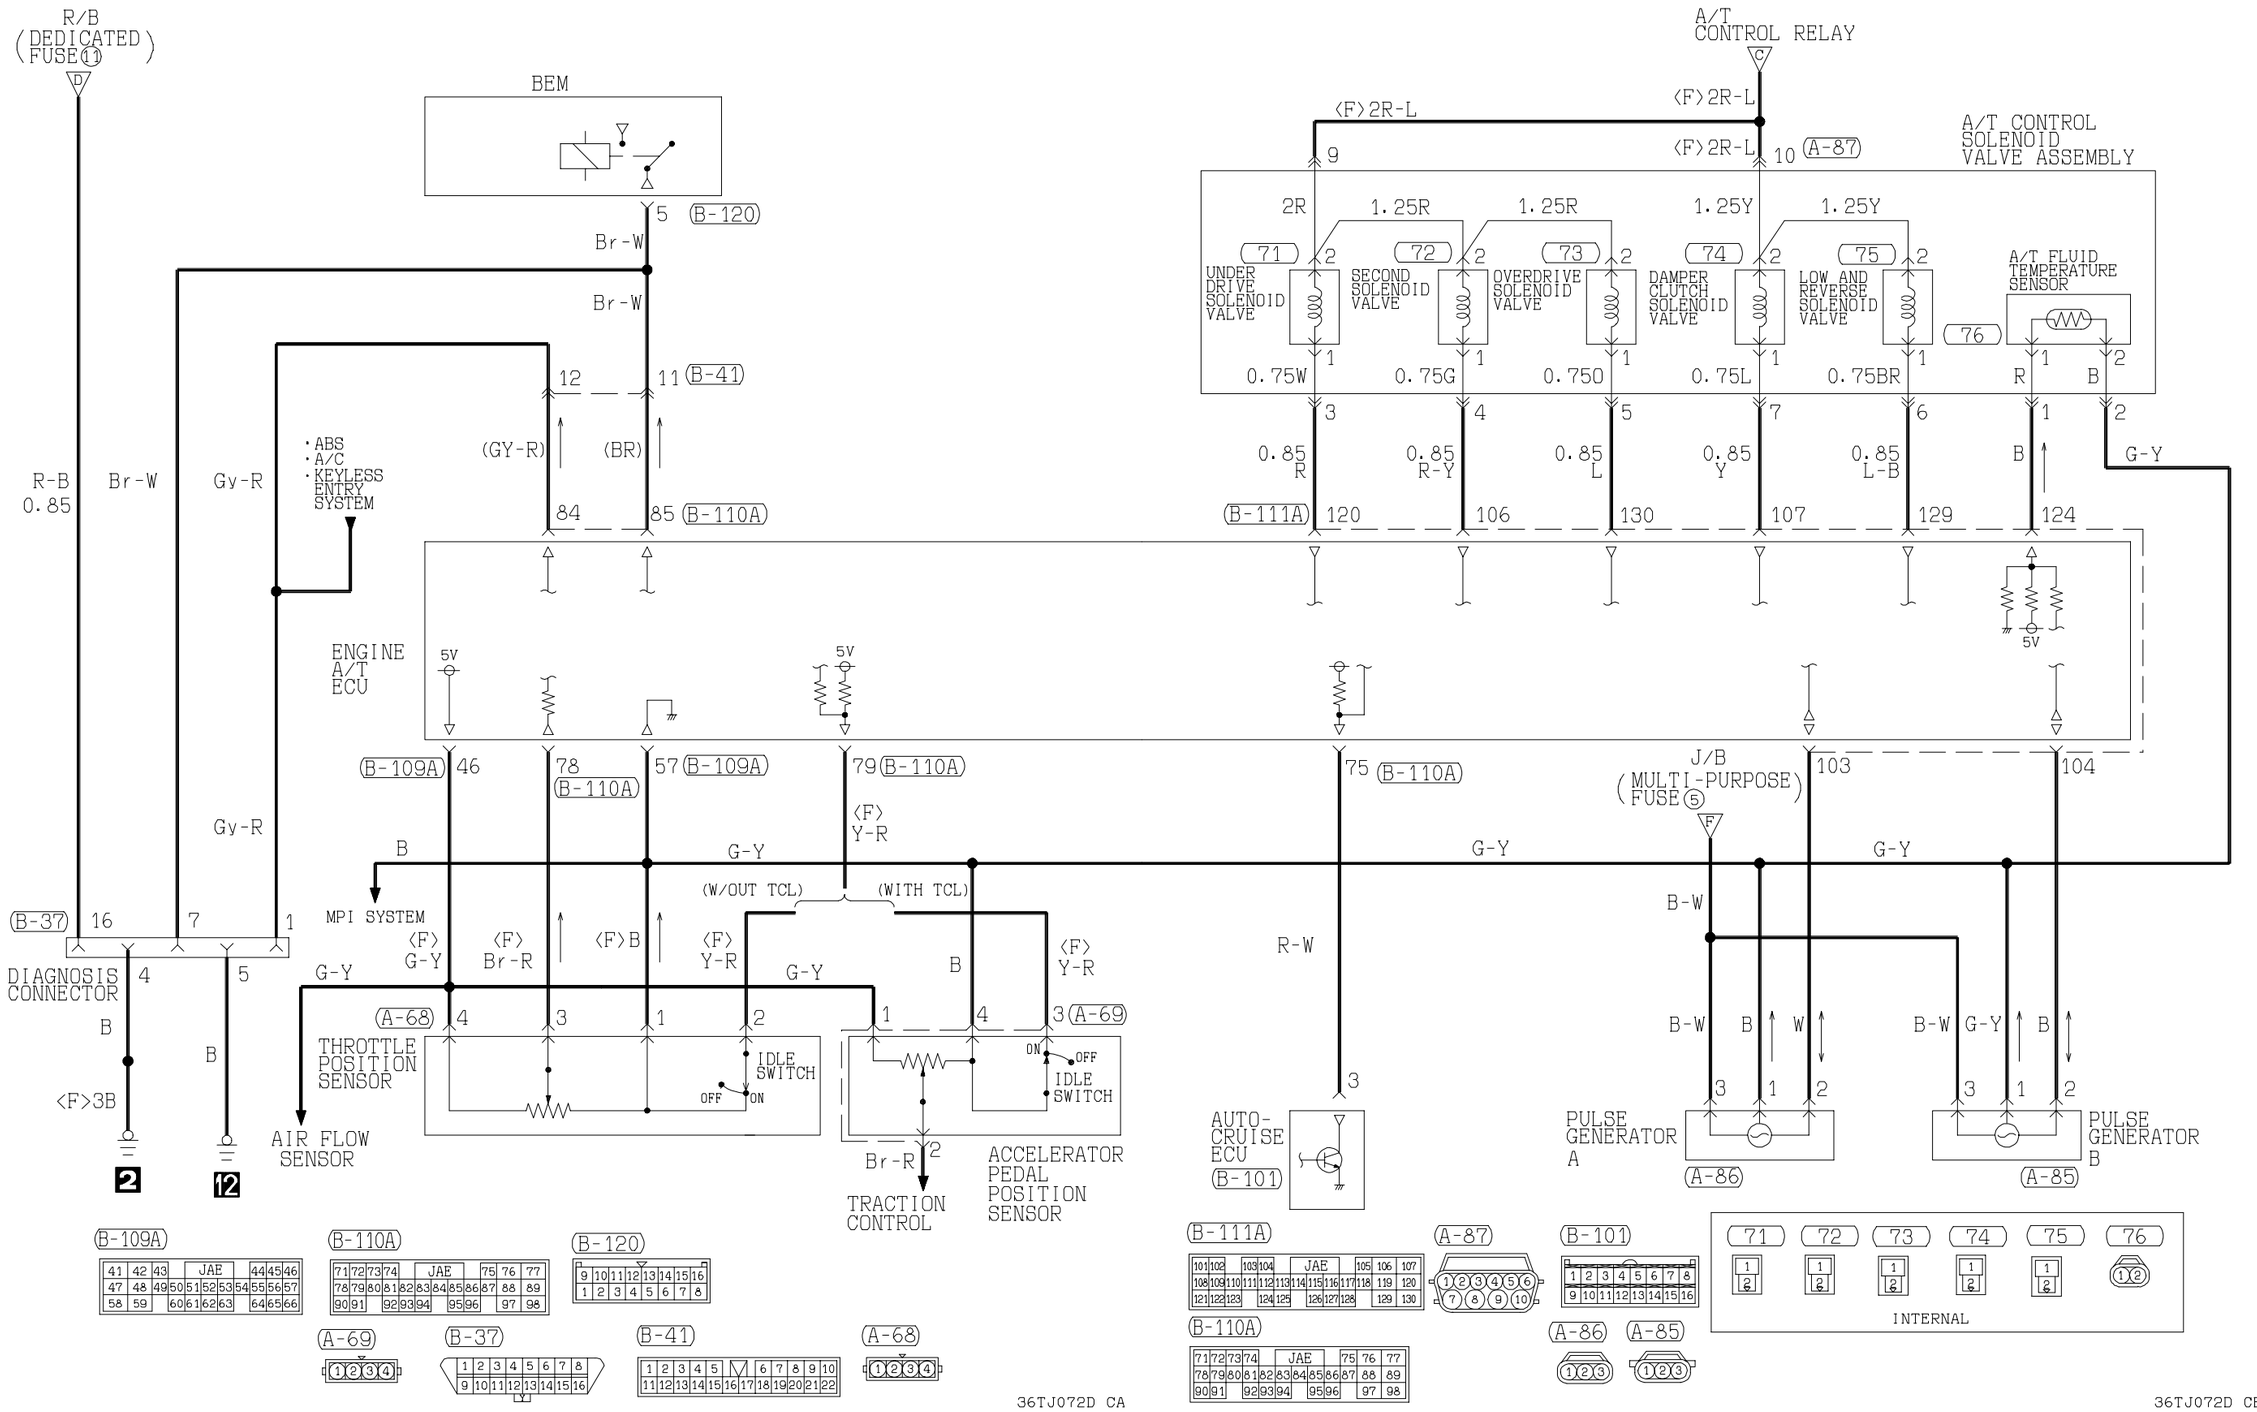

# ELC 4-SPEED AUTOMATIC TRANSMISSION <VERADA>
# ELC 5-SPEED AUTOMATIC TRANSMISSION <SPORTS>
# (CONTINUED)

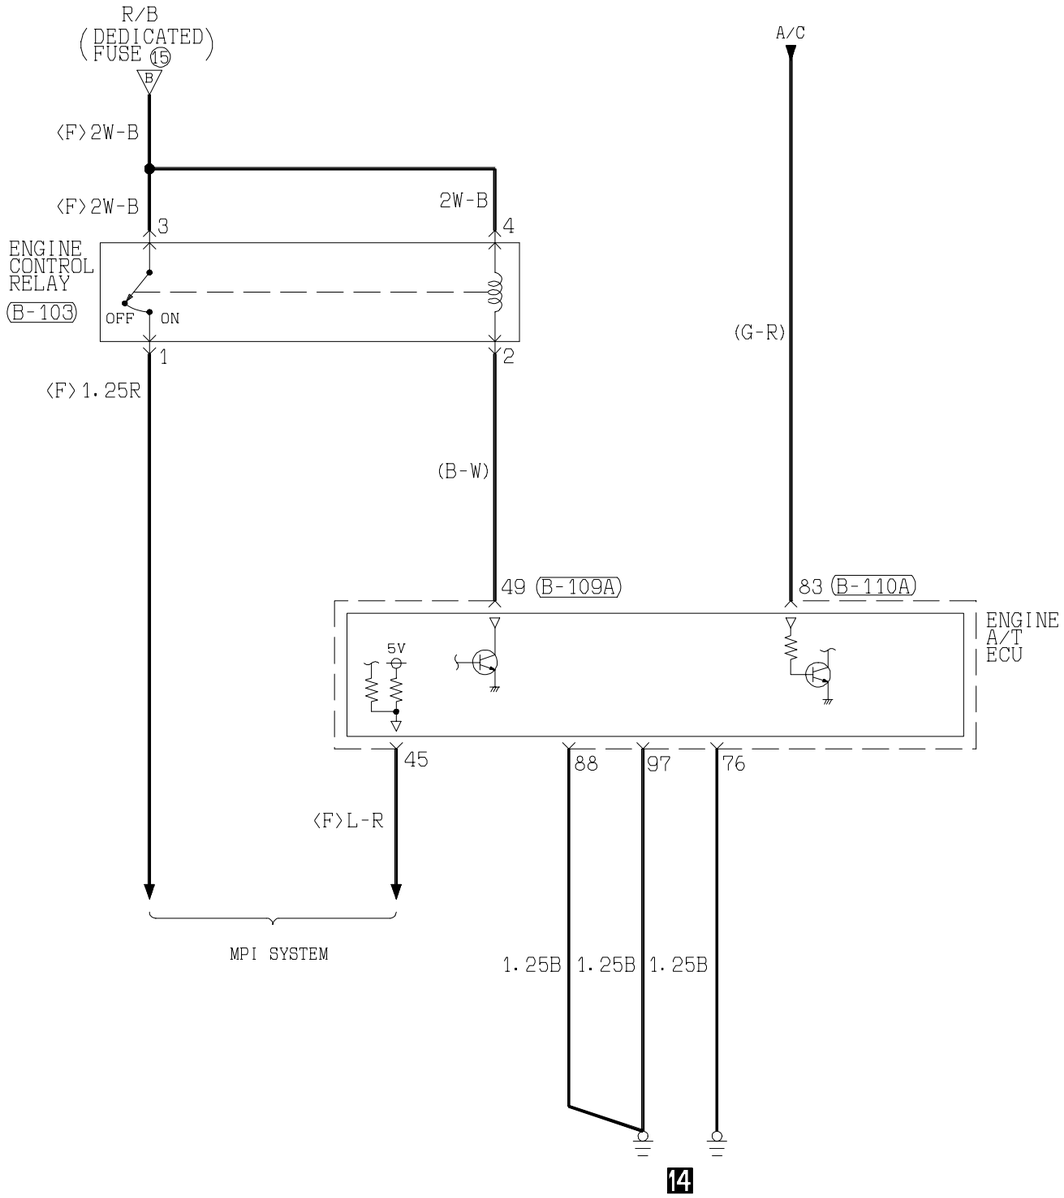


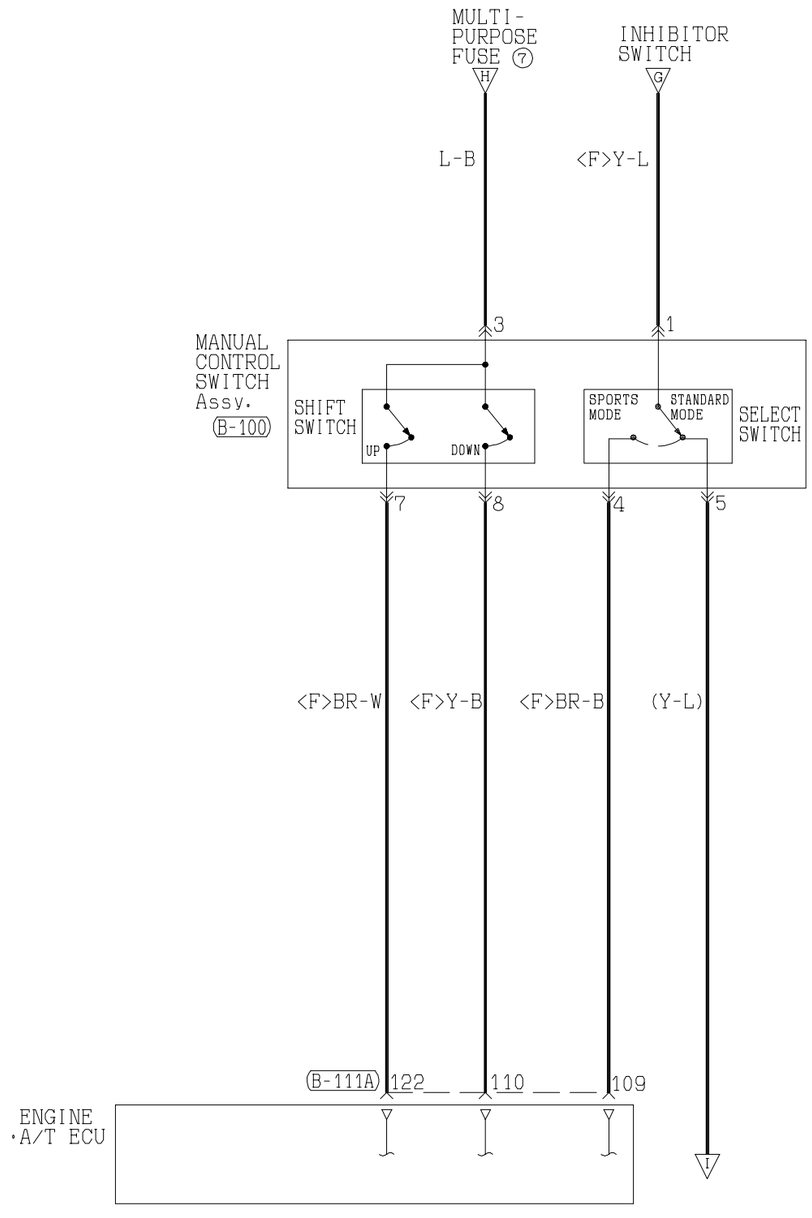


B-109A

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 41 | 42 | 43 | JAE | | | | | | | 44 | 45 | 46 | | |
| 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | | | | |
| 58 | 59 | | 60 | 61 | 62 | 63 | | 64 | 65 | 66 | | | | |

B-110A

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 71 | 72 | 73 | 74 | JAE | | | | | | 75 | 76 | 77 | | |
| 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | | | |
| 90 | 91 | | 92 | 93 | 94 | | 95 | 96 | | 97 | 98 | | | |

B-103

| | |
|---|---|
| 1 | 2 |
| 3 | 4 |

B-111A

| | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 101 | 102 | | 103 | 104 | JAE | | | | | 105 | 106 | 107 | | |
| 108 | 109 | 110 | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | | |
| 121 | 122 | 123 | | 124 | 125 | | 126 | 127 | 128 | | 129 | 130 | | |

B-100

| | | | | |
|---|---|---|---|---|
| 1 | | 2 | 3 | |
| 4 | 5 | 6 | 7 | 8 |

# HEADLAMP <MAGNA>

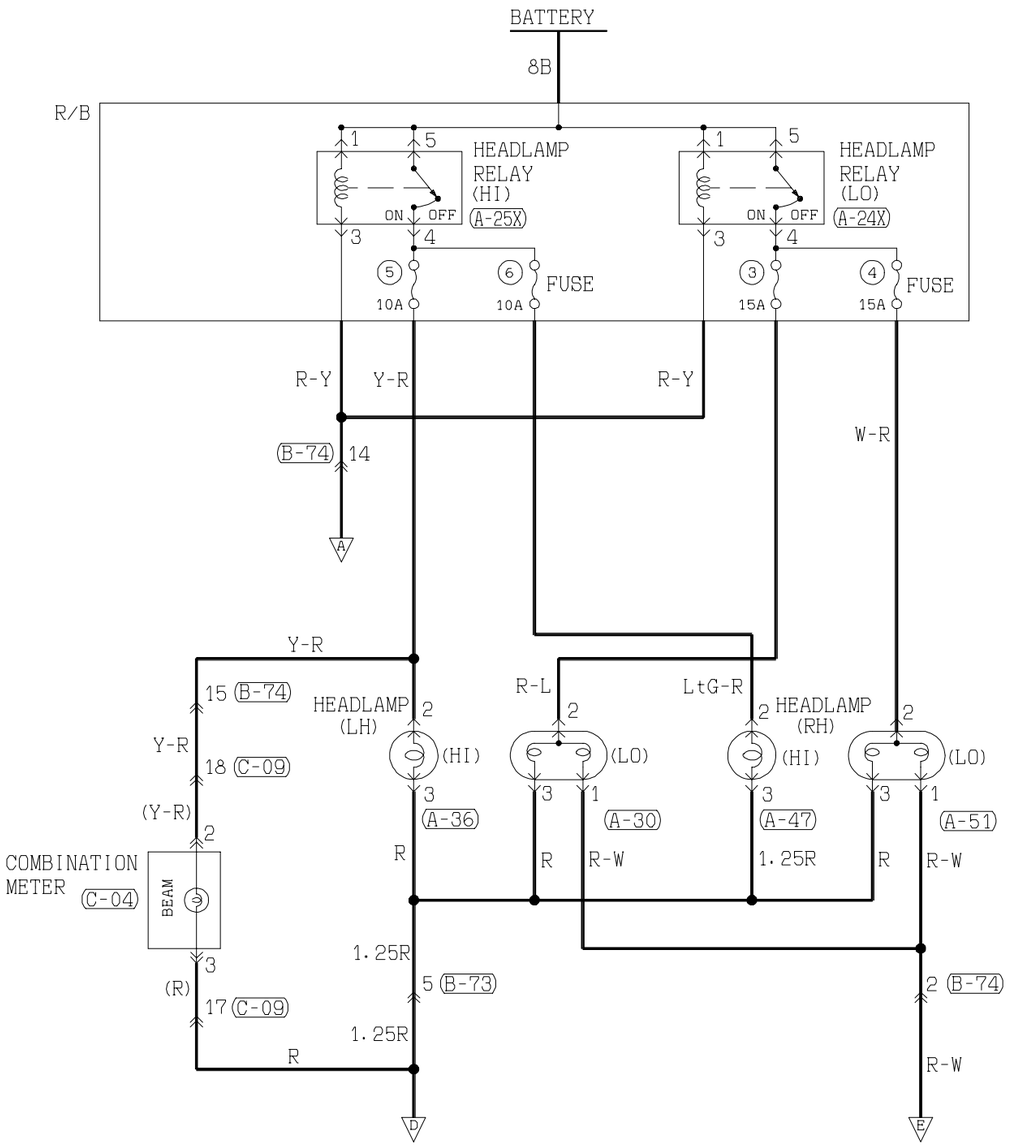


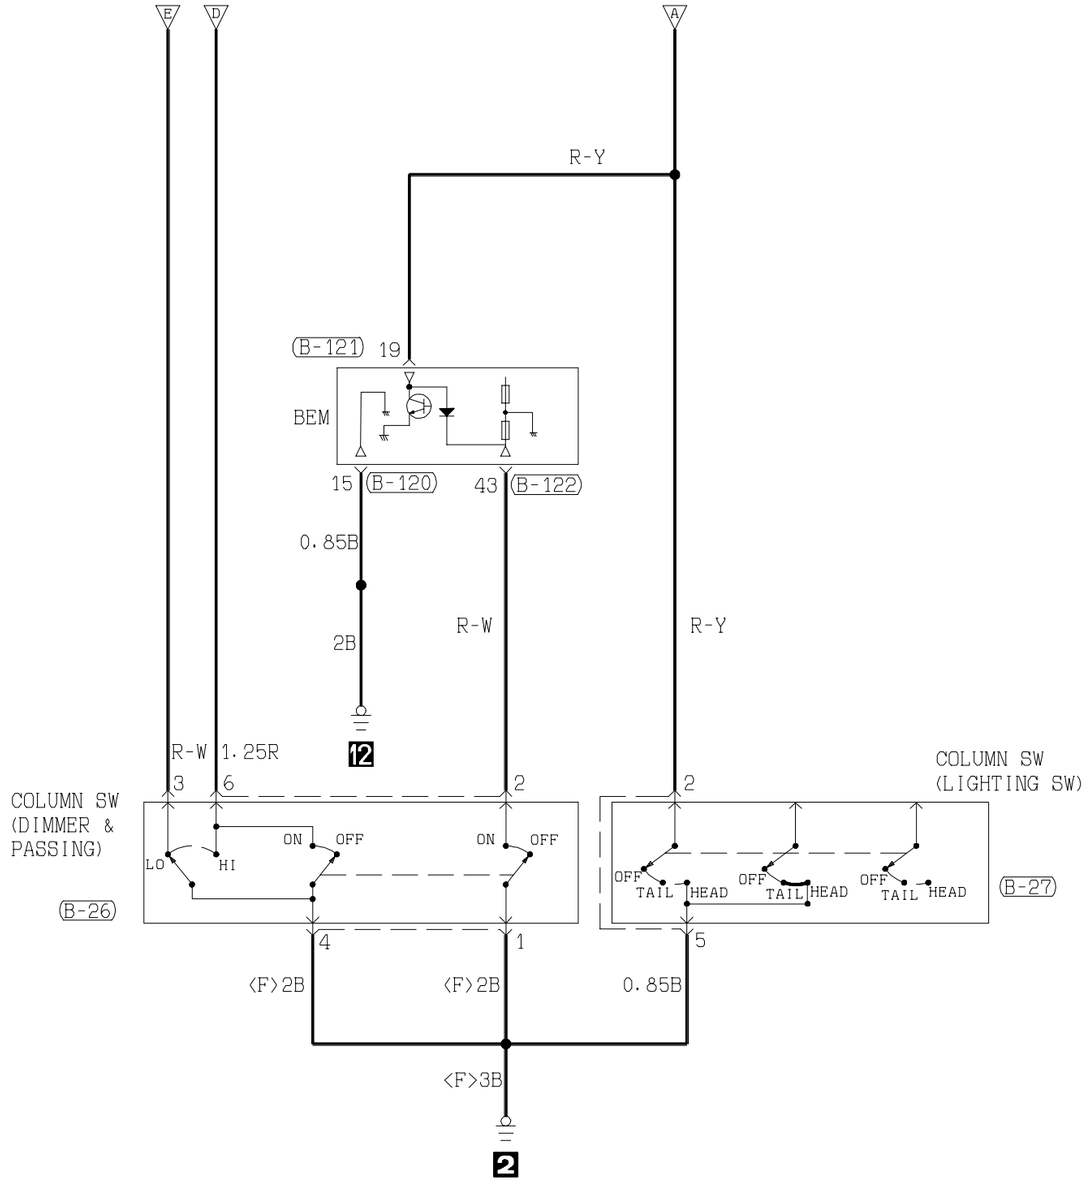

36TJ065D AA

36TJ065D AB

# HEADLAMP <VERADA>

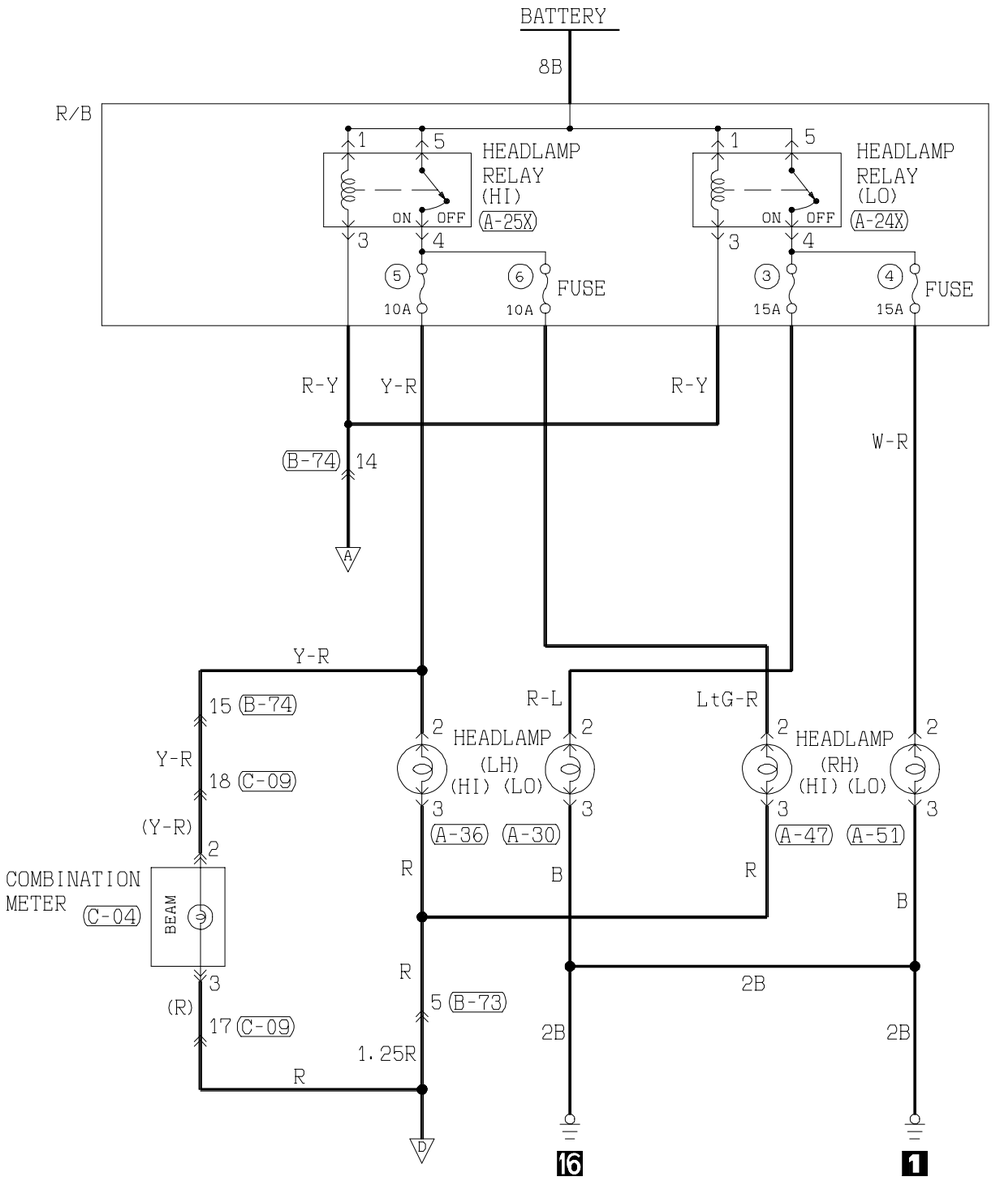


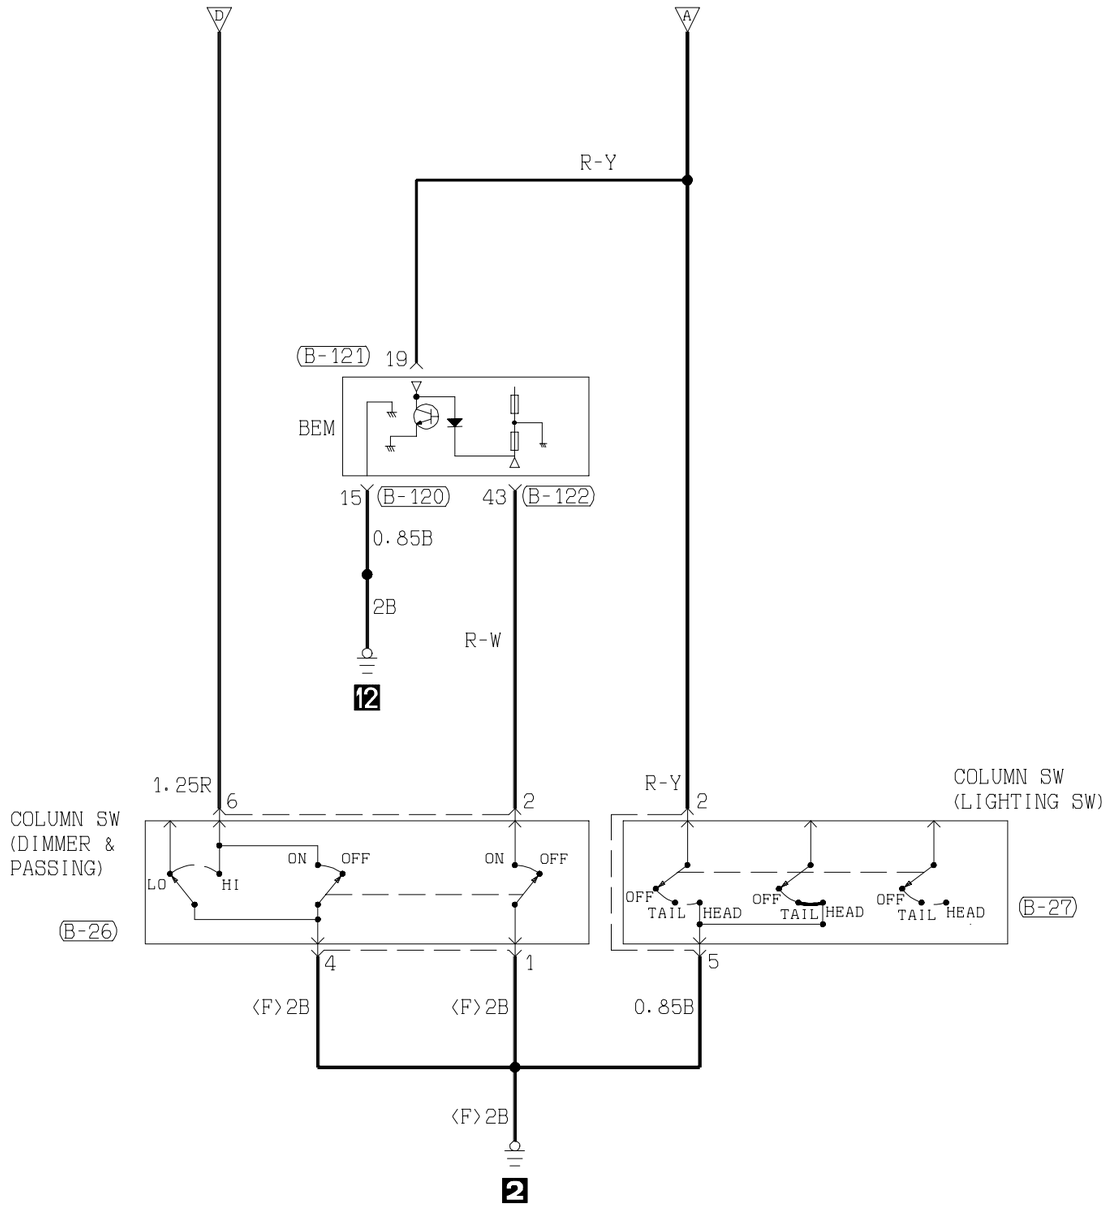


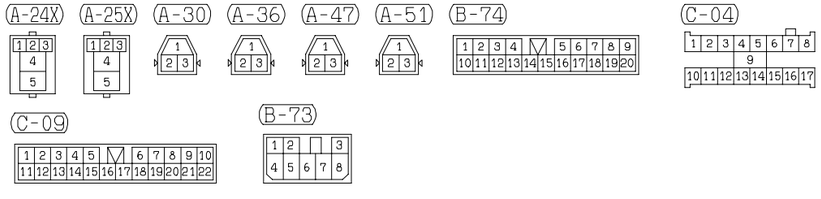

36KJ008D AA

36KJ008D AB

# TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP <SEDAN>

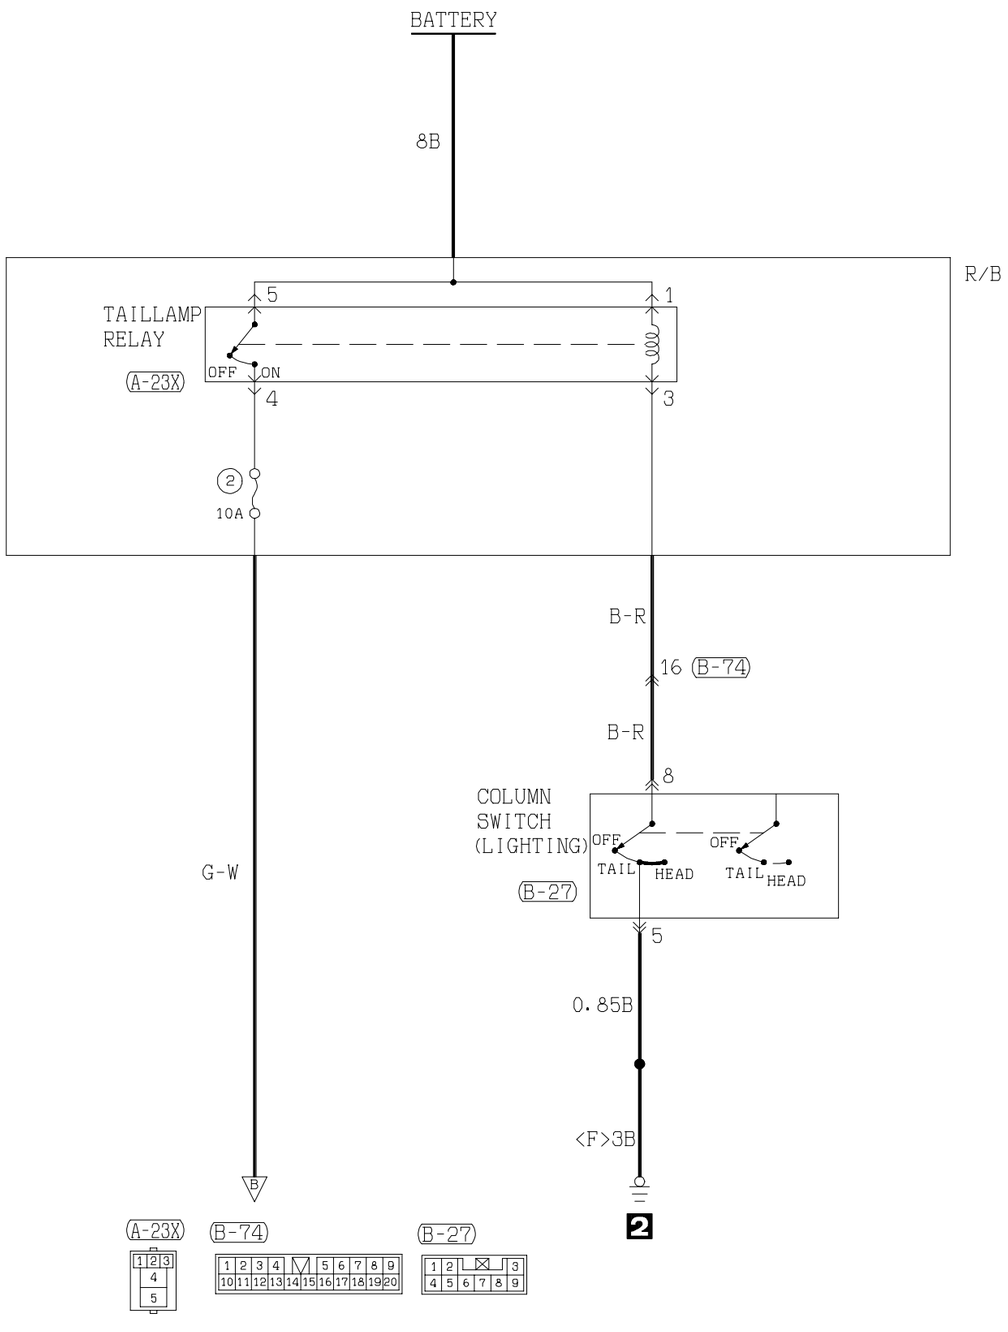


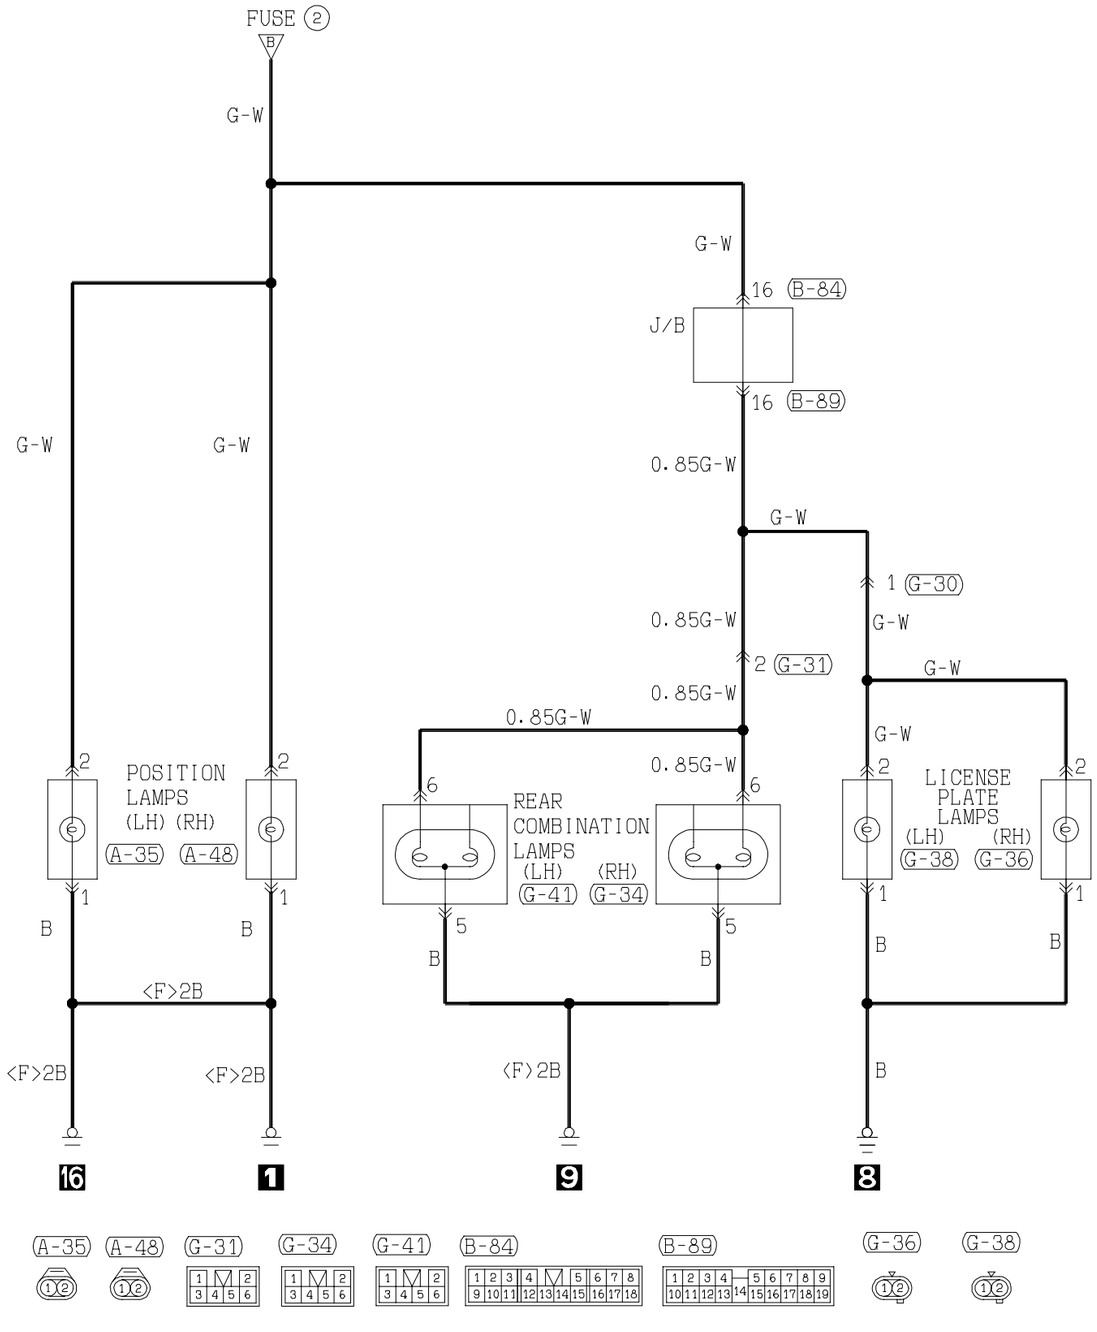


36TJ009D AA

36TJ009D AB

# TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP <WAGON>

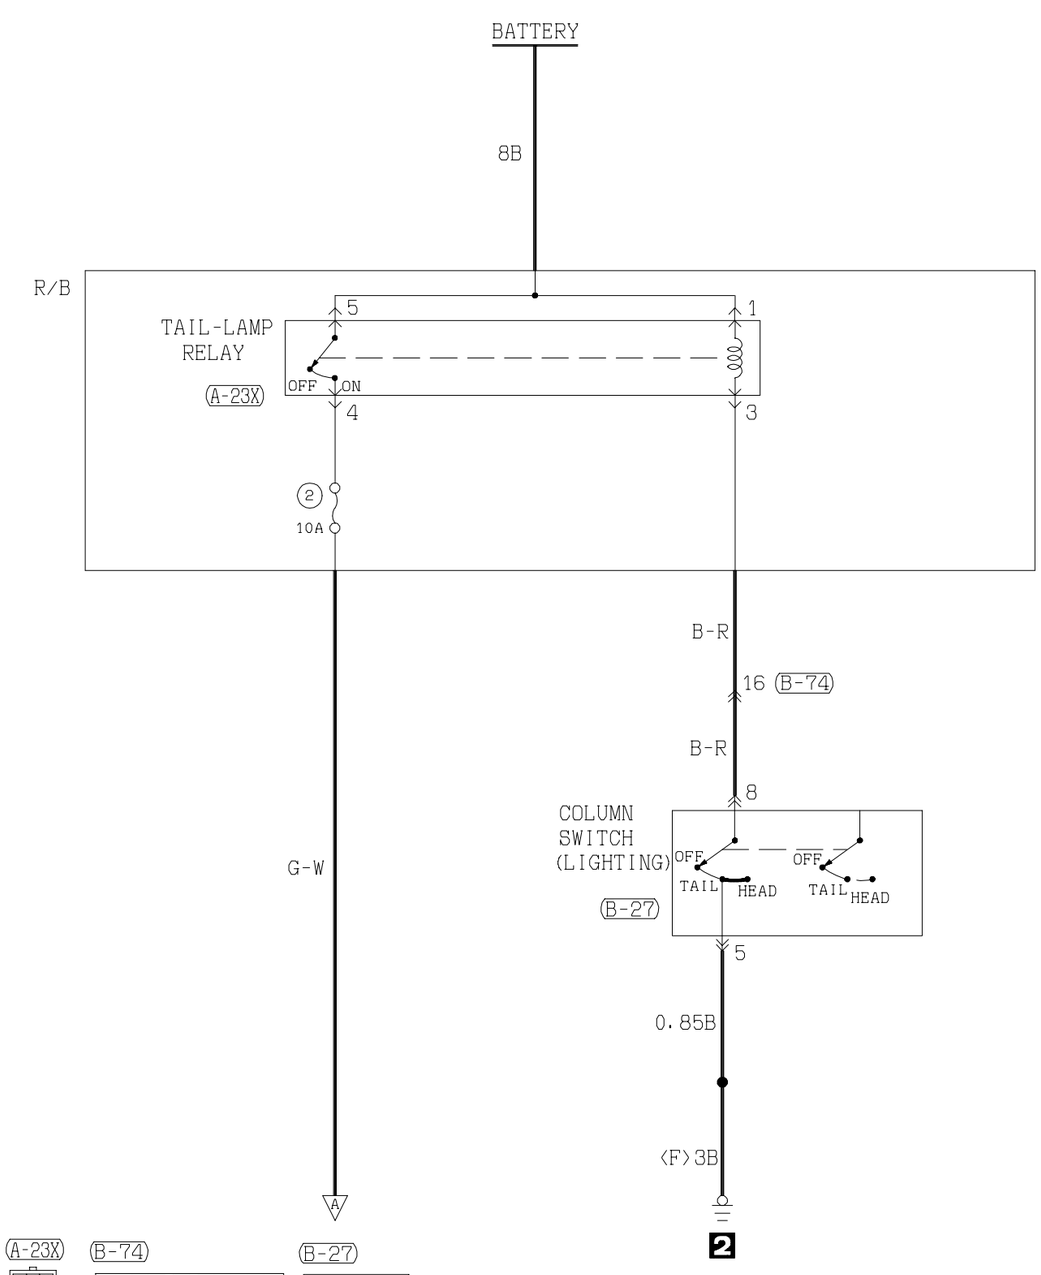


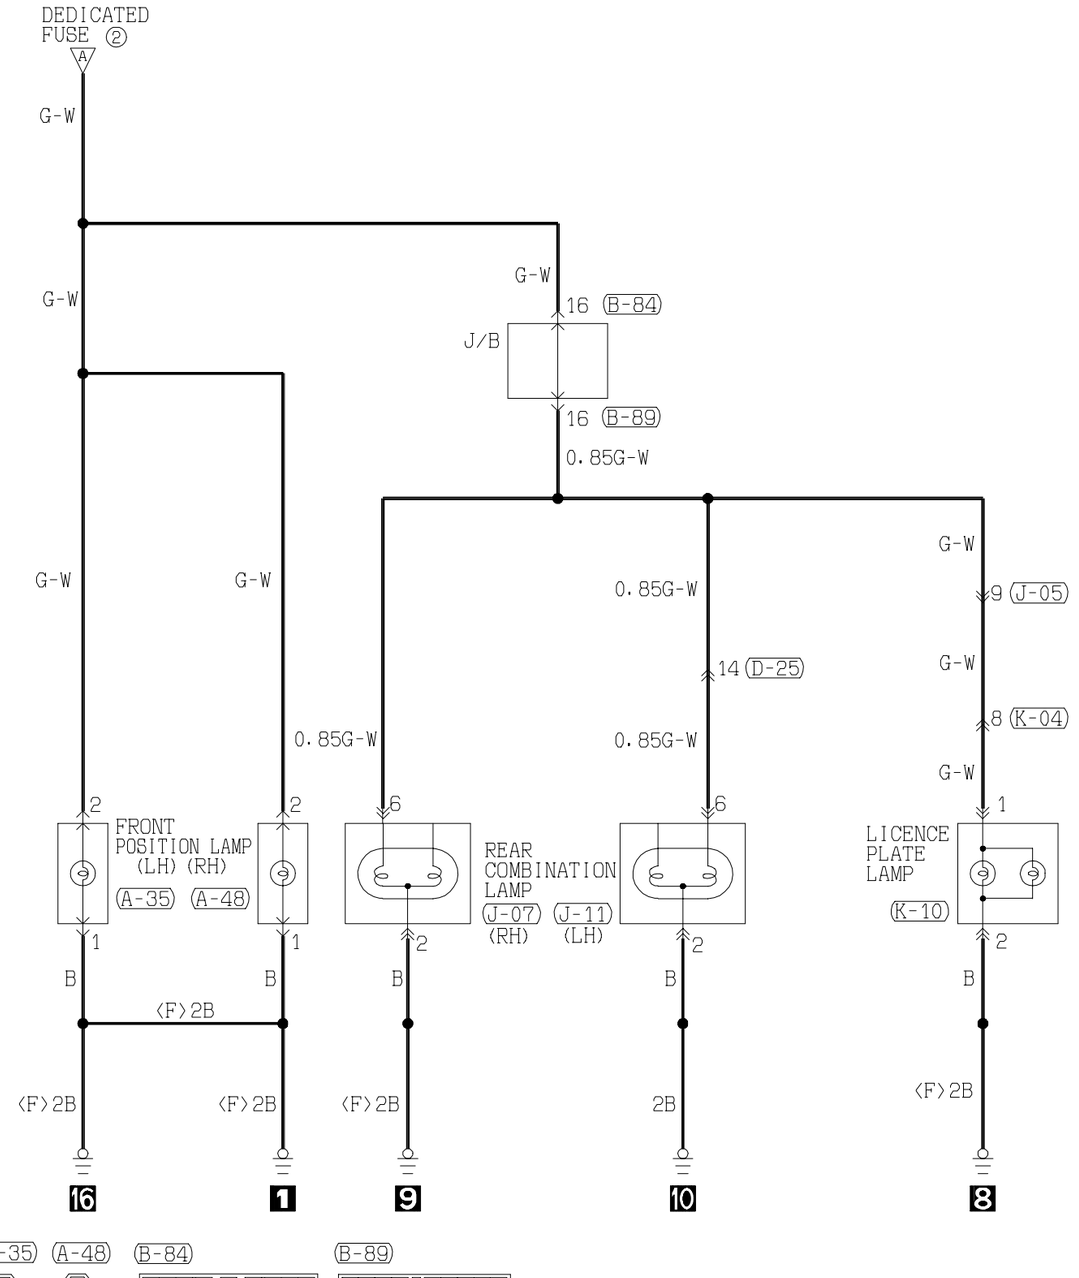


36TH052D AA

36TH052D AB

# FOG LAMP <VERADA AND SPORTS>

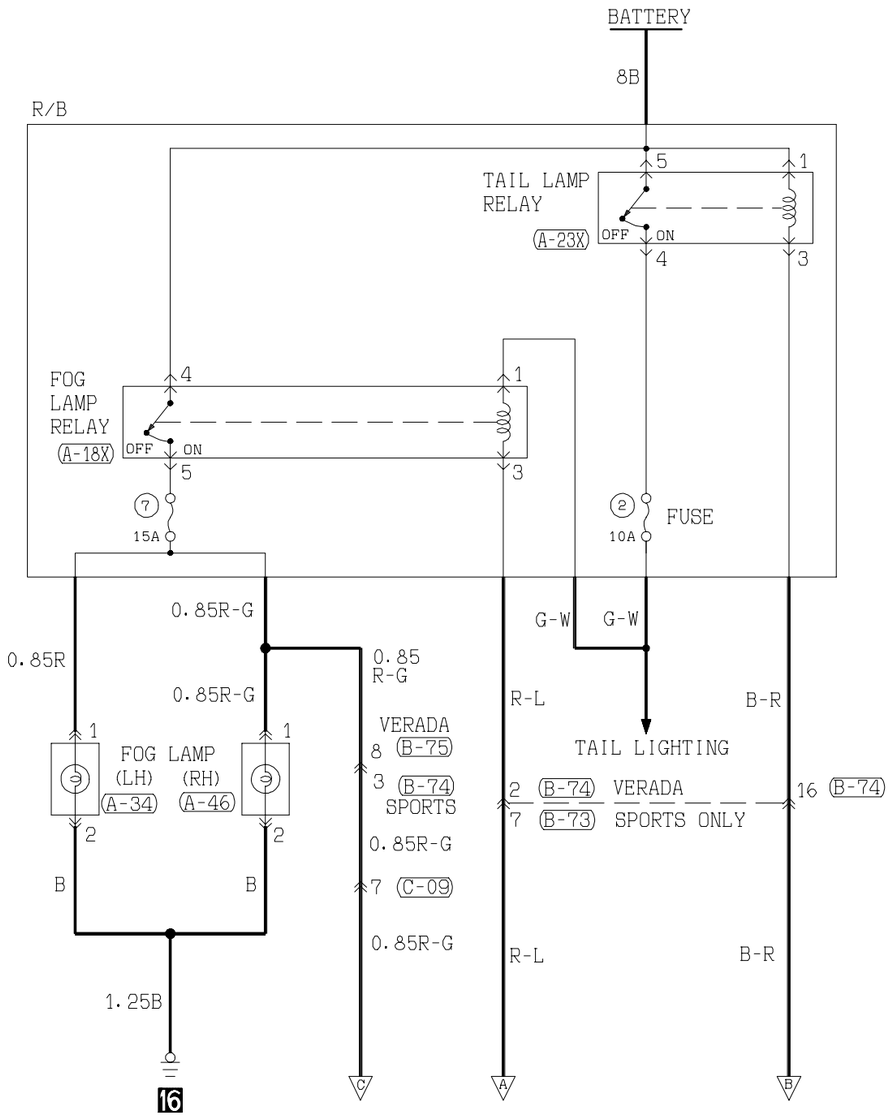


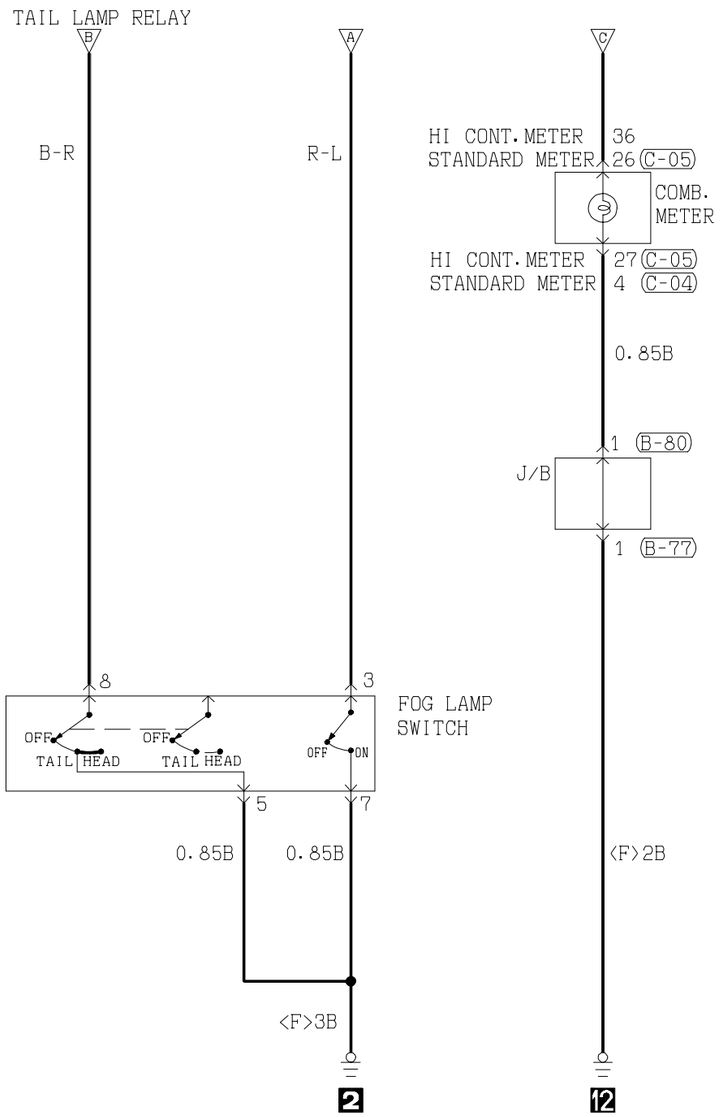





36KJ010D AA

36KJ010D AB

# ROOM LAMP, PERSONAL LAMP AND FOOT LAMP <SEDAN>

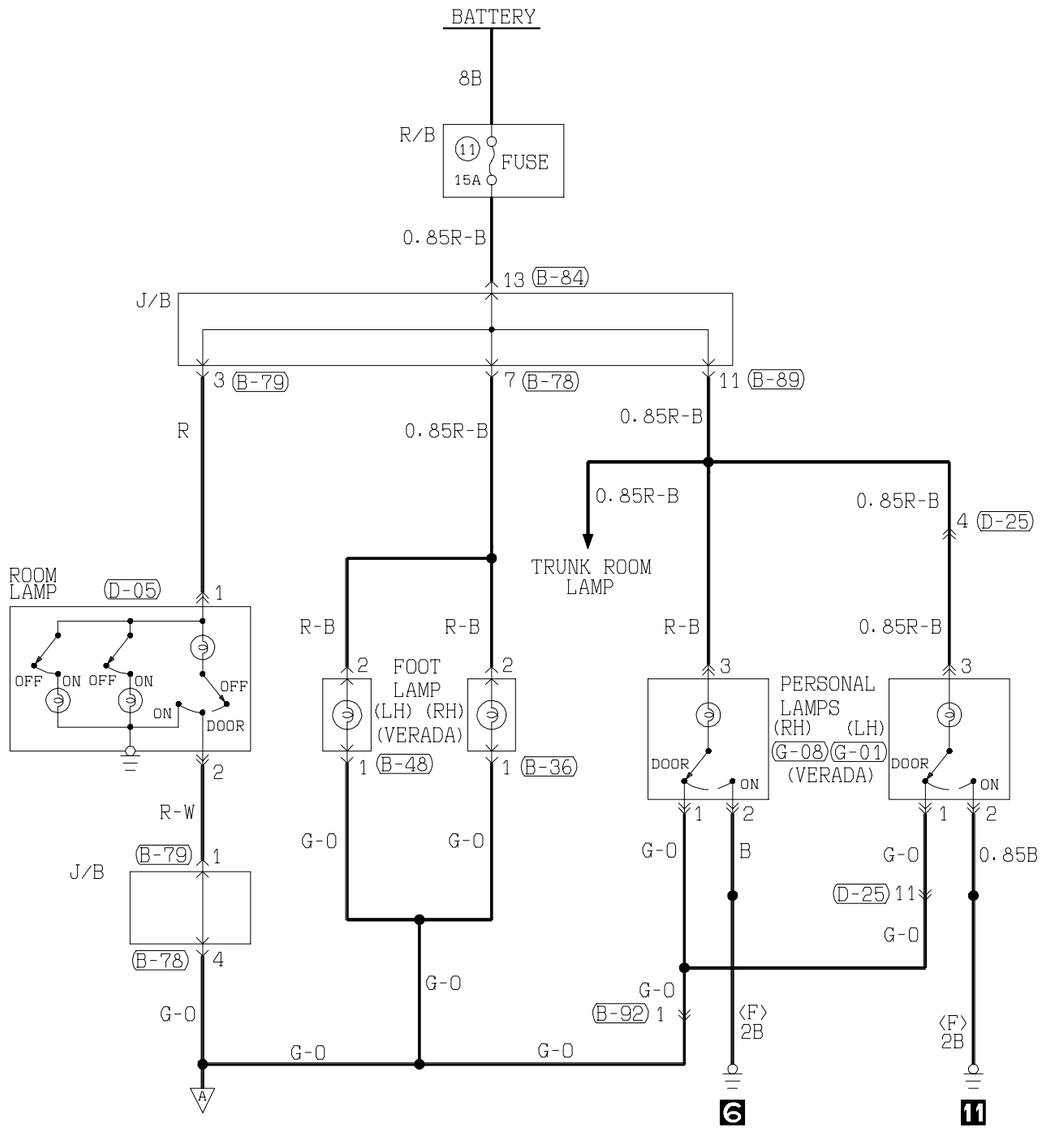


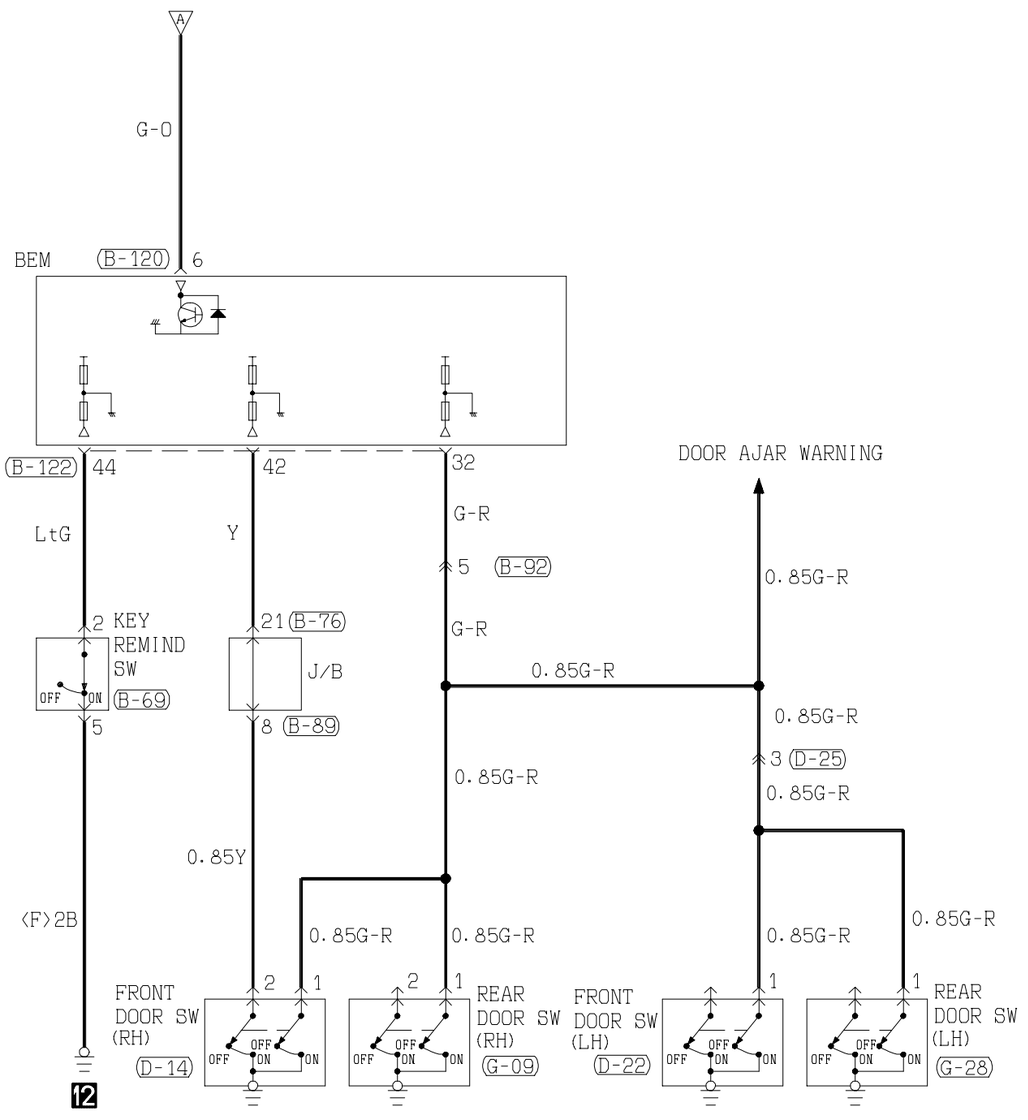


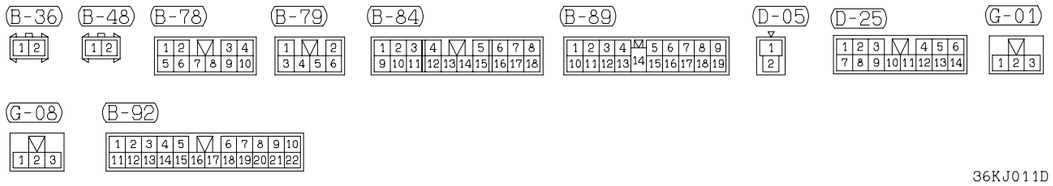


36KJ011D AA

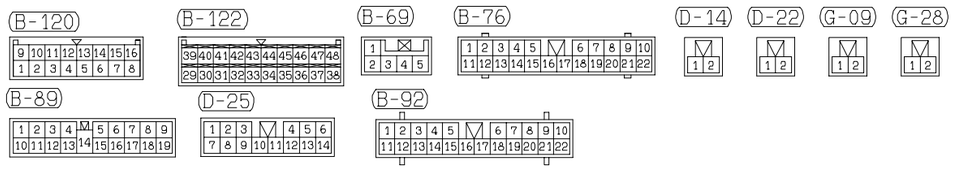


36KJ011D AB

# ROOM LAMP, PERSONAL LAMP AND FOOT LAMP <WAGON>

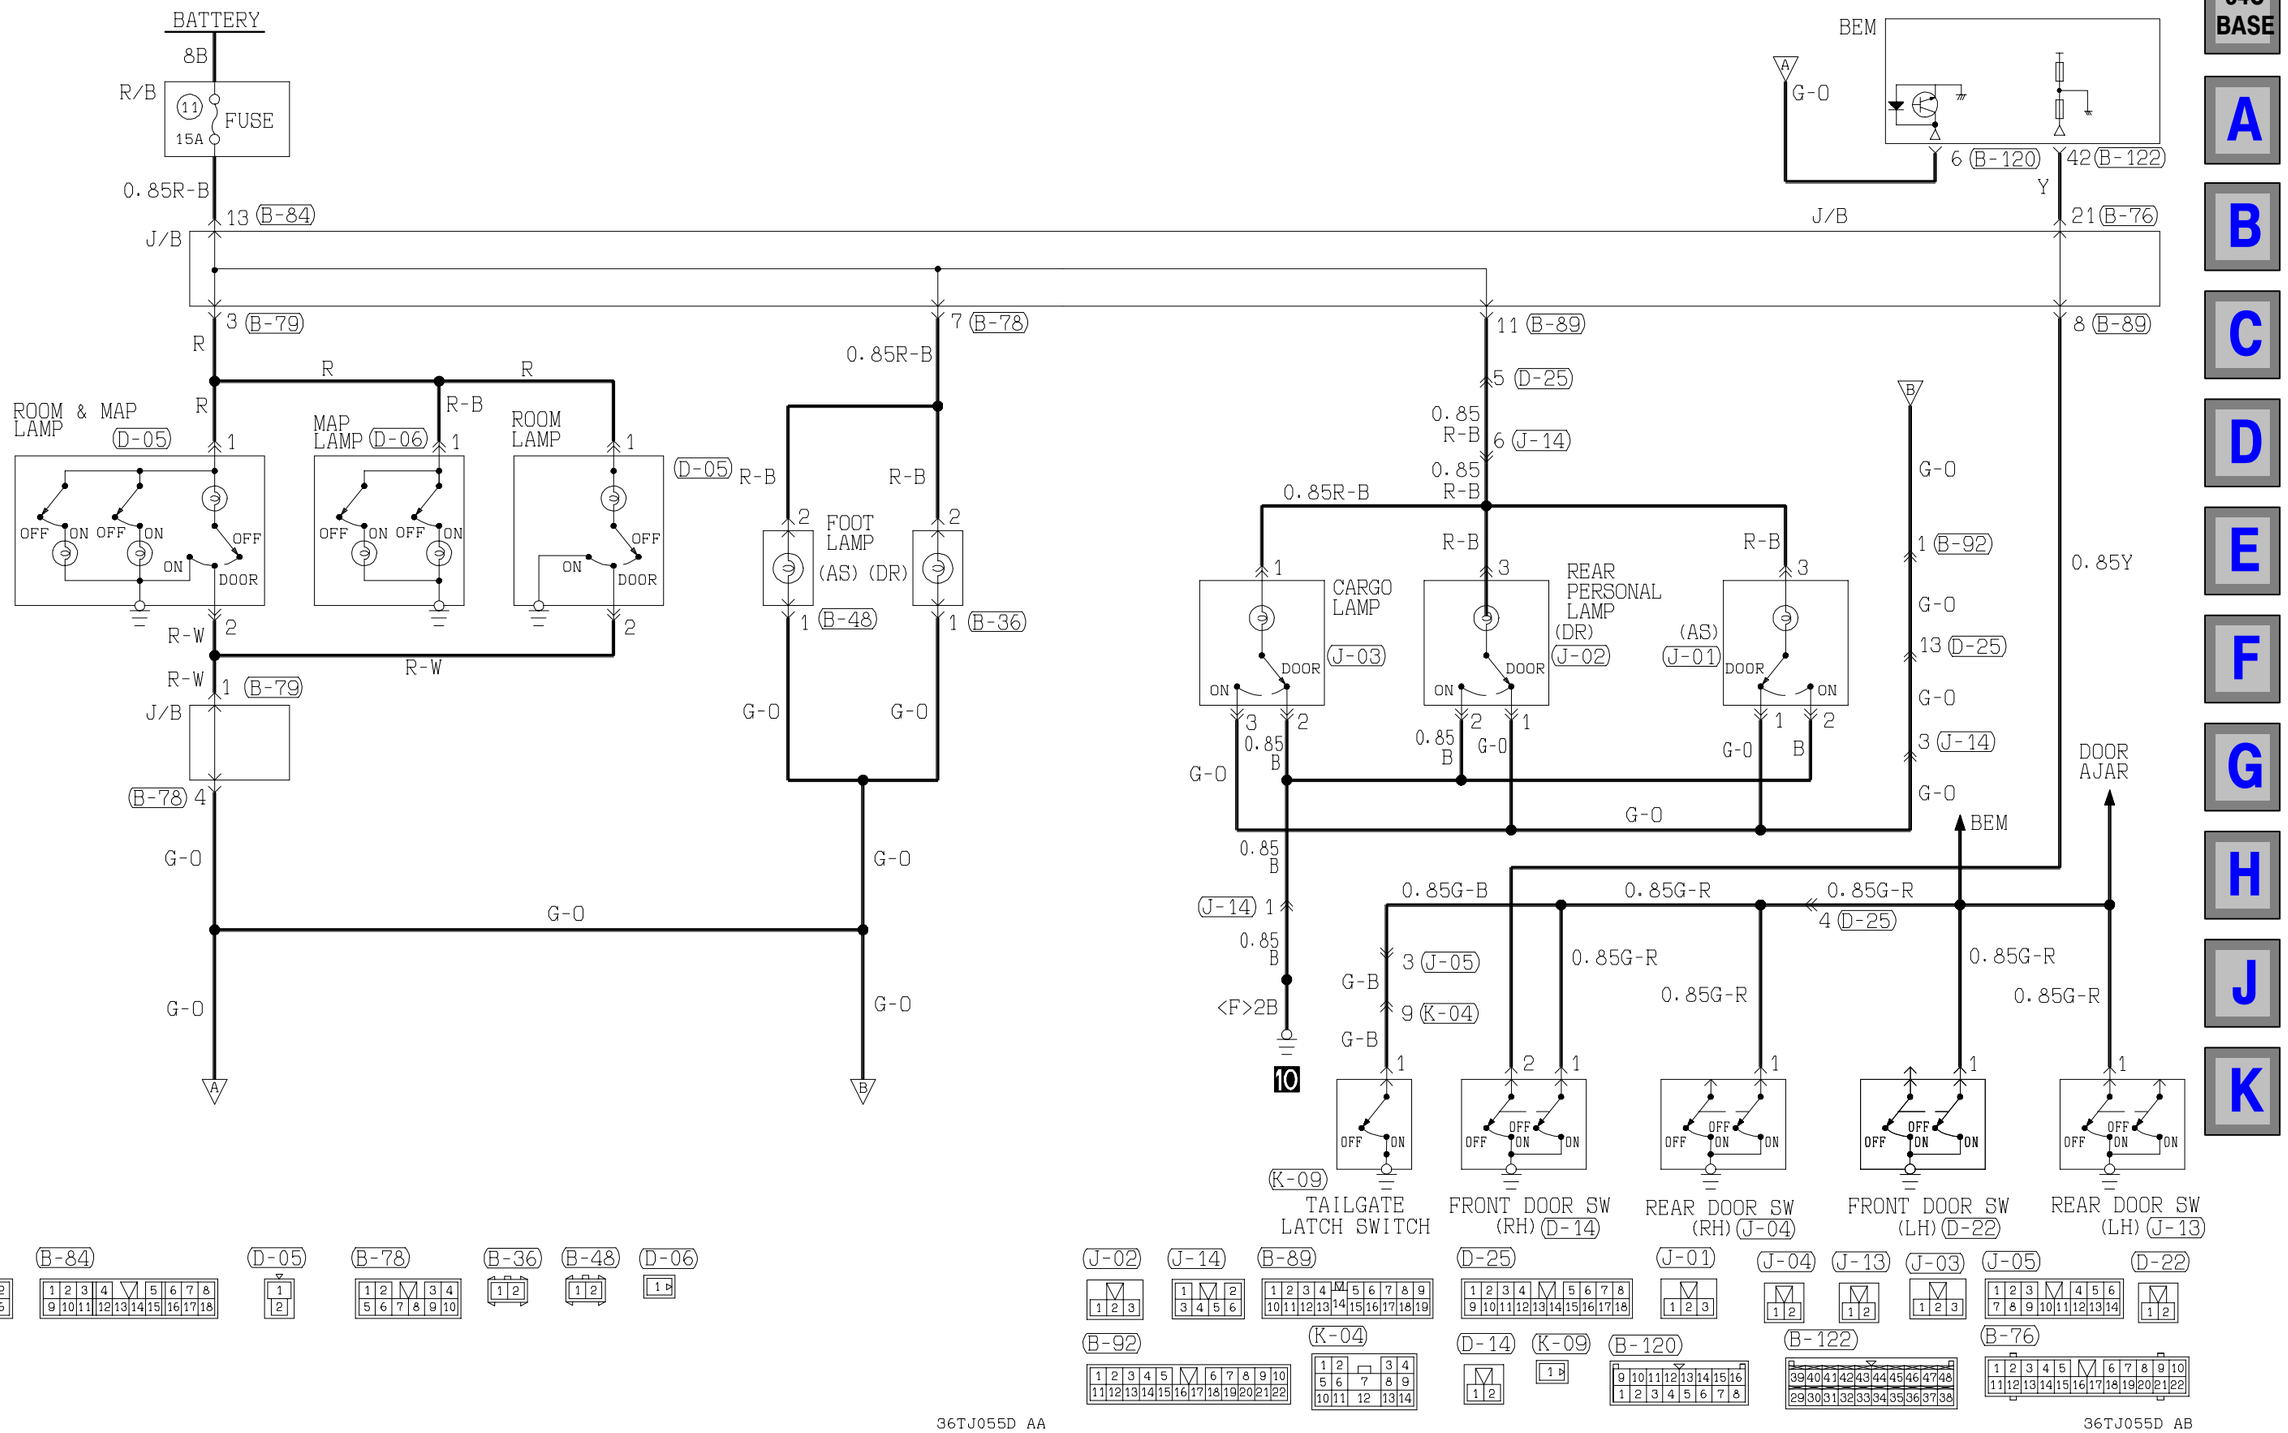





36TJ055D AA




36TJ055D AB

# GLOVE COMPARTMENT LAMP AND TRUNK LAMP

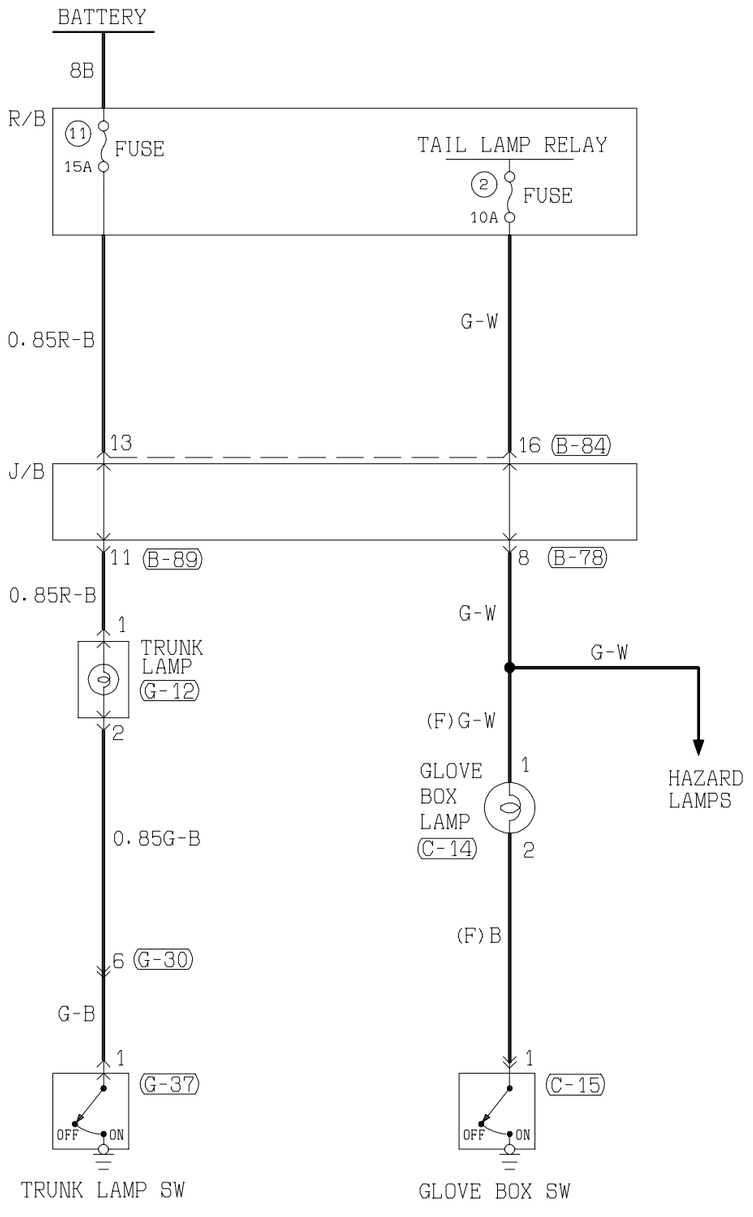




# DOOR LAMP AND FOOT LAMP

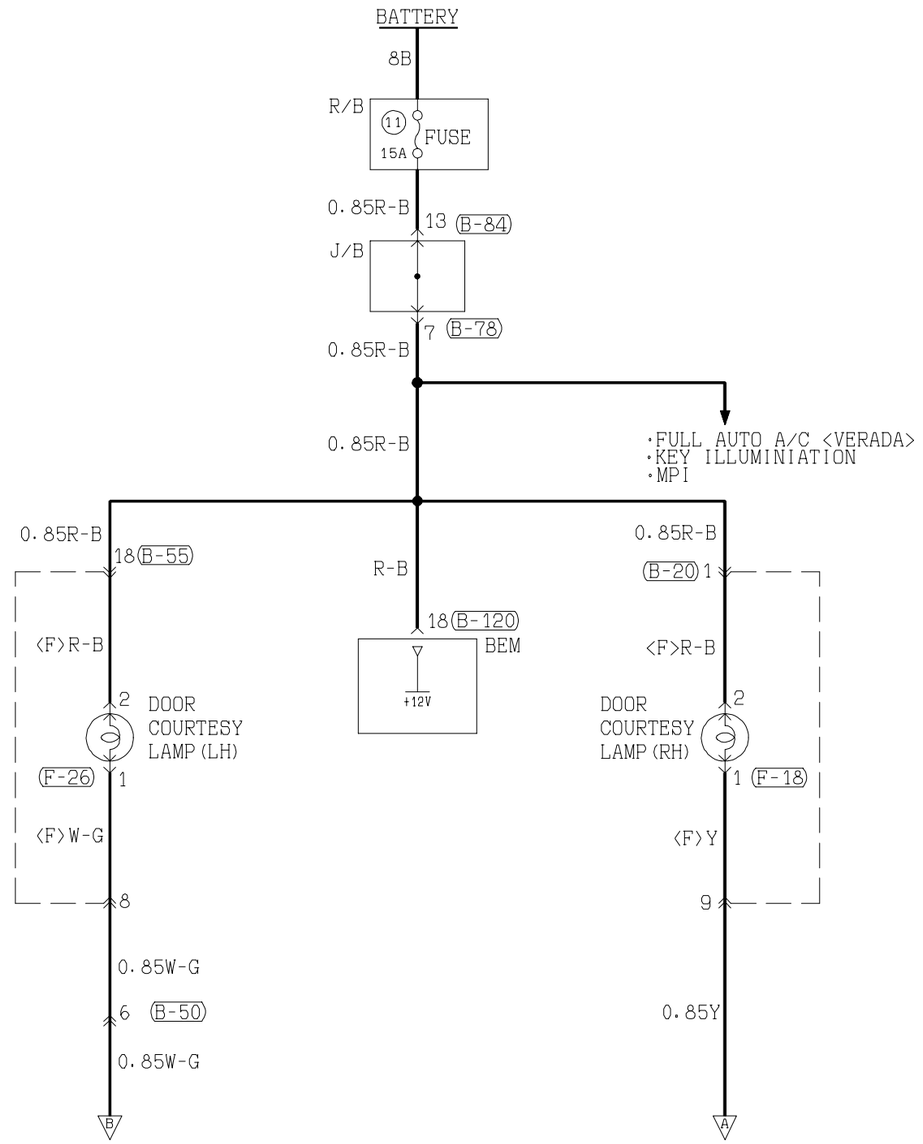


36TJ013D AA

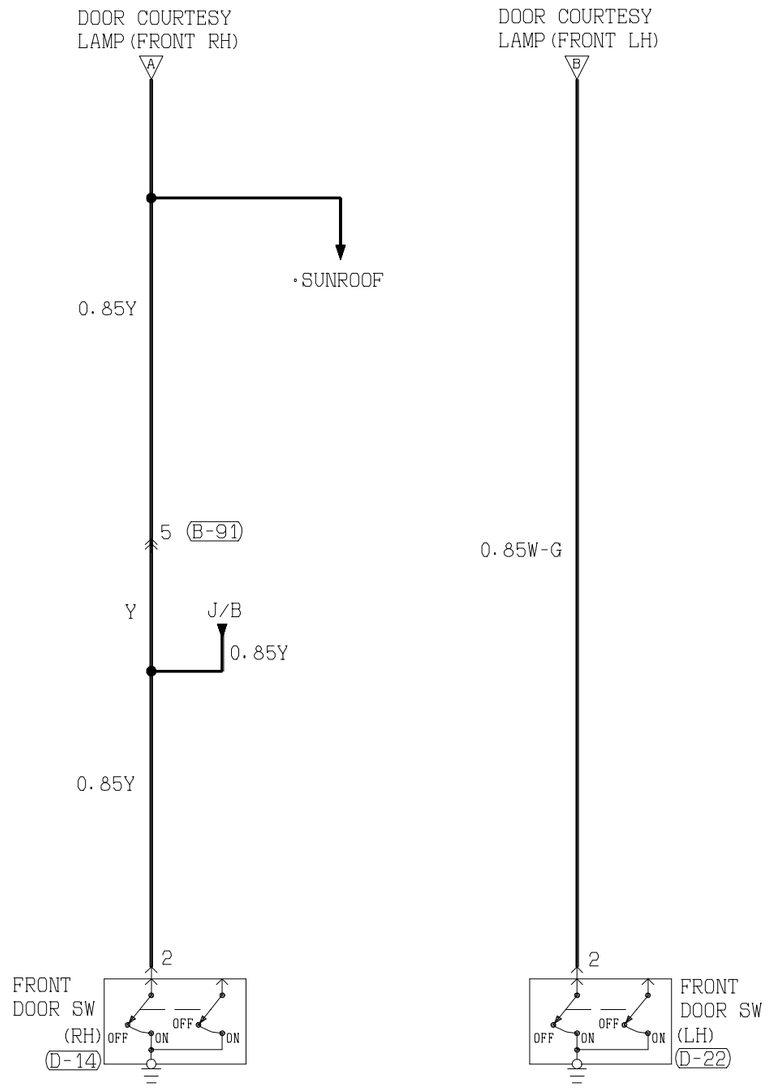


36TJ013D AB

B-20 (VERADA Xi) B-50 B-55 B-78 B-84 B-120 B-91 D-14 D-22

F-18 F-26

# EC MIRROR

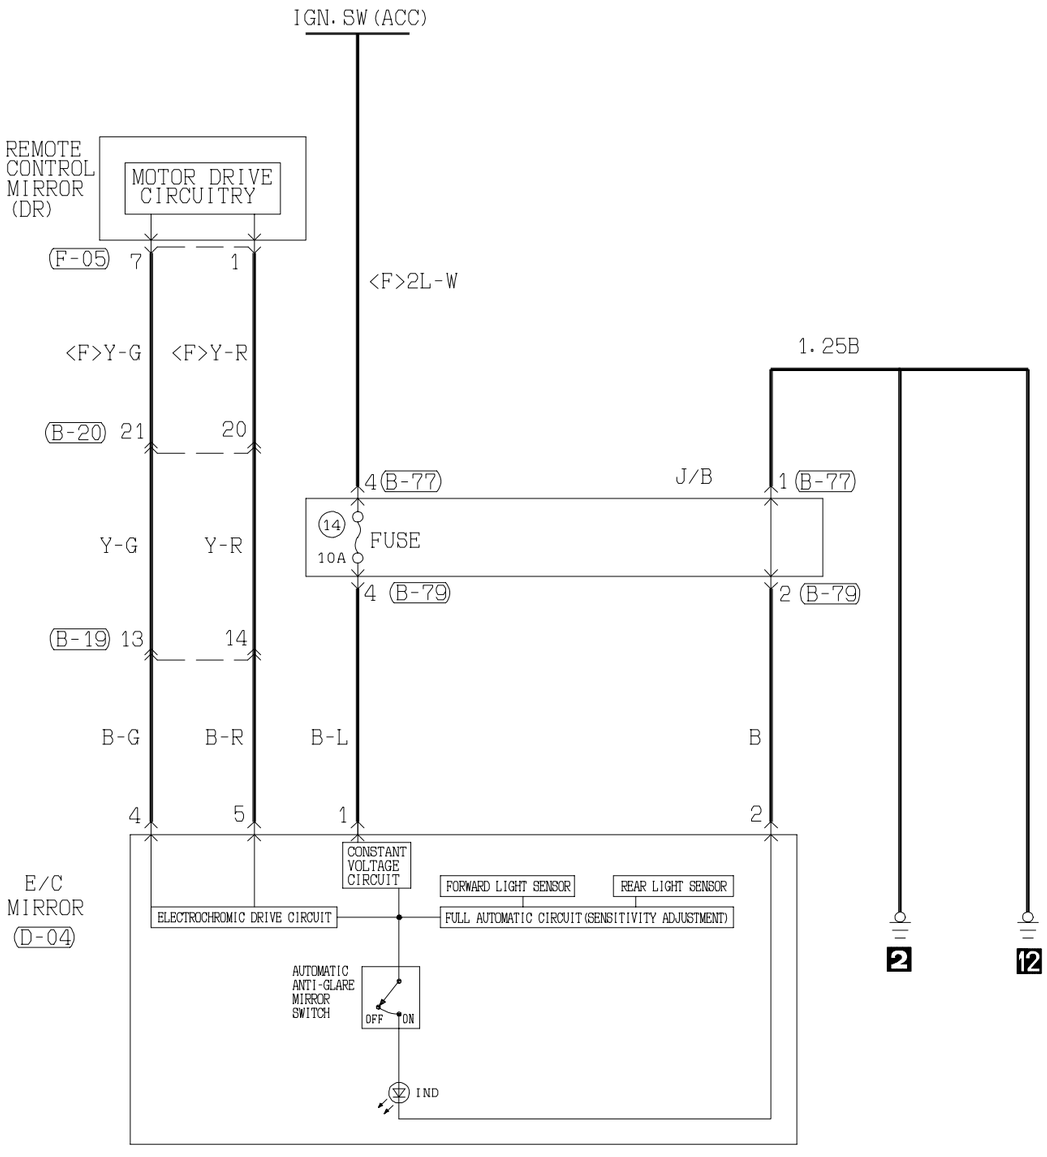





36TJ048D AA

# IGNITION KEY CYLINDER LAMP

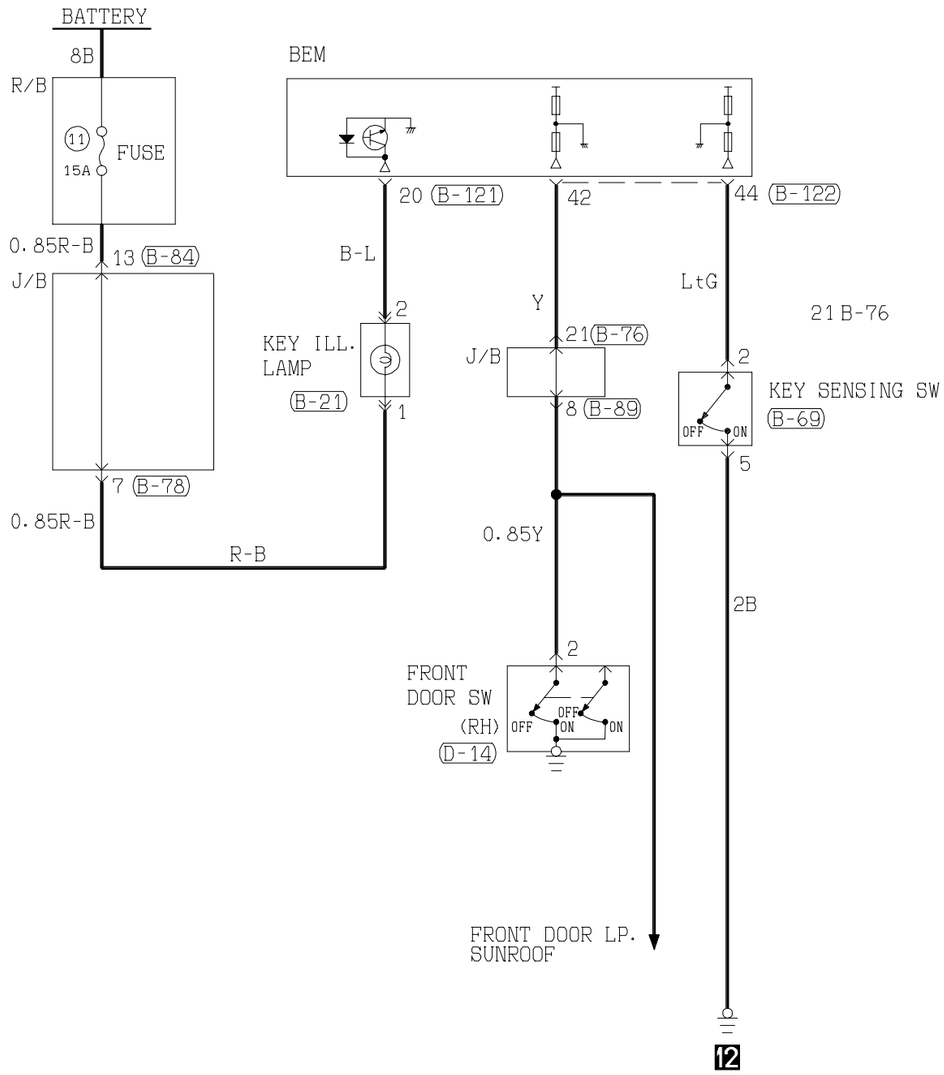


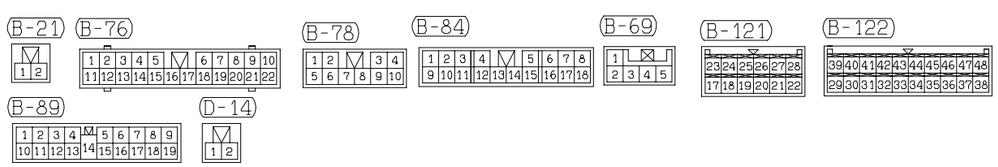


36TJ014D AA

# STOP LAMP <SEDAN>

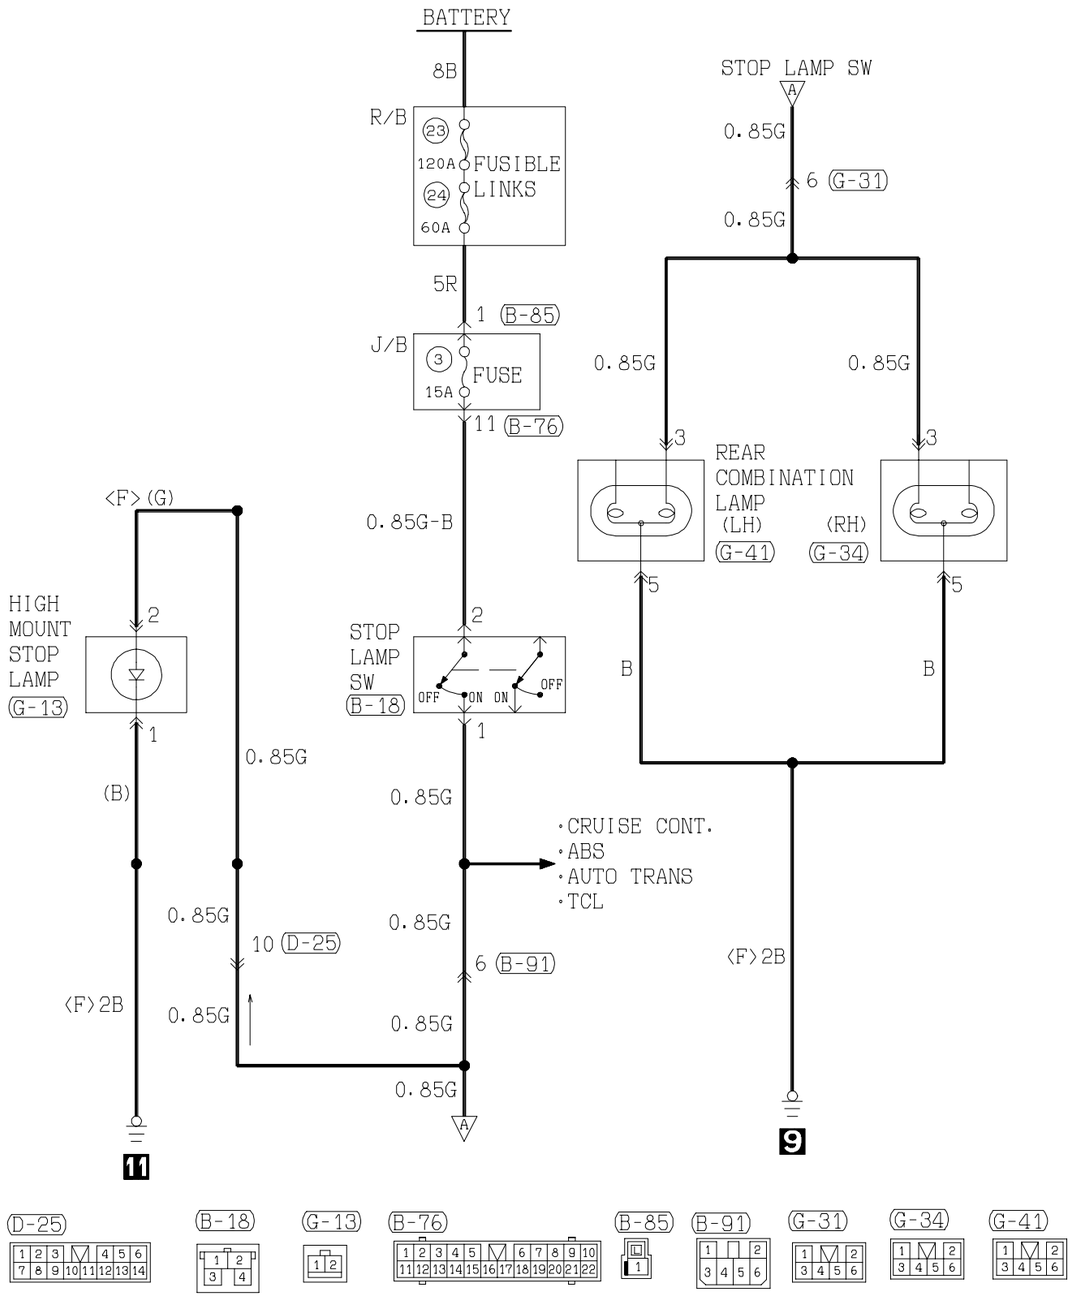


36TJ015D AA

# STOP LAMP <WAGON>

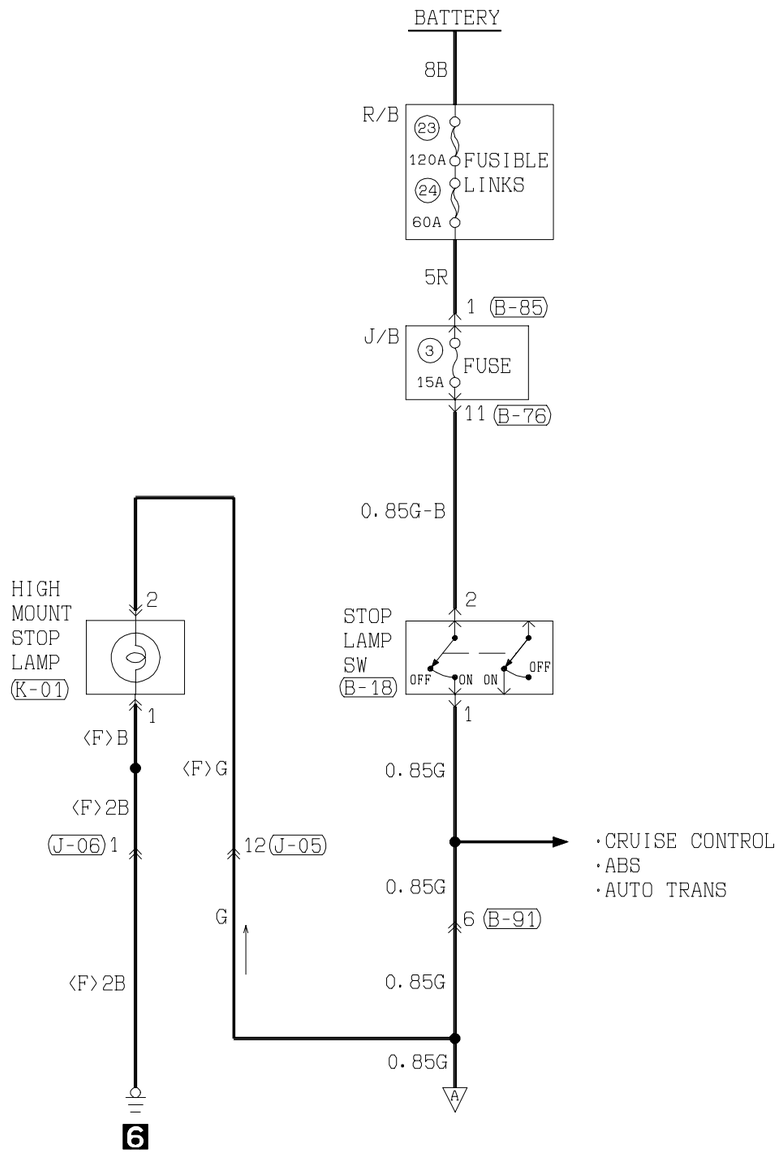


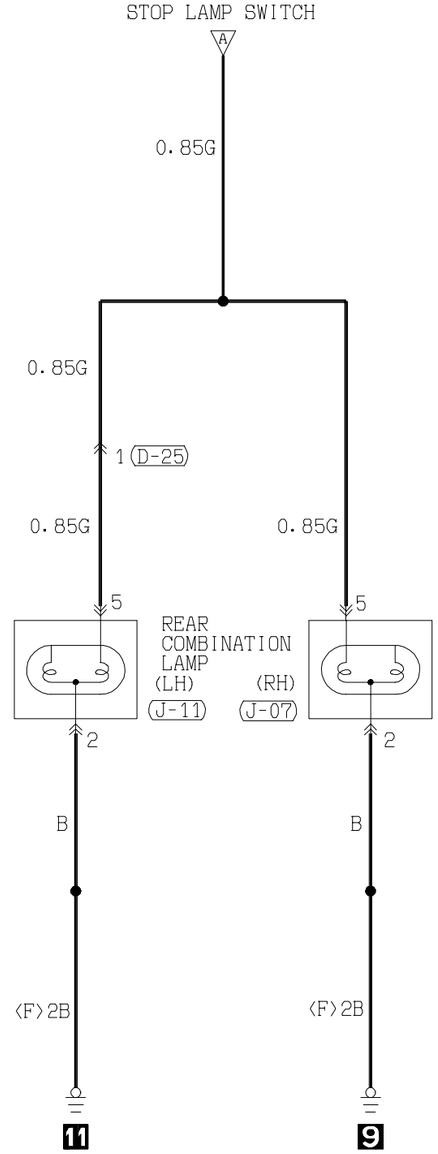








36TH053D AA

36TH053D AB

# STOP LAMP <SPORTS>

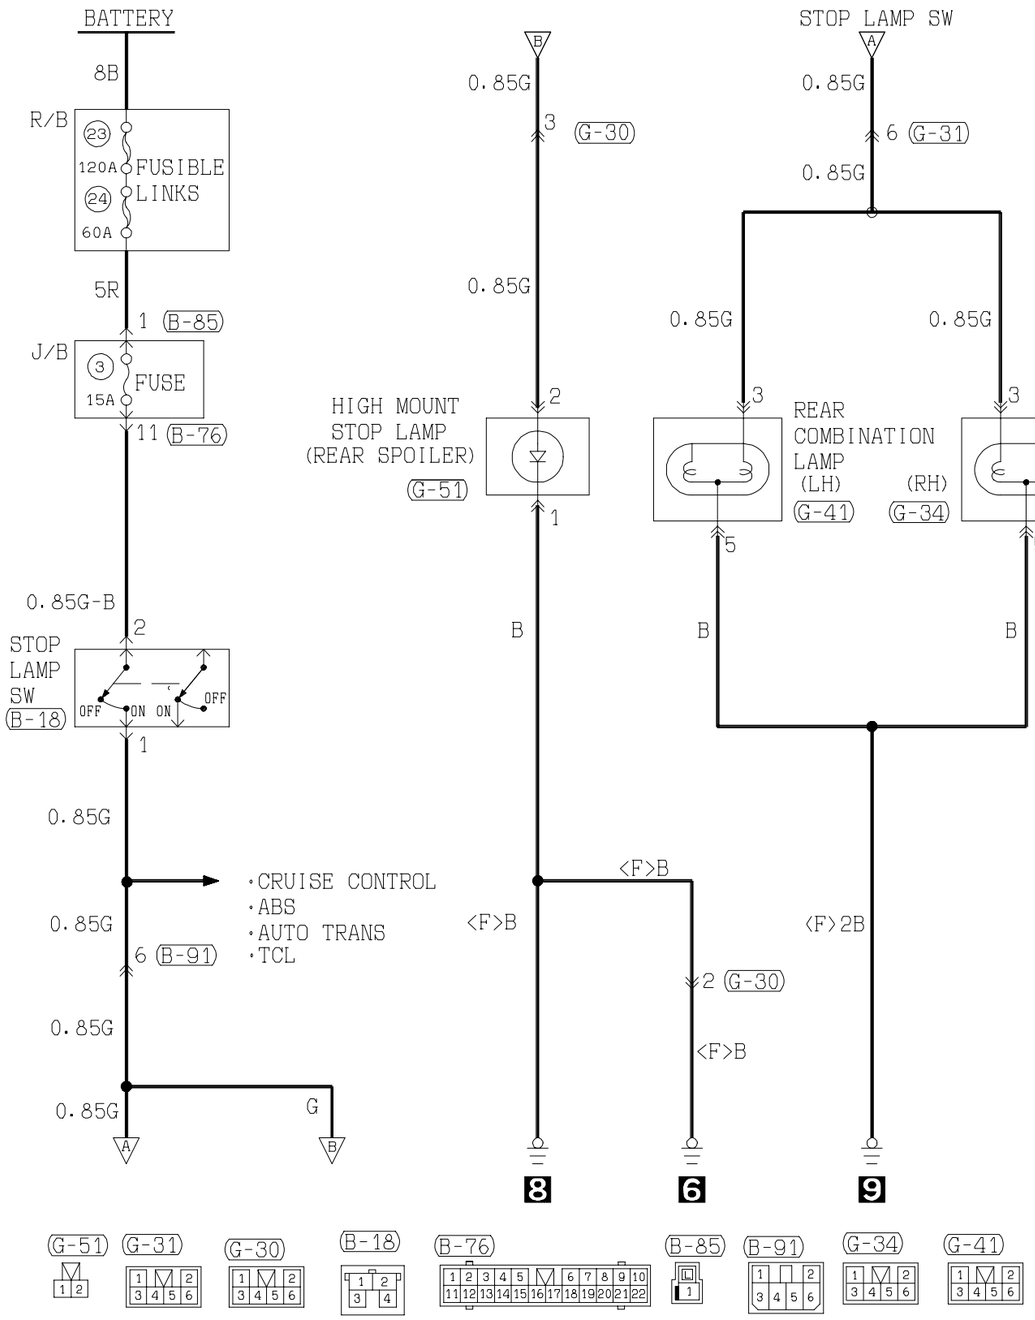


36TJ067D AA

# TURN SIGNAL AND HAZARD LAMP <SEDAN>

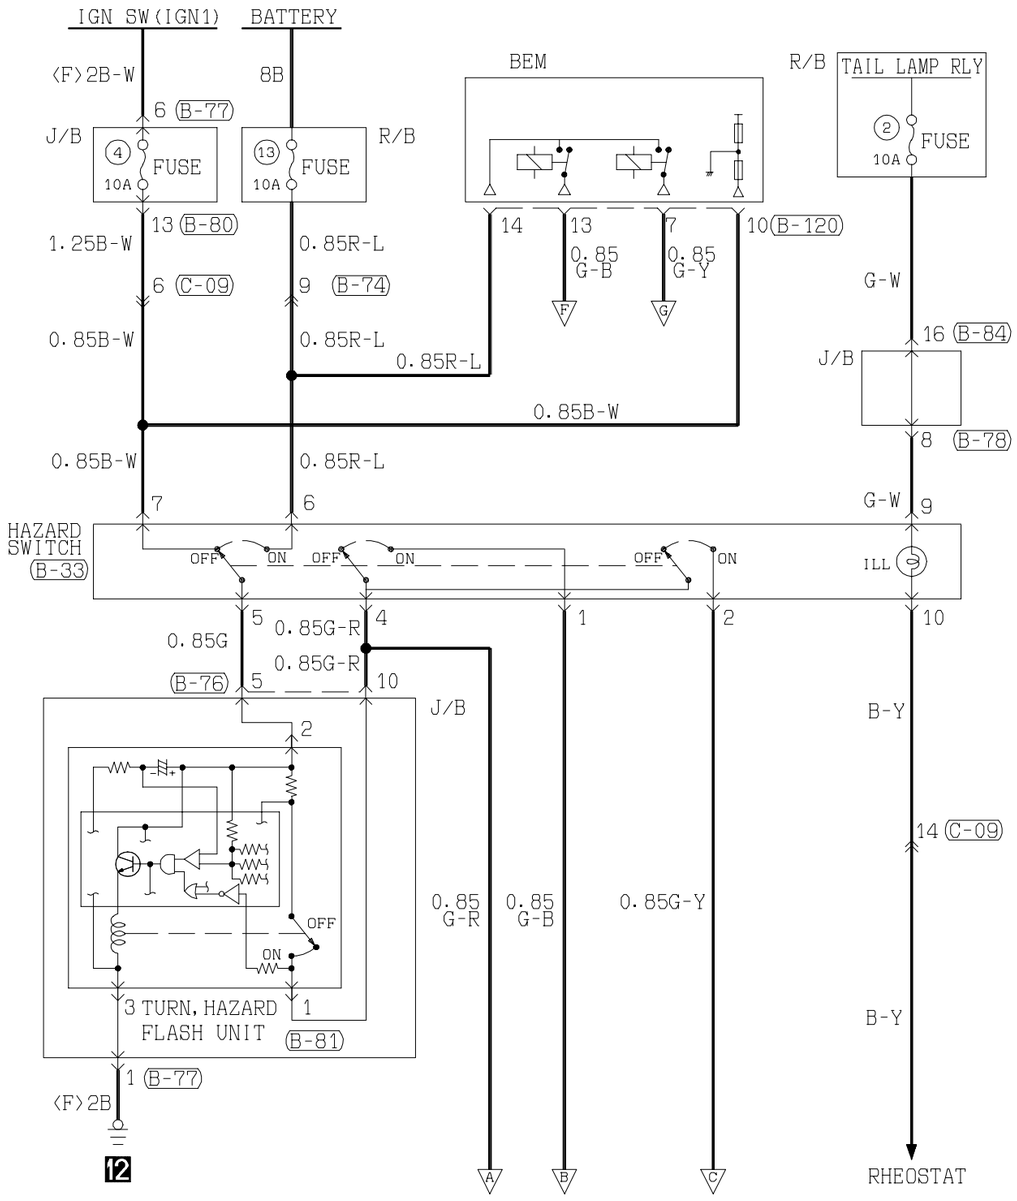


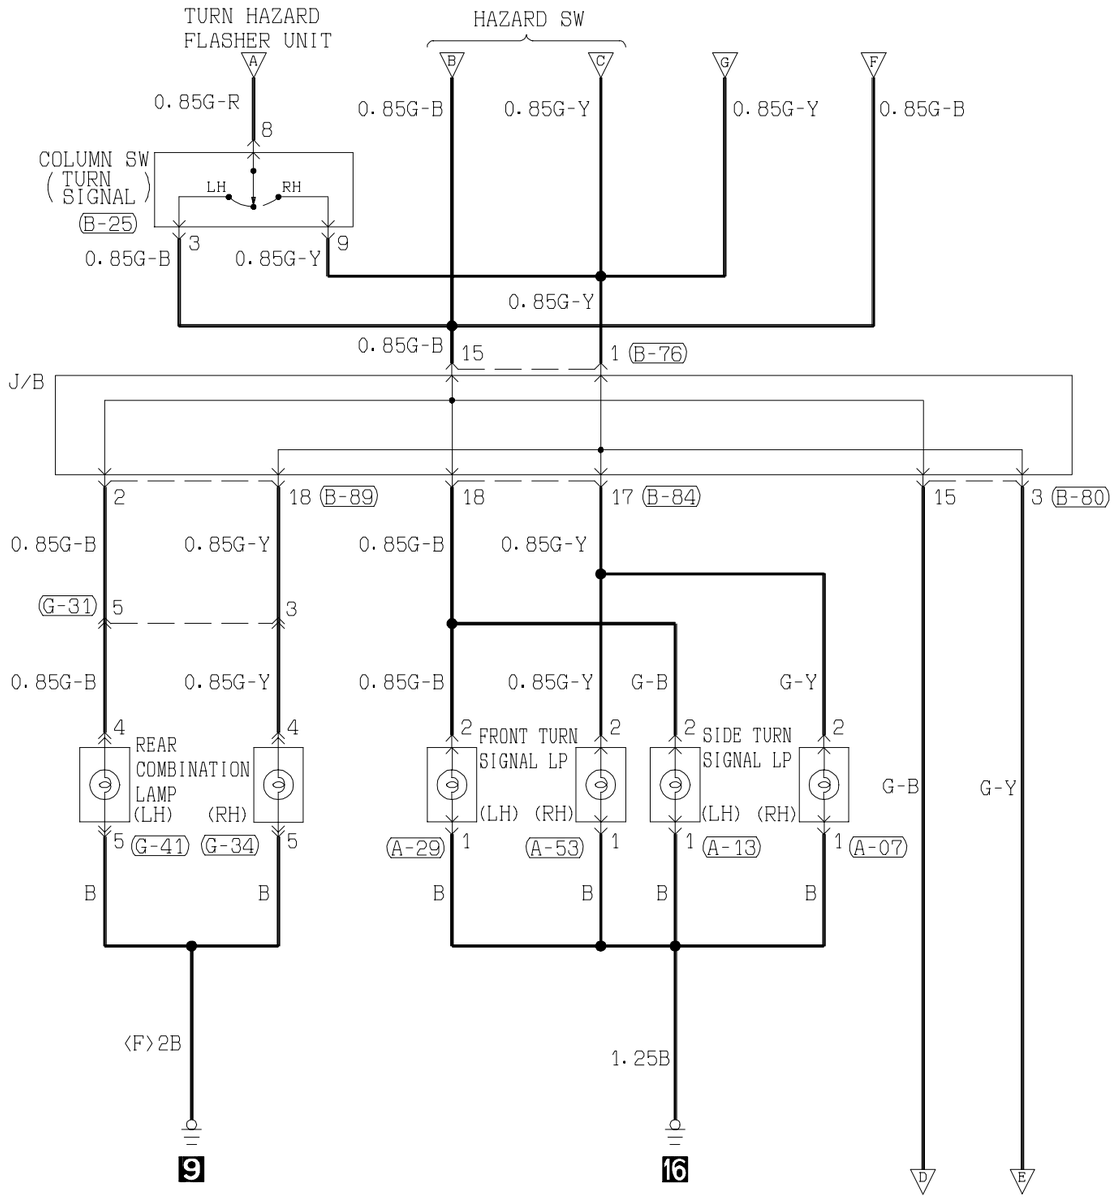


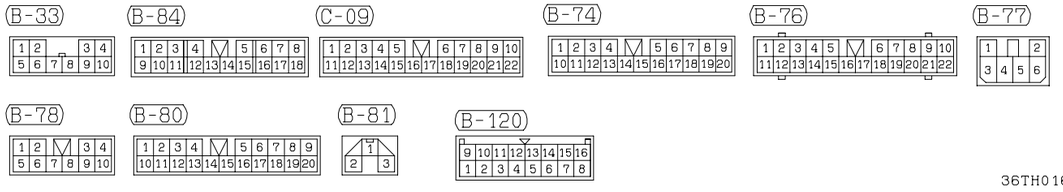


36TH016D AA

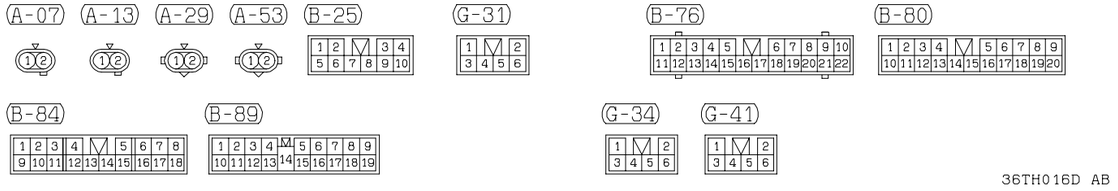


36TH016D AB

# TURN SIGNAL AND HAZARD LAMP <SEDAN> (CONTINUED)

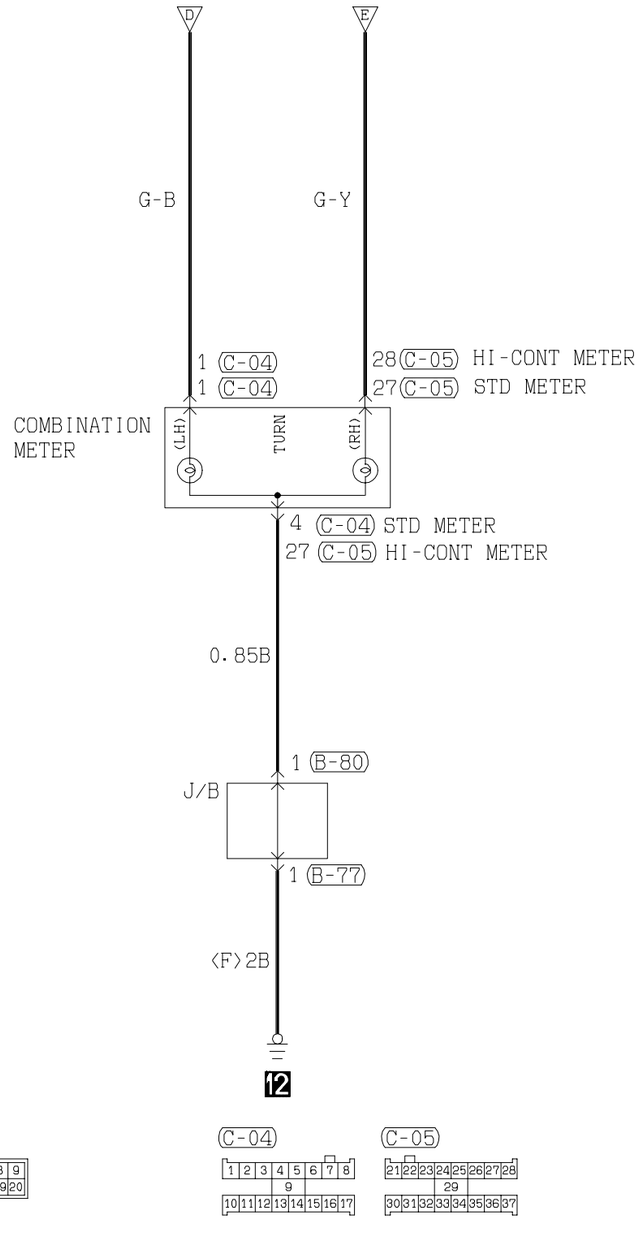




# TURN SIGNAL AND HAZARD LAMP <WAGON>

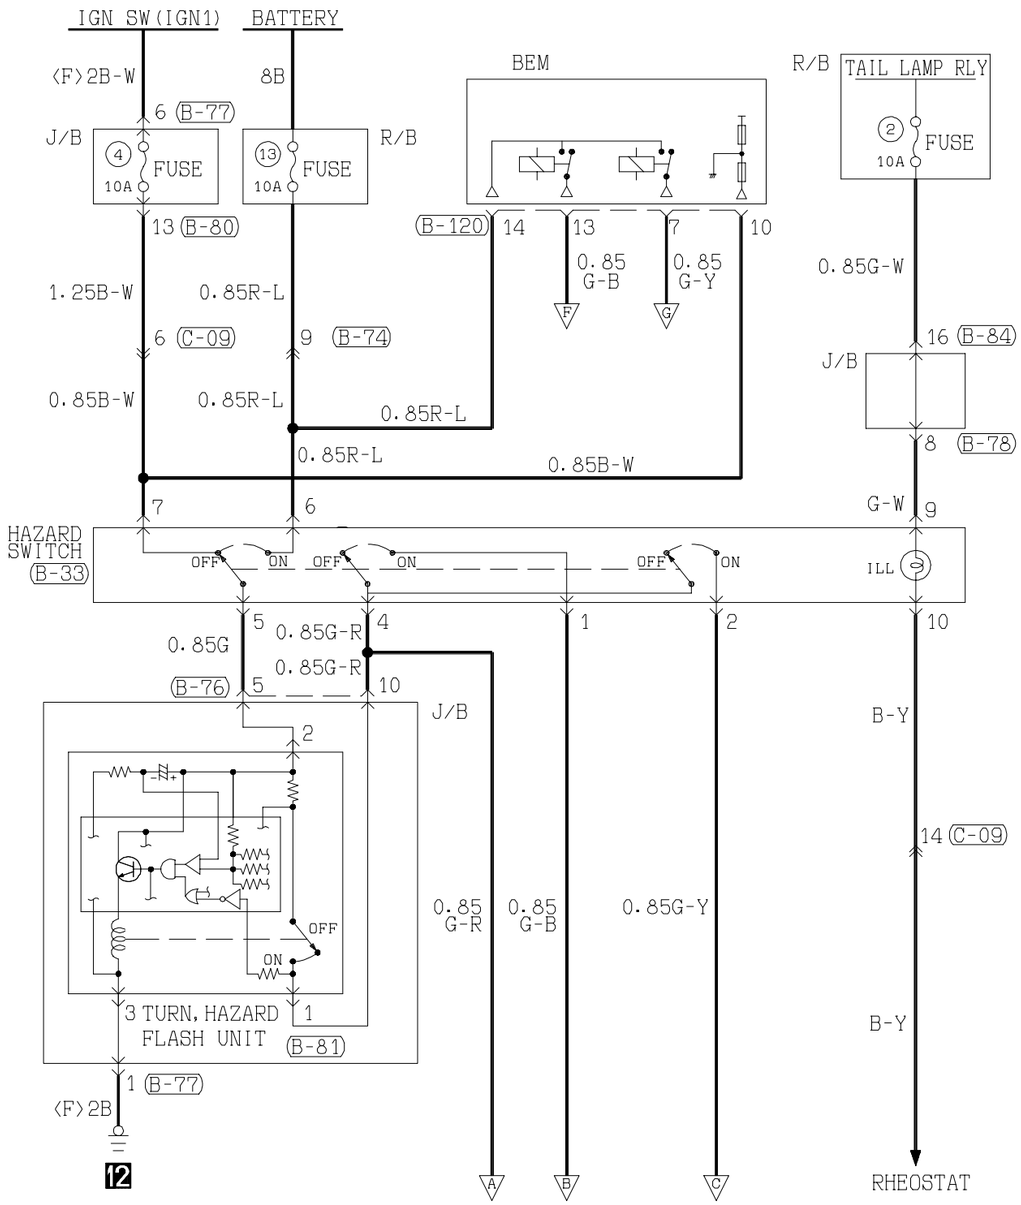


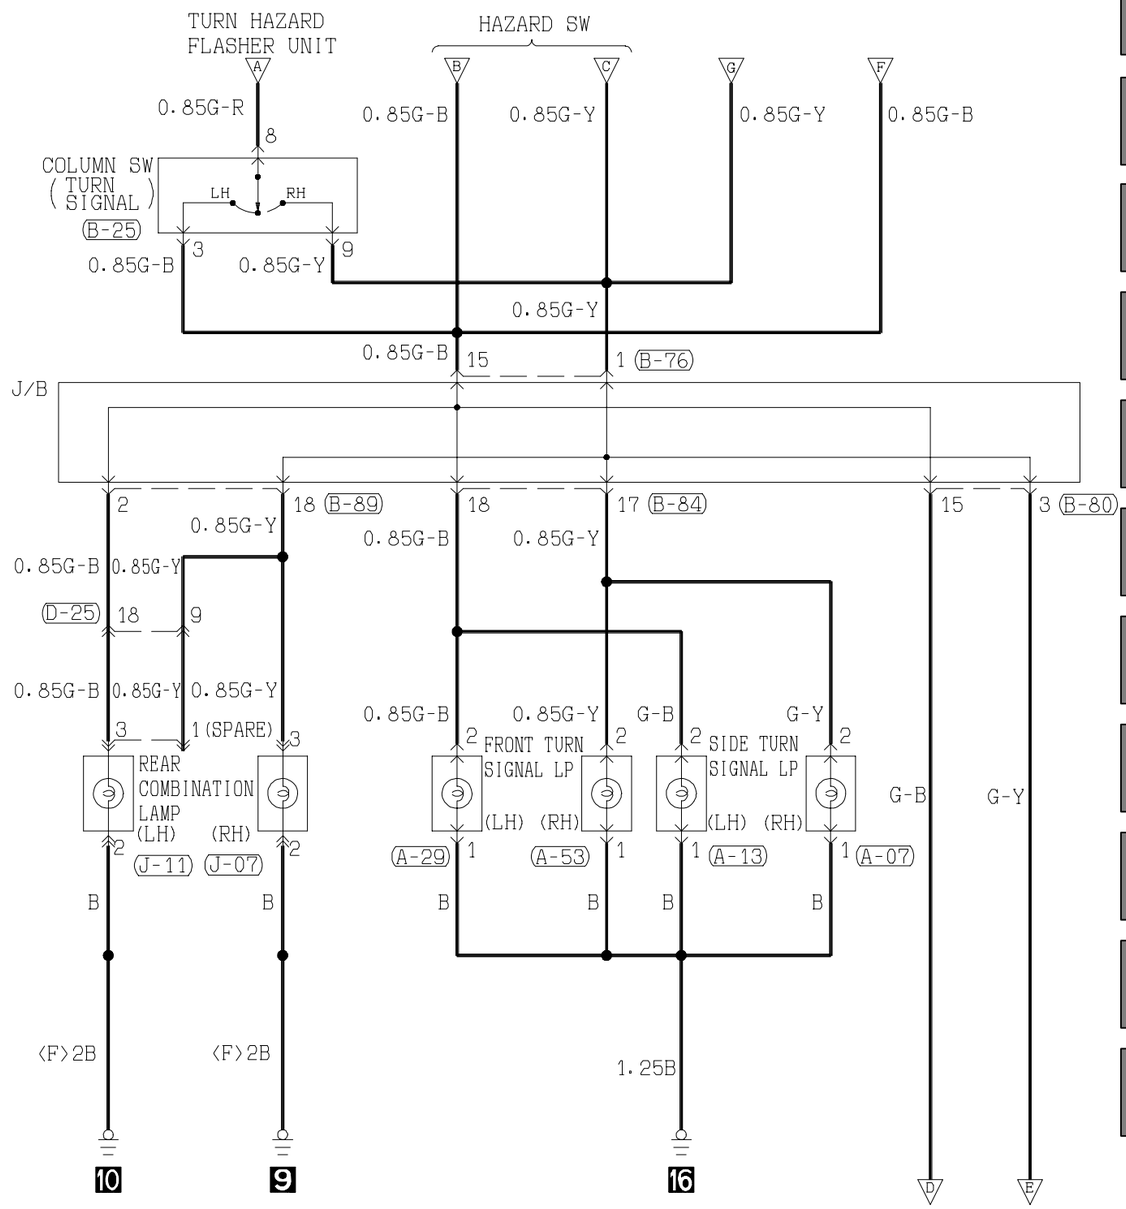


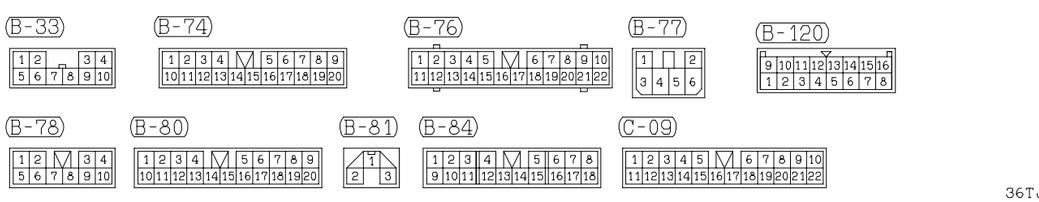


36TJ054D AA

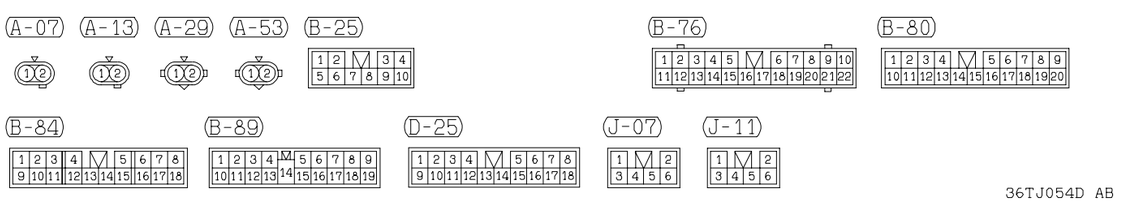


36TJ054D AB

# TURN SIGNAL AND HAZARD LAMP <WAGON> (CONTINUED)

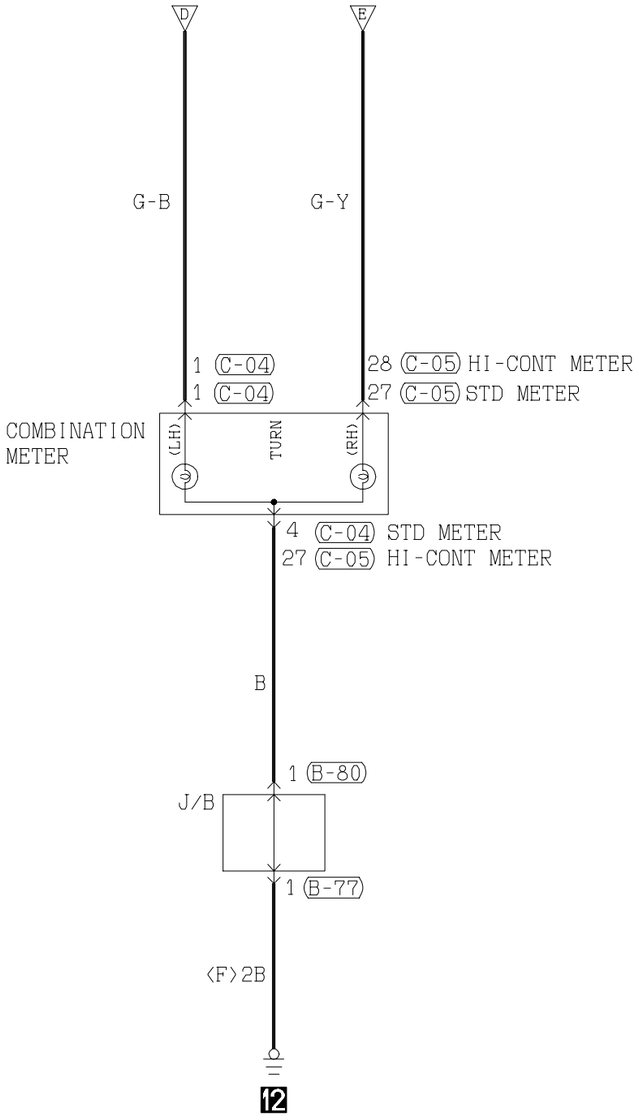

# BACKUP LAMP <SEDAN>

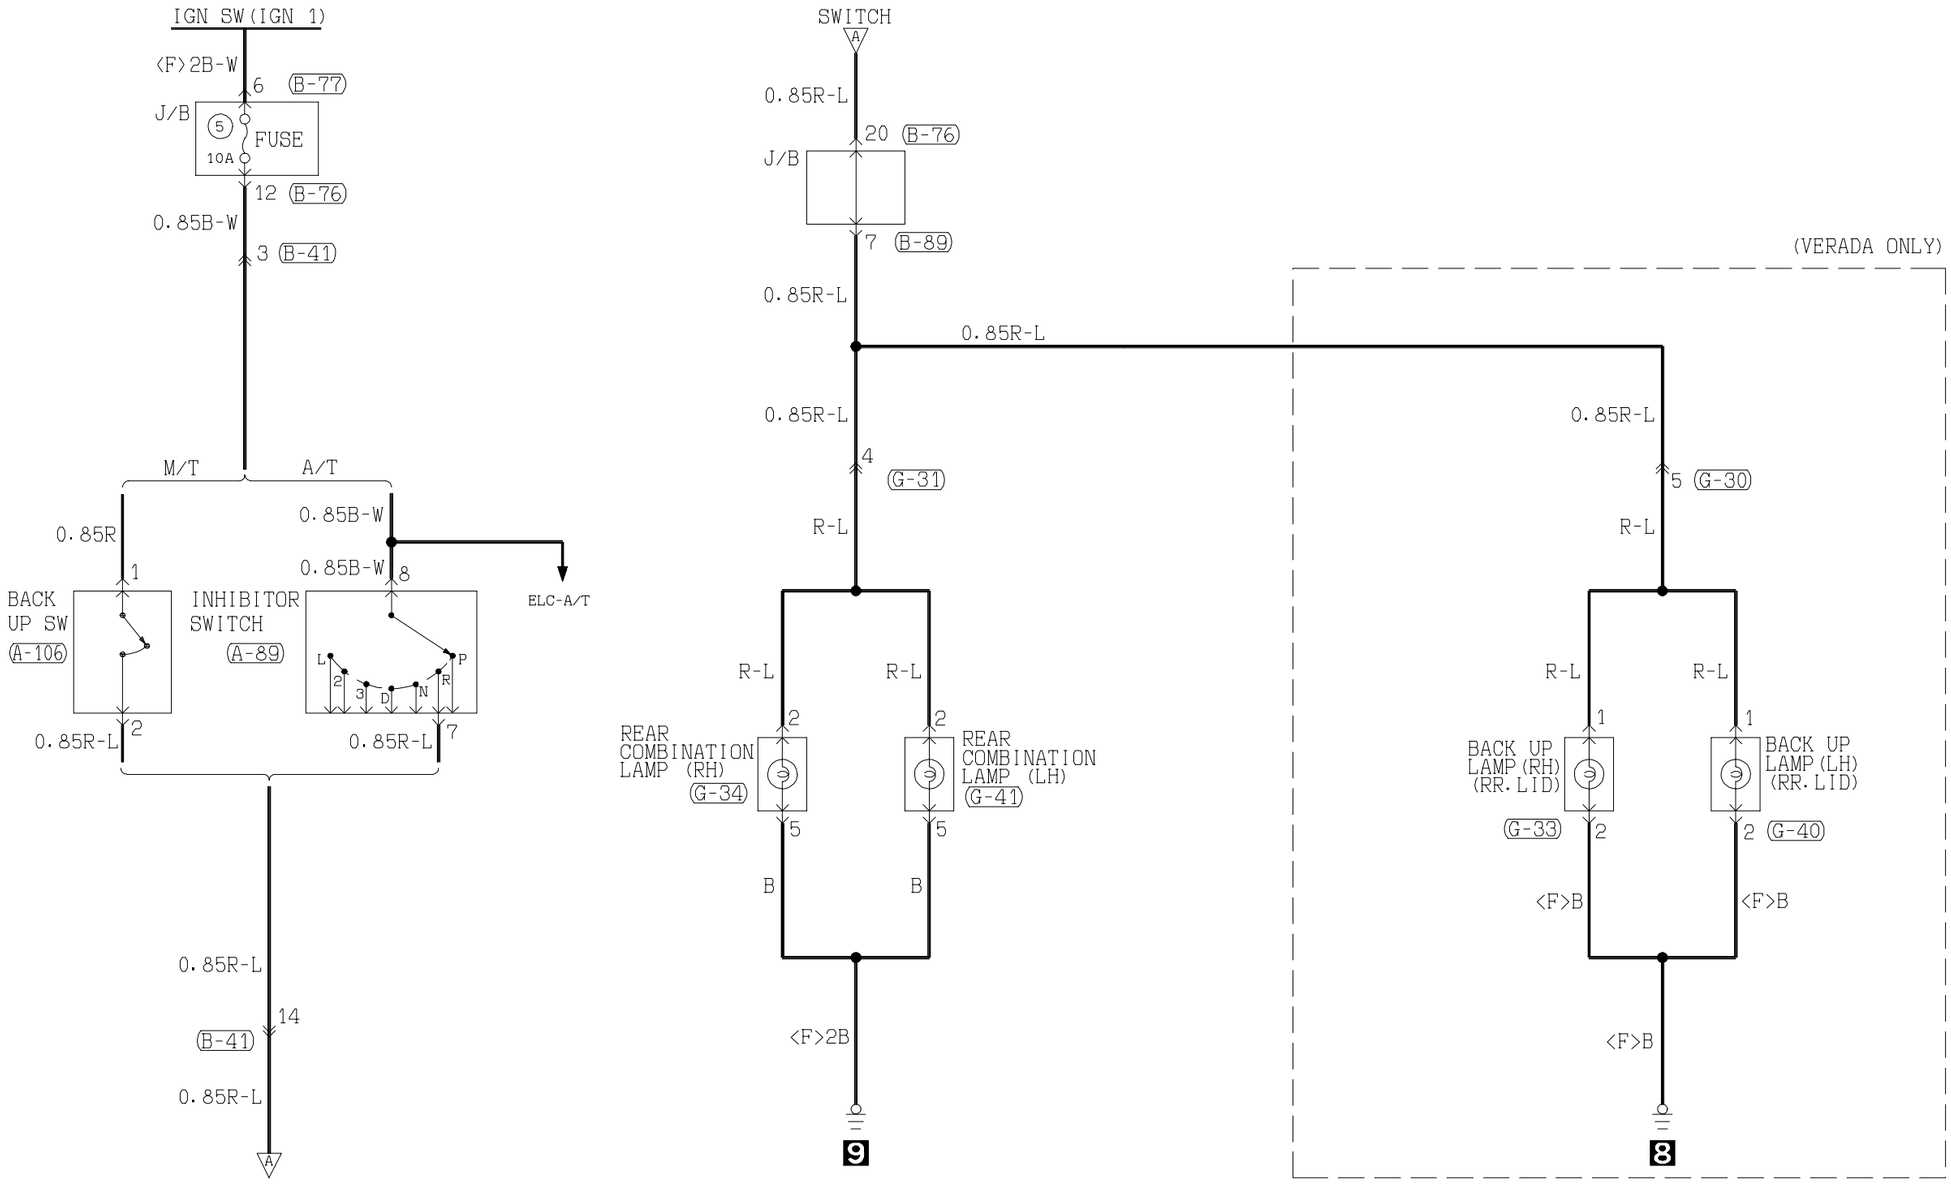


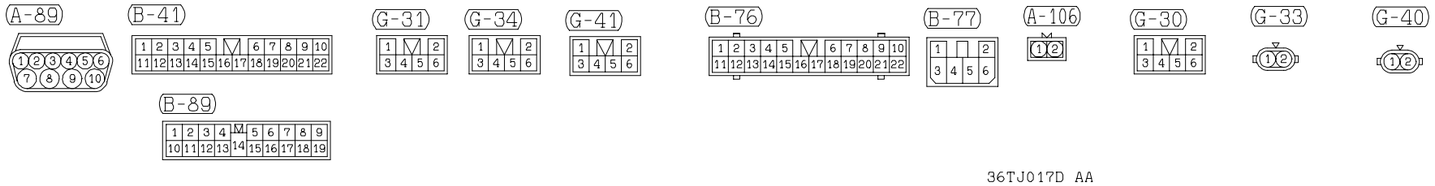


36TJ017D AA

36TJ017D AB

# BACKUP LAMP <WAGON>

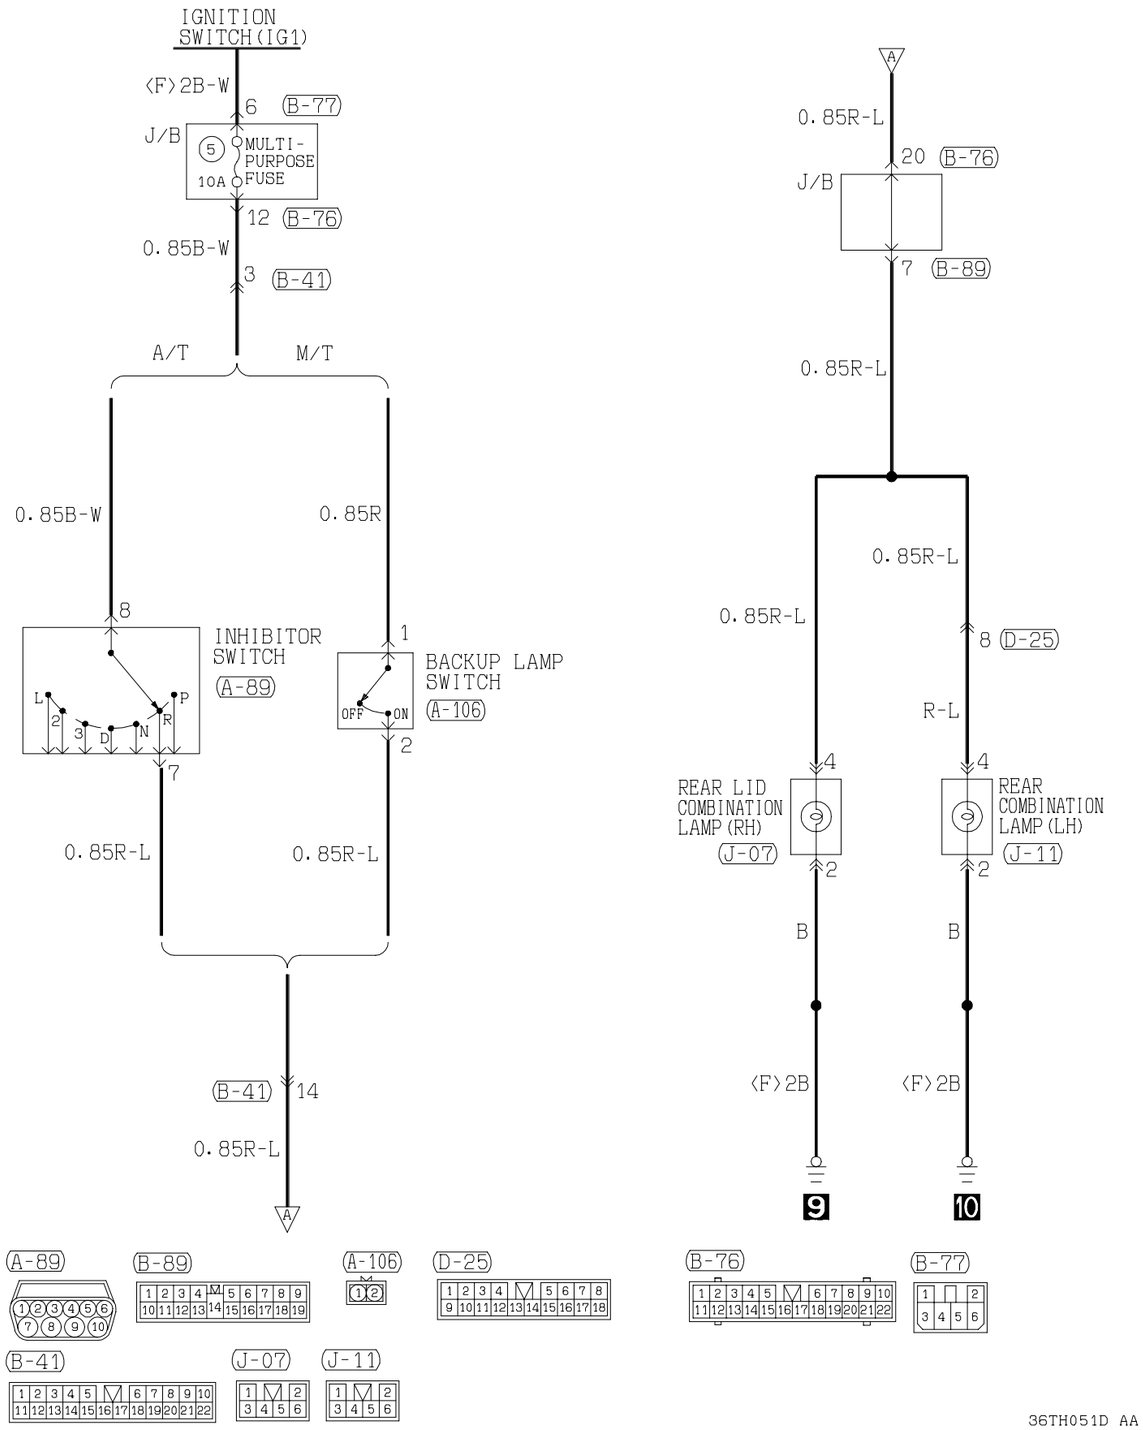


36TH051D AA

# HORN

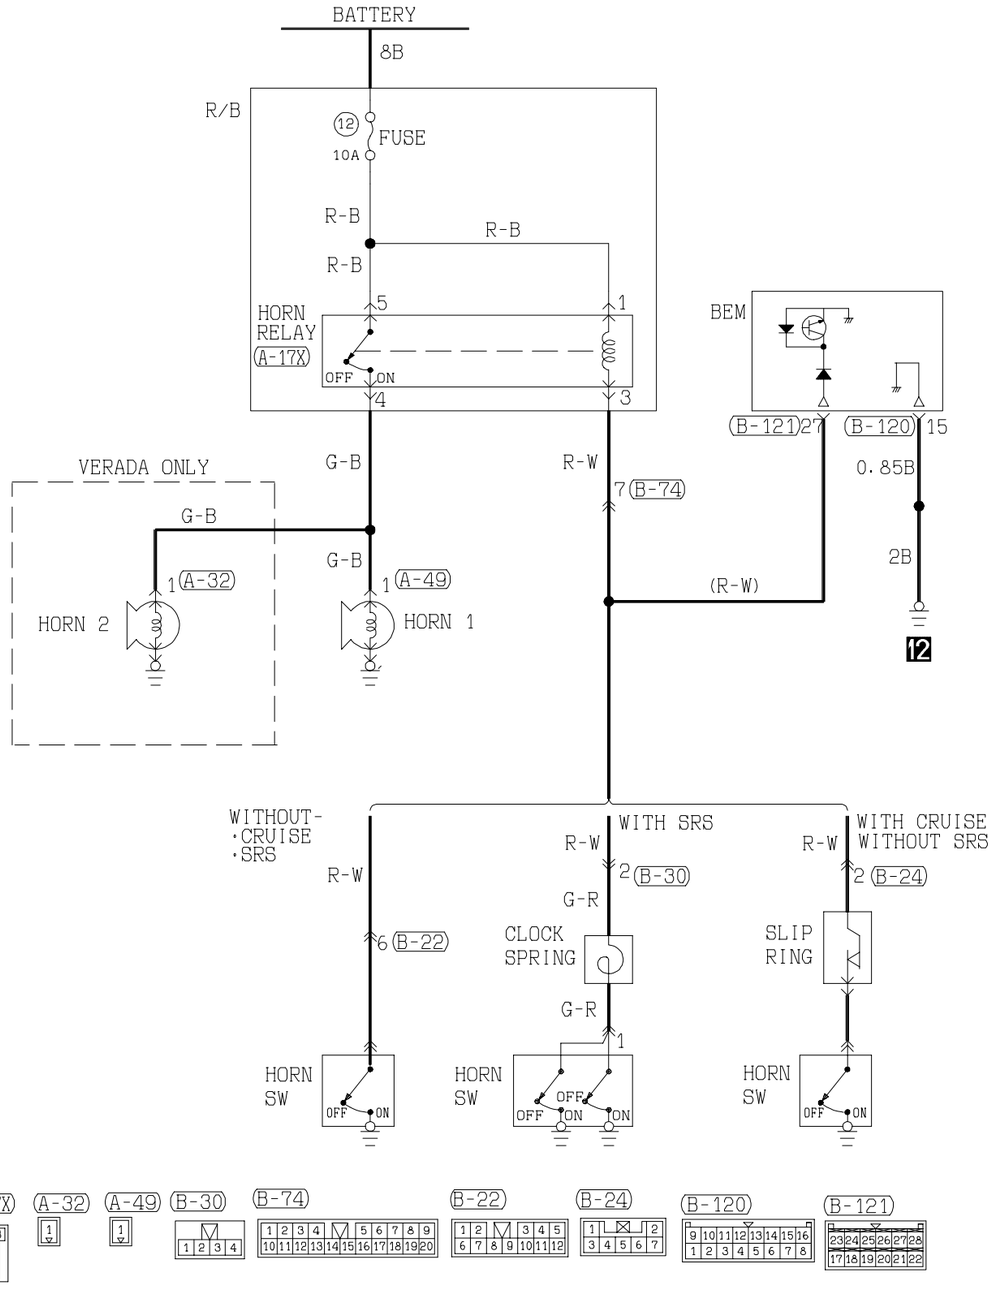





36TJ018D AA

XXXXXXXXX

# METER <Standard Meter>

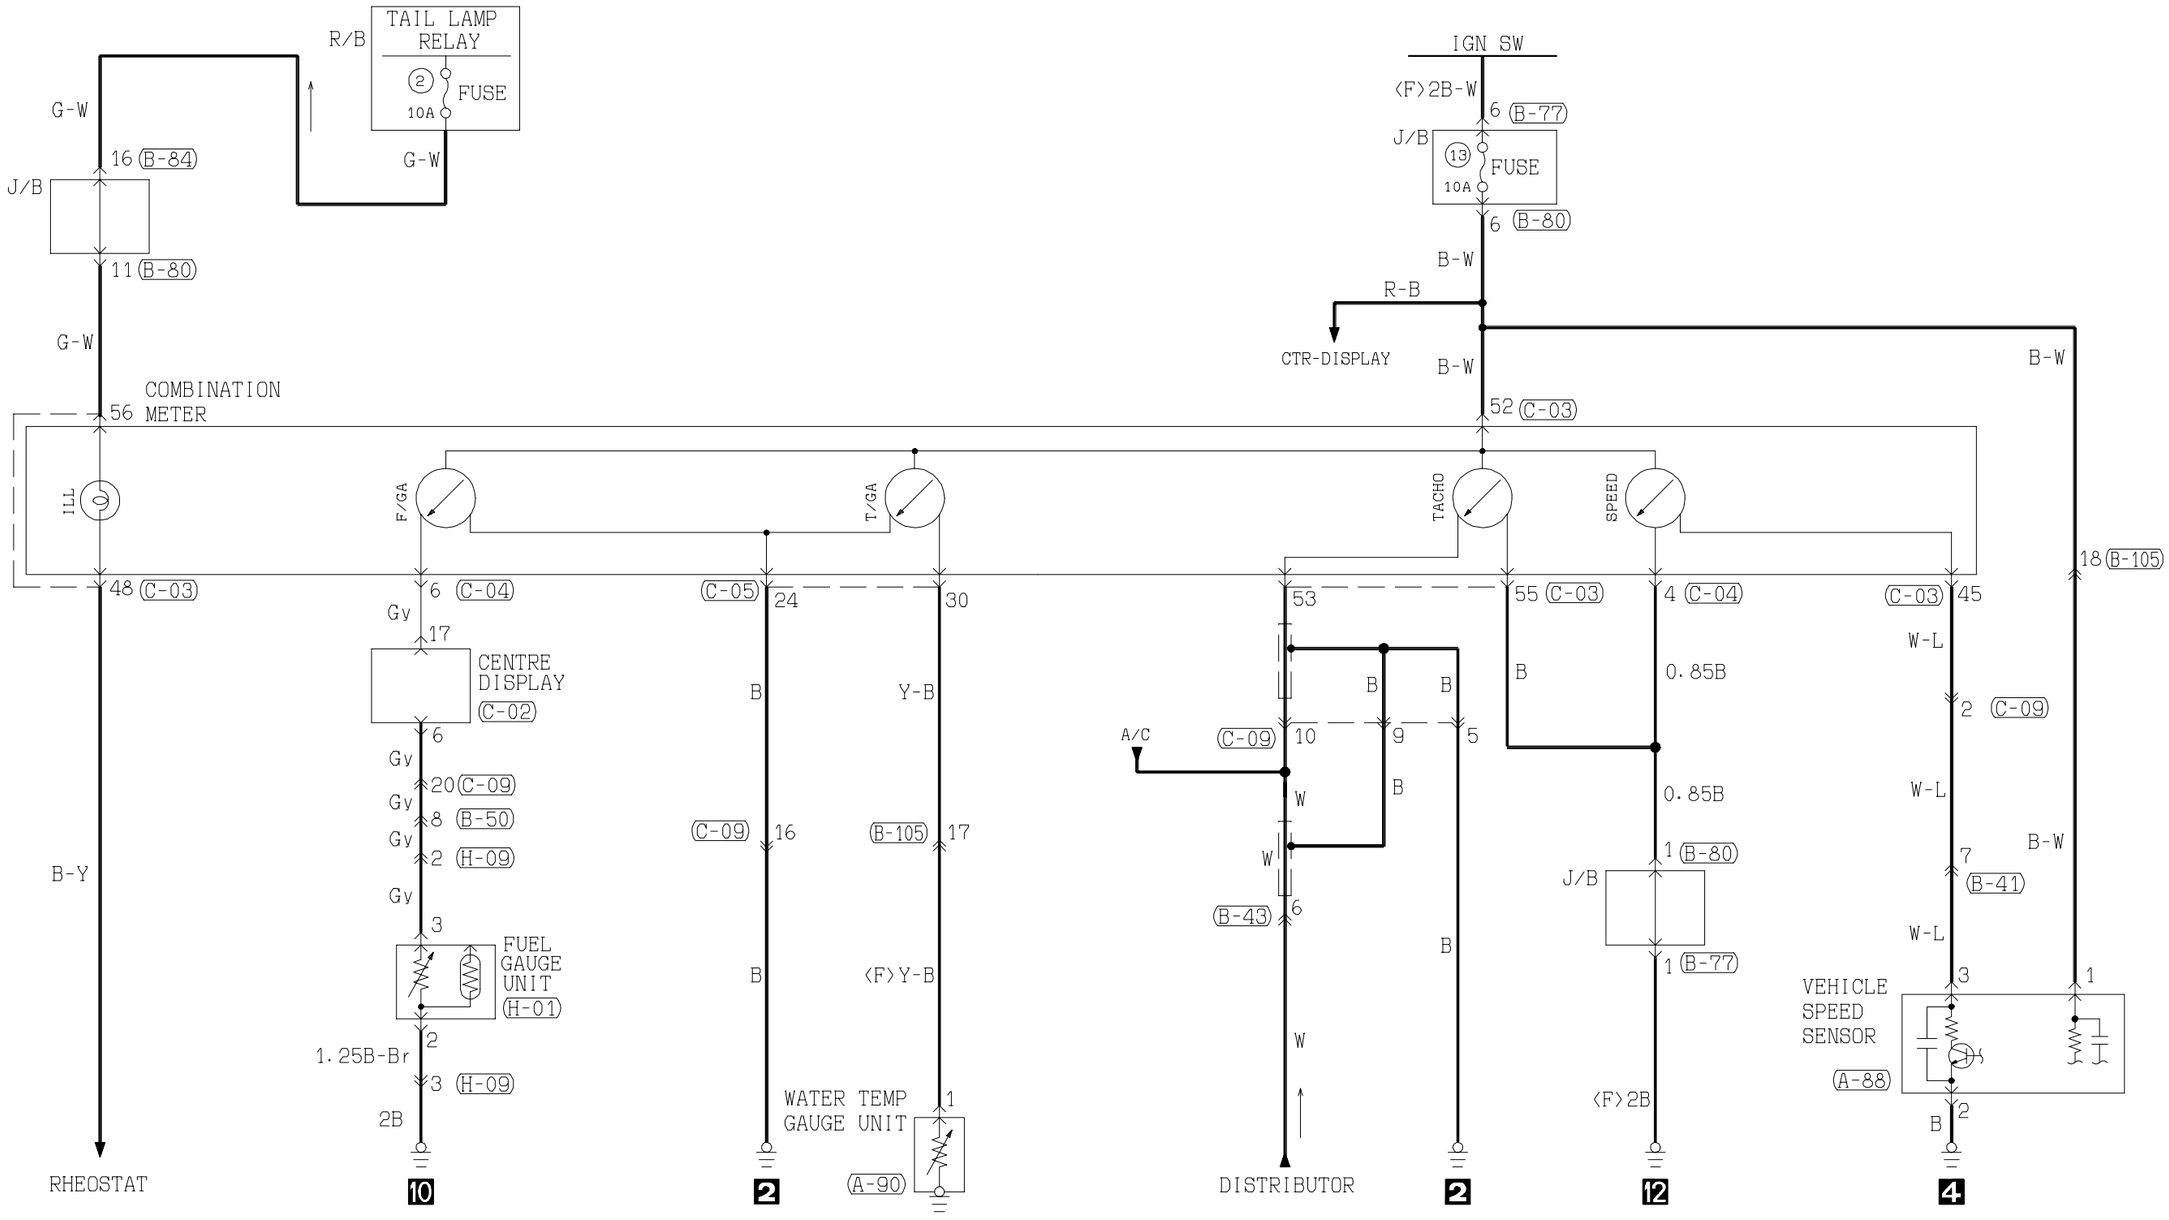


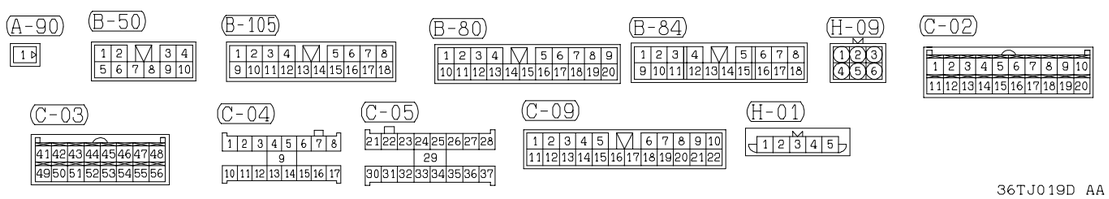


36TJ019D AA

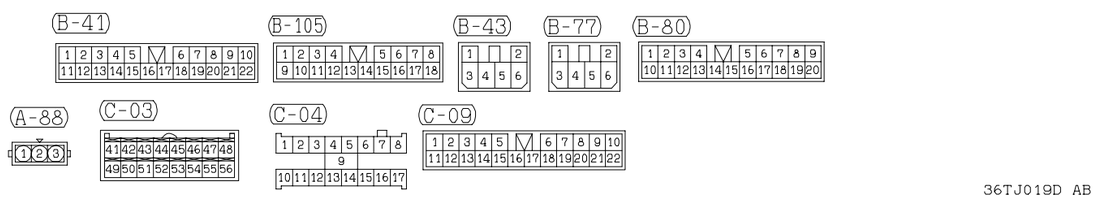


36TJ019D AB

# METER <High Contrast Meter>

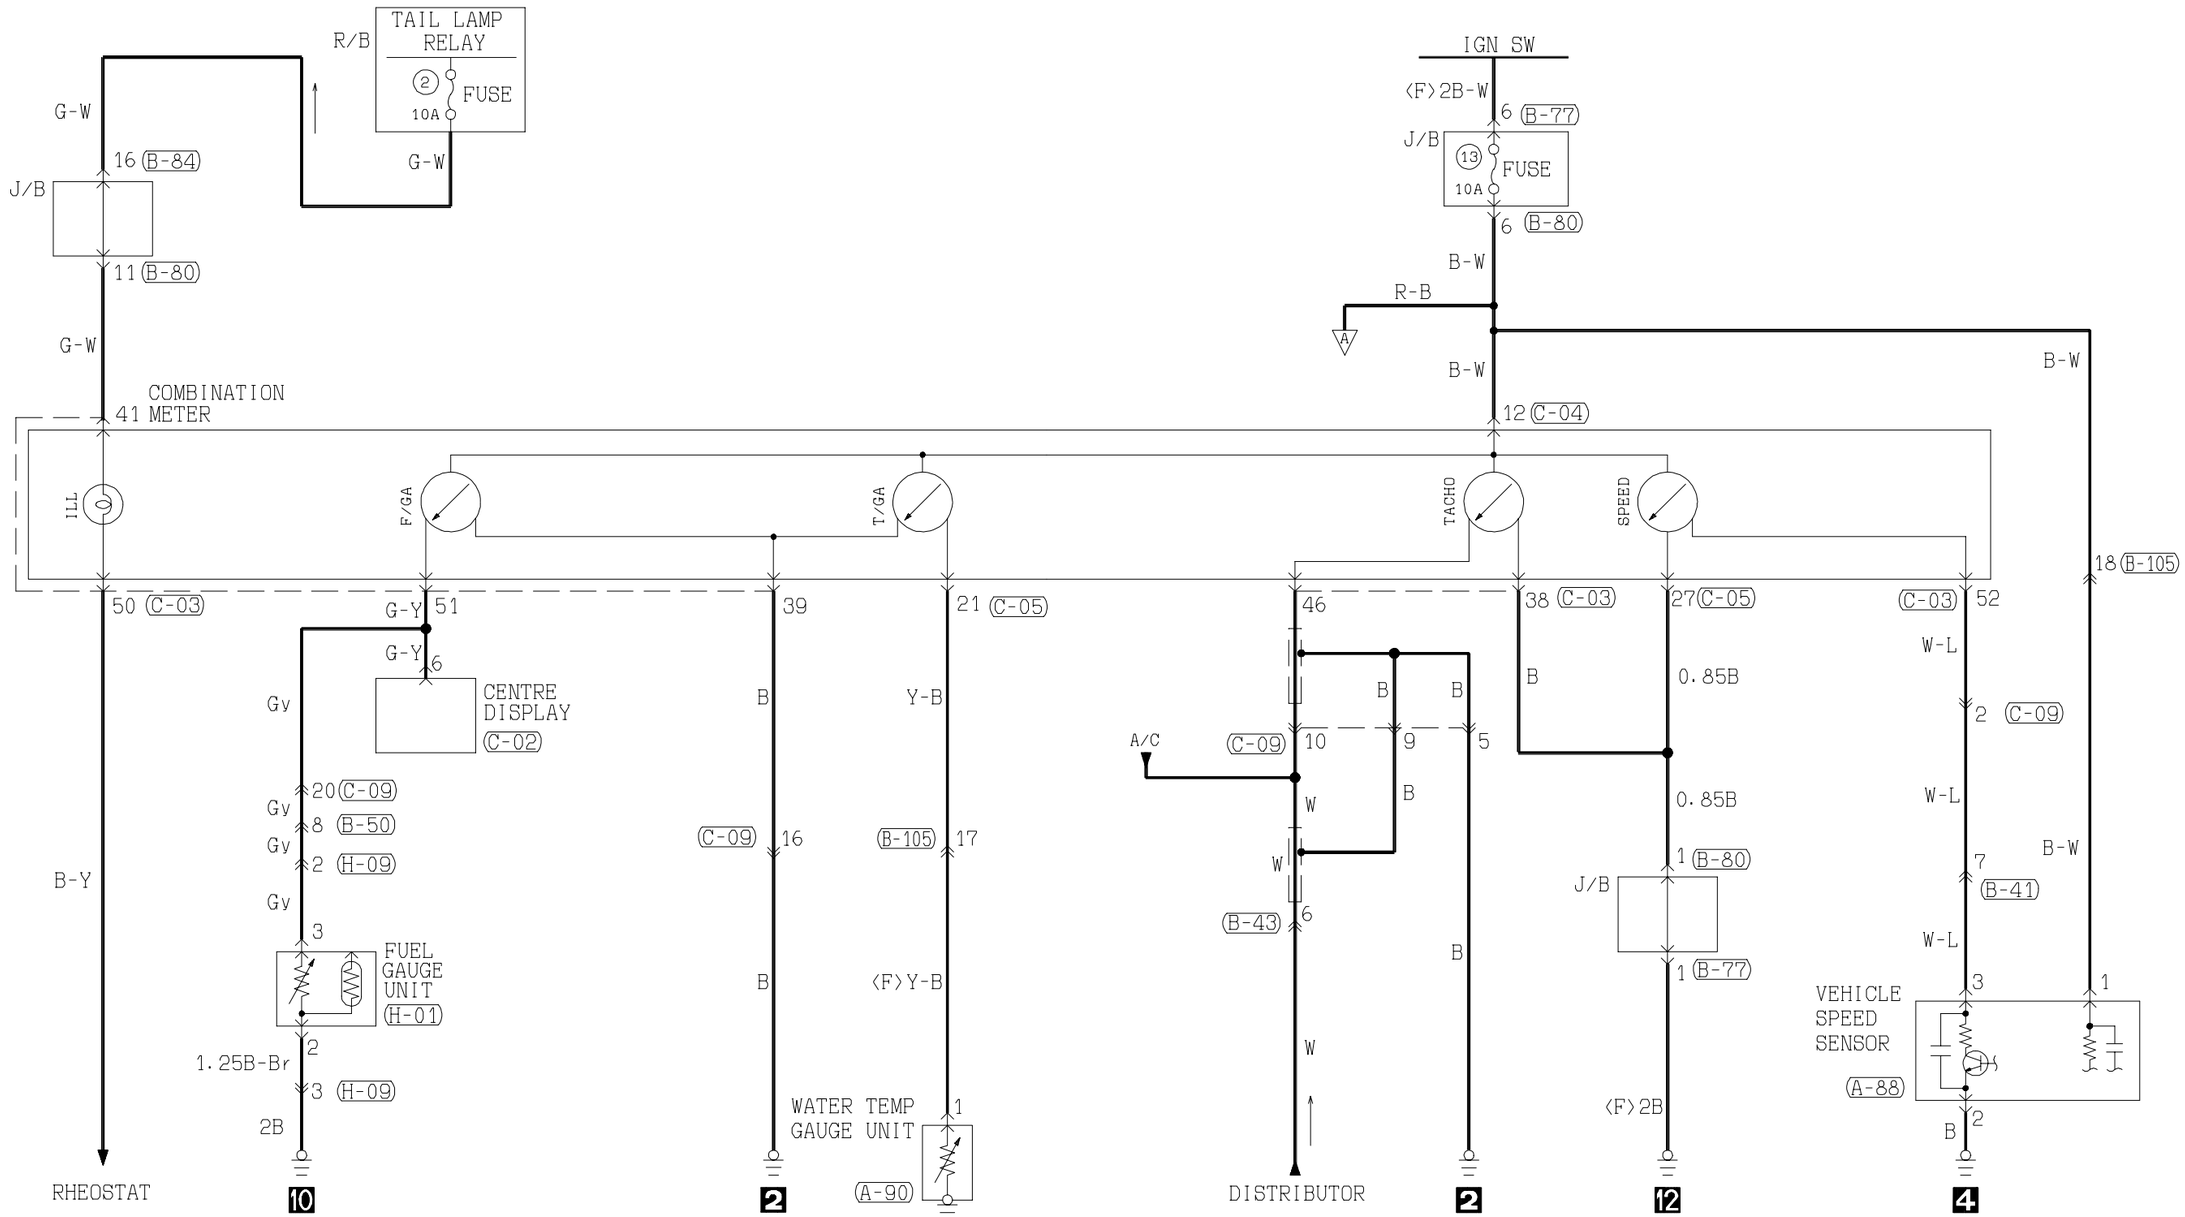


36TJ020D AA

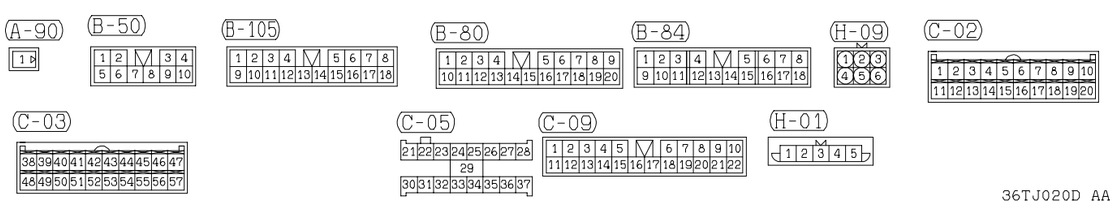


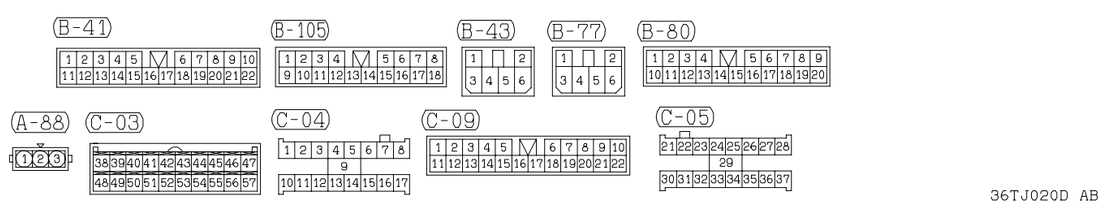


36TJ020D AB

# METER <High Contrast Meter> (CONTINUED)

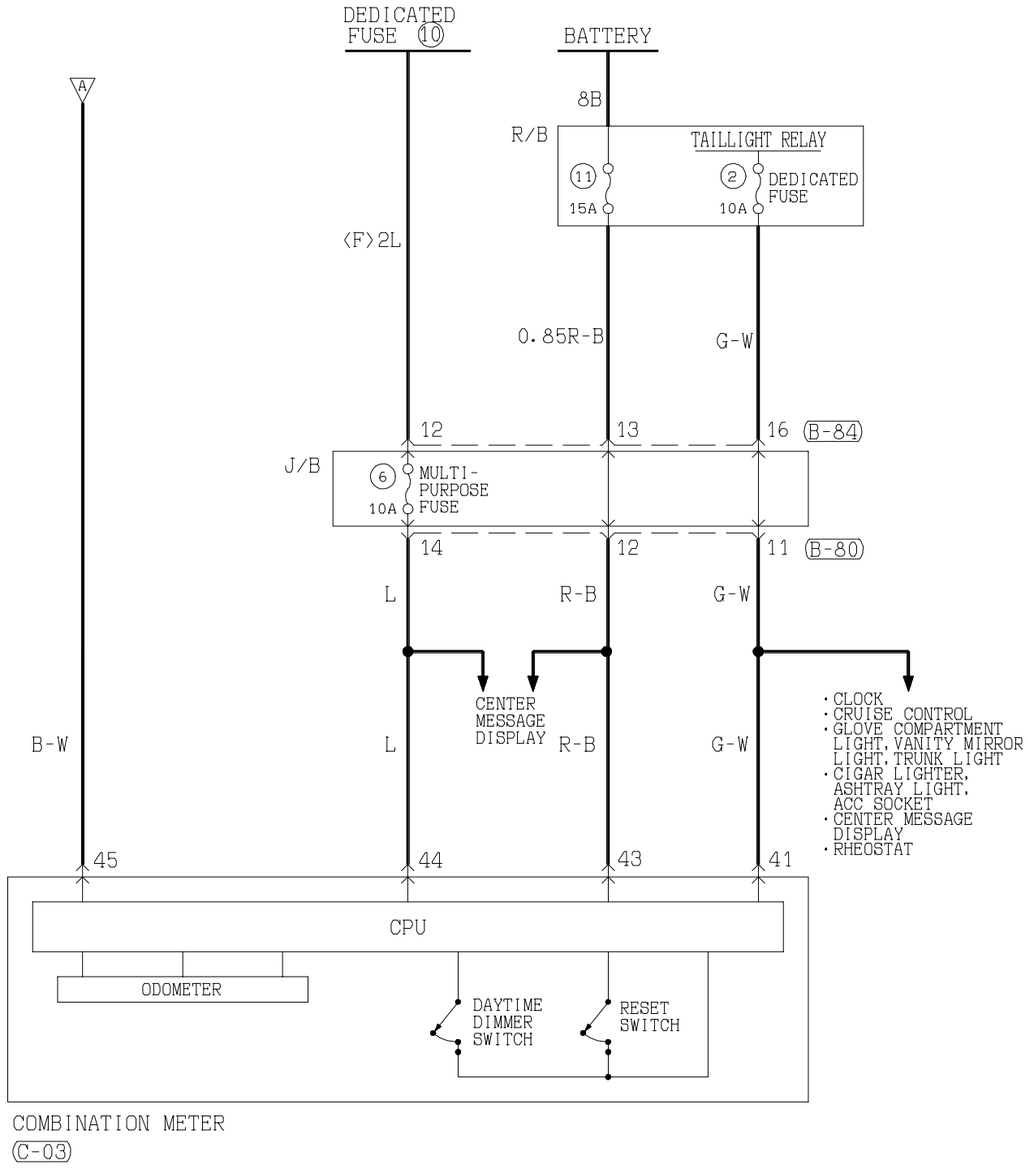


C-03




B-80




B-84



# CENTRE MESSAGE DISPLAY

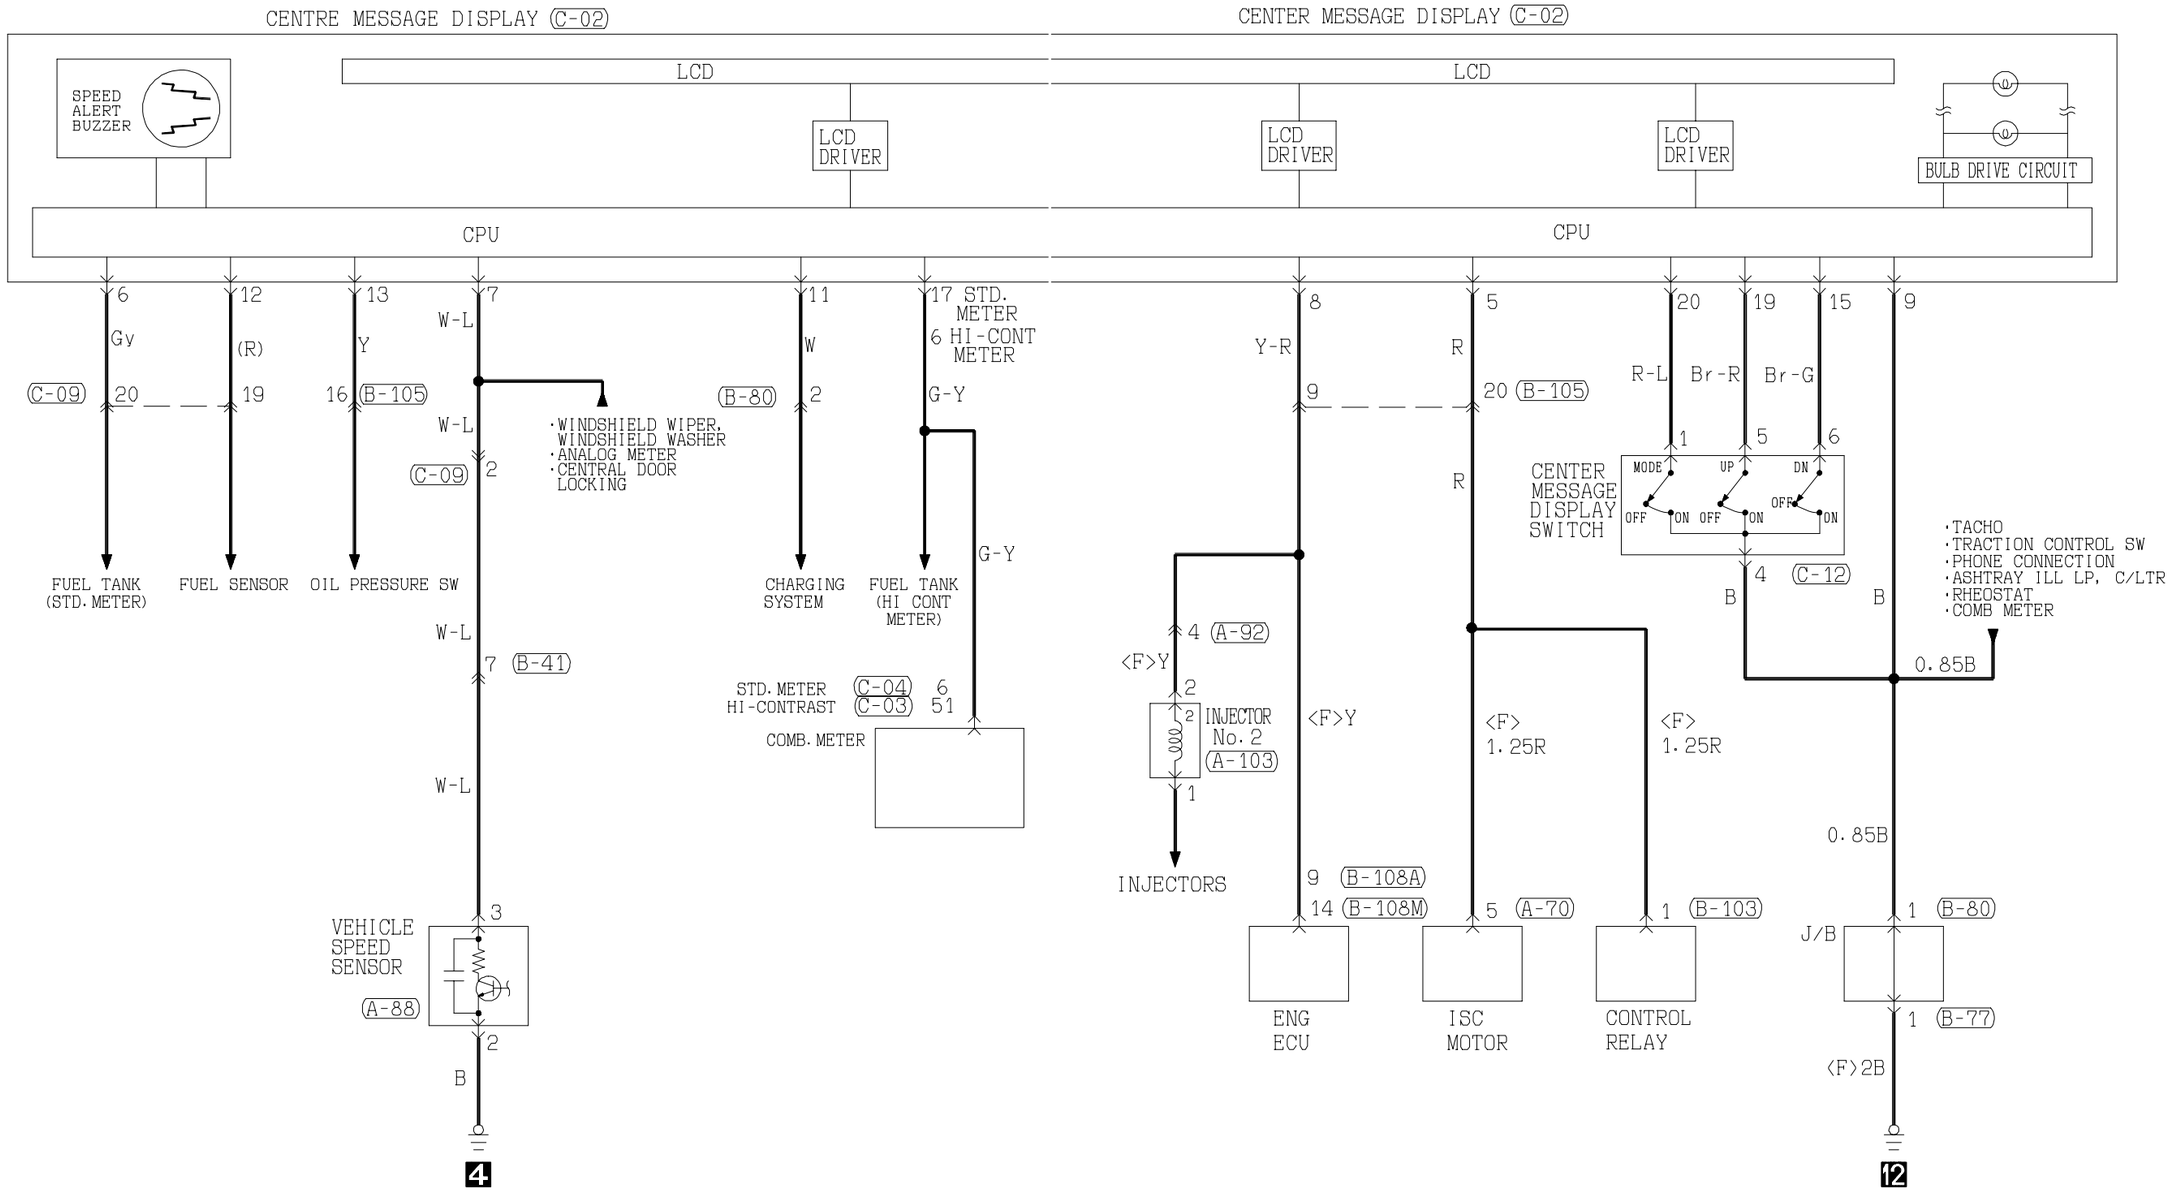


(A-88) (C-02) (B-41) (C-09) (C-04) (C-03)

(B-80) (B-105)

36TJ021D BA

(B-77) (B-80) (C-02) (C-12) (B-103) (A-70) (A-92)

(B-105) (A-103) (B-108M) (B-108A)

36TJ021D BB

# CENTRE MESSAGE DISPLAY (CONTINUED)

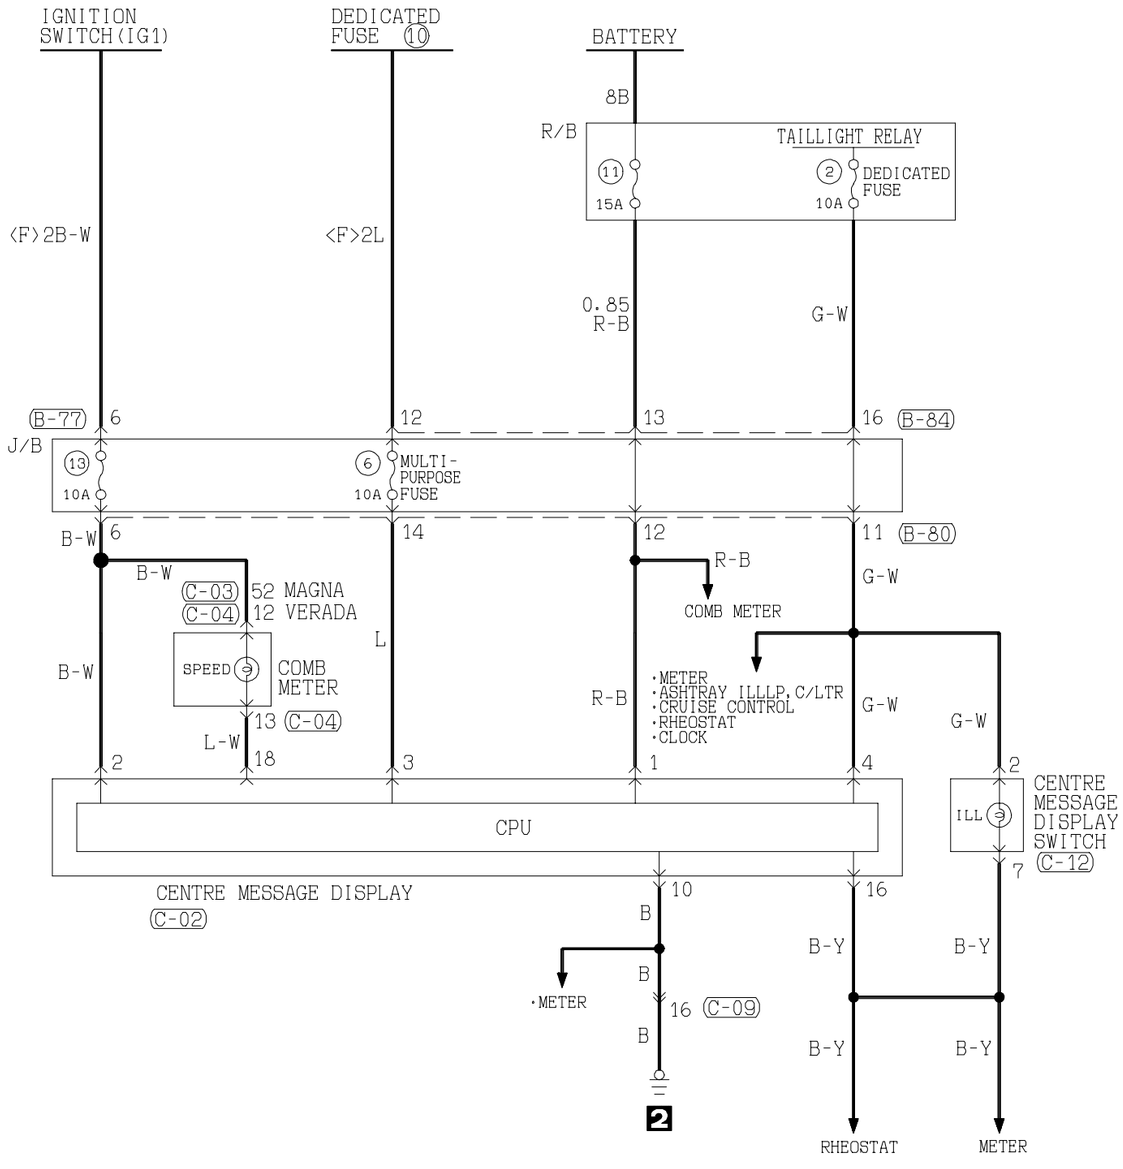


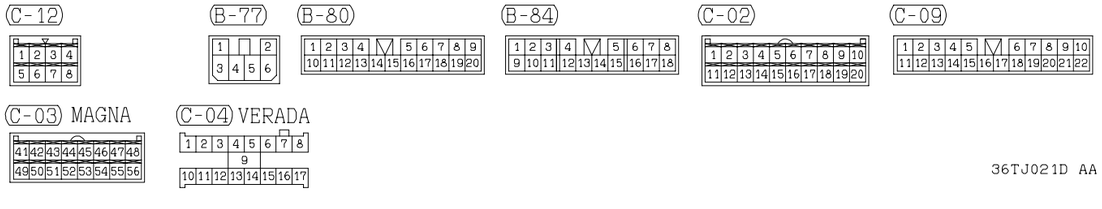


36TJ021D AA

# OIL PRESSURE WARNING LAMP

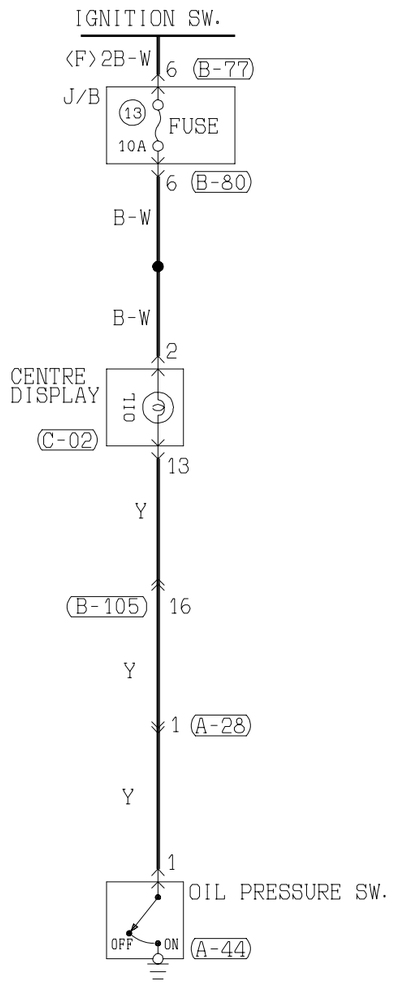





36TJ022D AA

# FUEL WARNING LAMP

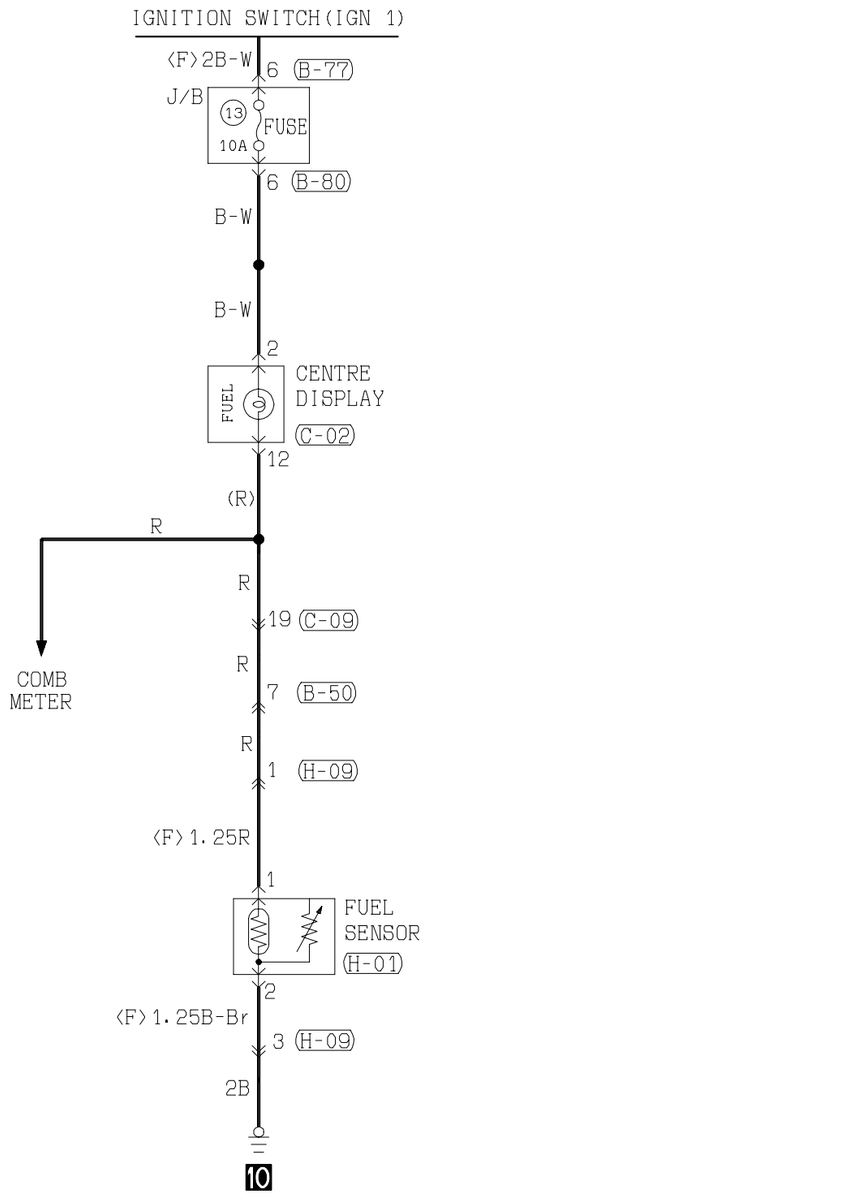





36TH023D AA

# BRAKE WARNING LAMP

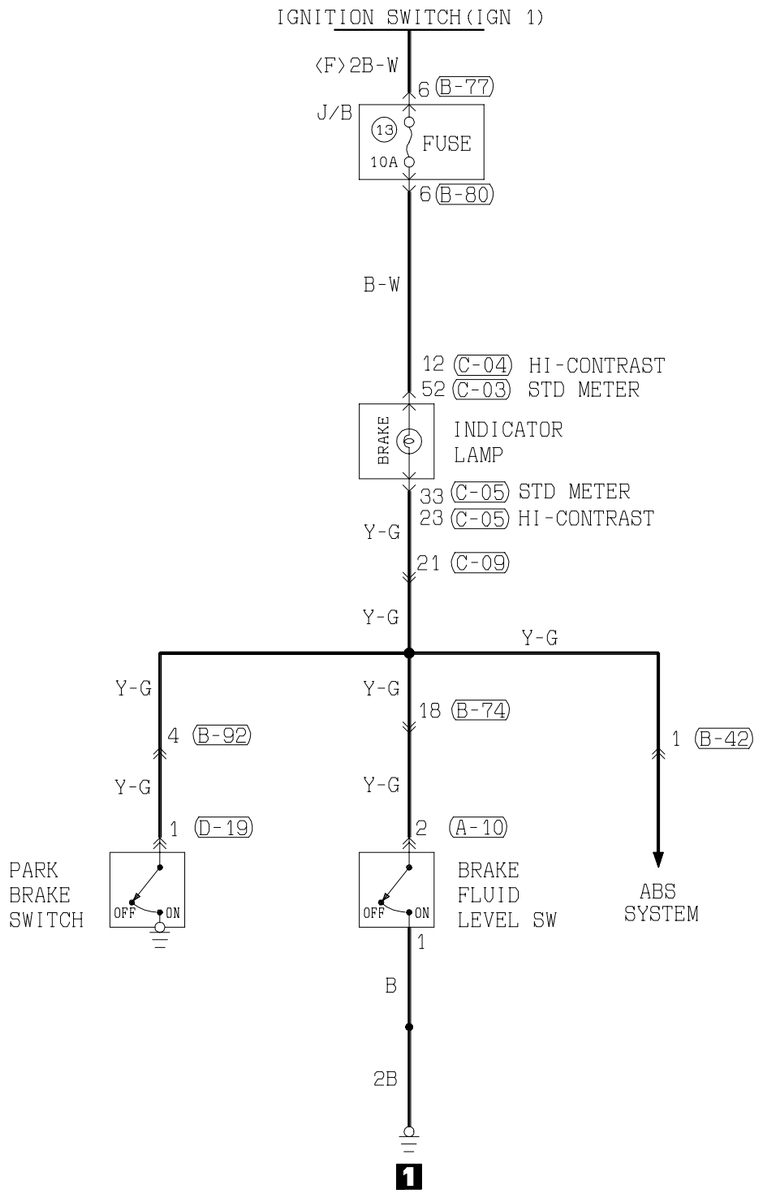


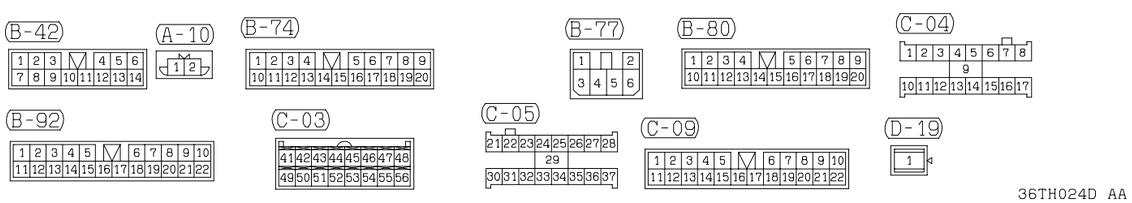


36TH024D AA

# SEAT BELT WARNING LAMP

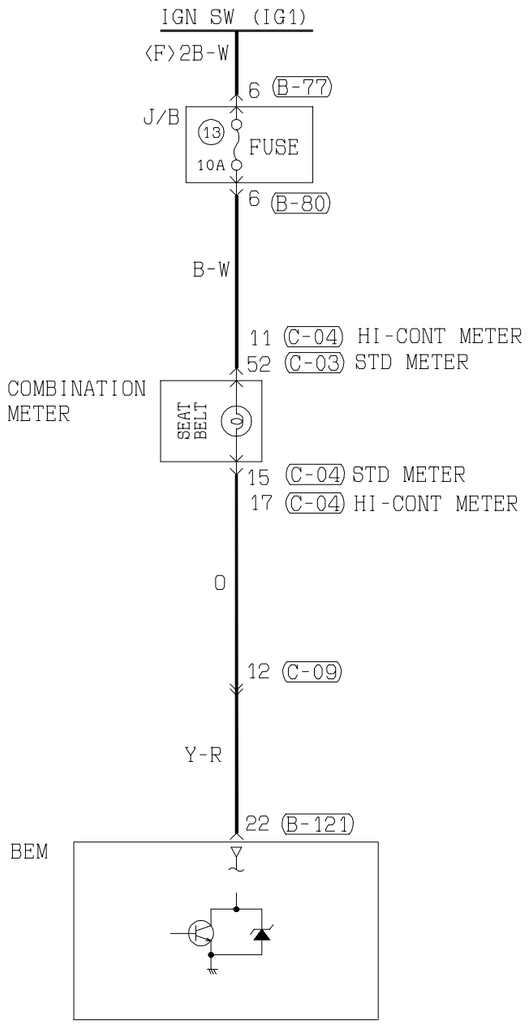




# DOOR AJAR WARNING LAMP

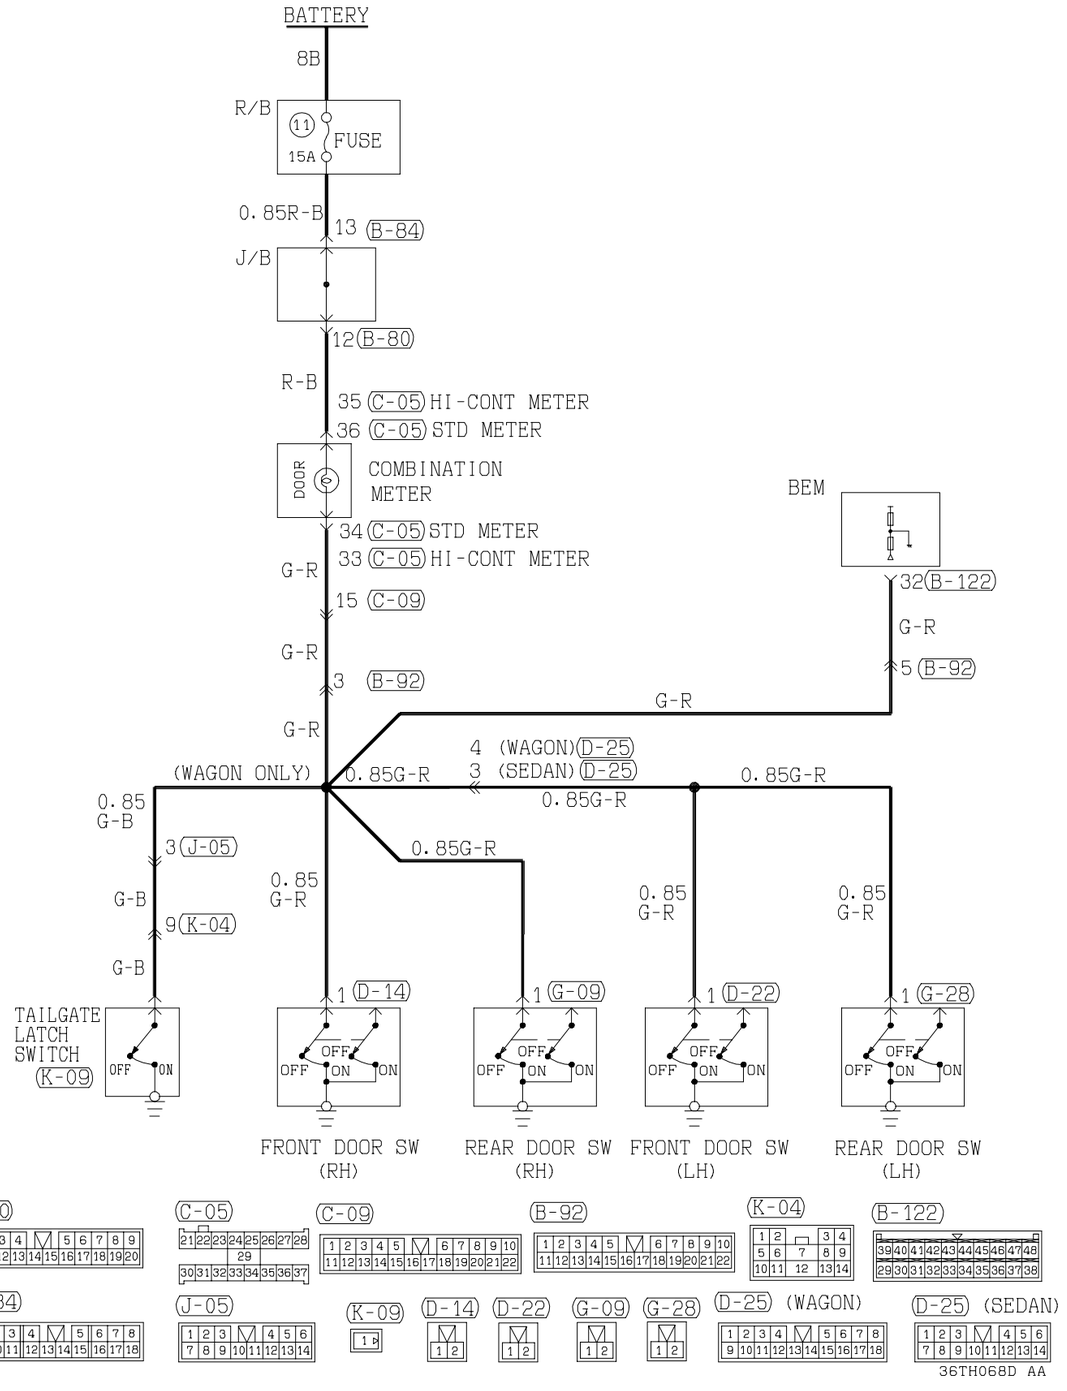

# POWER WINDOWS

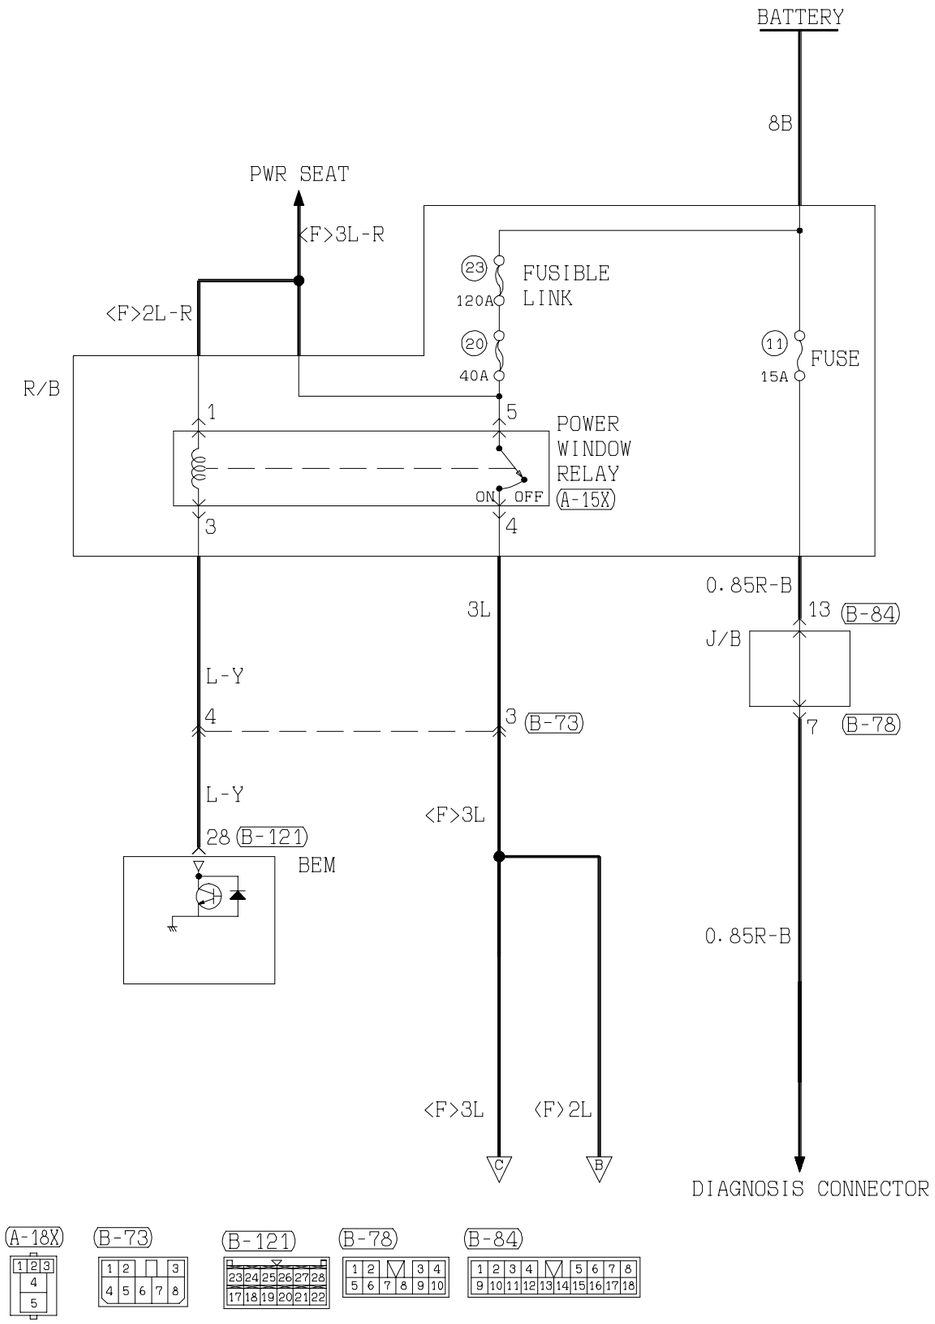

# POWER WINDOWS (CONTINUED)

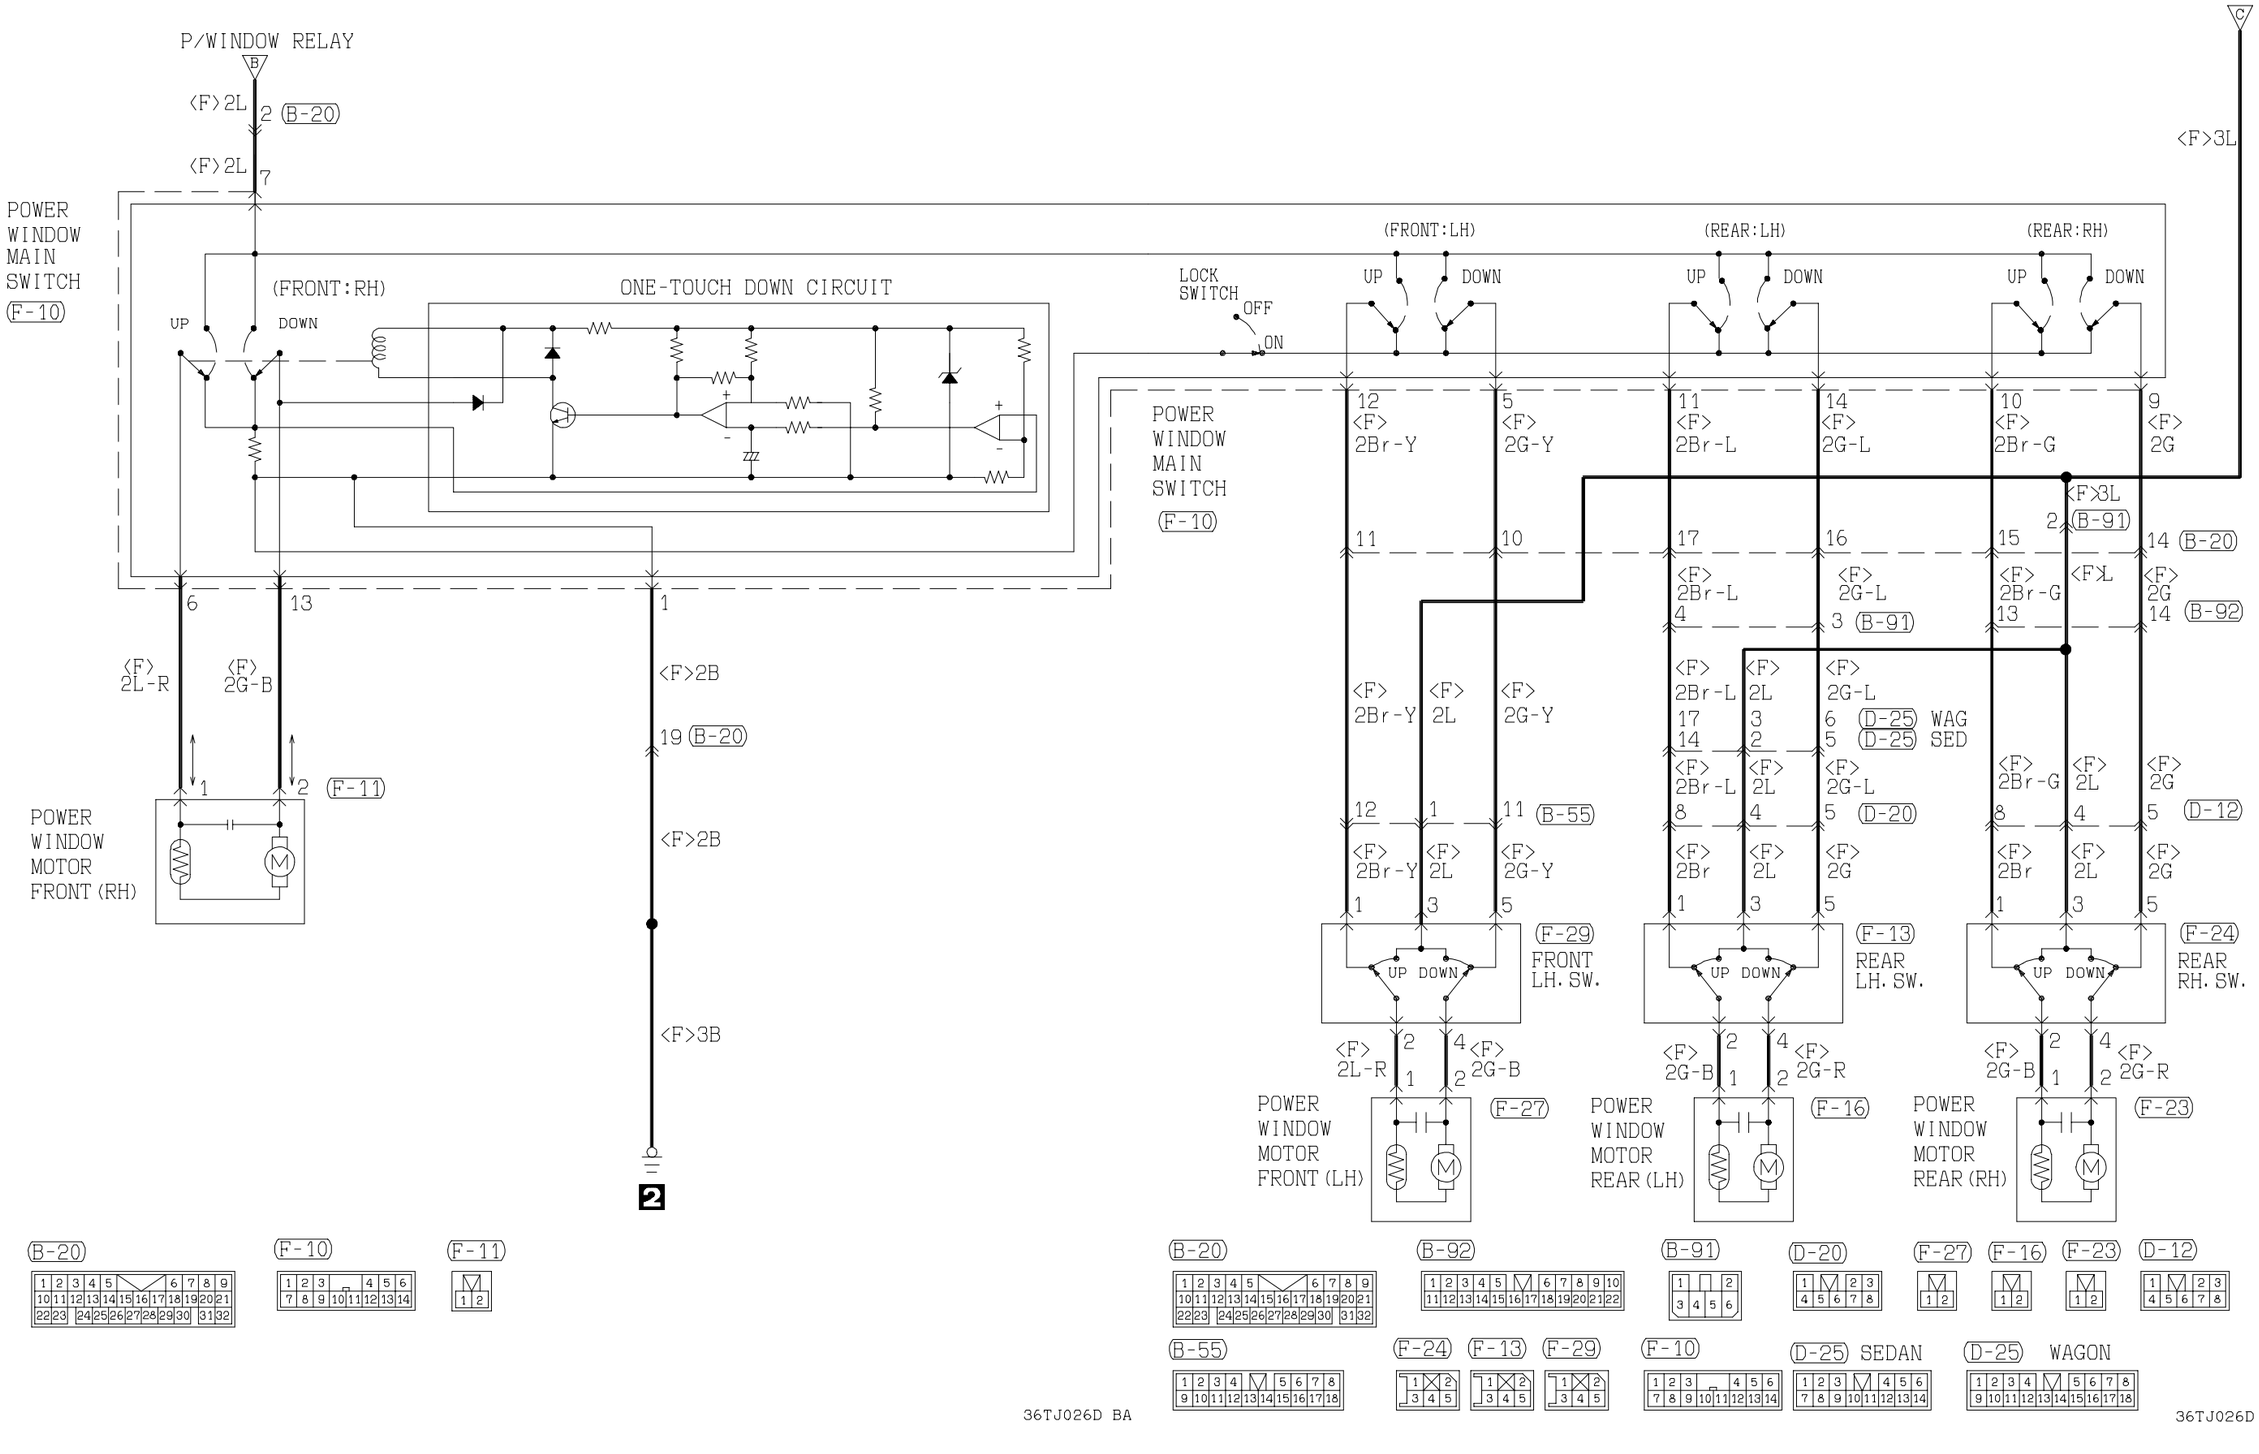


B-20



F-10



F-11



B-20



B-92



B-91



D-20



F-27



F-16



F-23



D-12



B-55



F-24



F-13



F-29



F-10



D-25 SEDAN



D-25 WAGON



36TJ026D BA

36TJ026D BB

# CENTRAL DOOR LOCKING AND KEYLESS ENTRY <ALL MODELS EXCEPT VERADA Xi>

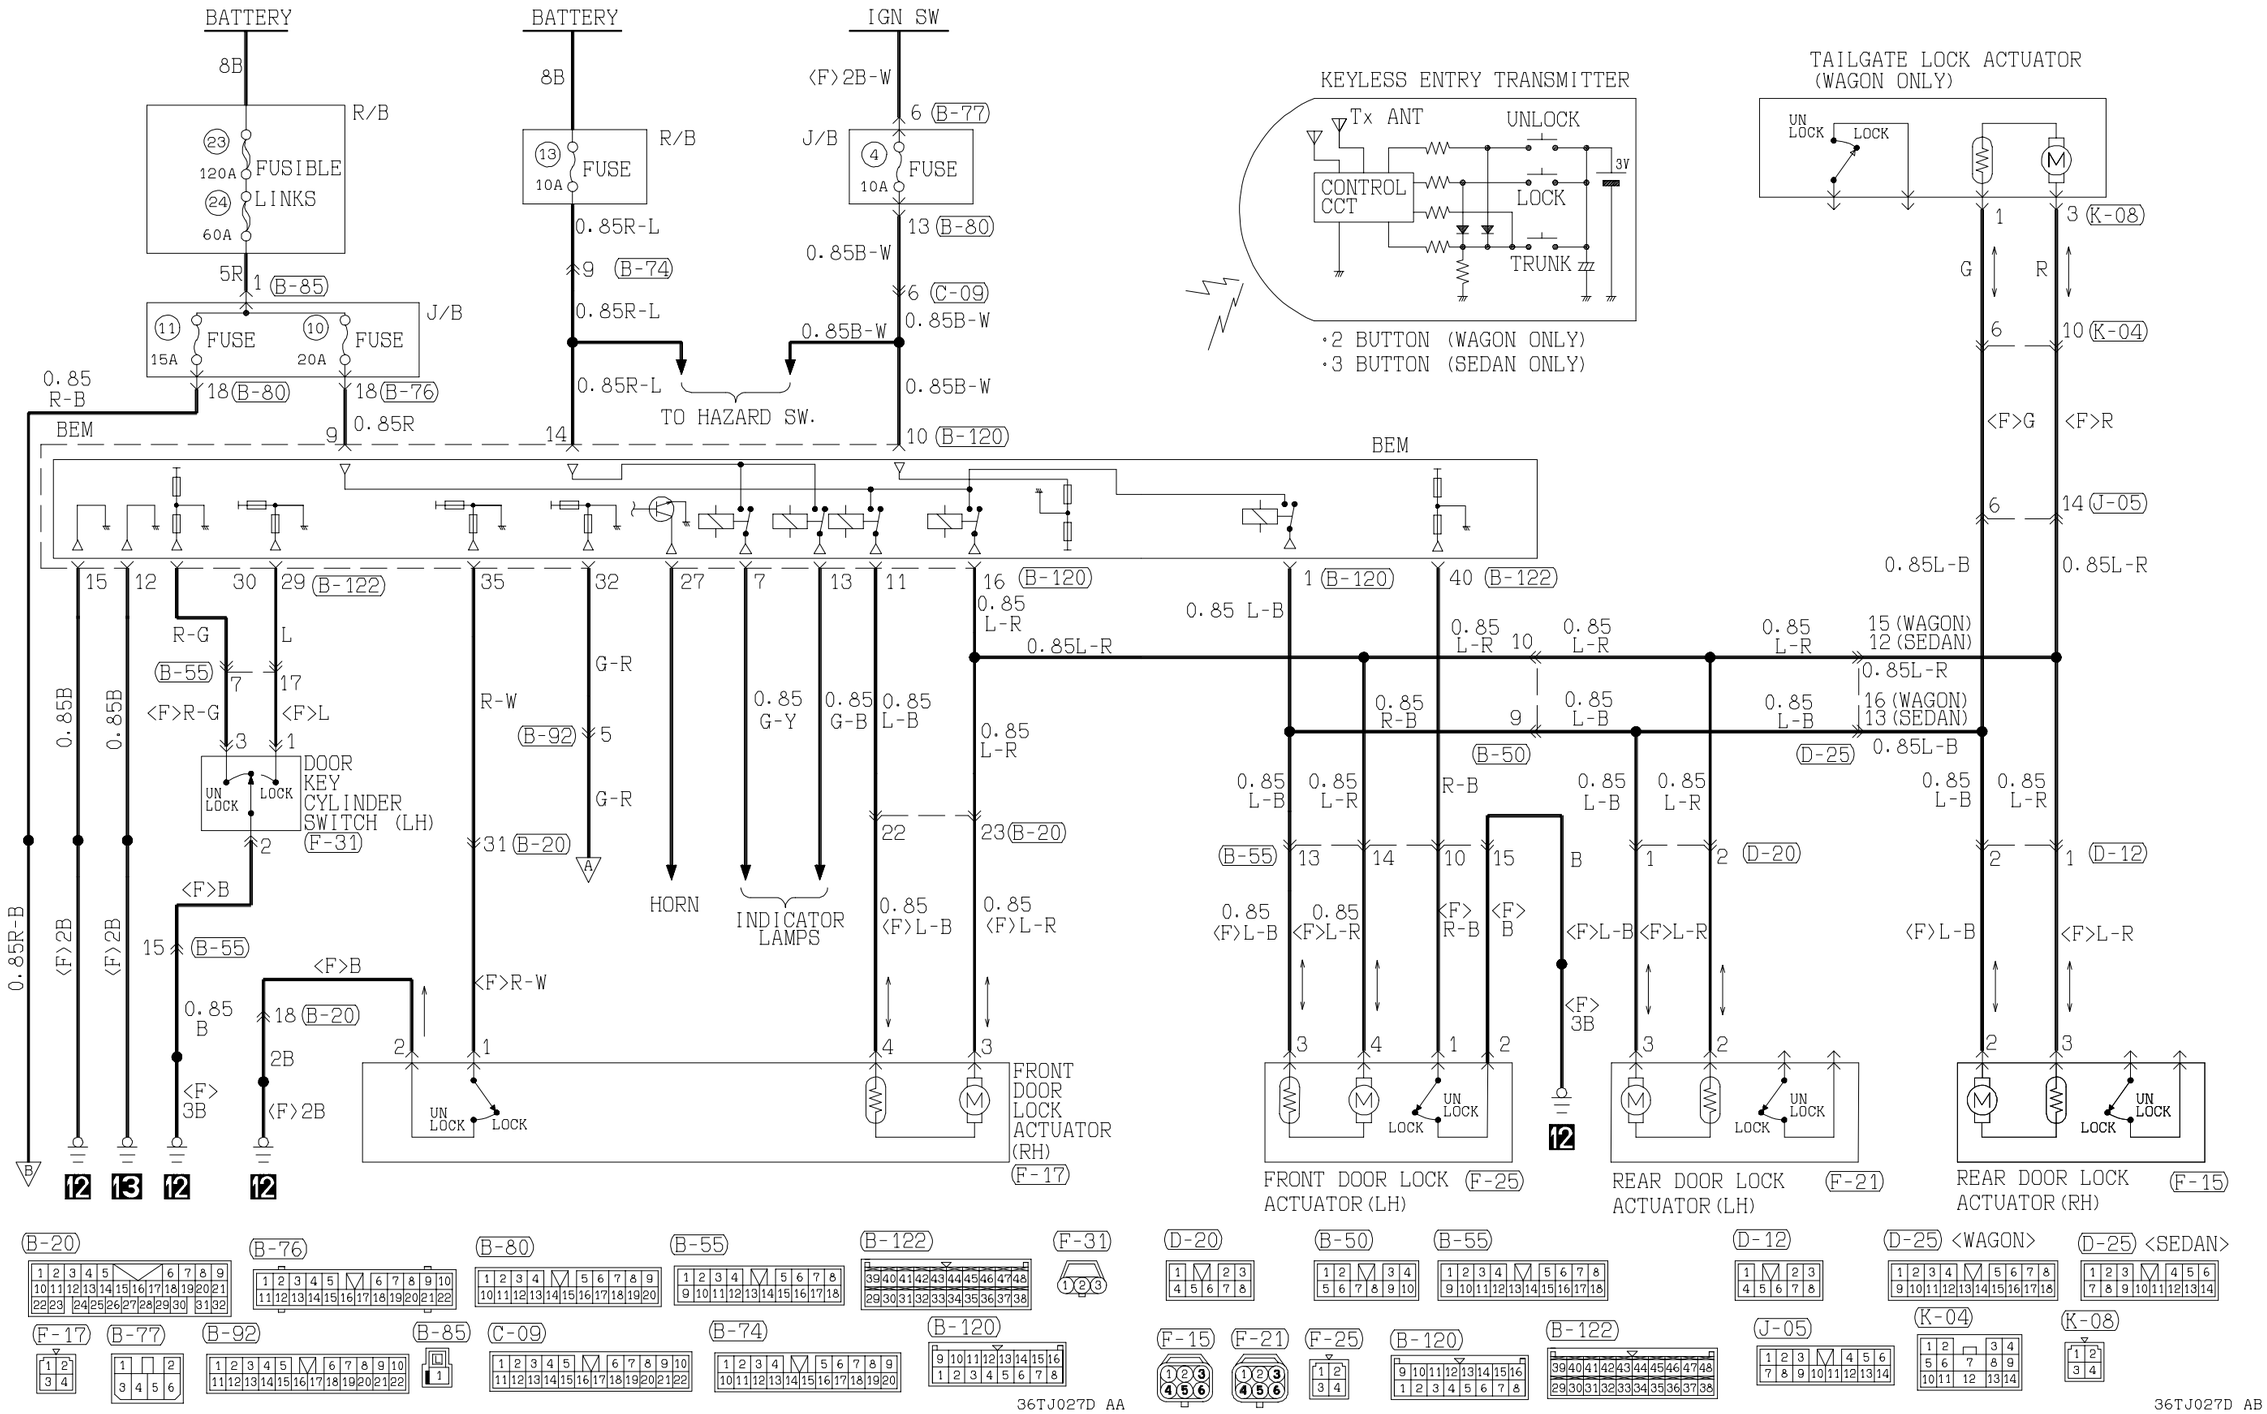

# CENTRAL DOOR LOCKING AND KEYLESS ENTRY <ALL MODELS EXCEPT VERADA Xi> (CONTINUED)

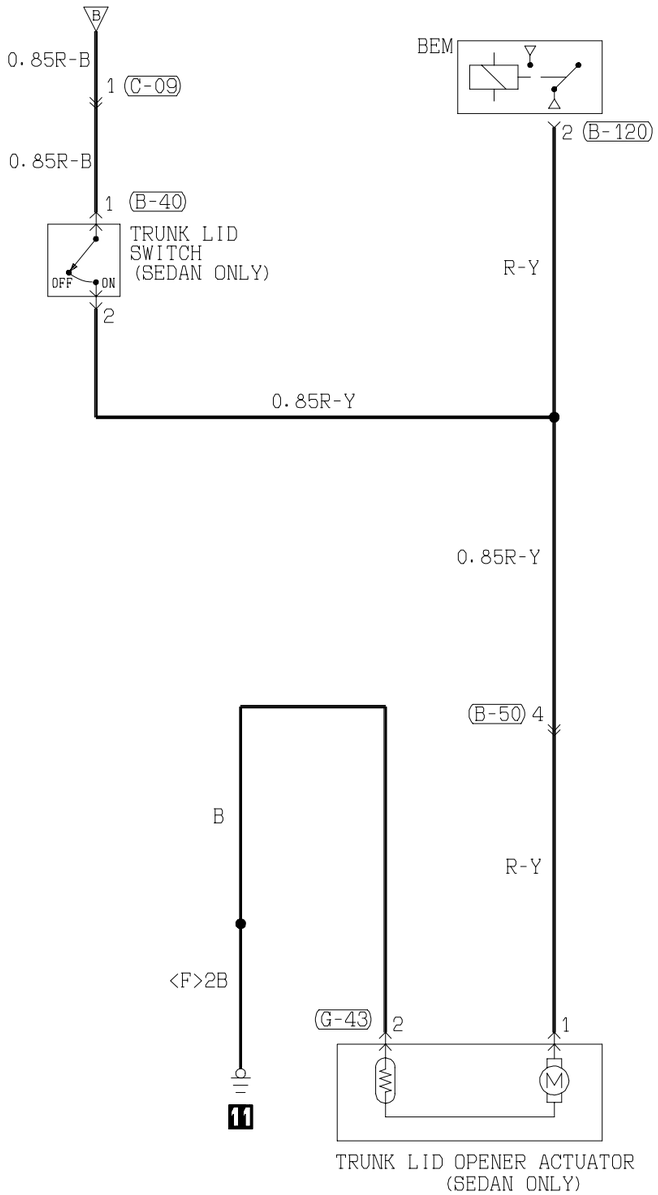





36TJ027D BA

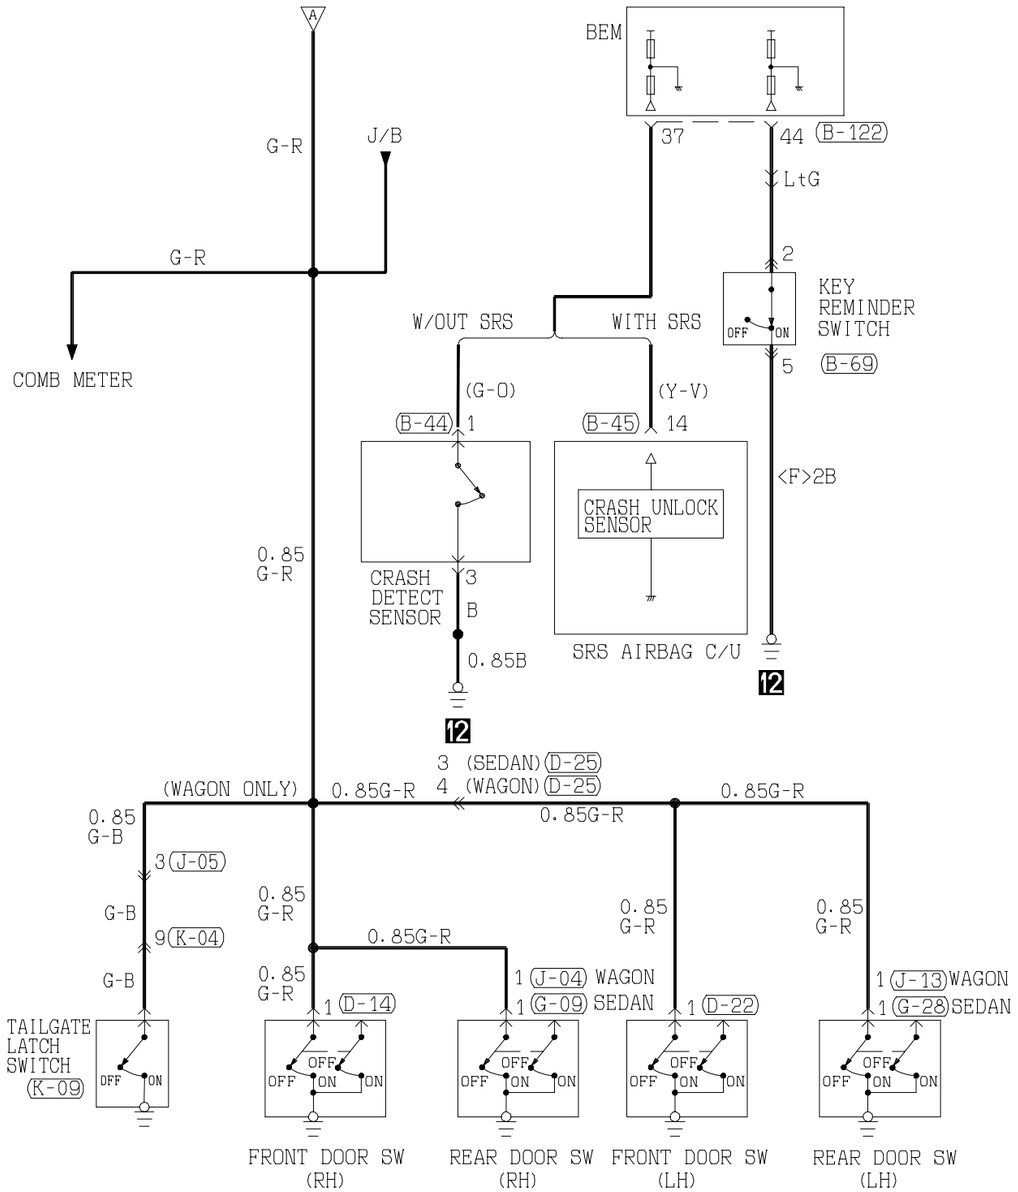


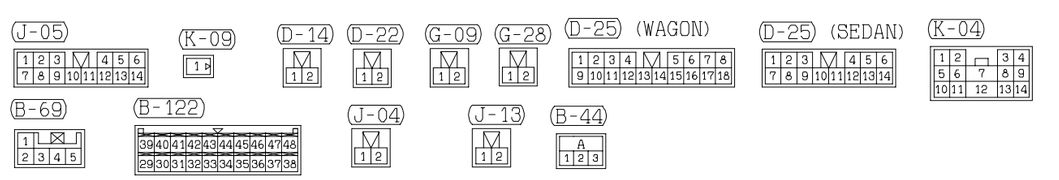


36TJ027D BB

# CENTRAL DOOR LOCKING AND KEYLESS ENTRY <VERADA Xi ONLY>

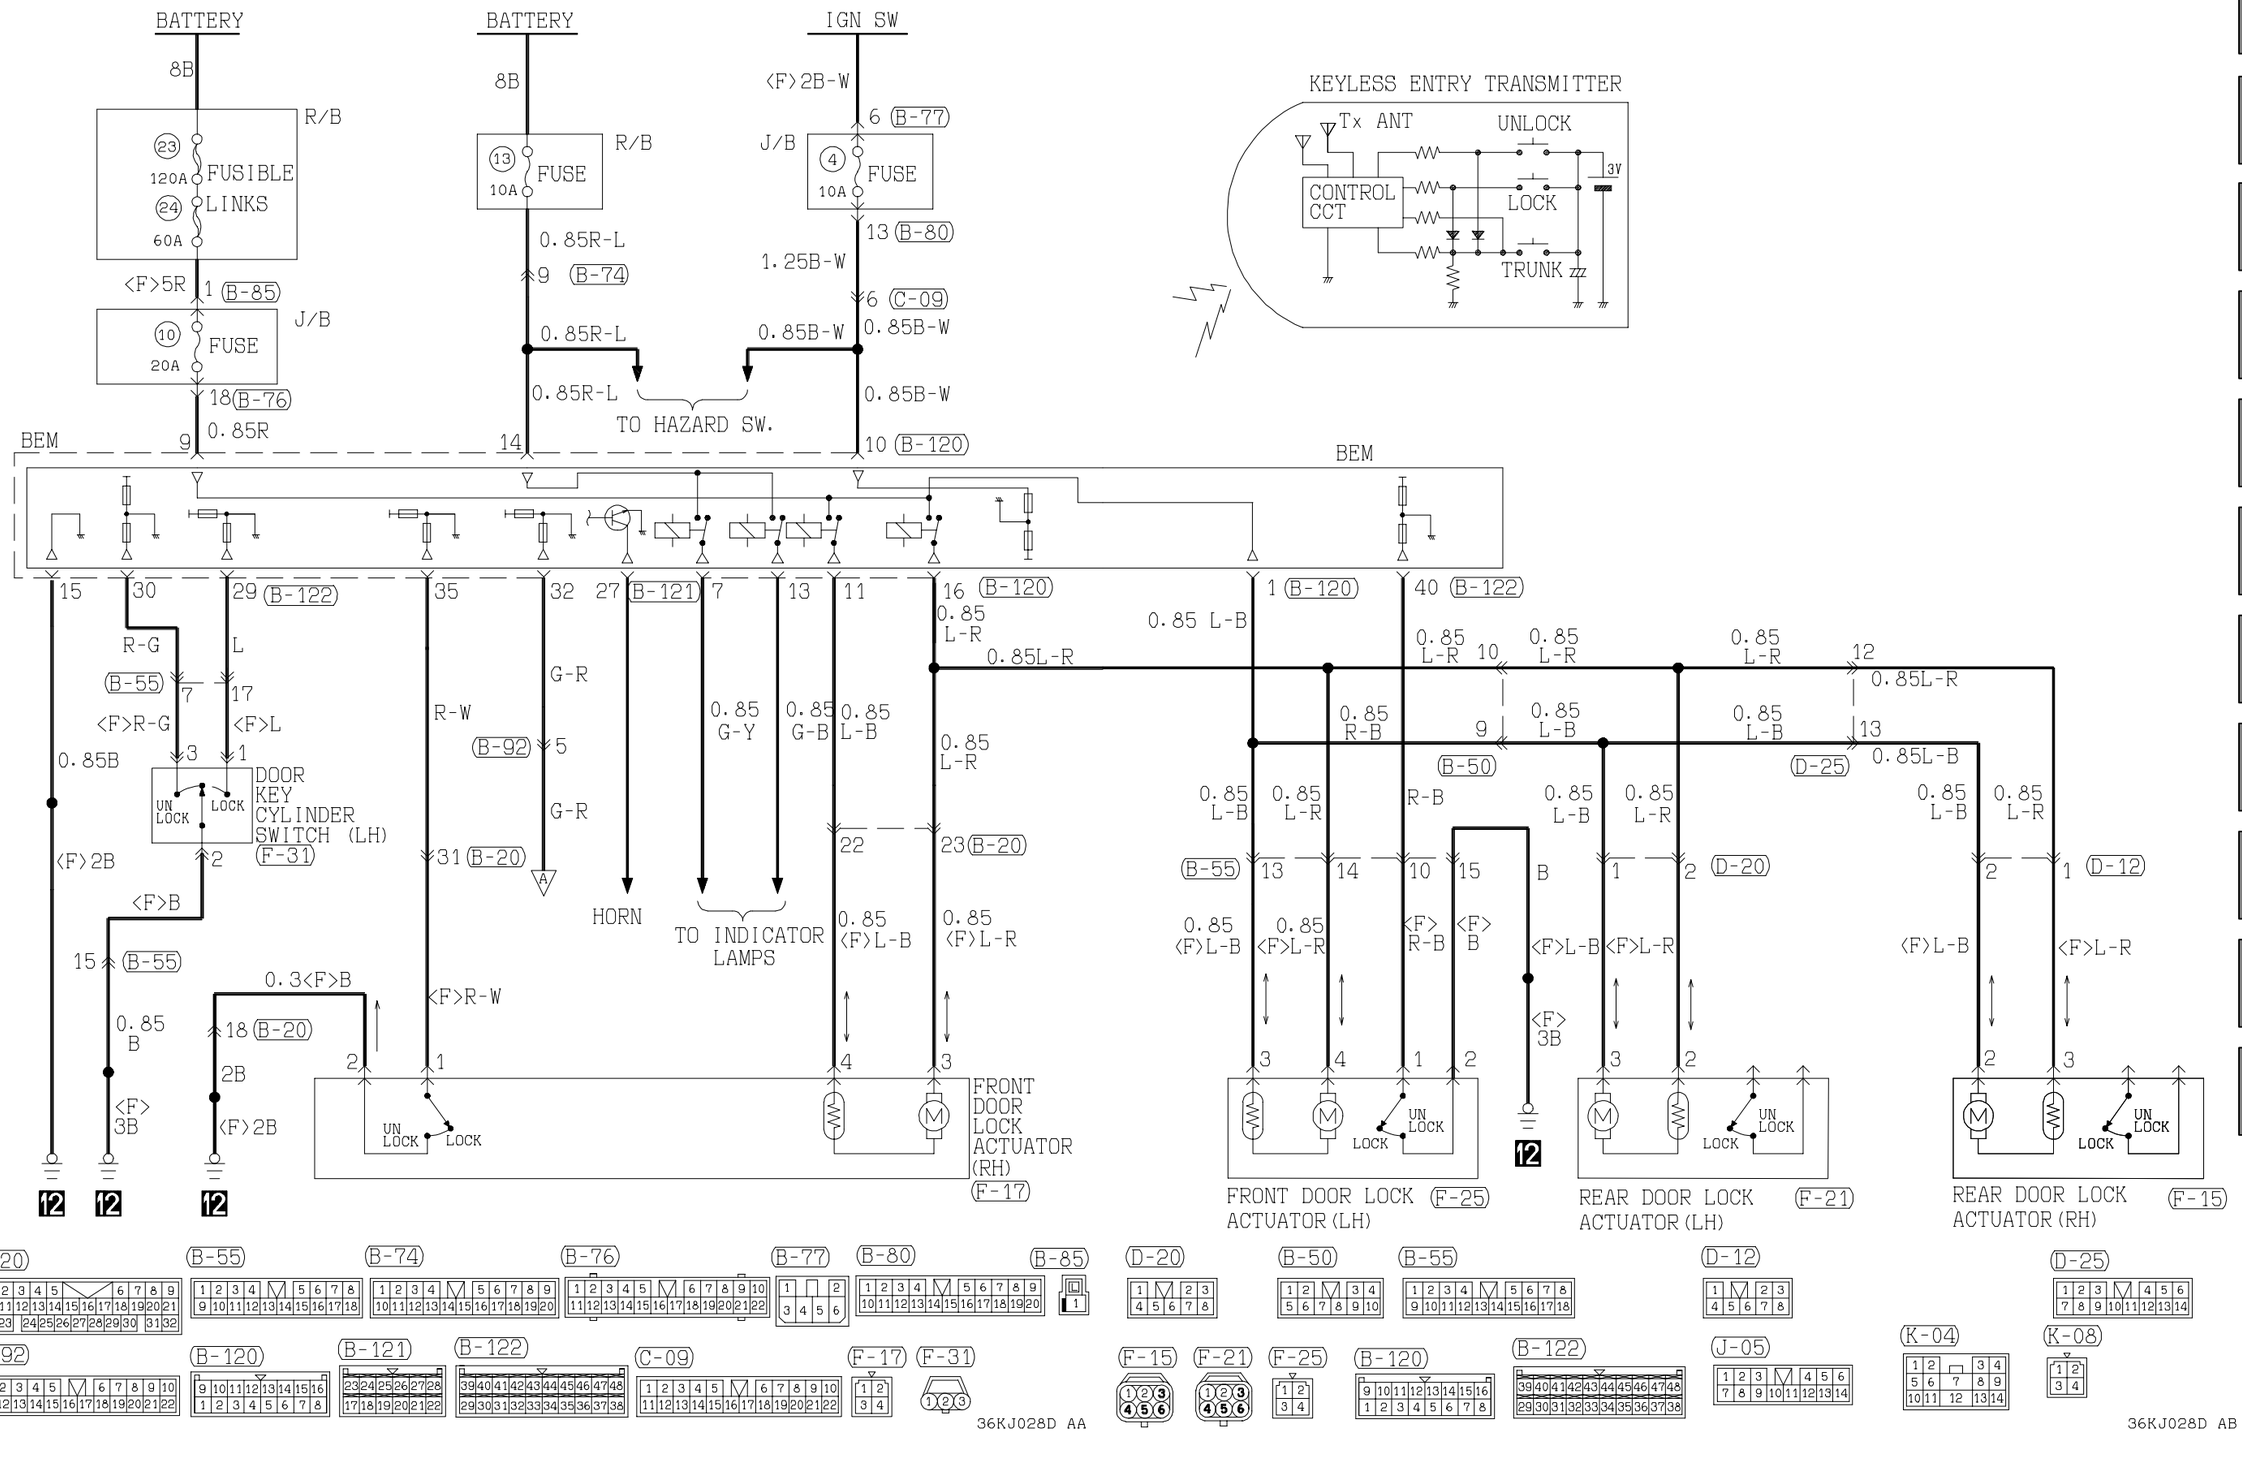
BATTERY
8B
R/B
23
120A
FUSIBLE
24
LINKS
60A
<F>5R
1 (B-85)
J/B
10
FUSE
20A
18 (B-76)
0.85R
BEM
9
BATTERY
8B
R/B
13
10A
FUSE
0.85R-L
9 (B-74)
0.85R-L
14
IGN SW
<F>2B-W
6 (B-77)
J/B
4
10A
FUSE
13 (B-80)
1.25B-W
6 (C-09)
0.85B-W
0.85B-W
0.85R-L
TO HAZARD SW.
0.85B-W
10 (B-120)
KEYLESS ENTRY TRANSMITTER
Tx ANT
UNLOCK
3V
CONTROL CCT
LOCK
TRUNK
BEM
15
30
29 (B-122)
35
32
27 (B-121)
7
13
11
16 (B-120)
0.85 L-R
0.85L-R
1 (B-120)
0.85 L-B
40 (B-122)
0.85 L-R
10
0.85 L-R
0.85 L-R
12
0.85L-R
R-G
L
(B-55)
7
17
<F>R-G
<F>L
0.85B
3
1
DOOR KEY CYLINDER SWITCH (LH)
UN LOCK
LOCK
(F-31)
R-W
(B-92)
5
G-R
G-R
31 (B-20)
A
HORN
0.85 G-Y
0.85 G-B
0.85 L-B
22
23 (B-20)
0.85 L-R
TO INDICATOR LAMPS
0.85 <F>L-B
0.85 <F>L-R
0.85 L-B
0.85 R-B
(B-50)
R-B
0.85 L-B
0.85 L-R
B
(D-25)
0.85L-B
0.85 L-B
0.85 L-R
(B-55)
13
14
10
15
B
1
2
(D-20)
2
1
(D-12)
0.85 <F>L-B
0.85 <F>L-R
<F> R-B
<F> B
<F>L-B
<F>L-R
<F>L-B
<F>L-R
<F> 3B
3
4
1
2
3
2
2
3
UN LOCK
LOCK
FRONT DOOR LOCK ACTUATOR (LH) (F-25)
REAR DOOR LOCK ACTUATOR (LH) (F-21)
REAR DOOR LOCK ACTUATOR (RH) (F-15)
(B-92)
(B-120)
(B-121)
(B-122)
(C-09)
(F-17)
(F-31)
(F-15)
(F-21)
(F-25)
(B-120)
(B-122)
(J-05)
(K-04)
(K-08)
36KJ028D AA
36KJ028D AB
12
12
12
0.85 L-B
0.85 L-R
0.85 L-B
0.85 L-R
0.85 L-B
0.85 L-R

# CENTRAL DOOR LOCKING AND KEYLESS ENTRY <VERADA Xi ONLY> (CONTINUED)

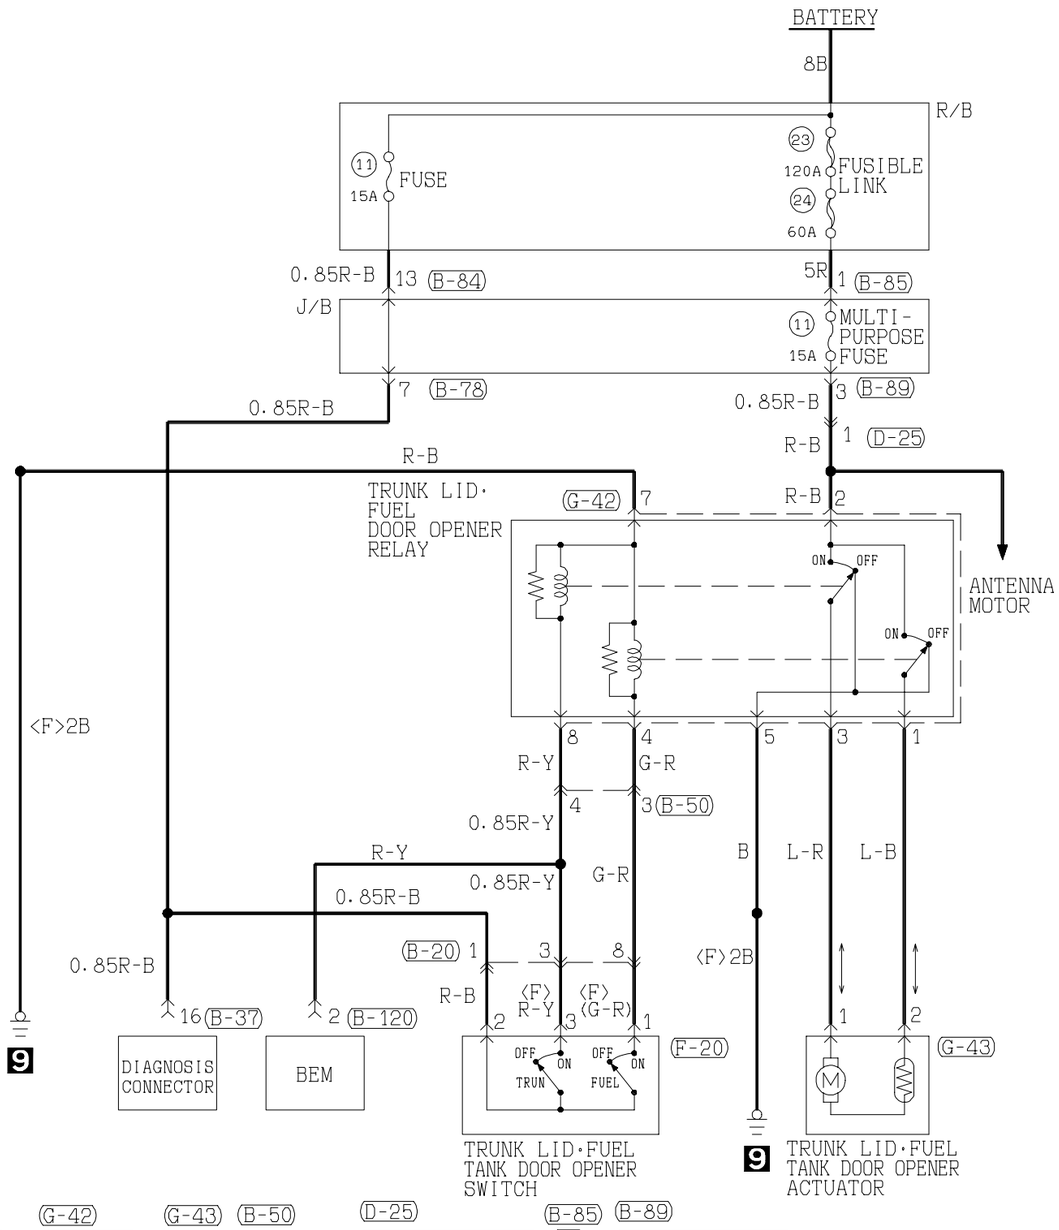


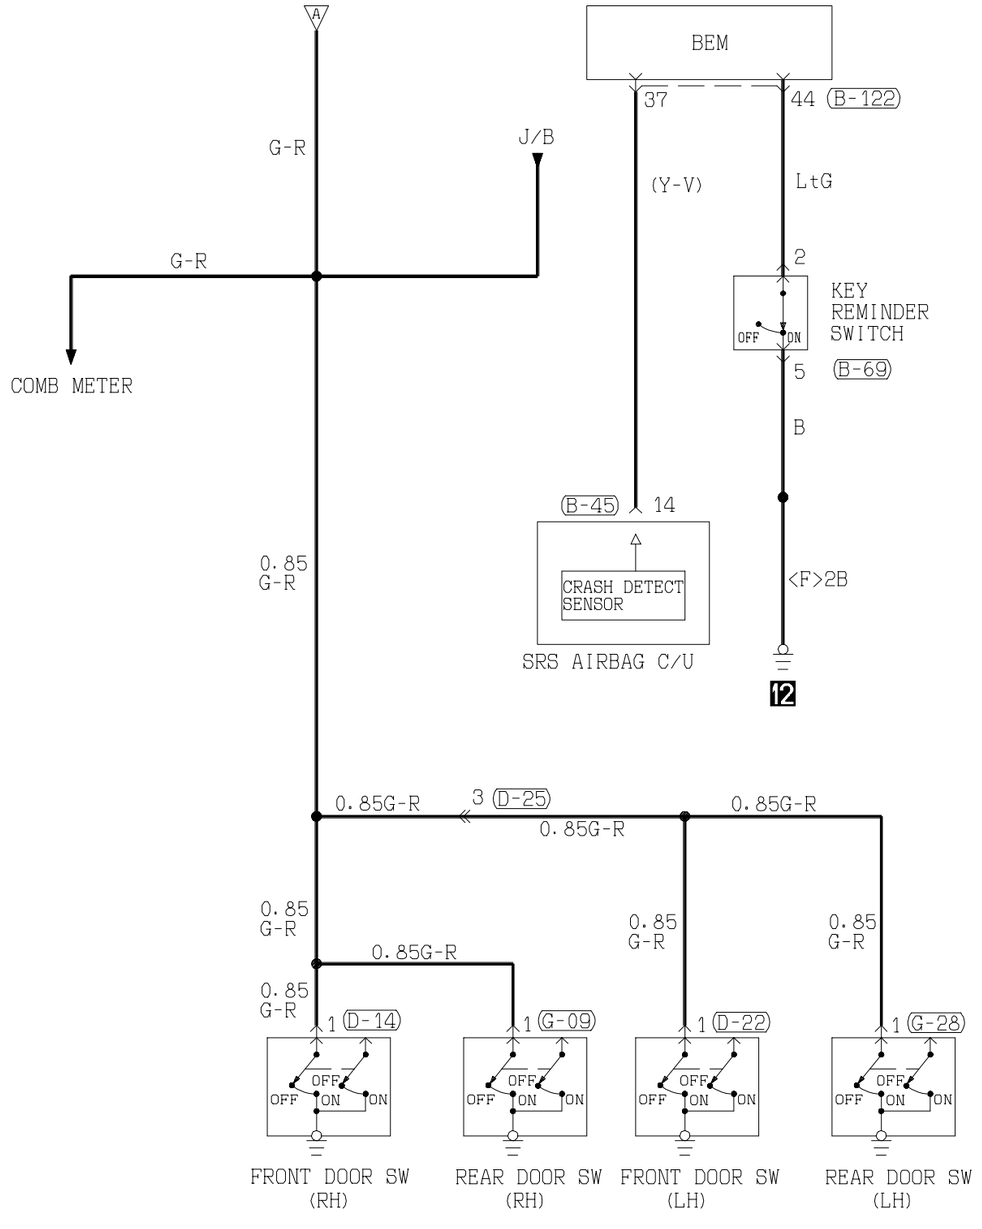


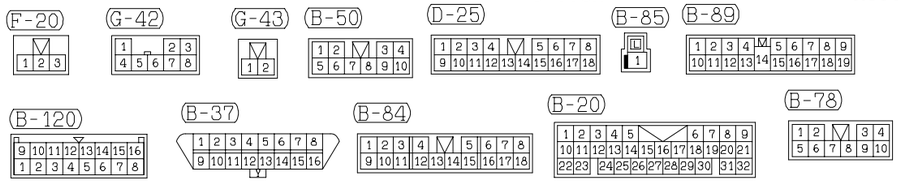


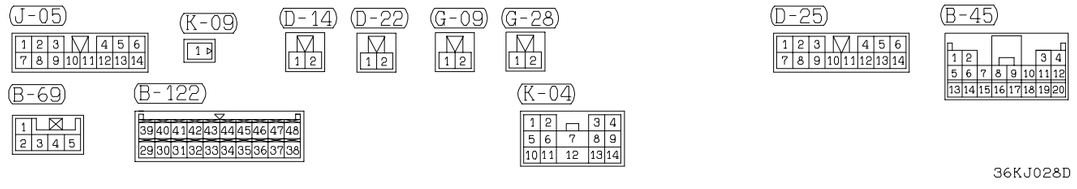


36KJ028D BA

36KJ028D BB

# TRUNK LID/FUEL TANK DOOR OPENER <ALL MODELS EXCEPT VERADA Xi>

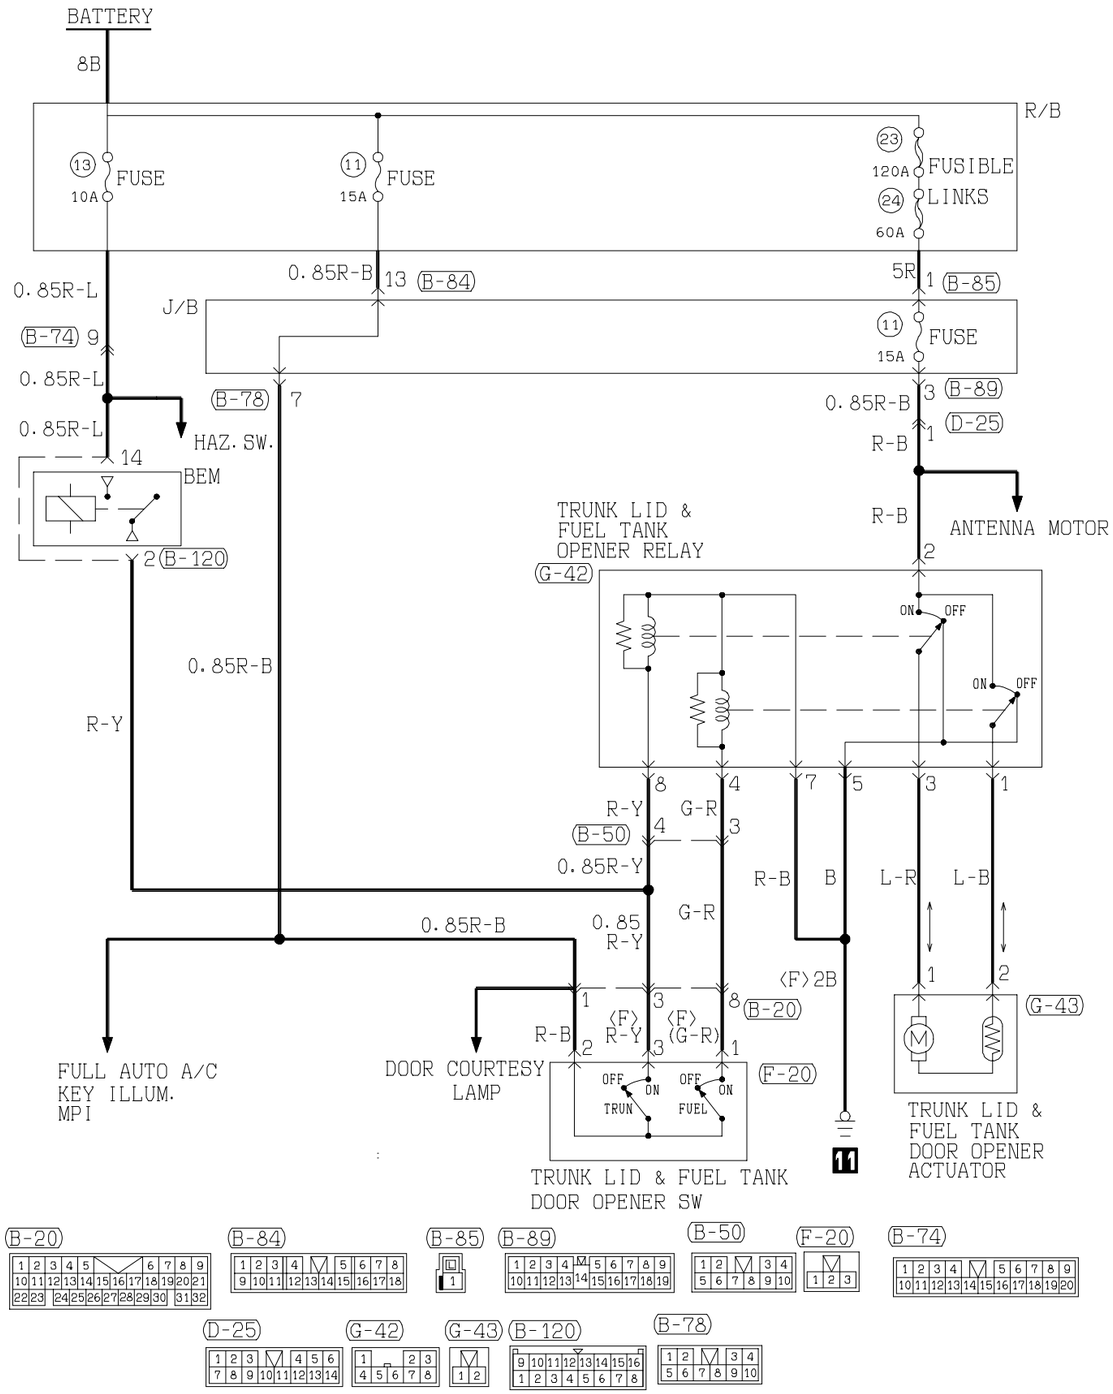


36KJ029D AA

# TRUNK LID/FUEL TANK DOOR OPENER <VERADA Xi ONLY>

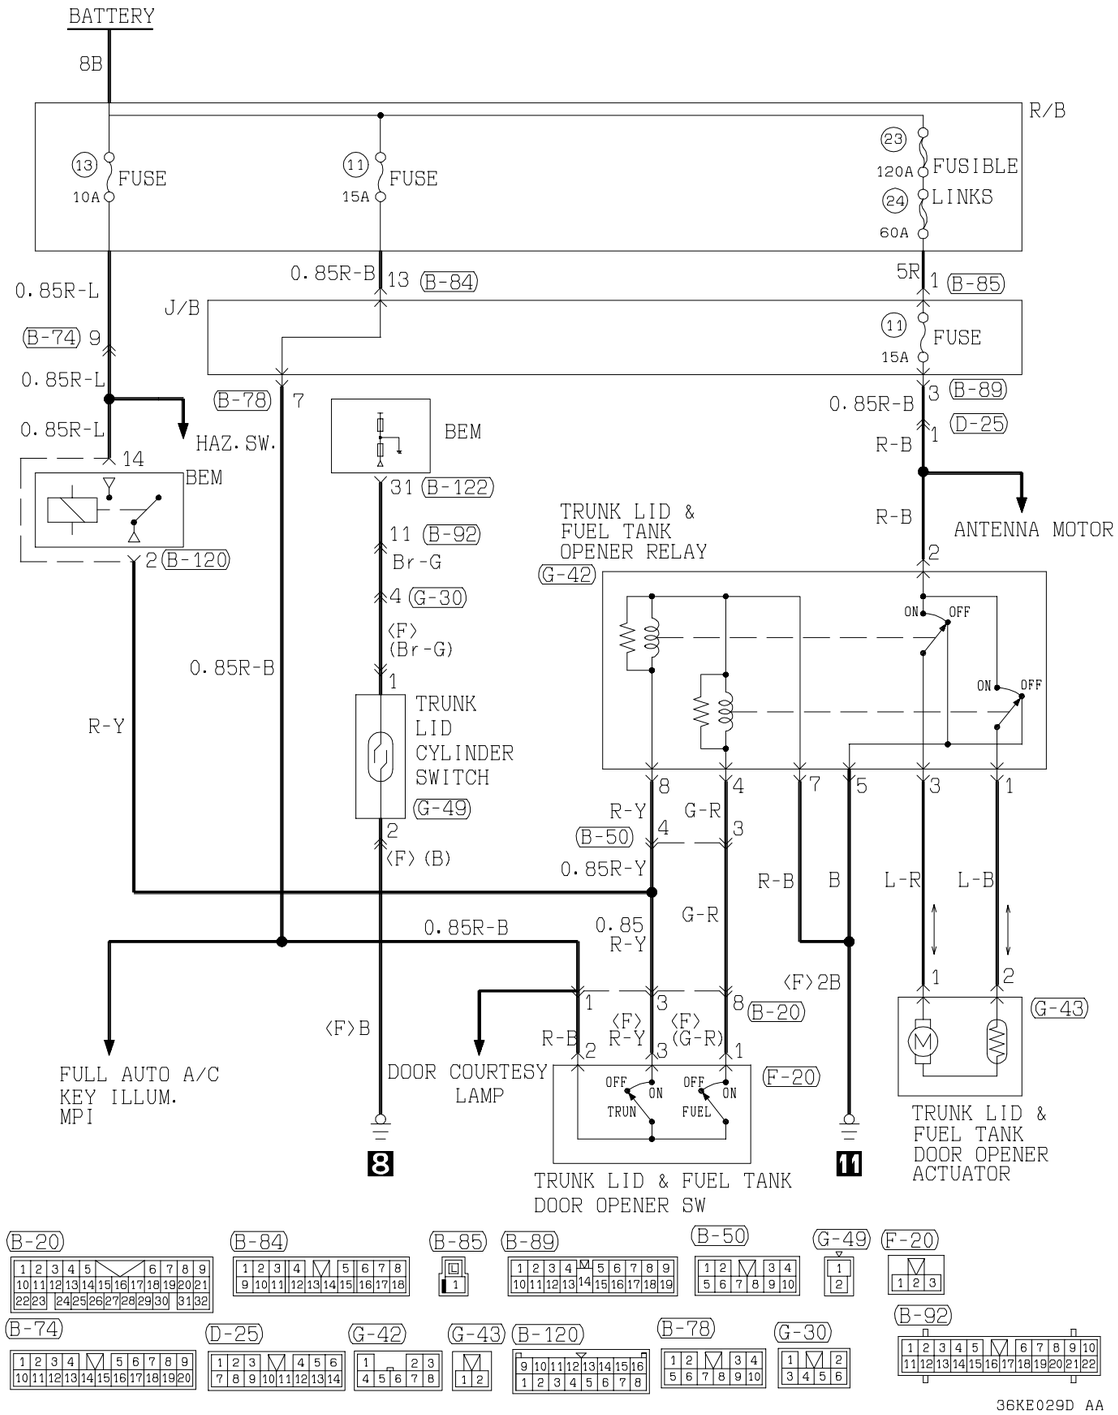





36KE029D AA

# MANUAL AIR CONDITIONING

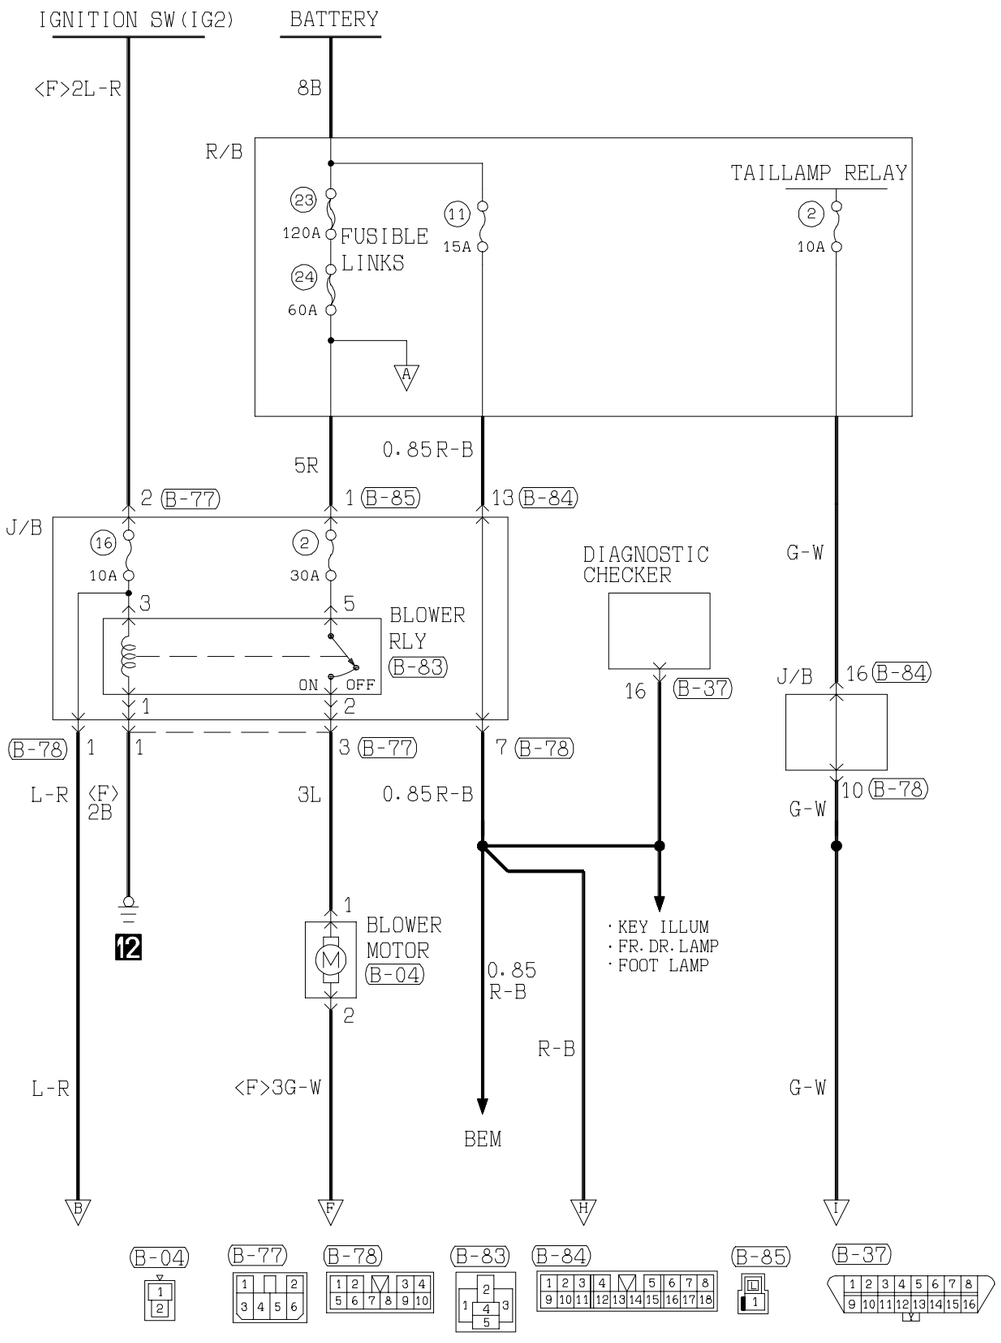


36TJ058D AA

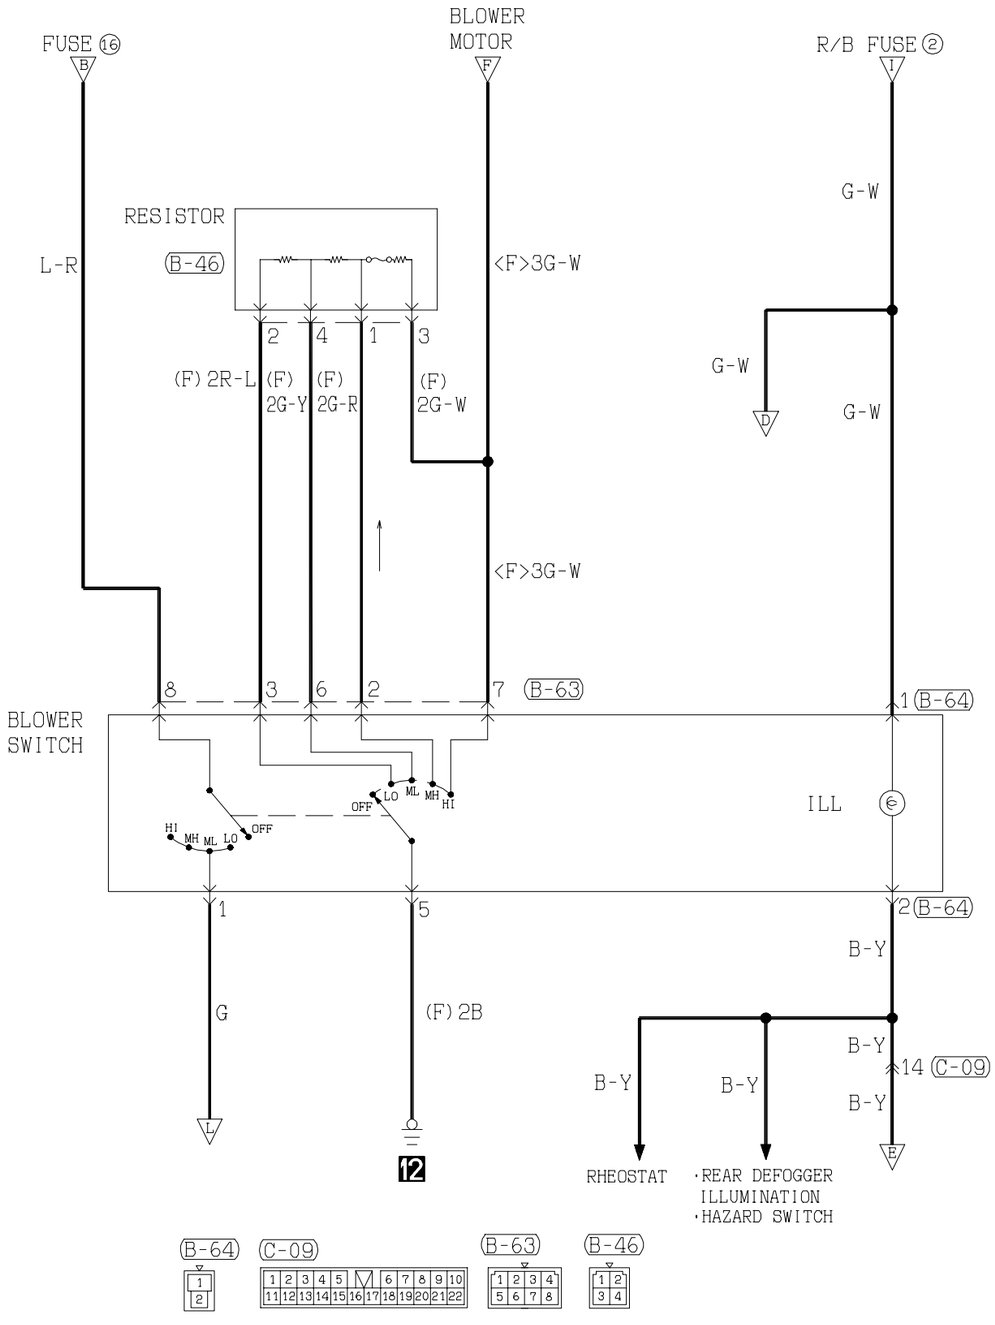


36TJ058D AB

# MANUAL AIR CONDITIONING (CONTINUED)

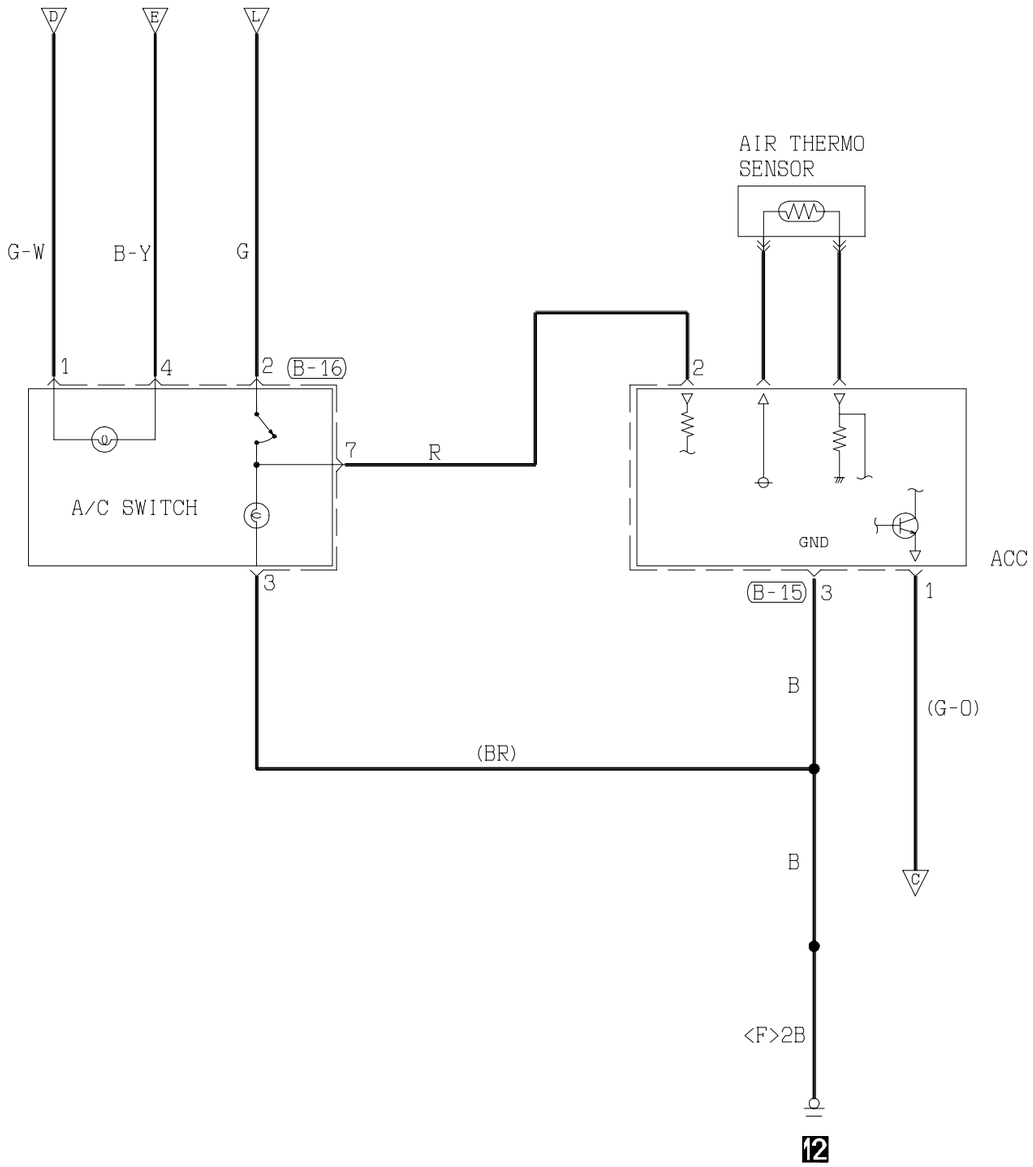


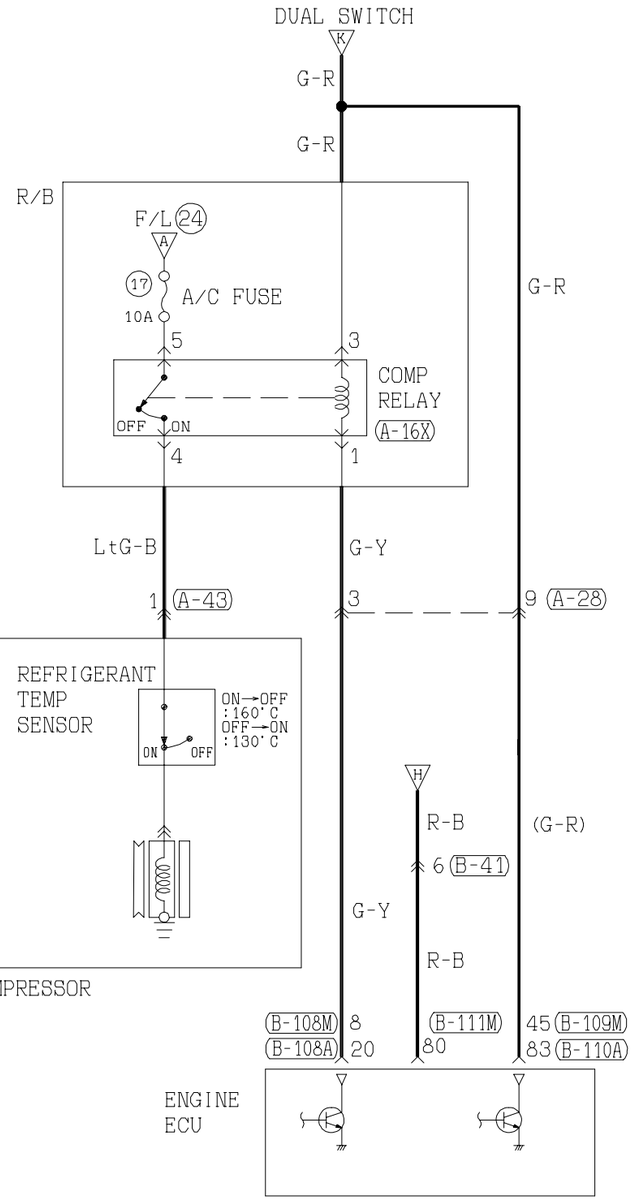





36TJ058D BA

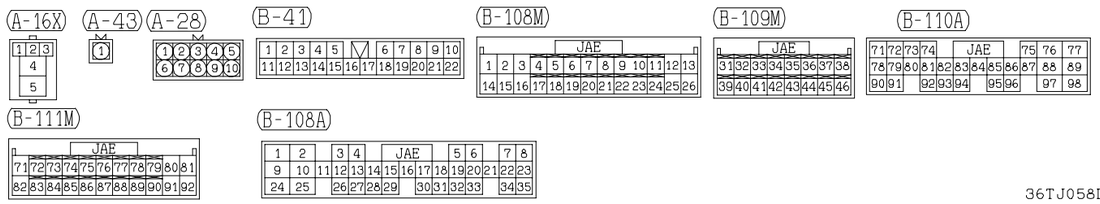


36TJ058D BB

# MANUAL AIR CONDITIONING (CONTINUED)

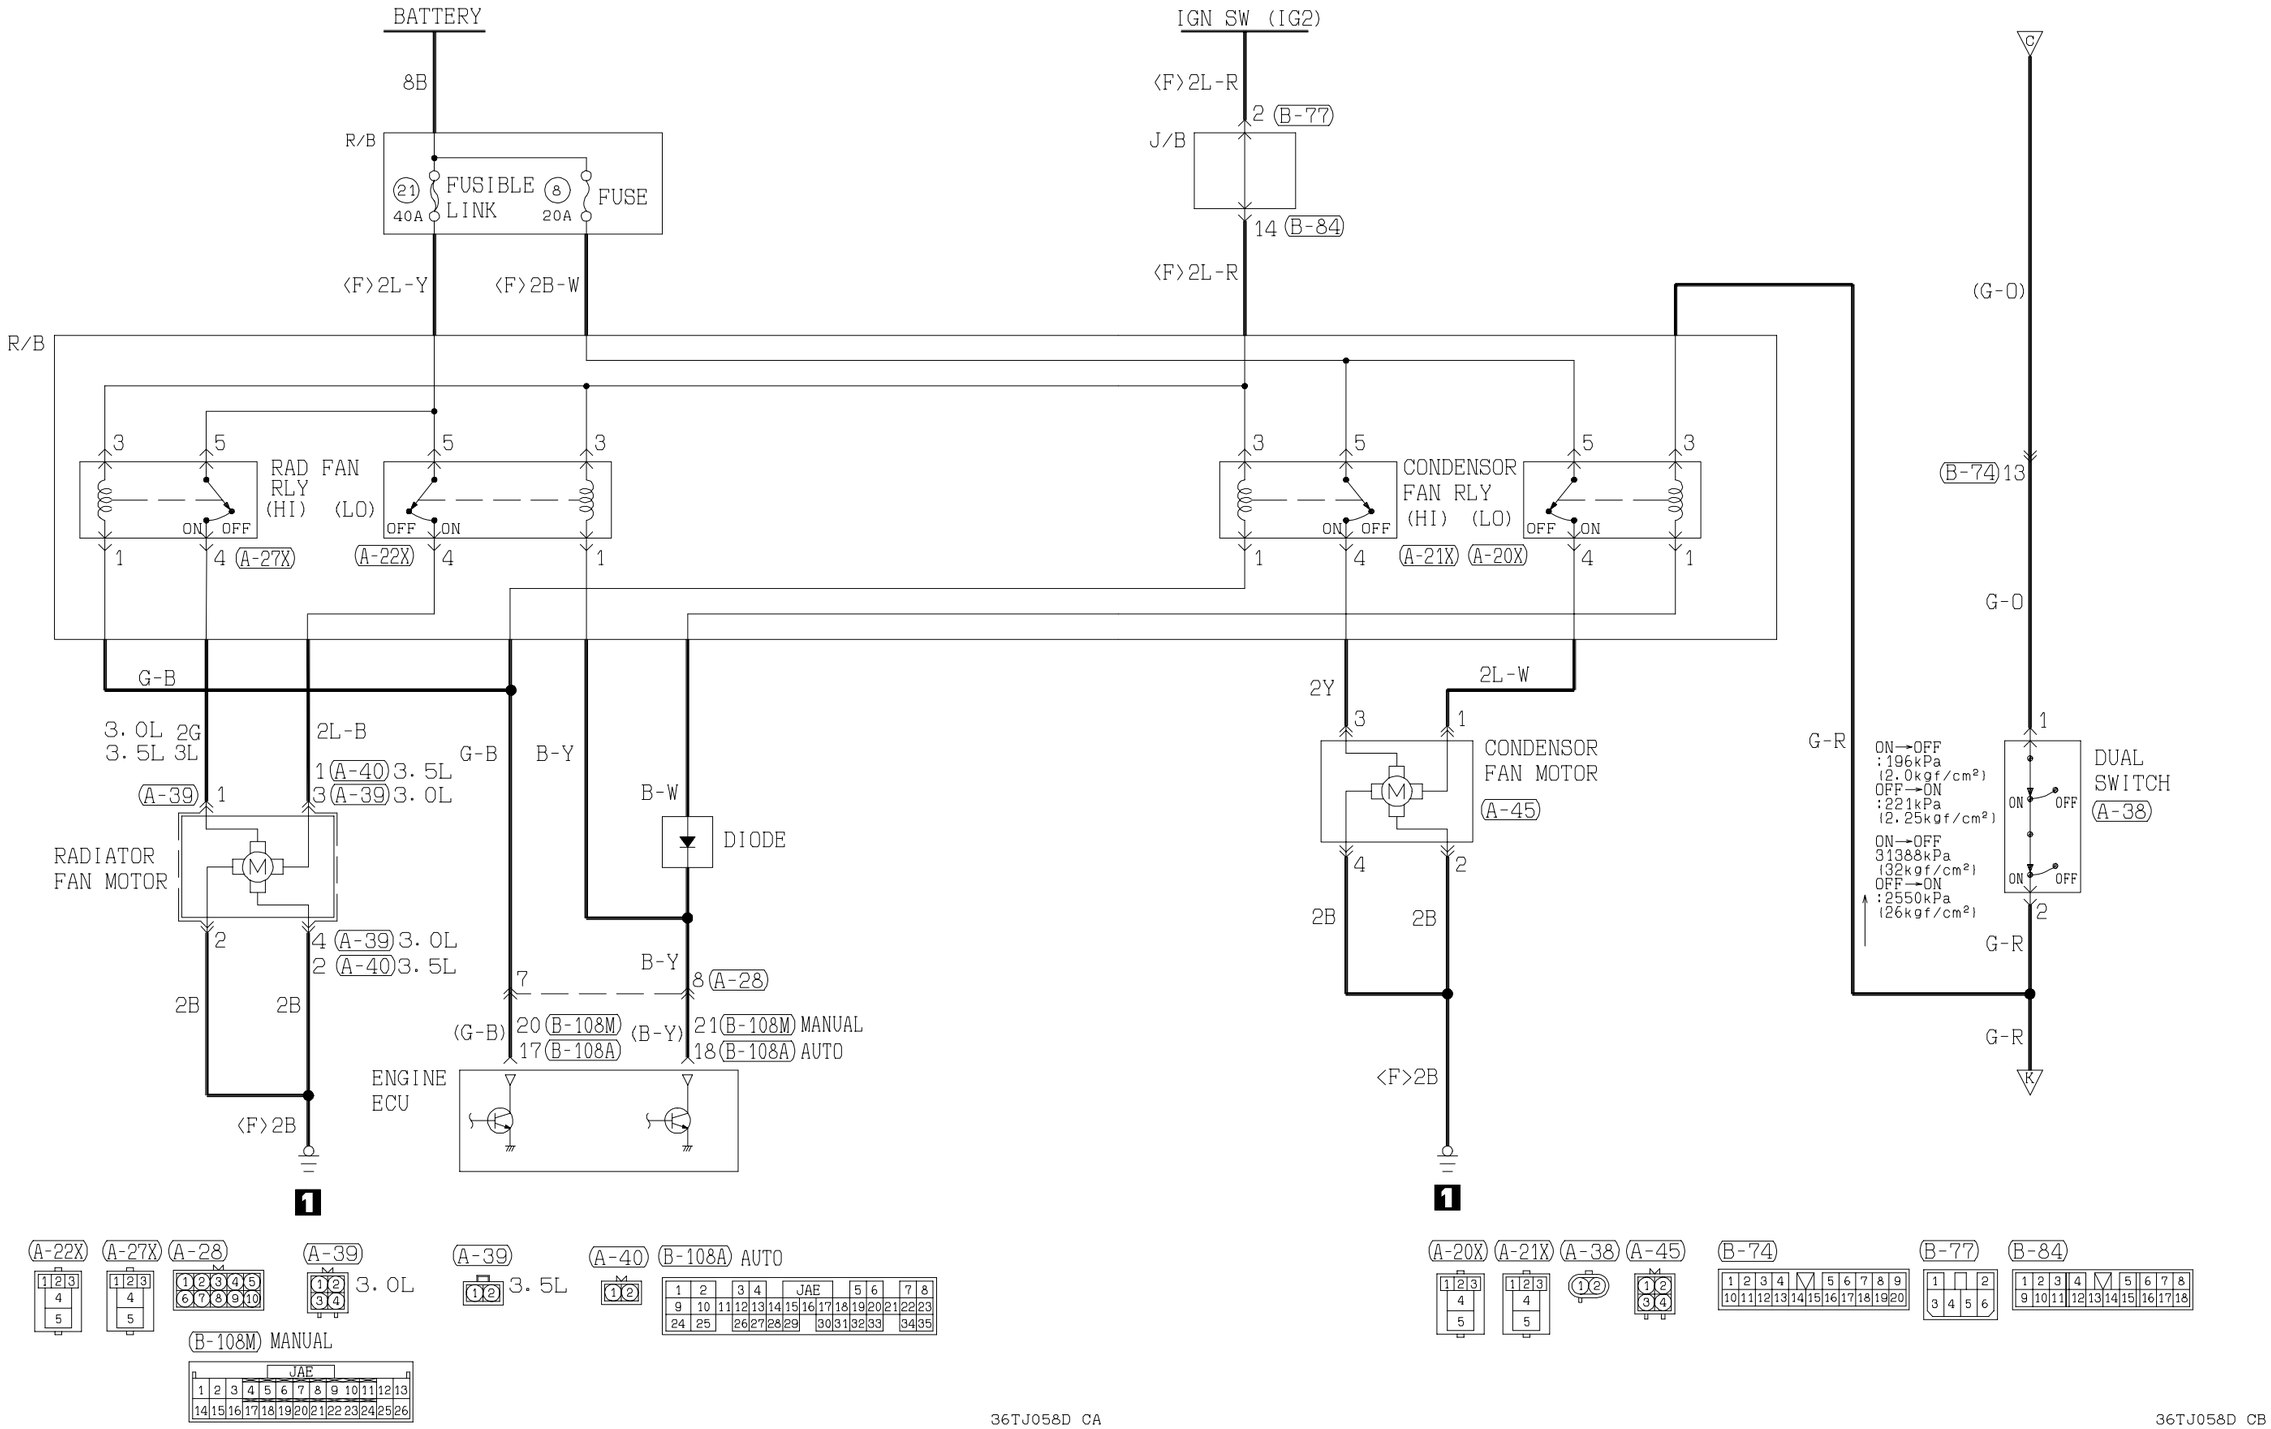


36TJ058D CA

36TJ058D CB

# FULL AUTOMATIC AIR CONDITIONING

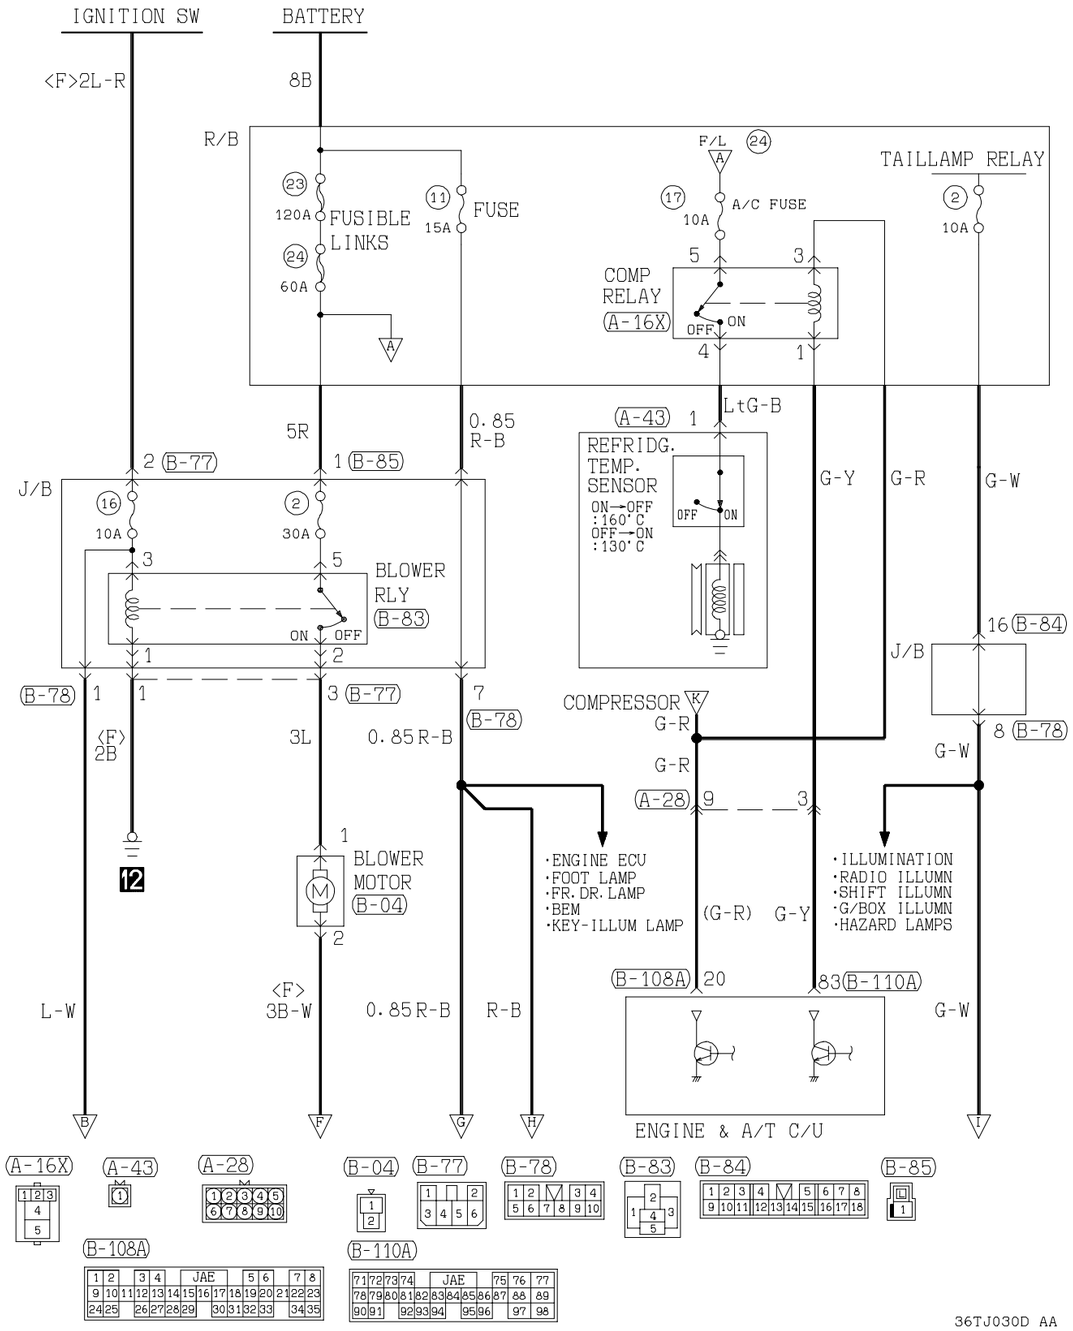


36TJ030D AA

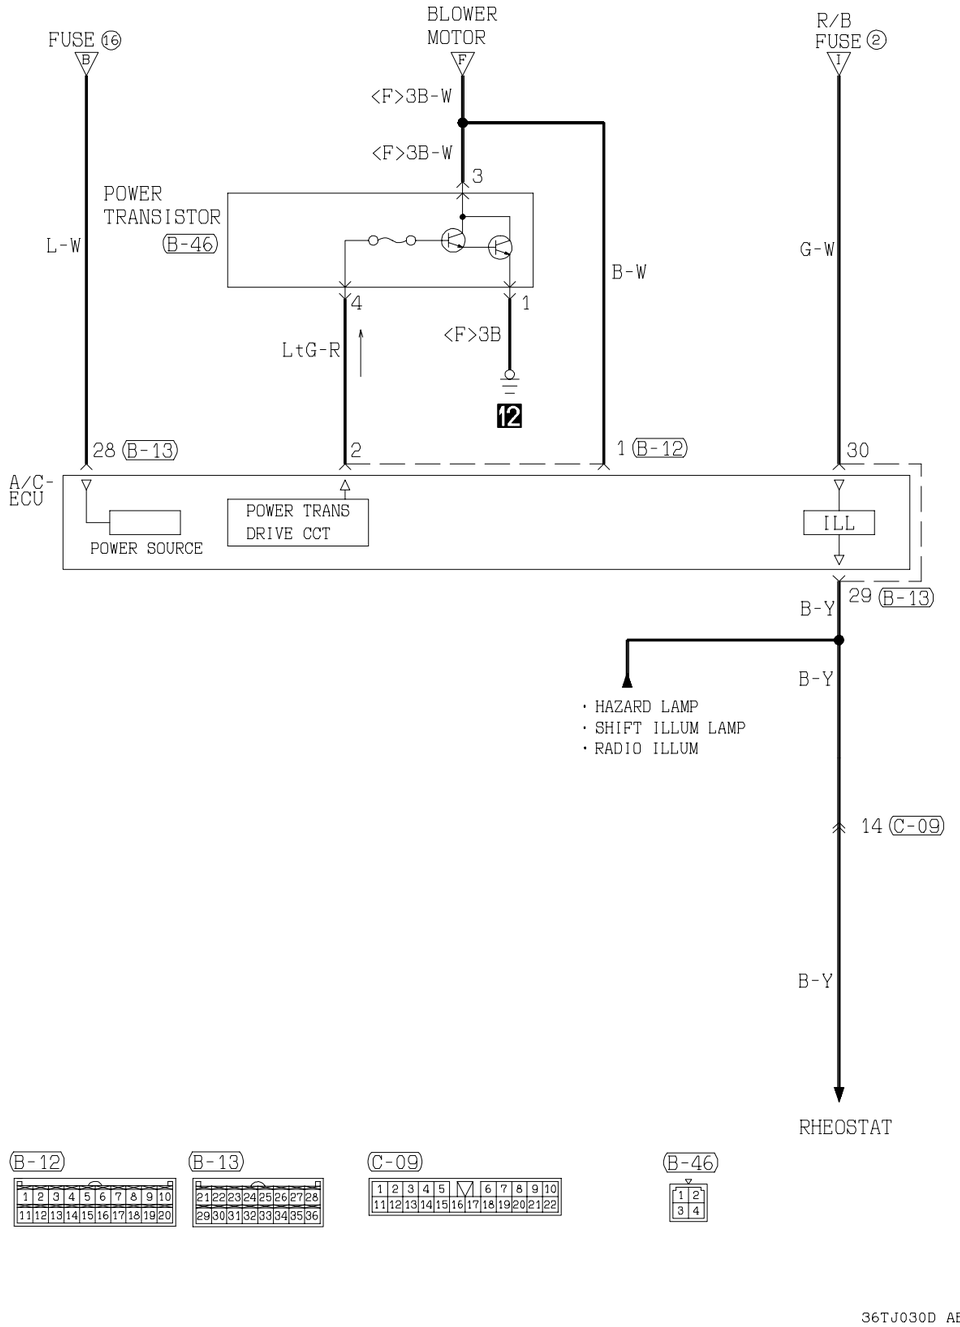


36TJ030D AB

# FULL AUTOMATIC AIR CONDITIONING (CONTINUED)

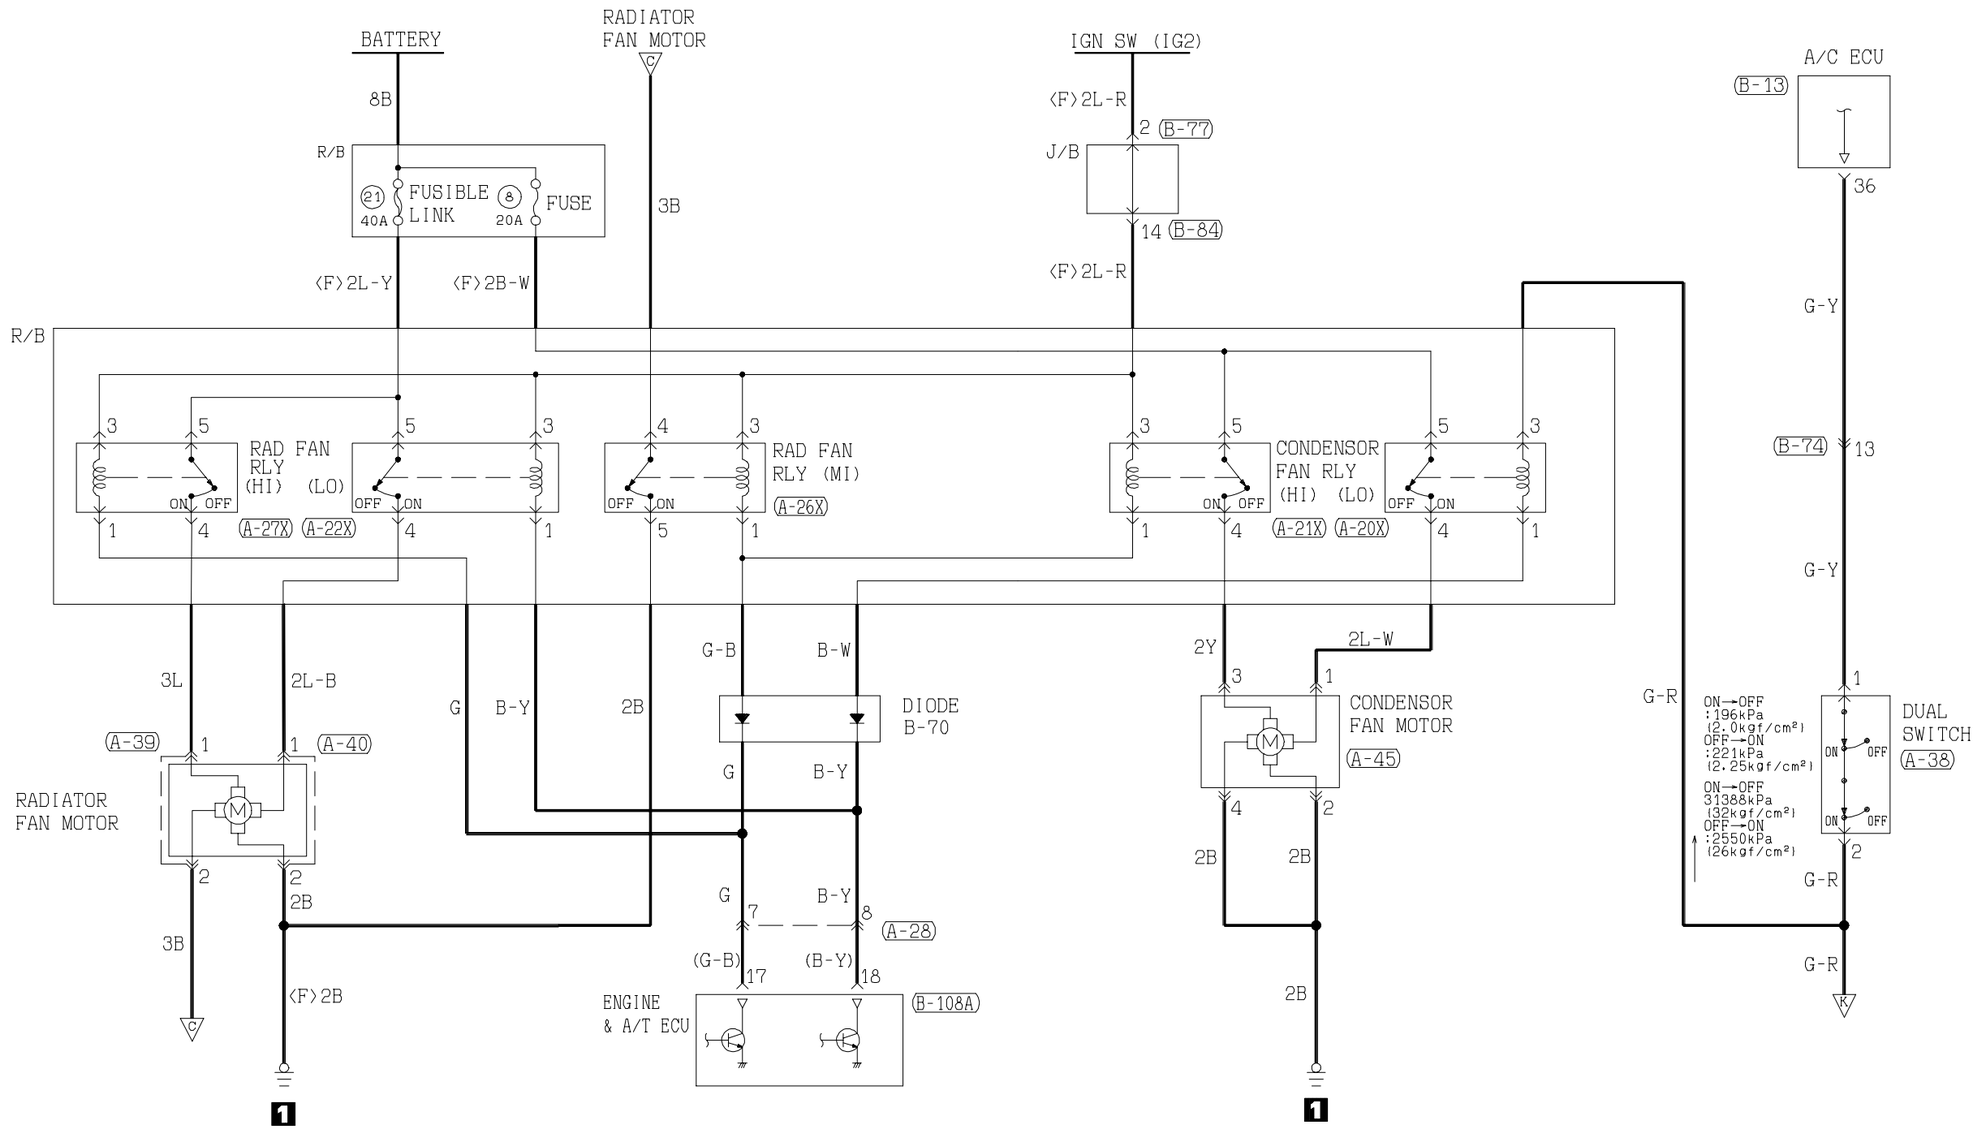





36TJ030D BA

36TJ030D BB

# FULL AUTOMATIC AIR CONDITIONING (CONTINUED)

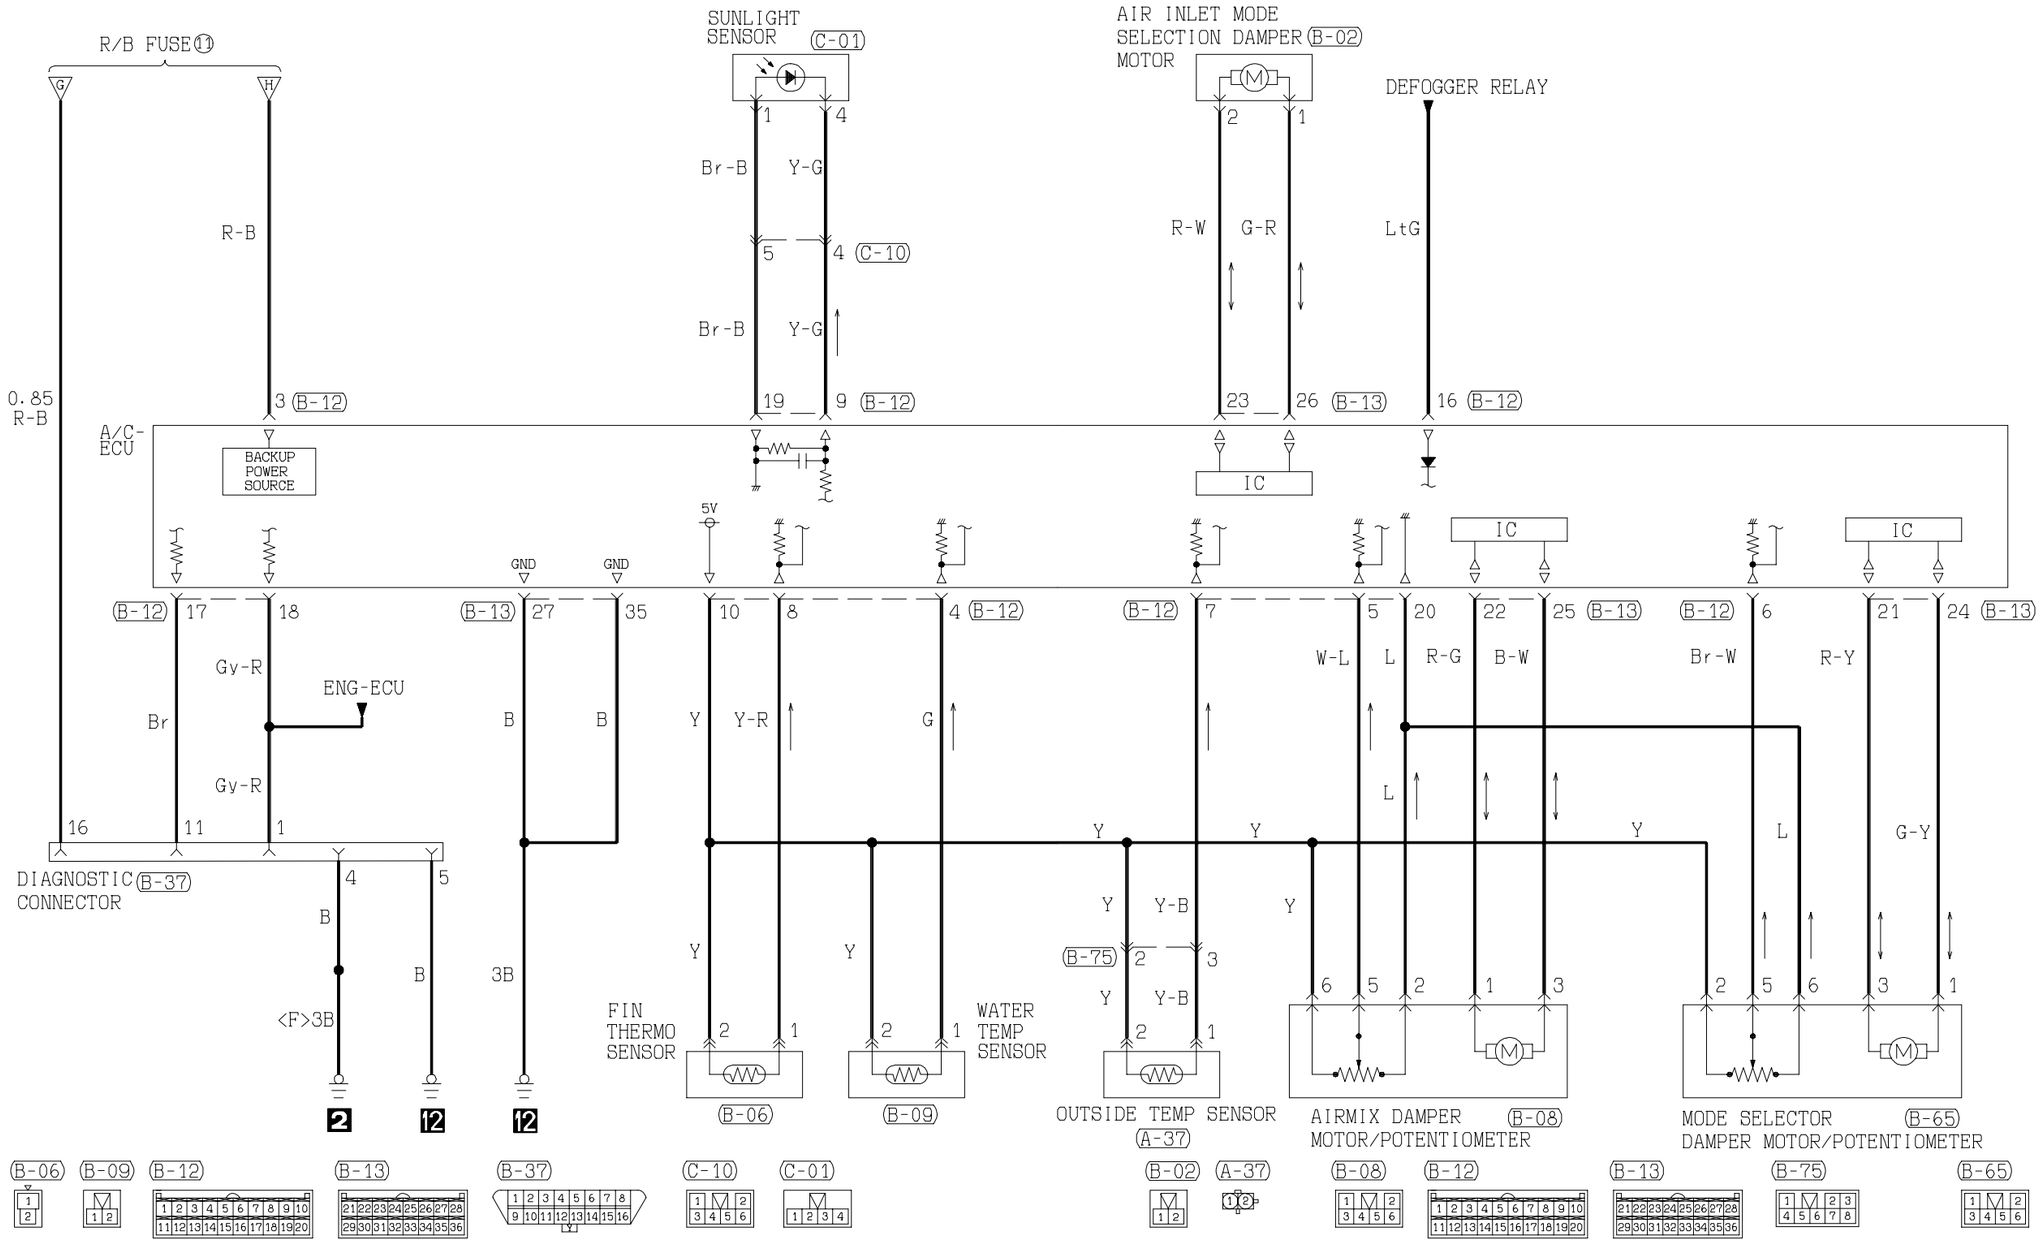


36TJ030D CA

36TJ030D CB

# WINDSHIELD WIPER/WASHER <FRONT>

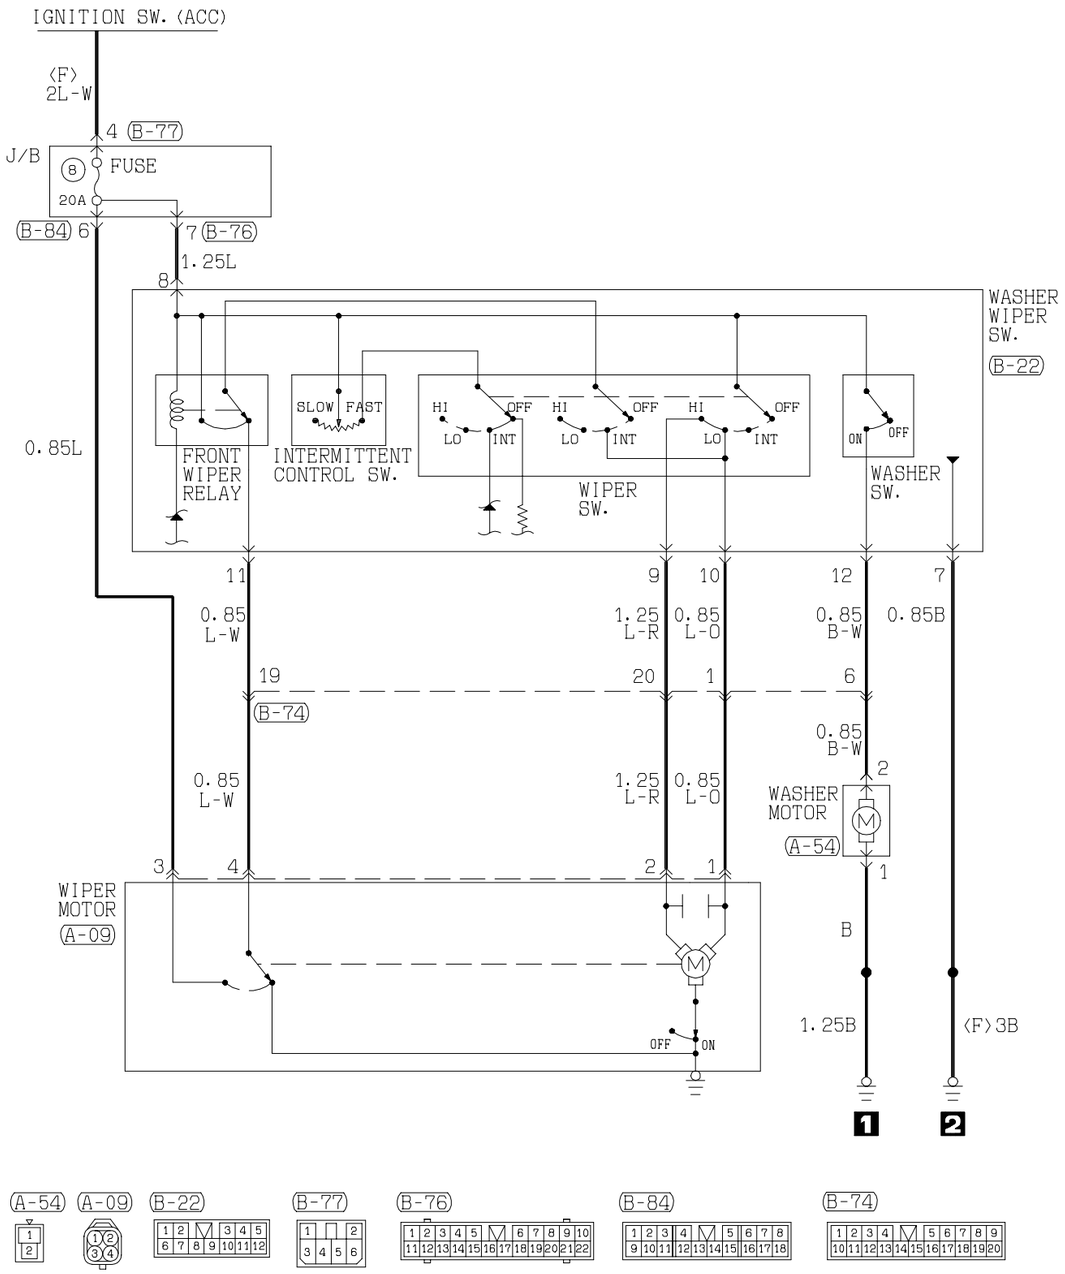





36TH031D AA

# WINDSHIELD WIPER/WASHER <REAR>

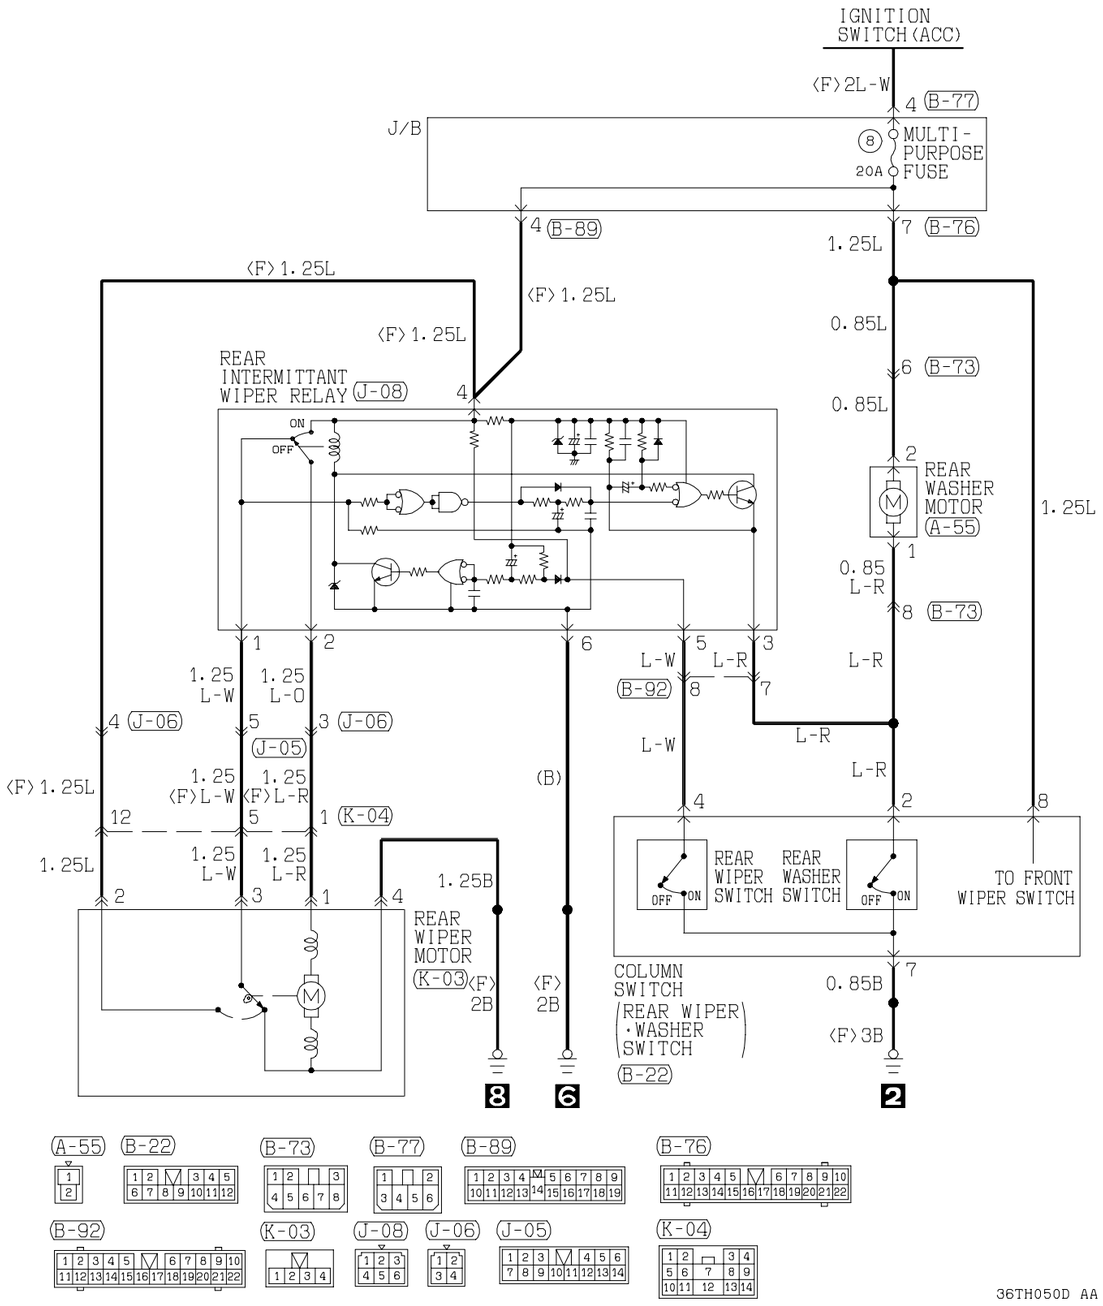





36TH050D AA

# DEFOGGER <MAGNA>

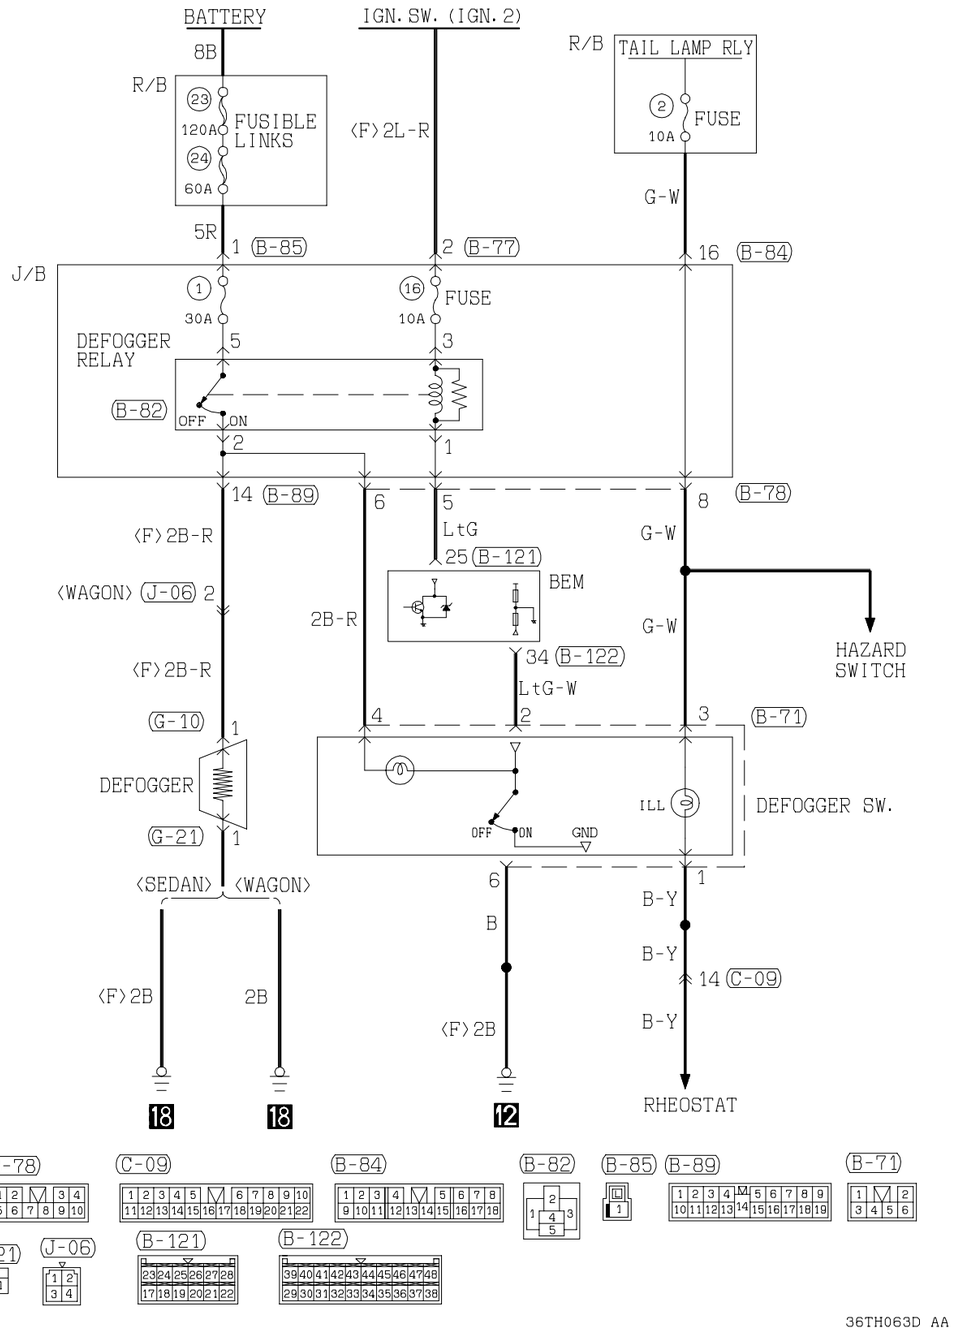


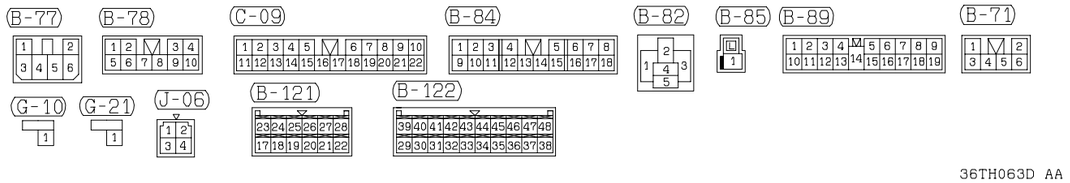


36TH063D AA

# DEFOGGER <VERADA>

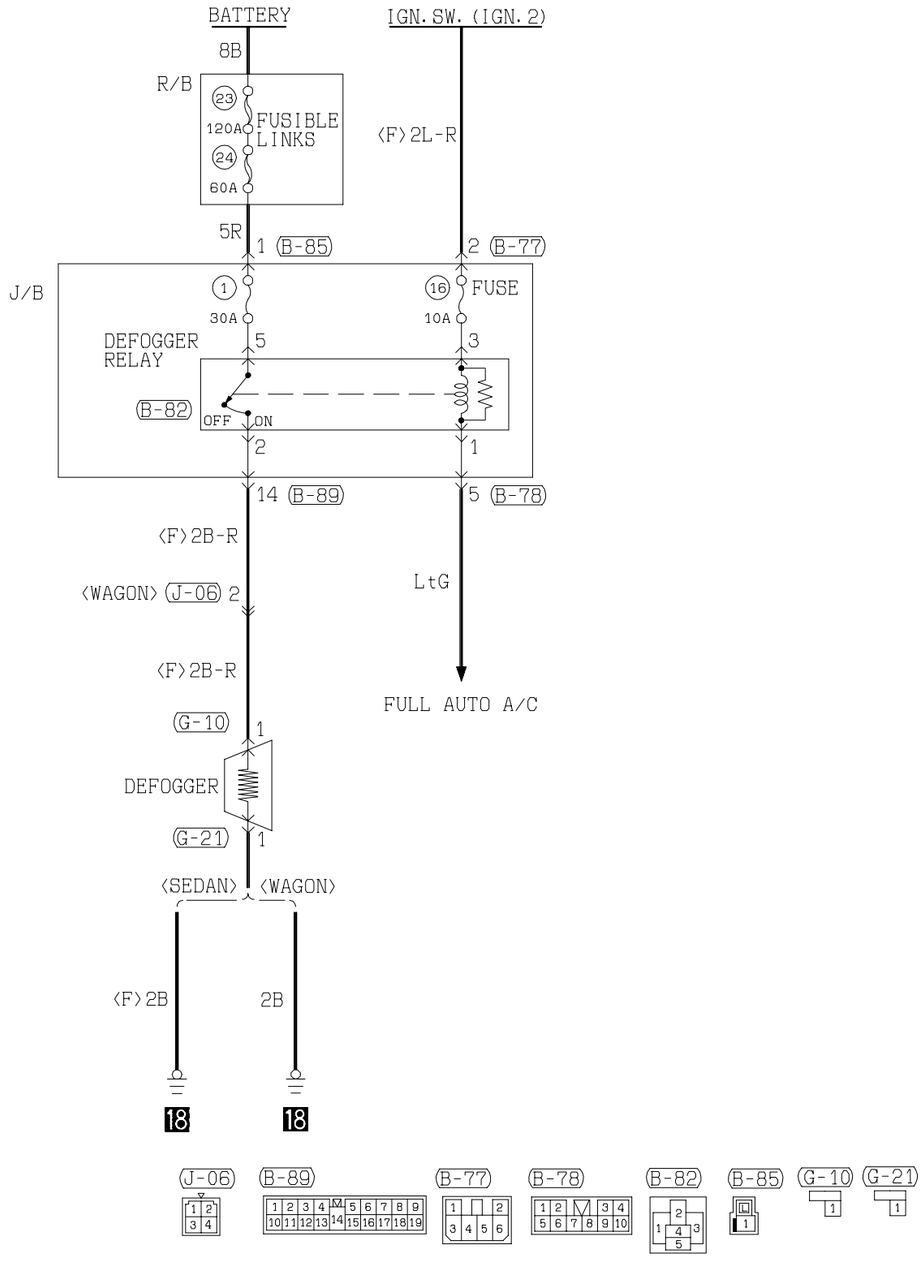


36KH032D AA

# REMOTE CONTROL MIRROR

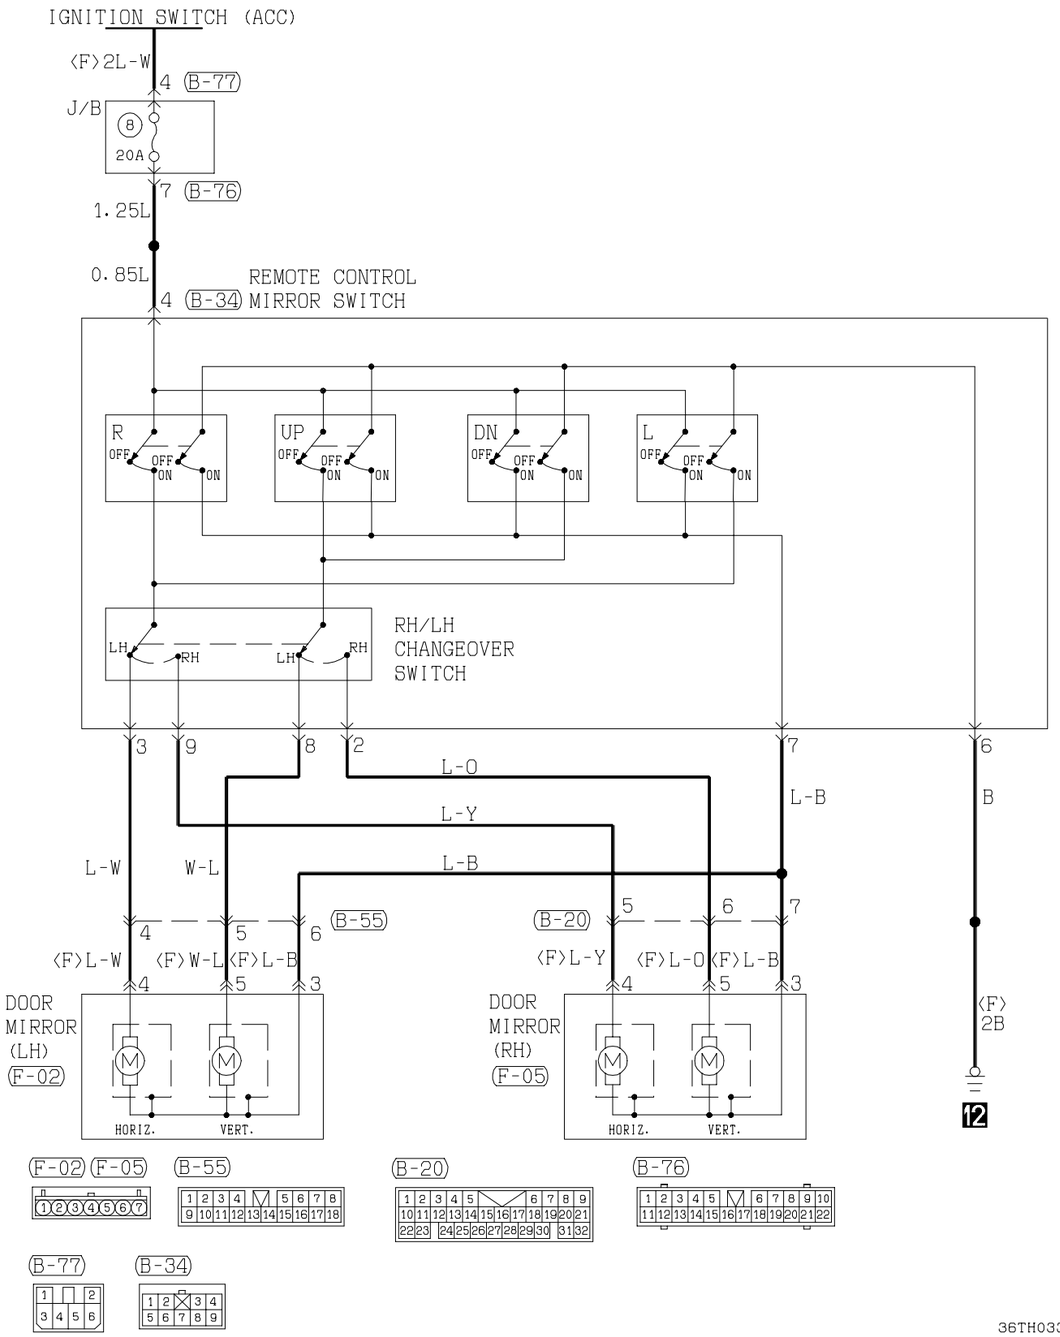


36TH033D AA

# CLOCK <VERADA Xi ONLY>

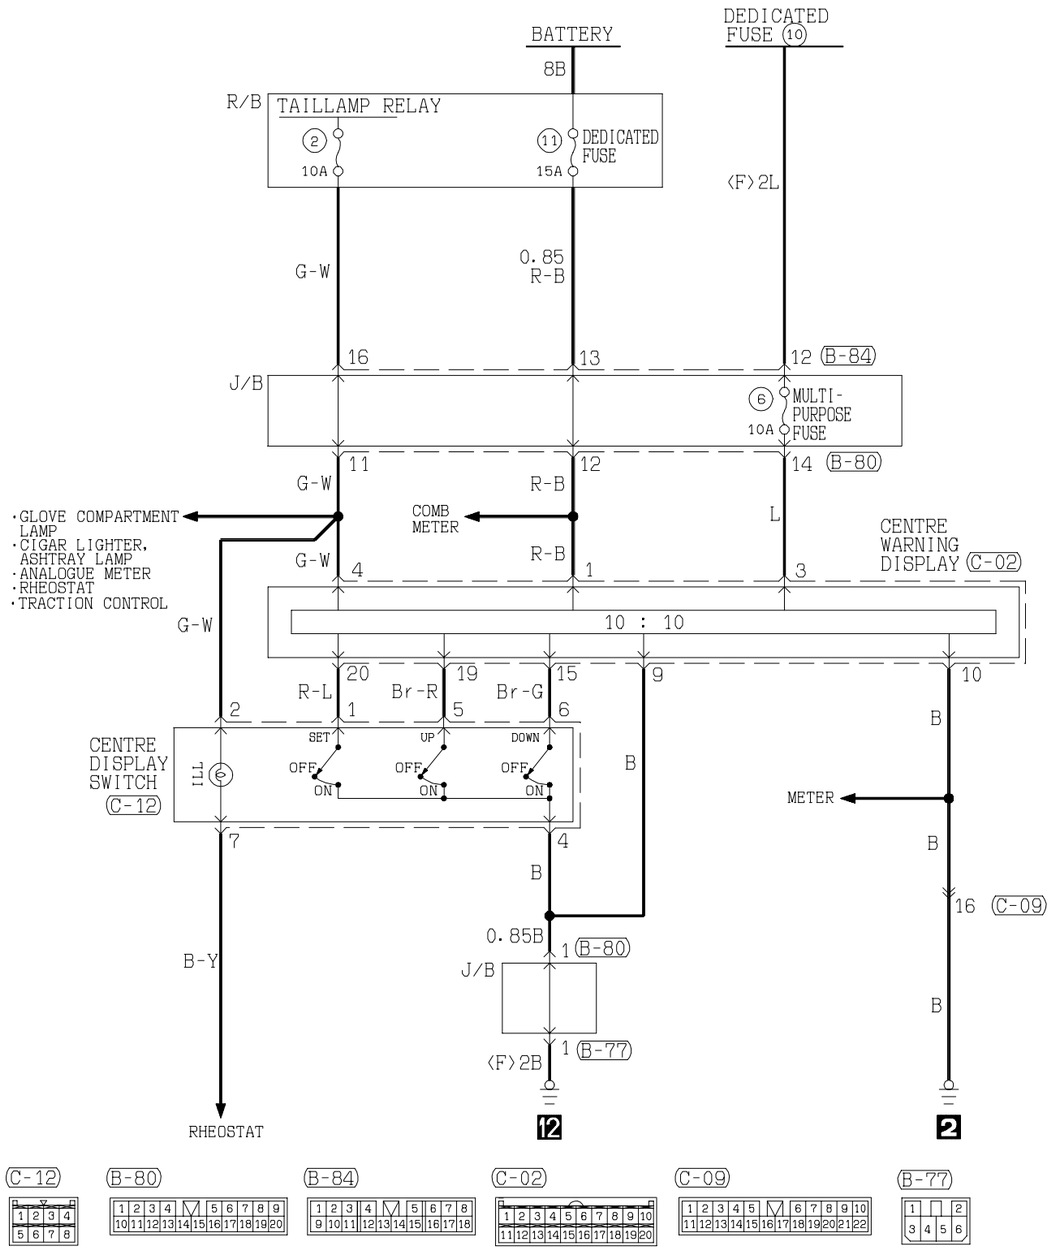


(C-12)



(B-80)



(B-84)



(C-02)



(C-09)



(B-77)

# CIGARETTE LIGHTER AND ASHTRAY LAMP

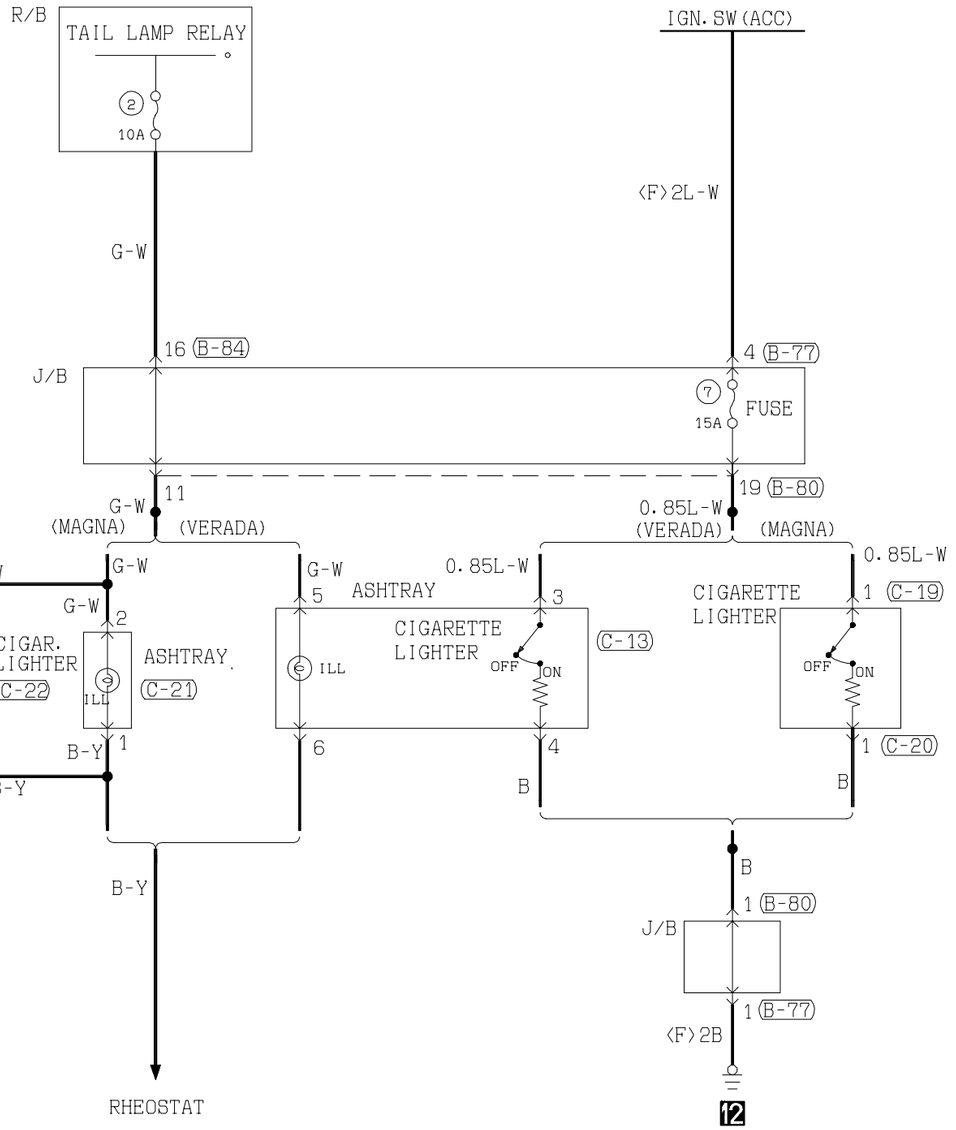





36TH037D AA

# PHONE CONNECTION

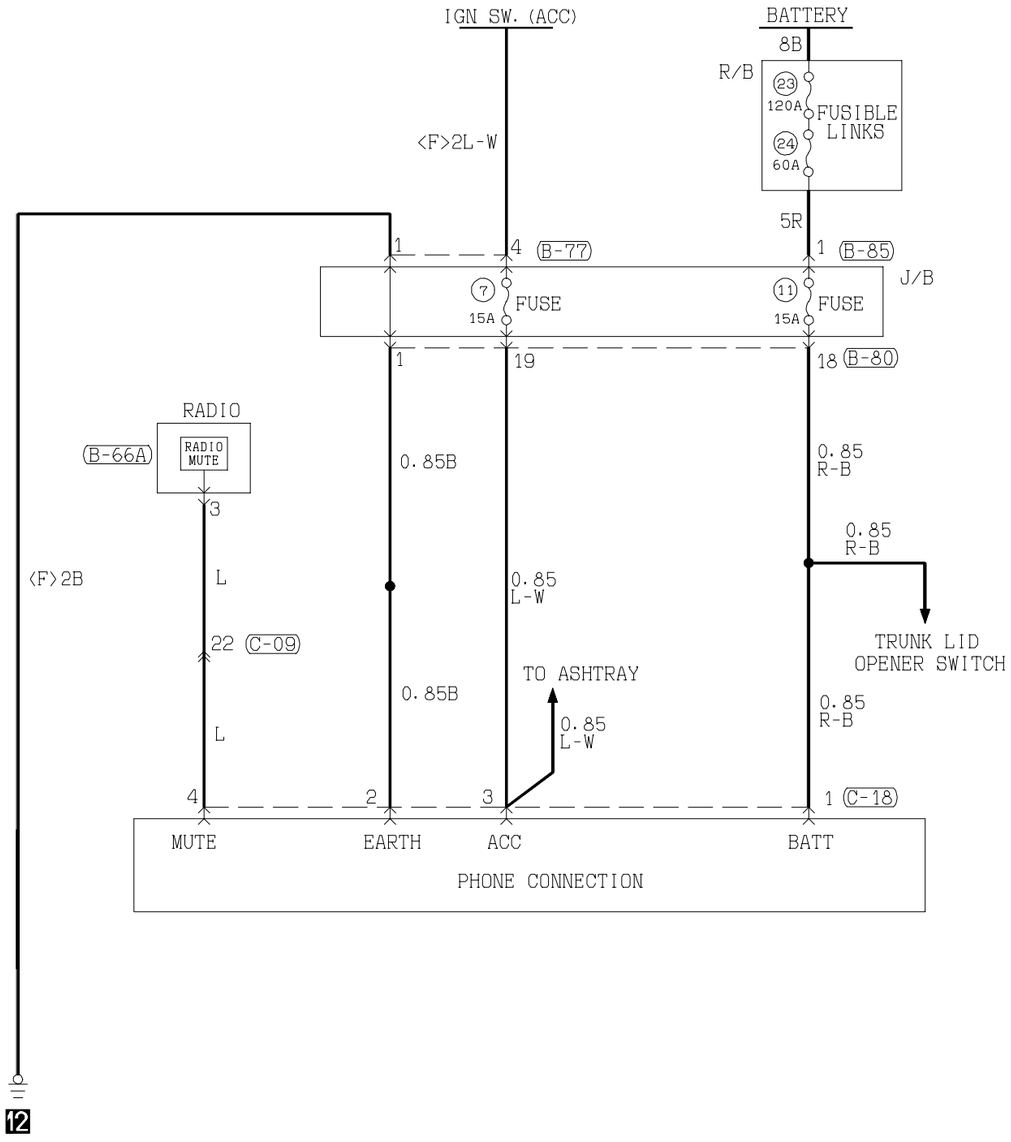





36TJ070D AA

# AUDIO <4 SPEAKER SYSTEM>

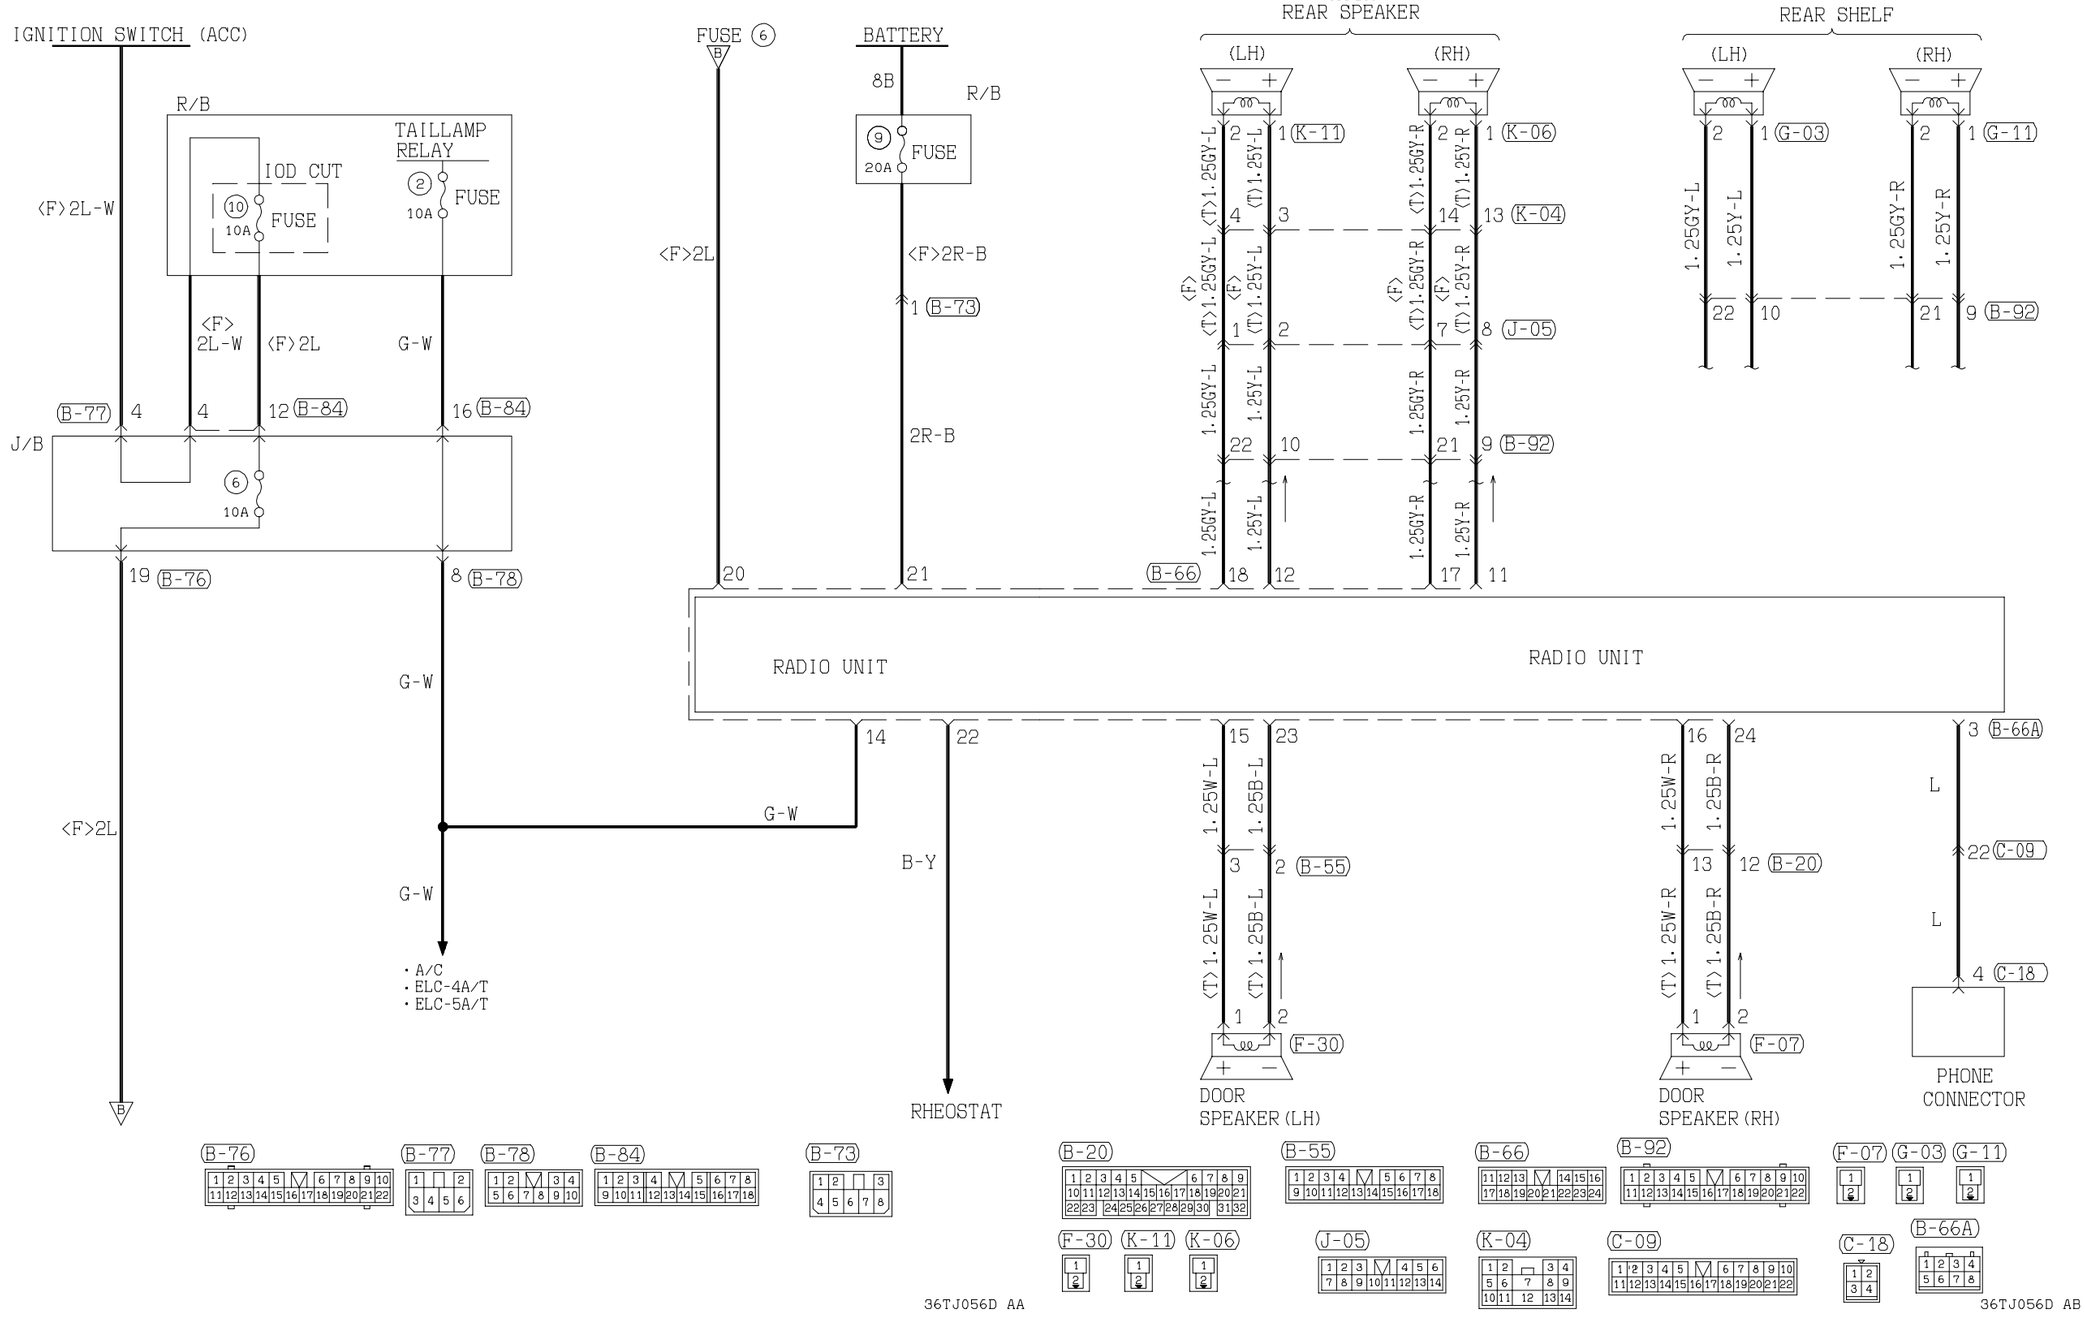

# AUDIO <6 & 8 SPEAKER SYSTEM>

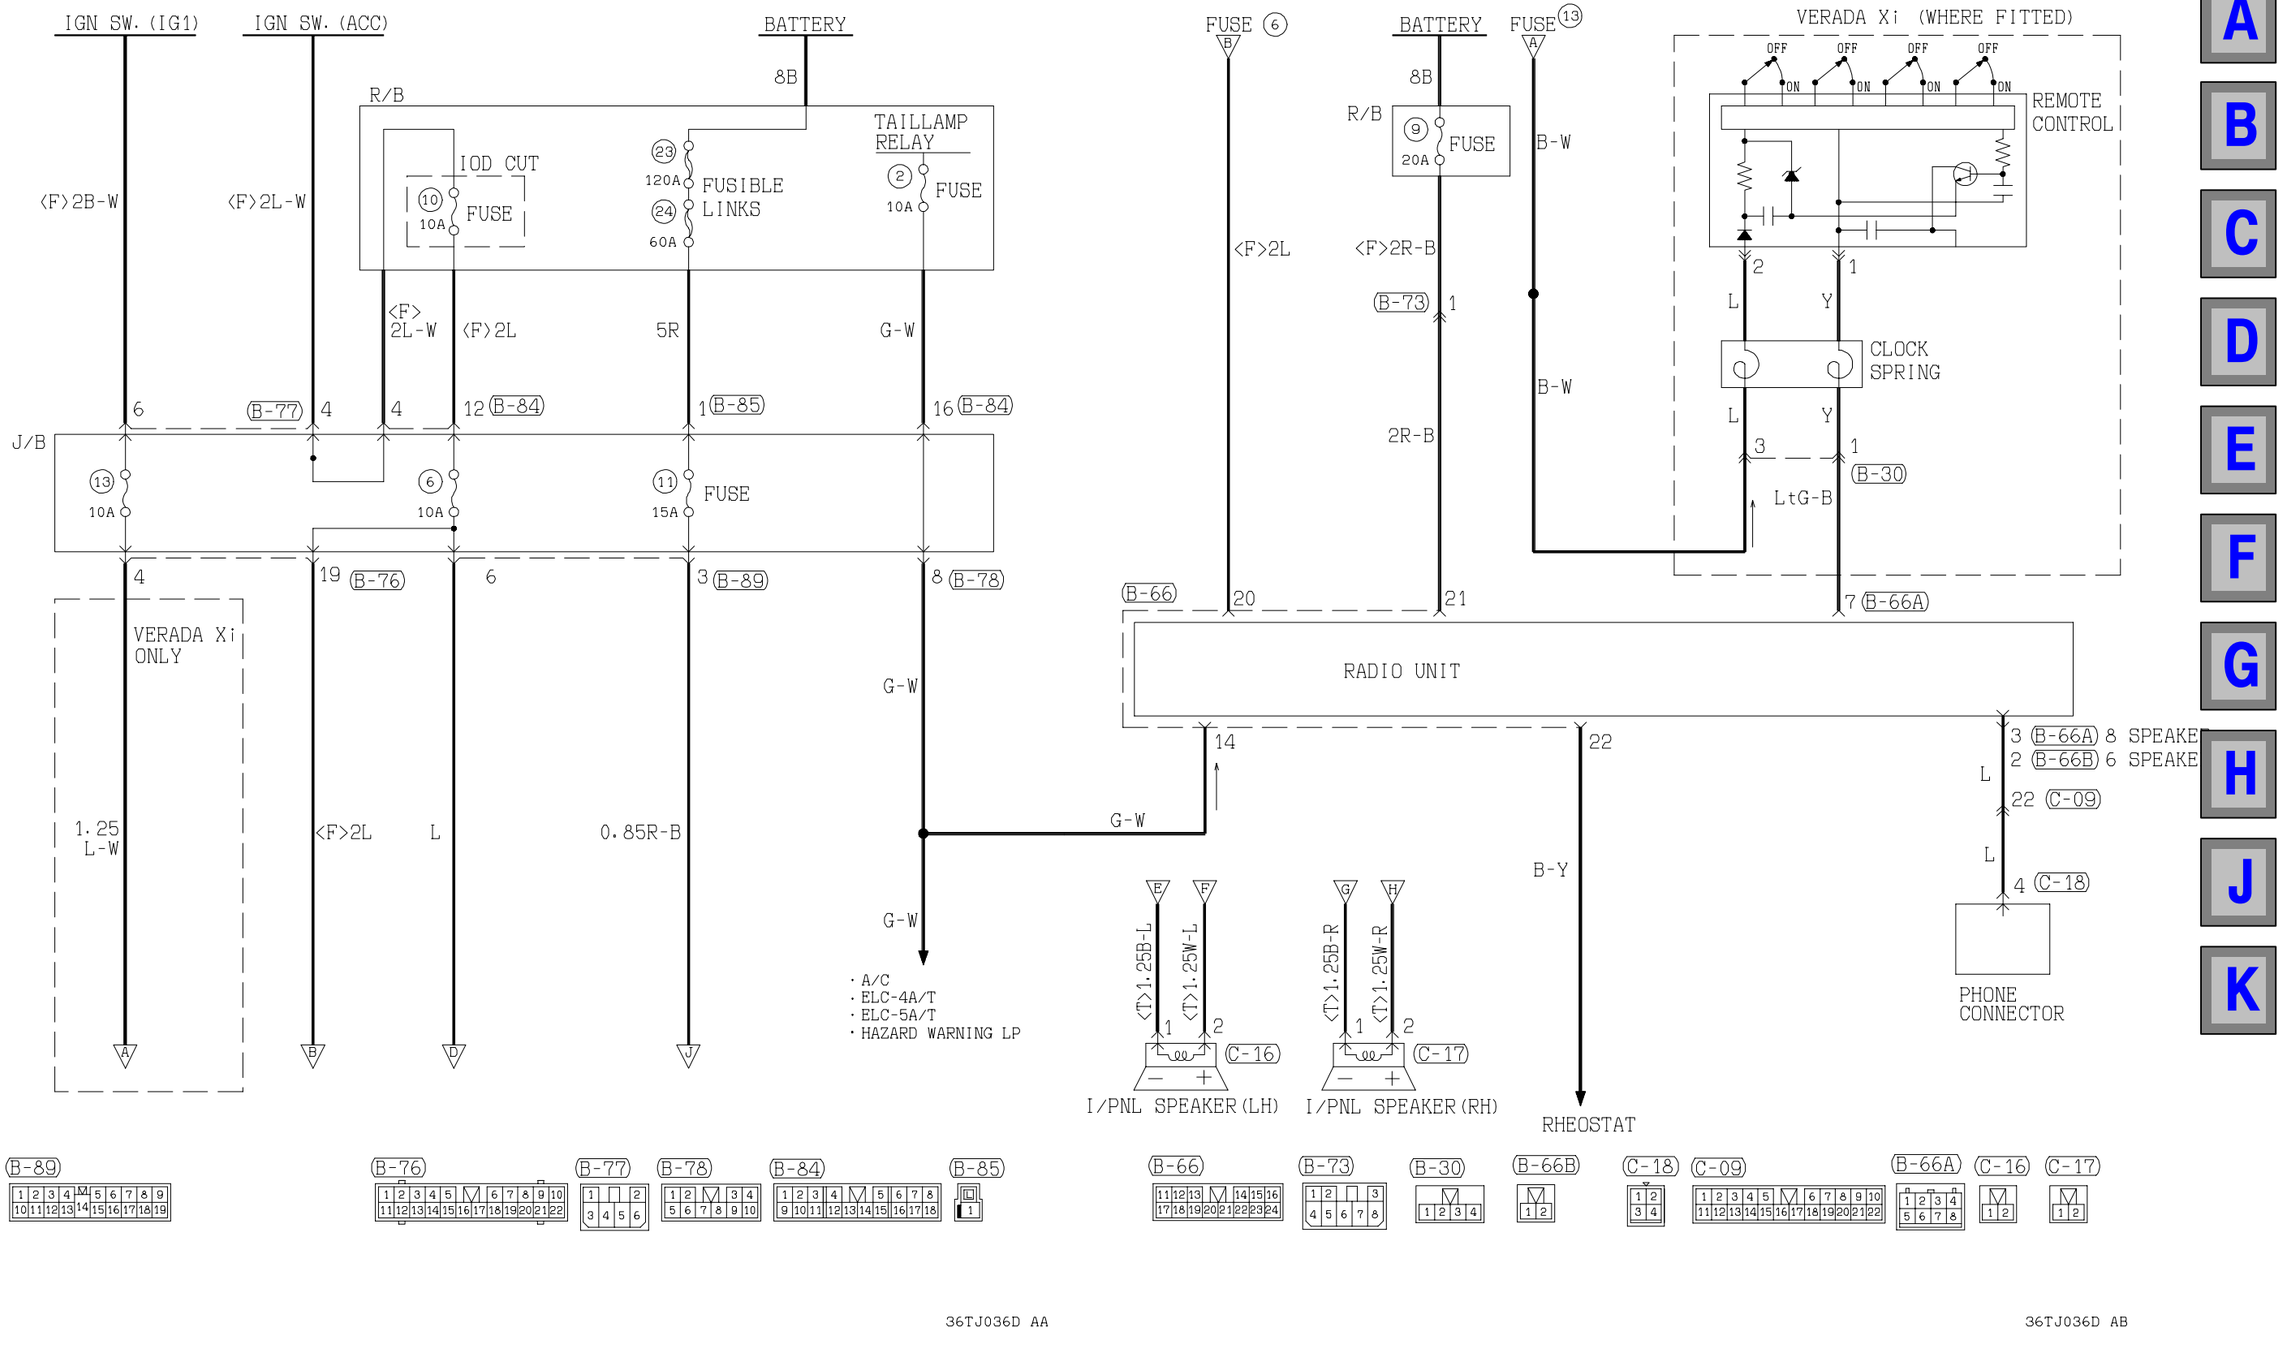


36TJ036D AA

36TJ036D AB

# AUDIO <6 & 8 SPEAKER SYSTEM> (CONTINUED)

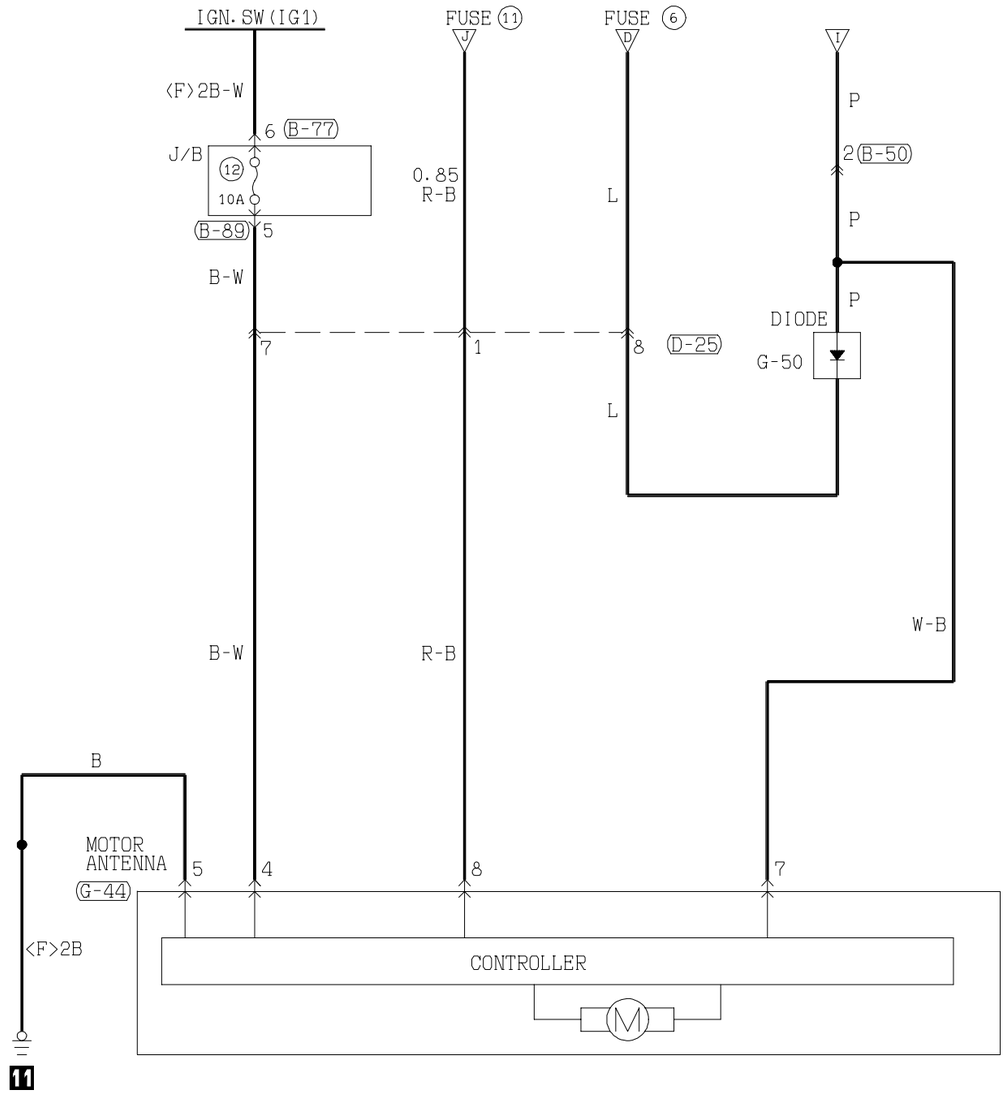





36TJ036D BA

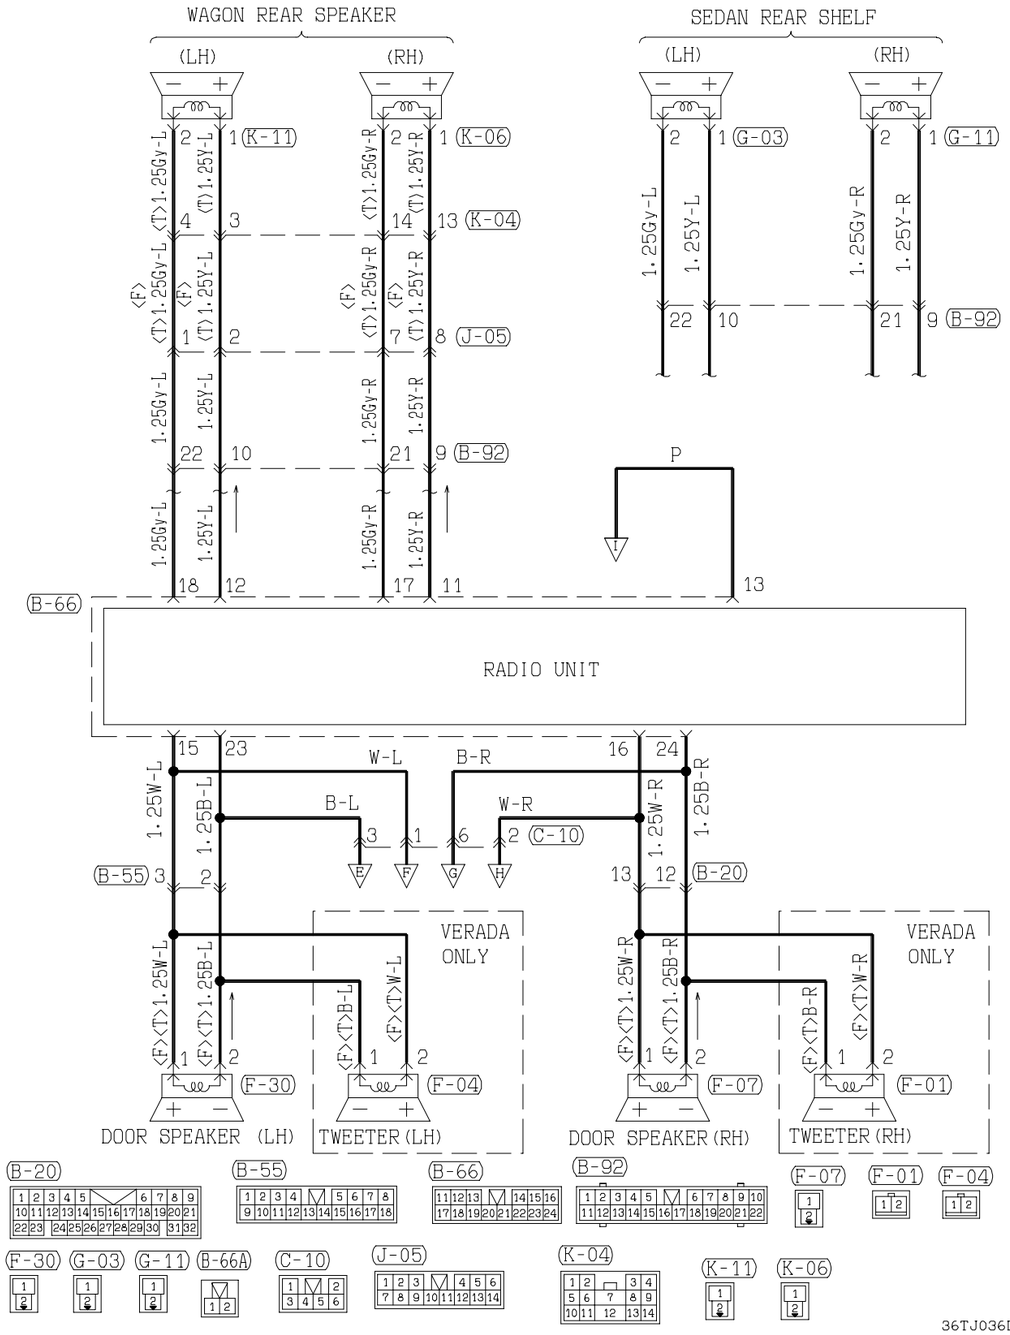





36TJ036D BB

# ANTI-SKID BRAKING SYSTEM (ABS) <Without Traction Control>

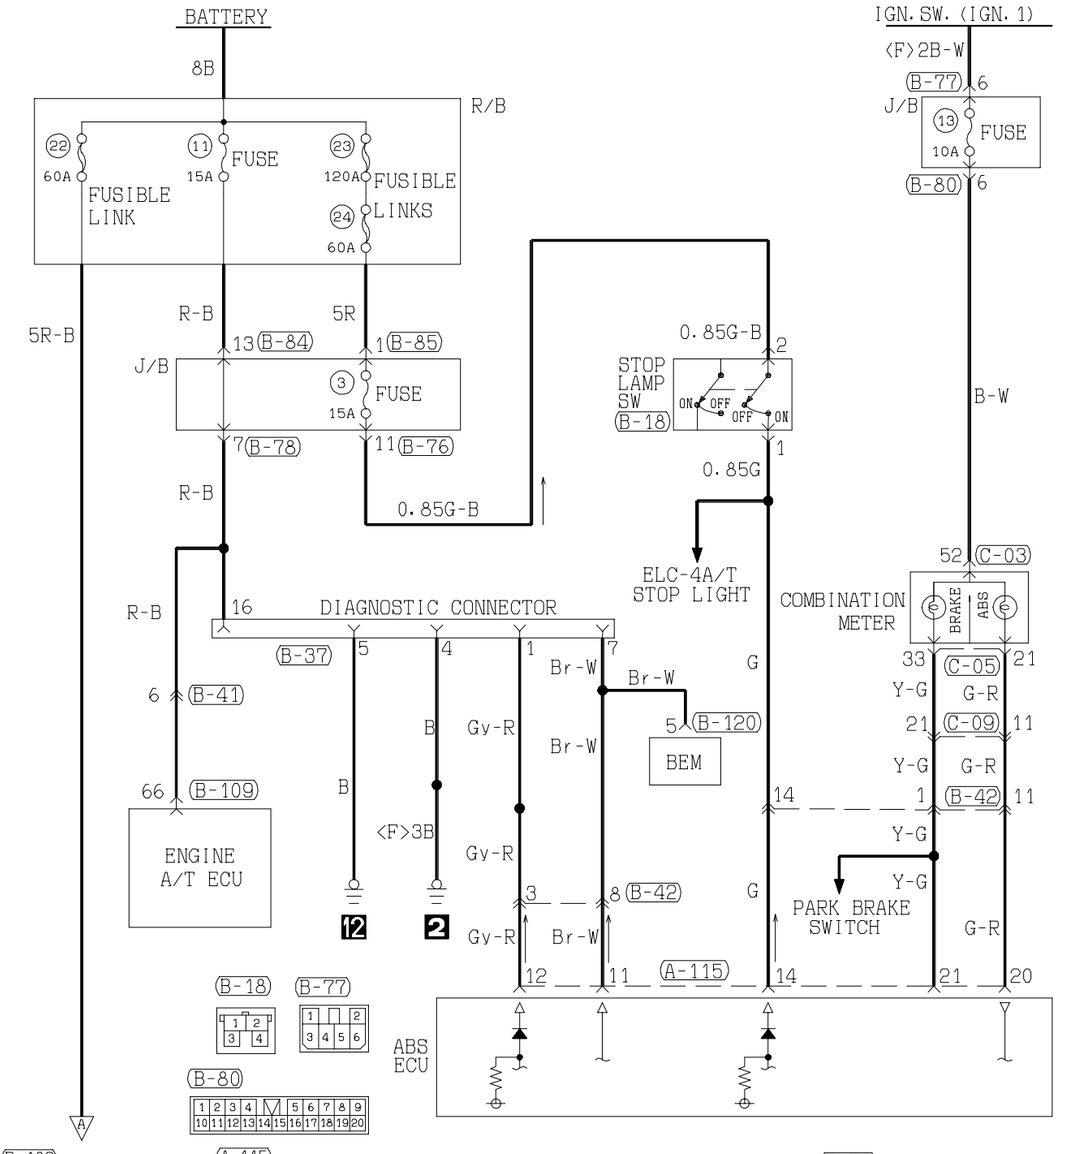


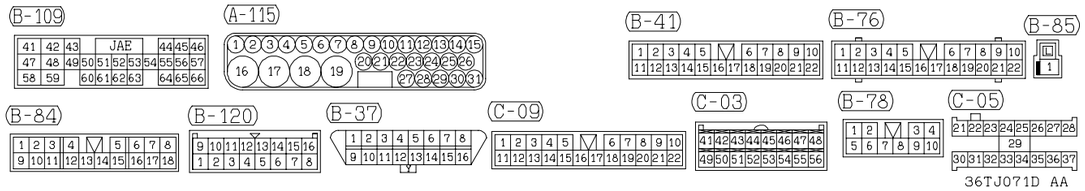


36TJ071D AA




36TJ071D AB

# ANTI-SKID BRAKING SYSTEM (ABS) <Without Traction Control> (CONTINUED)

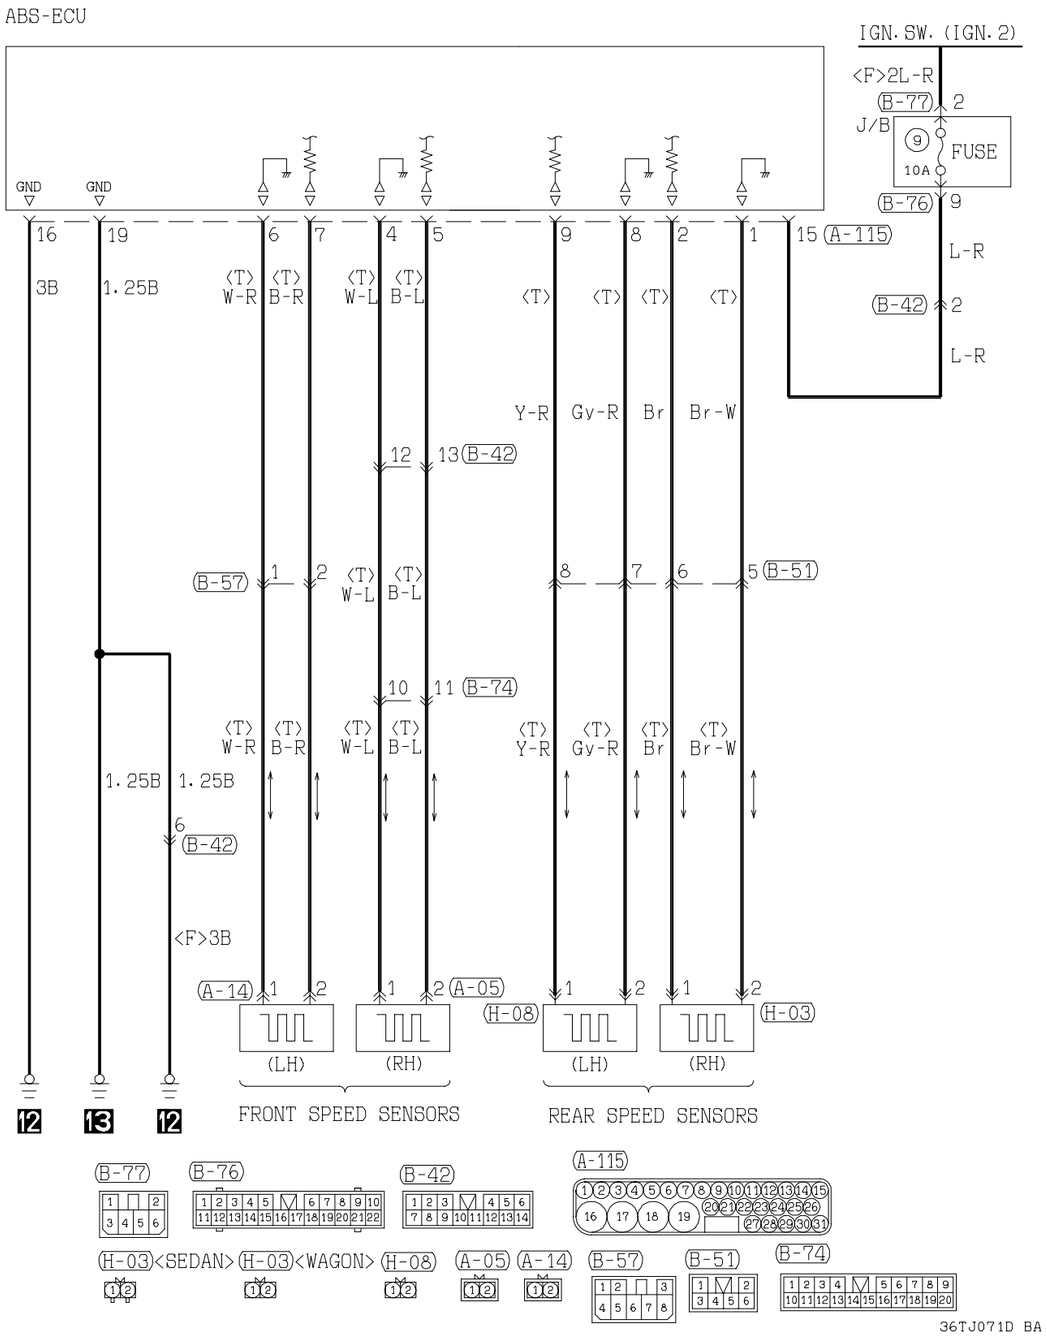


36TJ071D BA

# ANTI-SKID BRAKING SYSTEM (ABS) <With Traction Control>

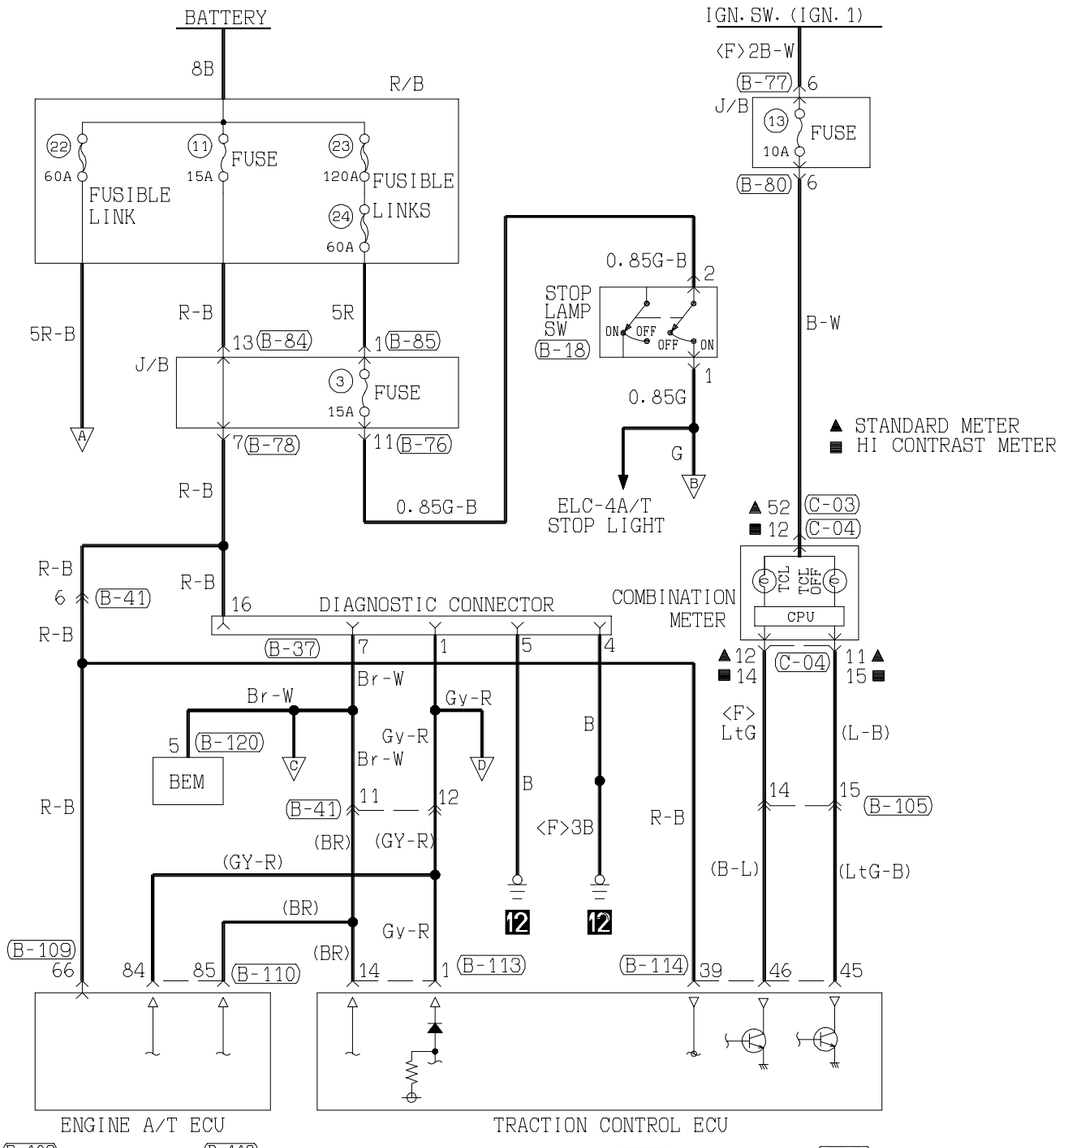


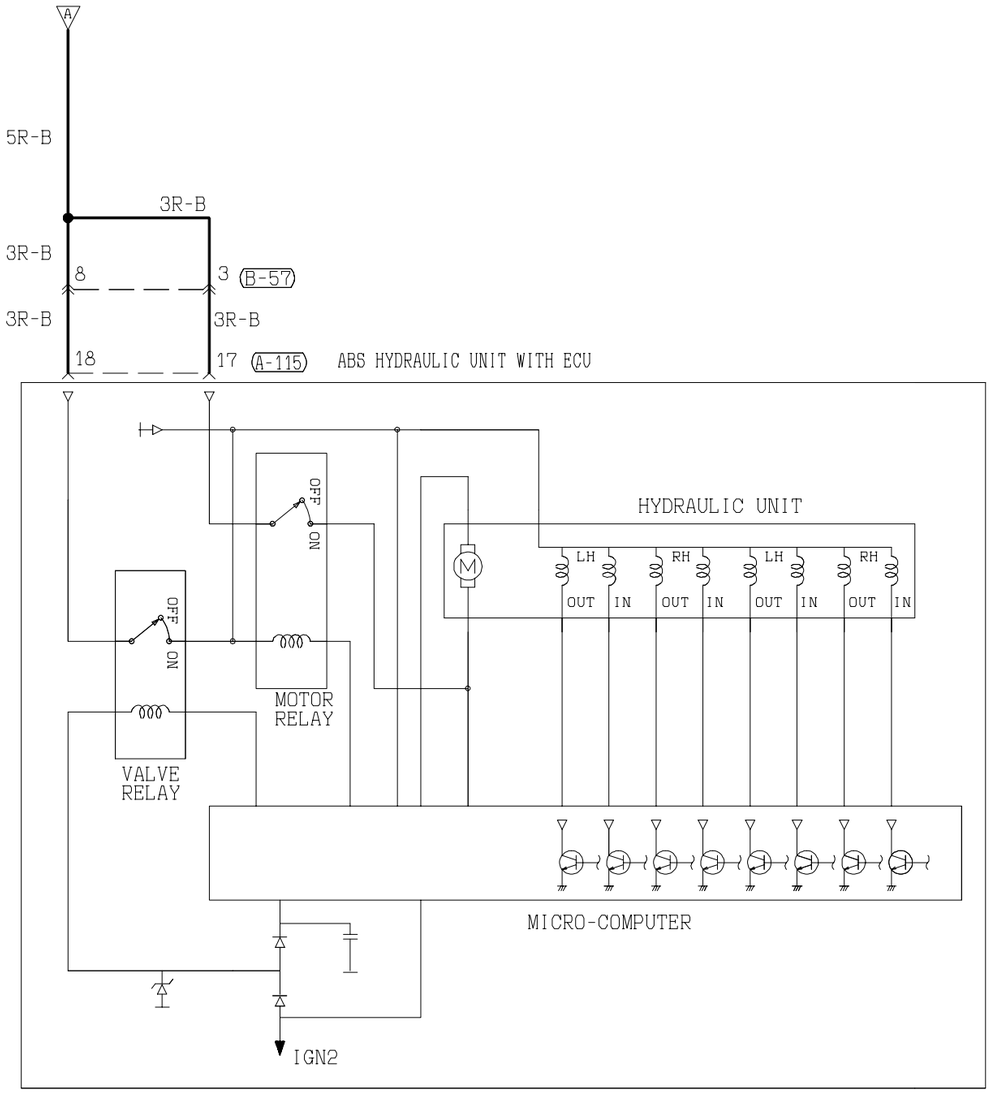


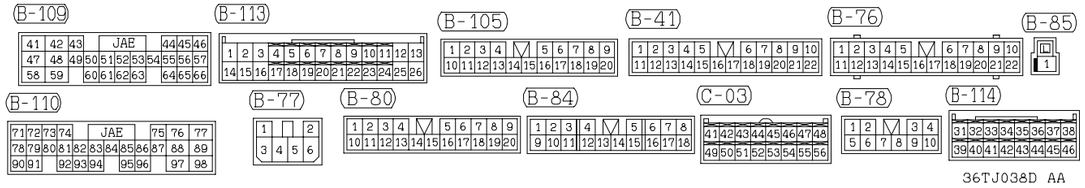





36TJ038D AA

36TJ038D AB

# ANTI-SKID BRAKING SYSTEM (ABS) <With Traction Control> (CONTINUED)

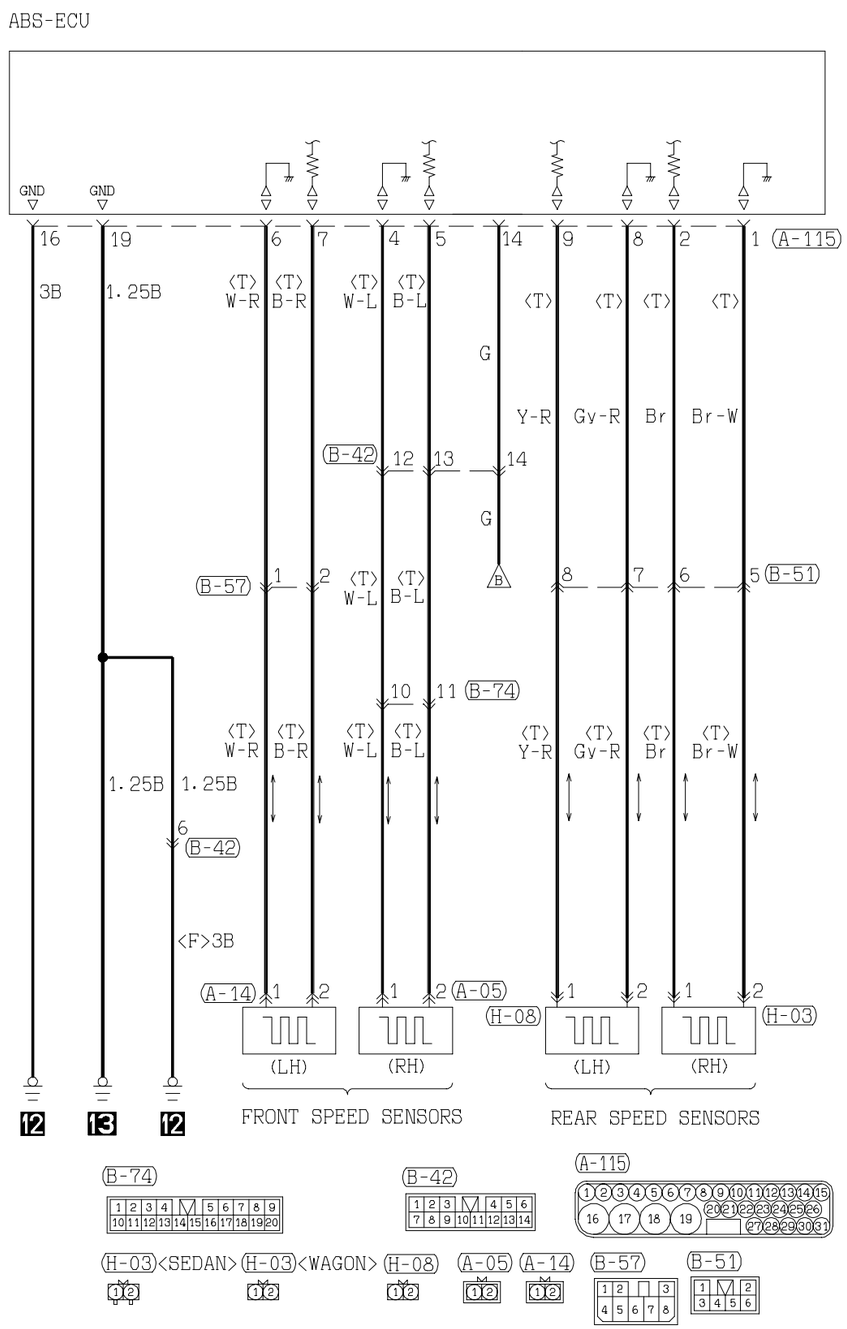





36TJ038D BA

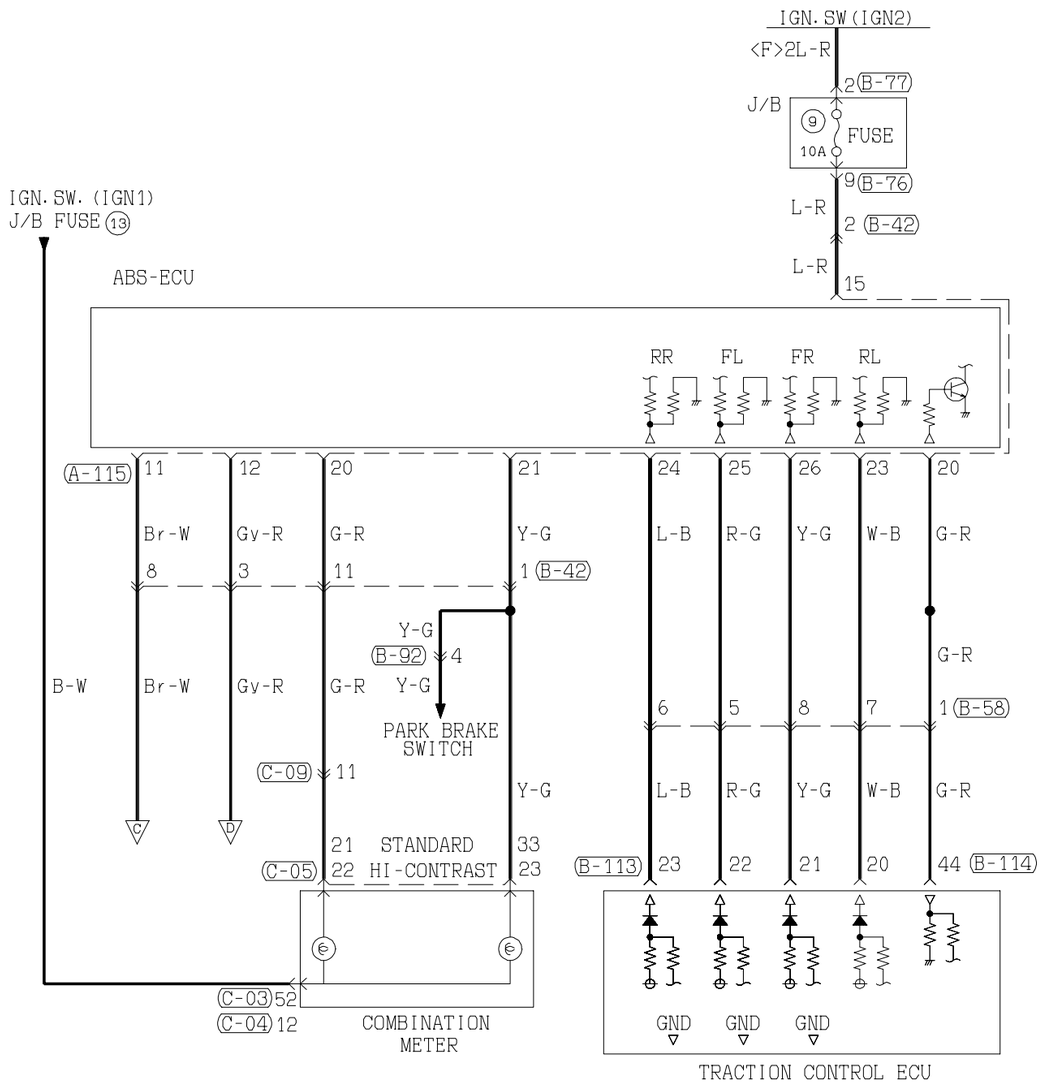


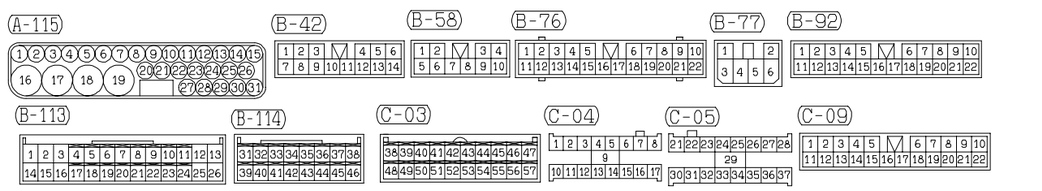


36TJ038D BB

# TRACTION CONTROL SYSTEM

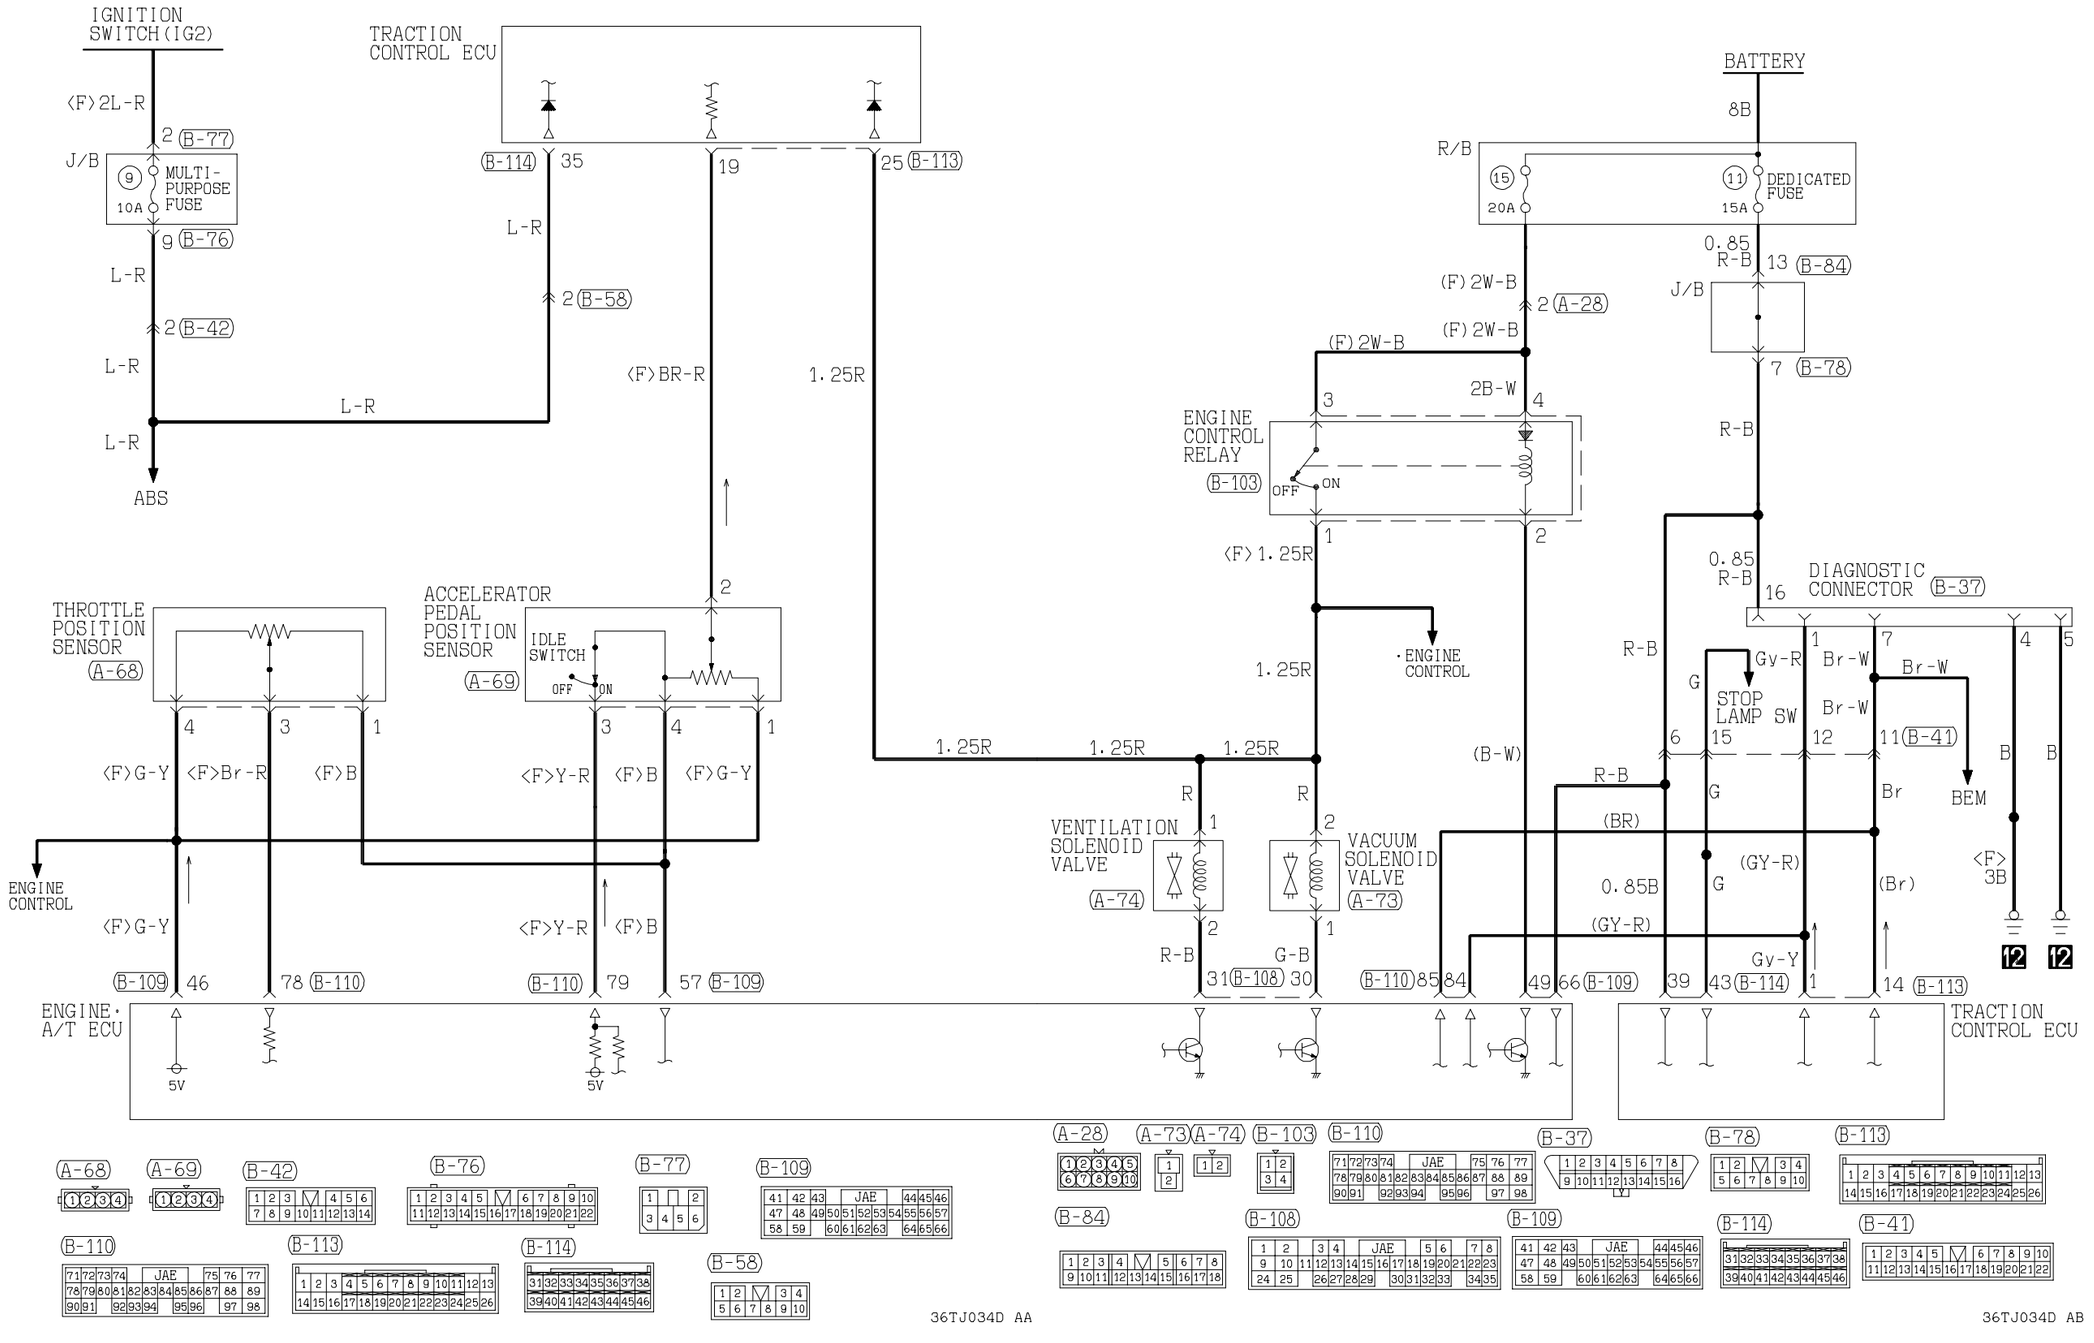


36TJ034D AA

36TJ034D AB

# TRACTION CONTROL SYSTEM (CONTINUED)

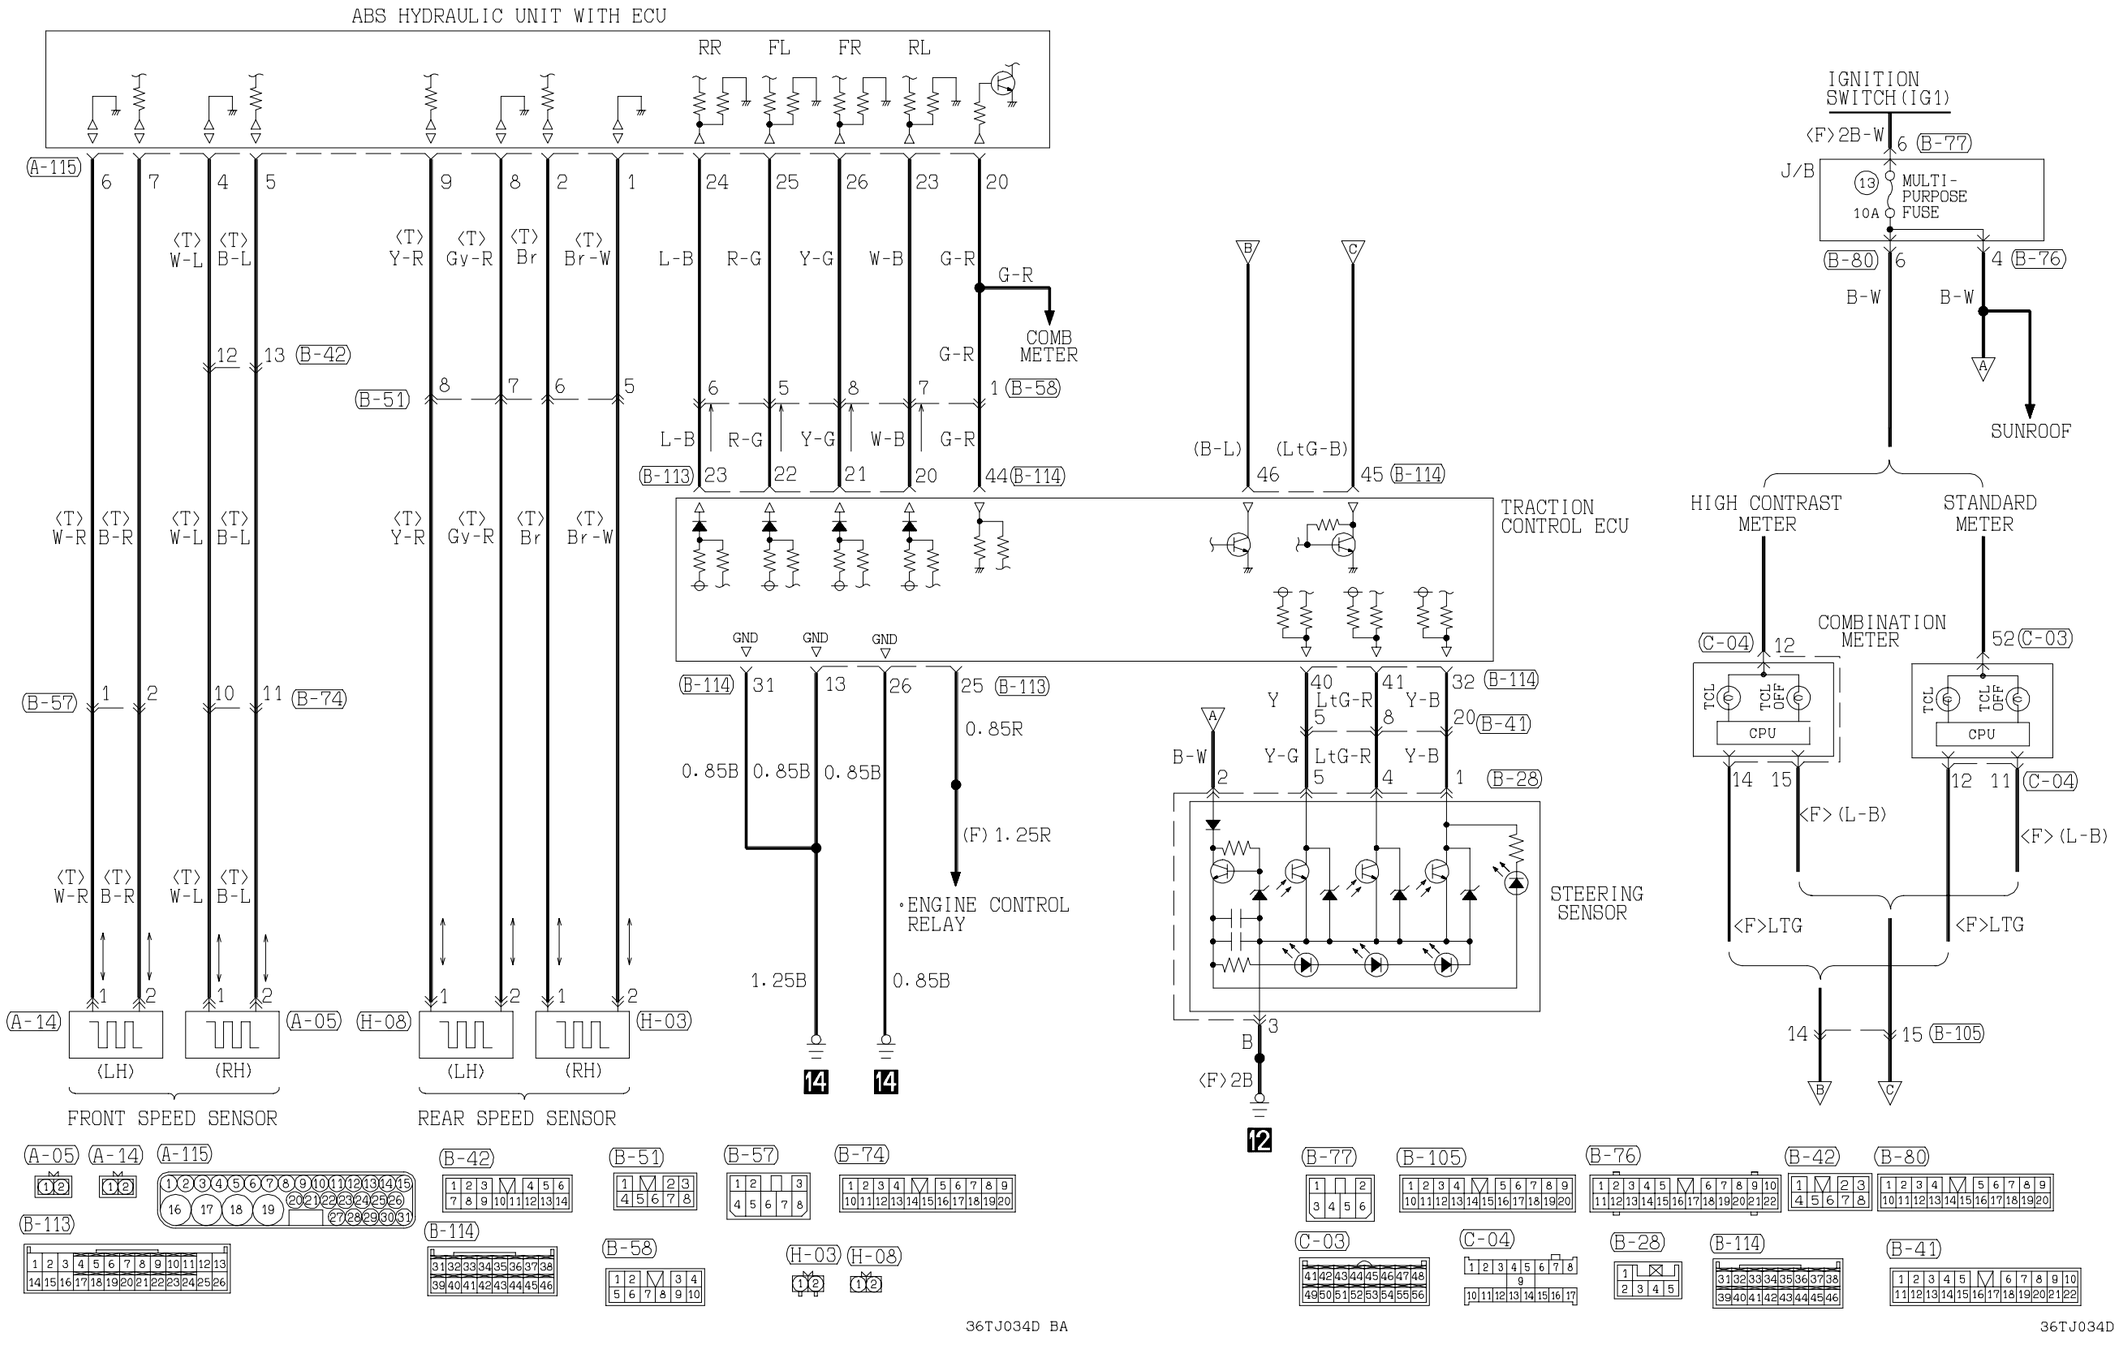

# TRACTION CONTROL SYSTEM (CONTINUED)

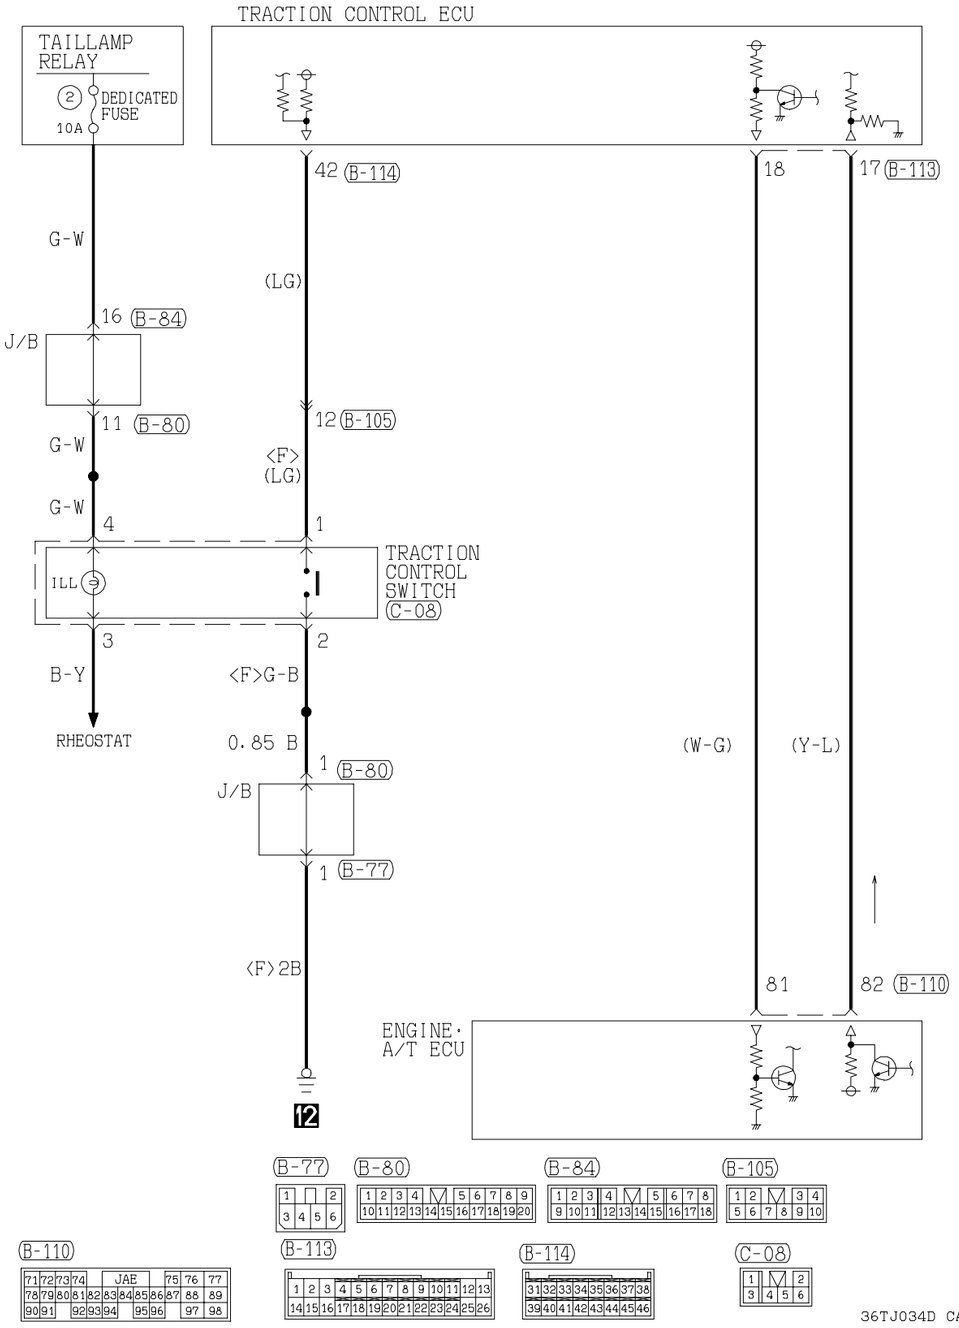

# CRUISE CONTROL

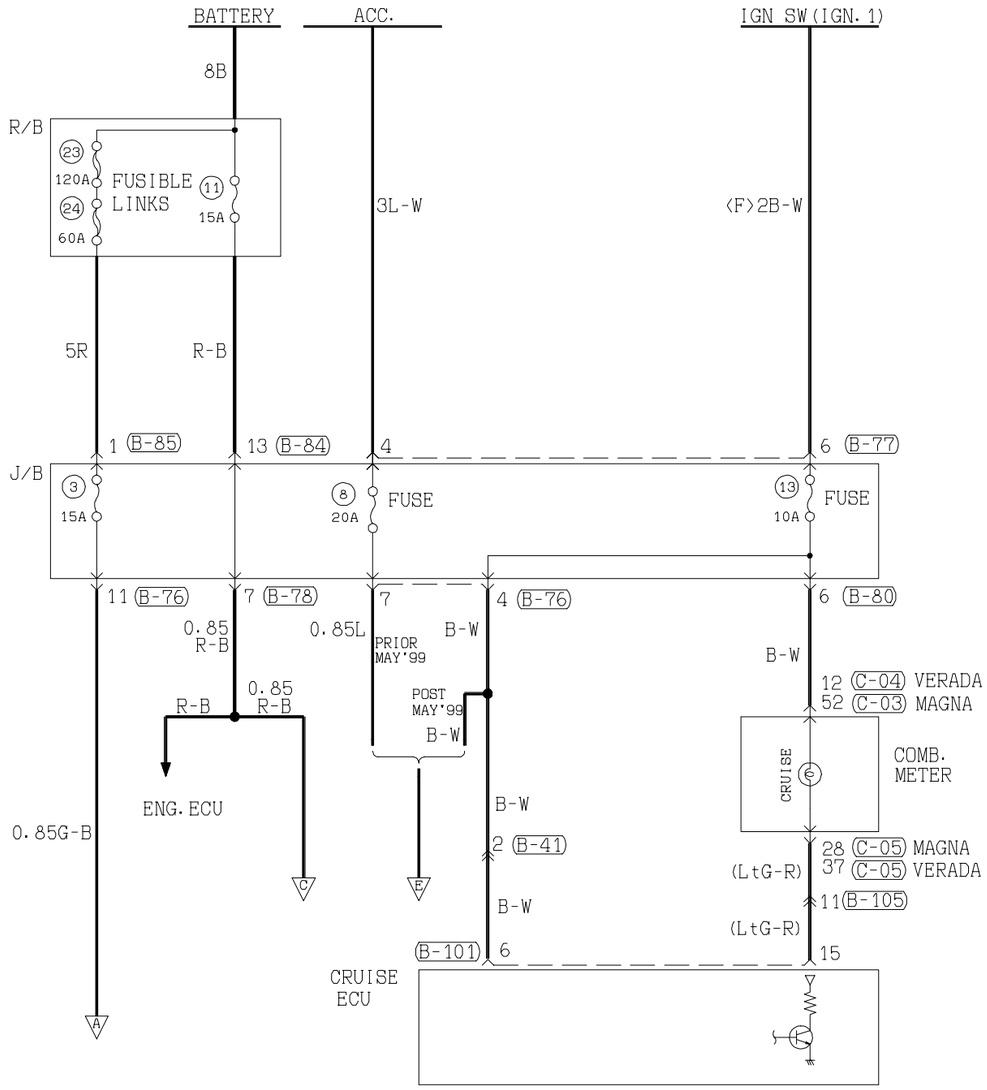


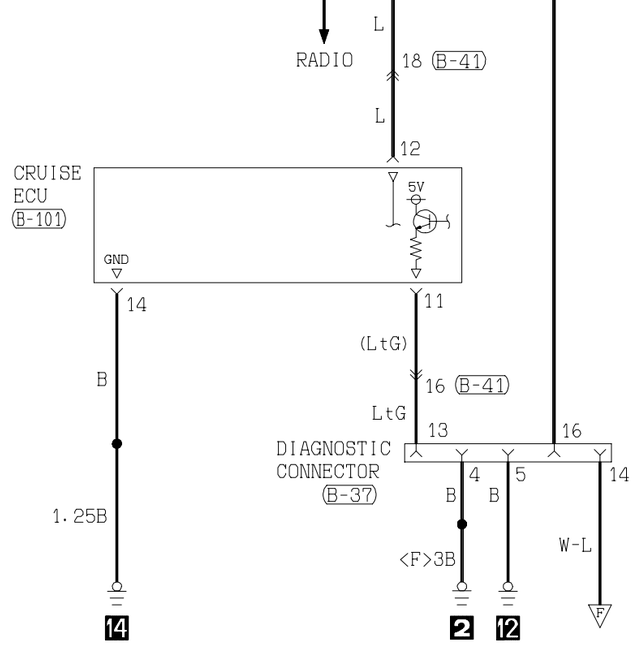


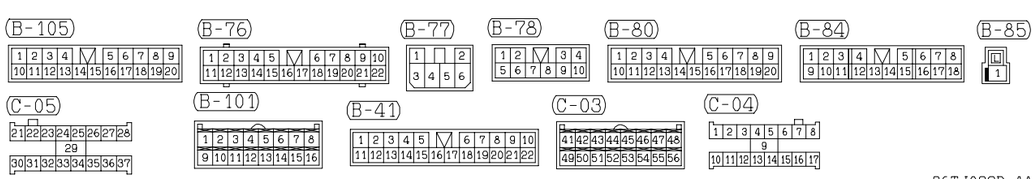


36TJ039D AA

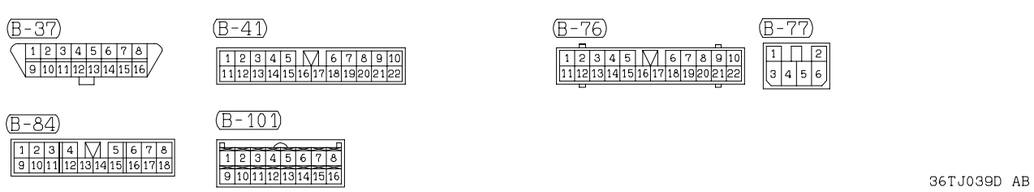


36TJ039D AB

# CRUISE CONTROL (CONTINUED)

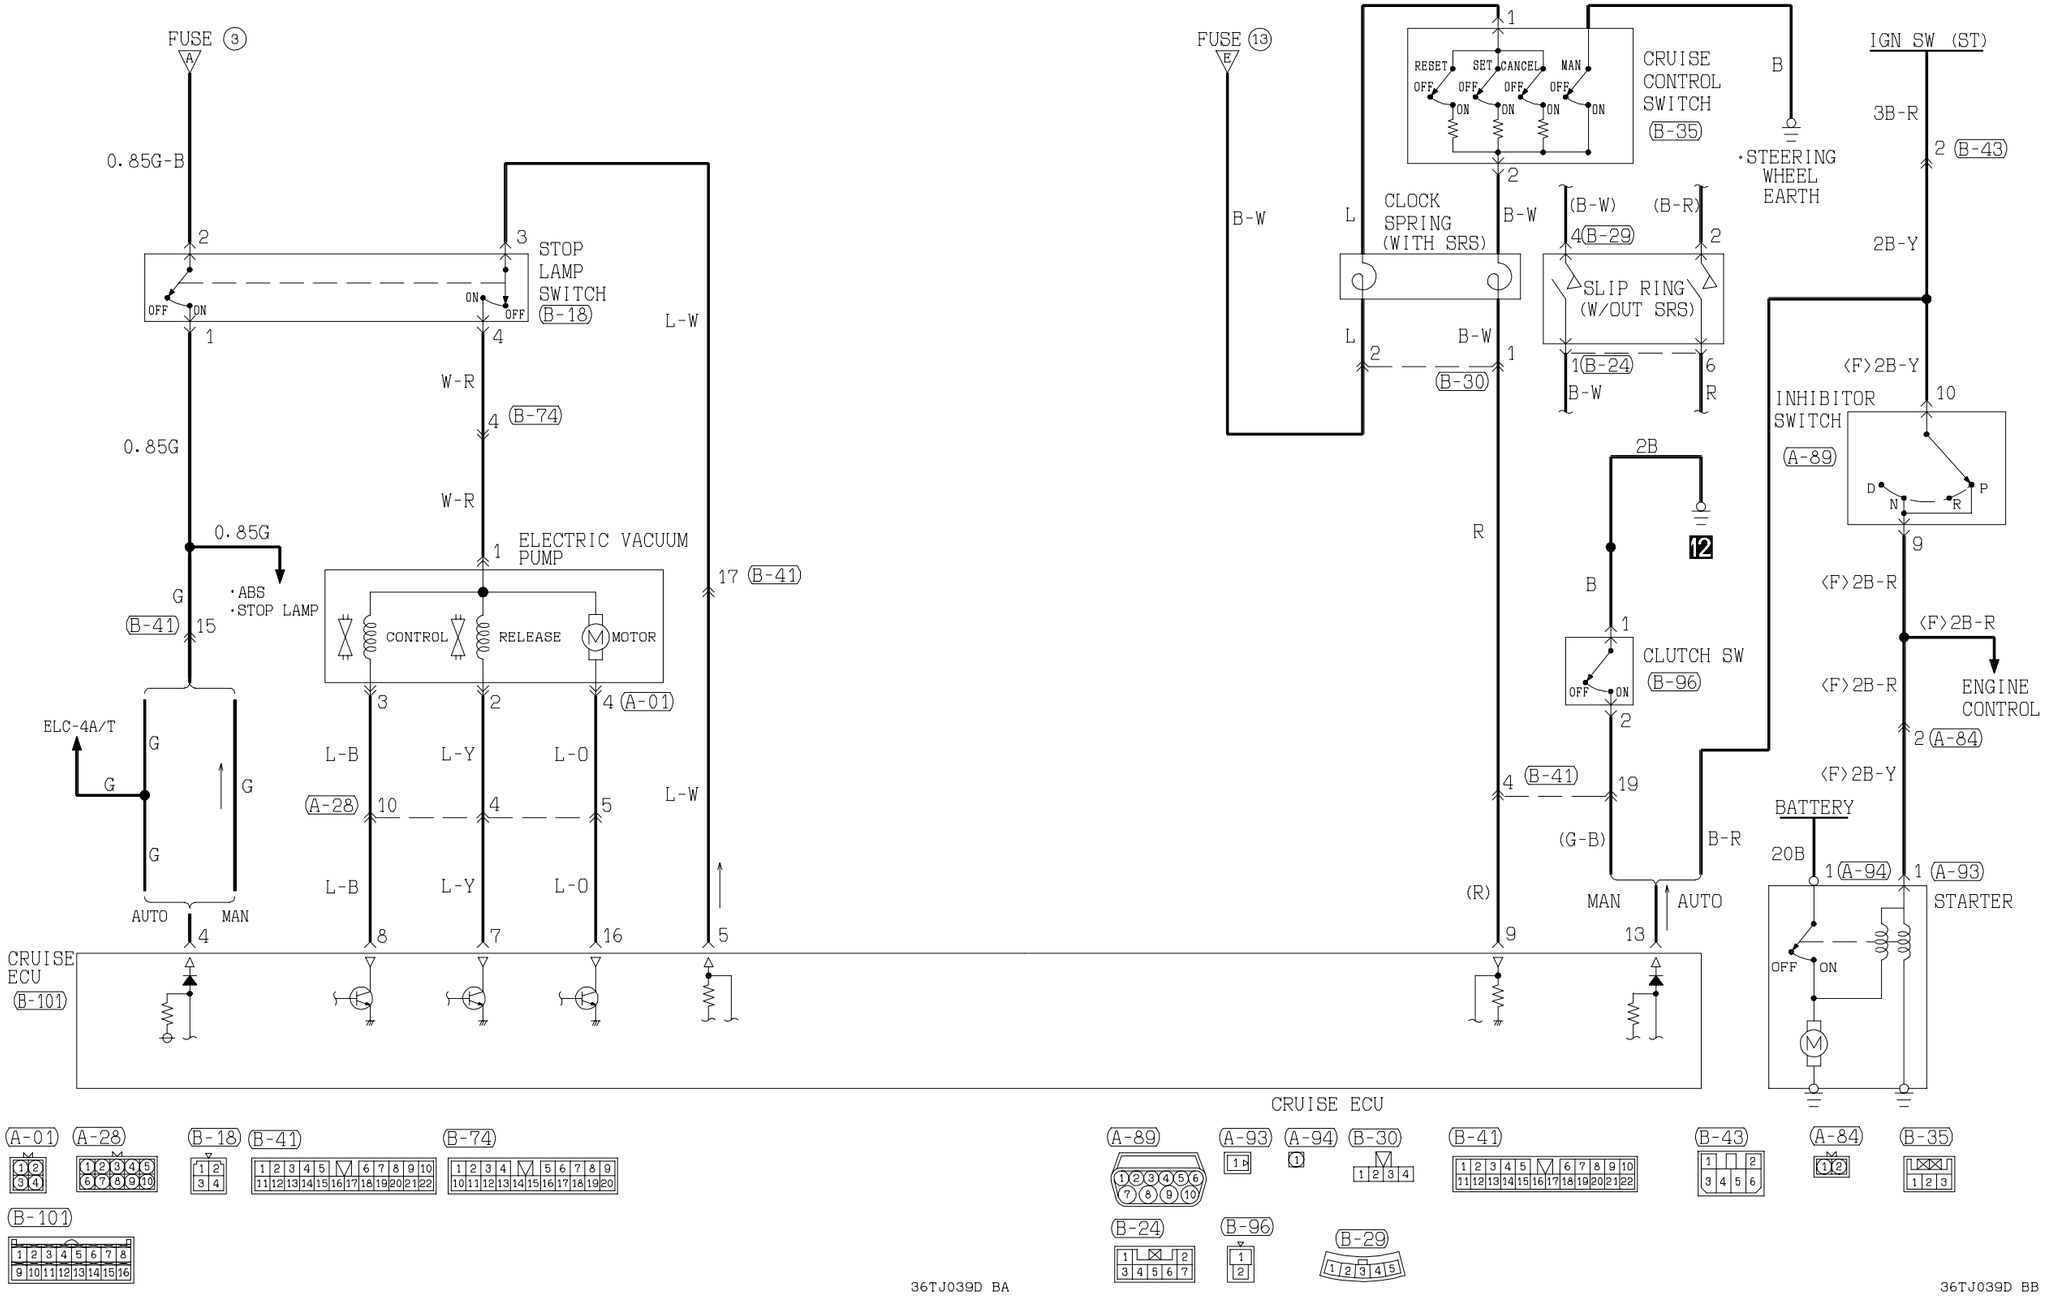


36TJ039D BA

36TJ039D BB

# CRUISE CONTROL (CONTINUED)

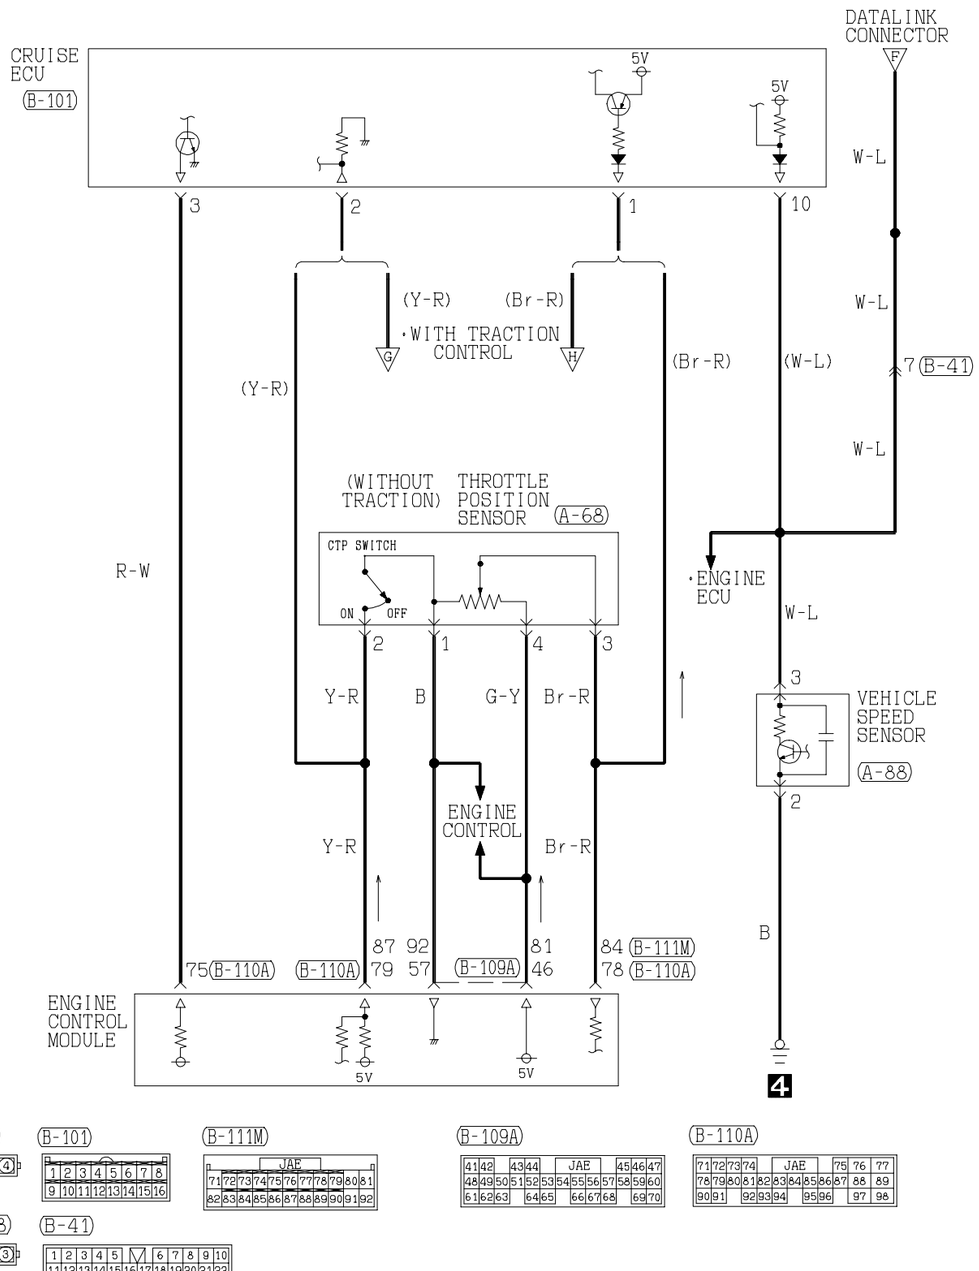


36TJ039D CA

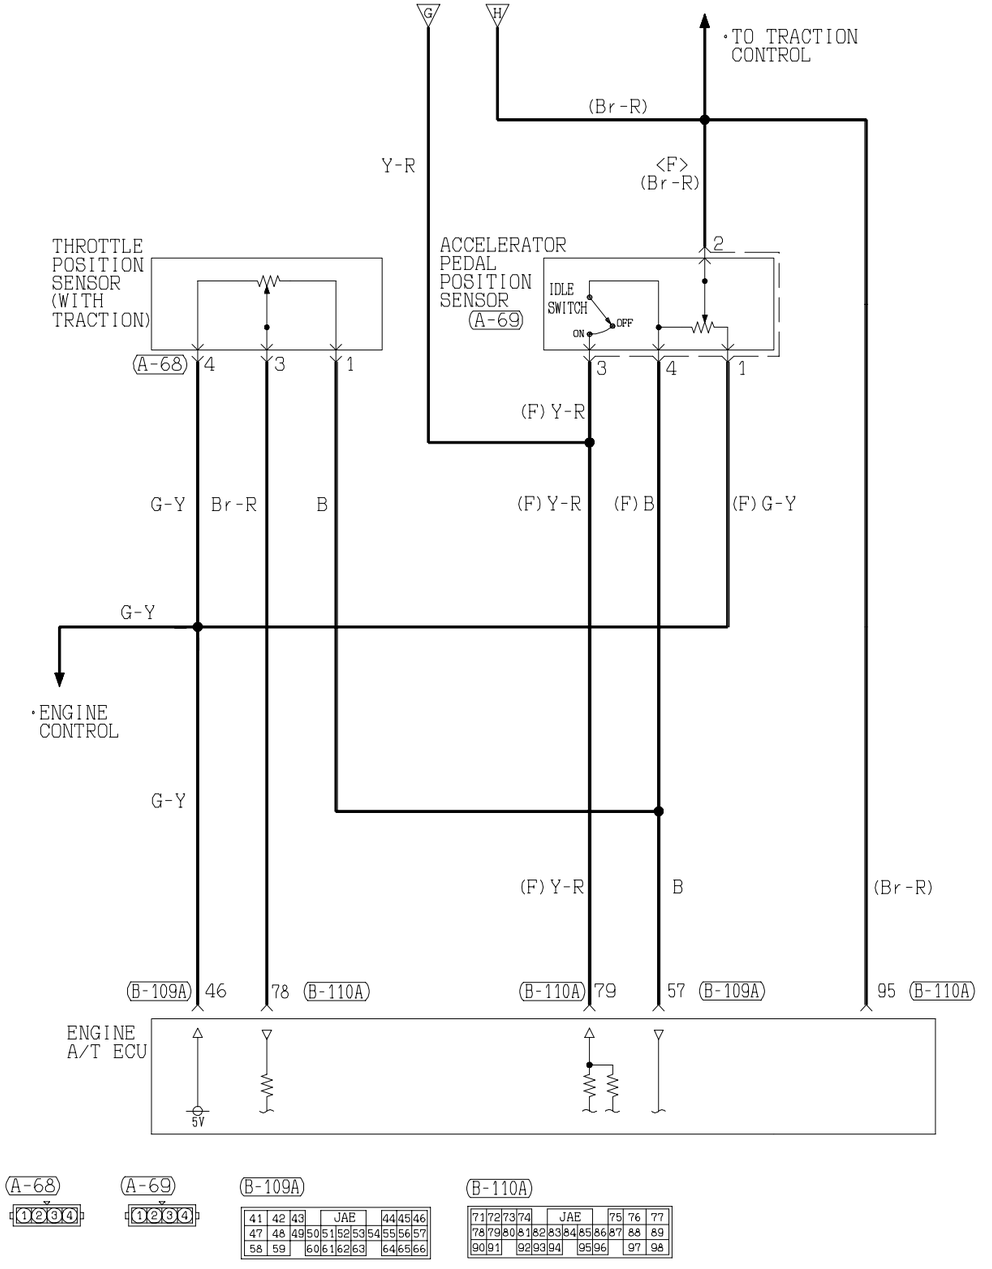


36TJ039D CB

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

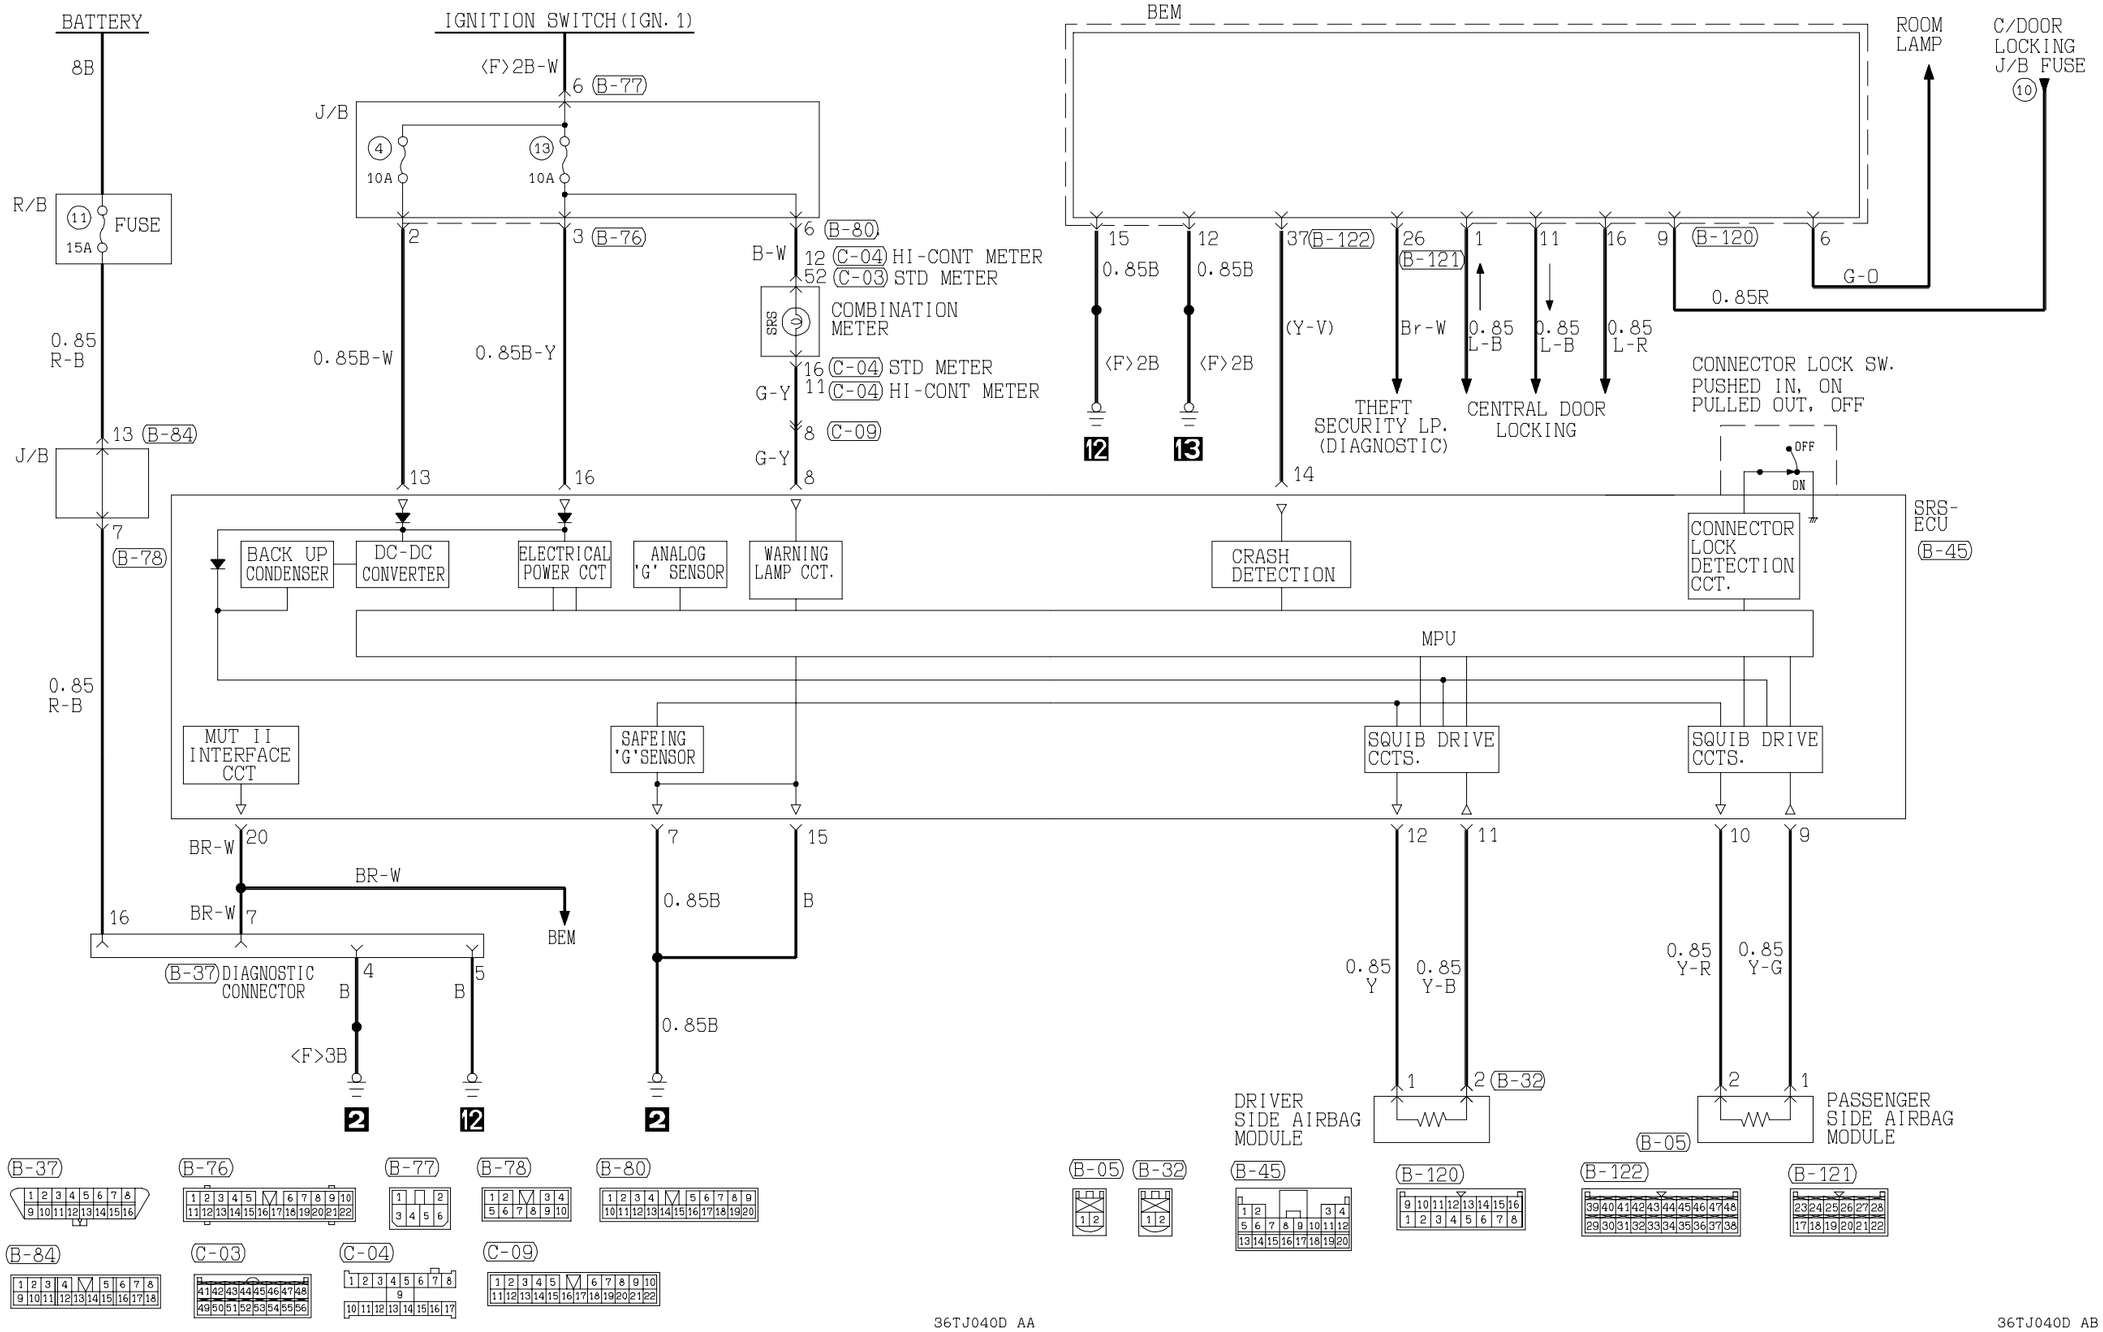


36TJ040D AA

36TJ040D AB

# THEFT ALARM

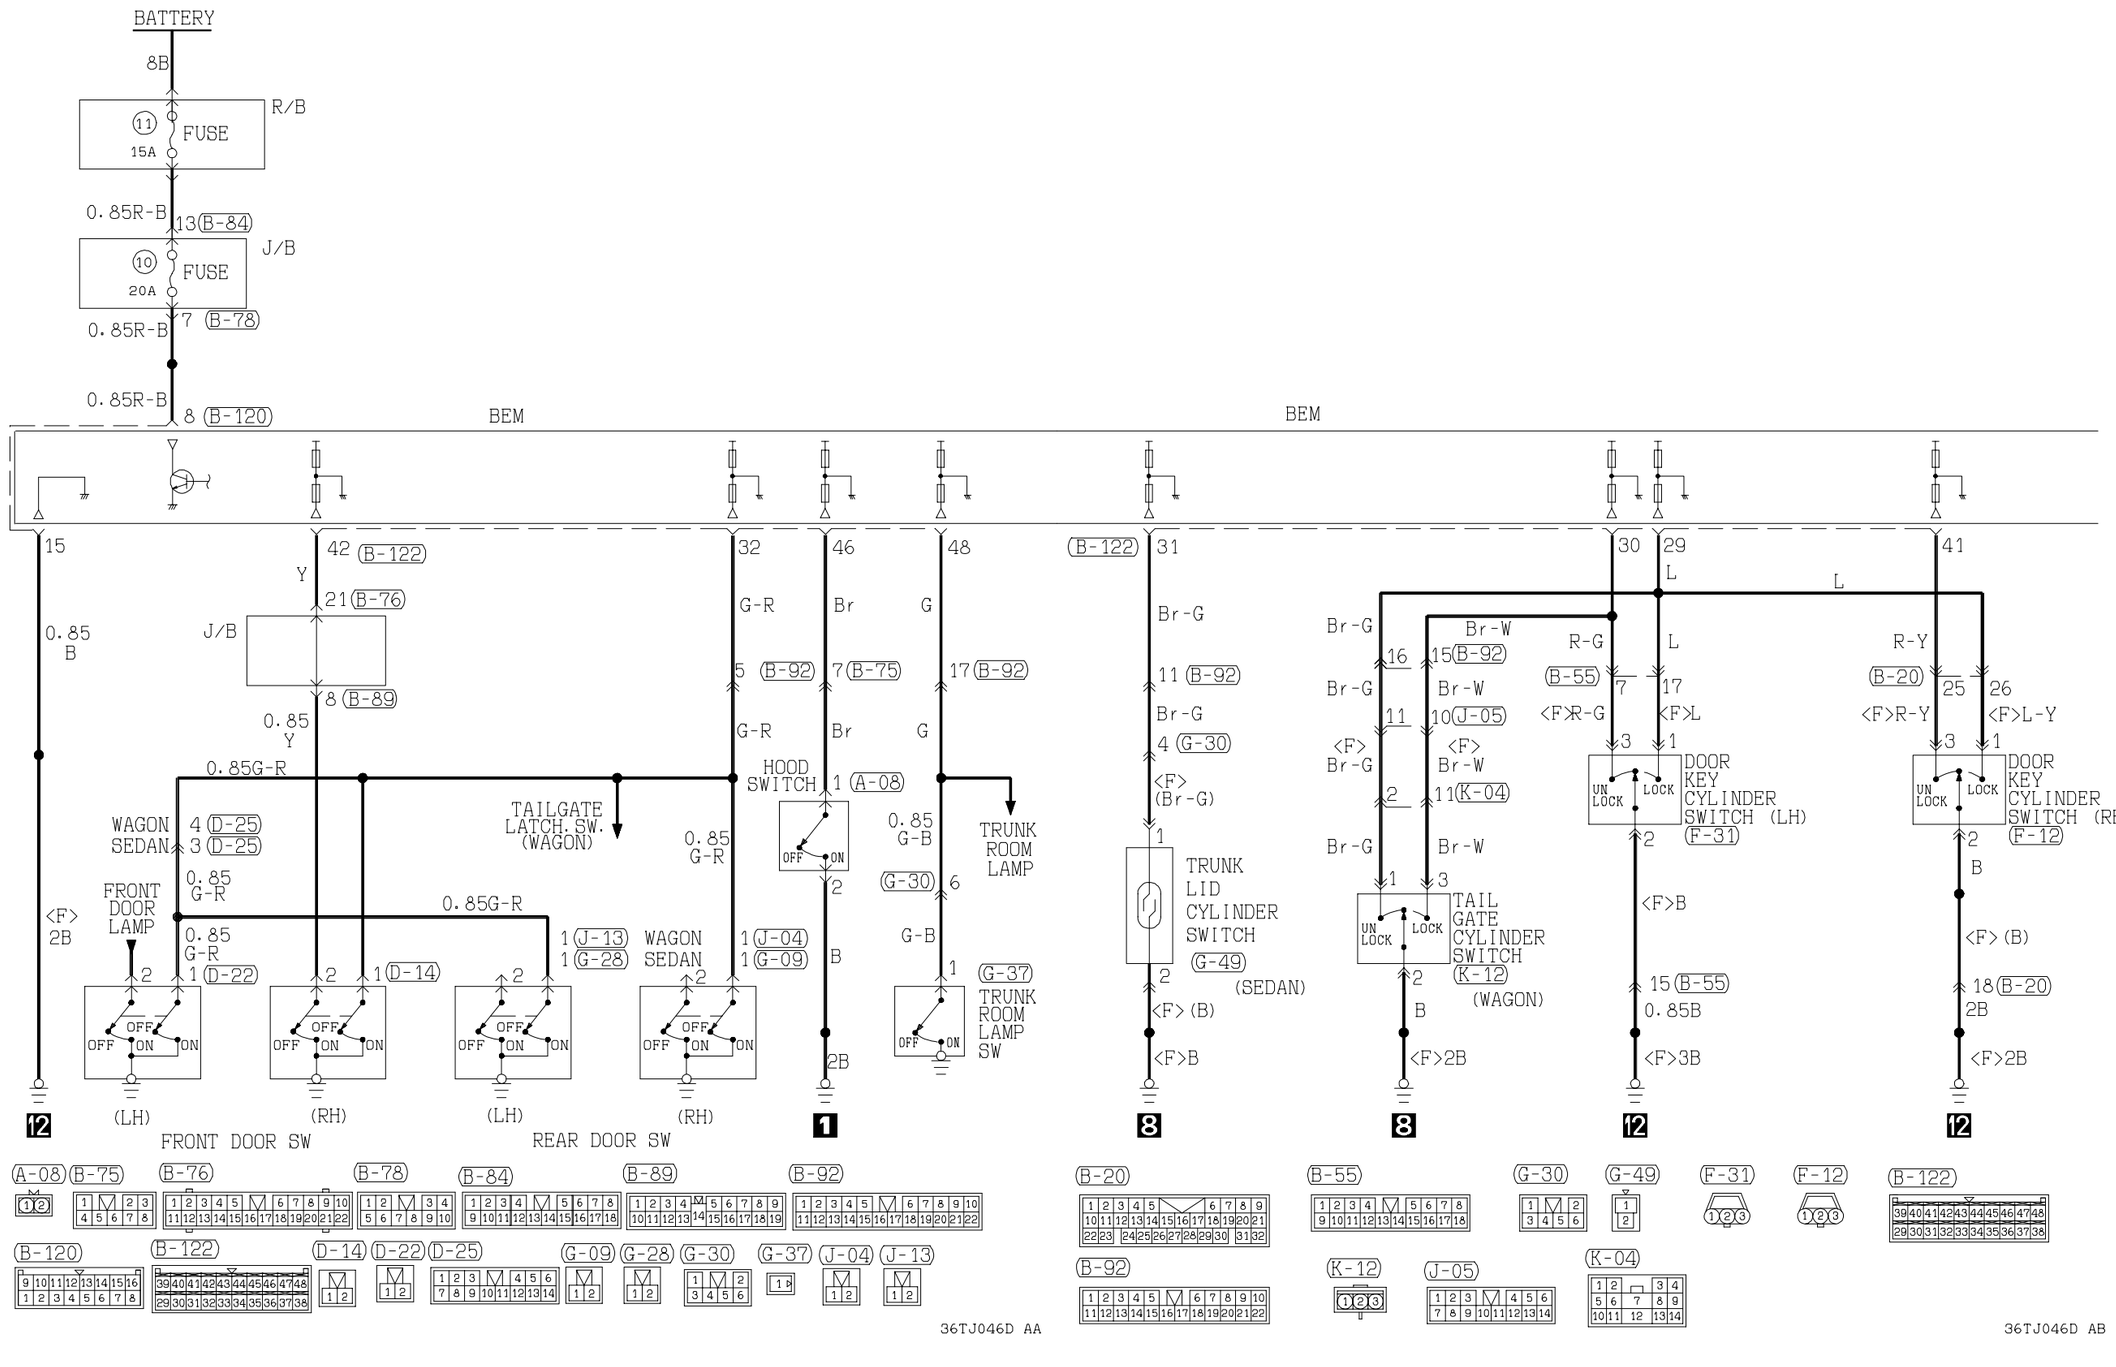
BATTERY
8B
R/B
11
15A
FUSE
0.85R-B
13 B-84
J/B
10
20A
FUSE
0.85R-B
7 B-78
0.85R-B
8 B-120
BEM
BEM
15
42 B-122
Y
21 B-76
0.85 B
J/B
8 B-89
0.85 Y
0.85G-R
WAGON SEDAN
4 D-25
3 D-25
0.85 G-R
FRONT DOOR LAMP
<F> 2B
0.85 G-R
2
1 D-22
0.85G-R
1 J-13
1 G-28
1 D-14
2
2
TAILGATE LATCH. SW. (WAGON)
WAGON SEDAN
1 J-04
1 G-09
32
46
48
G-R
Br
G
5 B-92
7 B-75
17 B-92
G-R
Br
G
HOOD SWITCH
1 A-08
0.85 G-R
2
B
2B
0.85 G-B
G-30
6
G-B
1
G-37
TRUNK ROOM LAMP
TRUNK ROOM LAMP SW
OFF
ON
12
(LH)
(RH)
(LH)
(RH)
1
FRONT DOOR SW
REAR DOOR SW
B-122
31
Br-G
11 B-92
Br-G
4 G-30
<F> (Br-G)
1
TRUNK LID CYLINDER SWITCH
G-49
2
(SEDAN)
<F> (B)
<F>B
8
30
29
L
L
41
Br-G
16
15 B-92
Br-W
R-G
L
R-Y
B-55
7
17
B-20
25
26
Br-G
11
10 J-05
<F>
<F>R-G
<F>L
<F>R-Y
<F>L-Y
<F>
Br-G
Br-W
3
1
DOOR KEY CYLINDER SWITCH (LH)
F-31
DOOR KEY CYLINDER SWITCH (RH)
F-12
2
11 K-04
UN LOCK
LOCK
2
2
B
Br-G
Br-W
1
3
TAIL GATE CYLINDER SWITCH
K-12
(WAGON)
<F>B
15 B-55
0.85B
<F>3B
<F> (B)
18 B-20
2B
<F>2B
8
12
12
A-08 B-75 B-76 B-78 B-84 B-89 B-92
B-120 B-122 D-14 D-22 D-25 G-09 G-28 G-30 G-37 J-04 J-13
B-20 B-55 G-30 G-49 F-31 F-12 B-122
B-92 K-12 J-05 K-04
36TJ046D AA
36TJ046D AB

# THEFT ALARM (CONTINUED)

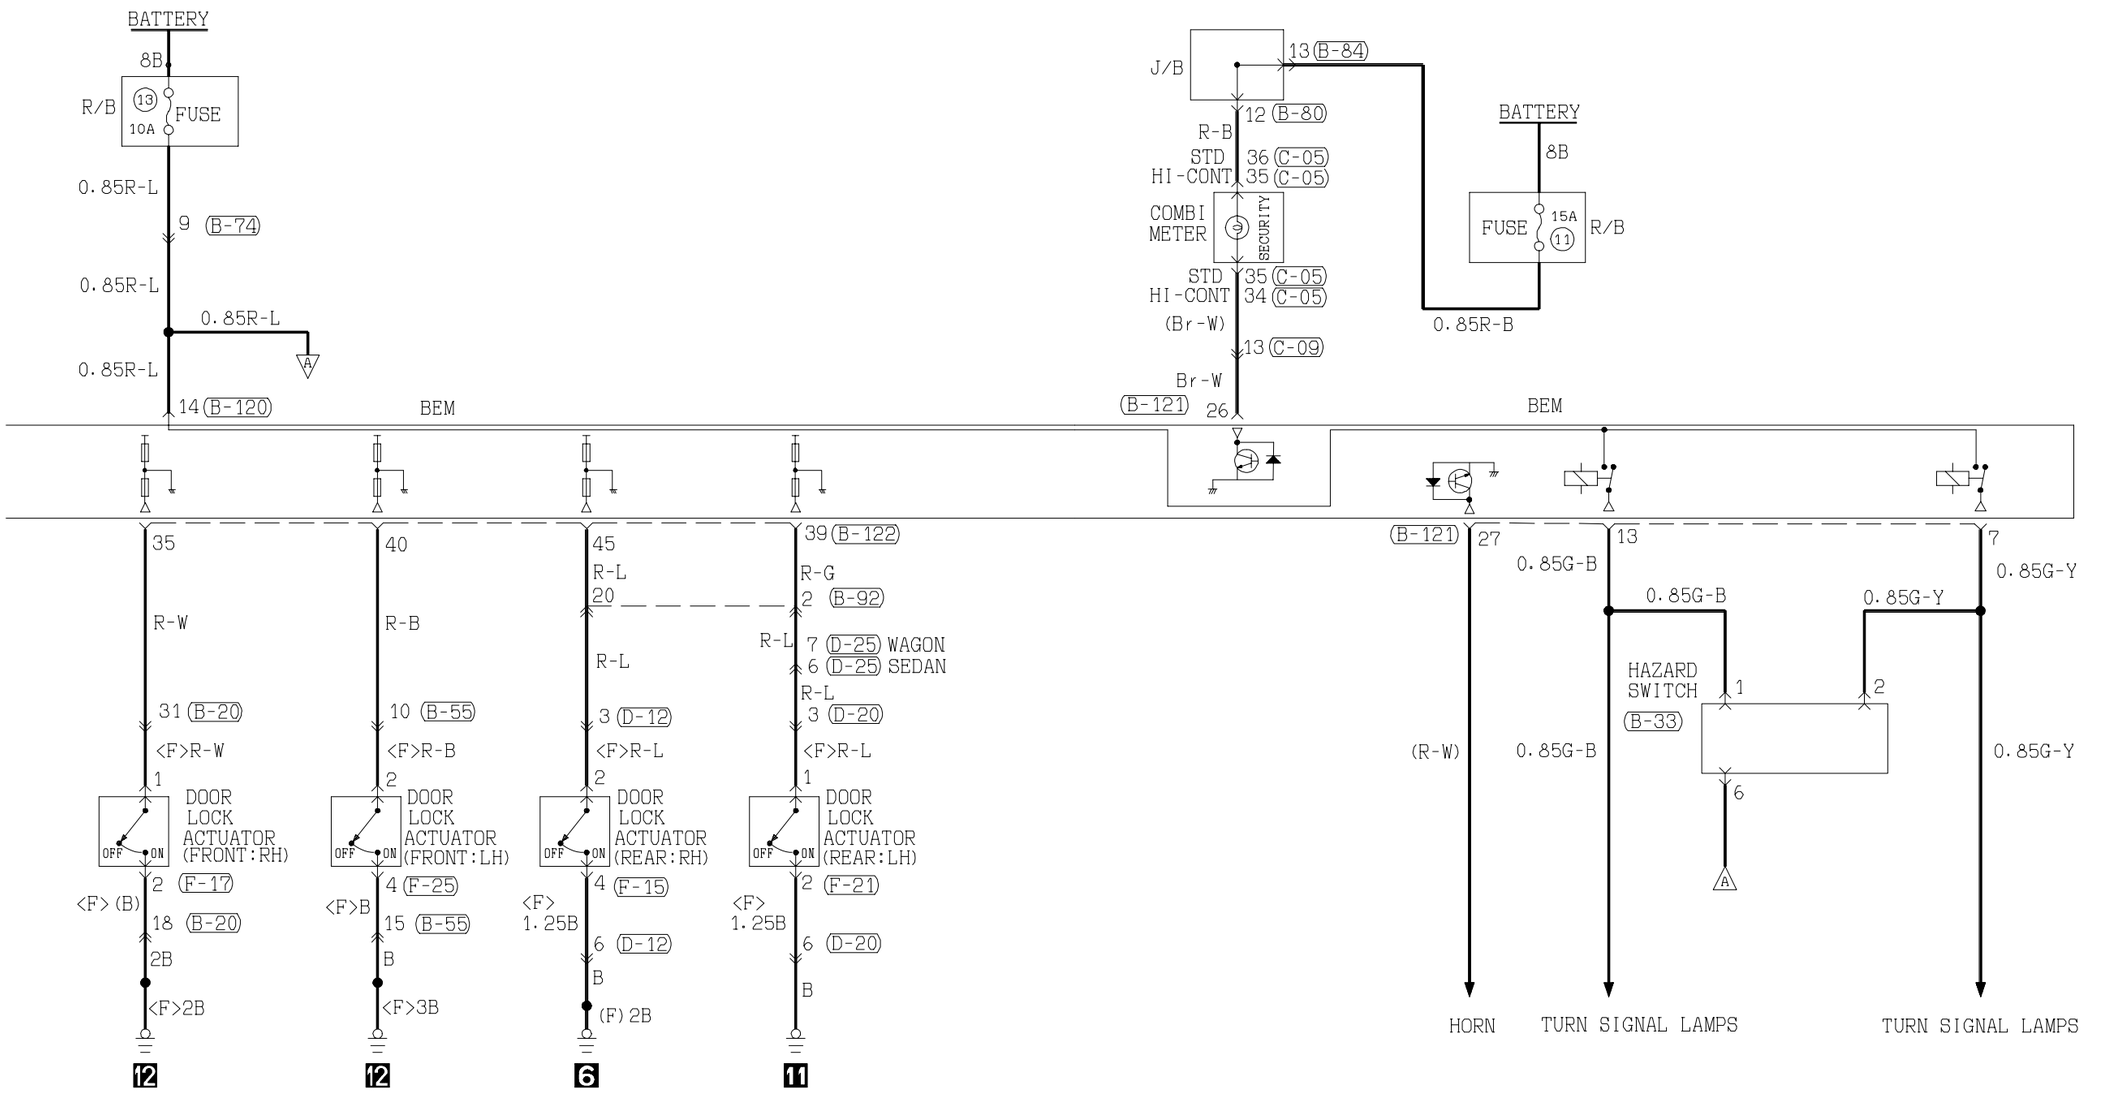


B-20 B-55 B-120 B-122 B-74 B-80 B-121 B-33 C-05 C-09

D-12 D-20 D-25 F-15 F-17 F-21 F-25 B-92 B-84

36TJ046D BA

36TJ046D BB

# IMMOBILISATION

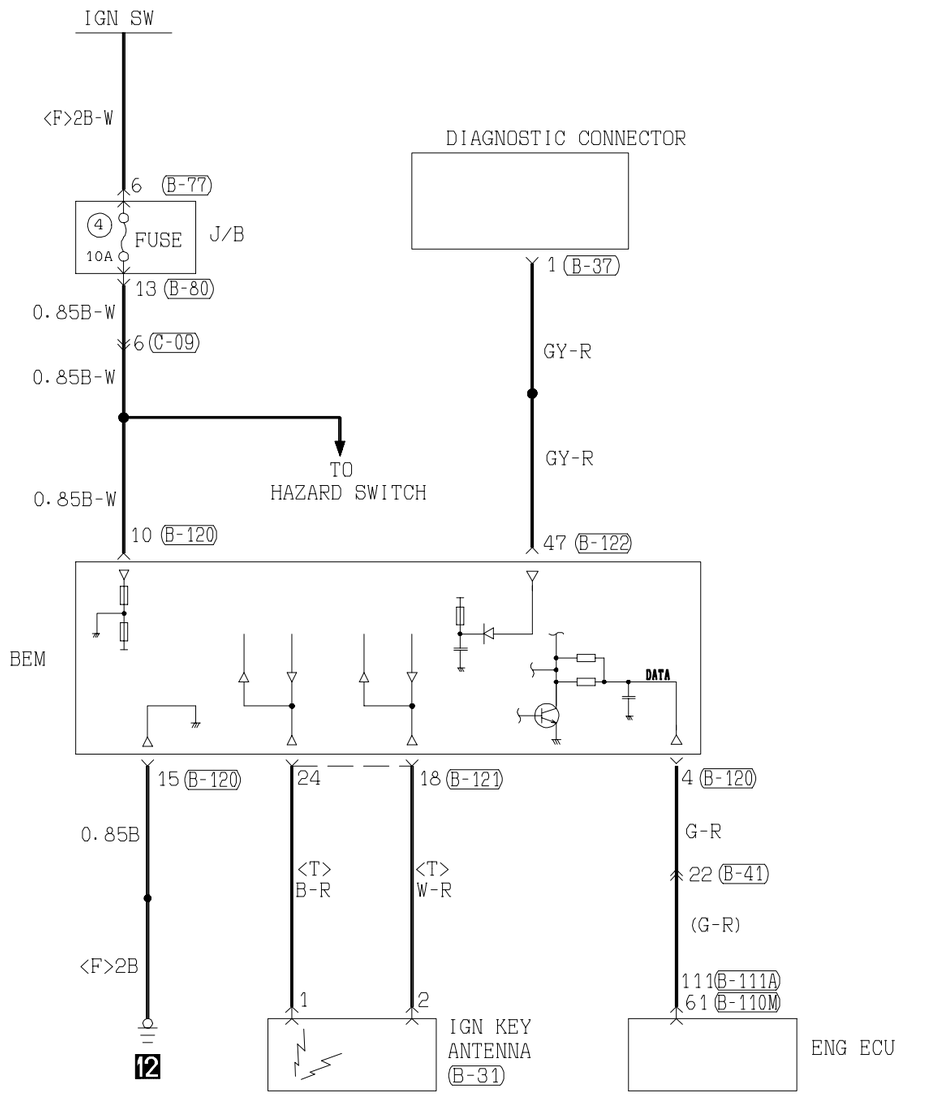


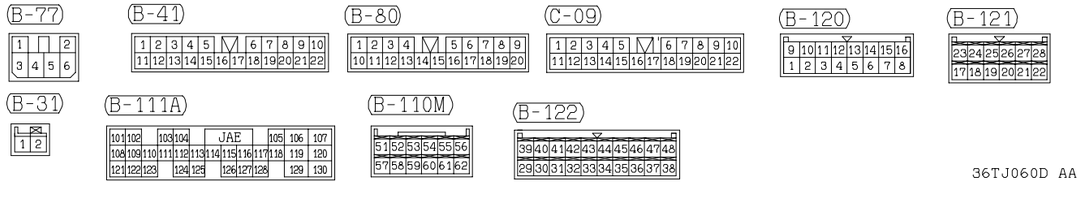


36TJ060D AA

# SUNROOF

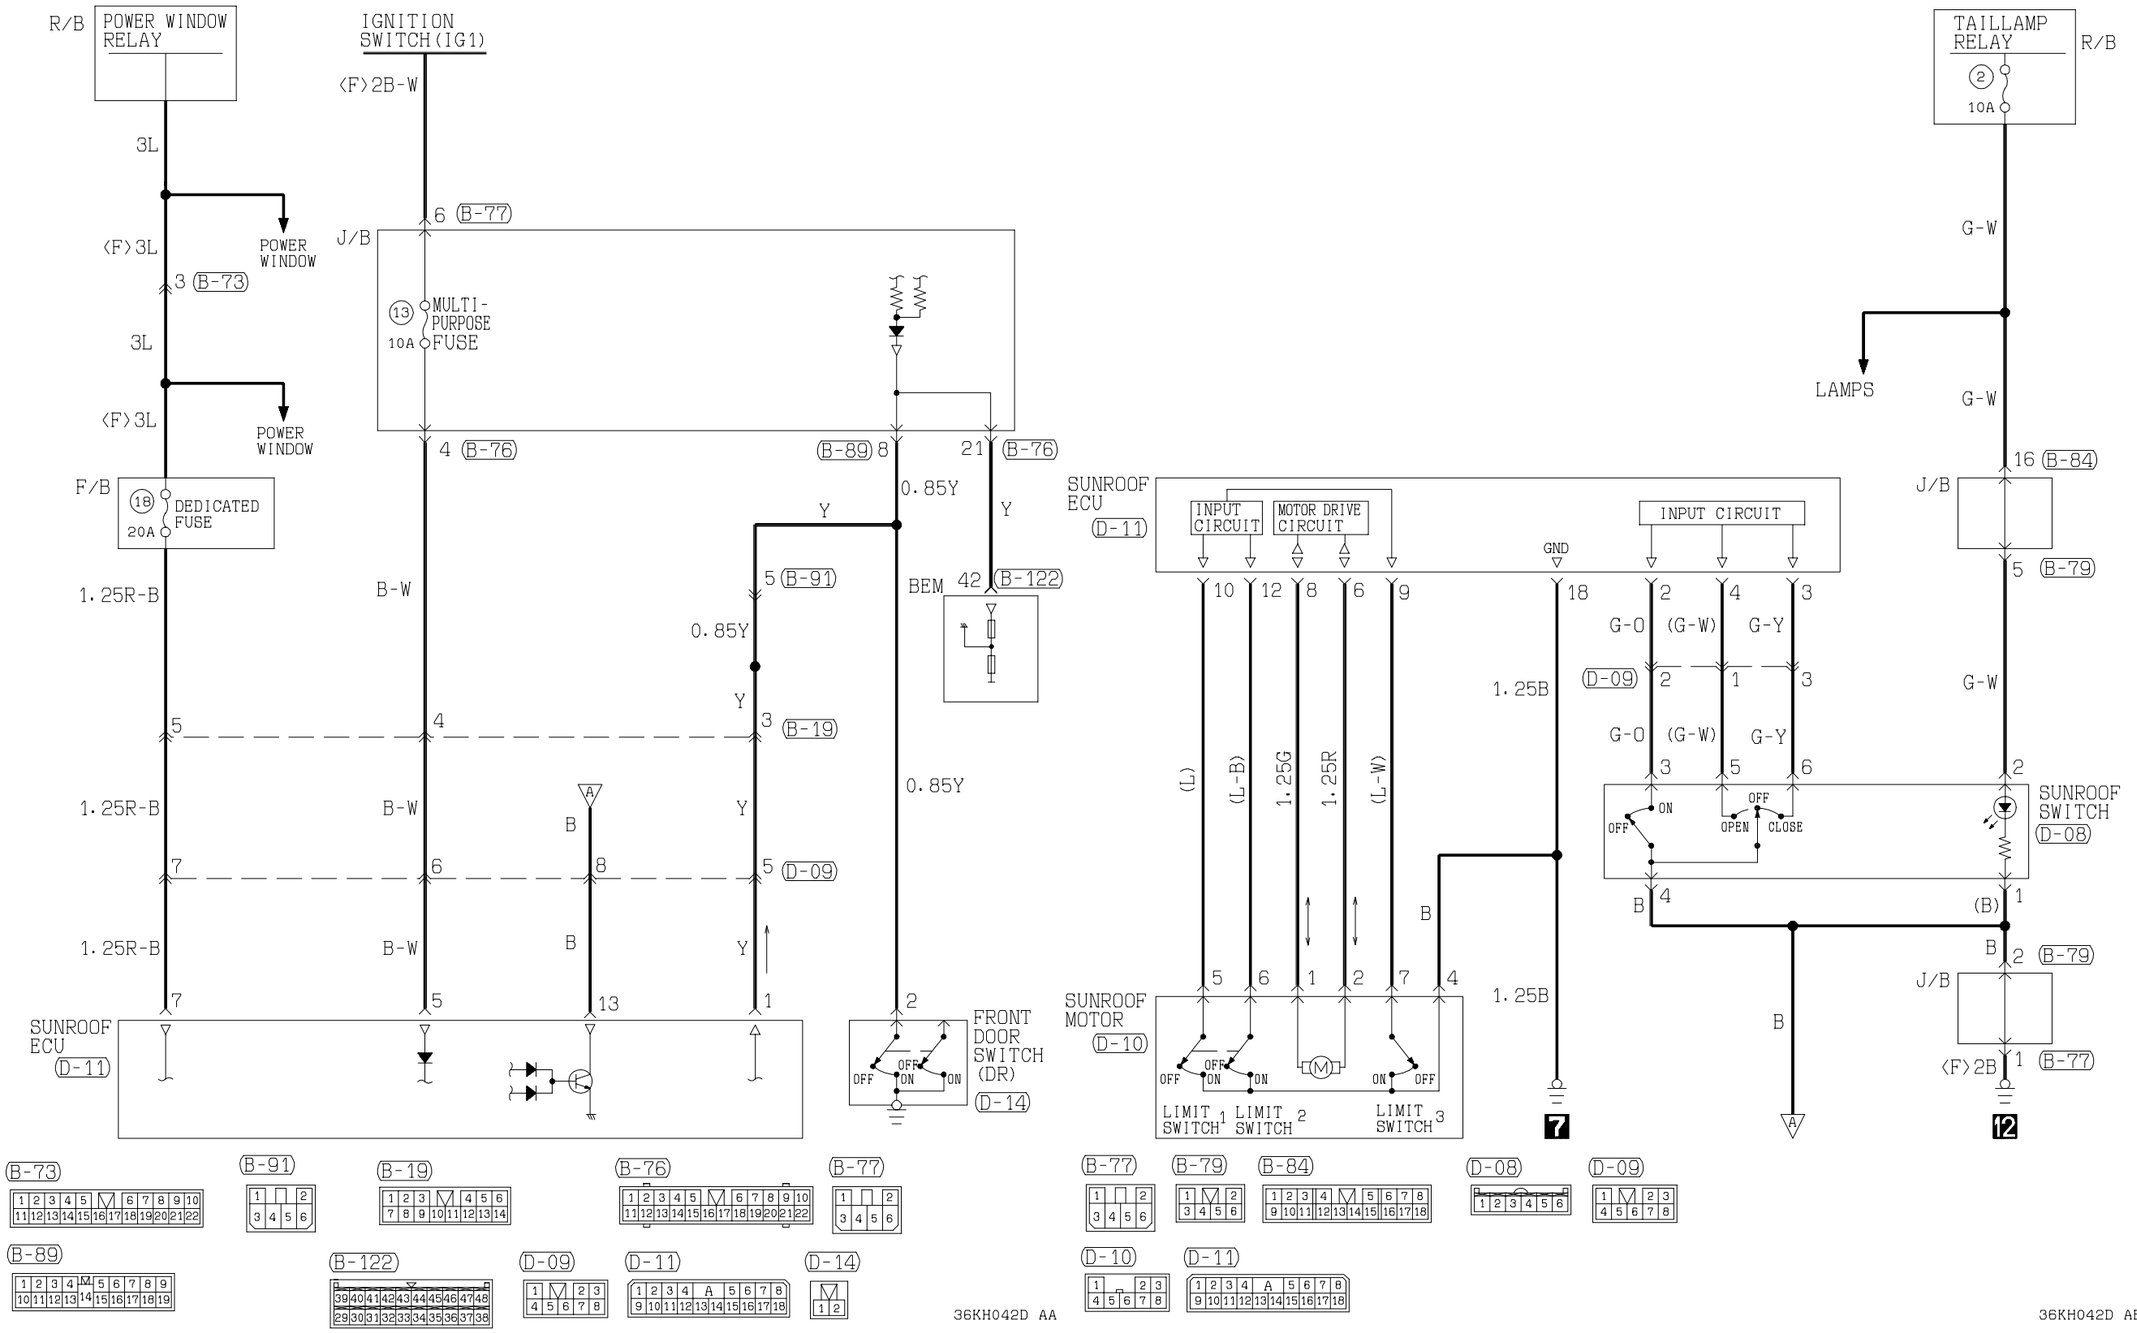


B-73 B-91 B-19 B-76 B-77 B-89 B-122 D-09 D-11 D-14

D-77 B-79 B-84 D-08 D-09 D-10 D-11

36KH042D AA

36KH042D AB

# POWER SEAT

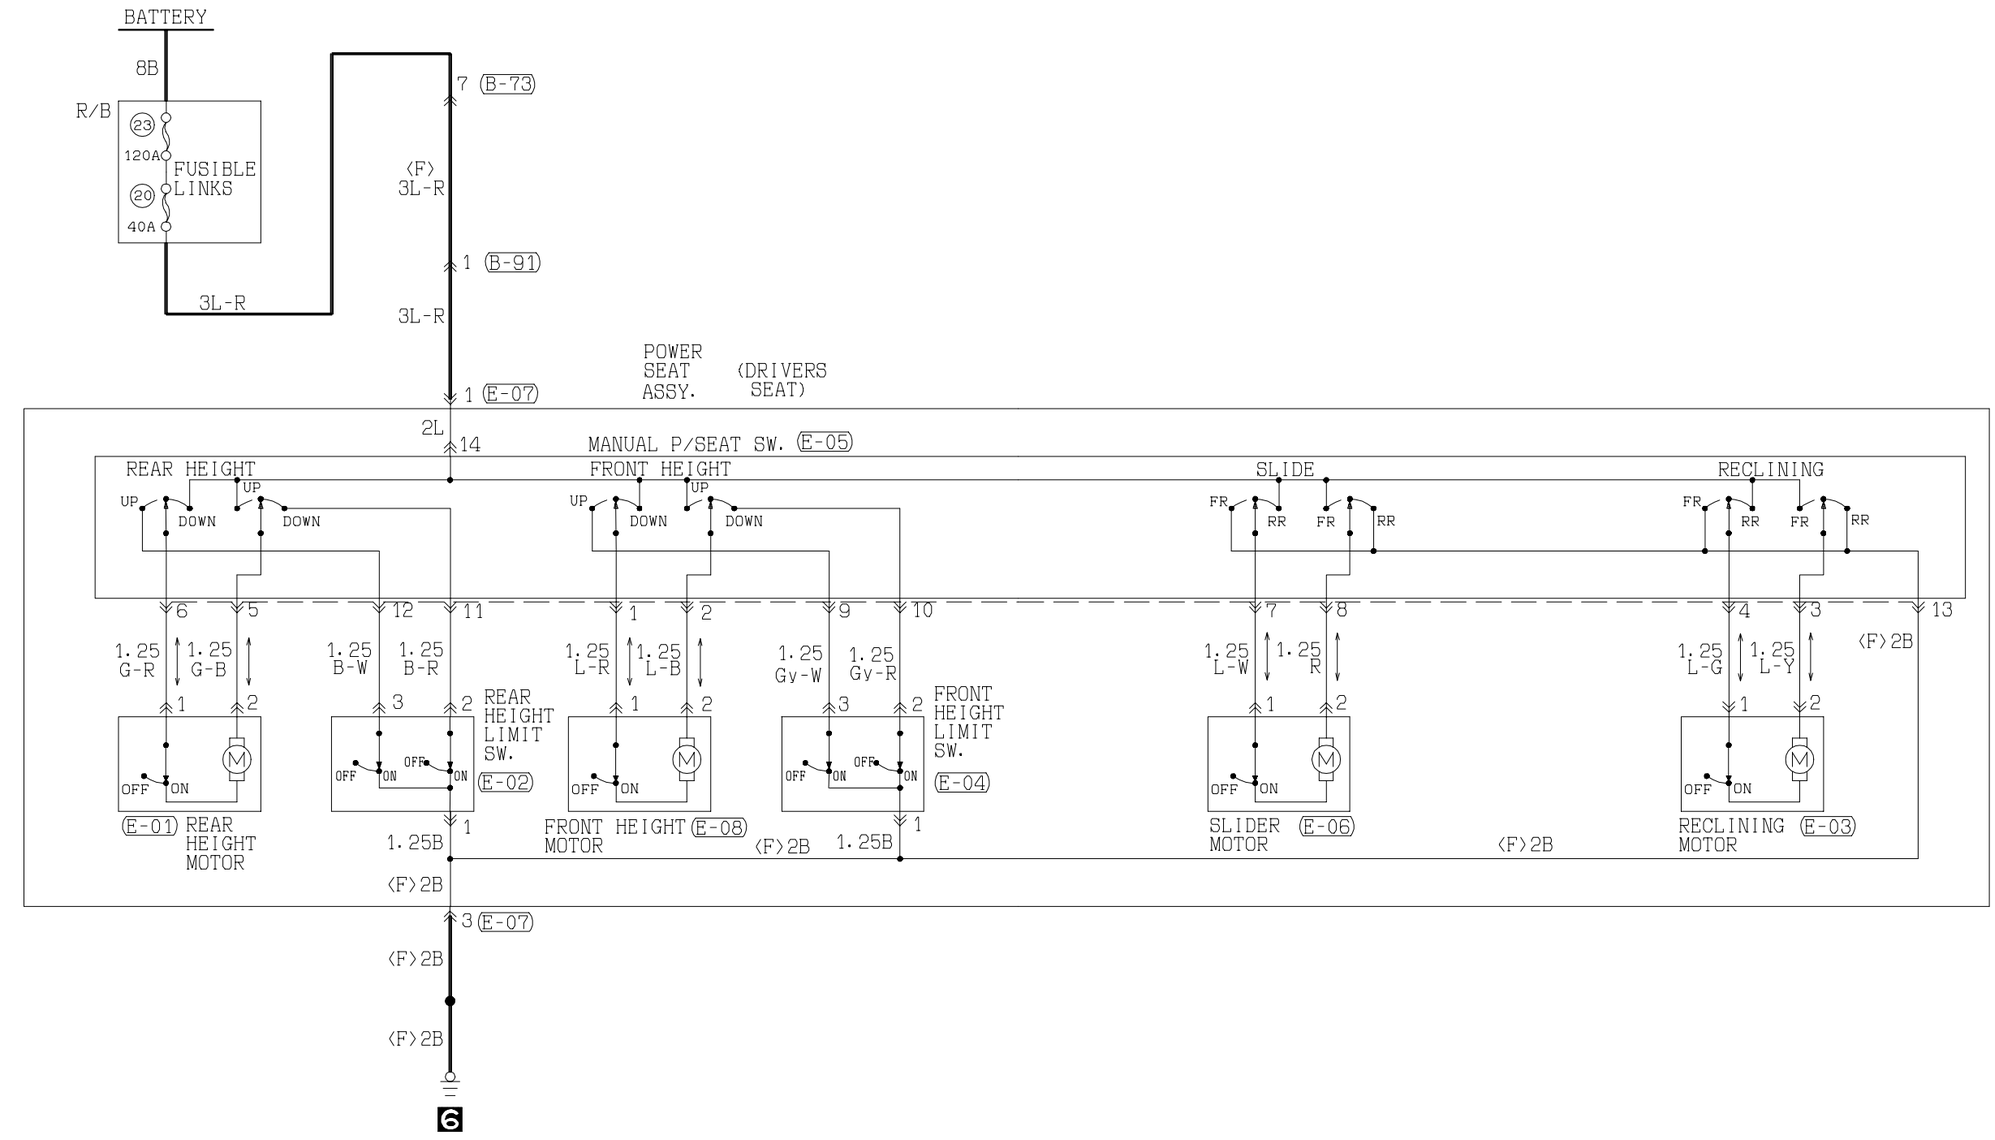








36TH043D AA

36TH043D AB

# LIGHT MONITOR/ALARM BUZZER

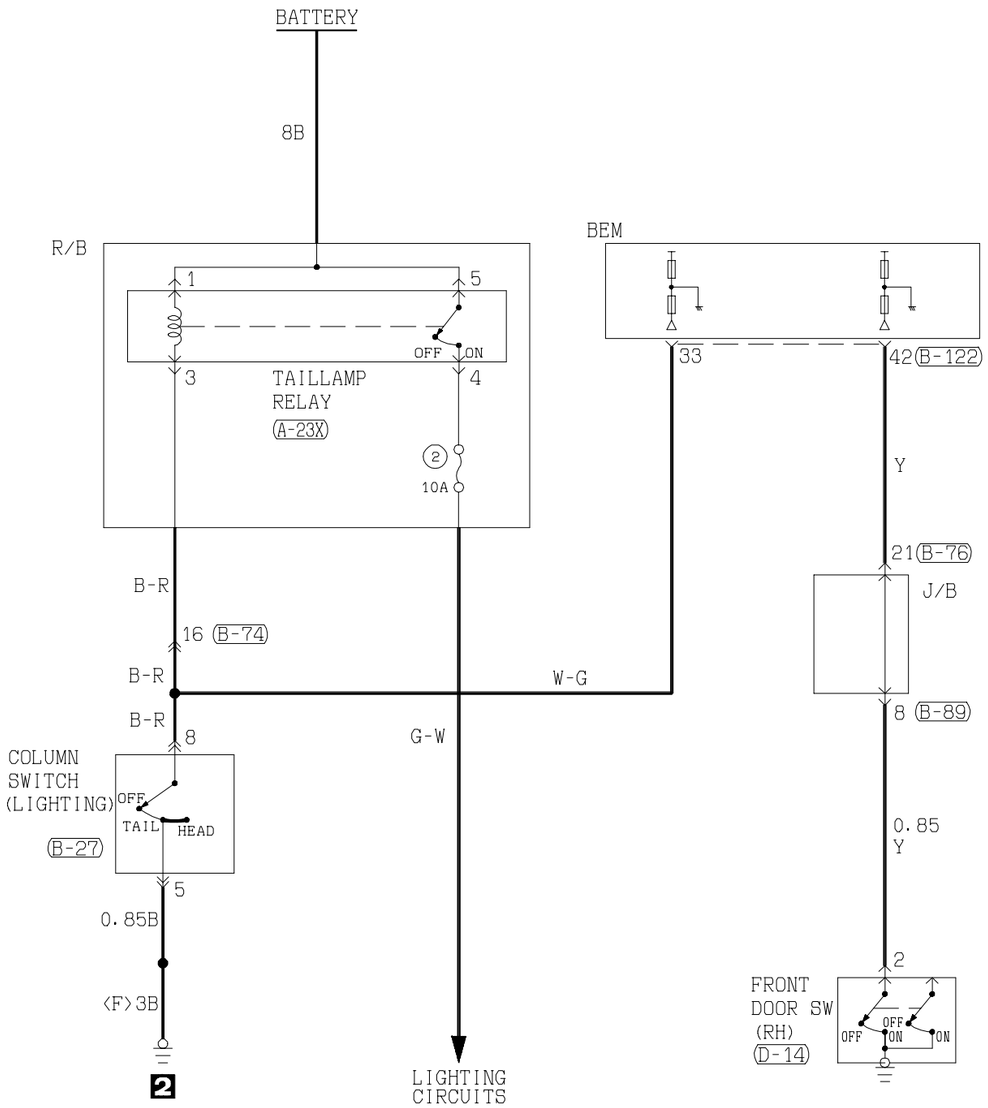


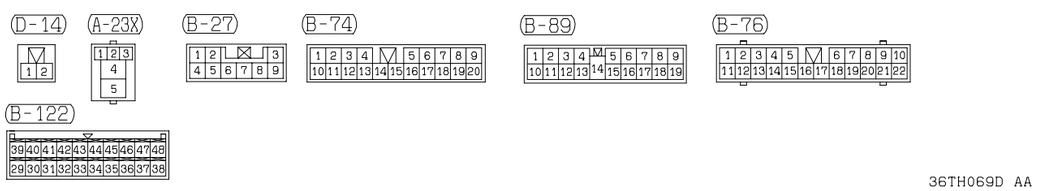


36TH069D AA

# RHEOSTAT

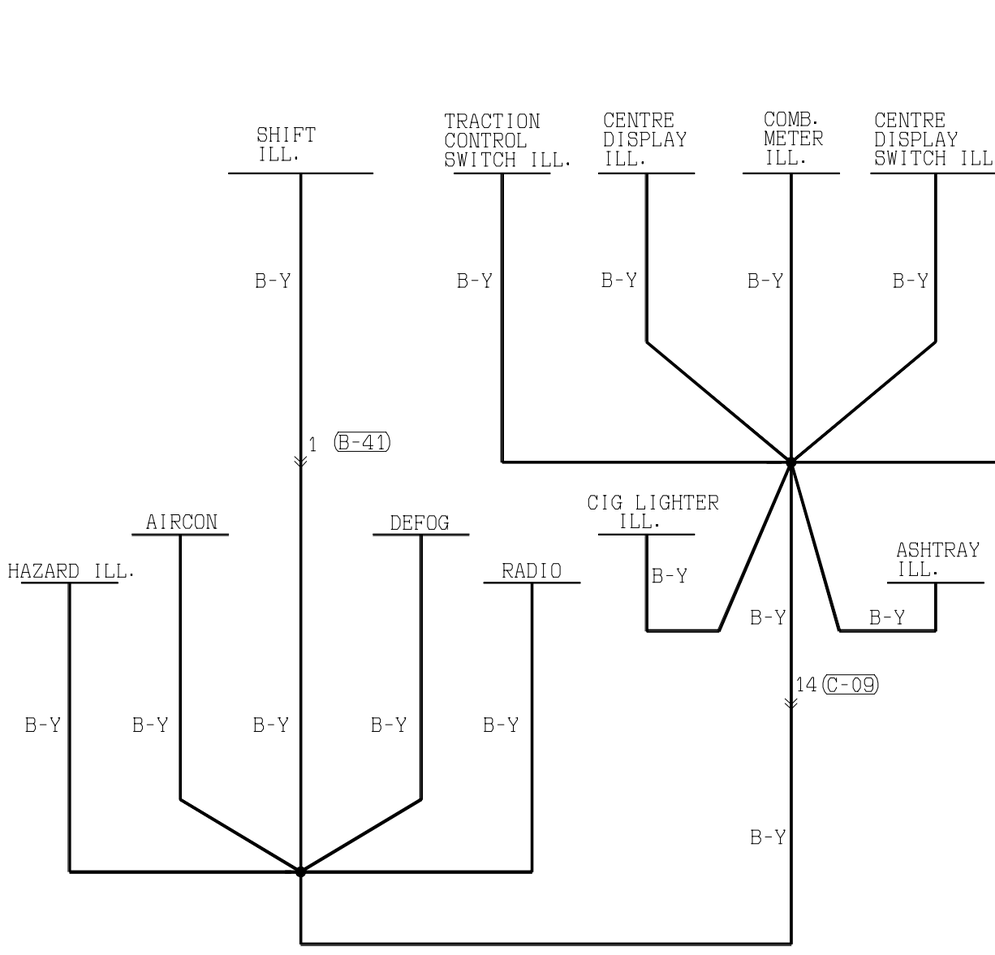


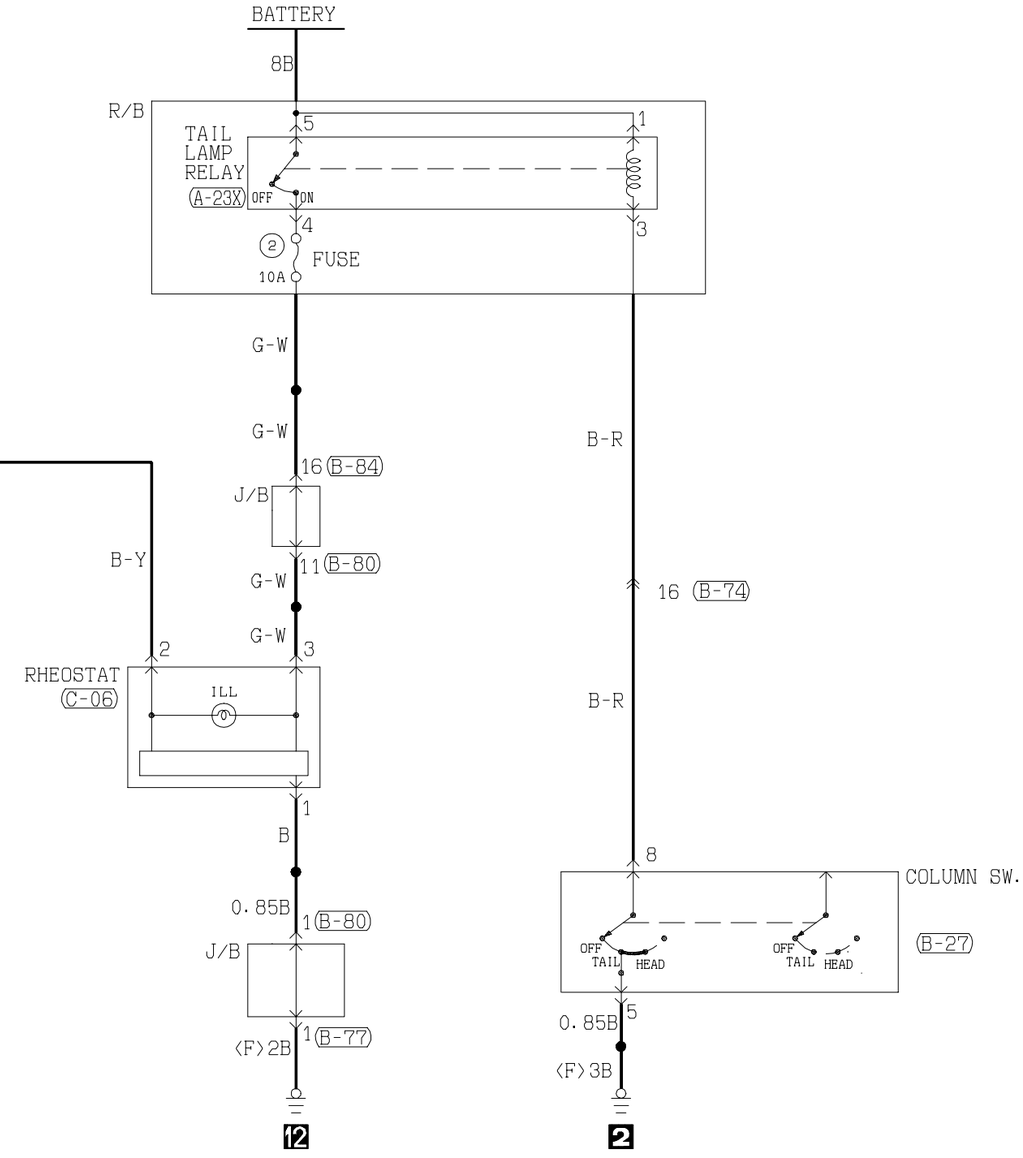








36TH044D AA

36TH044D AB