JUNCTION BLOCK (J/B)

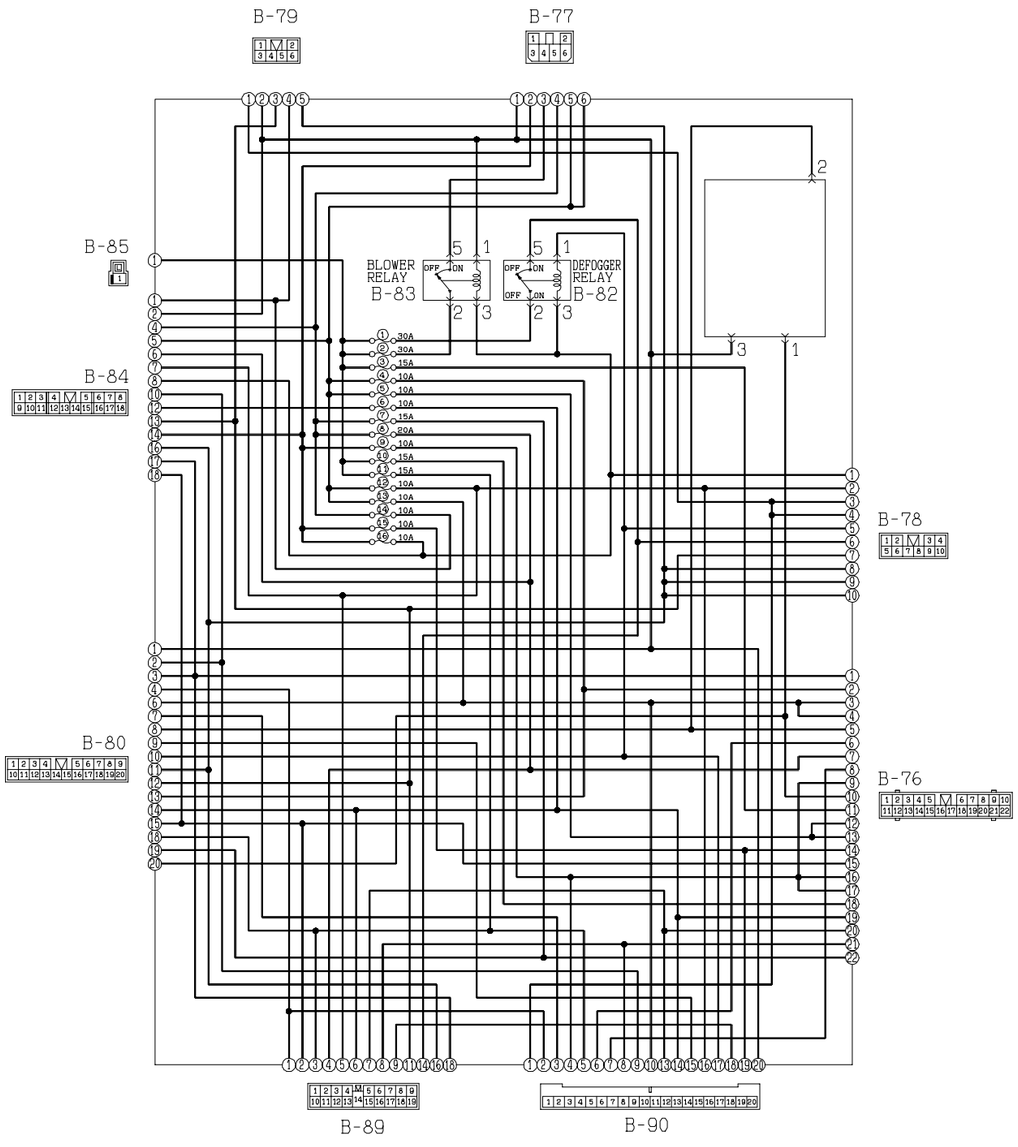

Front side

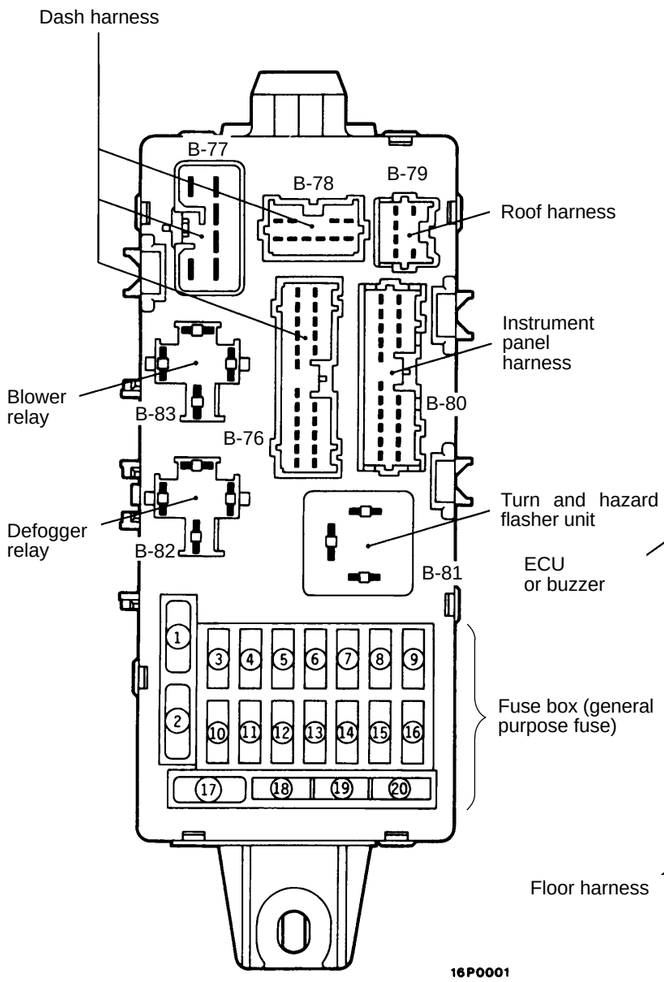

16P0001

Reverse side

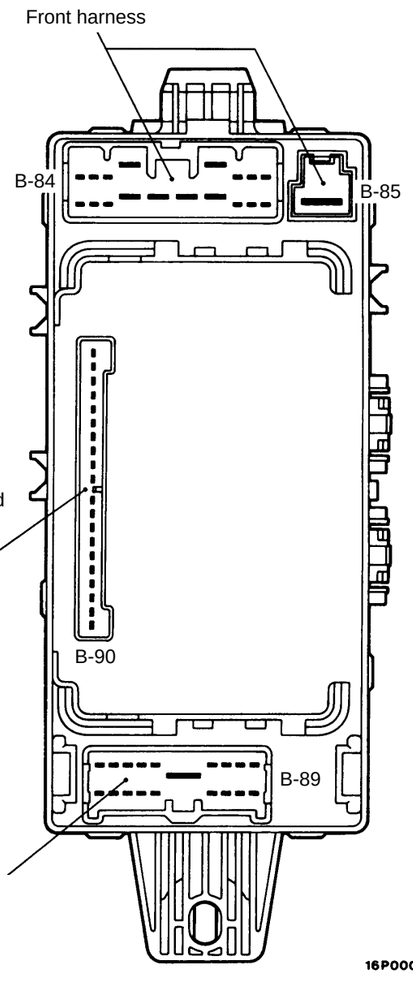

16P0002

16AE111N

CENTRALISED JUNCTION

FUSIBLE LINK (Relay box in engine compartment)

No.	Used Circuit	Type	Colour of housing	Rated capacity
19	Ignition switch	Connector type	Pink	30
20	Power window, sunroof, power seat, exclusive fuse Nos. 18 and 20	Connector type	Green	40
21	Headlamp	Connector type	Green	40
22	ABS	Connector type	Yellow	60
23	Fusible link Nos. 2 and 3, charging	Screwed-in type	White	120
24	Exclusive fuse No. 17, general purpose fuse Nos. 1, 2, 3, 10 and 11	Screwed-in type	Yellow	60

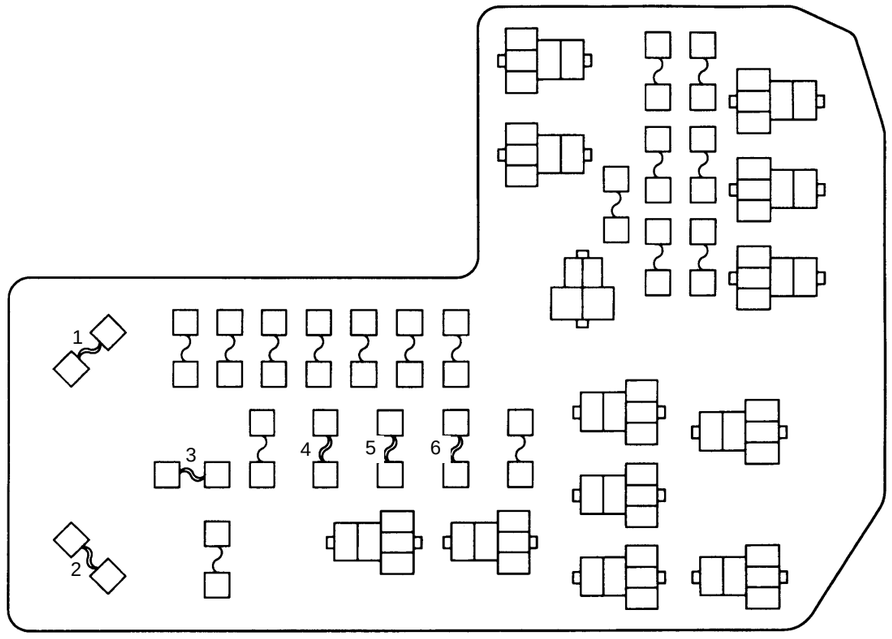

16P0011

DEDICATED FUSE (Relay box and fuse box)

Power supply circuit	No.	Rated capacity (A)	Housing colour	Circuit
Taillamp relay	1	–	–	
	2	10	Red	Ashtray illumination, audio system, shift indicator lamp, sunroof switch illumination, combination meter illumination, centre message display switch illumination, rheostat, traction control switch illumination, rear combination lamp, rear lid lamp, auto air conditioning illumination, glove box lamp.
Headlamp relay (LO)	3	15	Red	Headlamp circuit
	4	15	Red	
Headlamp relay (HI)	5	10	Blue	Headlamp circuit
	6	10	Blue	
Fog lamp relay	7	15	Blue	Fog lamp
Battery	8	20	Red	Automatic A/C, cooling
	9	20	Yellow	Audio
	10	10	–	IOD
	11	15	Red	Traction Control, engine control, ELC-4A/T, A/C, centre display, ABS, SRS, cruise control, combination meter, BEM, trunk lid and fuel door opener, personal lamp, room illumination lamp, trunk room lamp, ign key illumination lamp, clock
	12	–	–	Horn
	13	10	Blue	Turn signal, hazard lamp, theft, central locking, keyless entry
IG switch ACC.	14			
Battery	15	20	Yellow	Engine control, ELC-4A/T
	16	20	Yellow	Charging
	17	10	Red	Automatic air conditioner, engine control
	18	–	–	–
–	19	–	–	–

RELAY BOX (in engine compartment)

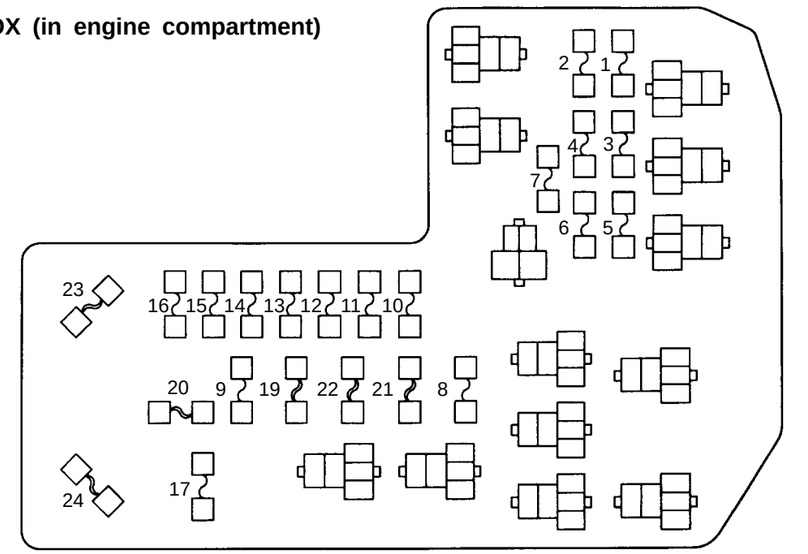

16P0011

FUSE BOX (next to junction box)

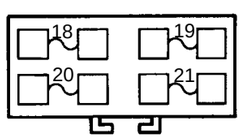

16P0012

16AE112N

MULTI-PURPOSE FUSE (In junction block)

Power supply circuit		No.	Rated capacity (A)	Housing colour	Circuit
Battery		1	30	Pink	Defogger
		2	30	Pink	Blower motor
		3	15	Blue	Stop lamp, A/T-ECU
Ignition switch	IG1	4	10	Red	Hazard switch, SRS-ECU
		5	10	Red	A/T–ECU, engine and A/T–ECU
	ACC	6	10	Red	Audio system, cruise-ECU, centre display, combination meter, power antenna
		7	15	Blue	Phone connector, ACC socket
		8	20	Yellow	Washer / wiper switch, rear washer / wiper motor, rear intermittent wiper relay, wiper motor, rear washer / wiper switch, remote mirror switch, audio remote control
	IG2	9	10	Red	ABS-ECU, traction control
Battery		10	20	Yellow	Central door locking / Keyless entry, Hazard alarm
		11	15	Blue	Audio system, ignition key cylinder lamp, trunk lid and fuel door opener, power antenna, phone, central door locking
Ignition switch IG1		12	10	Red	Alternator relay, motor antenna
		13	10	Red	Sun roof, ABS, wiper motor, analog meter, centre display, speed sensor, cruise control, SRS-ECU
Ignition switch	ACC	14	10	Red	E/C mirror
	IG2	15	10	Red	Spare
		16	10	Red	Blower relay, defogger relay, A/C-ECU
–		17	30	Pink	Spare
		18	10	Red	
		19	15	Blue	
		20	20	Yellow	

JUNCTION BOX

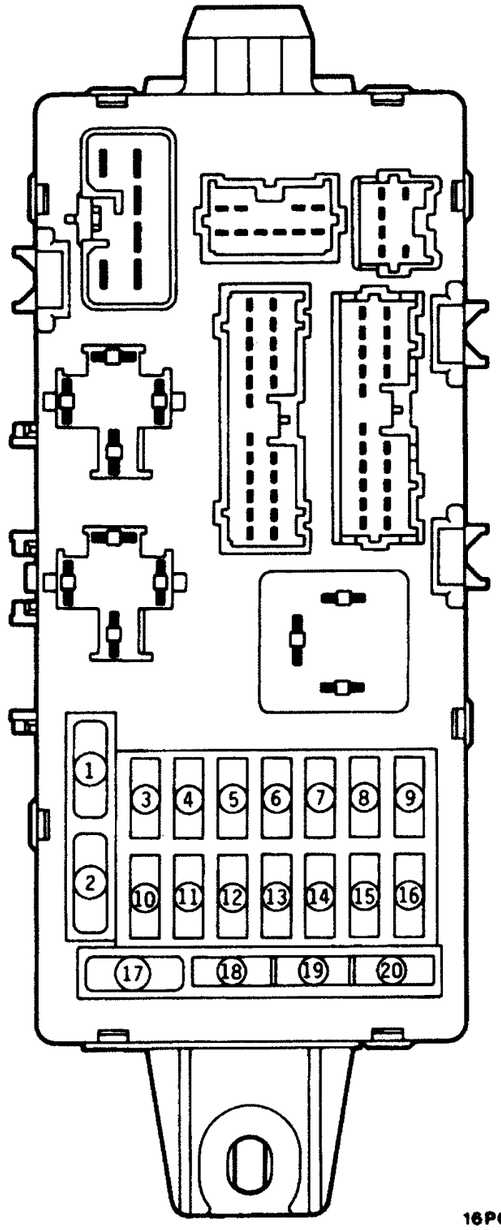

16P0001

FUSE BOX

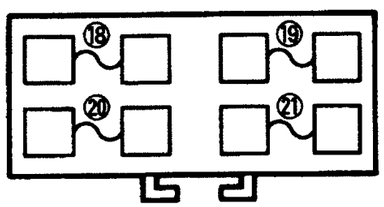

16P0012

Main Index
54 Index
54C Index
A
B
C
D
E
F
G
H
J
K

CENTRALISED RELAY (Relay box in engine compartment)

Connector No.	Name	Connector No.	Name
A-15X	Power window relay	A-22X	Radiator fan relay (LO)
A-16X	A/C compressor relay	A-23X	Taillamp relay
A-17X	Horn relay	A-24X	Headlamp relay (LO)
A-18X	Fog lamp relay	A-25X	Headlamp relay (HI)
A-19X	Alternator relay	A-26X	Radiator fan relay (MI)
A-20X	Condenser fan relay (LO)	A-27X	Radiator fan relay (HI)
A-21X	Condenser fan relay (HI)		

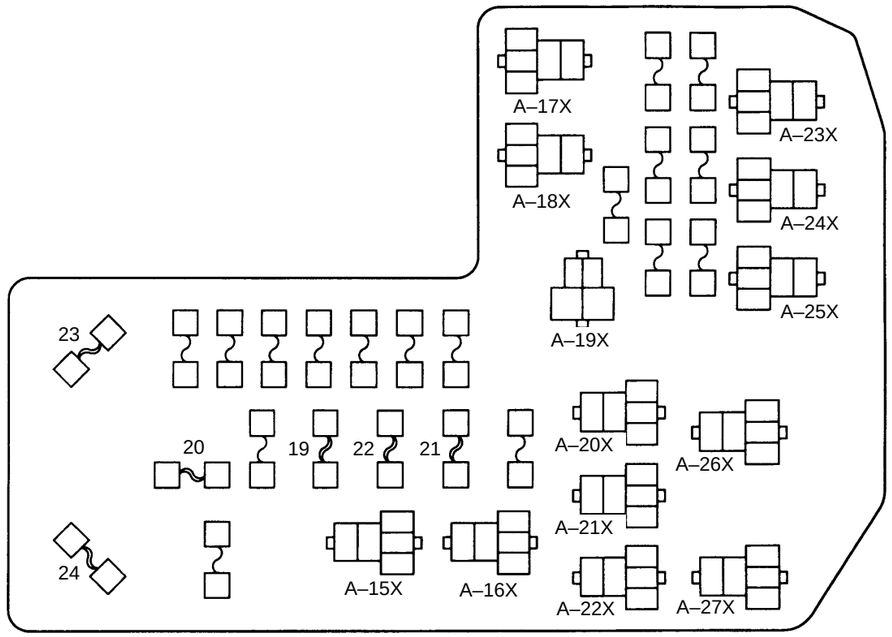

16P0011

POWER DISTRIBUTION SYSTEM

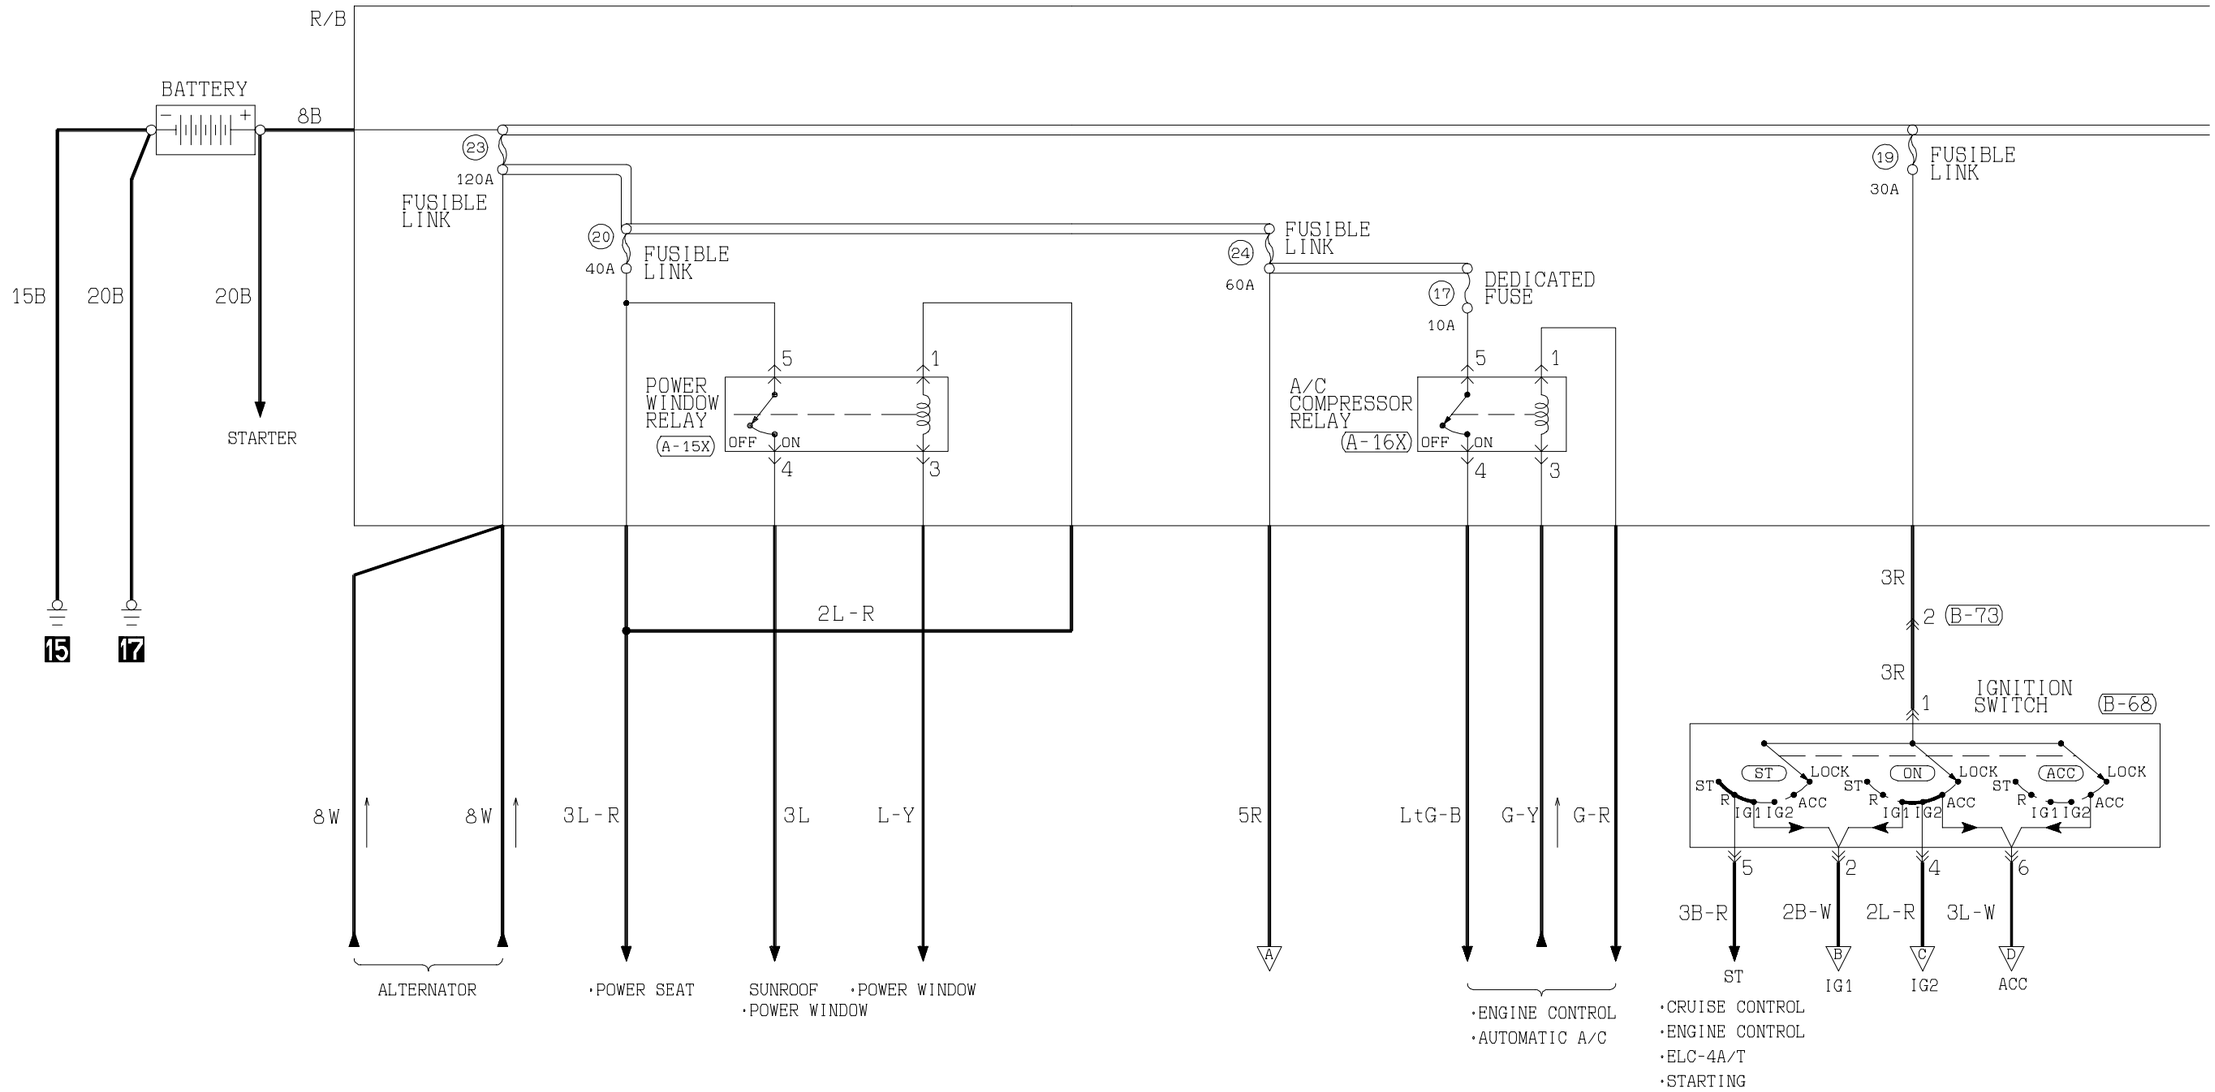

A-15X



A-16X



B-68

B-73



36TL001A AA

36TL001A AB

POWER DISTRIBUTION SYSTEM (CONTINUED)

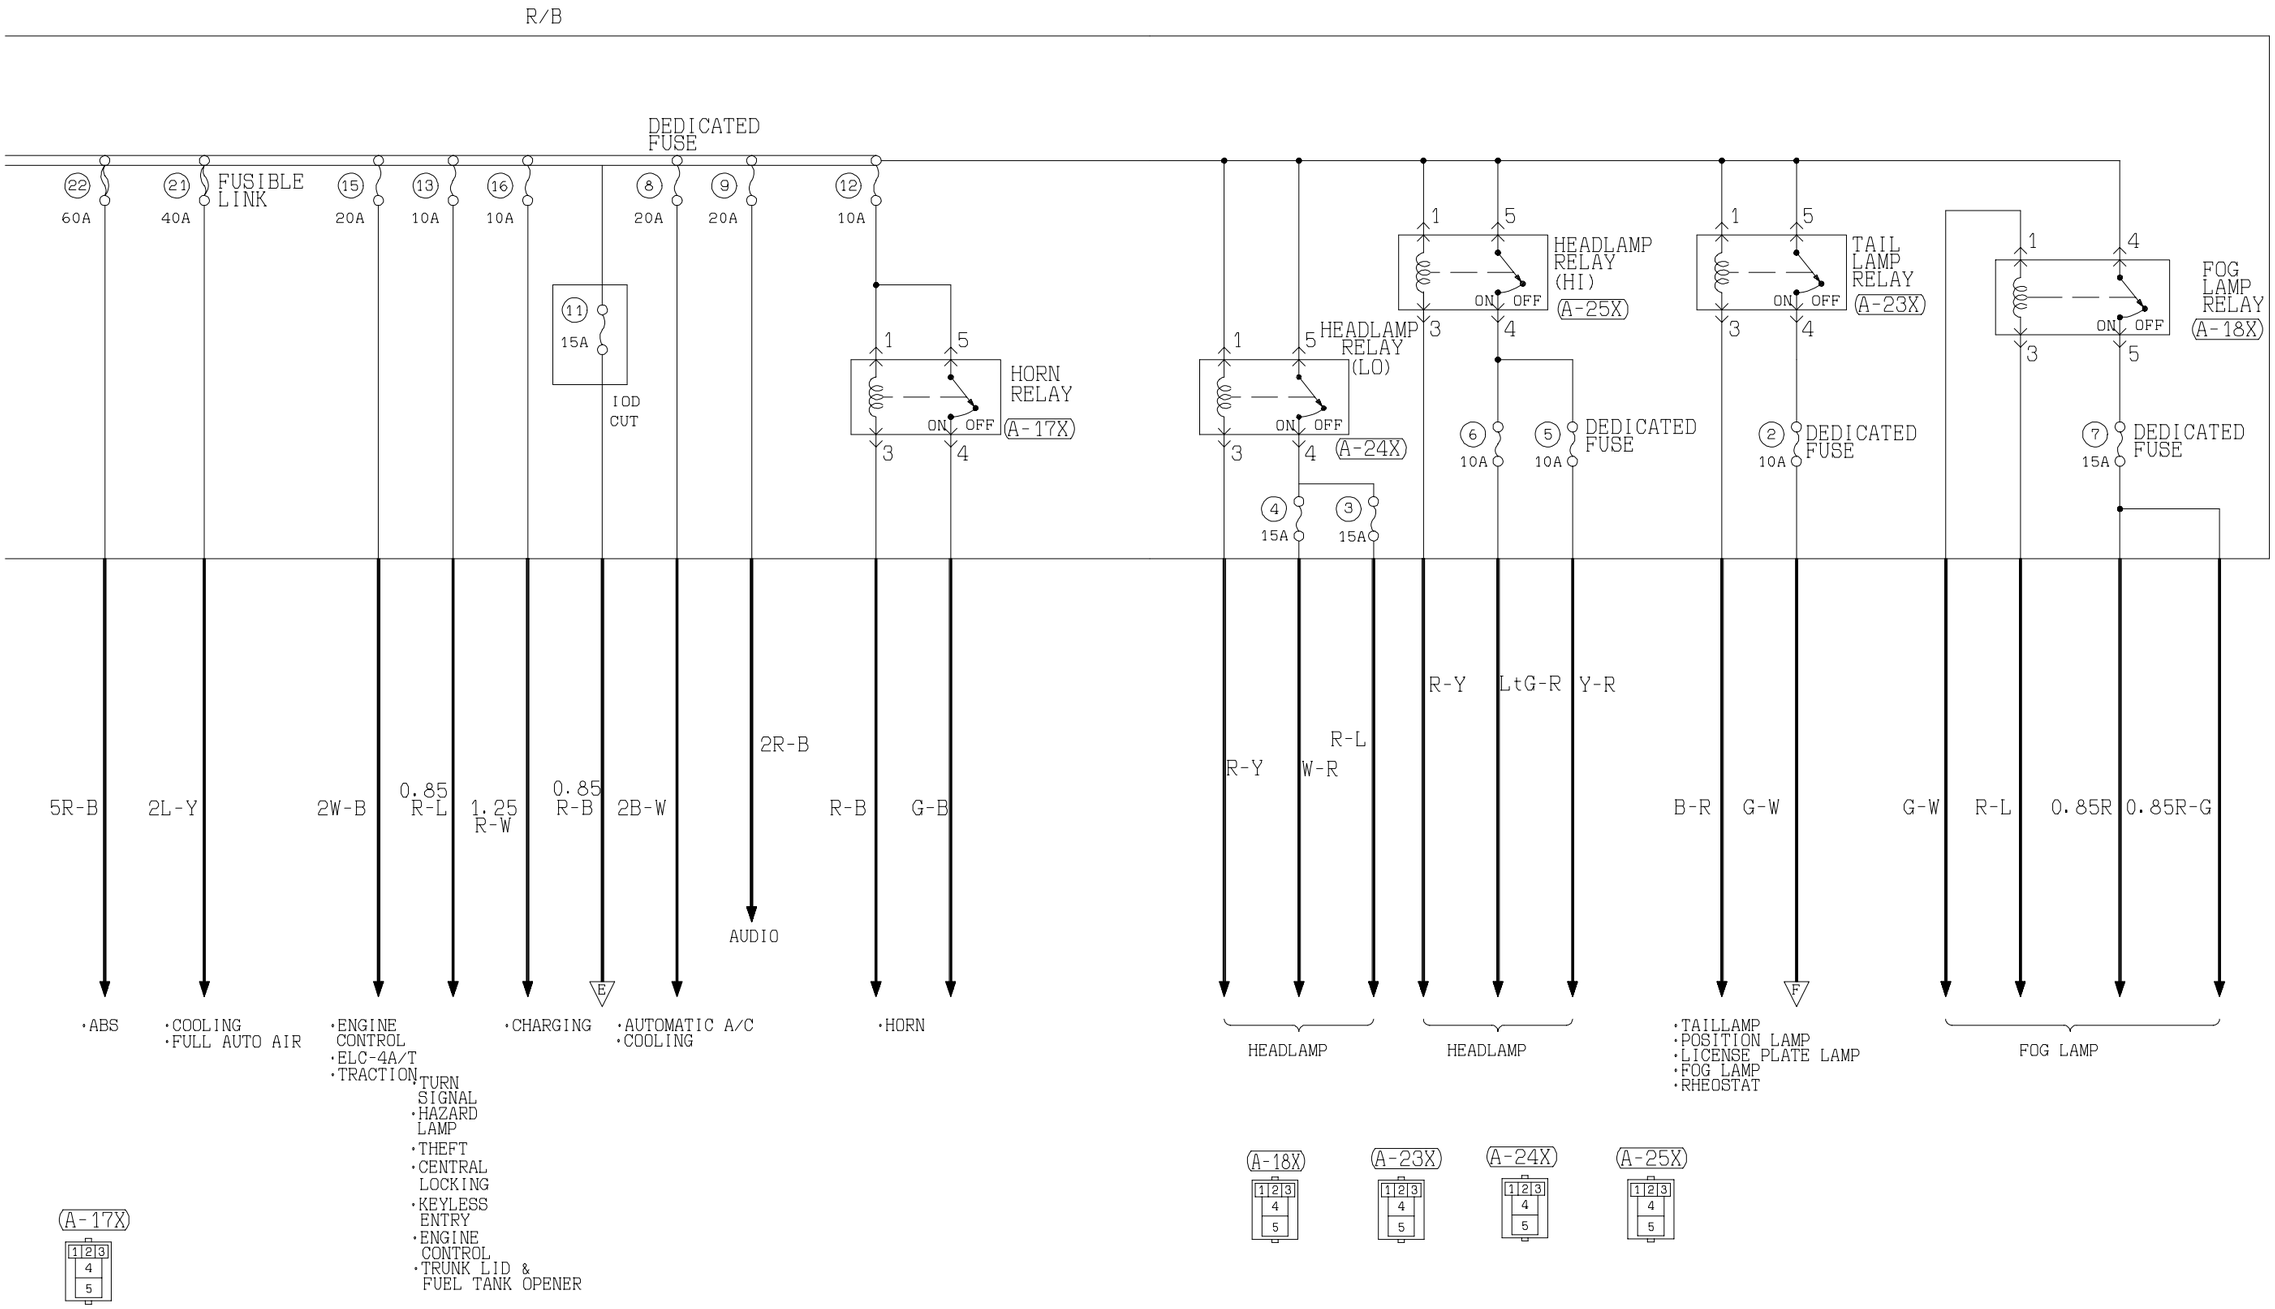

36TL001A BA

36TL001A BB

POWER DISTRIBUTION SYSTEM (CONTINUED)

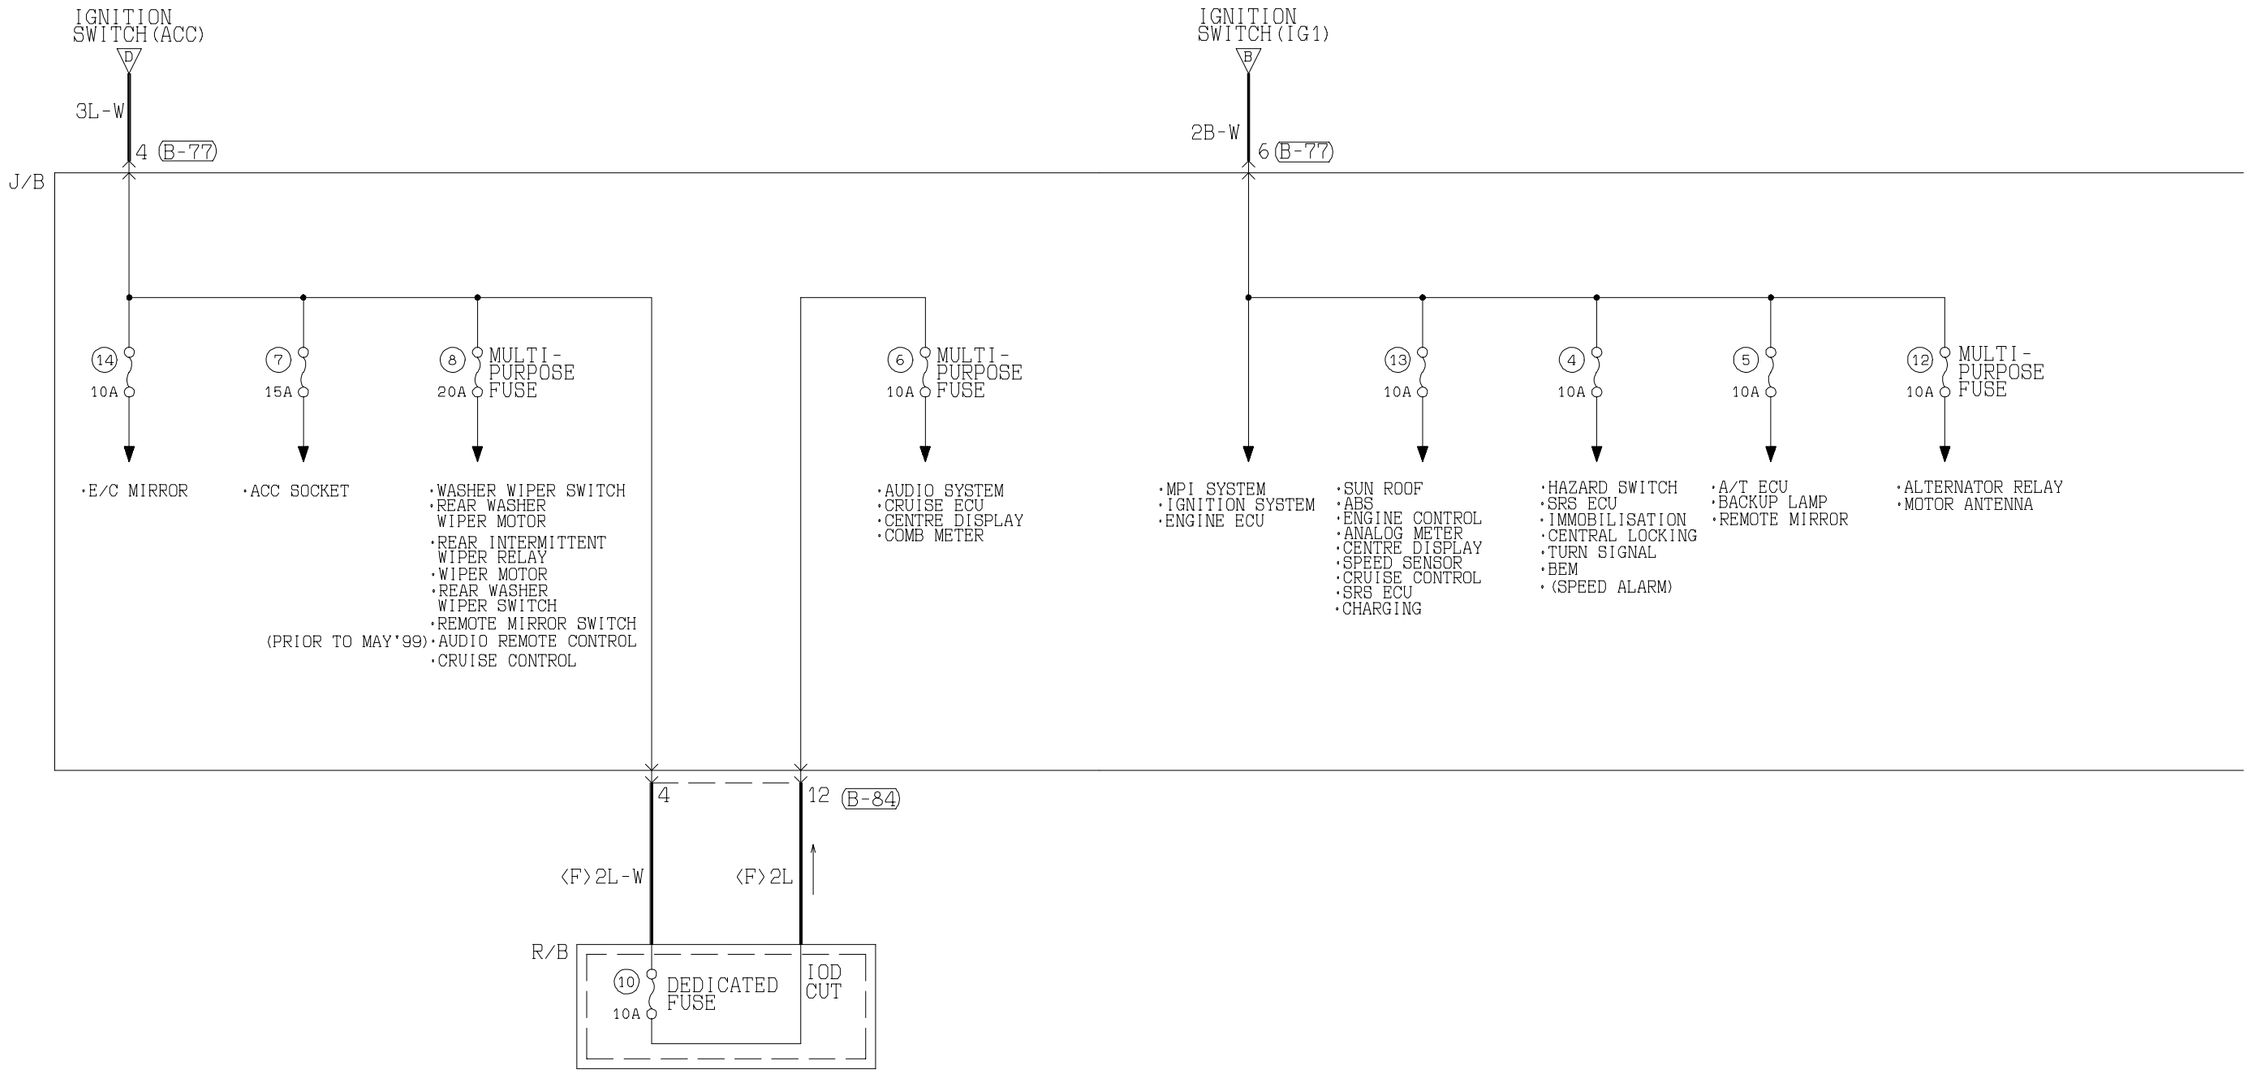





36TL001A CA

36TL001A CB

POWER DISTRIBUTION SYSTEM (CONTINUED)

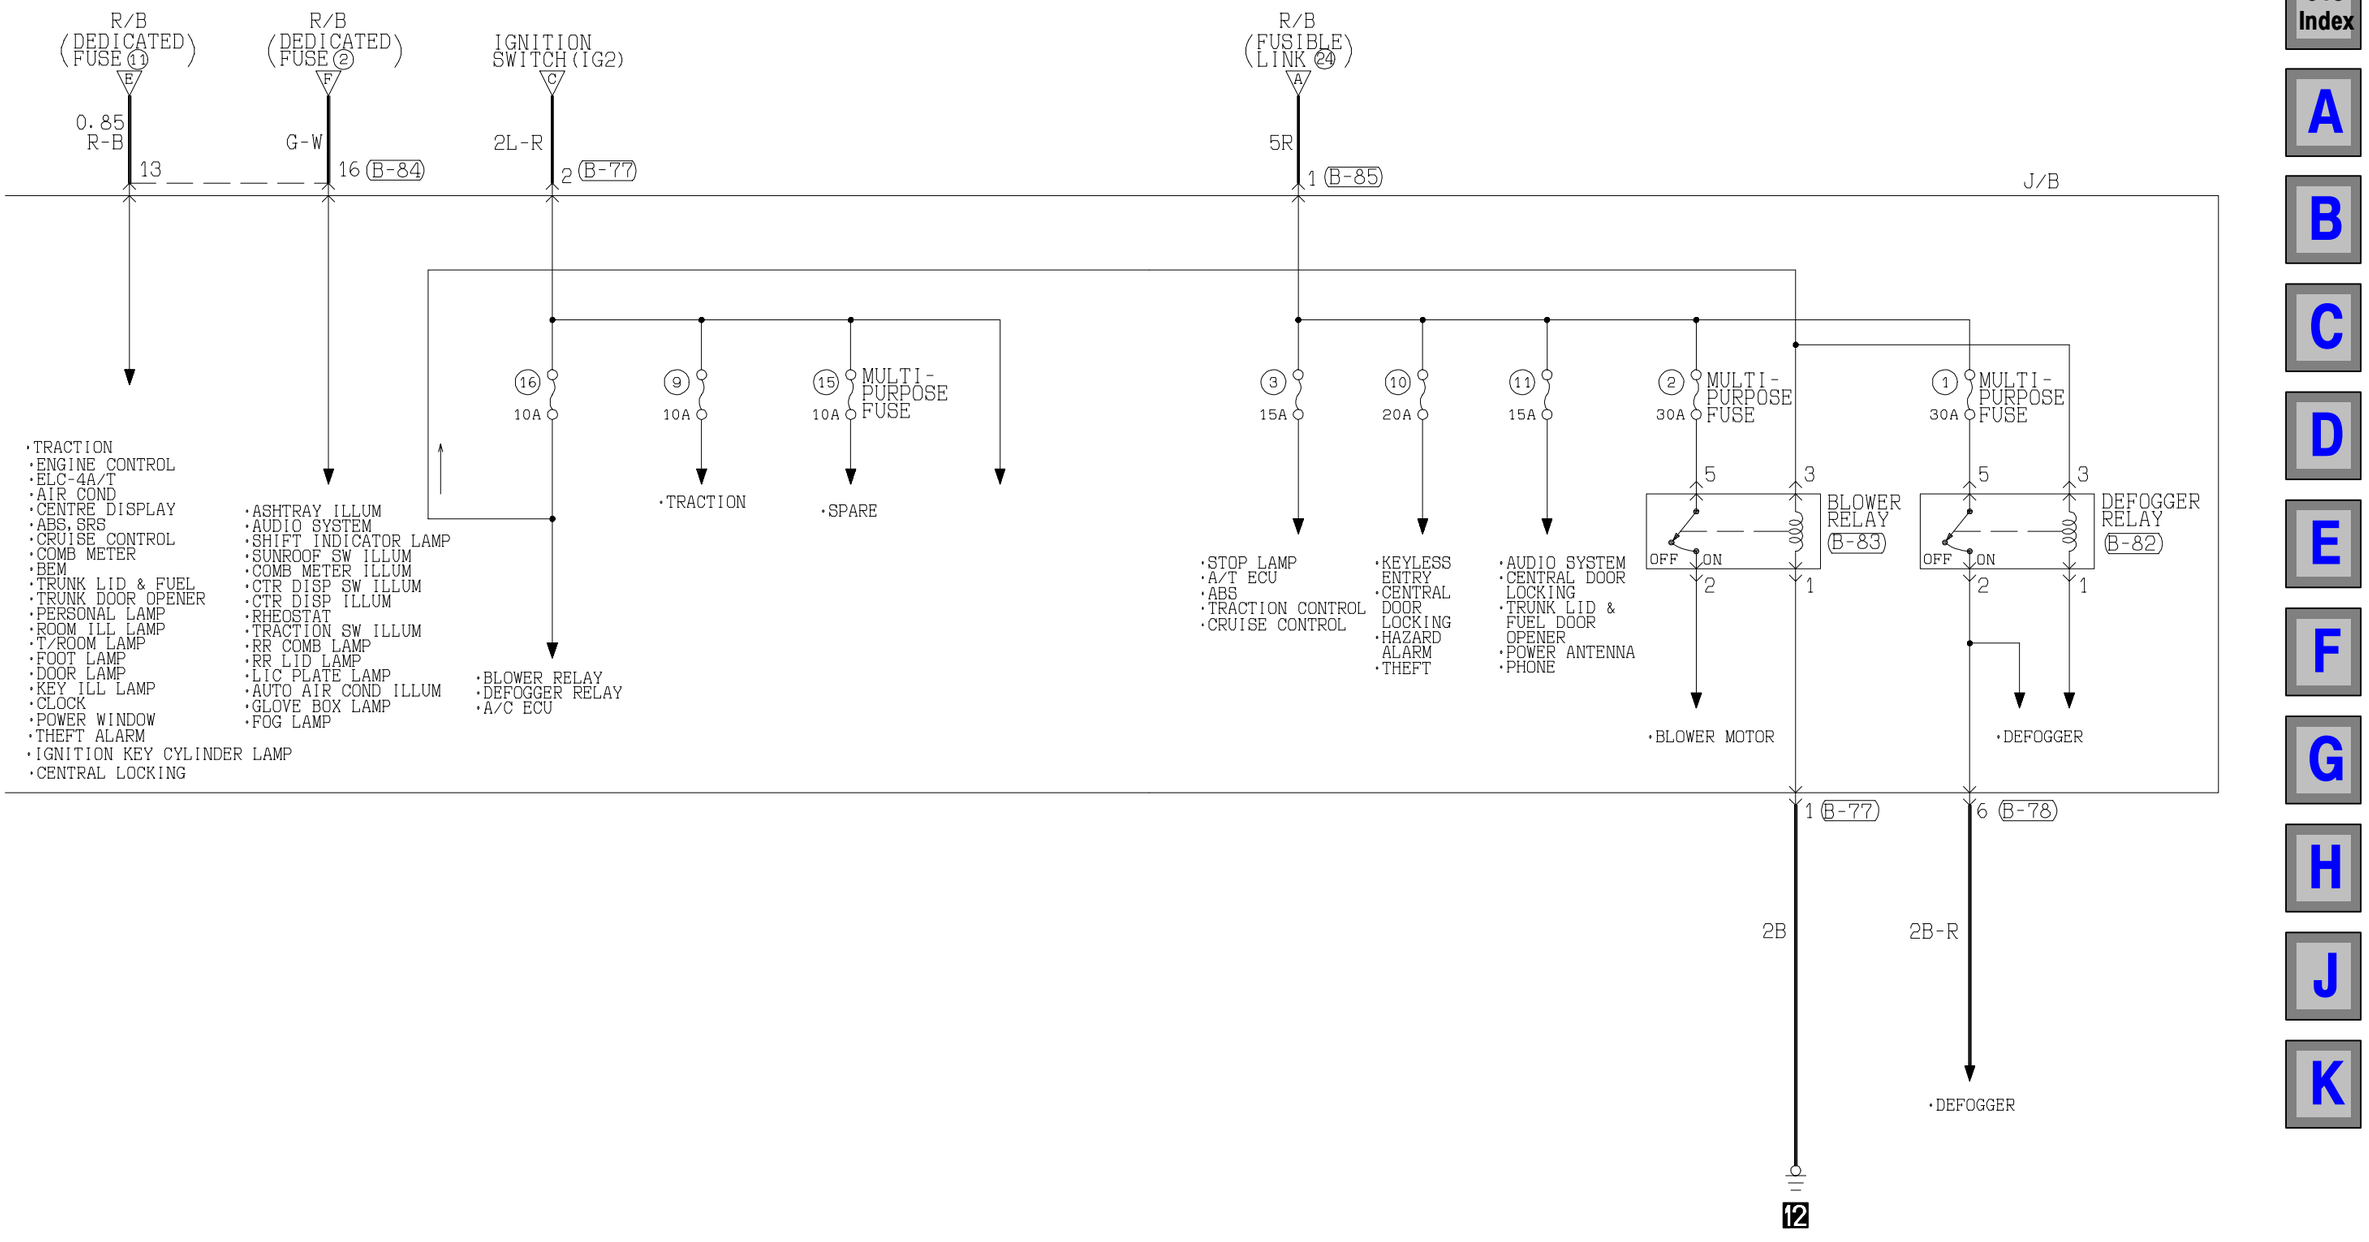

36TL001A DA

36TL001A DB

STARTING SYSTEM

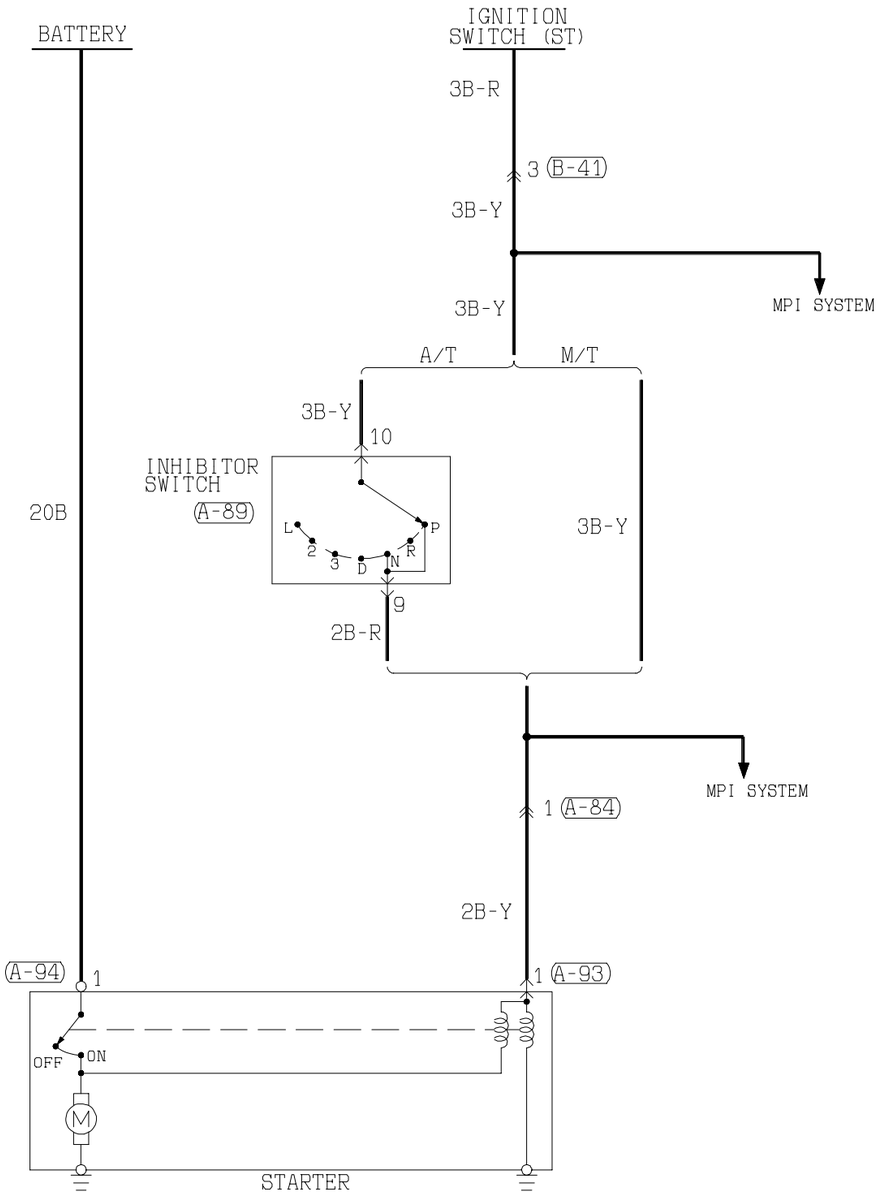



36TL002A AA

IGNITION SYSTEM

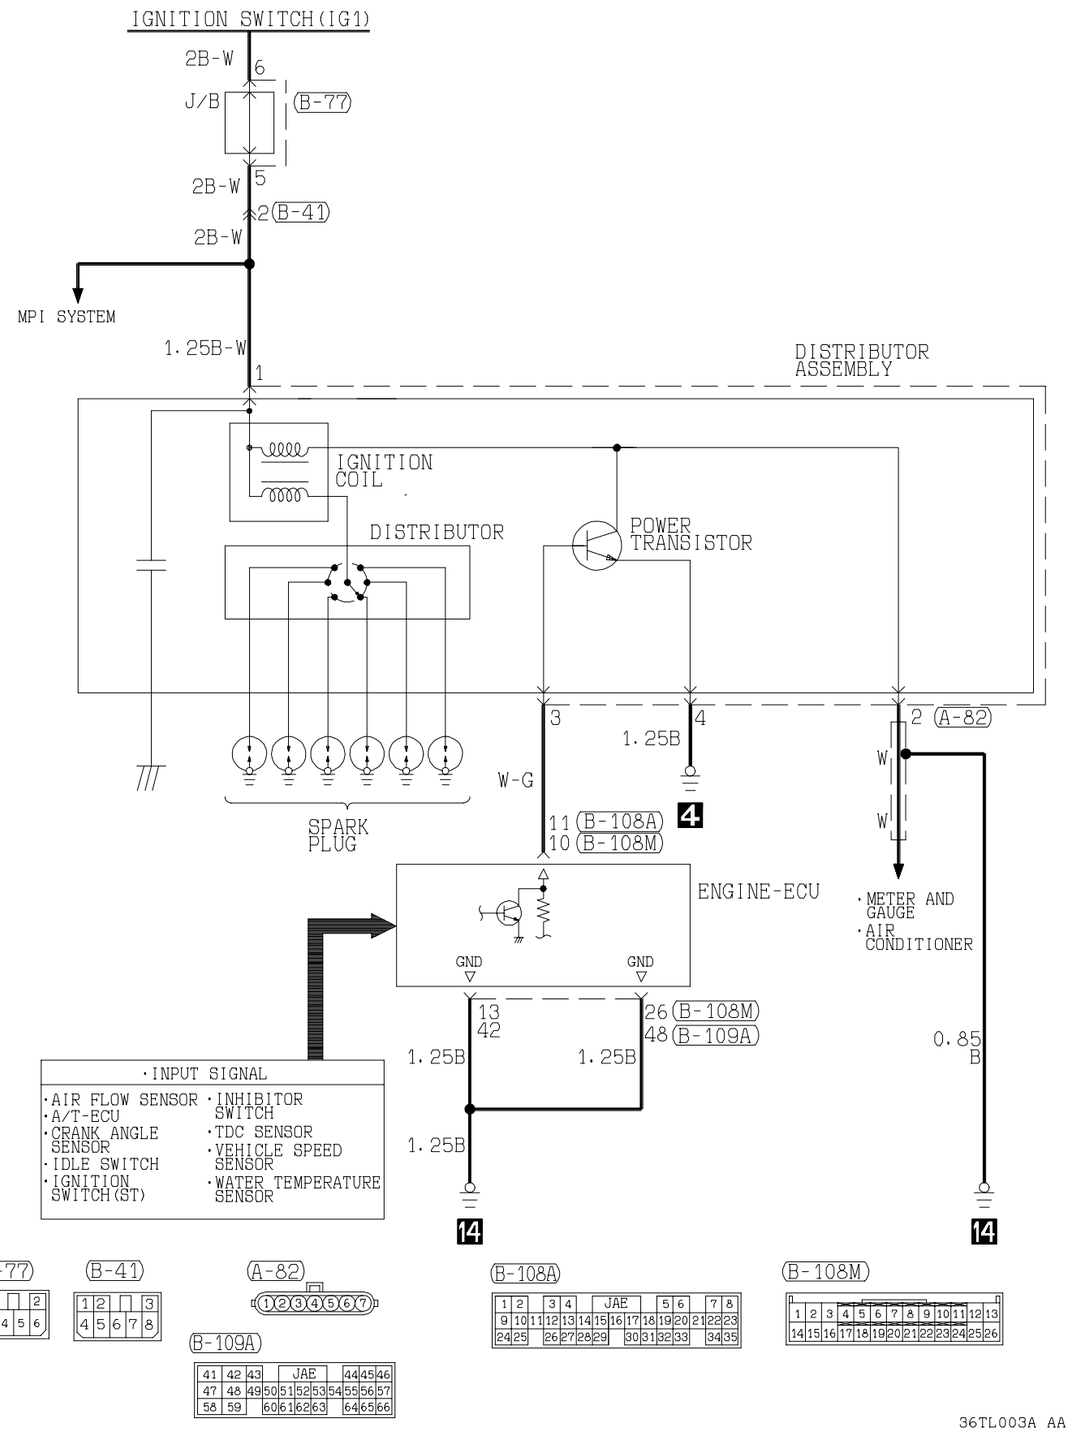

36TL003A AA

CHARGING SYSTEM

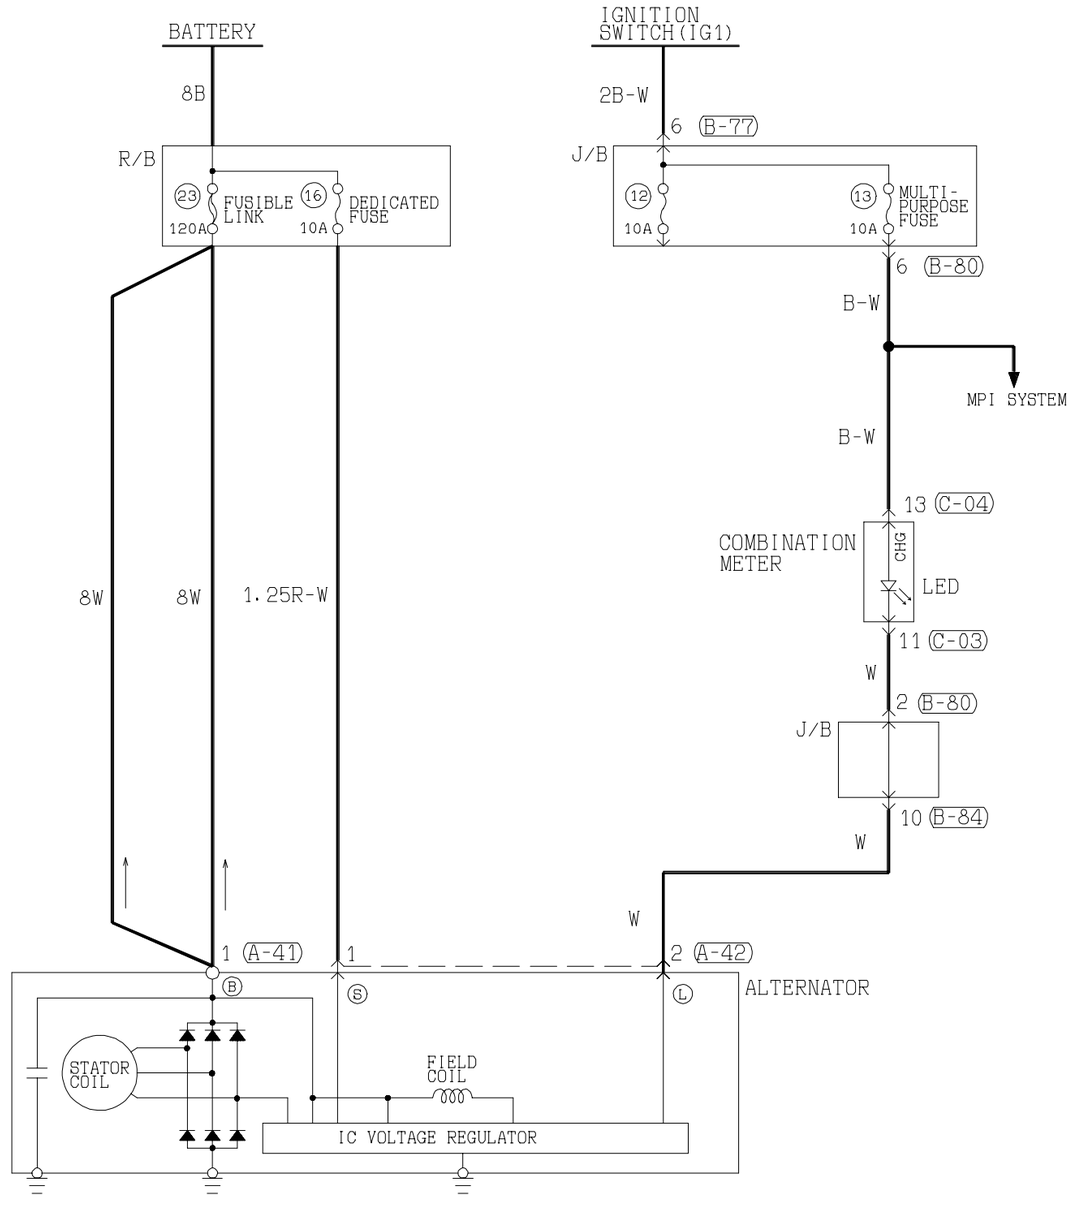

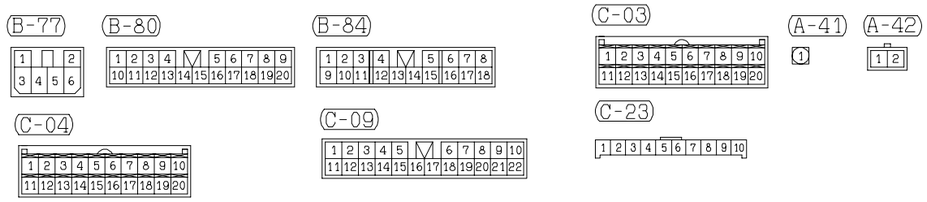

36TL004A AA

MPI SYSTEM <Manual Transmission Vehicles>

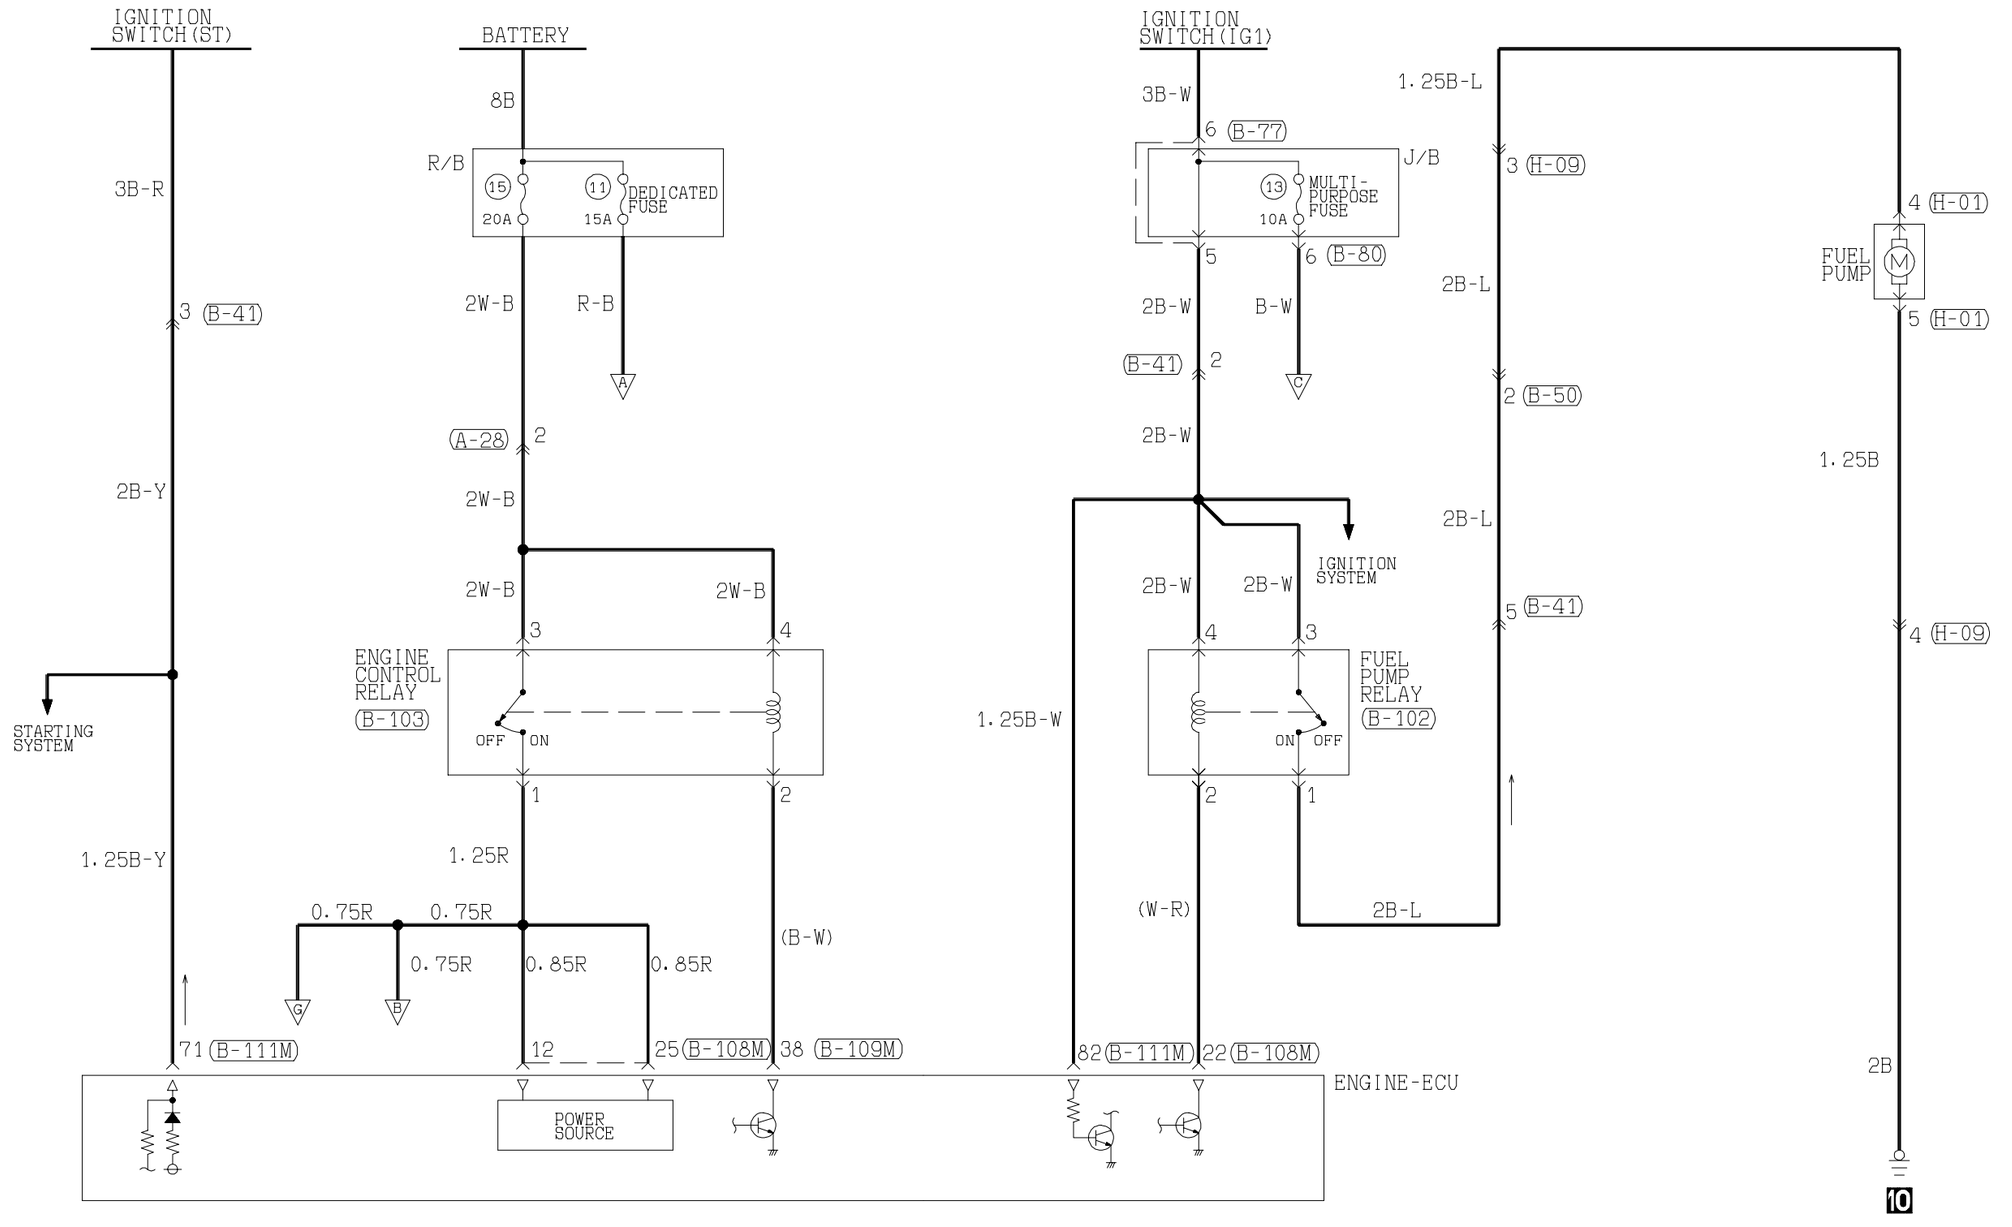

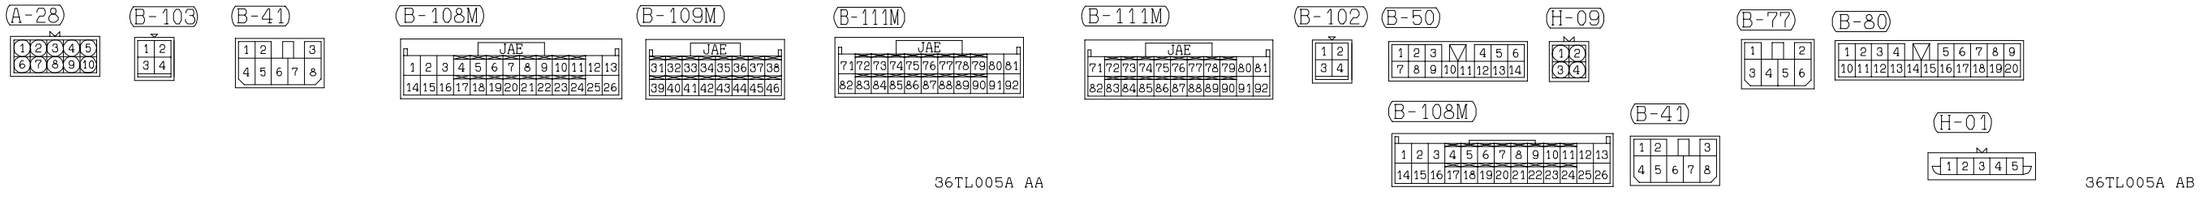

36TL005A AA

36TL005A AB

MPI SYSTEM <Manual Transmission Vehicles> (CONTINUED)

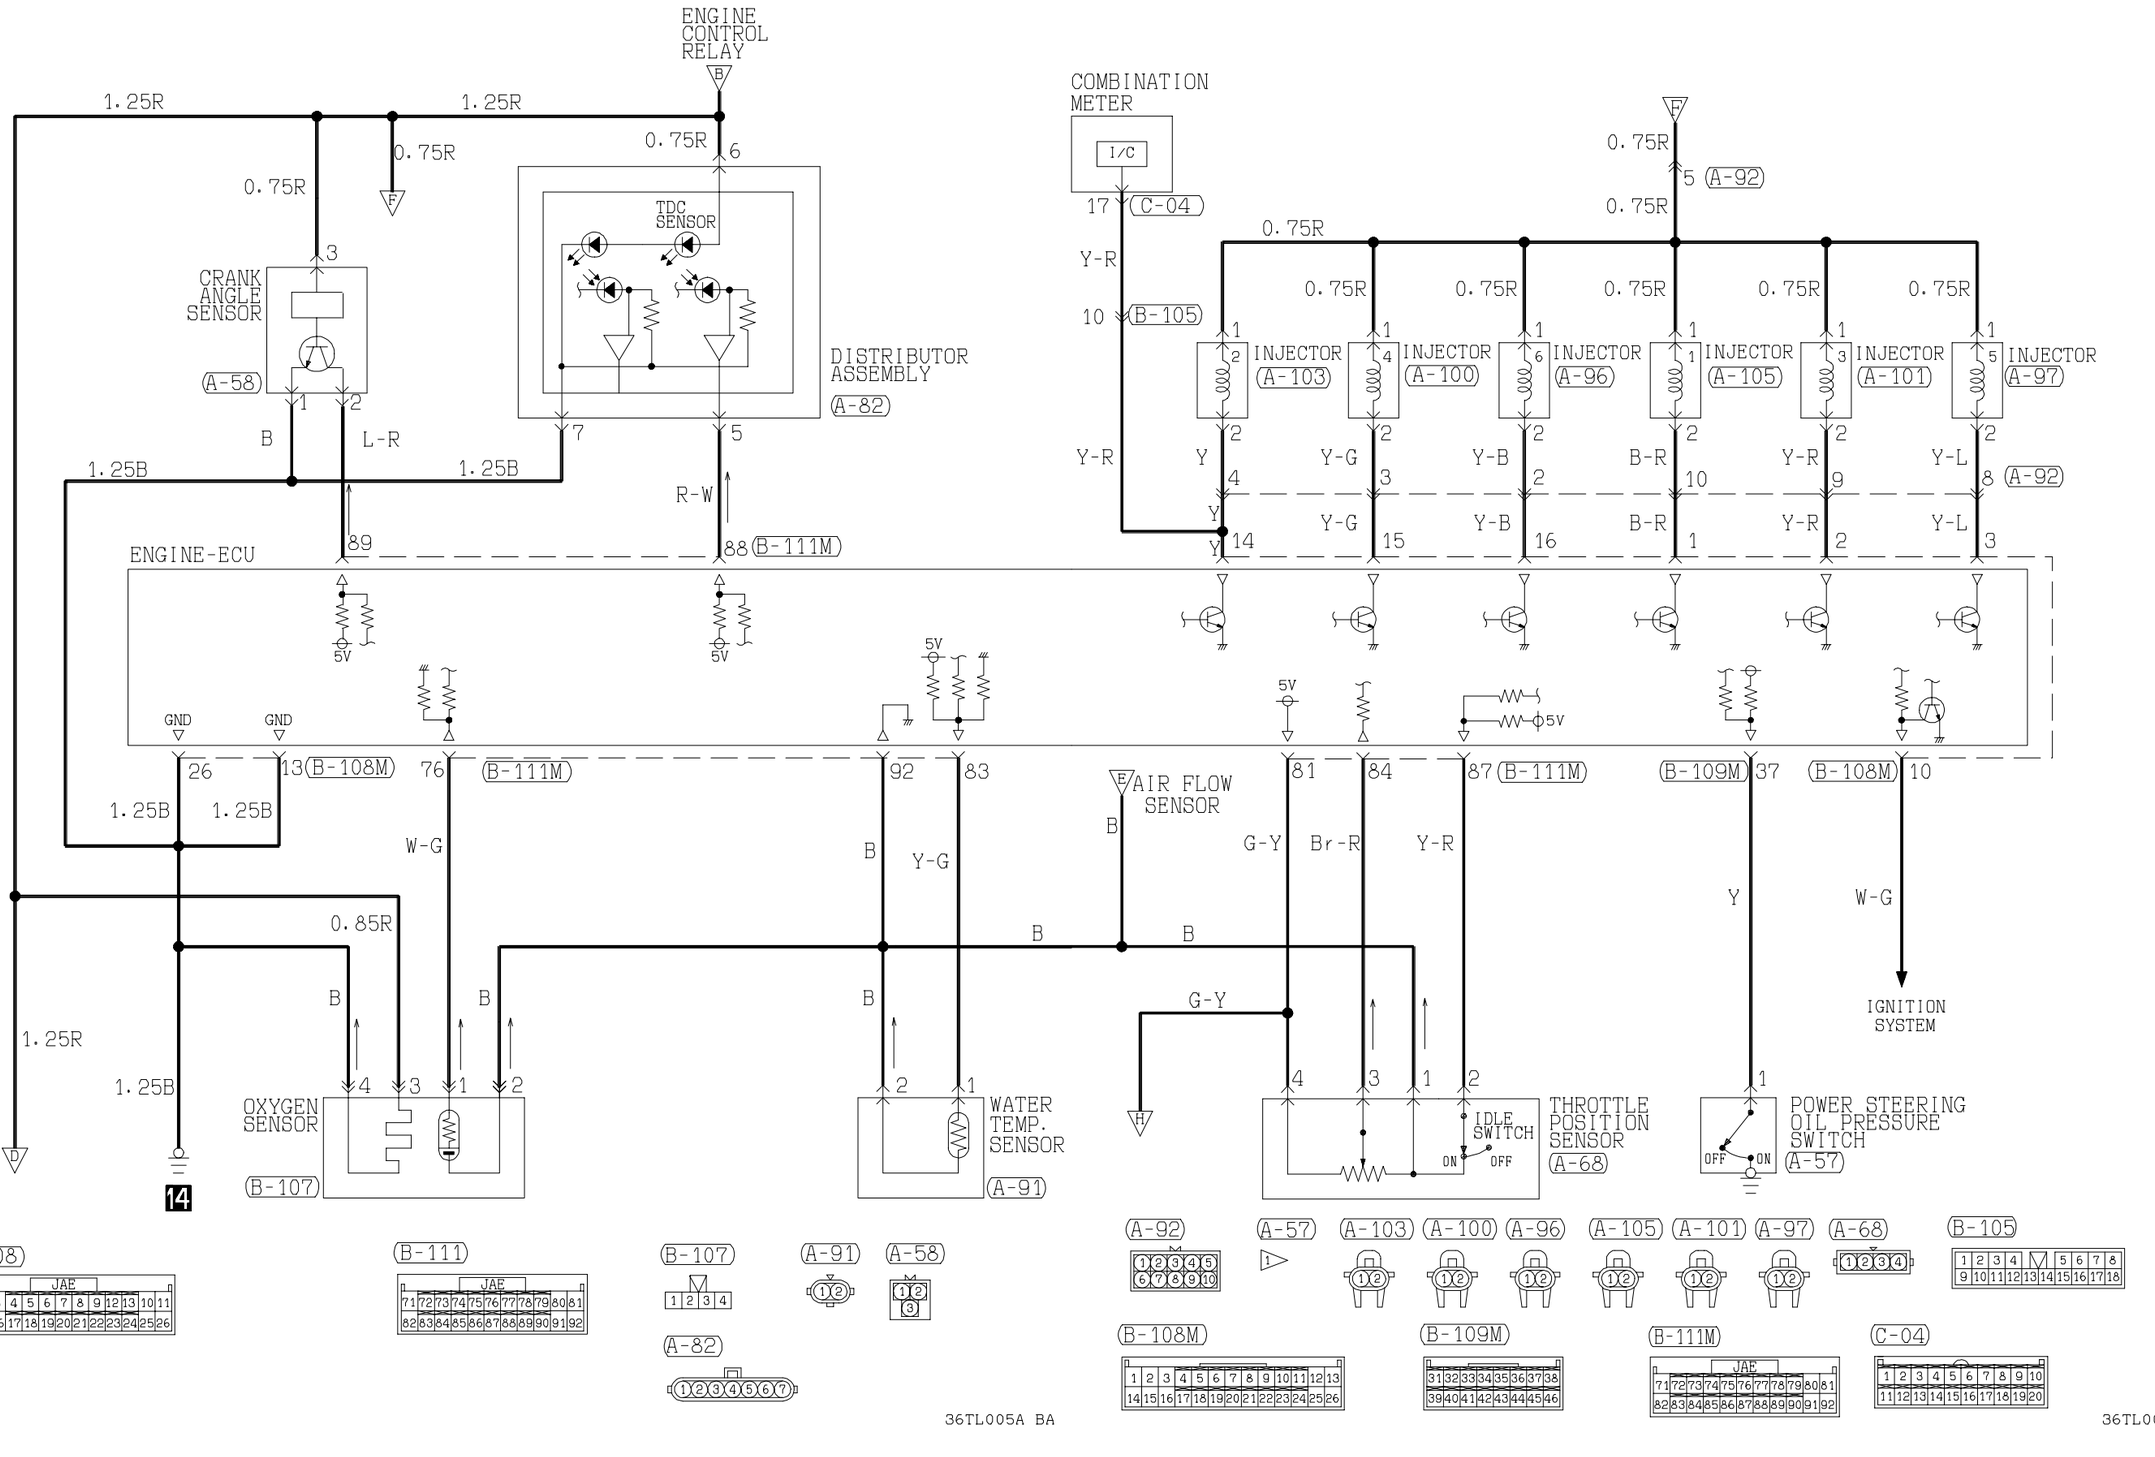

(B-108)

(B-111)

(B-107)

(A-91)

(A-58)

(A-82)

(A-92)

(A-57)

(A-103) (A-100) (A-96) (A-105) (A-101) (A-97)

(A-68)

(B-105)

(B-108M)

(B-109M)

(B-111M)

(C-04)

MPI SYSTEM <Manual Transmission Vehicles> (CONTINUED)

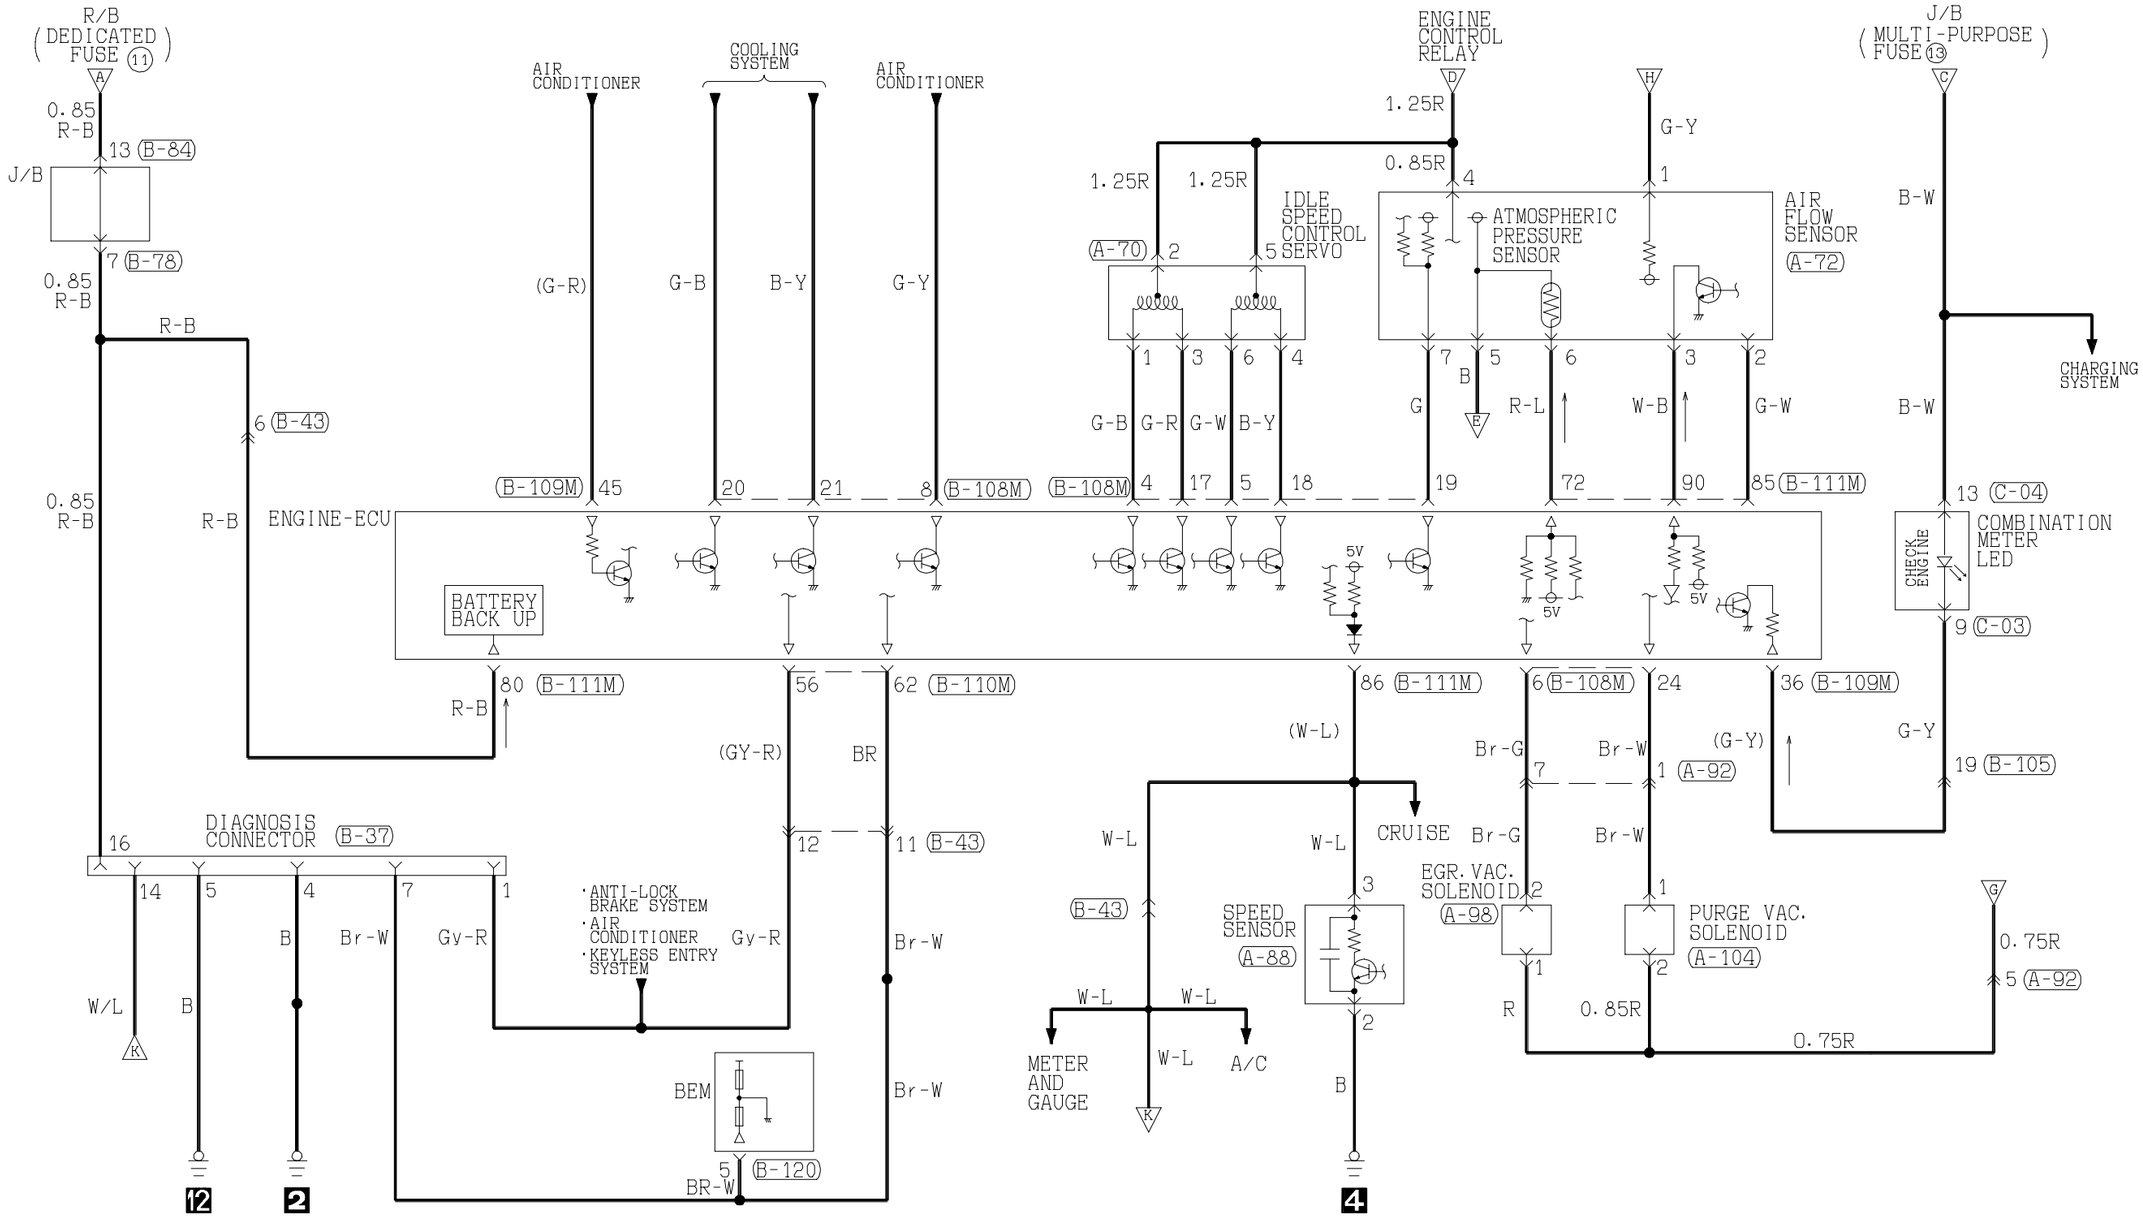

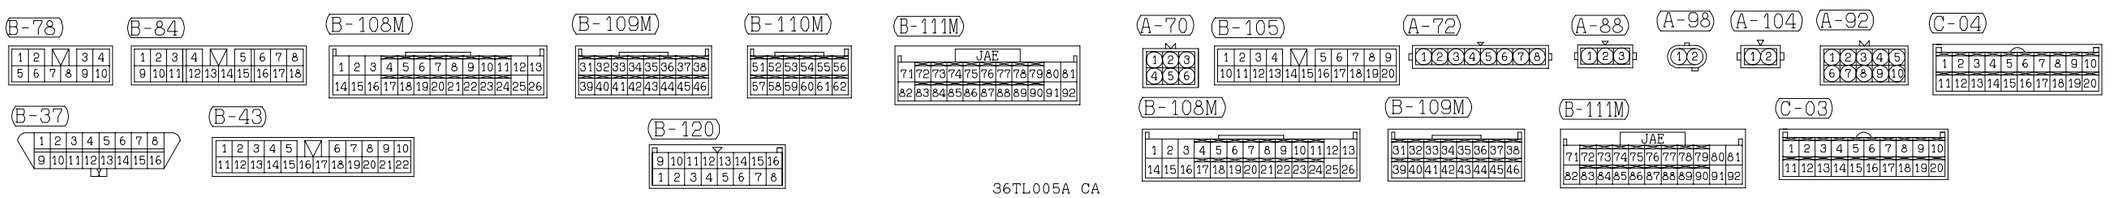

36TL005A CA

36TL005A CB

MPI SYSTEM <Automatic Transmission Vehicles>

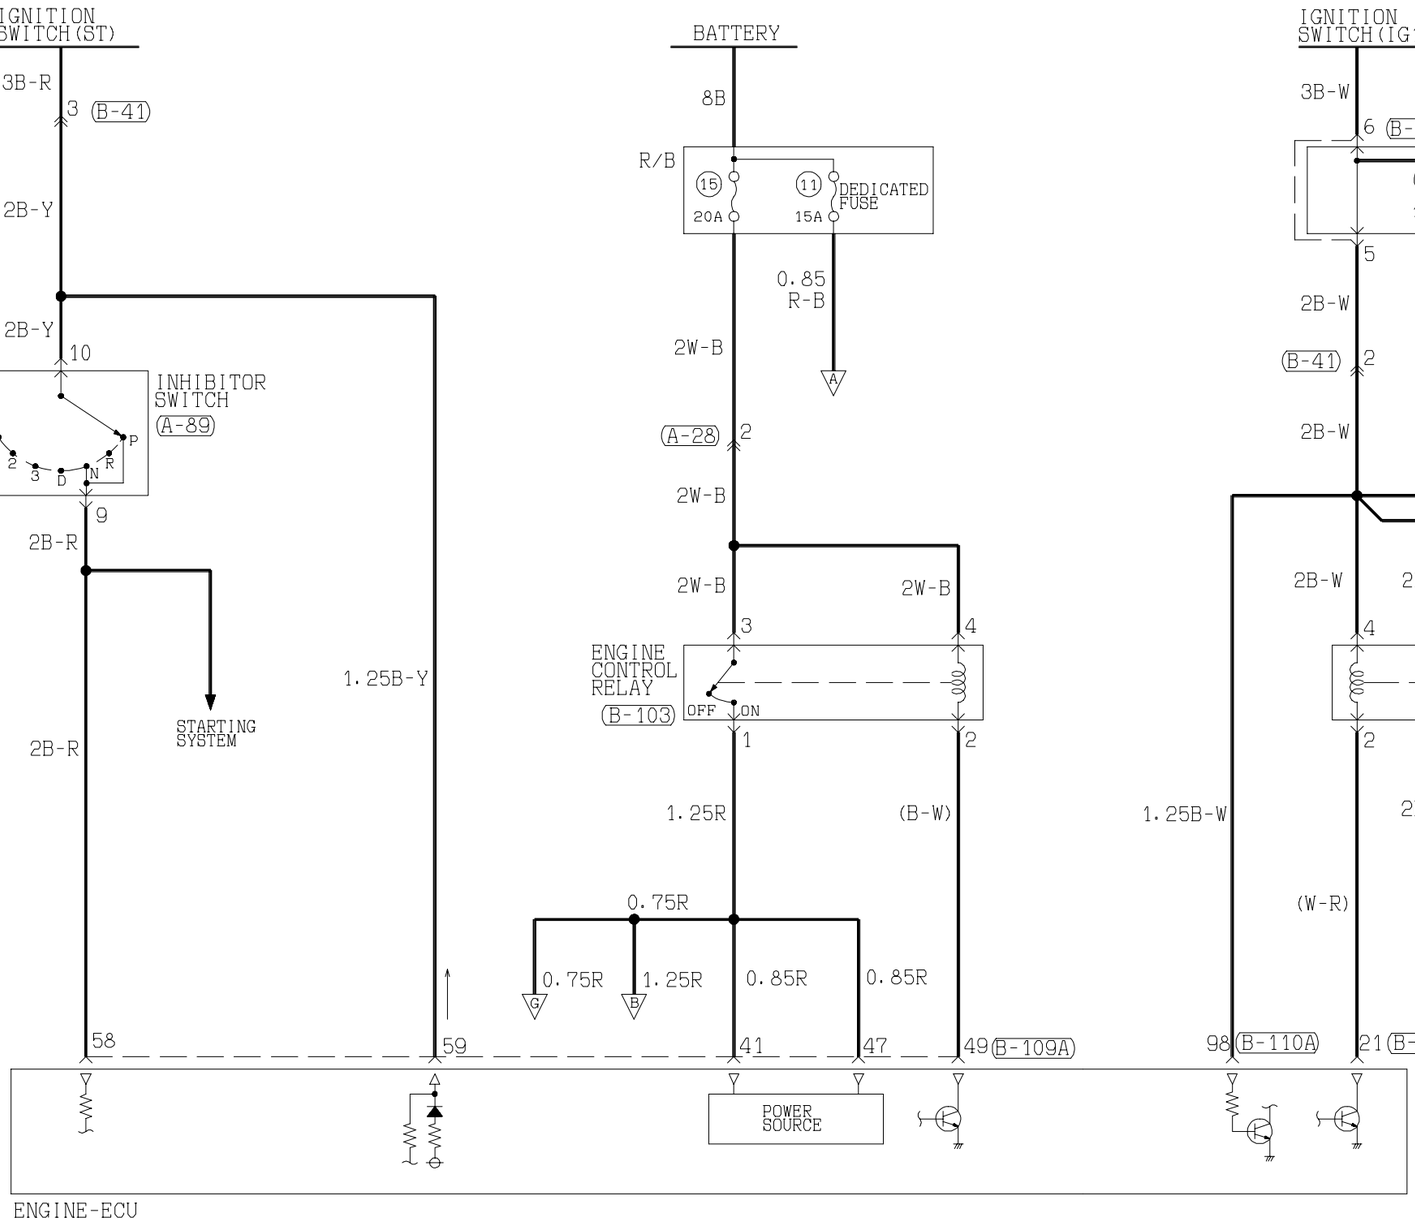



36TL006A AA

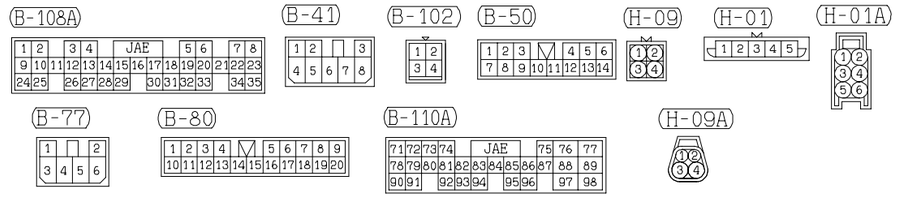

36TL006A AB

MPI SYSTEM <Automatic Transmission Vehicles> (CONTINUED)

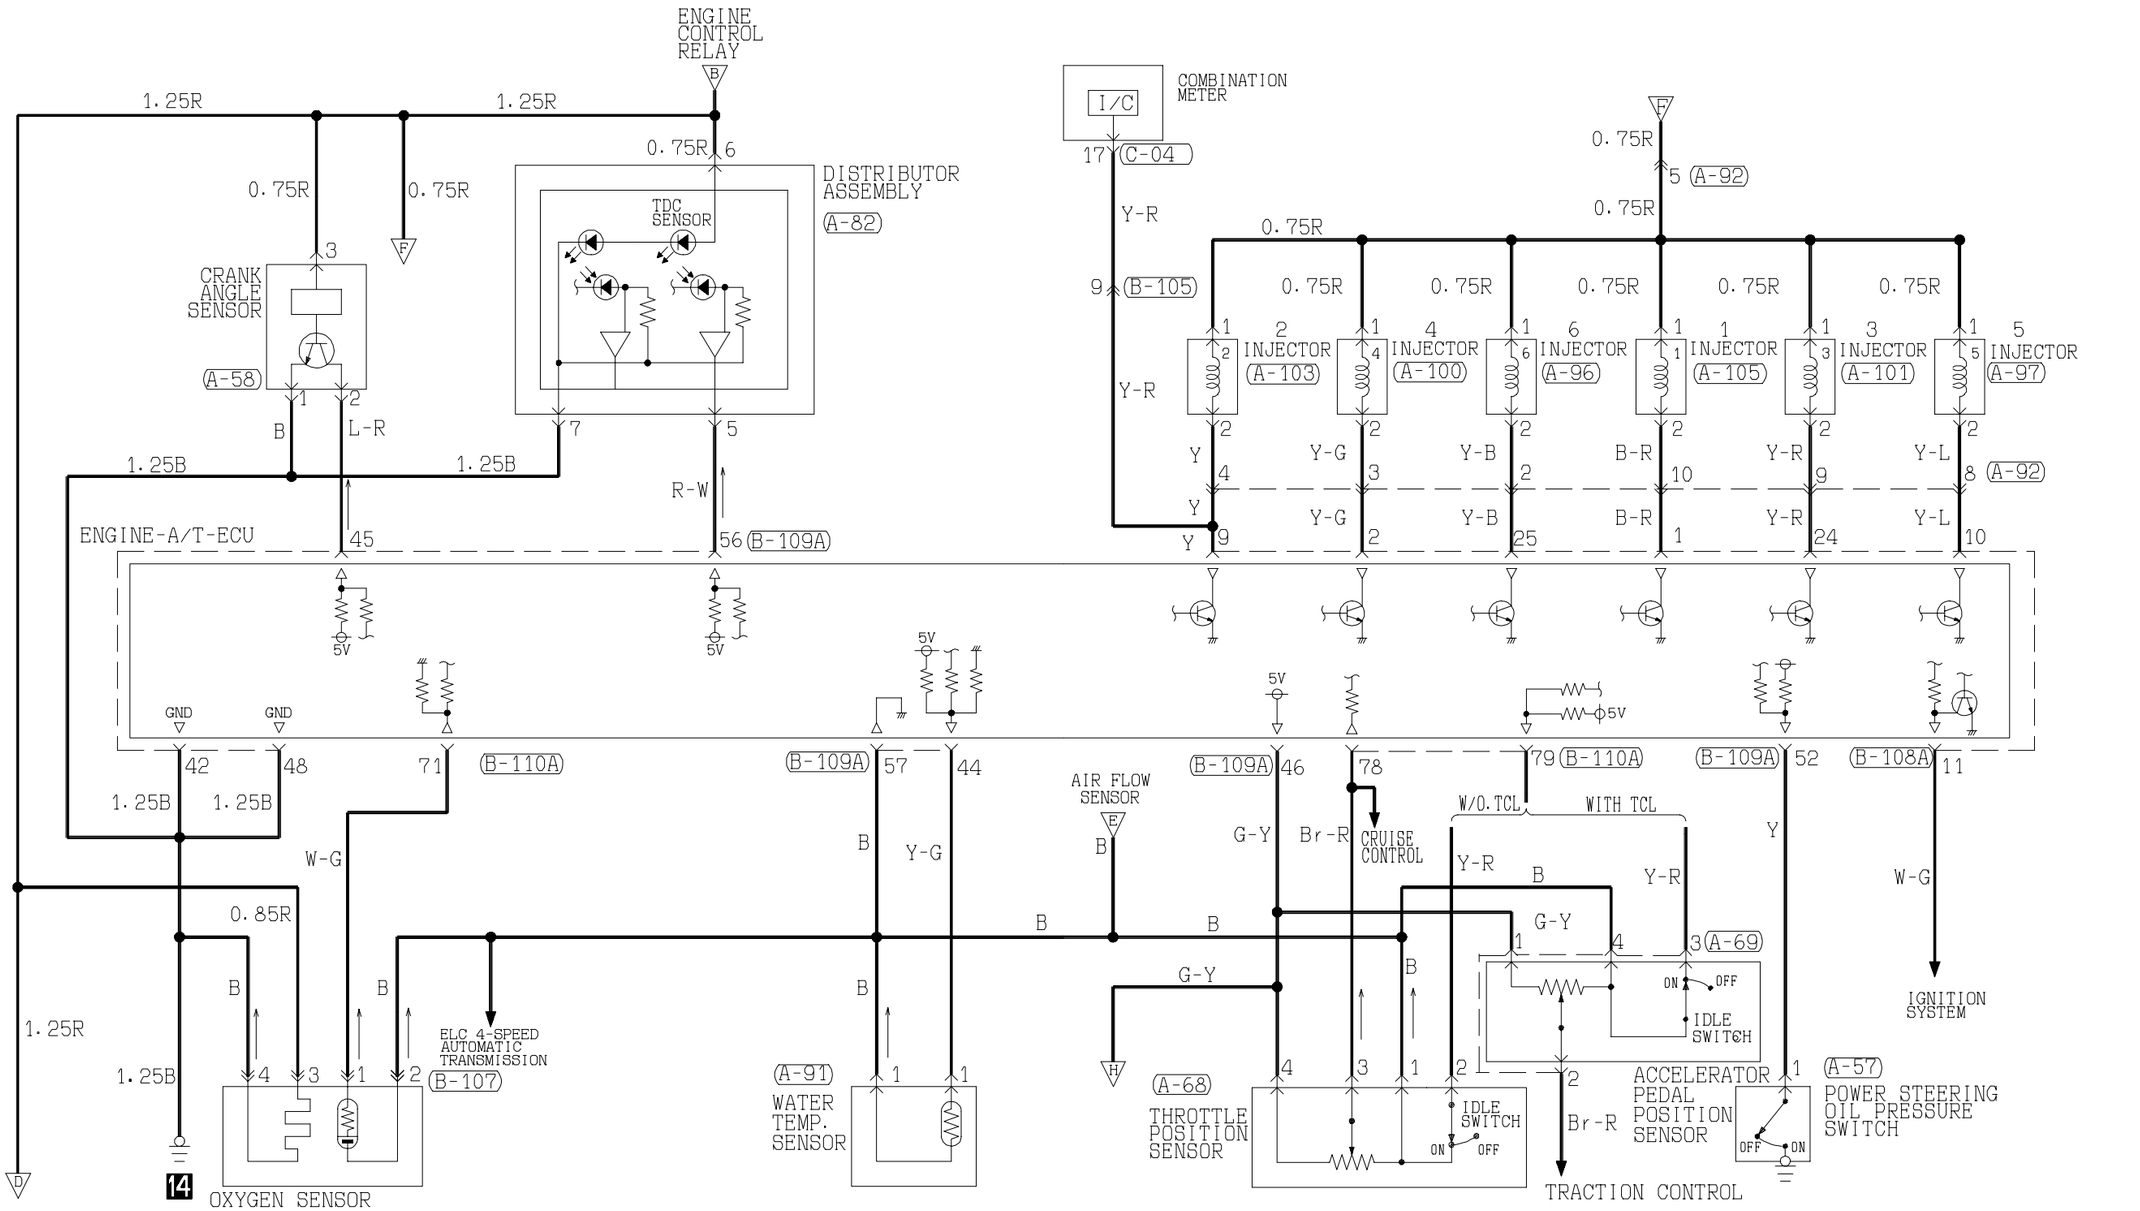

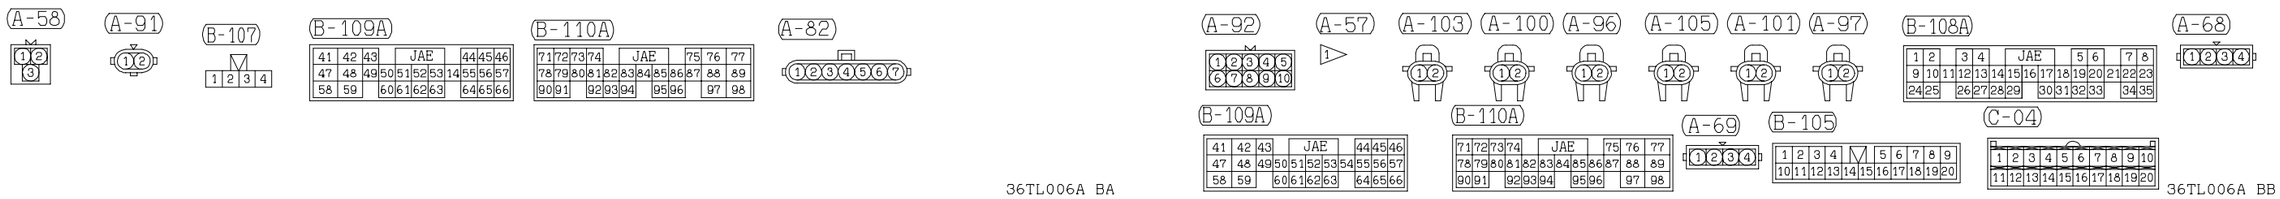

36TL006A BA

36TL006A BB

MPI SYSTEM <Automatic Transmission Vehicles> (CONTINUED)

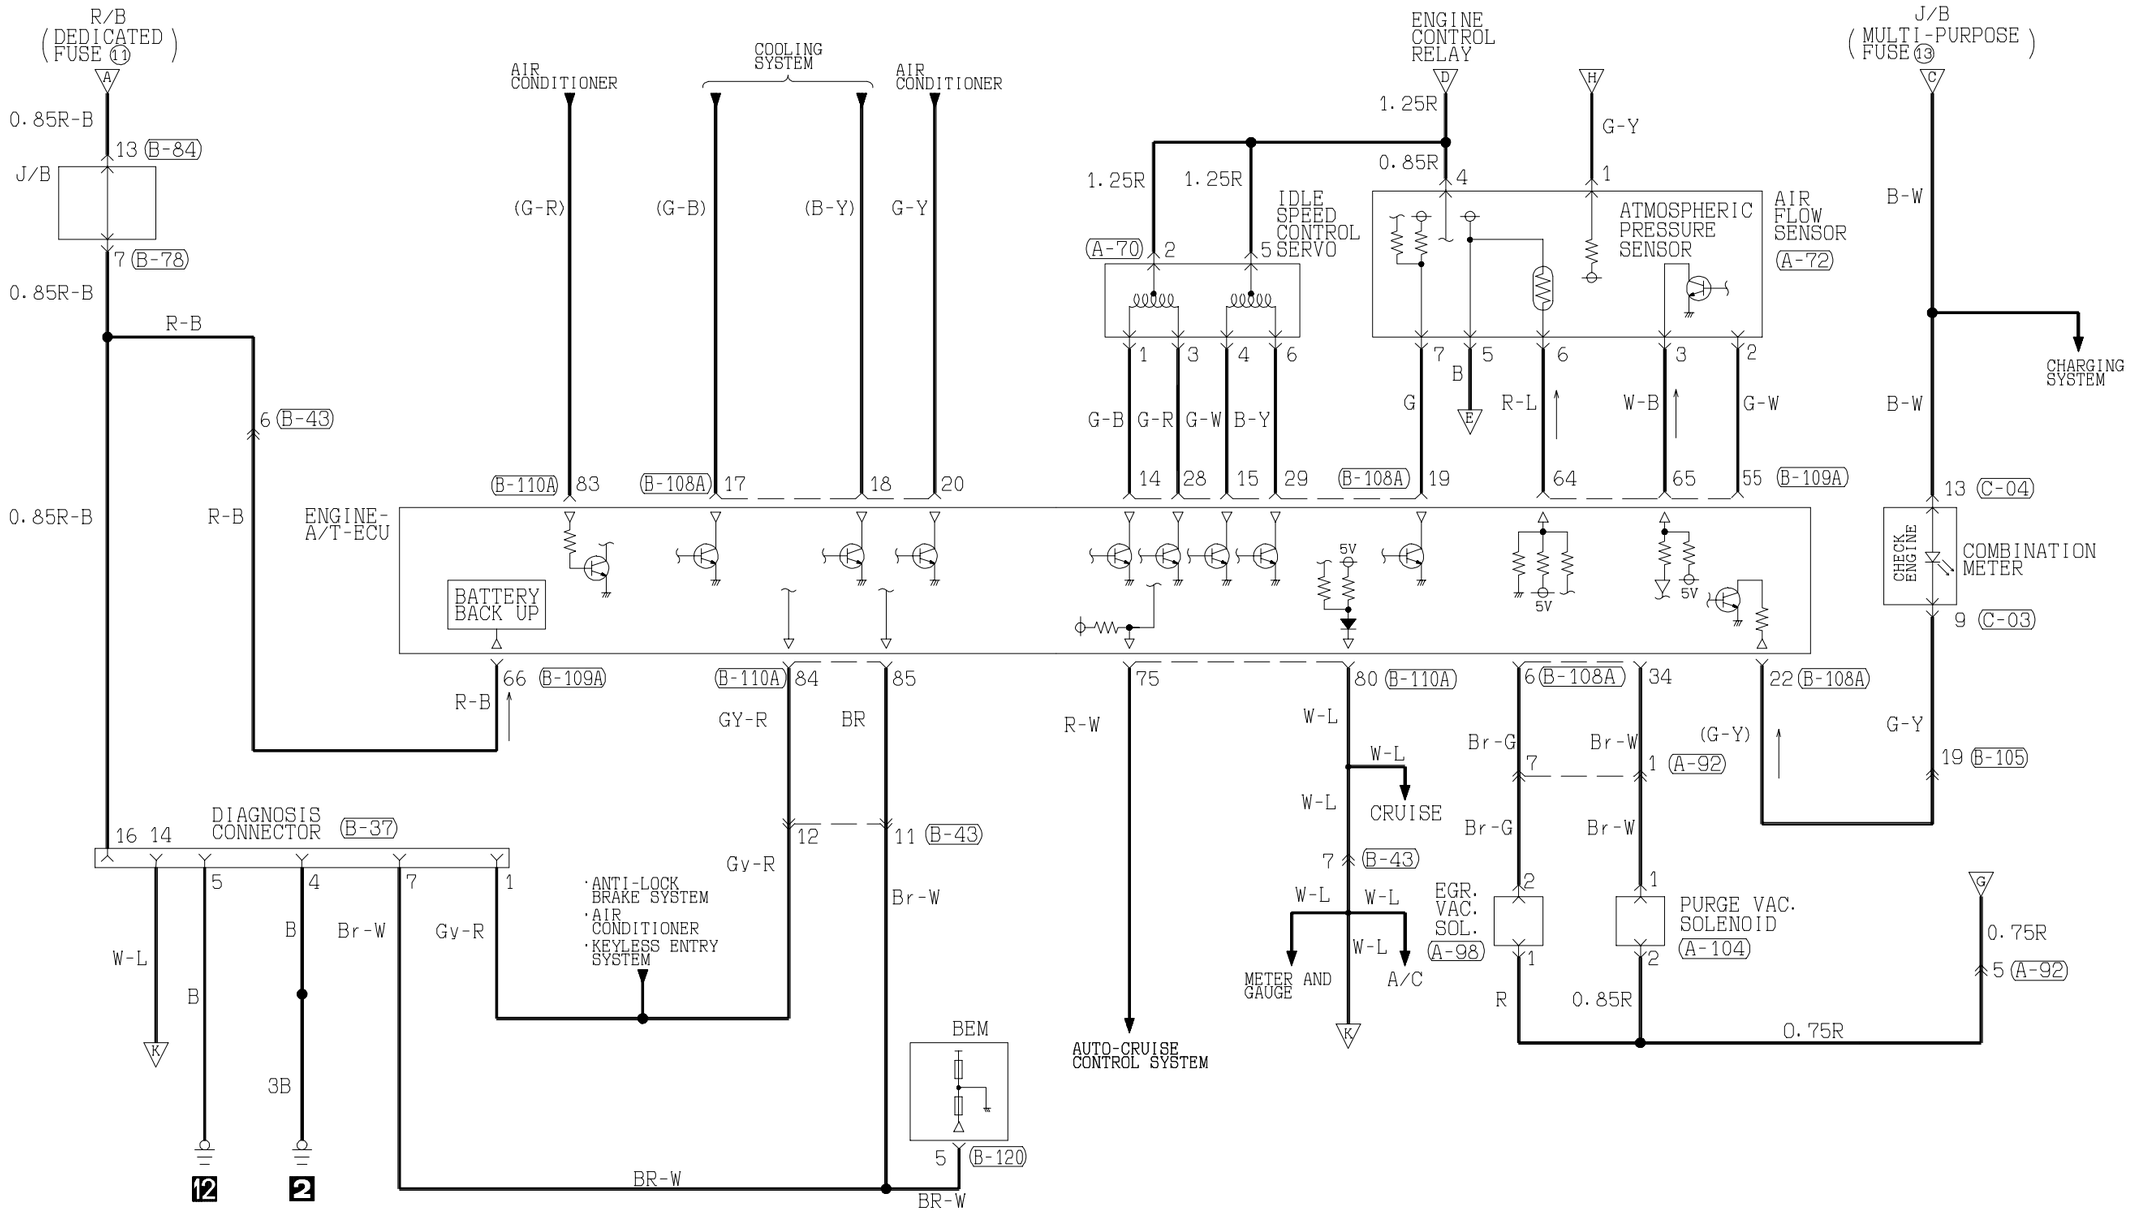

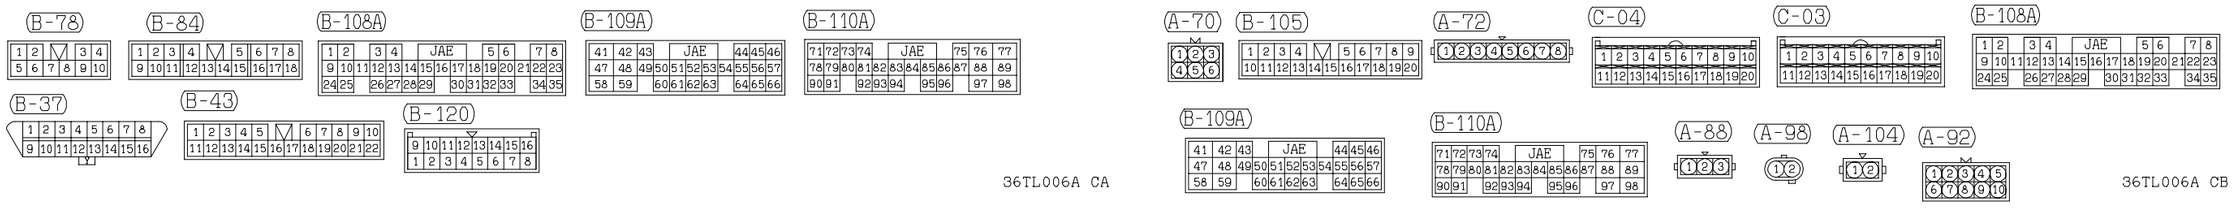

36TL006A CA

36TL006A CB

Main Index
54 Index
54C Index
A
B
C
D
E
F
G
H
J
K

COOLING SYSTEM
<ALL MODELS EXCEPT VERADA>

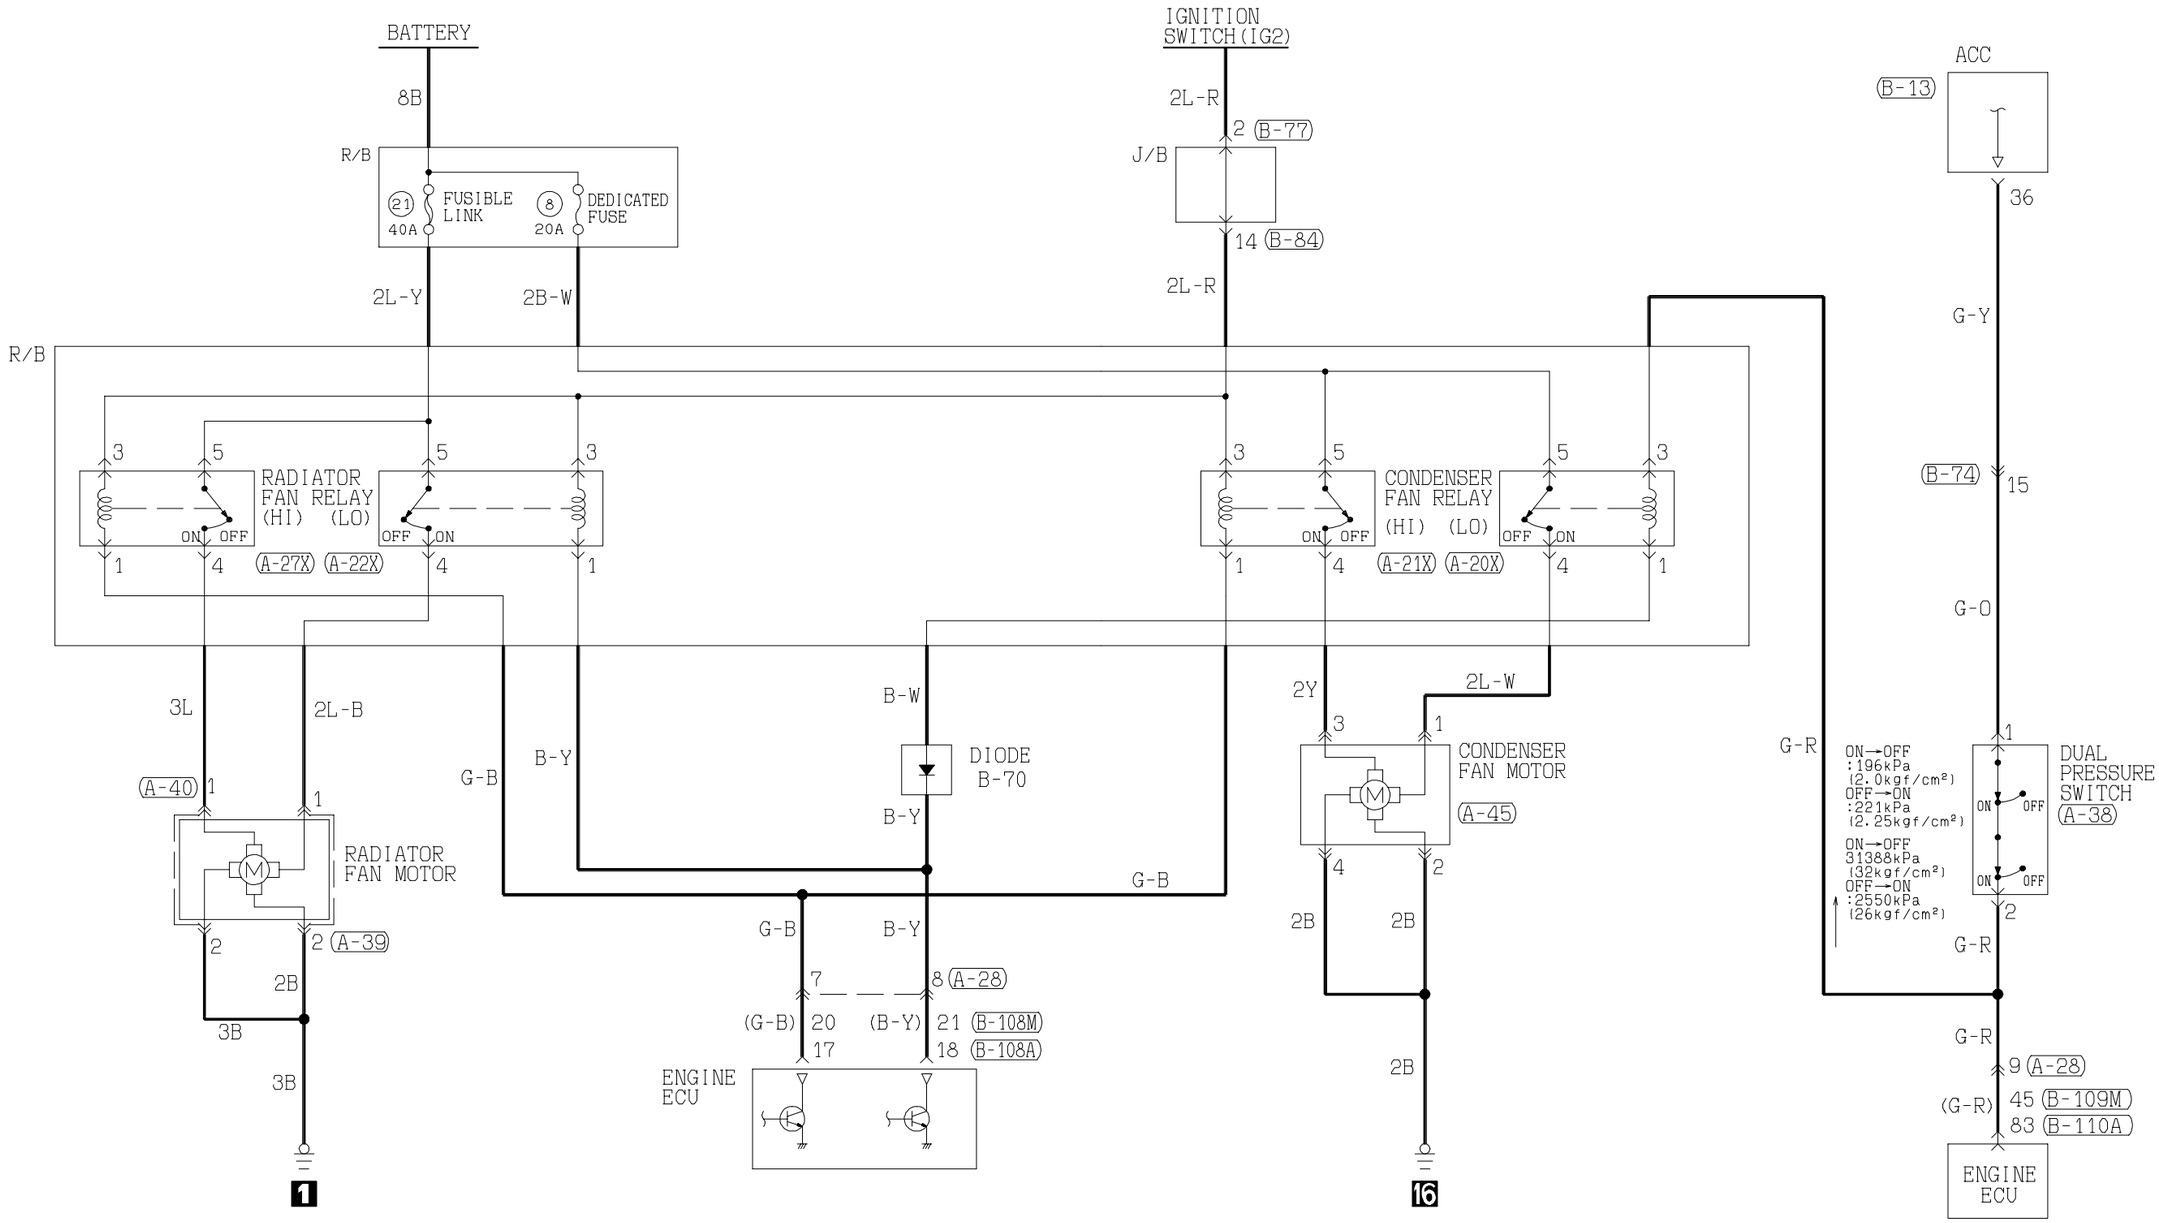

A-22X A-27X A-28 A-39 (3.5L) A-39 (3.0L) A-40 (3.0L) B-108A B-108M



A-20X A-21X A-45 A-28 B-74 B-109M A-38 B-84



B-77 B-110A B-13



36TL007A AA

36TL007A AB

COOLING SYSTEM <VERADA>

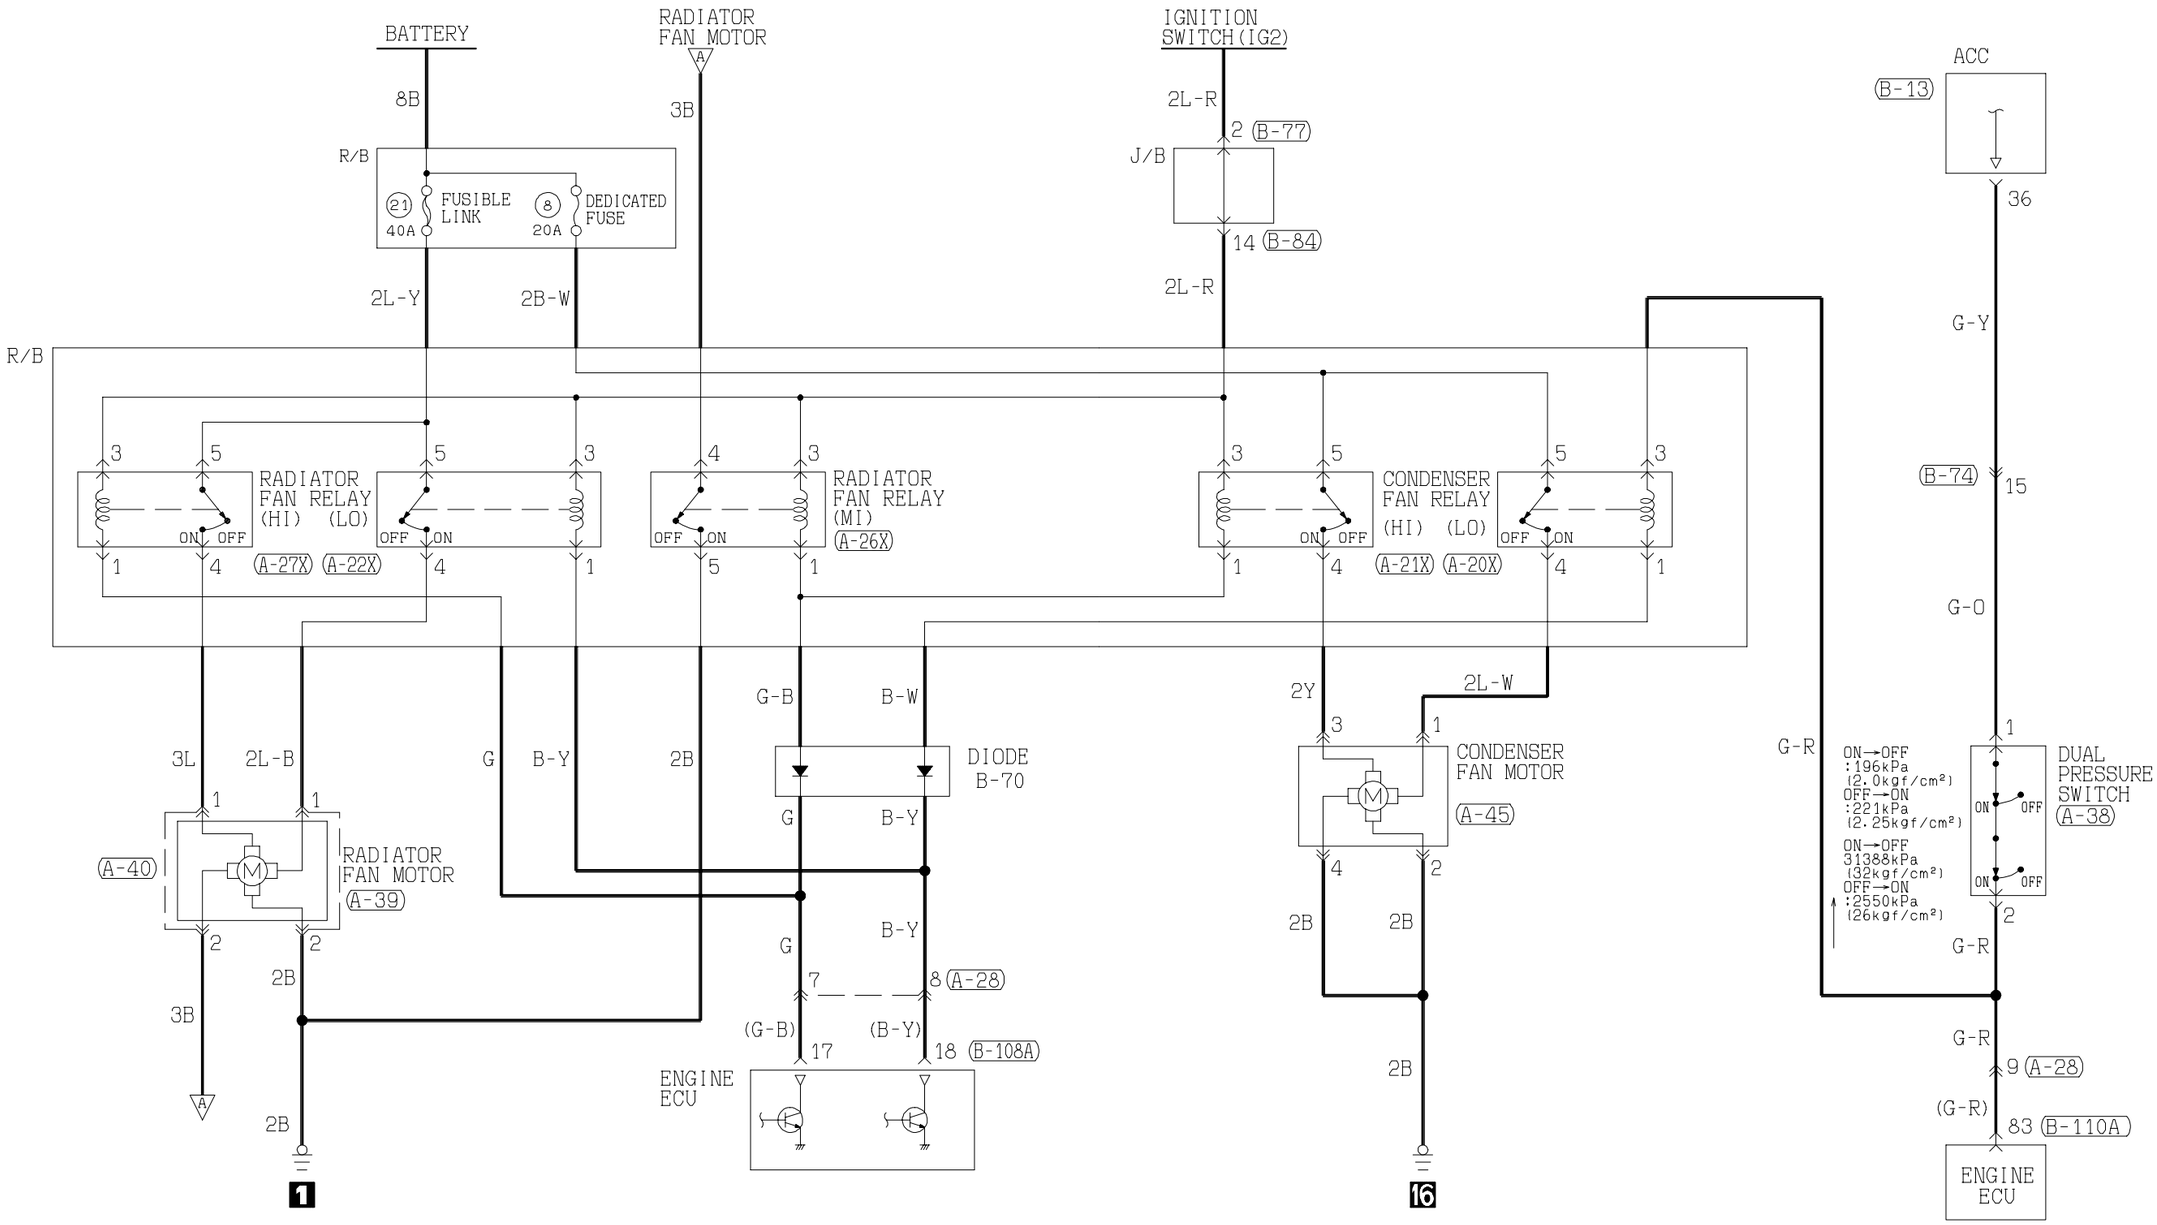



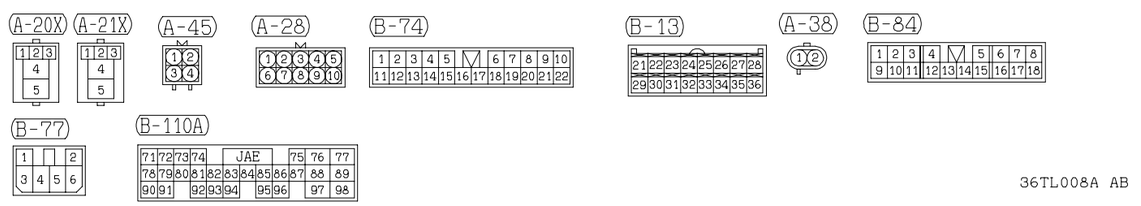

36TL008A AA

36TL008A AB

ELC 4-SPEED AUTOMATIC TRANSMISSION
ELC 5-SPEED AUTOMATIC TRANSMISSION

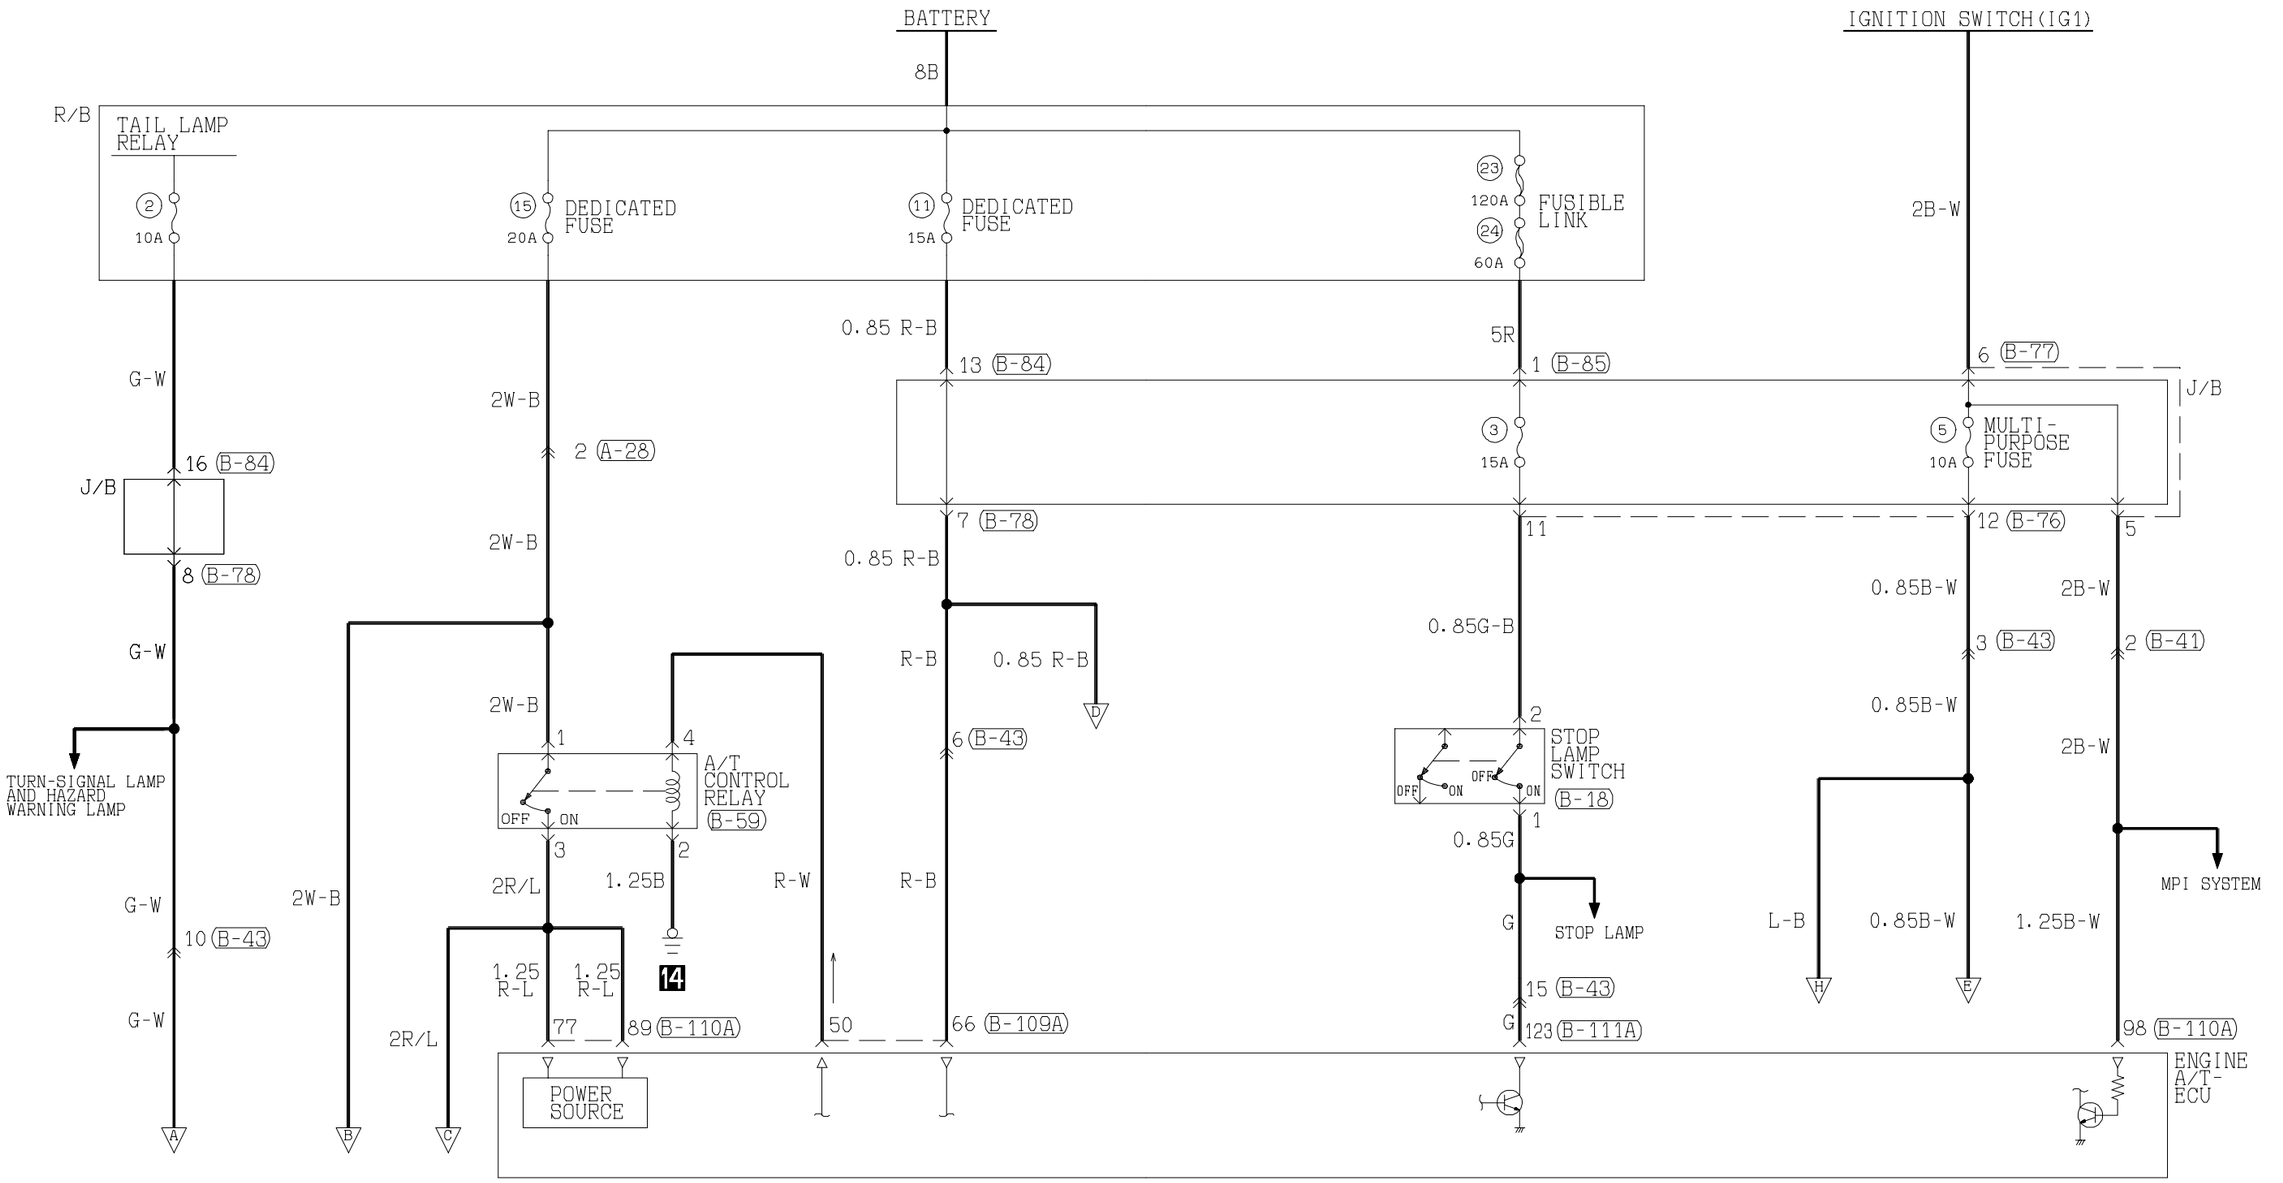

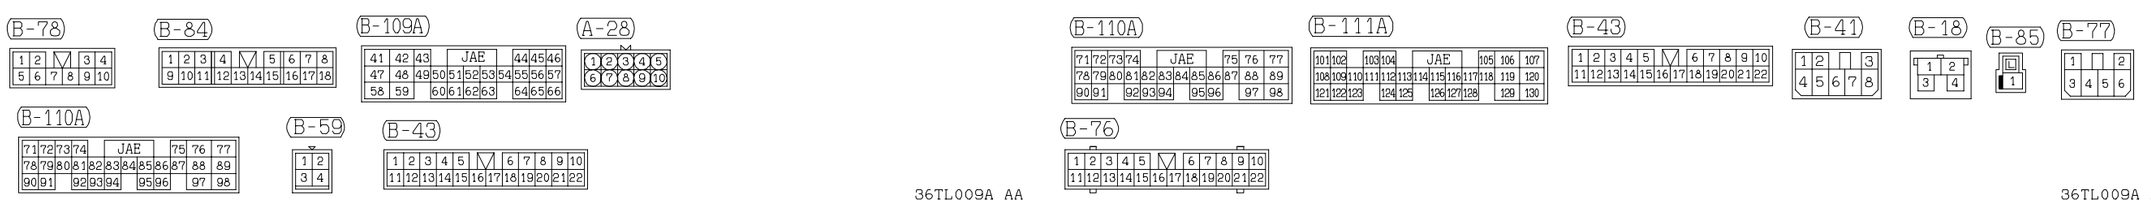

36TL009A AA

36TL009A AB

ELC 4-SPEED AUTOMATIC TRANSMISSION
ELC 5-SPEED AUTOMATIC TRANSMISSION
(CONTINUED)

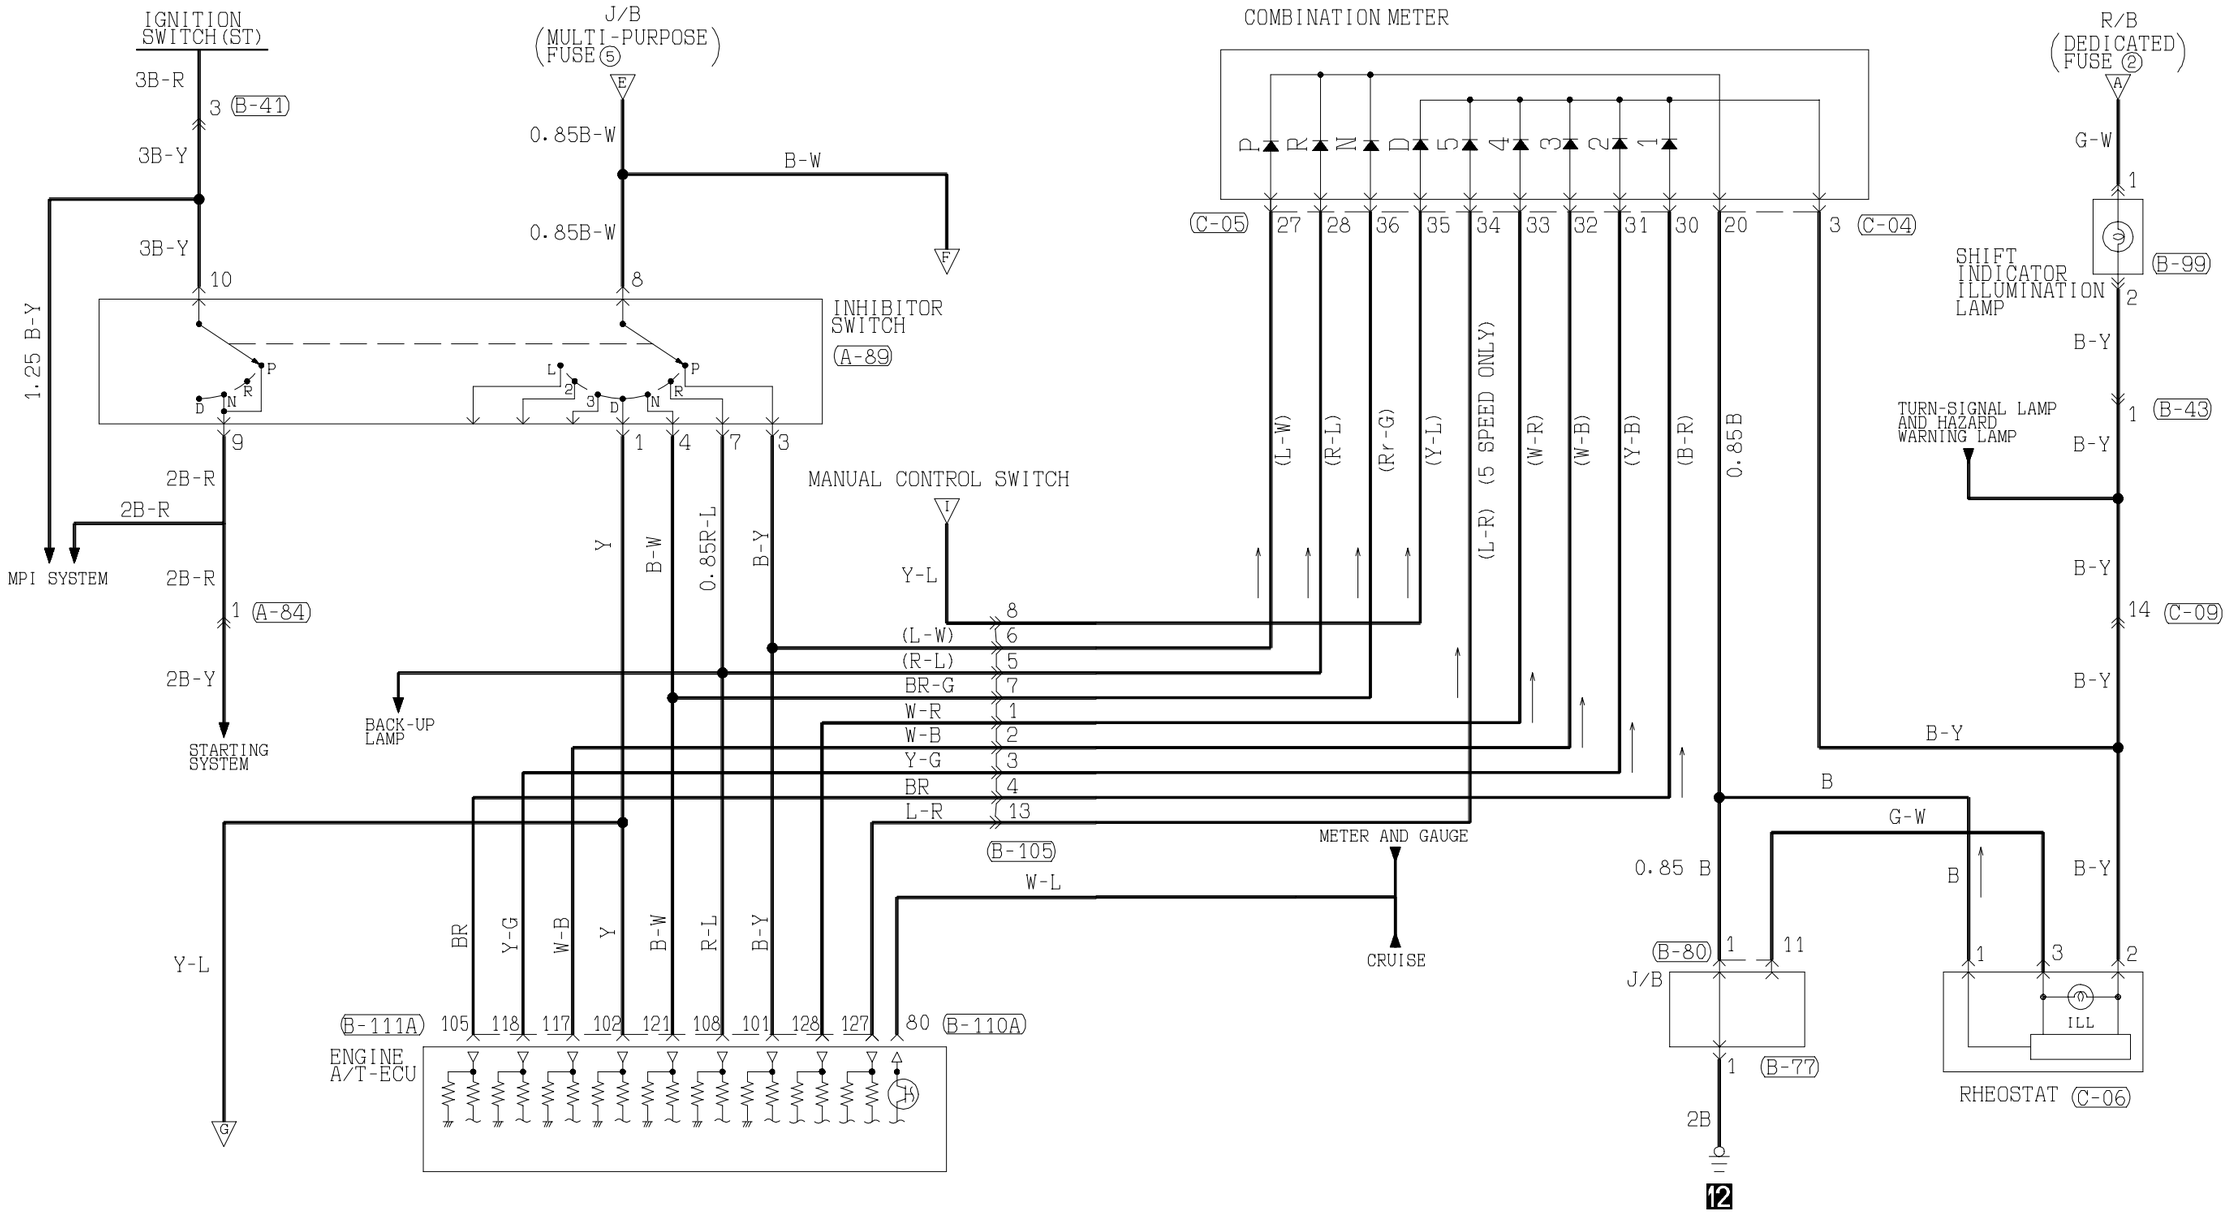

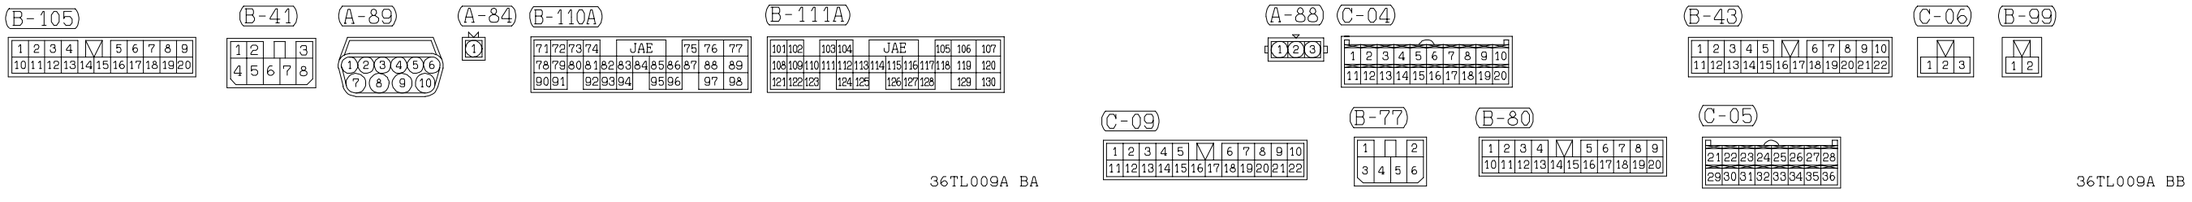

ELC 4-SPEED AUTOMATIC TRANSMISSION
ELC 5-SPEED AUTOMATIC TRANSMISSION
(CONTINUED)

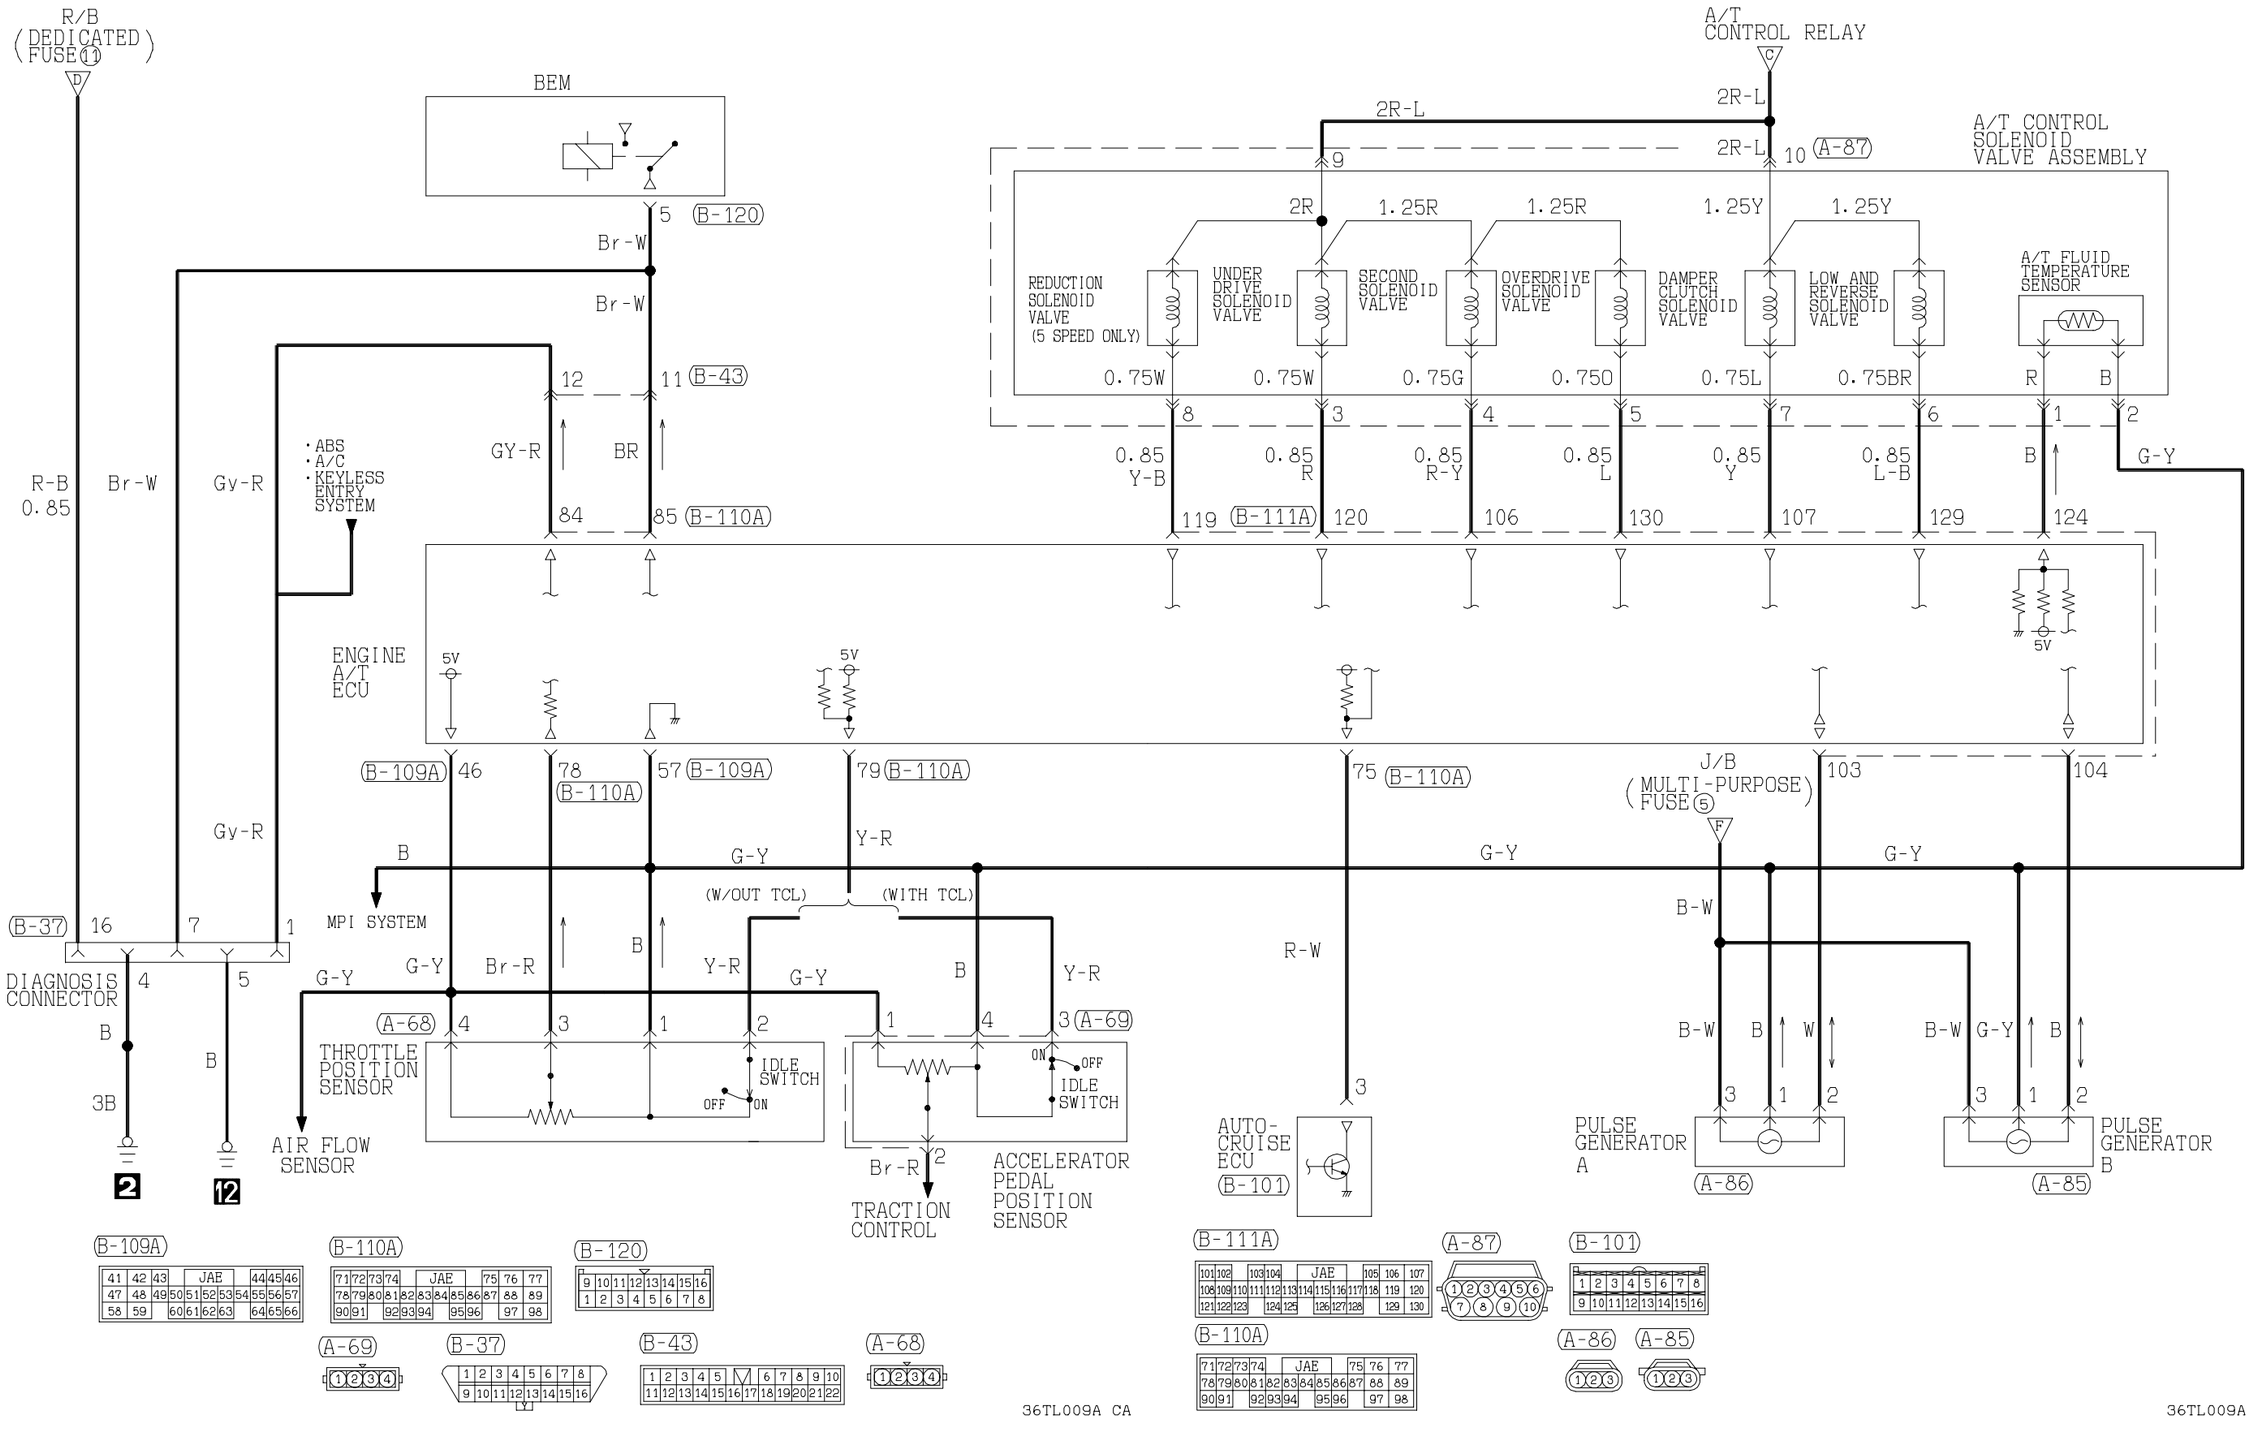

(B-109A)

41	42	43	JAE								44	45	46	
47	48	49	50	51	52	53	54	55	56	57				
58	59			60	61	62	63				64	65	66	

(B-110A)

71	72	73	74	JAE							75	76	77	
78	79	80	81	82	83	84	85	86	87	88	89			
90	91			92	93	94		95	96		97	98		

(B-120)

9	10	11	12	13	14	15	16	
1	2	3	4	5	6	7	8	

(A-69)

1	2	3	4

(B-37)

1	2	3	4	5	6	7	8	
9	10	11	12	13	14	15	16	

(B-43)

1	2	3	4	5	M	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20	21	22

(A-68)

1	2	3	4

36TL009A CA

(B-111A)

101	102		103	104	JAE				105	106	107			
108	109	110	111	112	113	114	115	116	117	118	119	120		
121	122	123		124	125		126	127	128		129	130		

(A-87)

1	2	3	4	5	6	
7	8	9	10			

(B-101)

1	2	3	4	5	6	7	8	
9	10	11	12	13	14	15	16	

(B-110A)

71	72	73	74	JAE							75	76	77	
78	79	80	81	82	83	84	85	86	87	88	89			
90	91			92	93	94		95	96		97	98		

(A-86)

1	2	3

(A-85)

1	2	3

36TL009A CB

ELC 4-SPEED AUTOMATIC TRANSMISSION
ELC 5-SPEED AUTOMATIC TRANSMISSION
(CONTINUED)

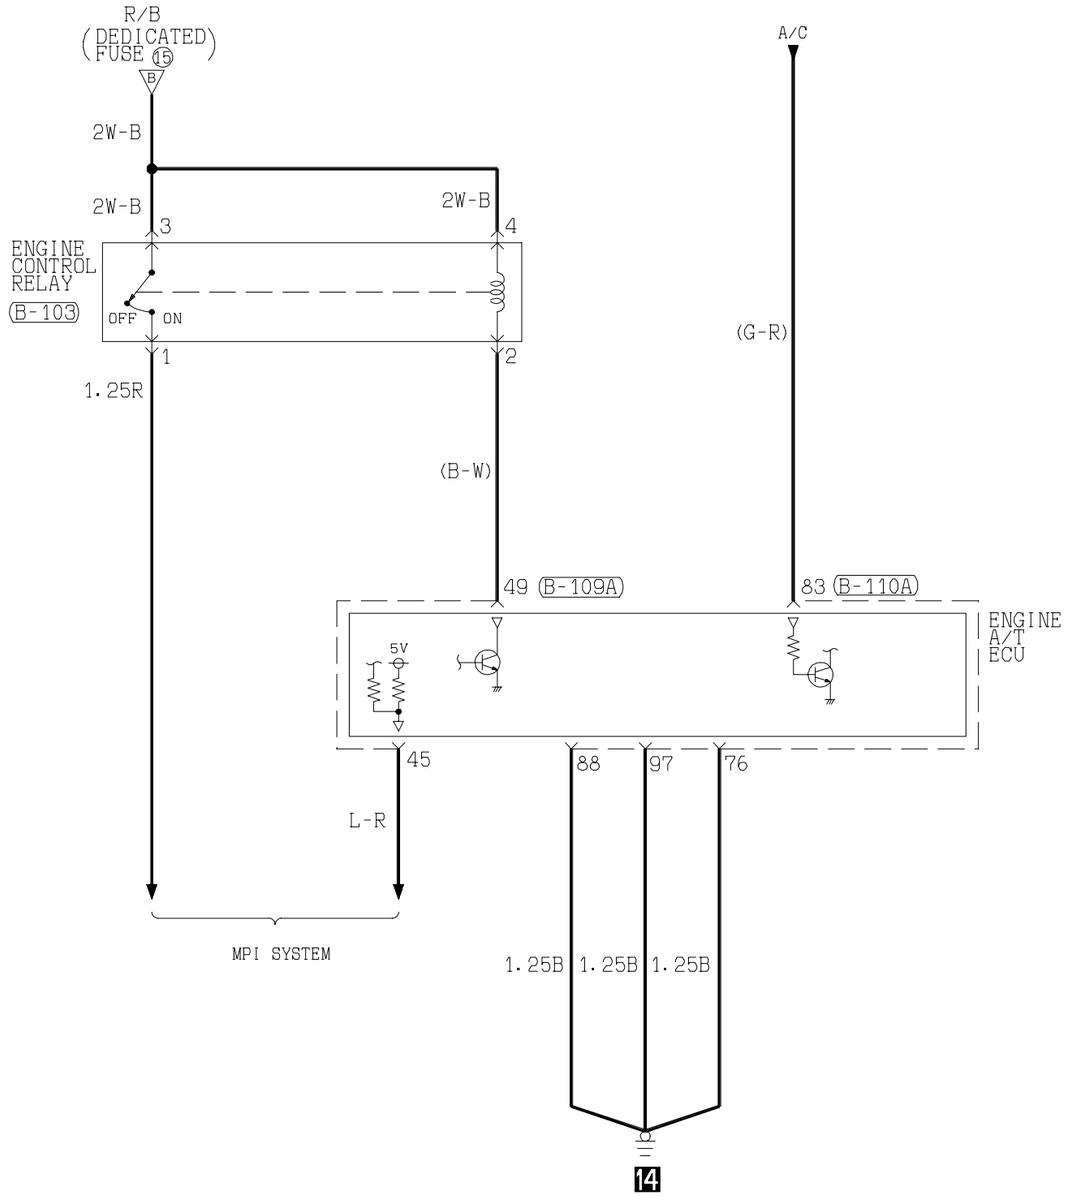

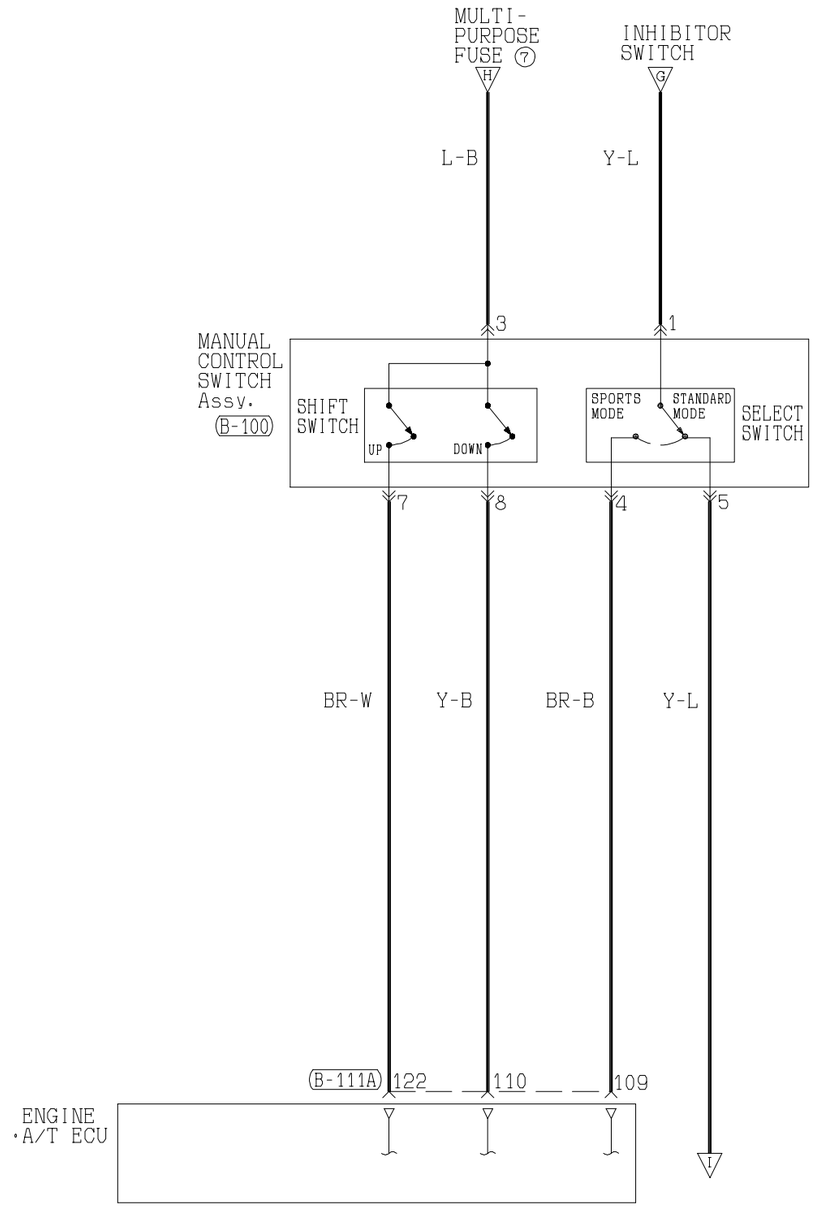

B-109A

41	42	43	JAE							44	45	46		
47	48	49	50	51	52	53	54	55	56	57				
58	59			60	61	62	63			64	65	66		

B-110A

71	72	73	74	JAE						75	76	77		
78	79	80	81	82	83	84	85	86	87	88	89			
90	91			92	93	94		95	96		97	98		

B-103

1	2
3	4

B-111A

101	102		103	104	JAE				105	106	107			
108	109	110	111	112	113	114	115	116	117	118	119	120		
121	122	123		124	125		126	127	128		129	130		

B-100

1		2	3	
4	5	6	7	8

HEADLAMP

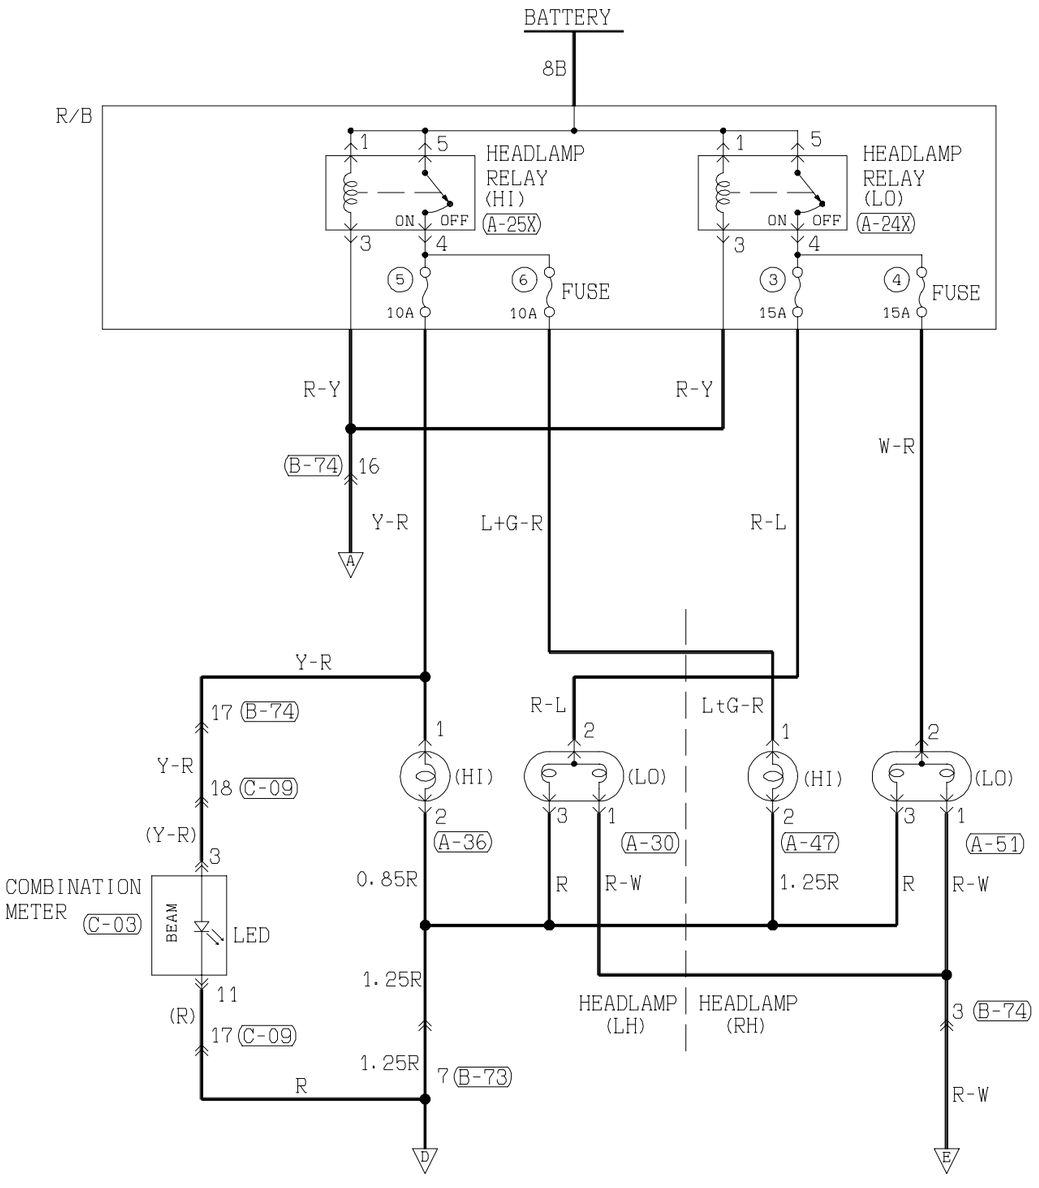

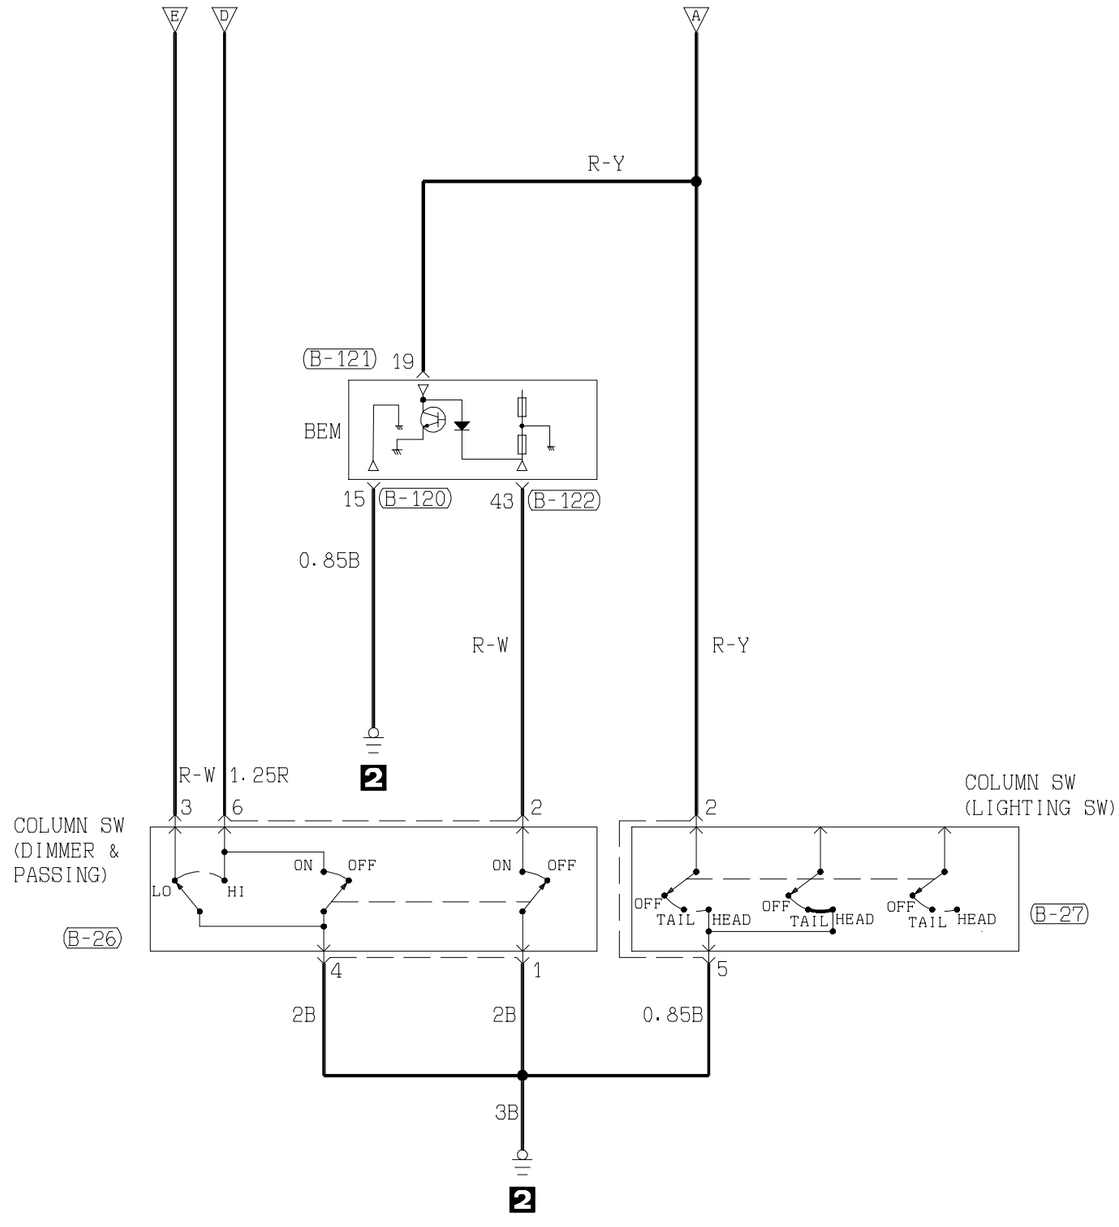

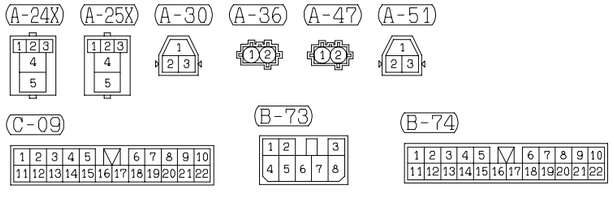





36TL010A AA

36TL010A AB

TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP <SEDAN>

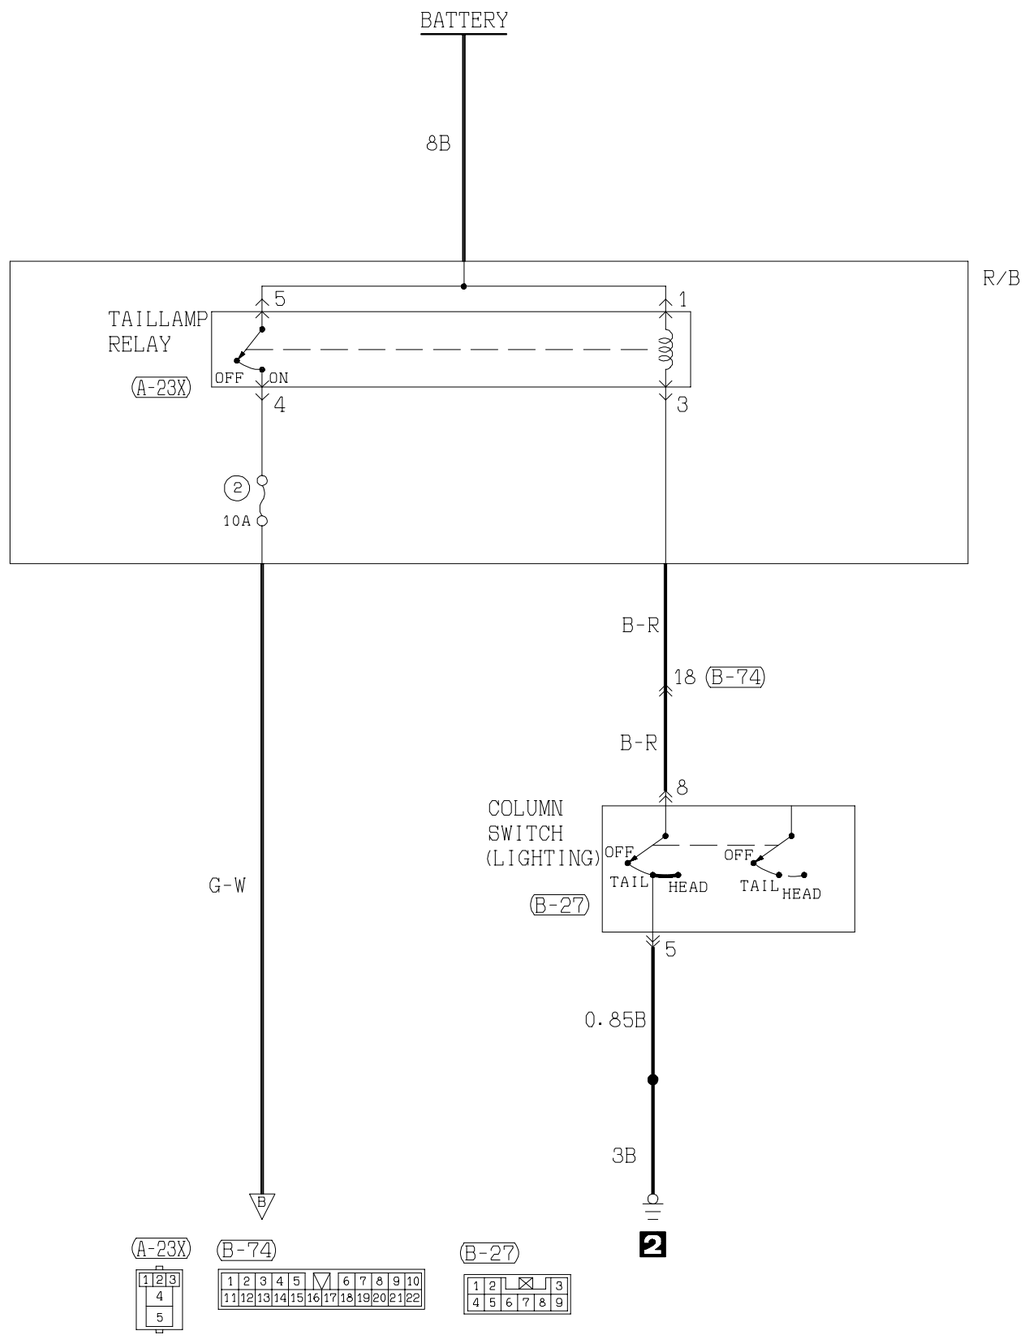

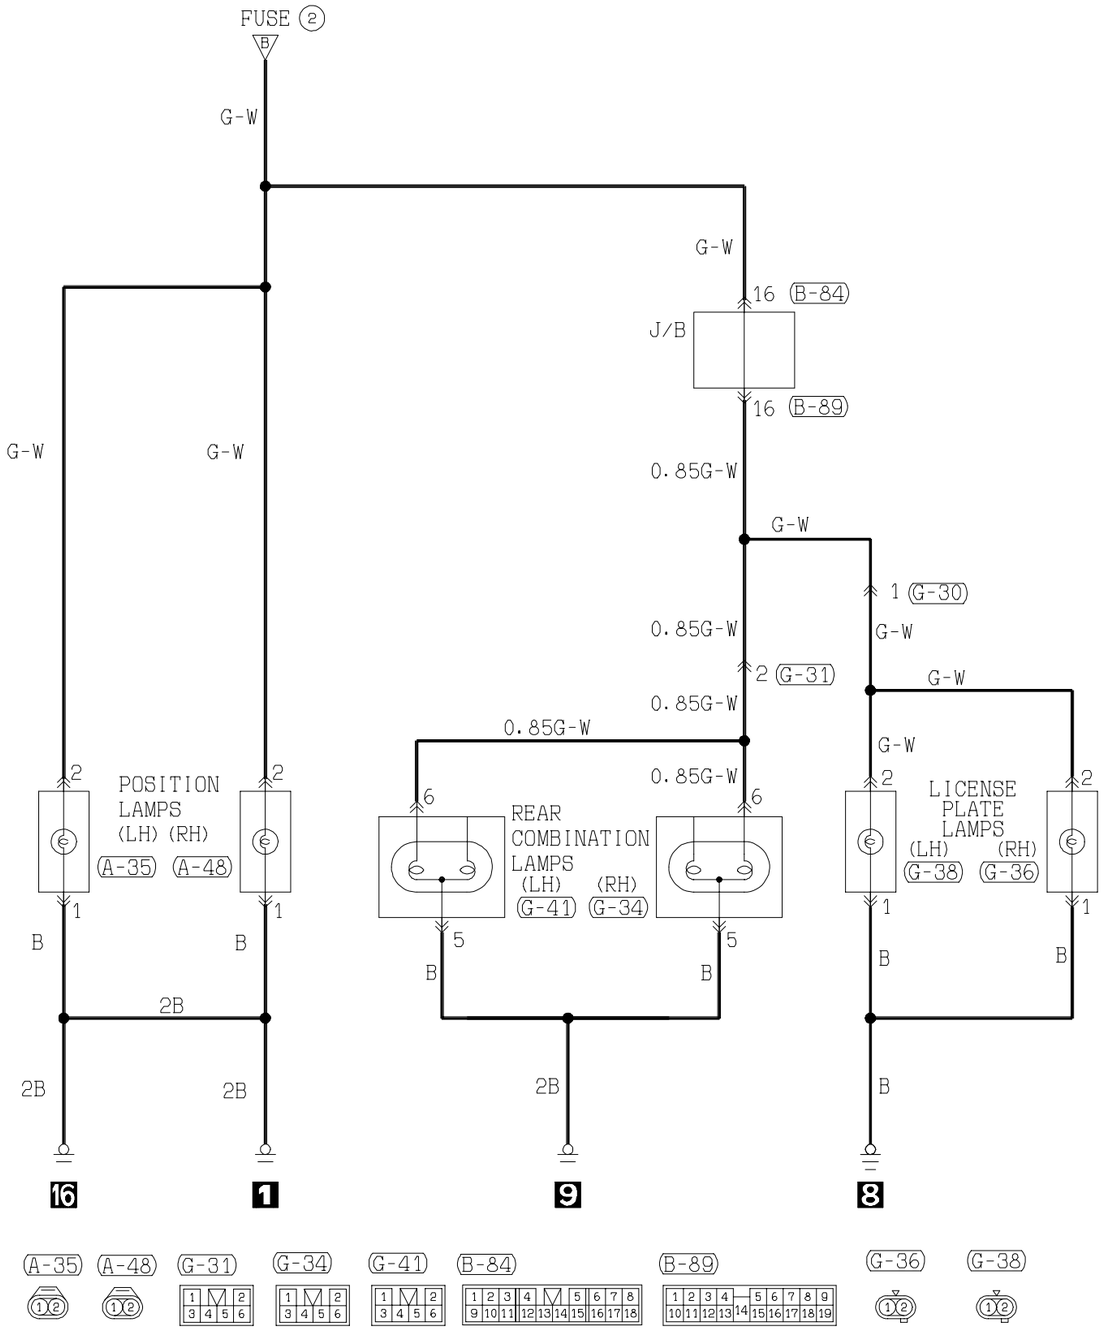

TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP <SEDAN>

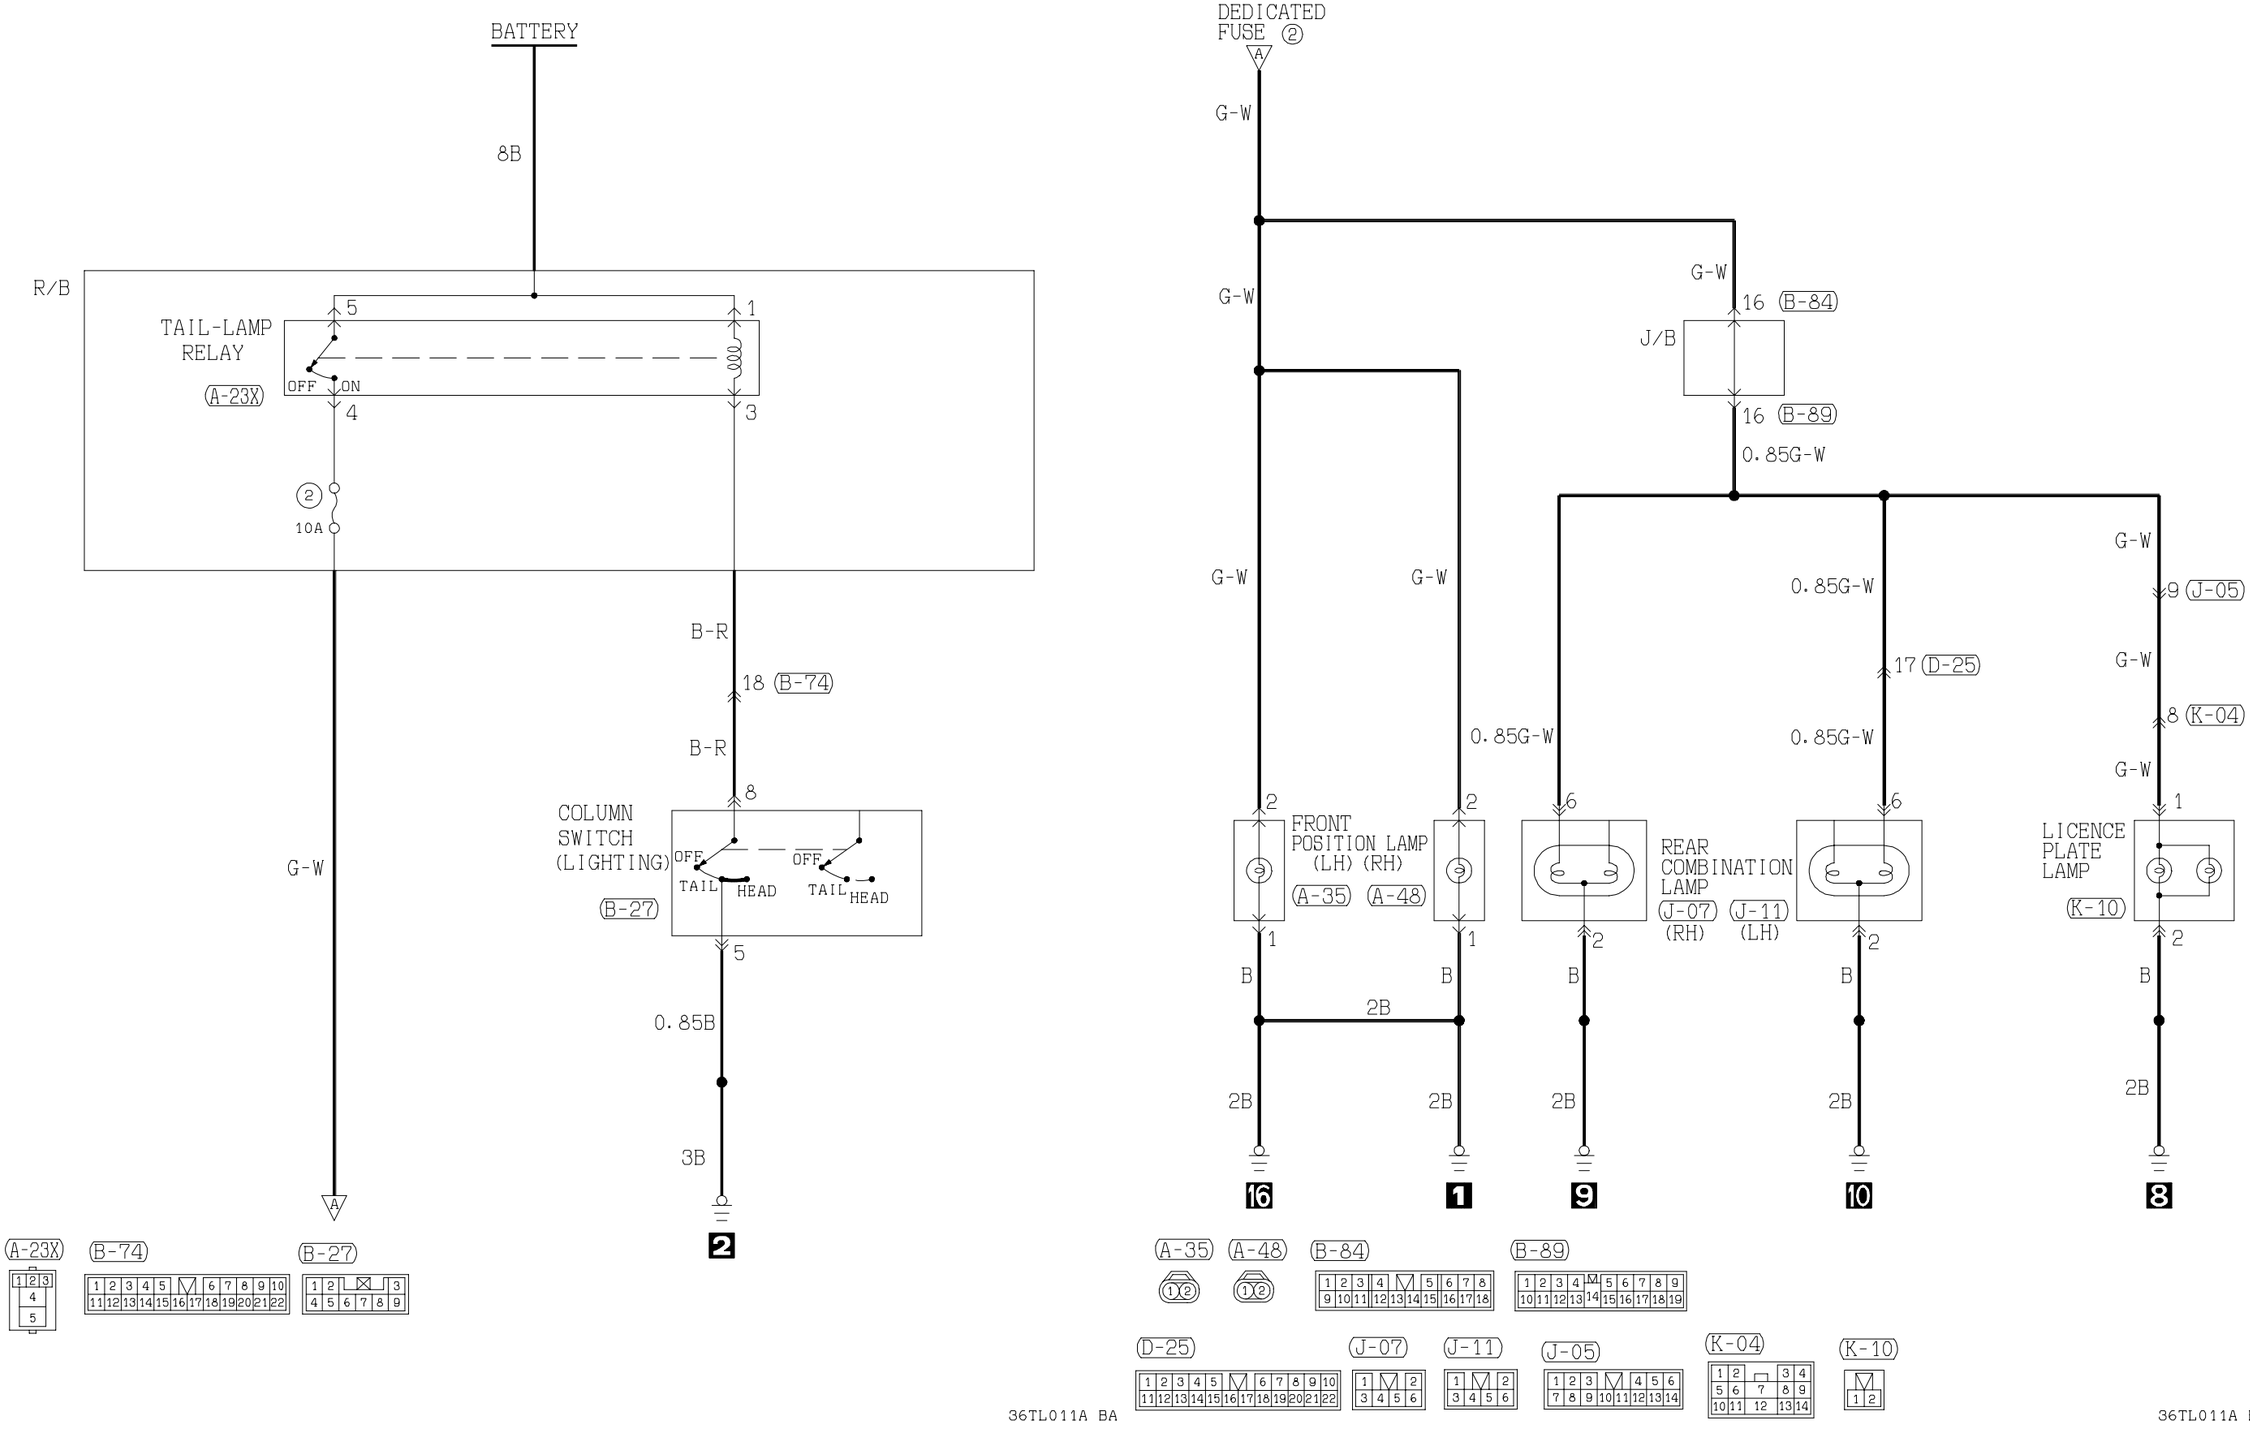

36TL011A BA

36TL011A BB

Main Index
54 Index
54C Index
A
B
C
D
E
F
G
H
J
K

TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP <WAGON>

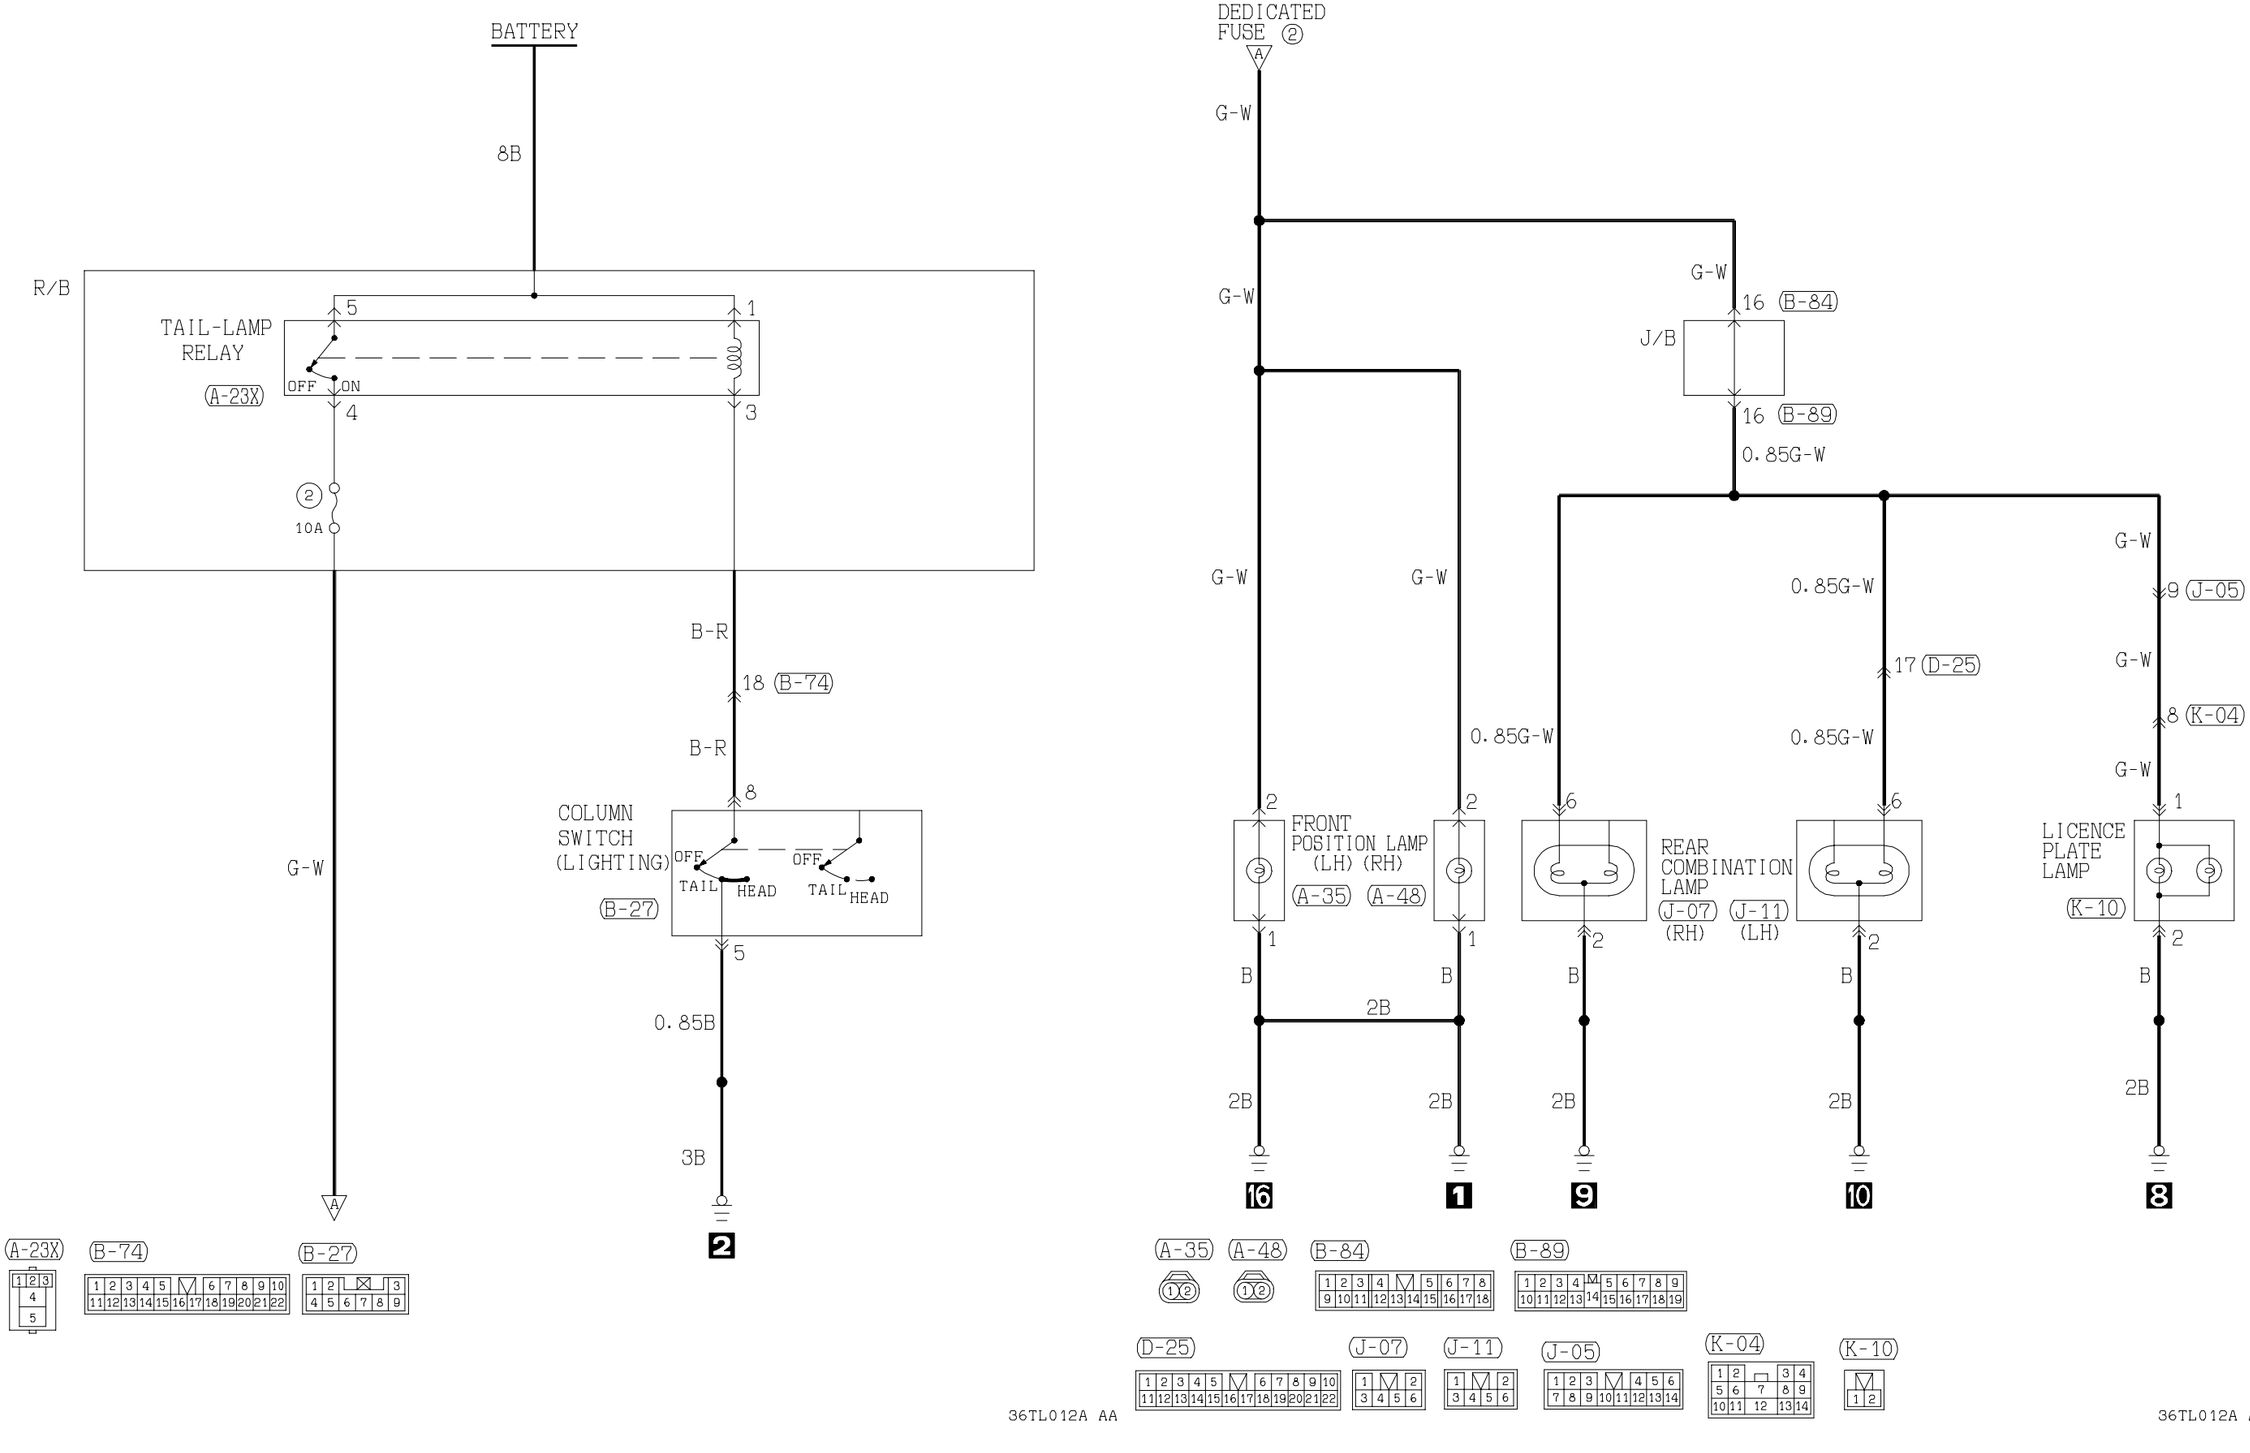

36TL012A AA

36TL012A AB

FOG LAMP <VERADA, VR-X AND VR>

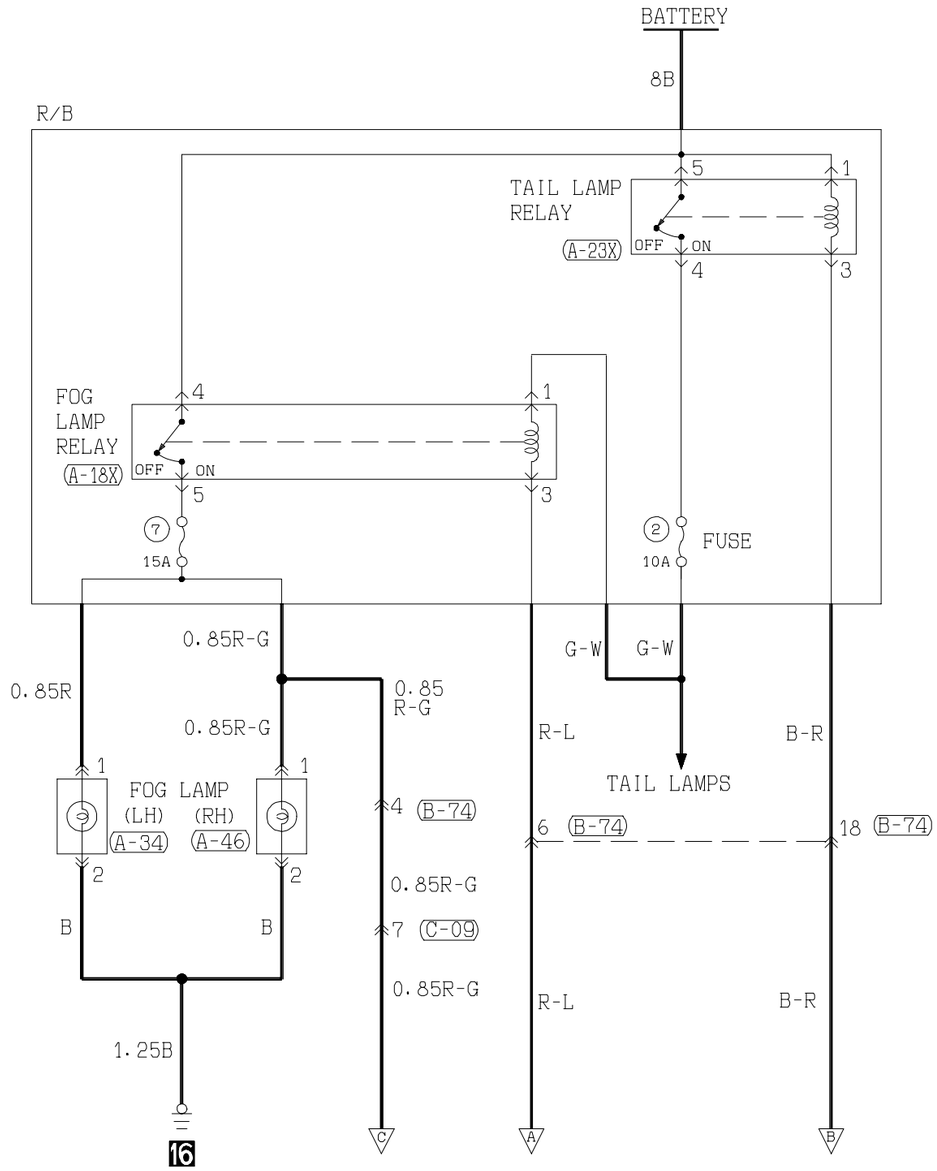

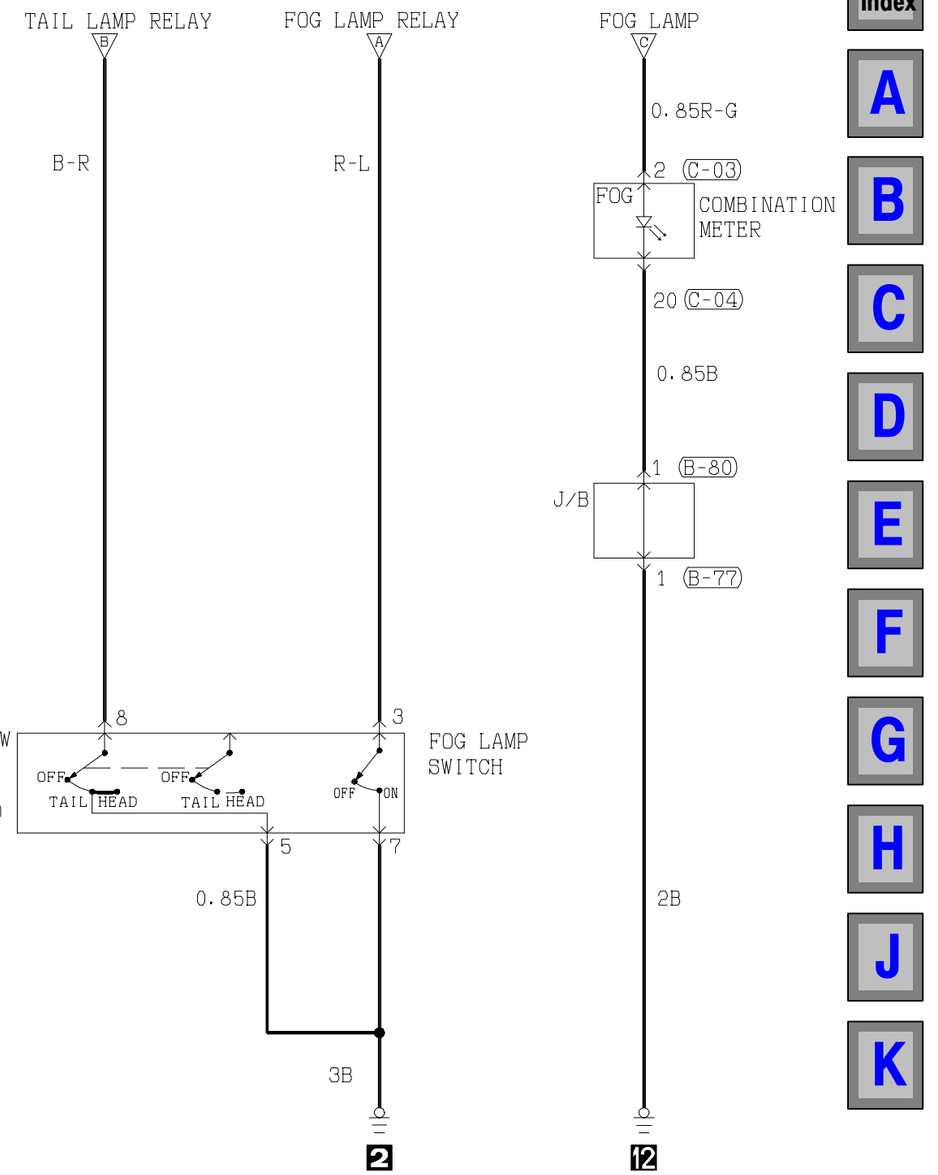

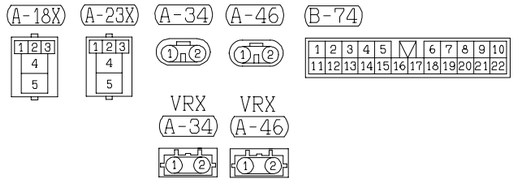



36TL013A AA

36TL013A AB

ROOM LAMP, PERSONAL LAMP AND FOOT LAMP <SEDAN>

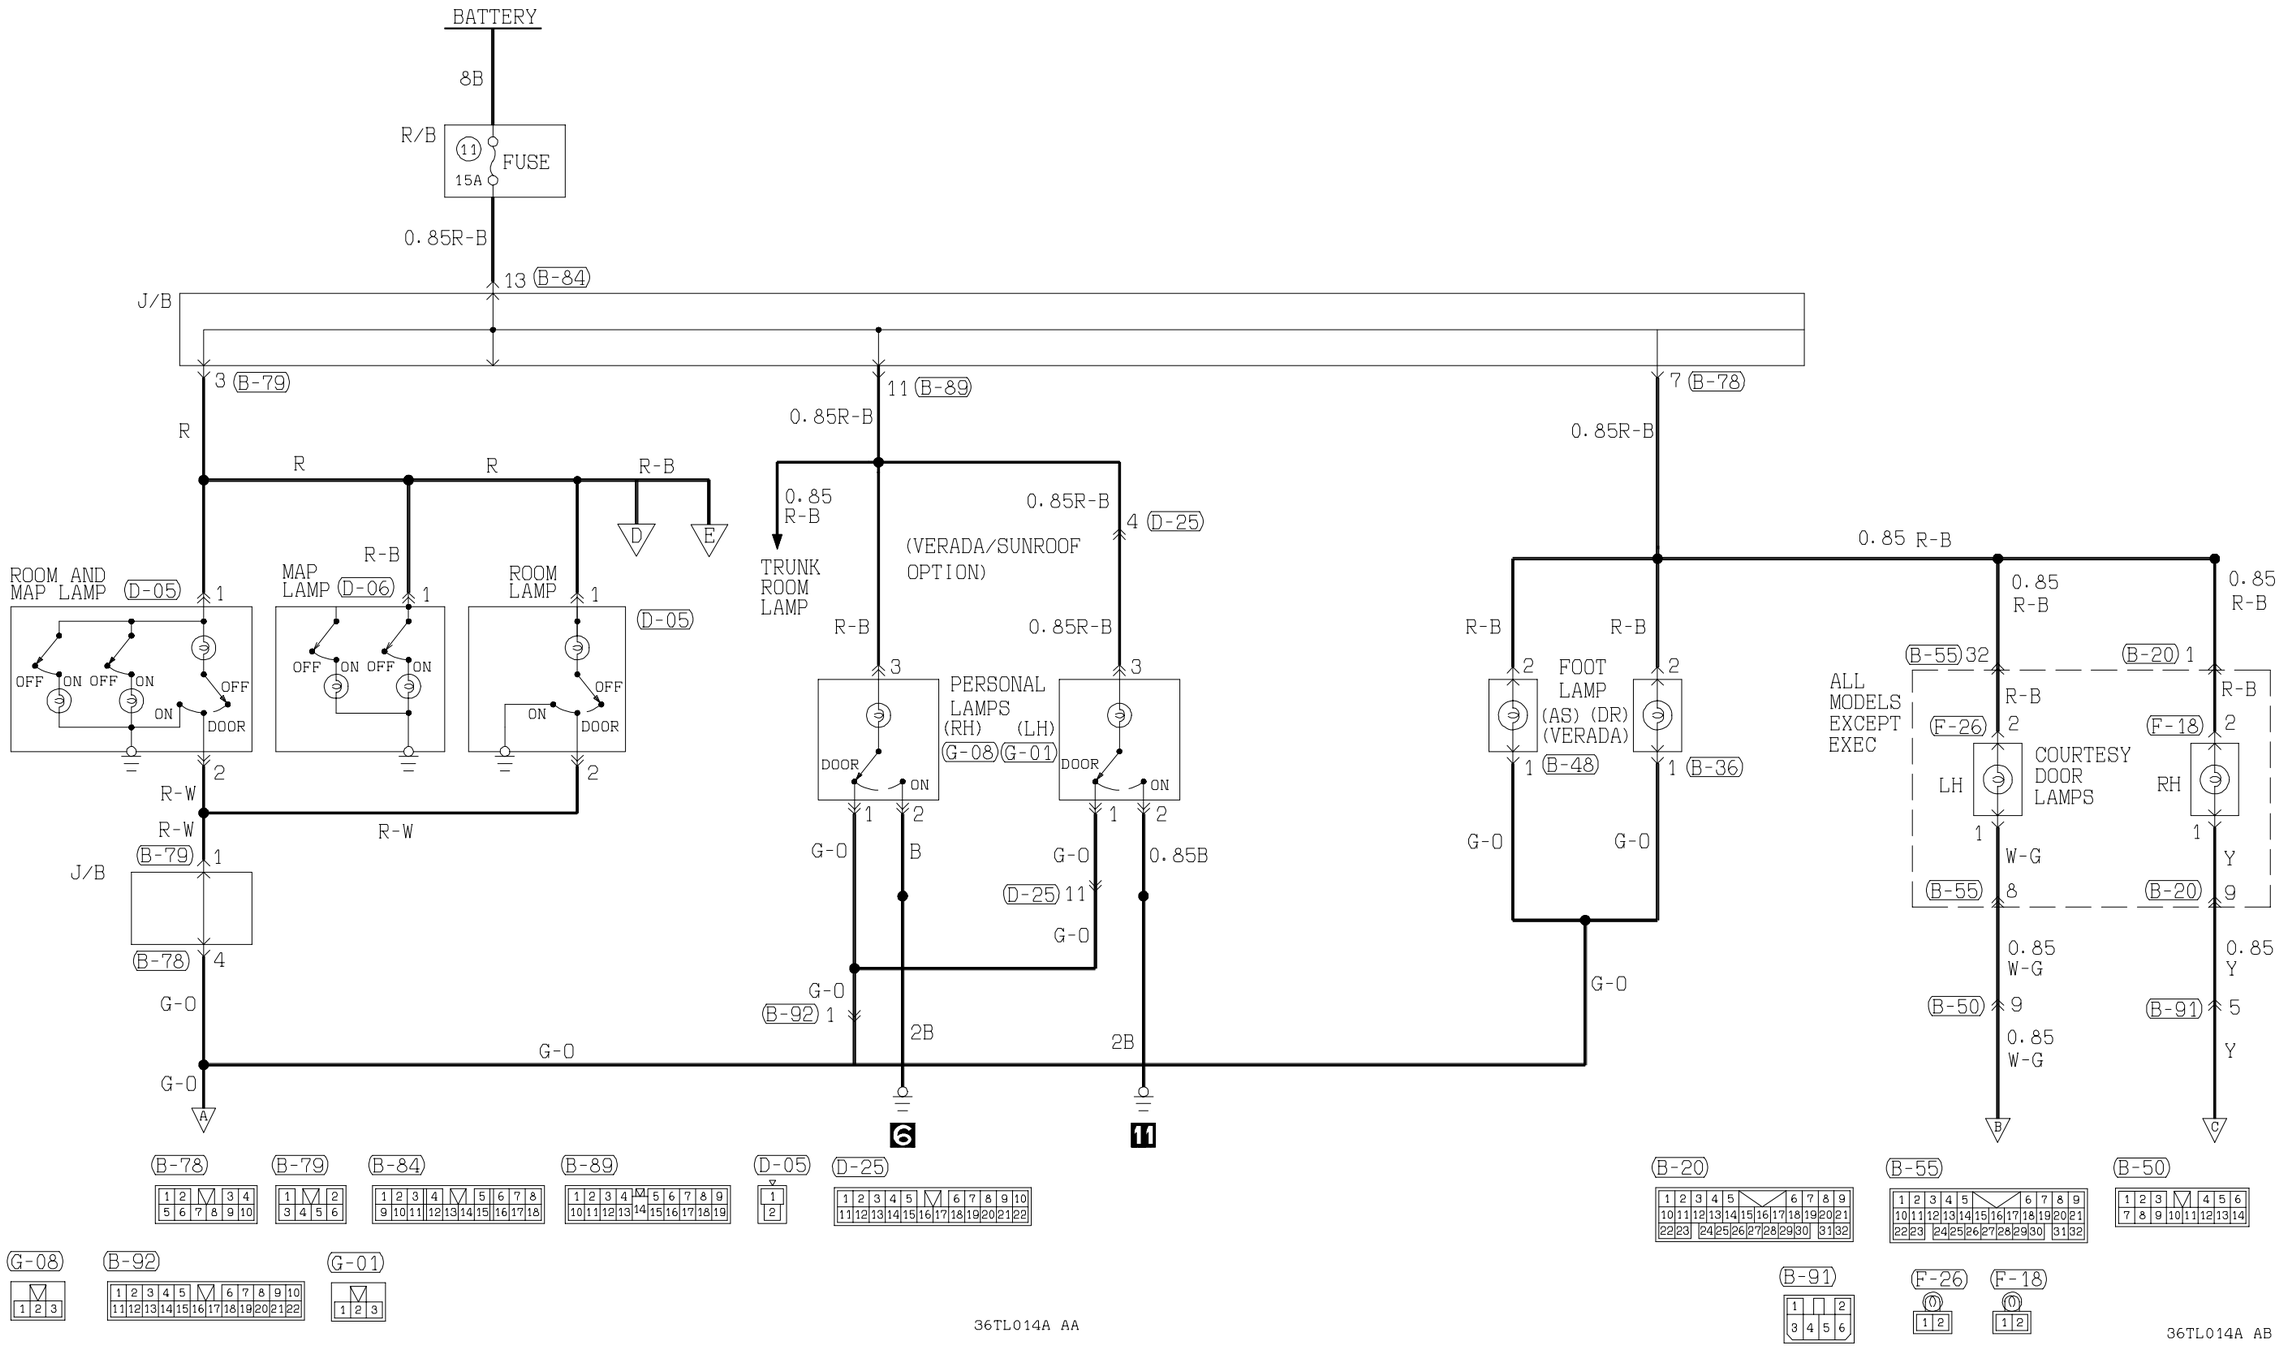

B-78
B-79
B-84
B-89
D-05
D-25
B-20
B-55
B-50
G-08
B-92
G-01
B-91
F-26
F-18

36TL014A AA

36TL014A AB

ROOM LAMP, PERSONAL LAMP AND FOOT LAMP <WAGON>

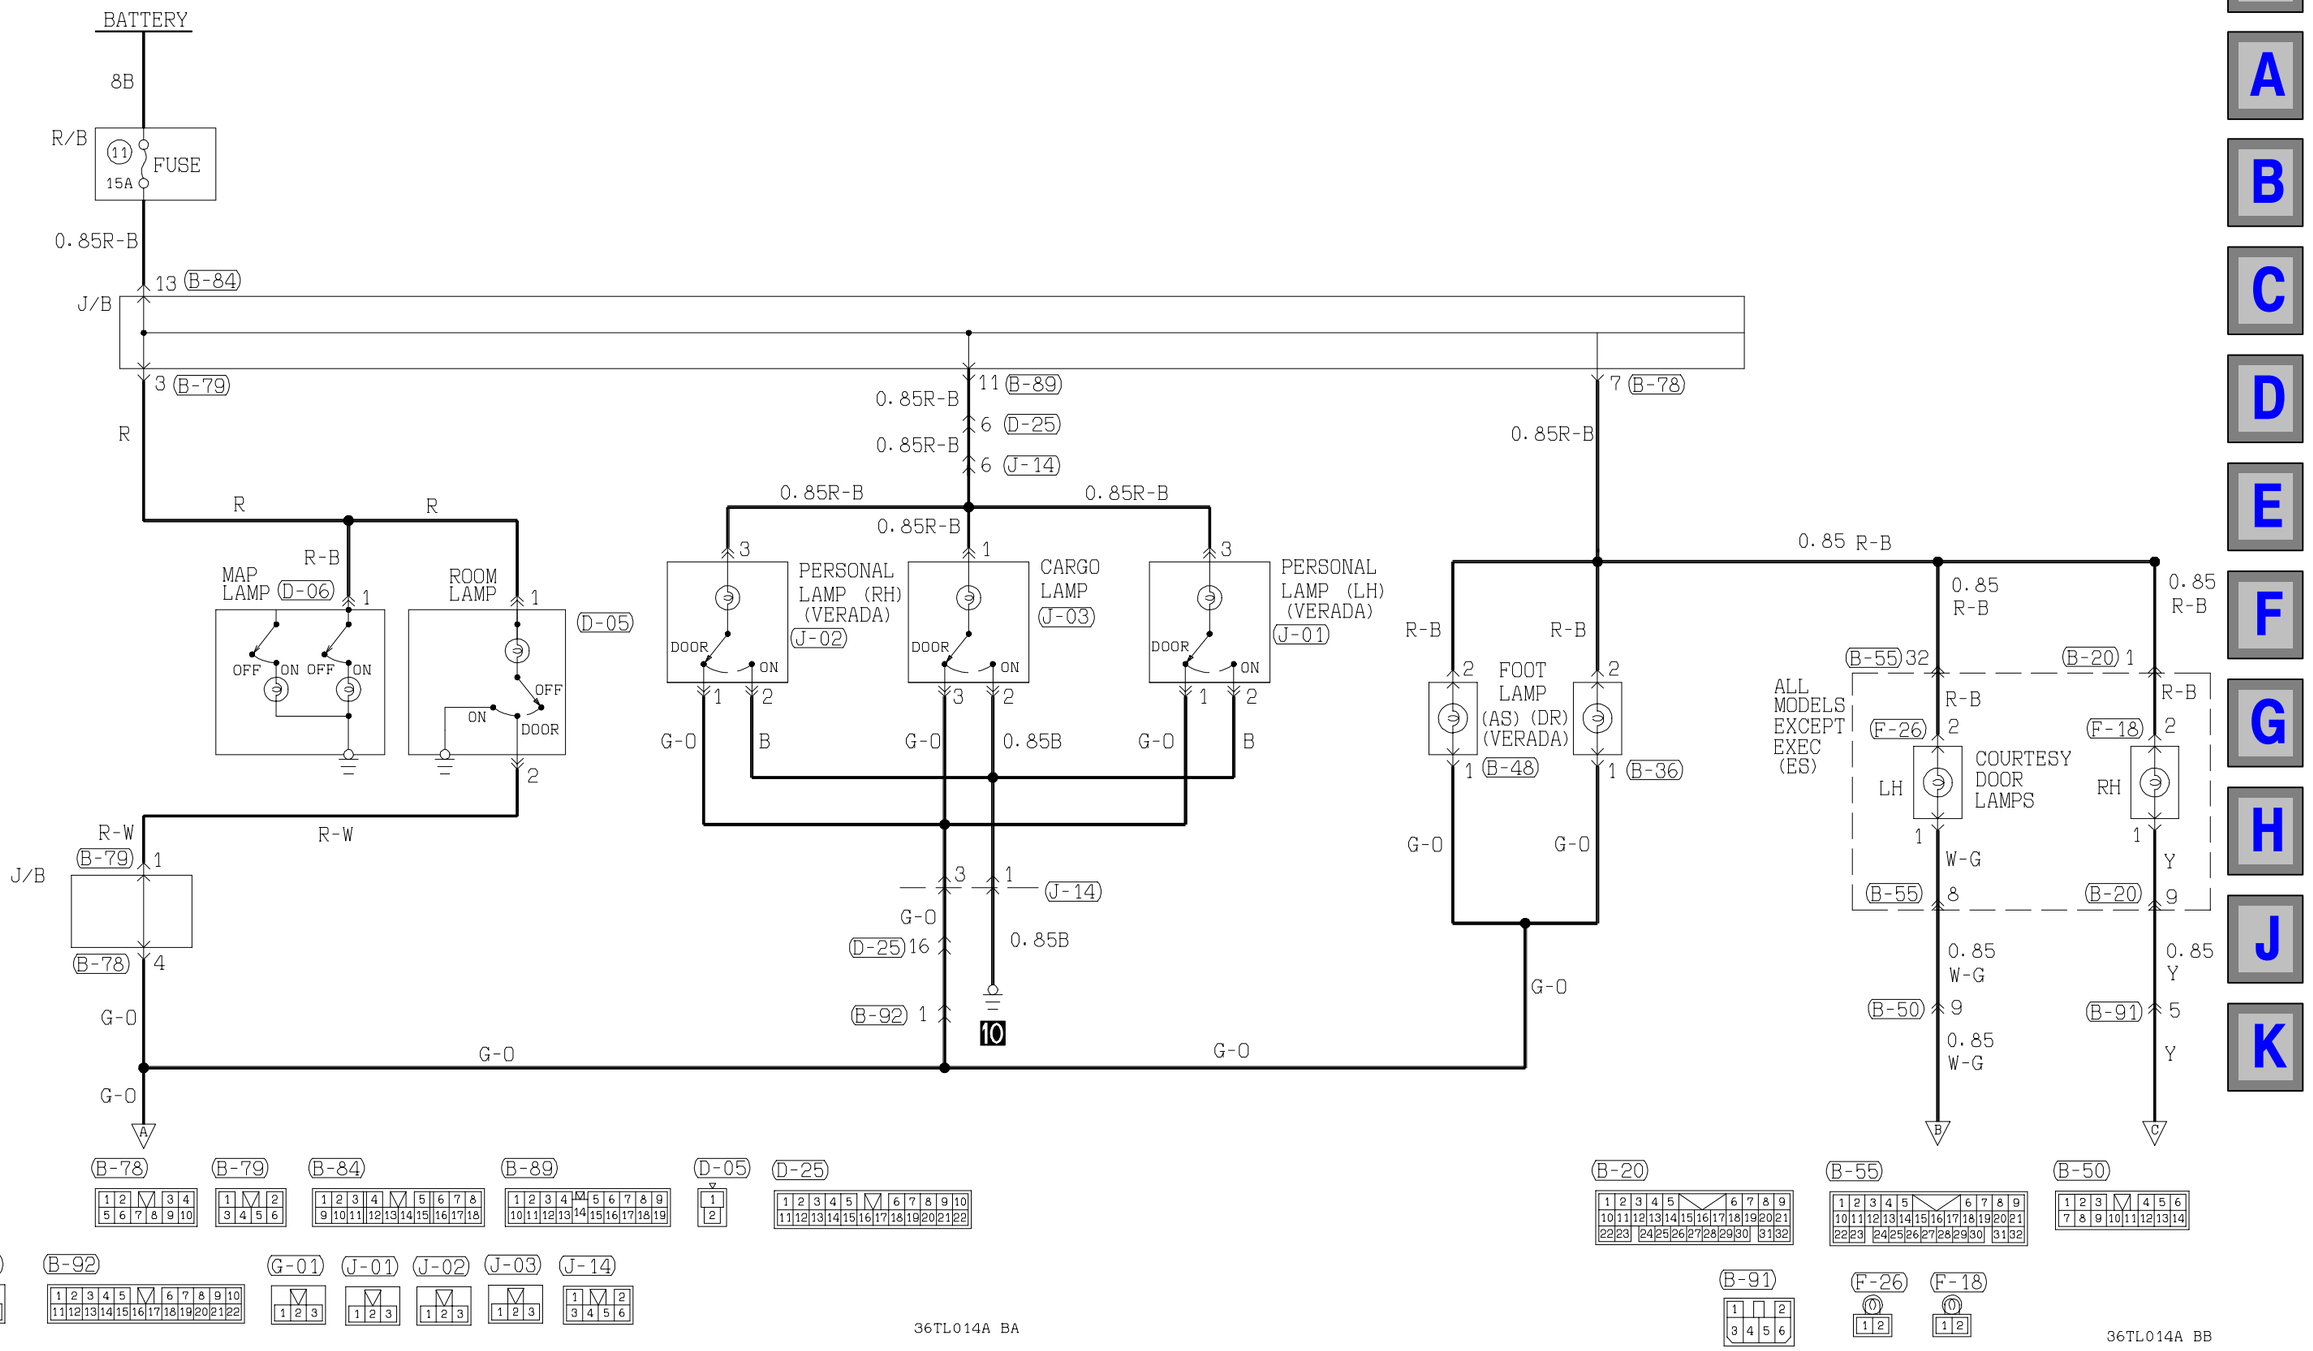

INTERIOR LAMPS – DOOR/GATE SWITCHES SEDAN/WAGON>

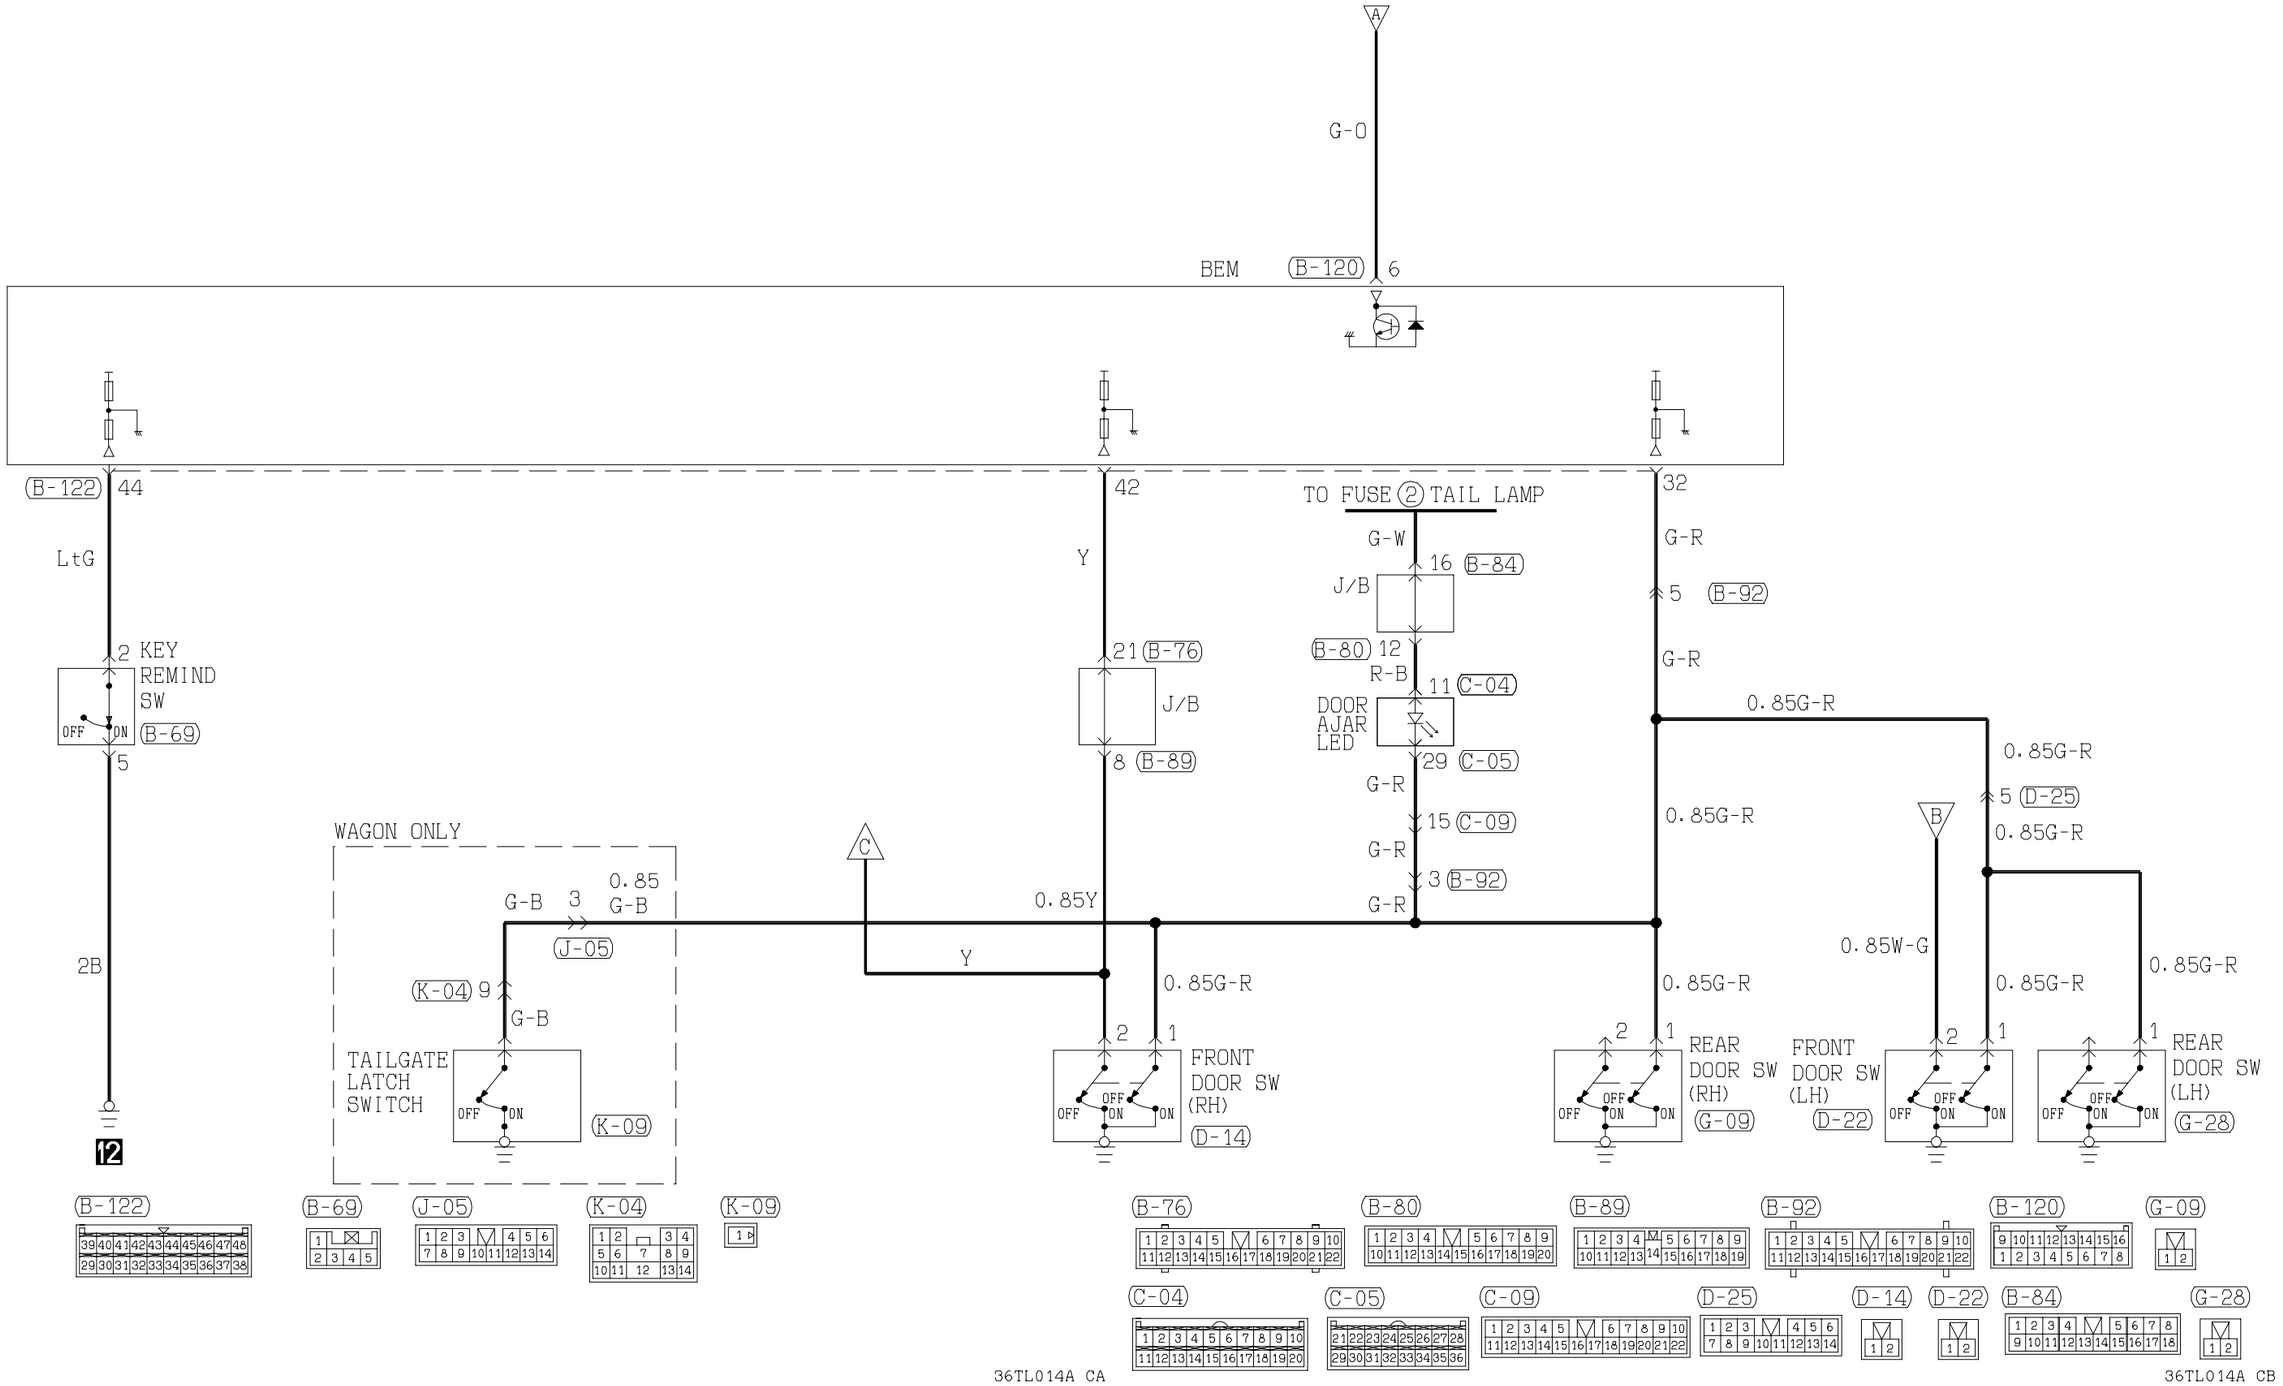

VANITY MIRROR LAMPS

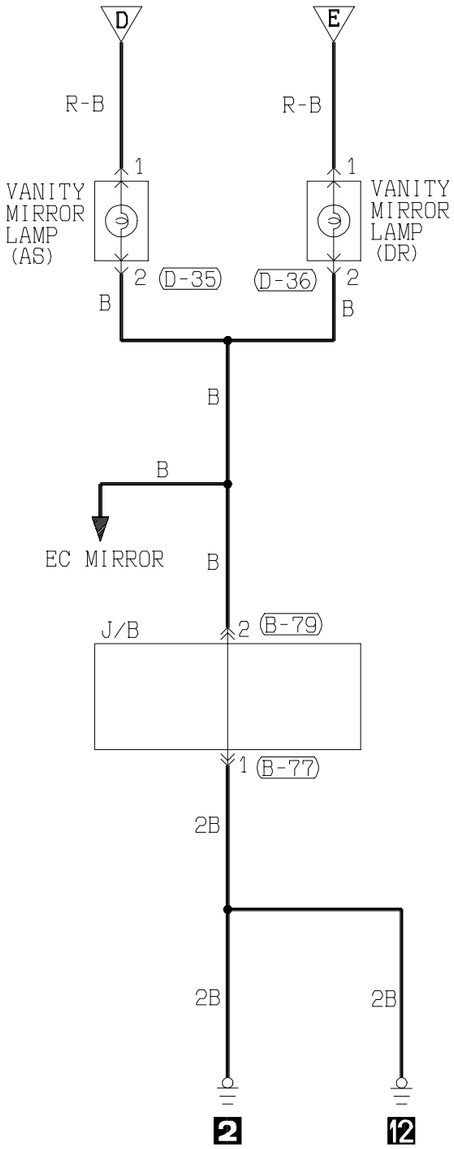



GLOVE COMPARTMENT LAMP AND TRUNK LAMP

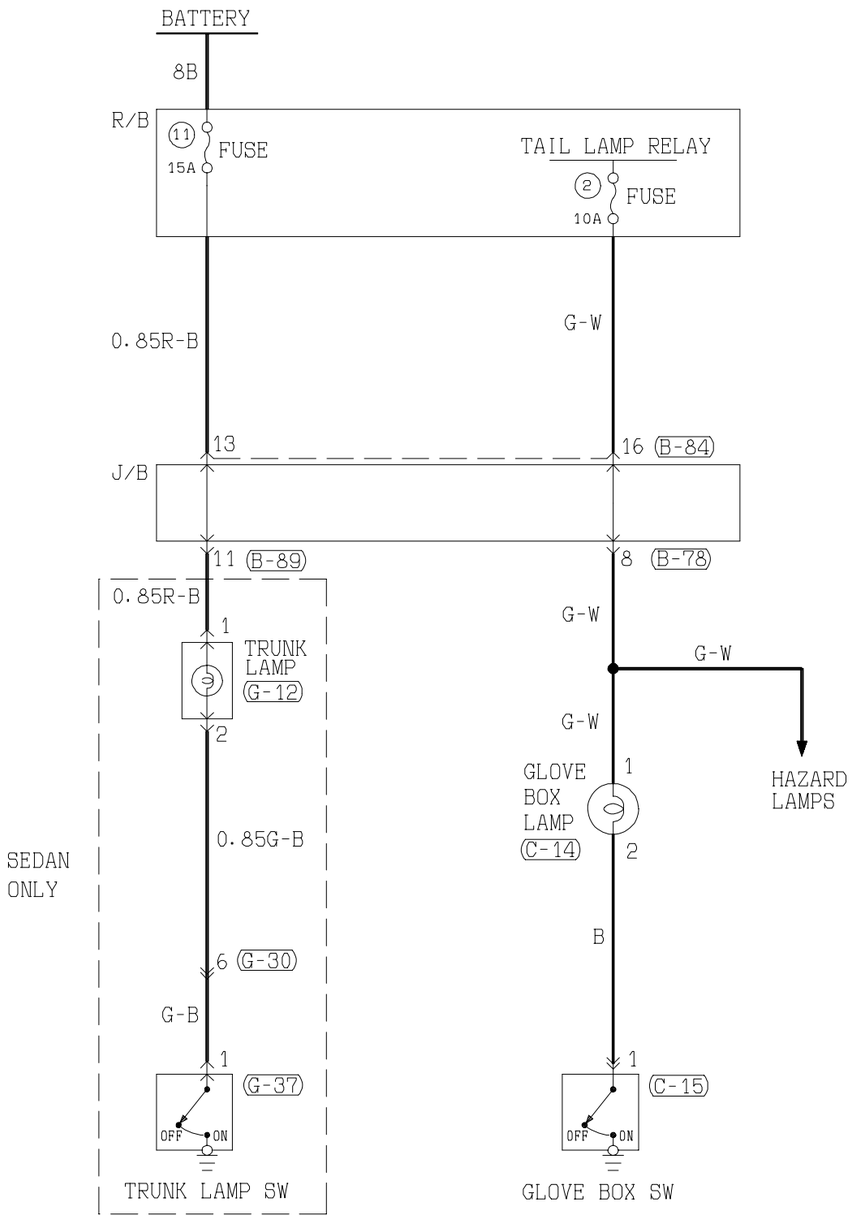



36TL015A AA

EC MIRROR

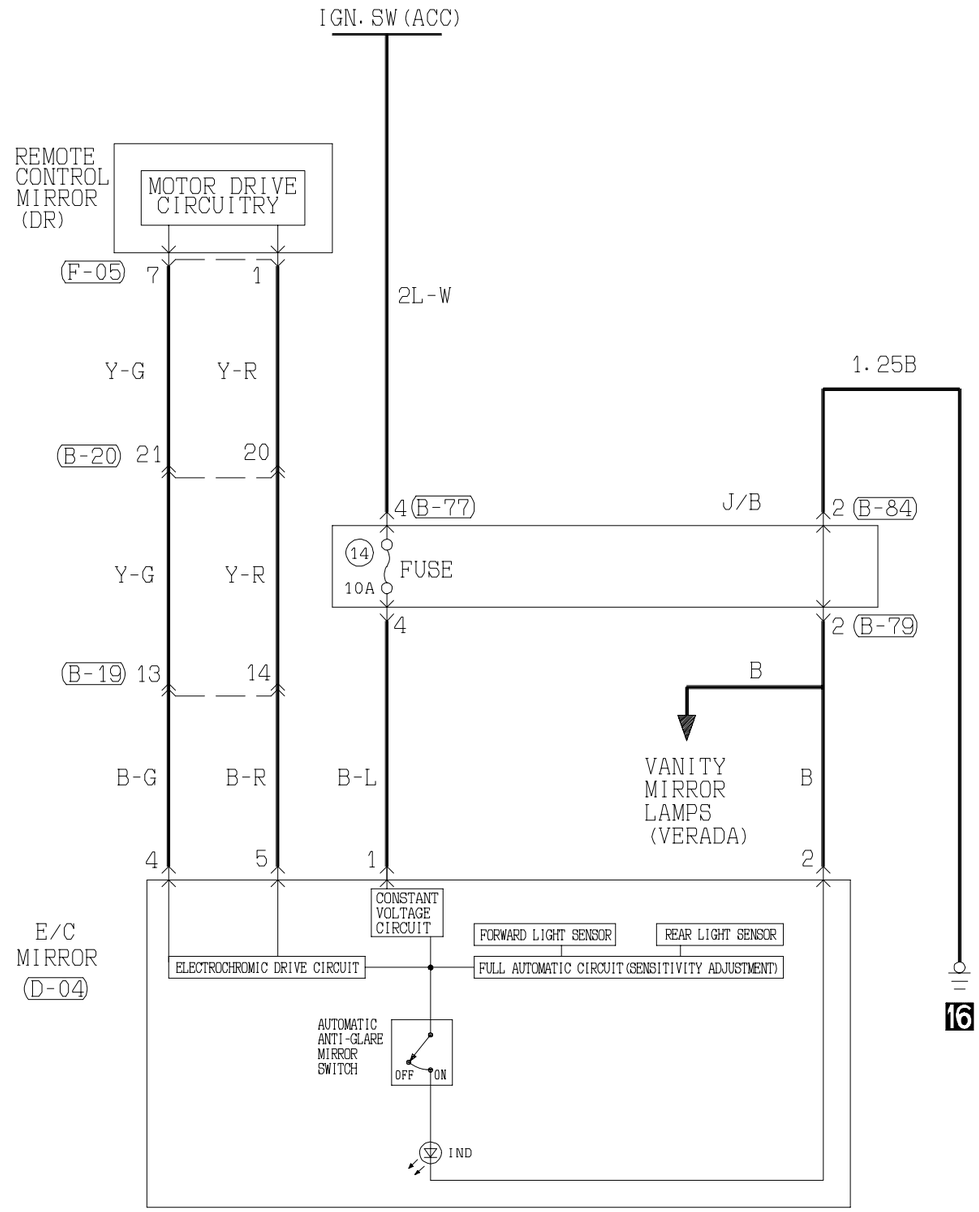



36TL016A AA

IGNITION KEY CYLINDER LAMP

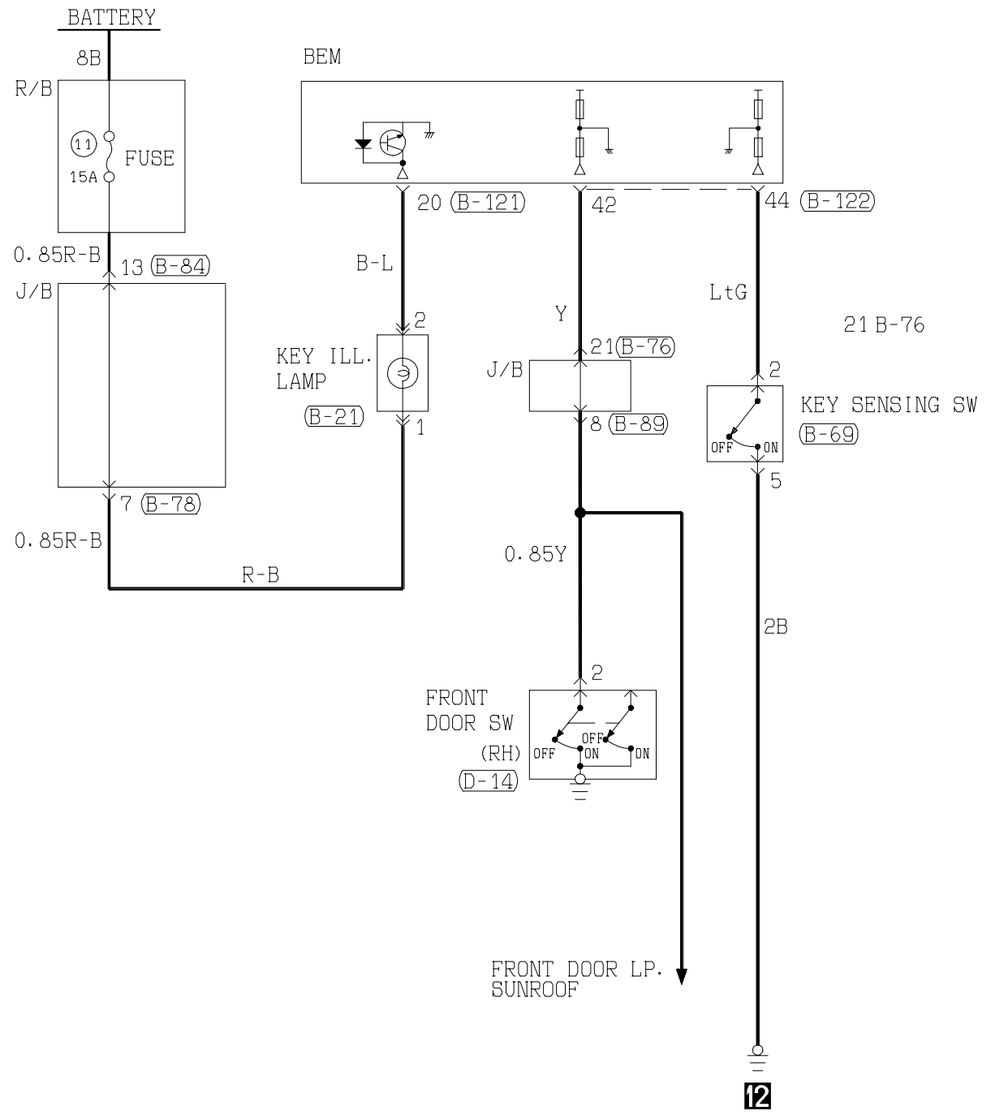

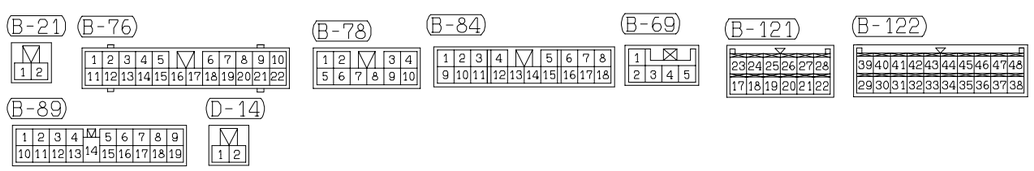

36TL017A AA

STOP LAMP <SEDAN>

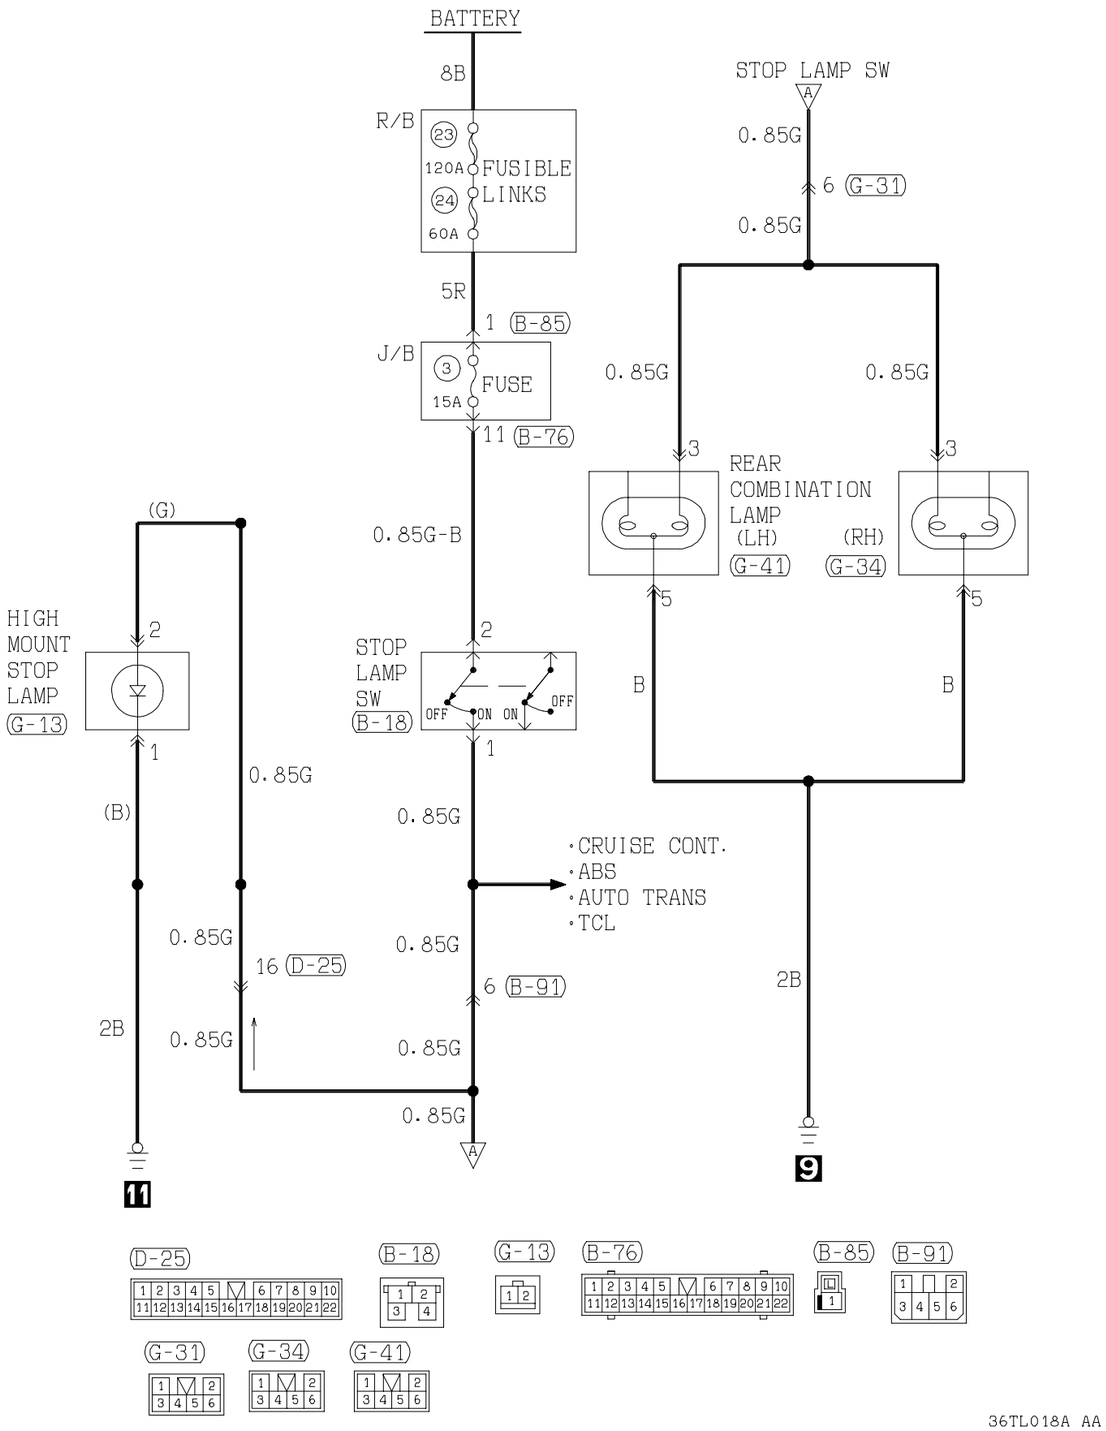

36TL018A AA

STOP LAMP <WAGON>

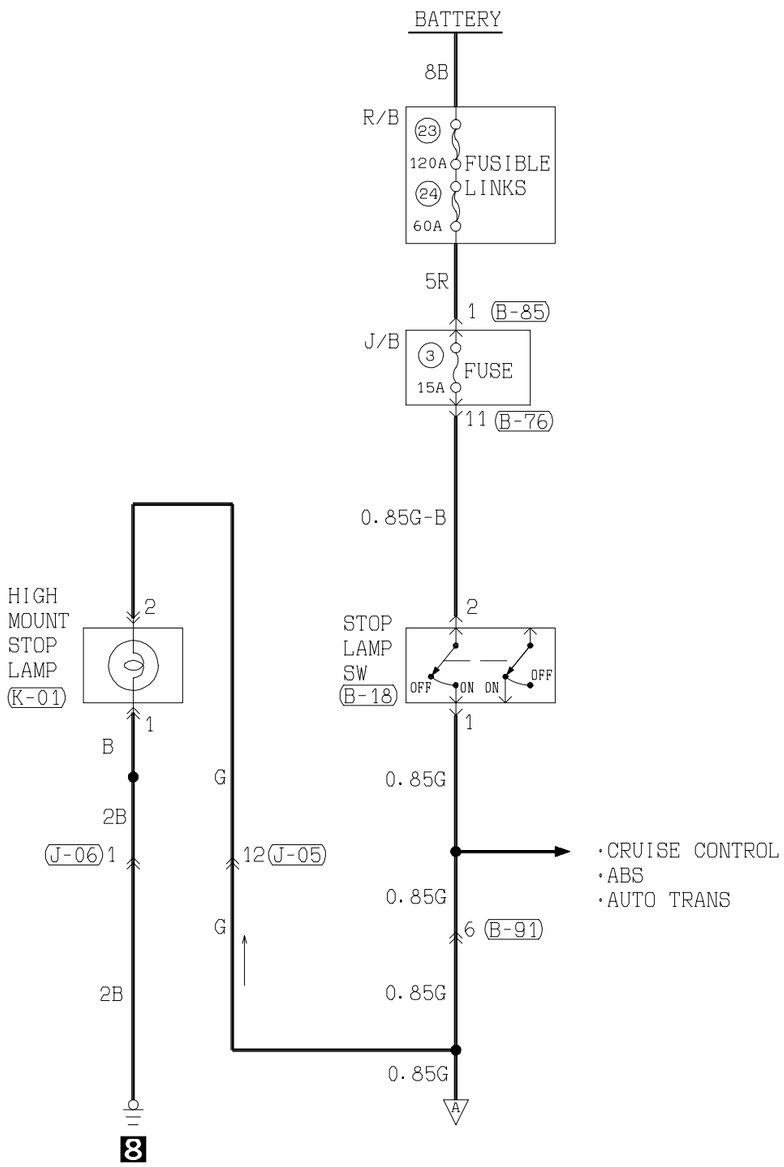

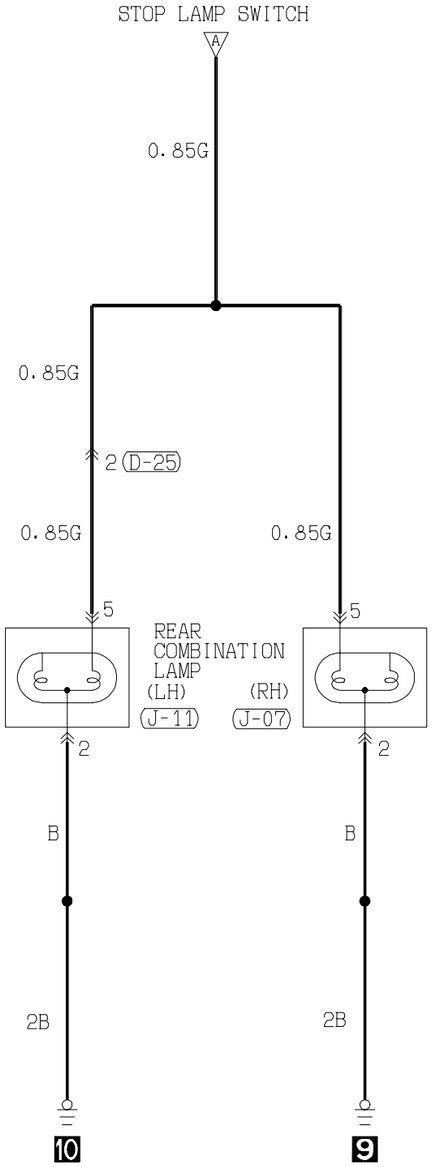





36TL019A AA

36TL019A AB

TURN SIGNAL AND HAZARD LAMP <SEDAN>

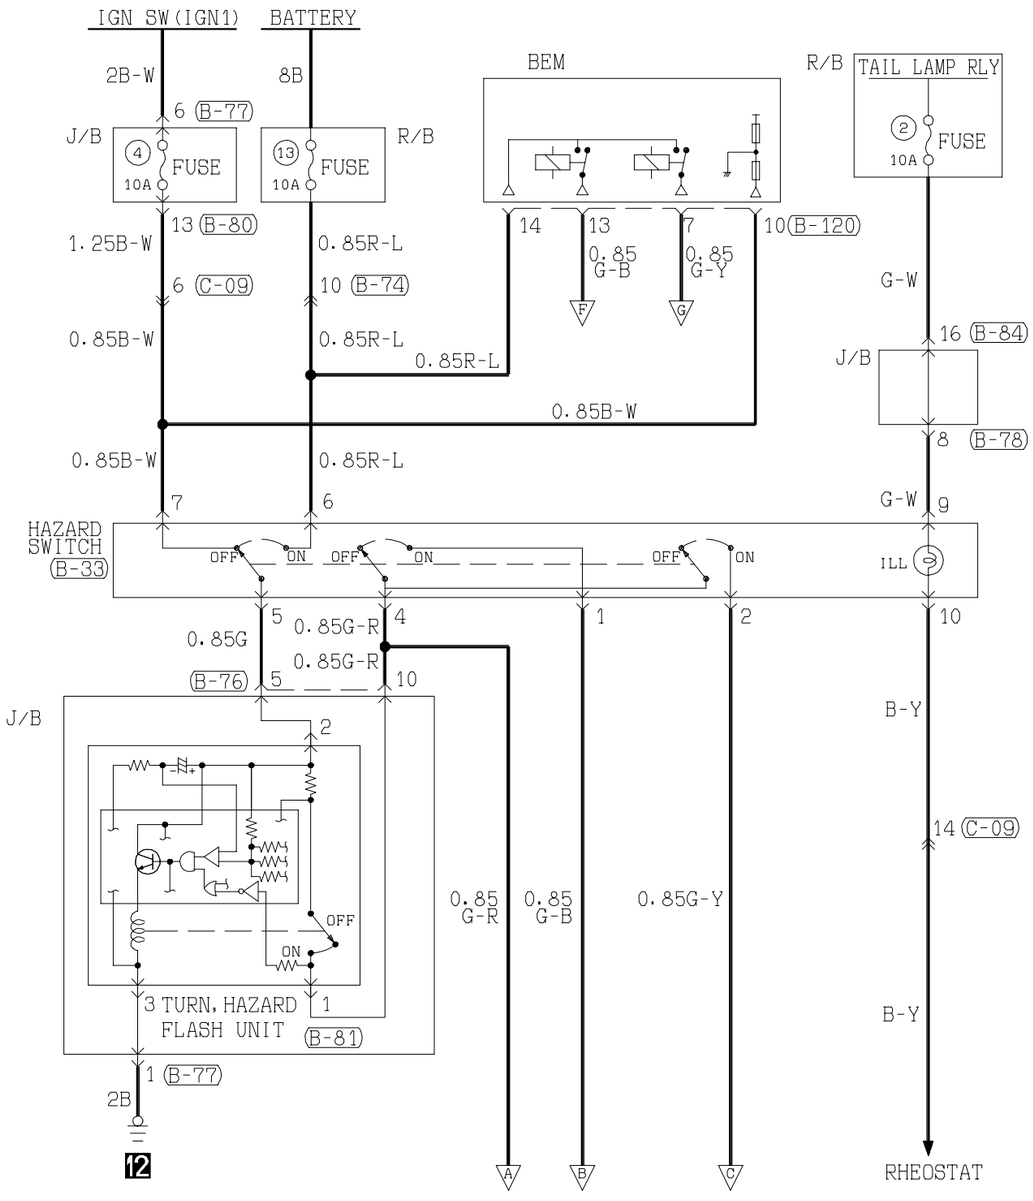

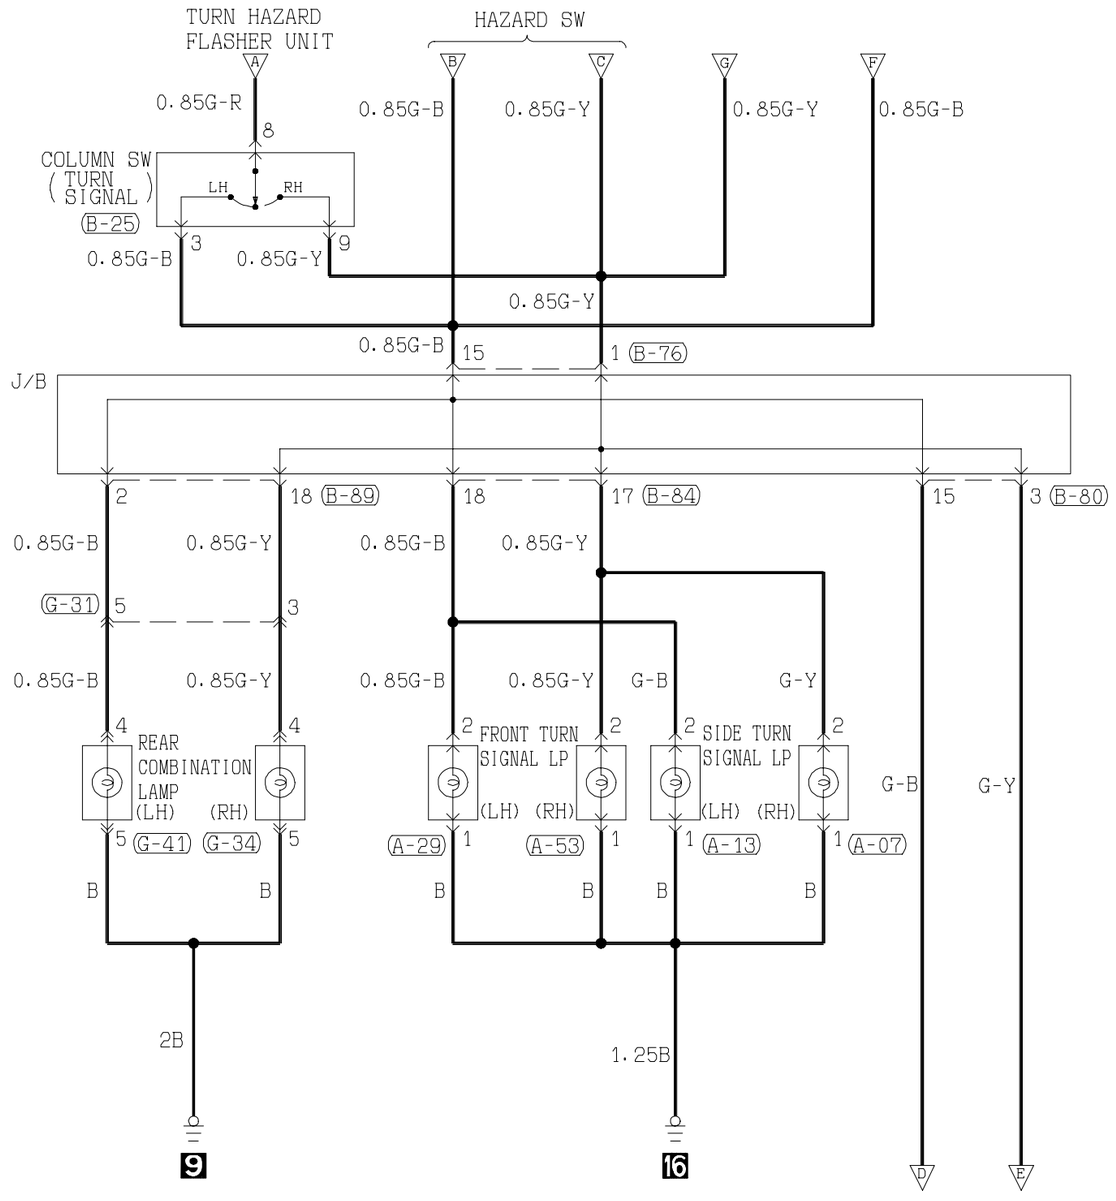

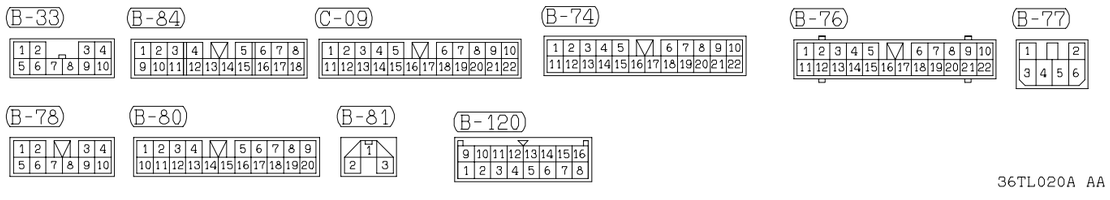

36TL020A AA

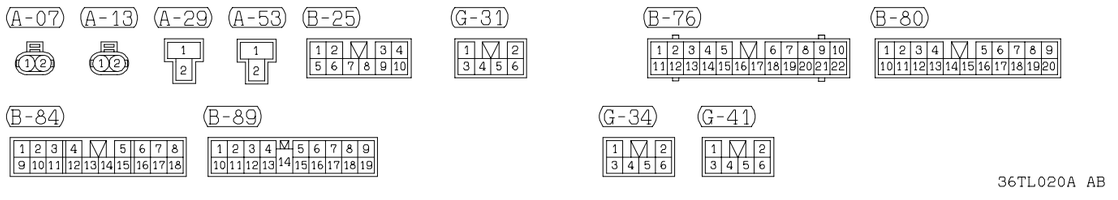

36TL020A AB

TURN SIGNAL AND HAZARD LAMP <SEDAN> (CONTINUED)

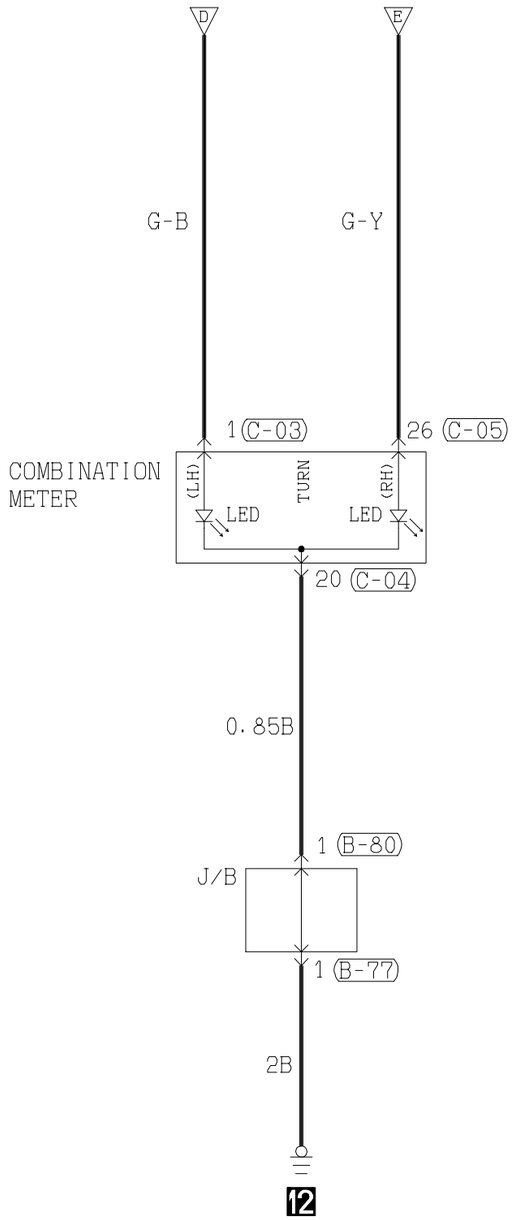



36TL020A BA

TURN SIGNAL AND HAZARD LAMP <WAGON>

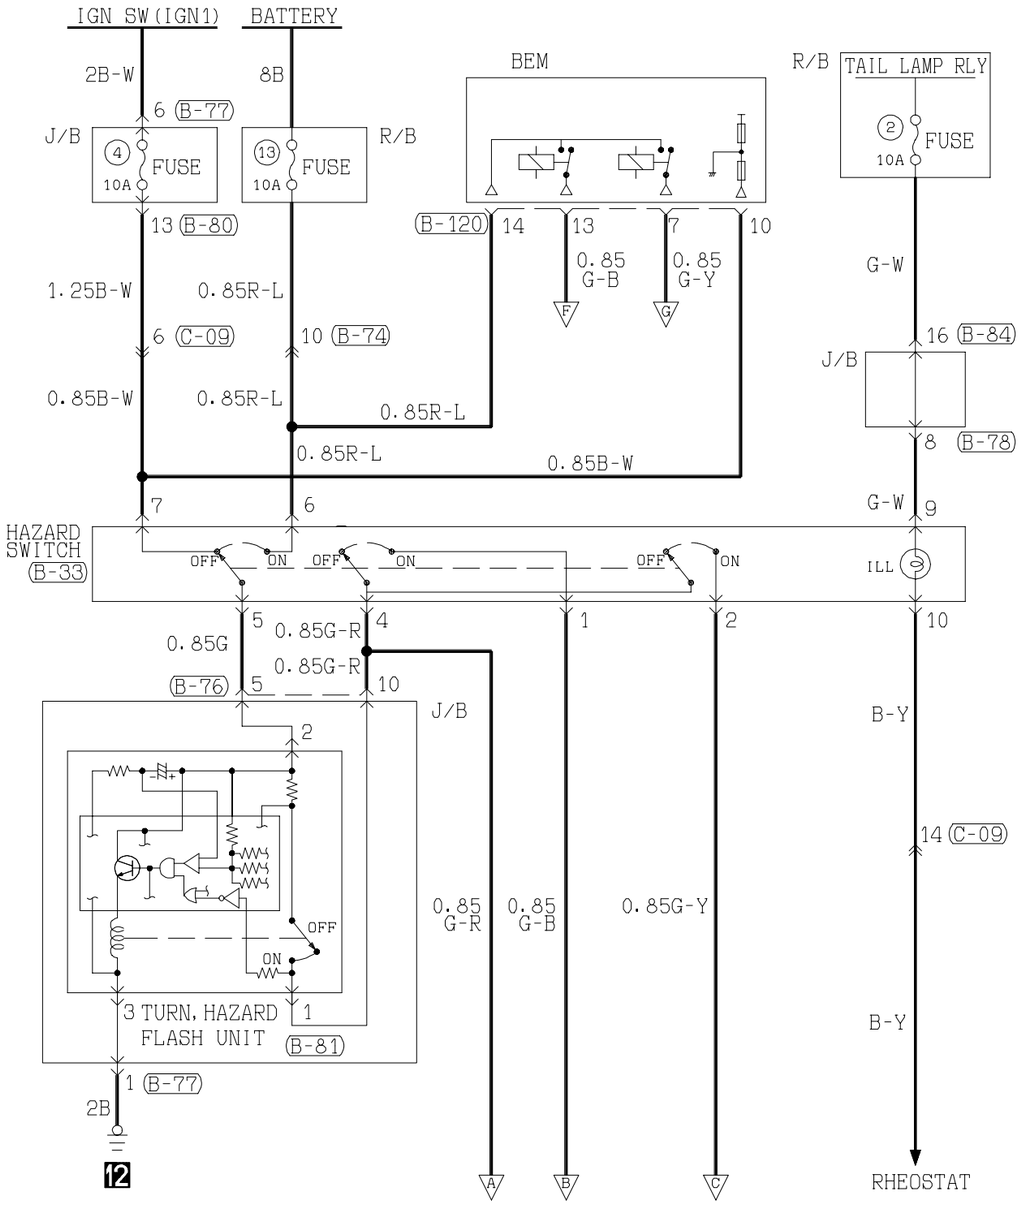

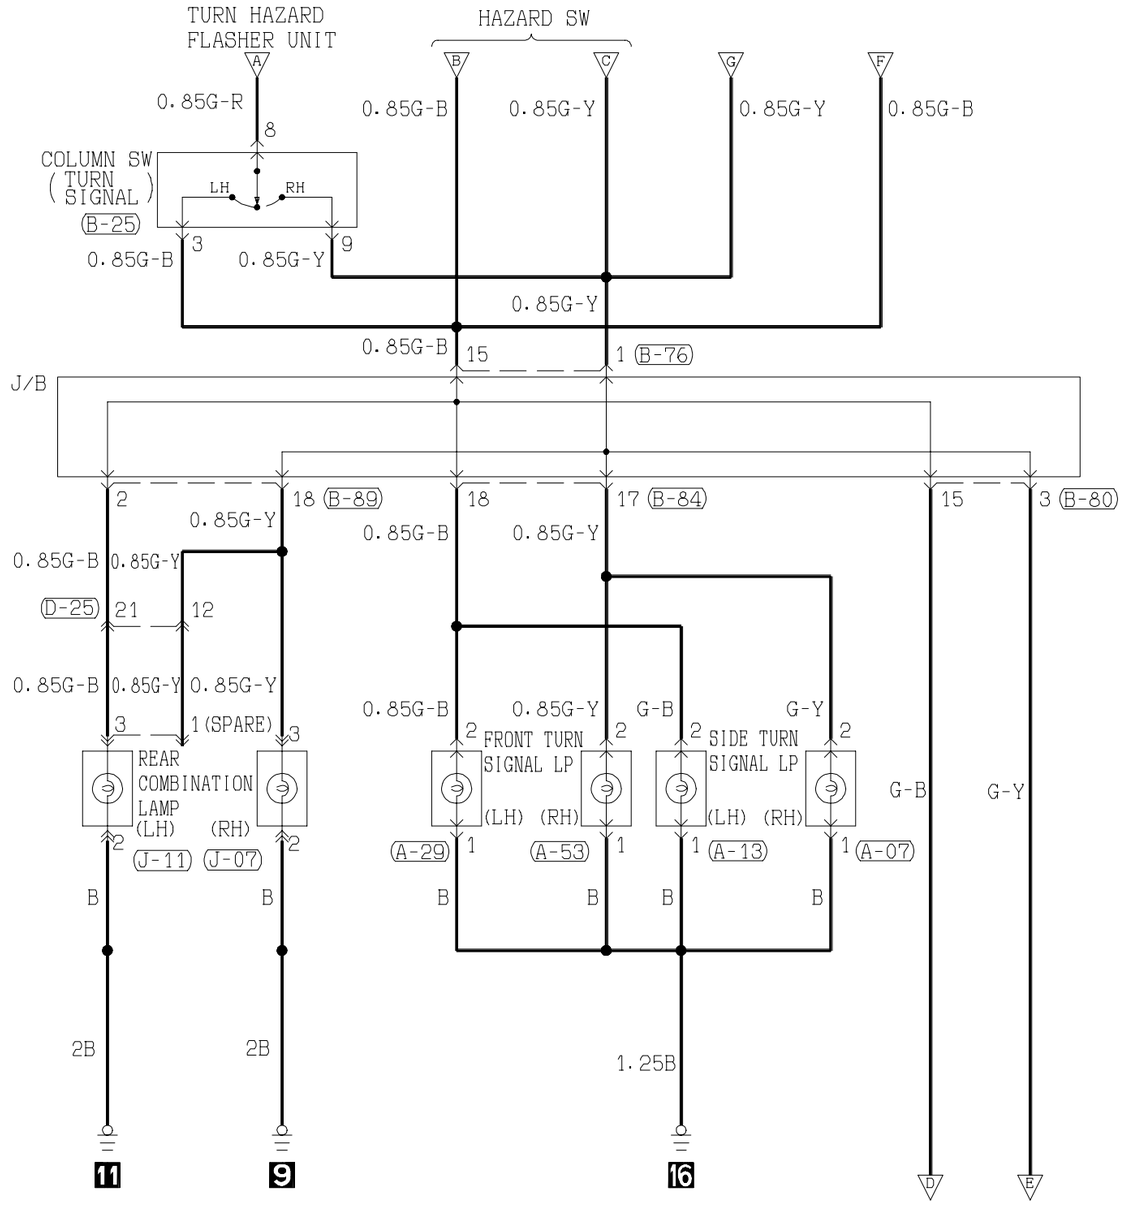

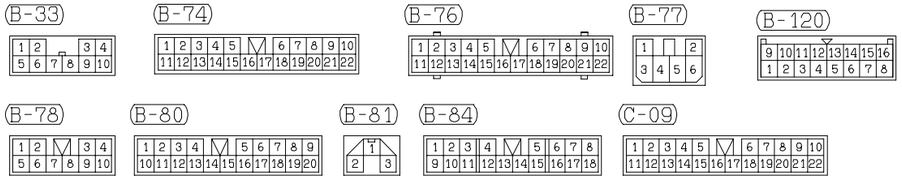

36TL021A AA

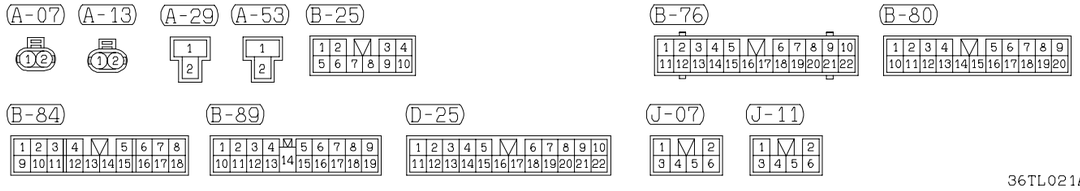

36TL021A AB

TURN SIGNAL AND HAZARD LAMP <WAGON> (CONTINUED)

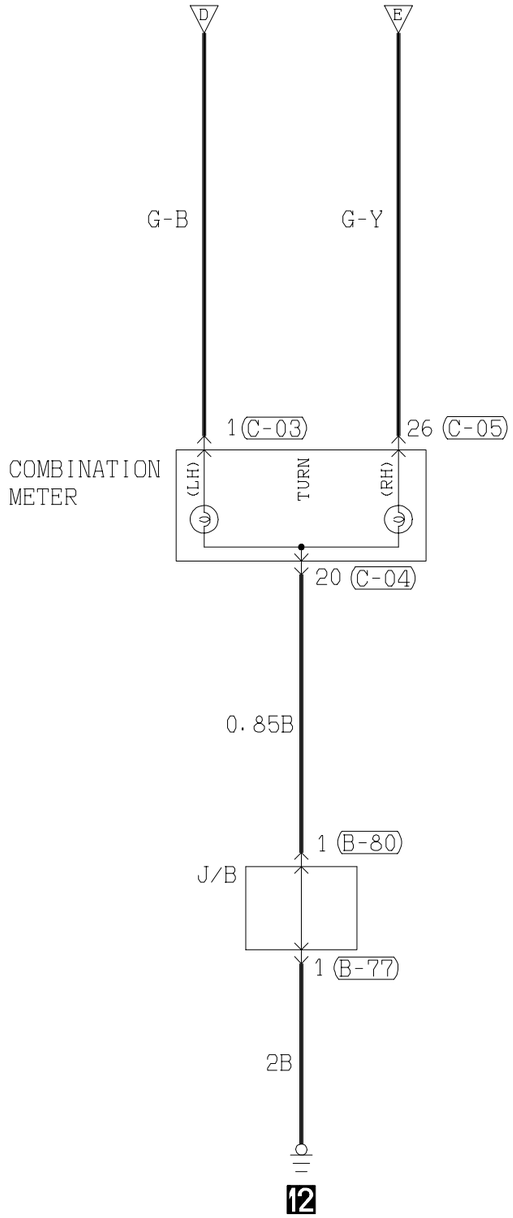



36TL021A BA

BACKUP LAMP <SEDAN>

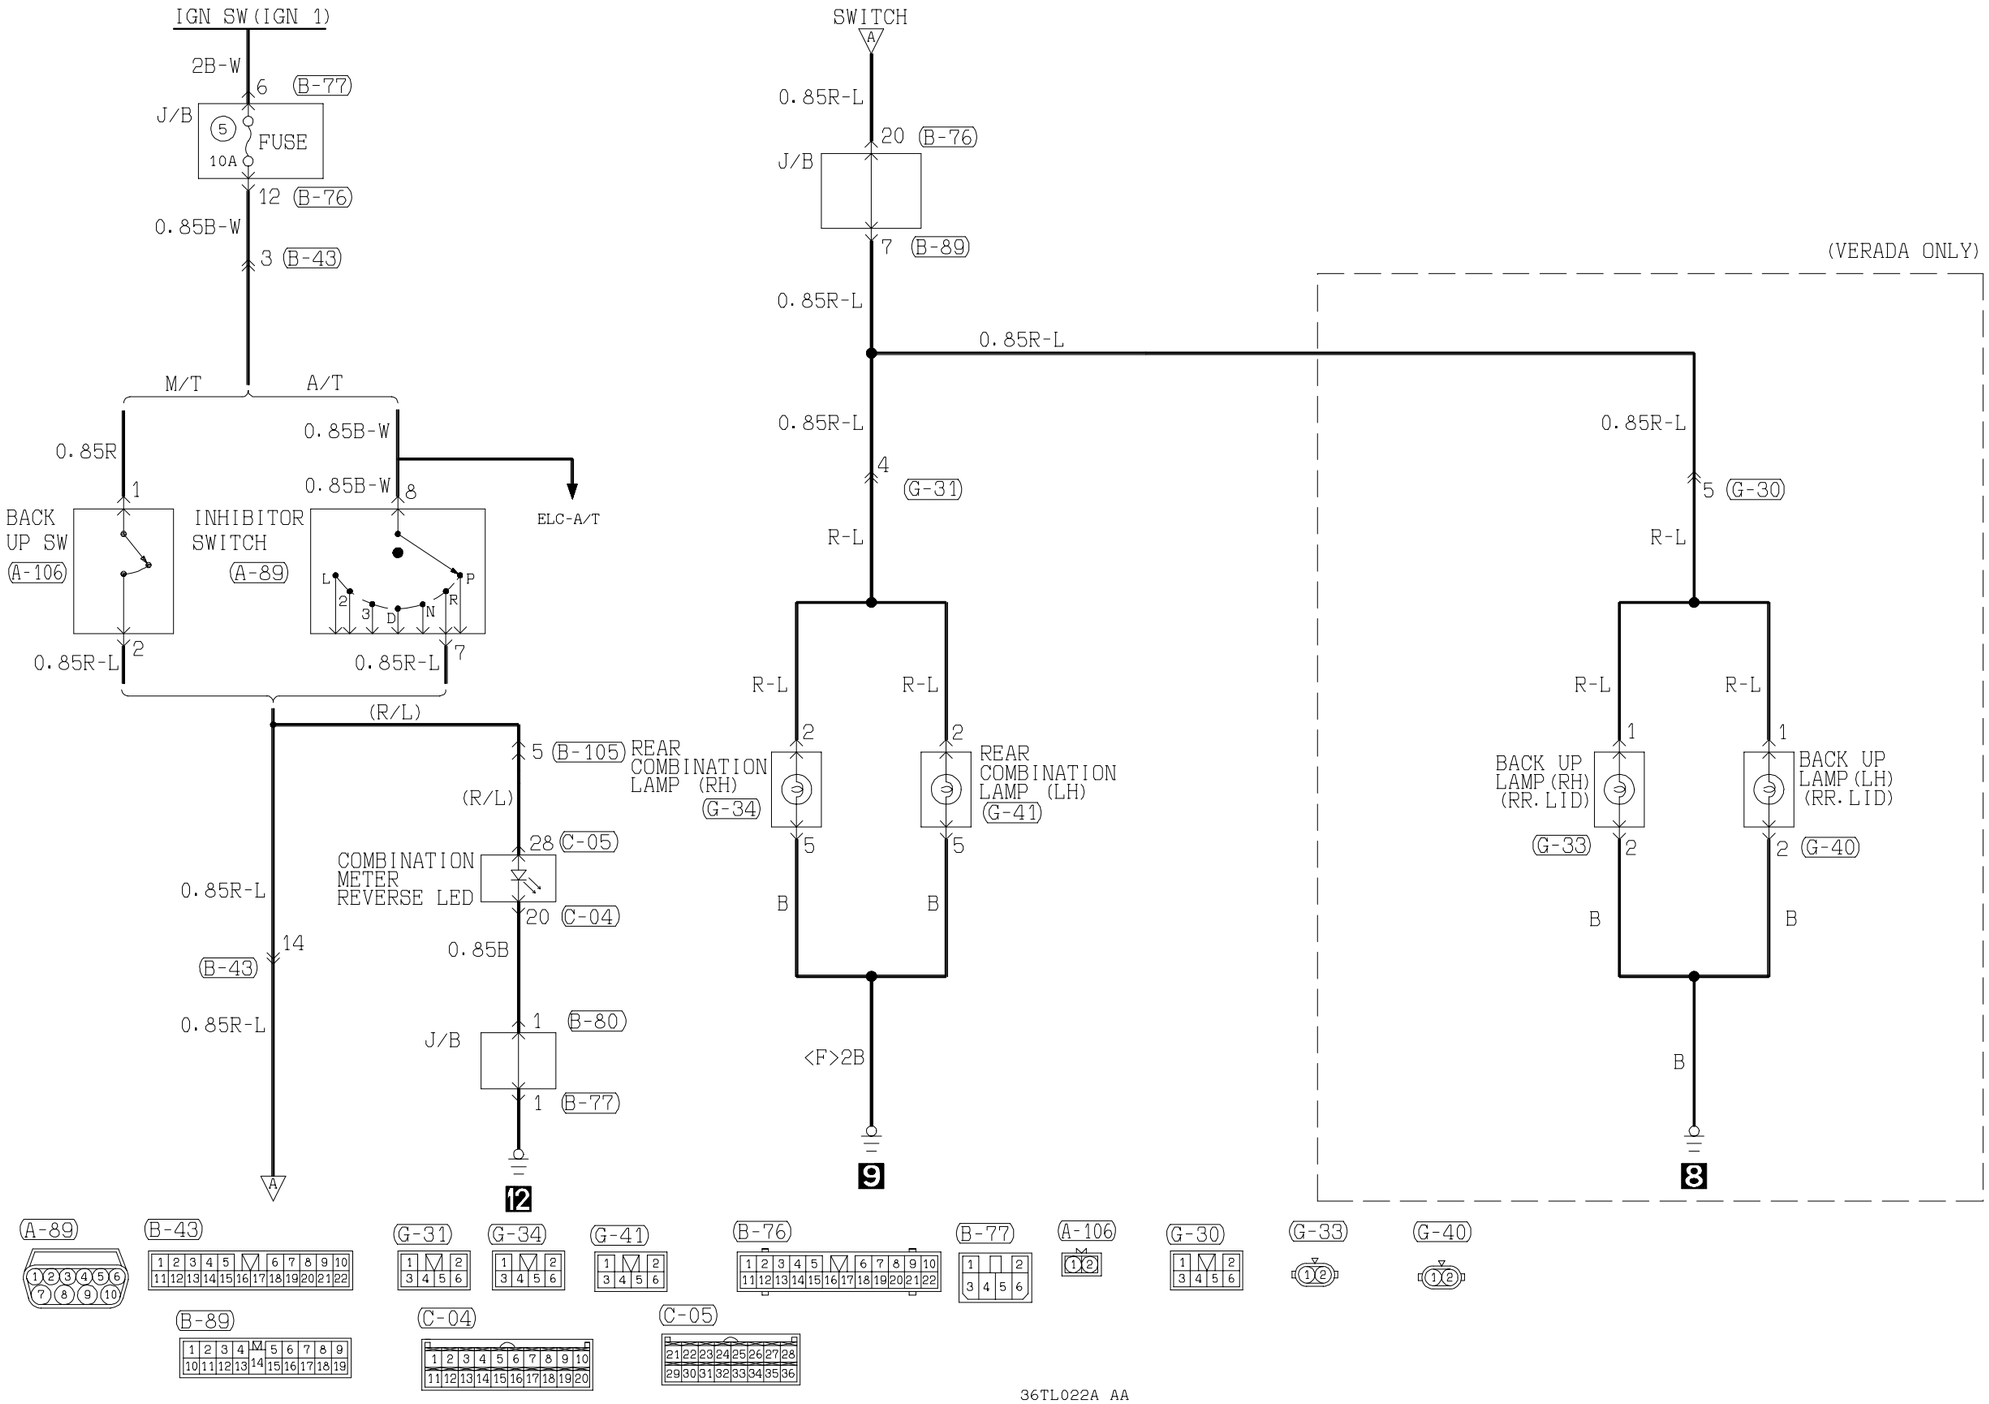

36TL022A AA

36TL022A AB

BACKUP LAMP <WAGON>

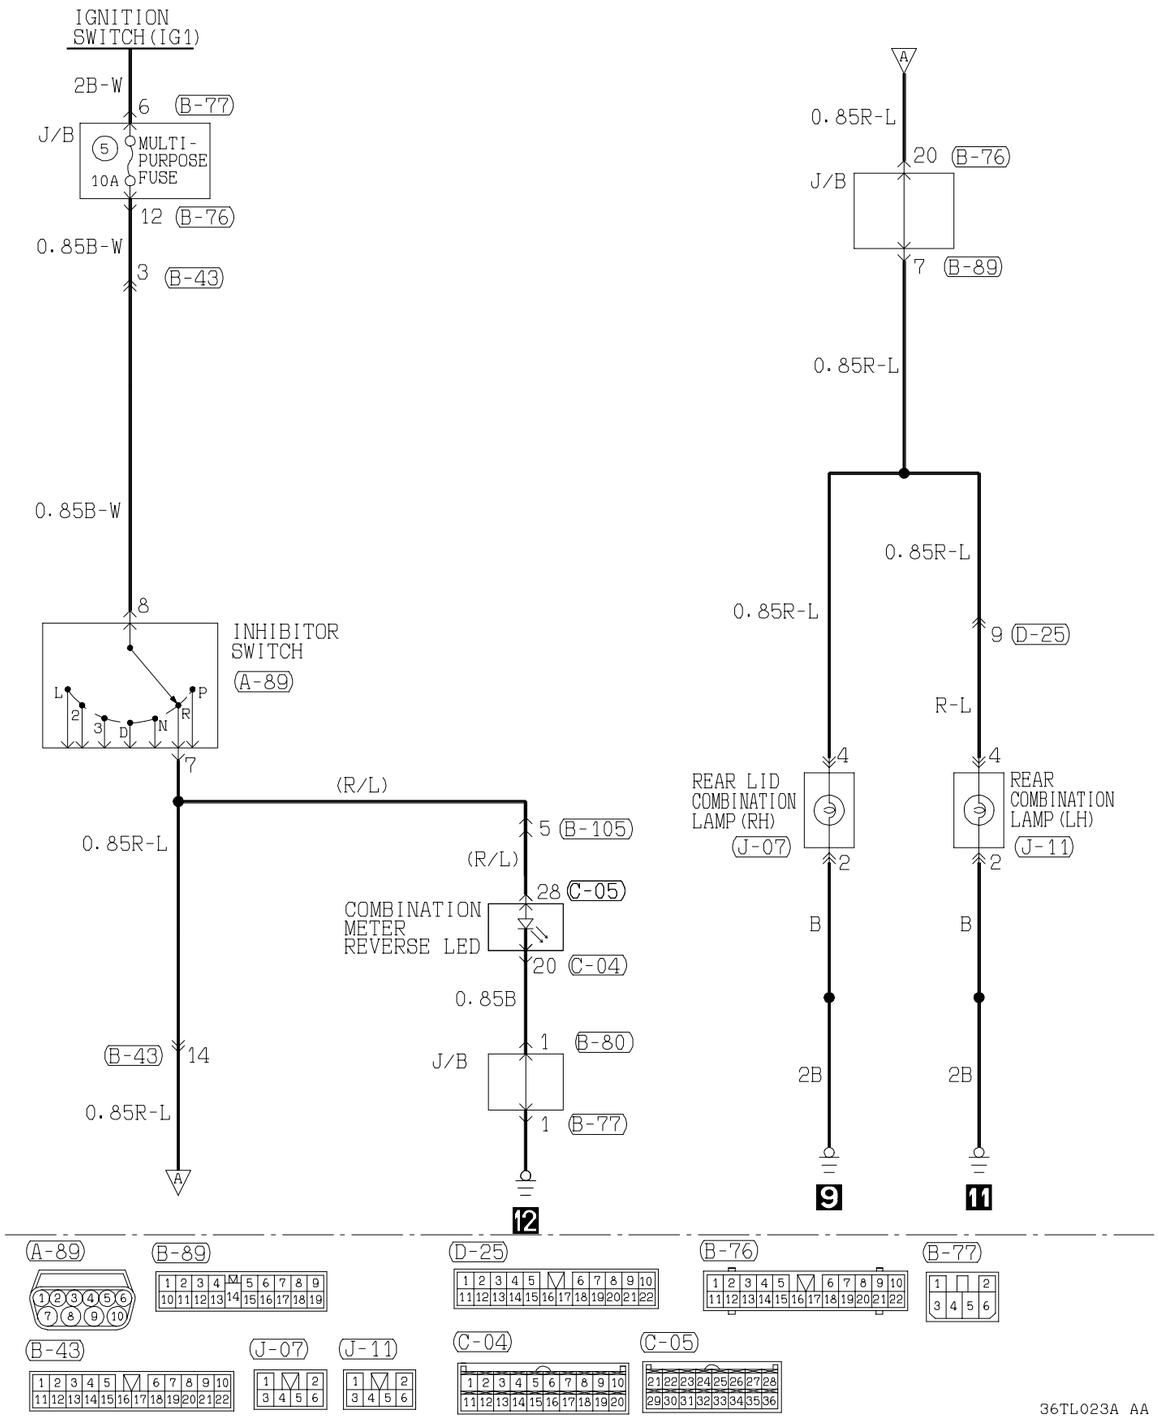

HORN

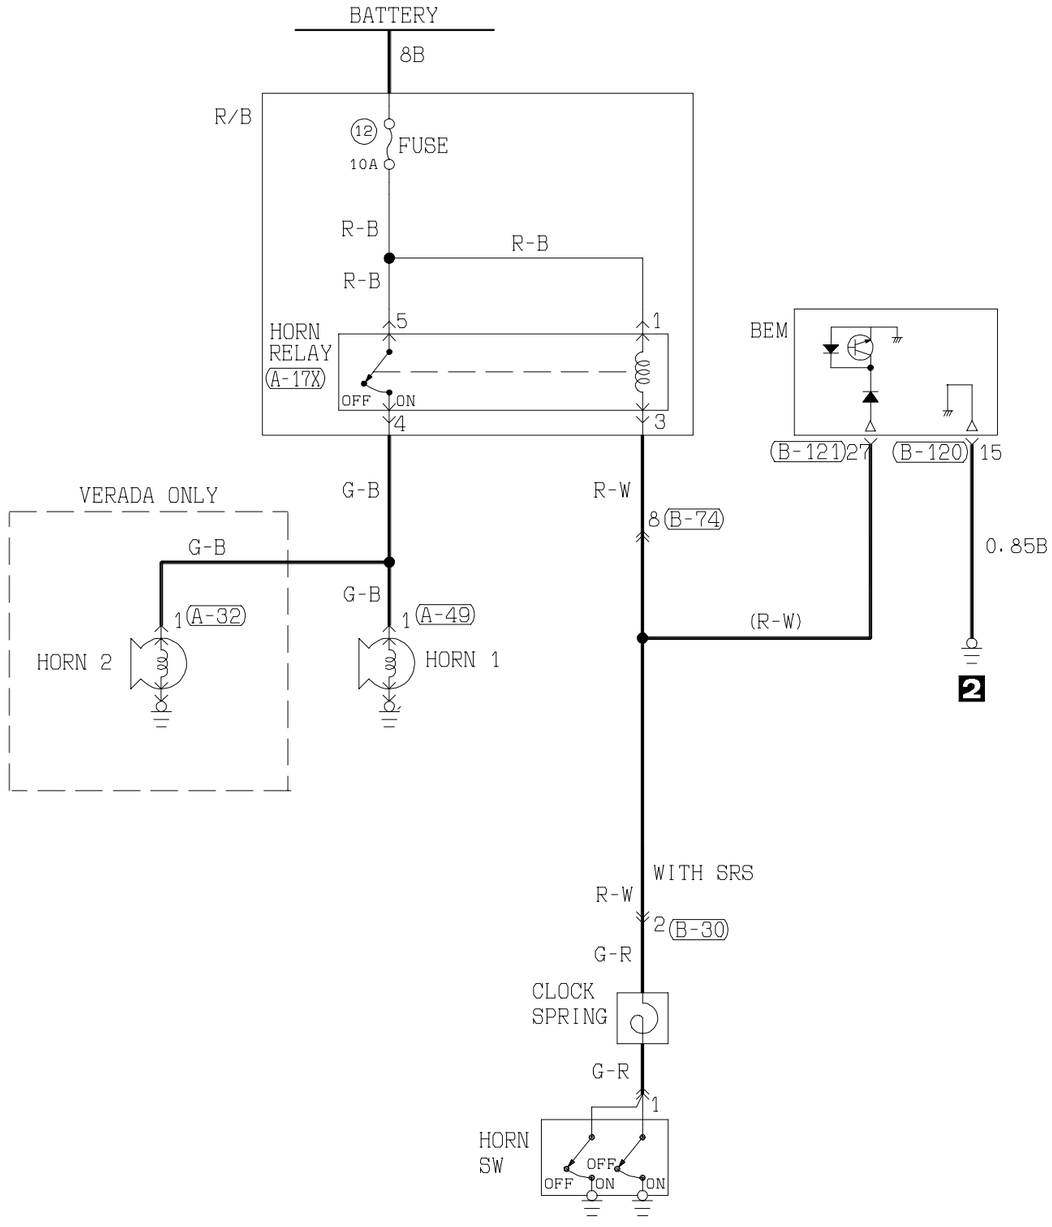



36TL024A AA

METER

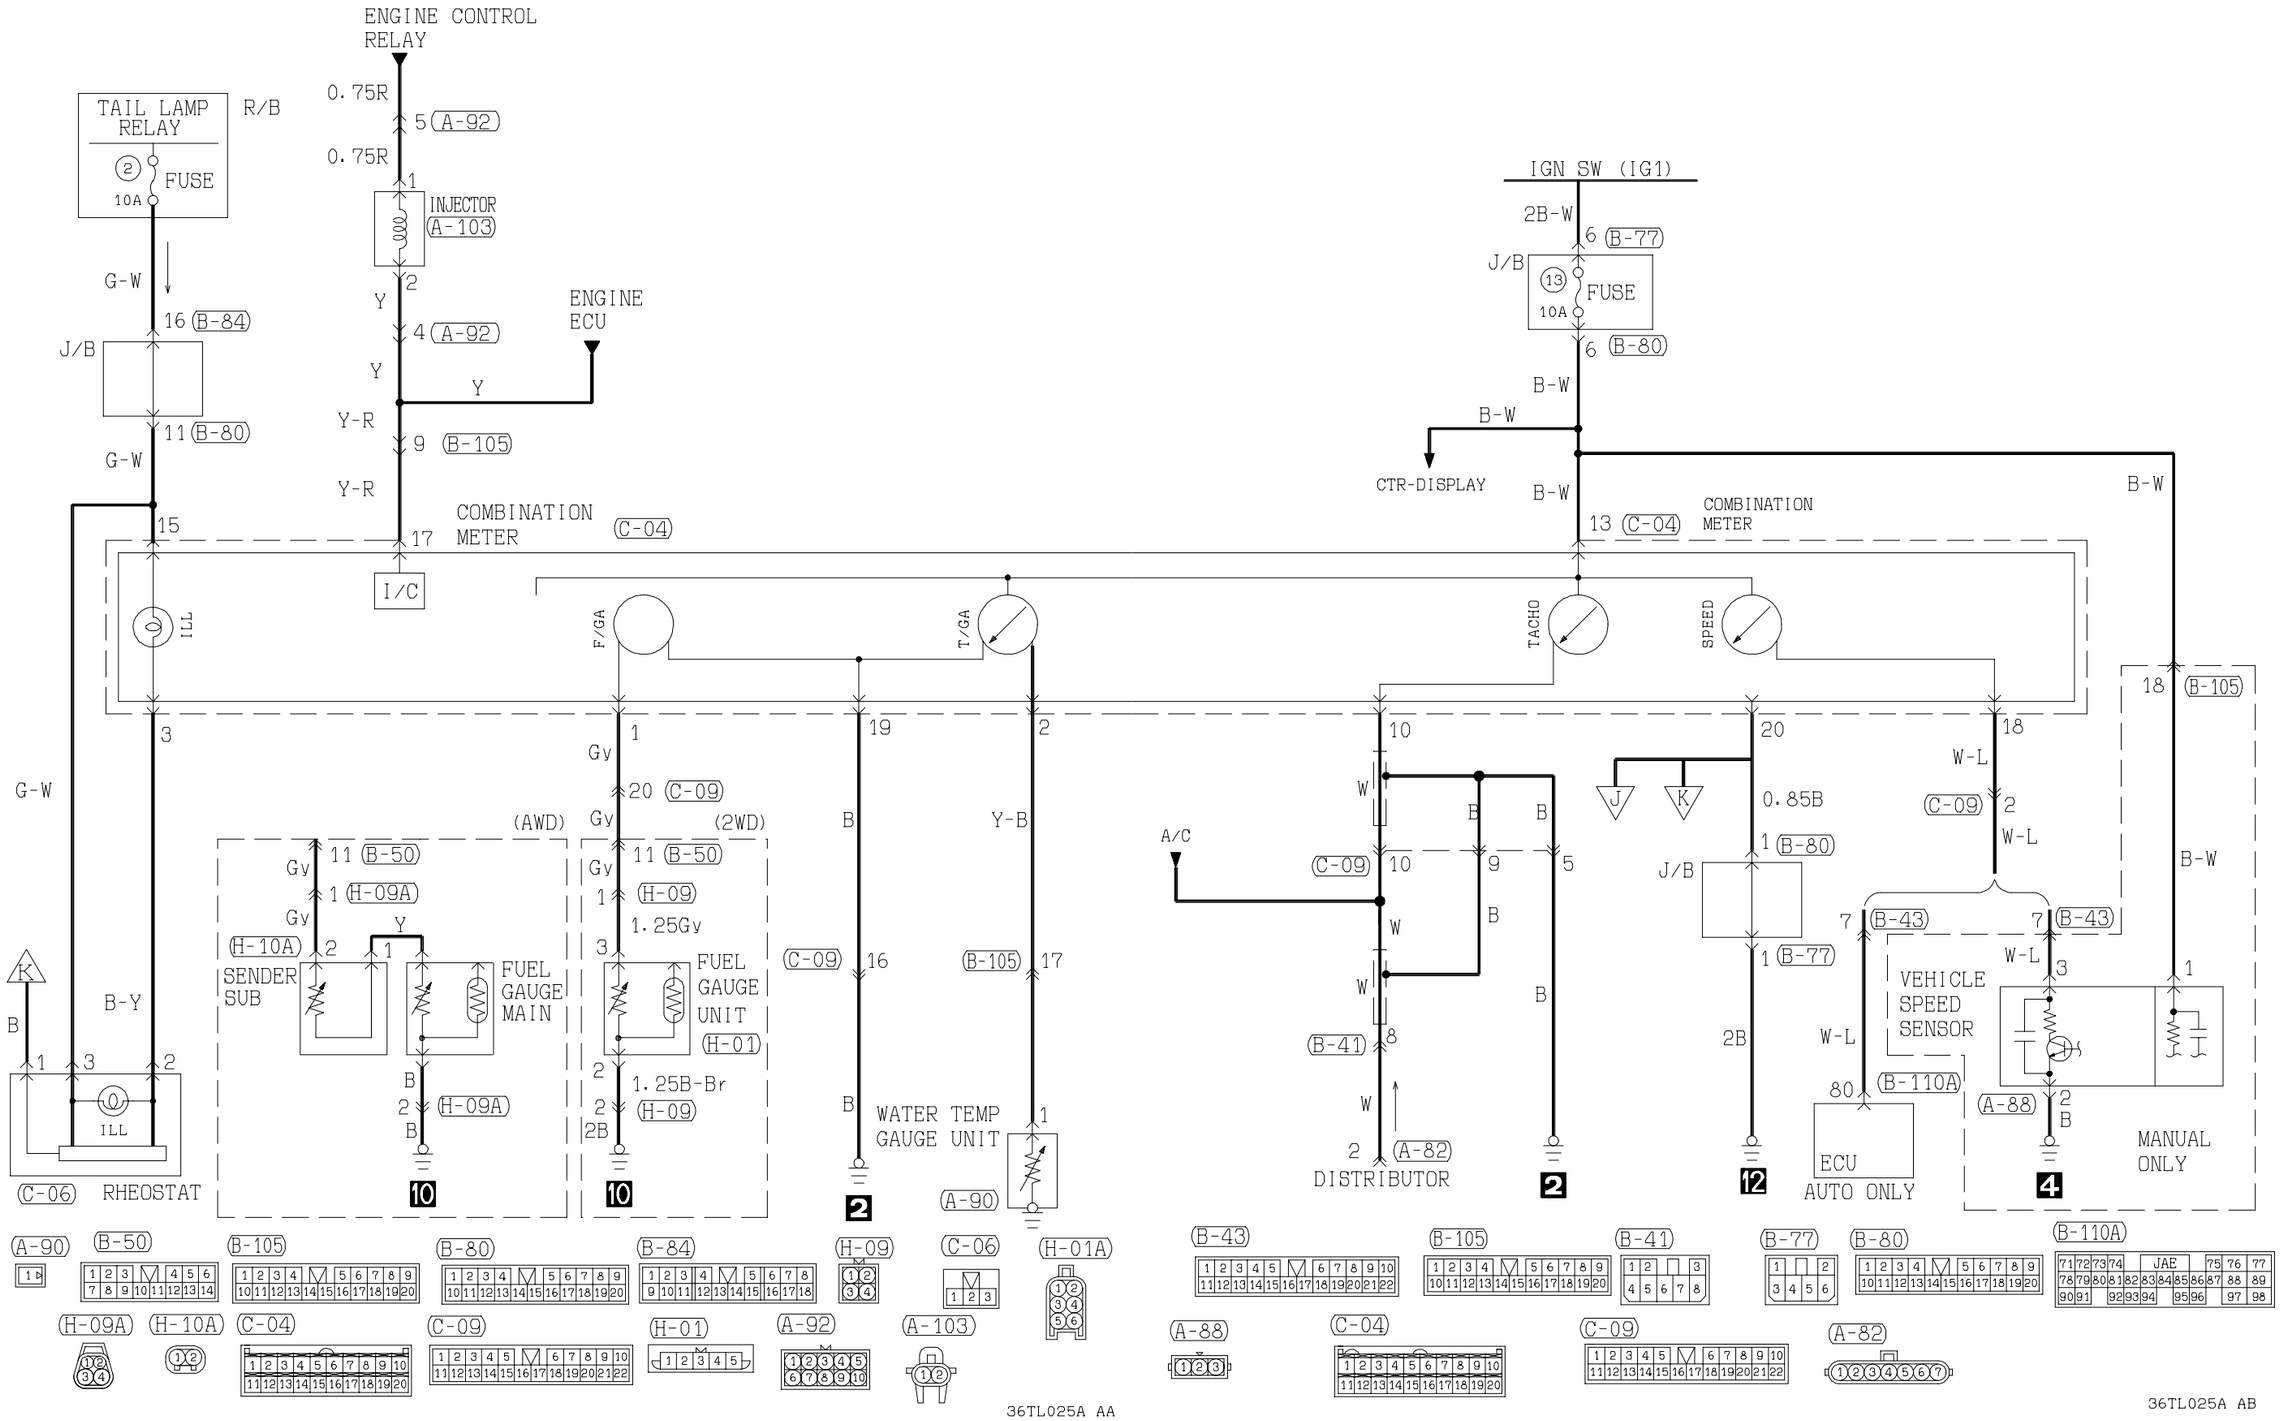
ENGINE CONTROL RELAY
TAIL LAMP RELAY
R/B
FUSE
10A
G-W
16 B-84
J/B
11 B-80
G-W
15
ILL
0.75R
5 A-92
0.75R
1
INJECTOR A-103
Y
2
4 A-92
Y
ENGINE ECU
Y
Y-R
9 B-105
Y-R
17
COMBINATION METER C-04
I/C
F/GA
T/GA
IGN SW (IG1)
2B-W
6 B-77
J/B
13
FUSE
10A
6 B-80
B-W
B-W
CTR-DISPLAY
B-W
13 C-04
COMBINATION METER
B-W
TACHO
SPEED
3
G-W
1
Gy
20 C-09
(AWD)
Gy
11 B-50
Gy
1 H-09A
Gy
Y
H-10A
2
1
SENDER SUB
FUEL GAUGE MAIN
B
2 H-09A
B
10
(2WD)
Gy
11 B-50
Gy
1 H-09
1.25Gy
3
FUEL GAUGE UNIT
H-01
2
1.25B-Br
2
2B H-09
10
19
B
C-09
16
B
2
2
Y-B
B-105
17
WATER TEMP GAUGE UNIT
A-90
1
K
B
B-Y
1
3
2
ILL
C-06
RHEOSTAT
A/C
C-09
10
W
B
B
W
9
5
B
W
B-41
8
W
2
A-82
DISTRIBUTOR
2
J
K
20
0.85B
1 B-80
J/B
1 B-77
2B
12
18
W-L
C-09
2
W-L
7 B-43
7 B-43
W-L
3
VEHICLE SPEED SENSOR
W-L
80
B-110A
ECU
AUTO ONLY
A-88
2
B
4
18 B-105
B-W
1
MANUAL ONLY
A-90
1 B
B-50
1 2 3 4 5 6
7 8 9 10 11 12 13 14
B-105
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
B-80
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
B-84
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16 17 18
H-09
1 2
3 4
C-06
1 2 3
H-01A
1 2
3 4
5 6
H-09A
1 2
3 4
H-10A
1 2
C-04
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
C-09
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20 21 22
H-01
1 2 3 4 5
A-92
1 2 3 4 5
6 7 8 9 10
A-103
1 2
B-43
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20 21 22
B-105
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
B-41
1 2 3
4 5 6 7 8
B-77
1 2
3 4 5 6
B-80
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
B-110A
71 72 73 74 JAE 75 76 77
78 79 80 81 82 83 84 85 86 87 88 89
90 91 92 93 94 95 96 97 98
A-88
1 2 3
C-04
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
C-09
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20 21 22
A-82
1 2 3 4 5 6 7
36TL025A AA
36TL025A AB

METER

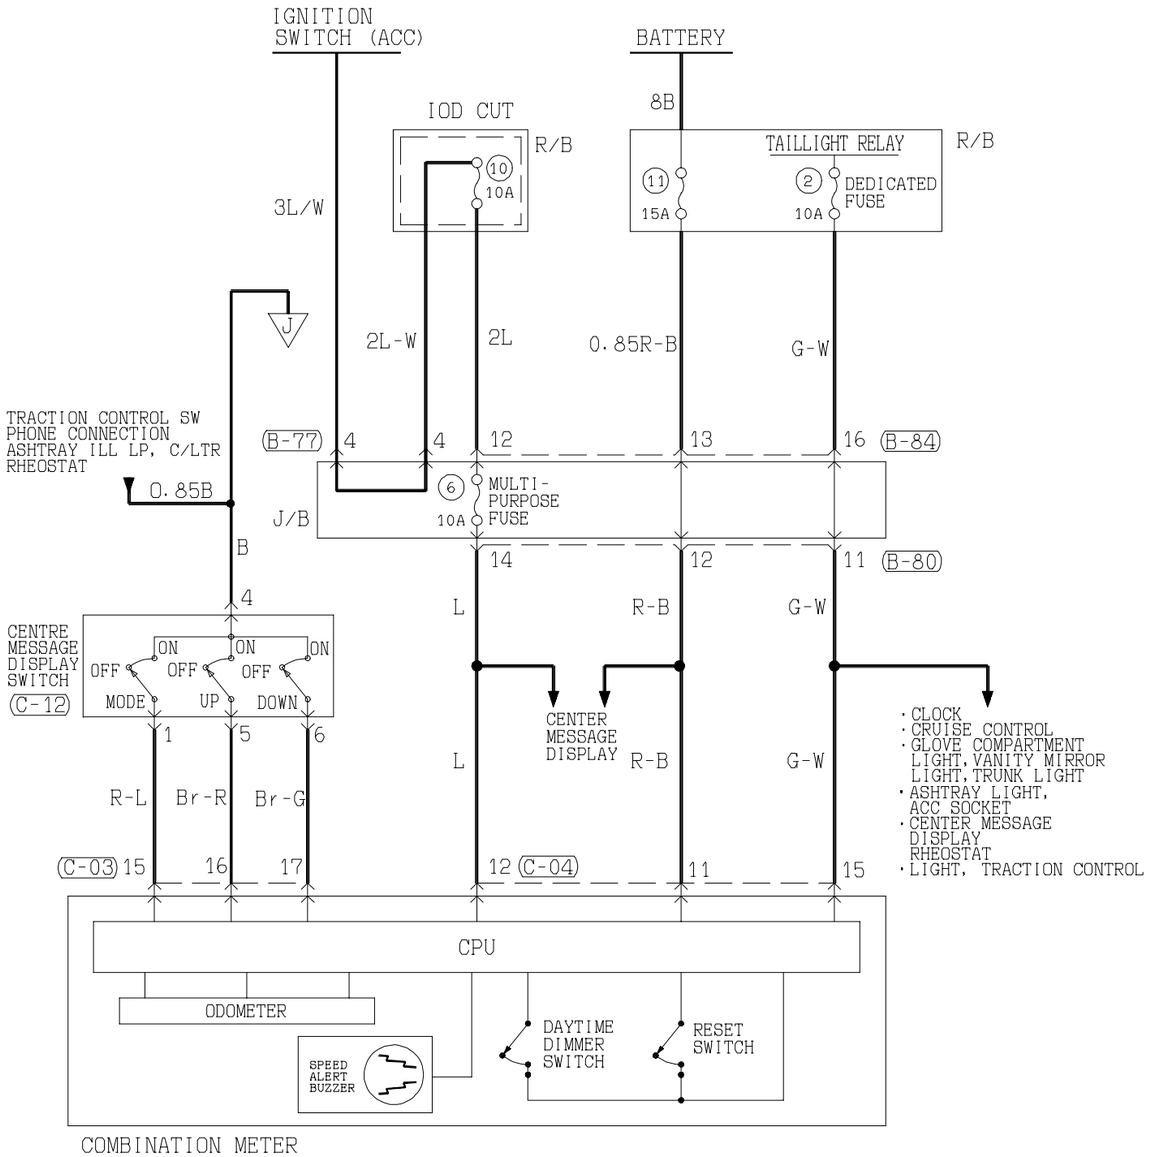
IGNITION SWITCH (ACC)
BATTERY
8B
IOD CUT
R/B
10
10A
3L/W
TAILLIGHT RELAY
R/B
11
15A
2
DEDICATED FUSE
10A
J
2L-W
2L
0.85R-B
G-W
TRACTION CONTROL SW
PHONE CONNECTION
ASHTRAY ILL LP, C/LTR
RHEOSTAT
0.85B
B-77
4
4
12
13
16
B-84
6
MULTI-PURPOSE FUSE
10A
J/B
B
14
12
11
B-80
4
L
R-B
G-W
CENTRE MESSAGE DISPLAY SWITCH
C-12
ON
OFF
MODE
UP
DOWN
1
5
6
CENTER MESSAGE DISPLAY
· CLOCK
· CRUISE CONTROL
· GLOVE COMPARTMENT LIGHT, VANITY MIRROR LIGHT, TRUNK LIGHT
· ASHTRAY LIGHT, ACC SOCKET
· CENTER MESSAGE DISPLAY RHEOSTAT
· LIGHT, TRACTION CONTROL
R-L
Br-R
Br-G
C-03
15
16
17
12
C-04
11
15
CPU
ODOMETER
SPEED ALERT BUZZER
DAYTIME DIMMER SWITCH
RESET SWITCH
COMBINATION METER


B-80
B-84
C-12
C-04
C-03

CENTRE MESSAGE DISPLAY

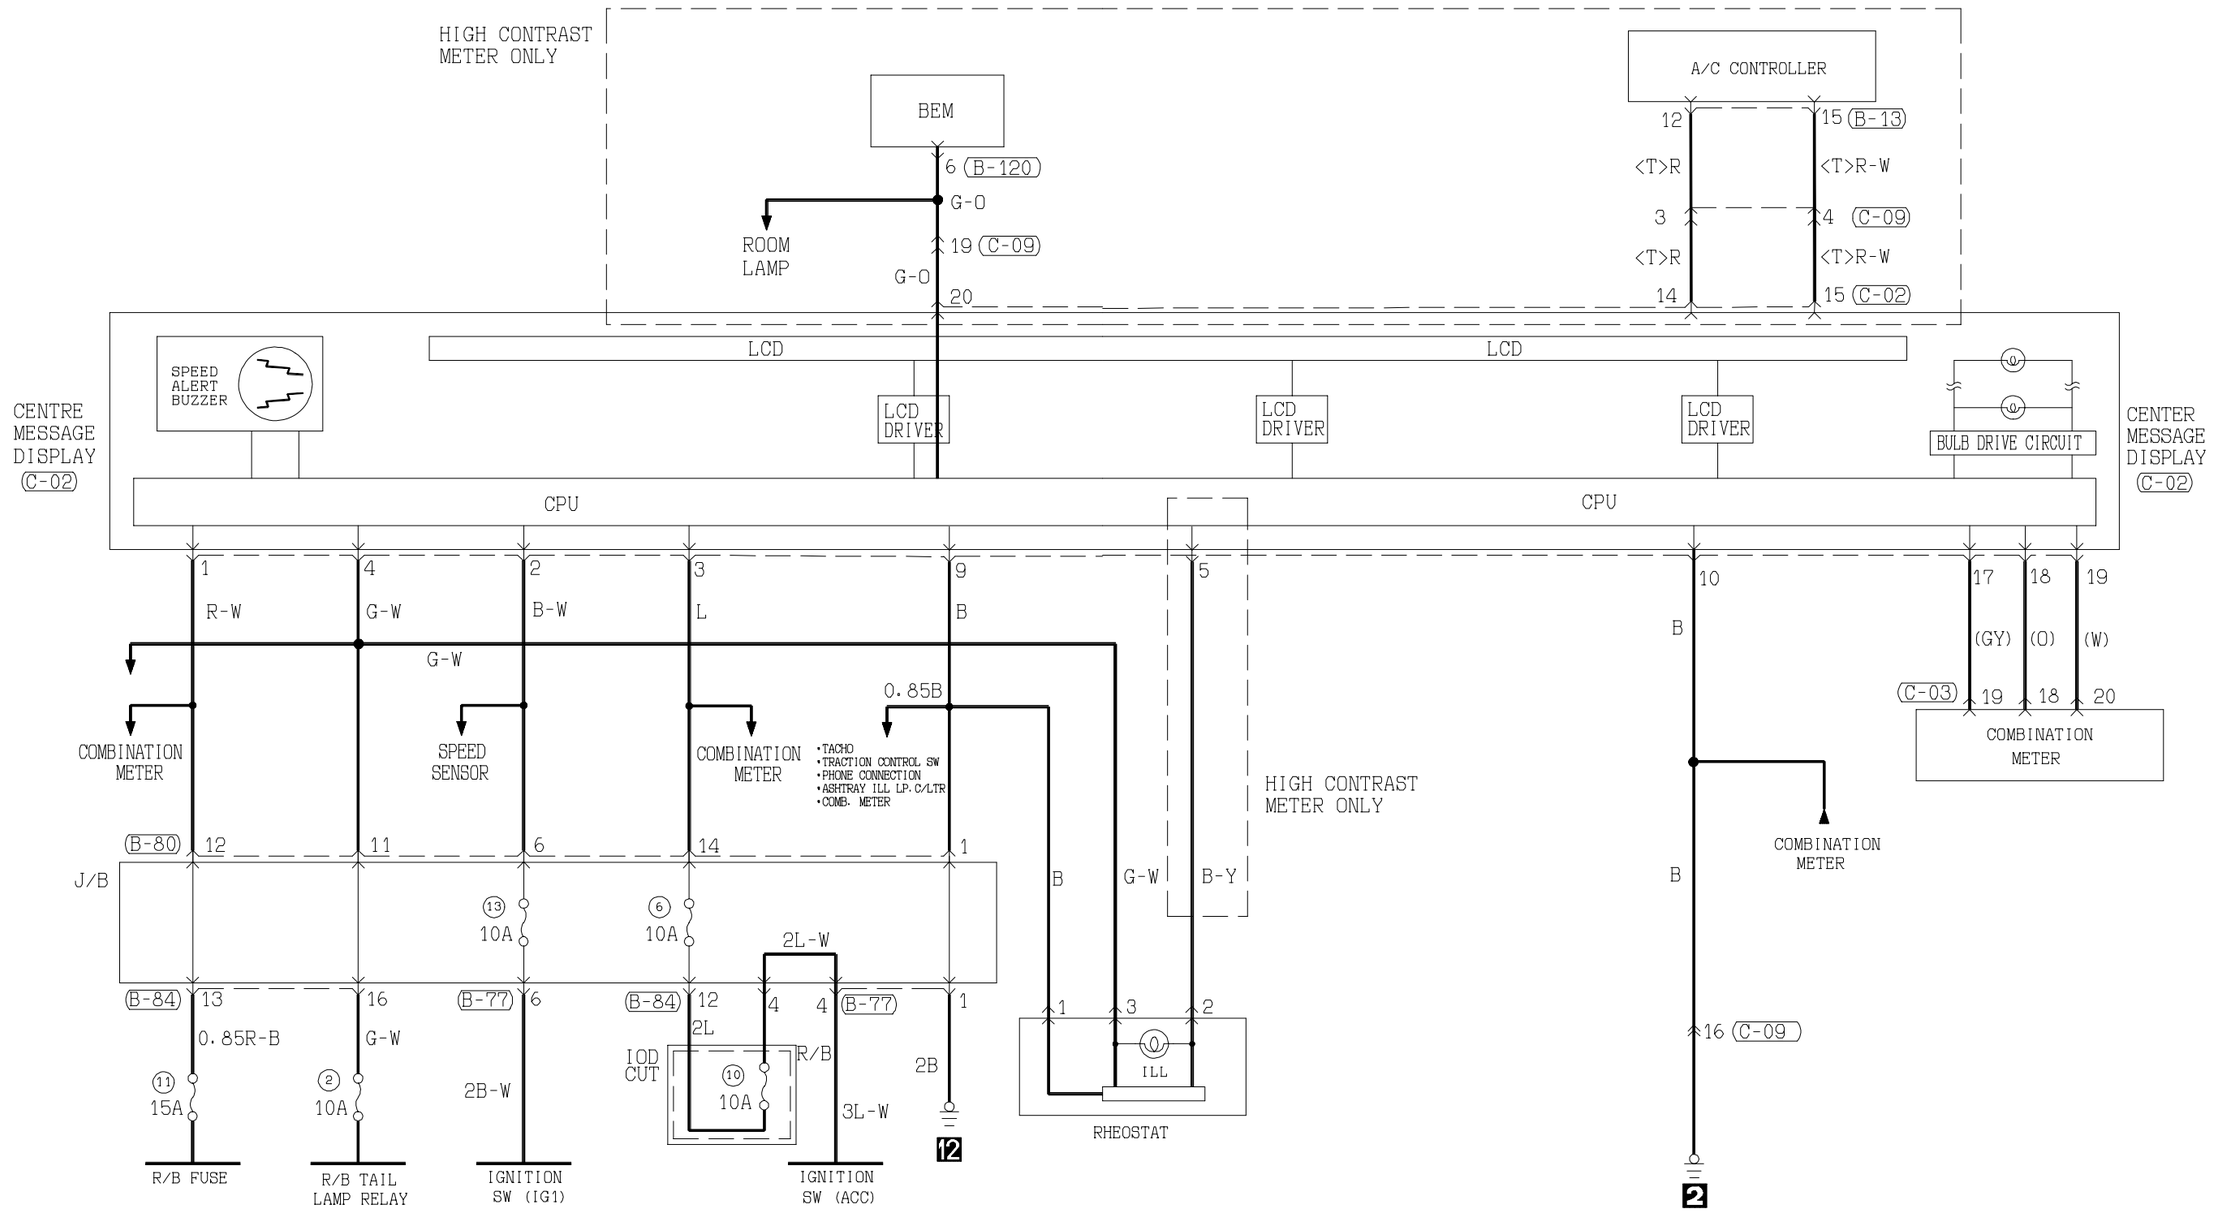

(C-02) (C-06) (B-120)

(B-80) (B-84) (B-105)

36TL026A AA

(B-77) (B-80) (C-02) (C-09)

(C-03) (B-13)

36TL026A AB

OIL PRESSURE WARNING LAMP

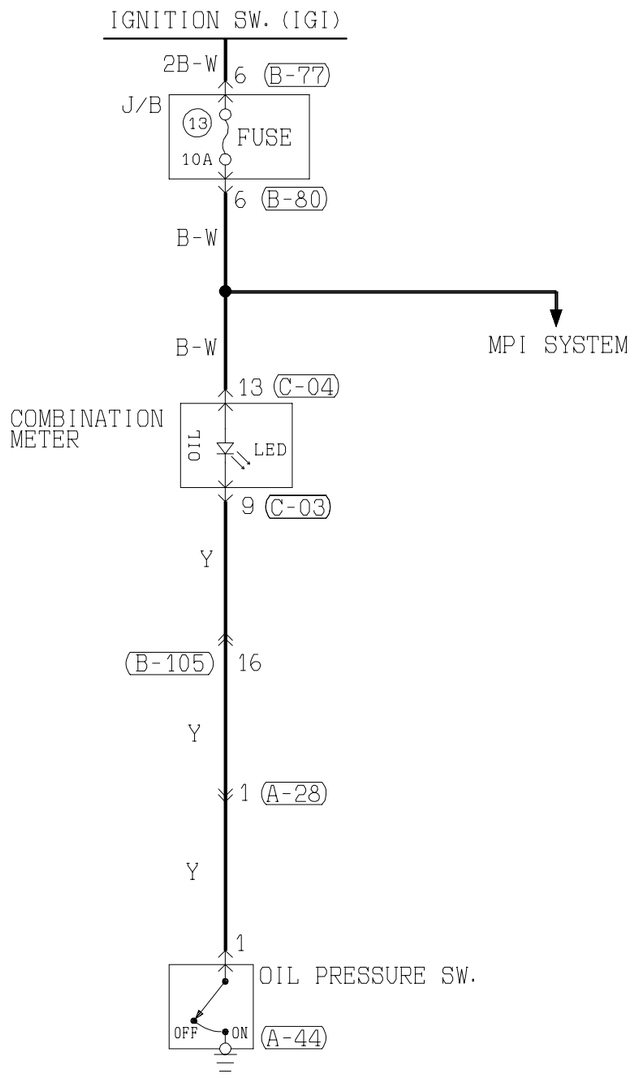











36TL027A AA

Main Index
54 Index
54C Index
A
B
C
D
E
F
G
H
J
K

BRAKE WARNING LAMP

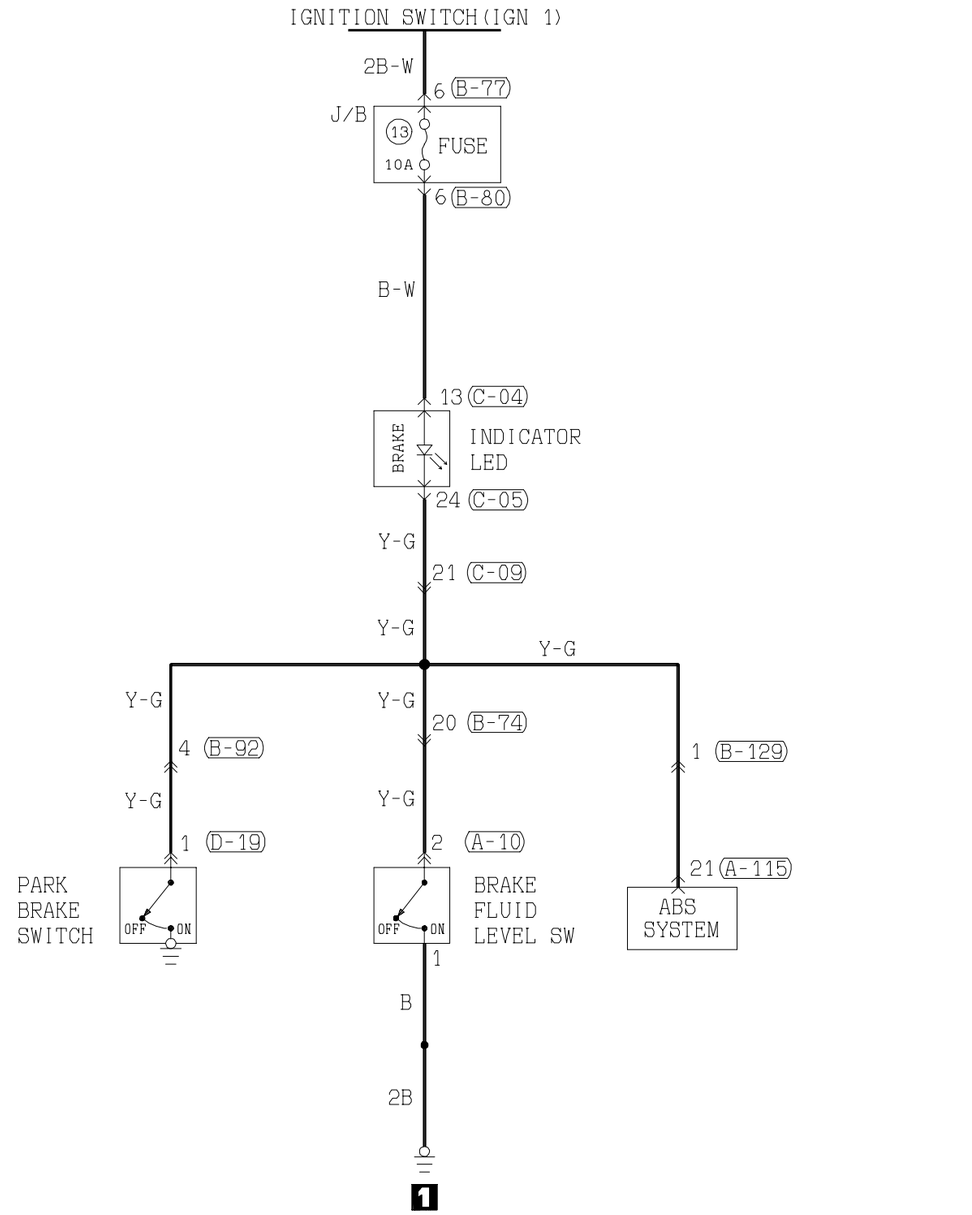

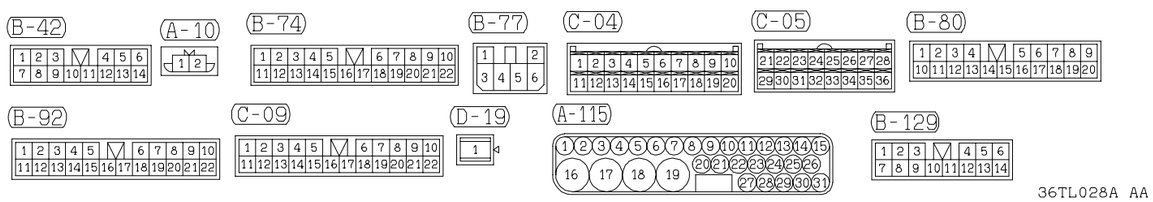

36TL028A AA

SEAT BELT WARNING LAMP

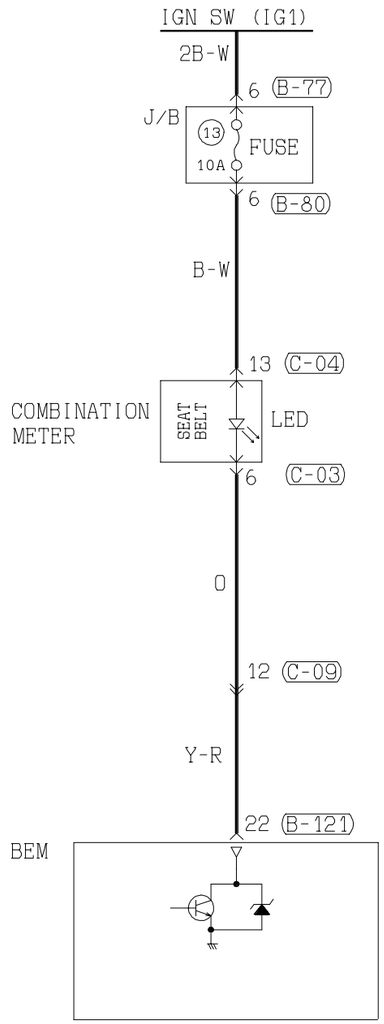



36TL029A AA

DOOR AJAR WARNING LAMP

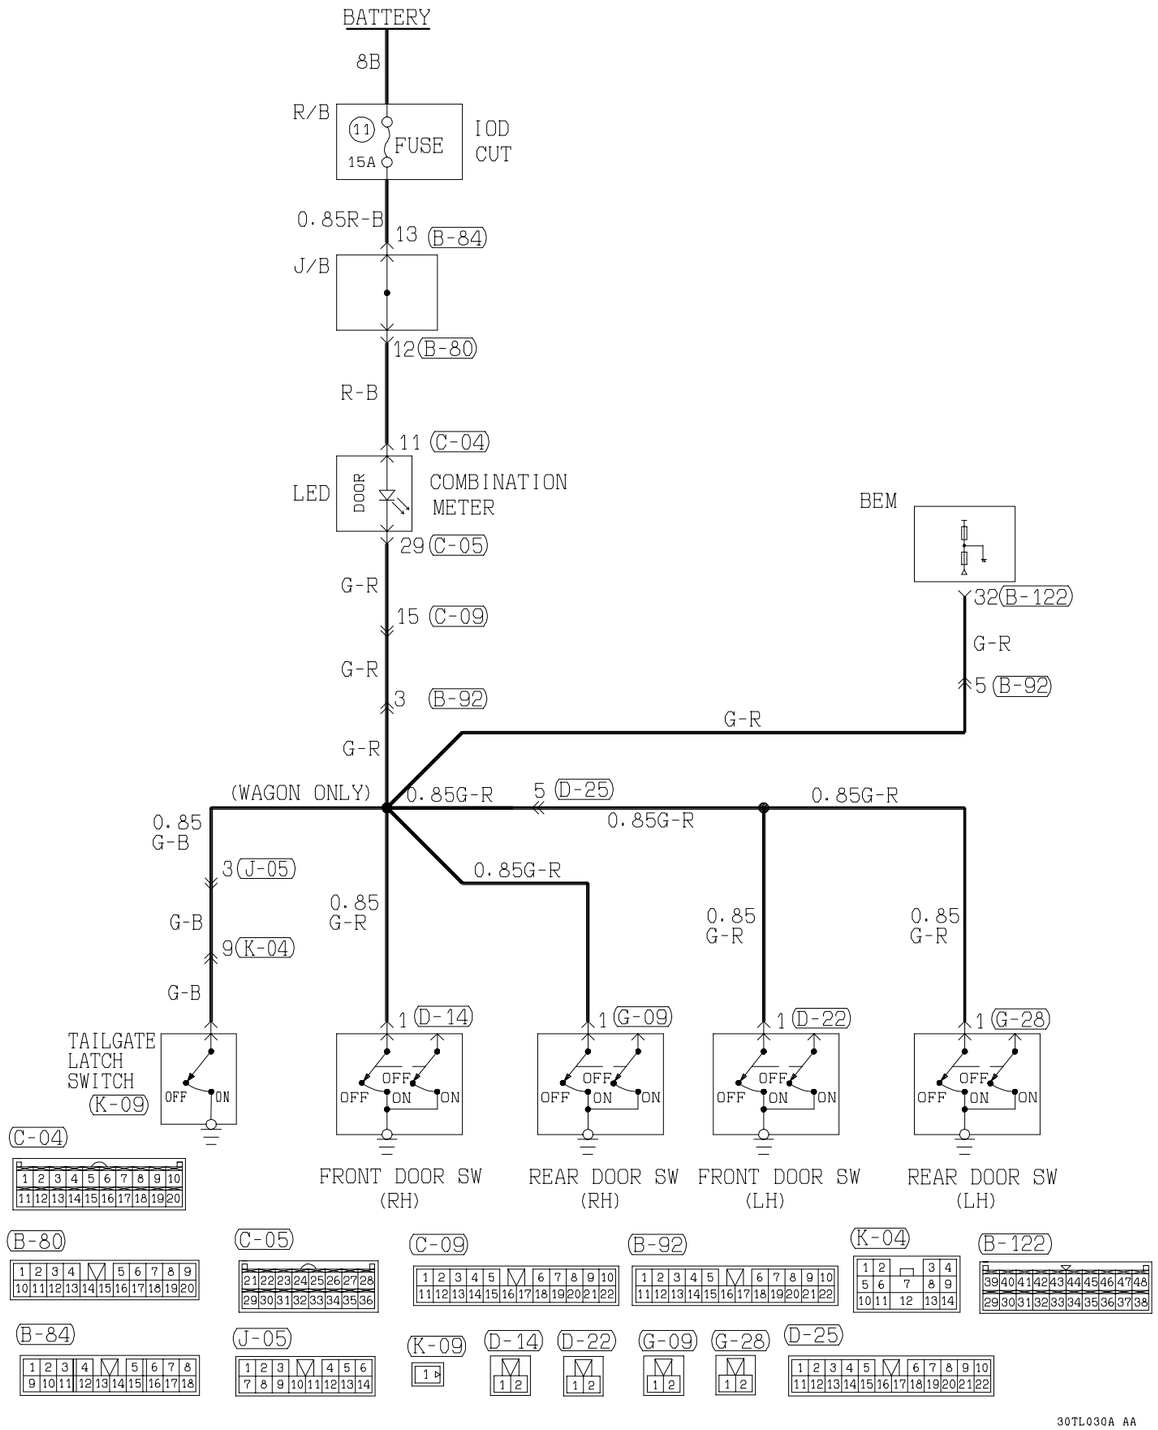

30TL030A AA

POWER WINDOWS <ALL MODELS>

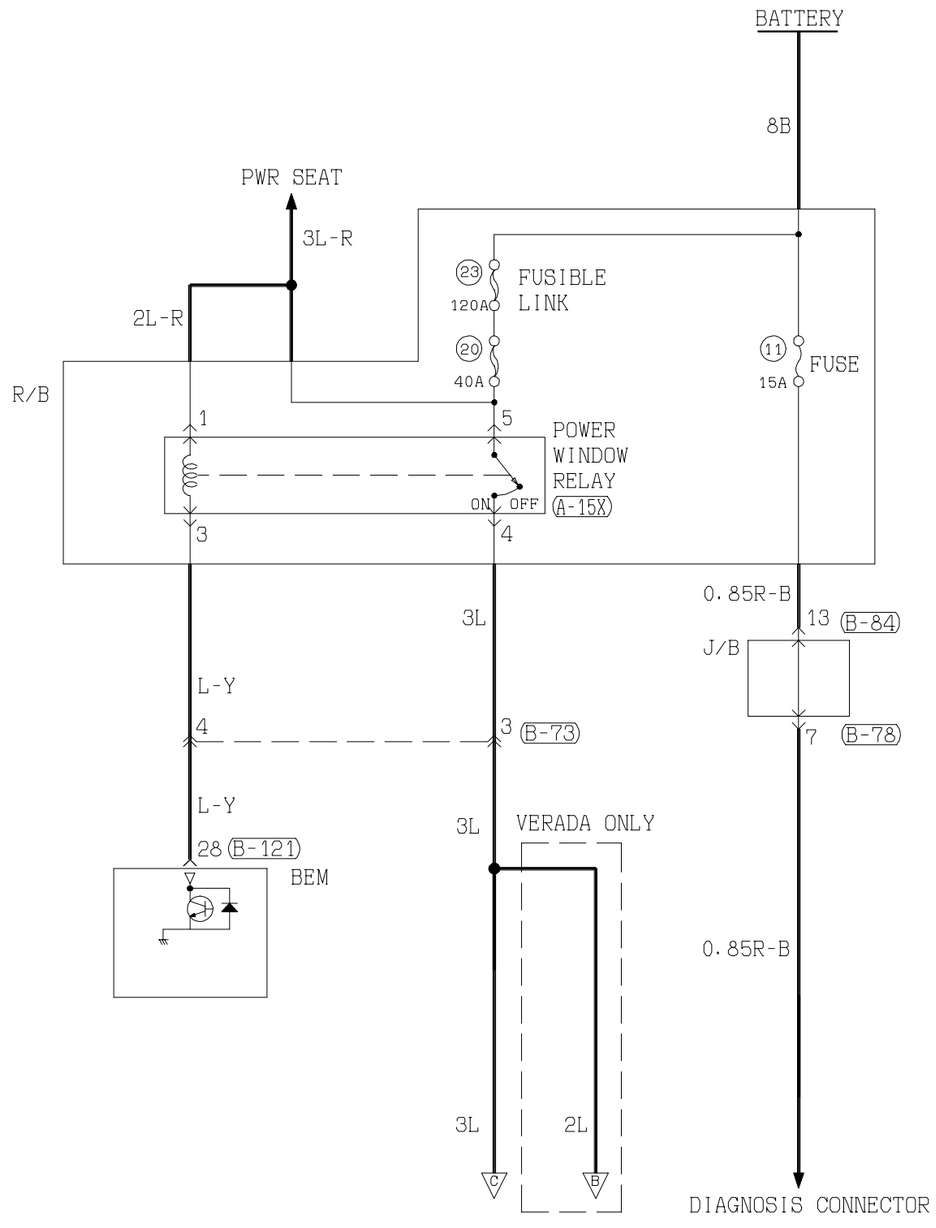



POWER WINDOWS (CONTINUED) <VERADA>

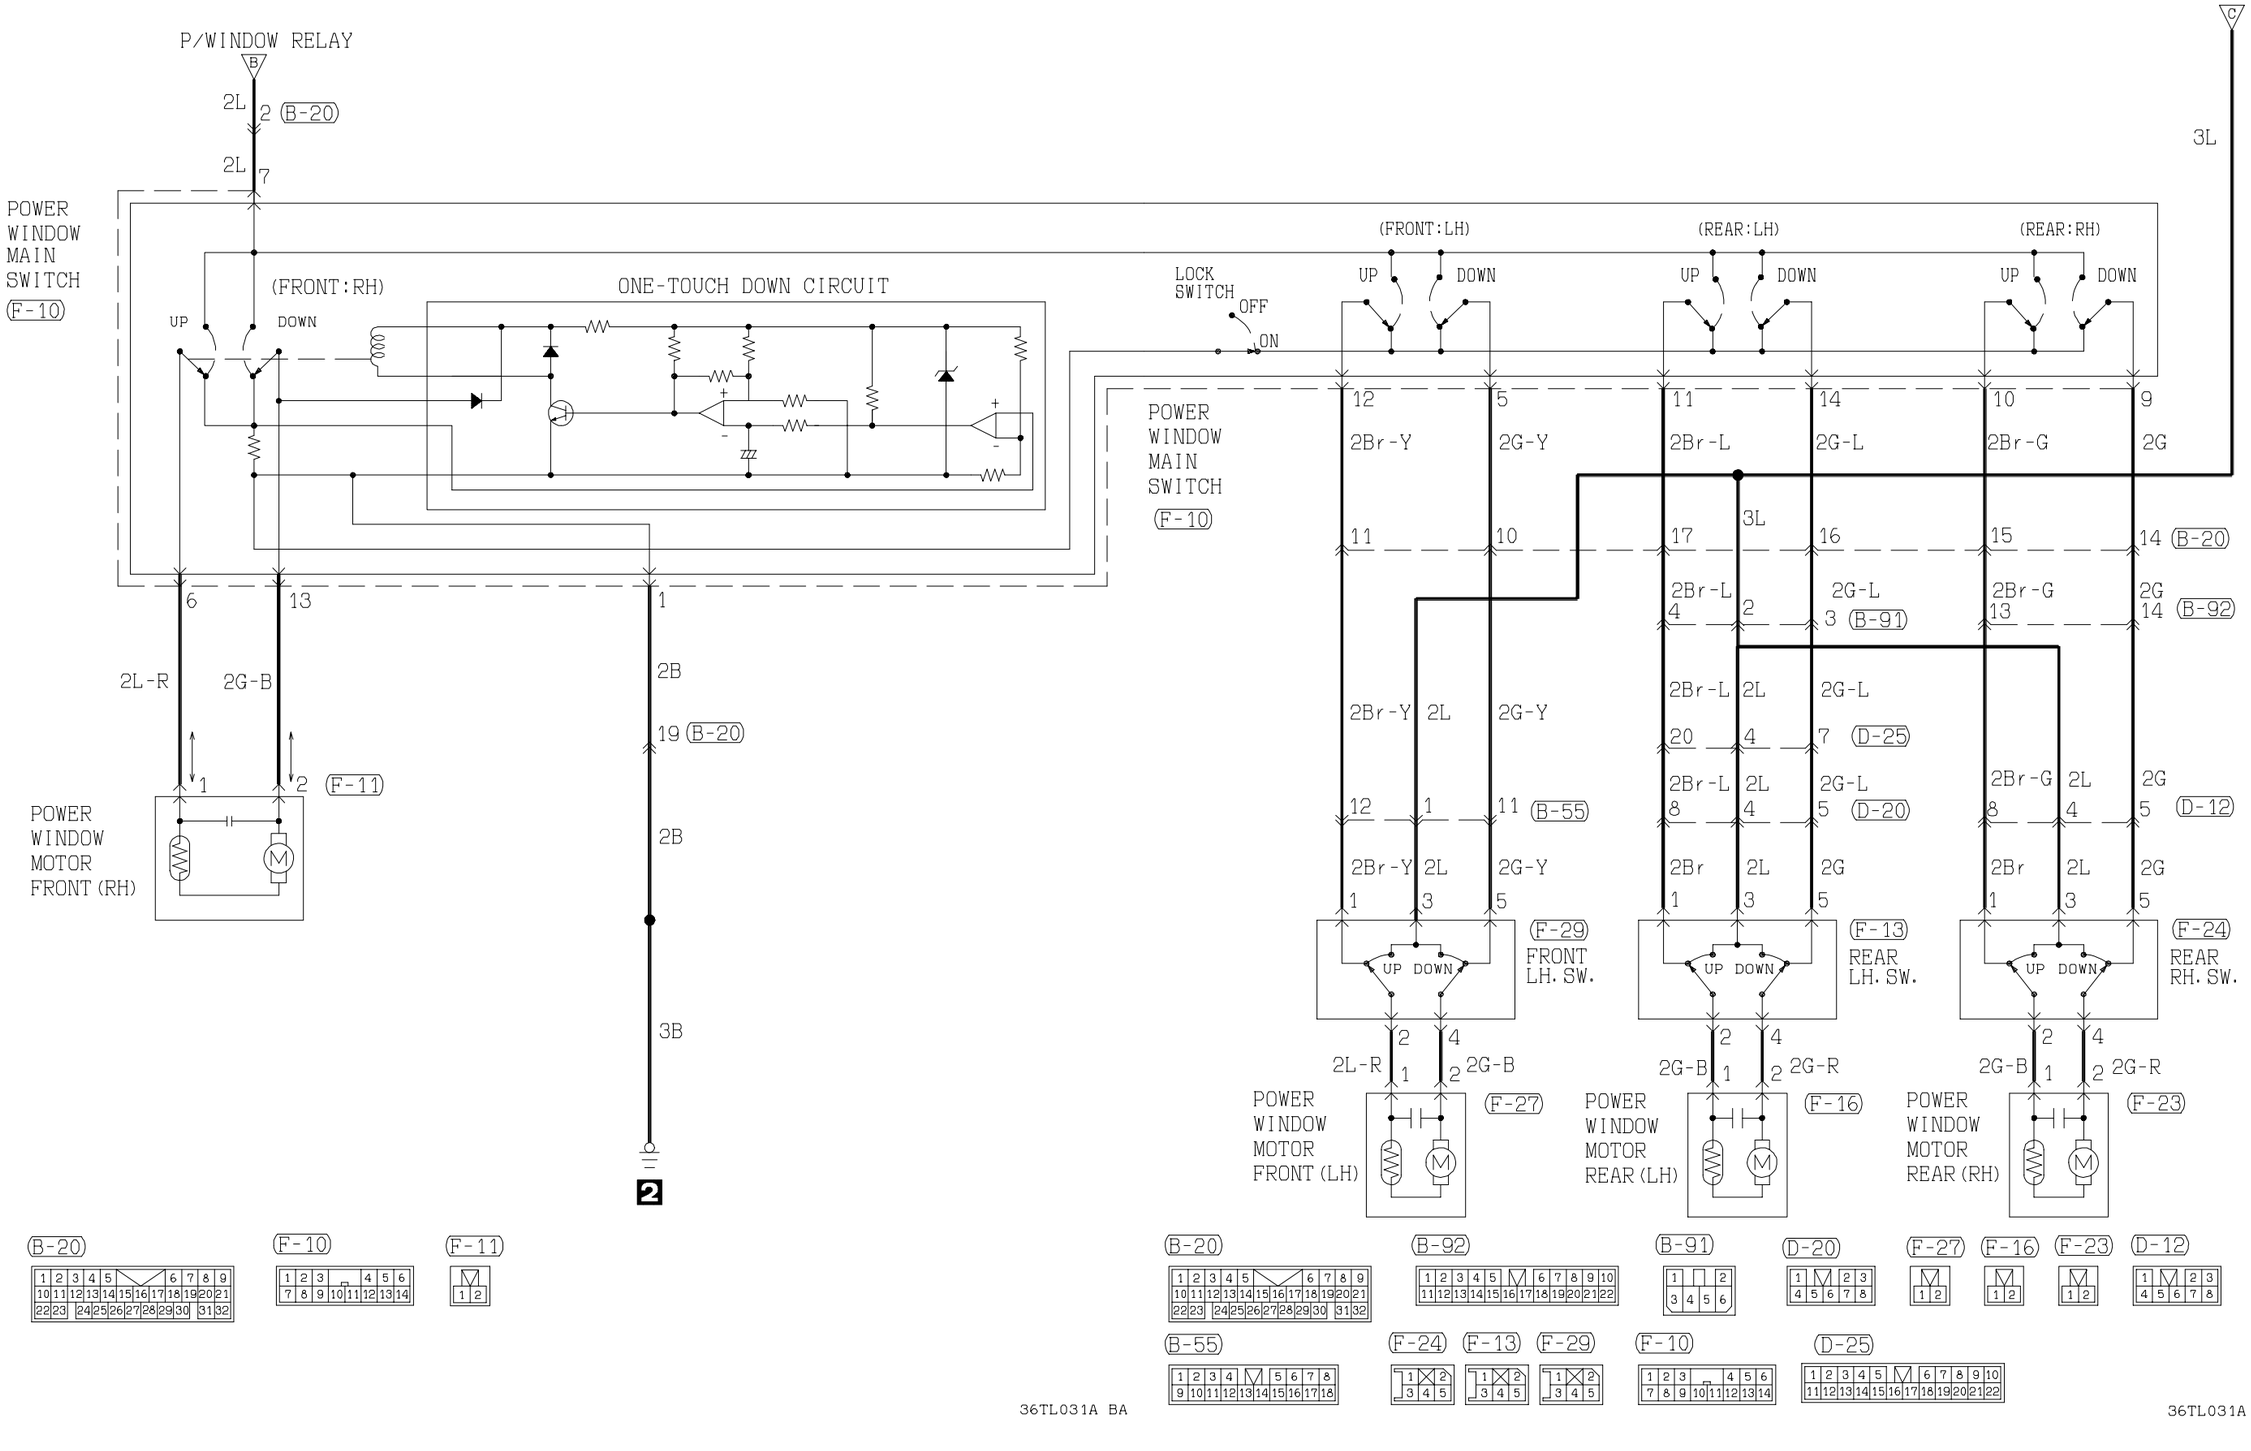

B-20

F-10

F-11

B-20

B-92

B-91

D-20

F-27

F-16

F-23

D-12

B-55

F-24

F-13

F-29

F-10

D-25

36TL031A BA

36TL031A BB

POWER WINDOWS (CONTINUED) <ALL MODELS EXCEPT VERADA>

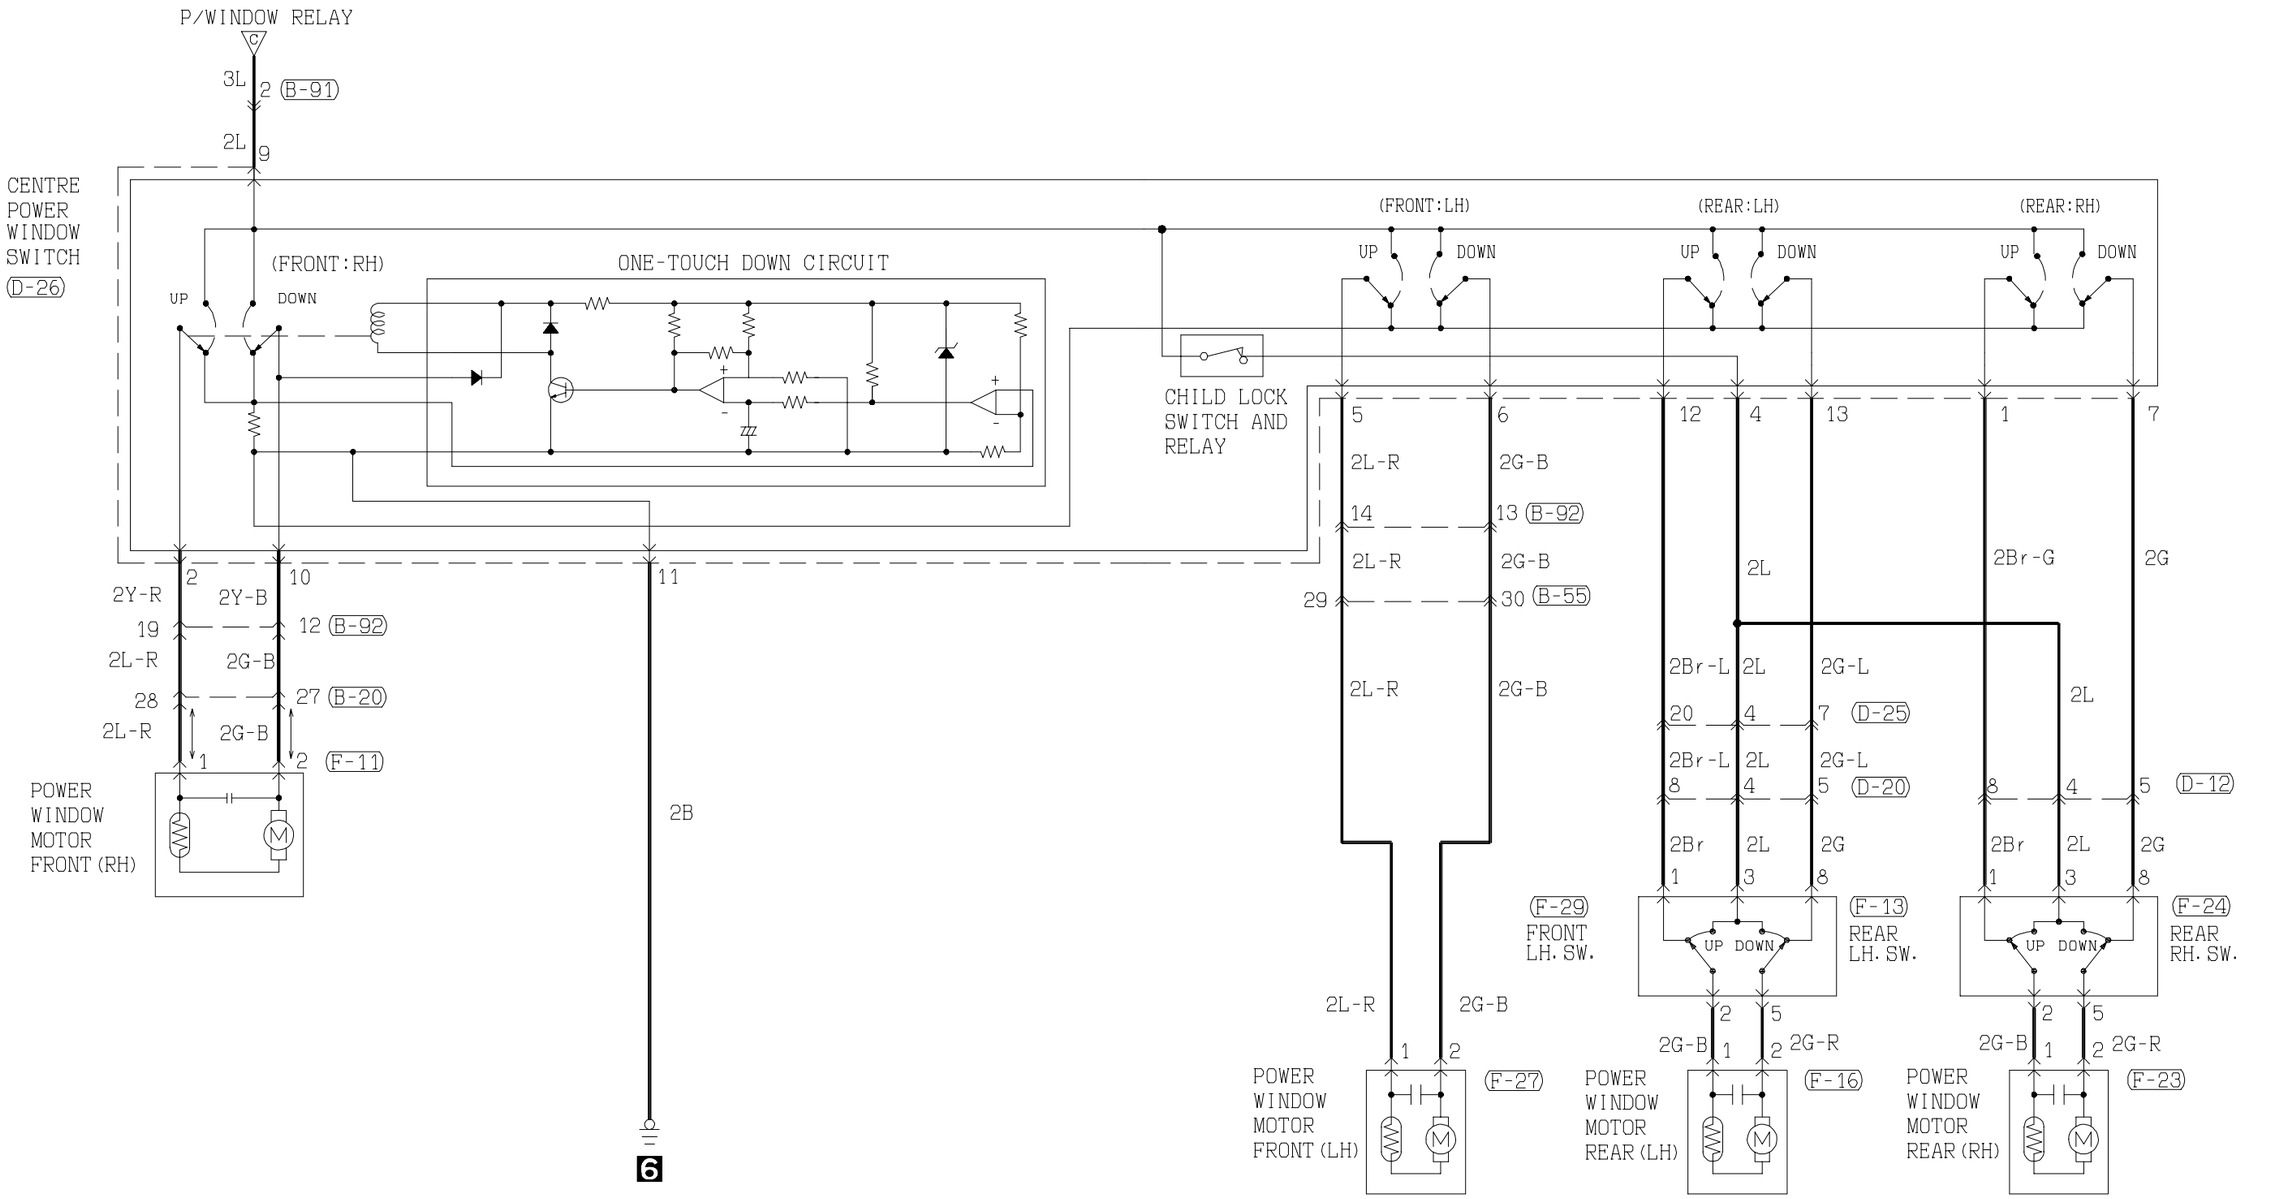

B-20



F-10



F-11

B-20



B-92



B-91

D-20



F-27

F-16

F-23

D-12



B-55



F-24



F-13



F-29

D-26



D-25



36TL031A CA

36TL031A CB

CENTRAL DOOR LOCKING AND KEYLESS ENTRY <ALL>

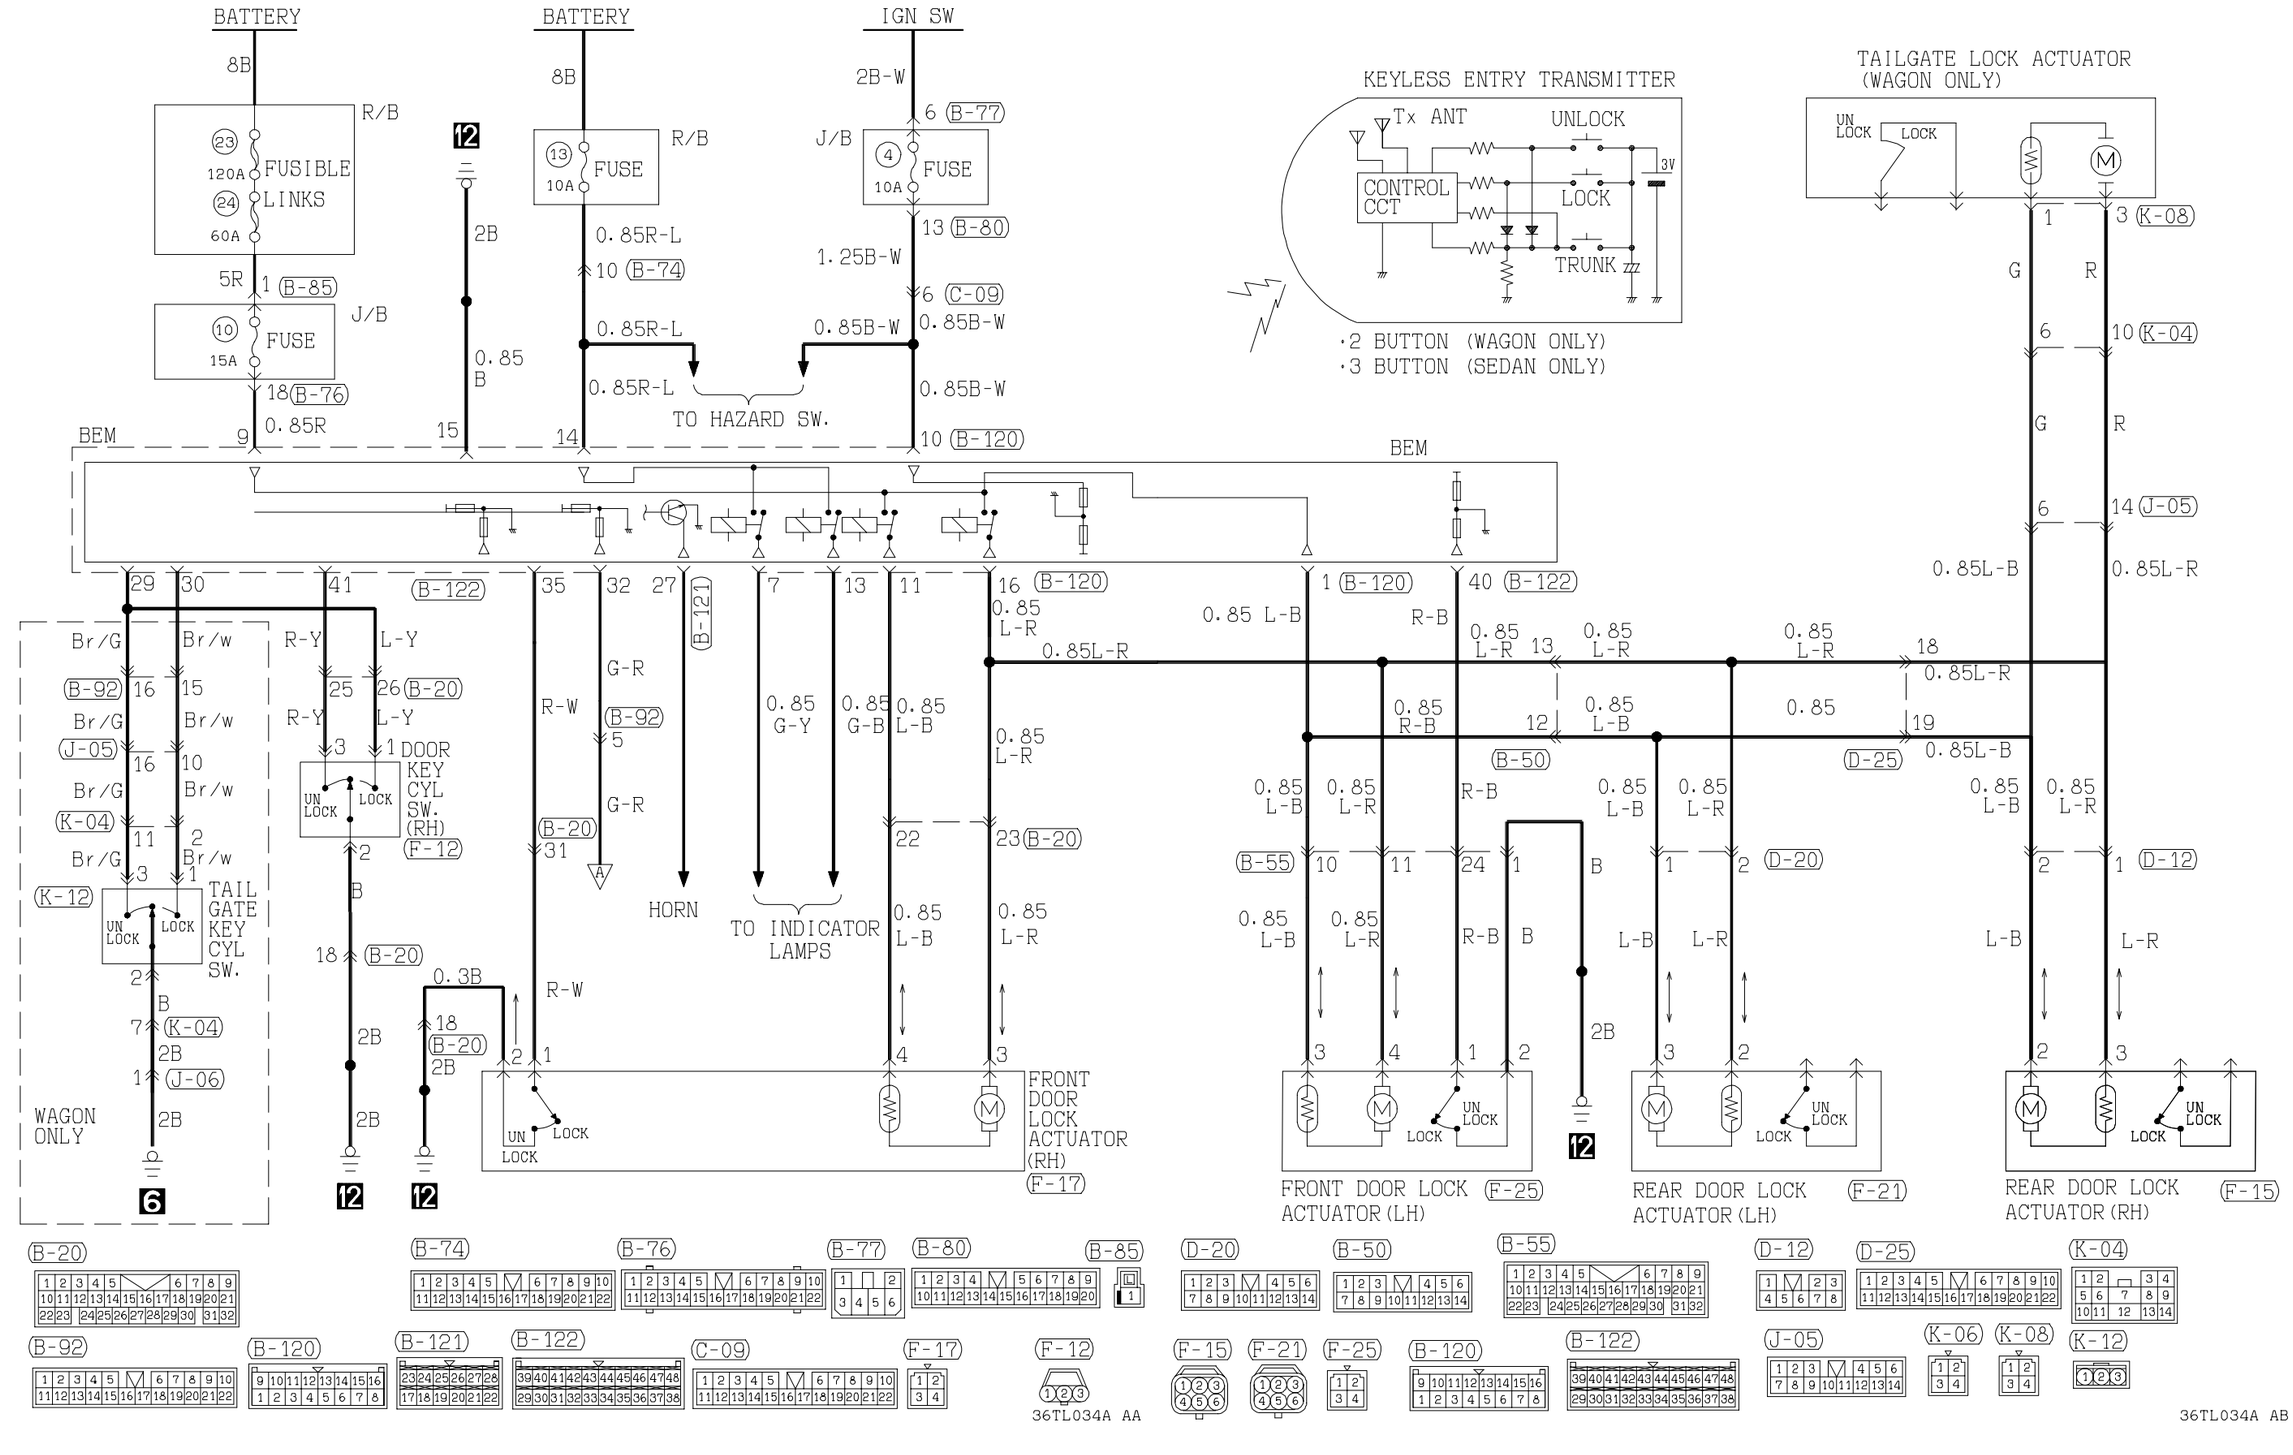

CENTRAL DOOR LOCKING AND KEYLESS ENTRY <ALL> (CONTINUED)

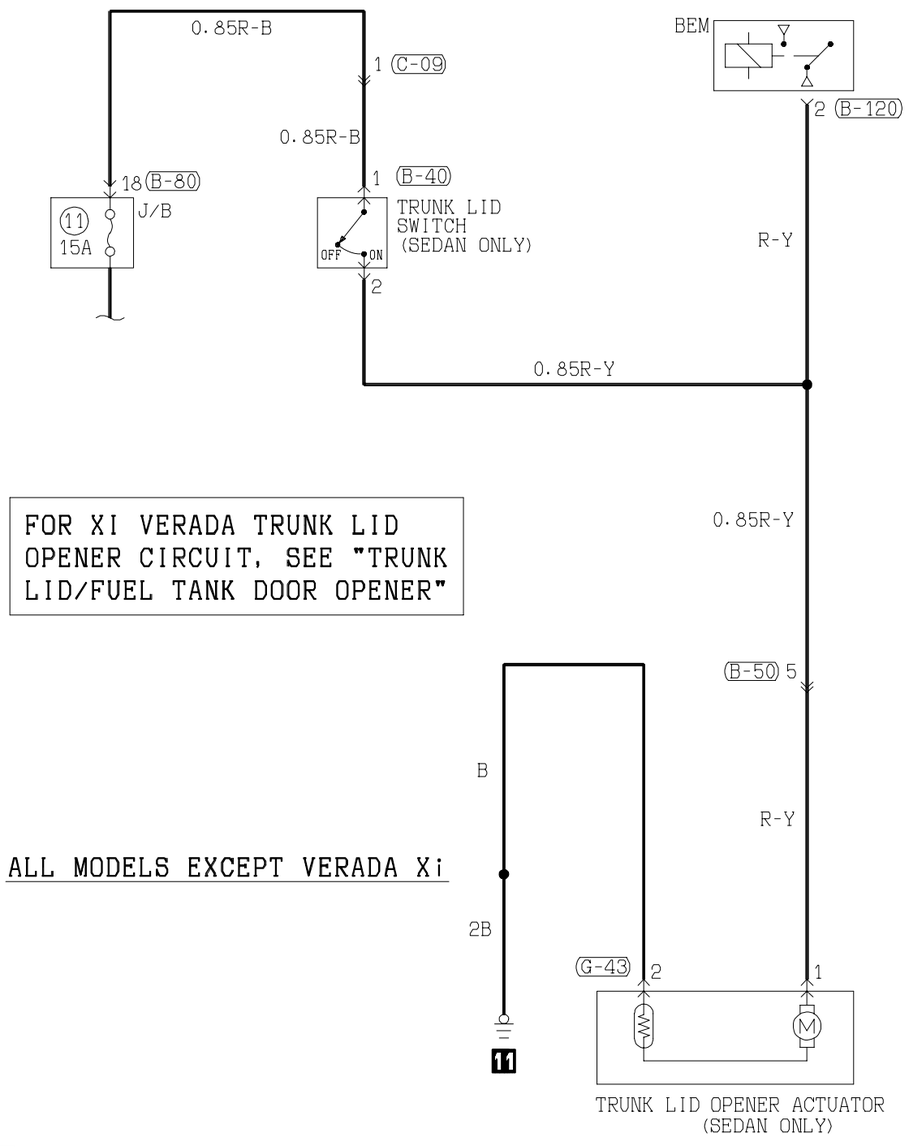

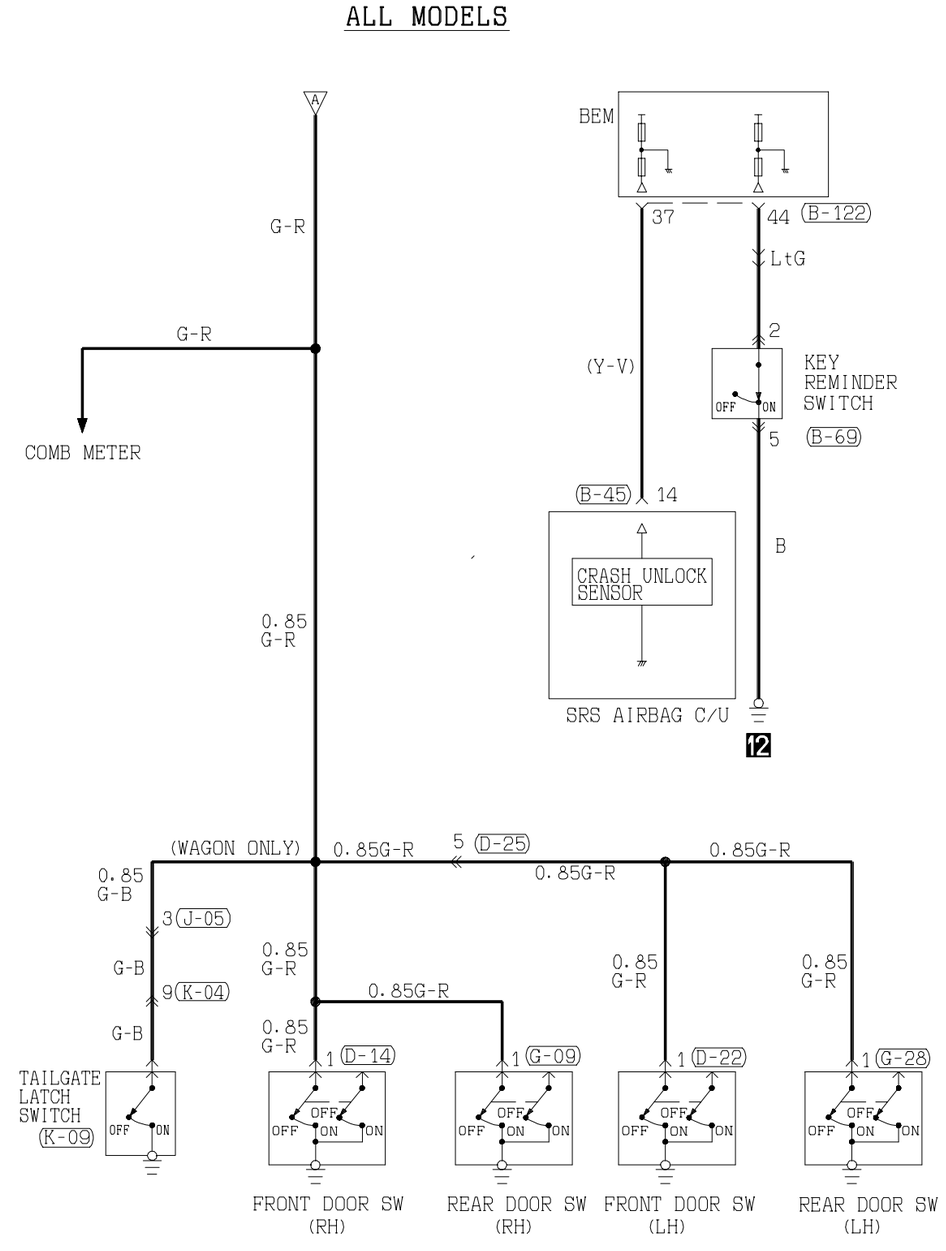



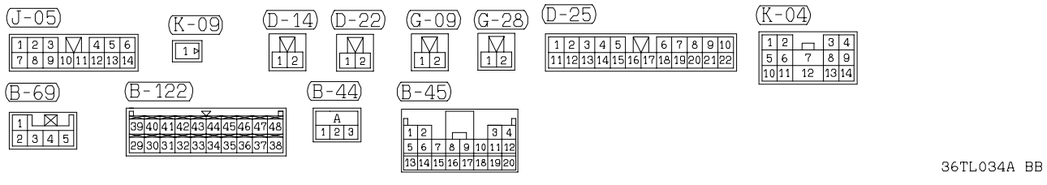

36TL034A BA

36TL034A BB

TRUNK LID OPENER
<ALL MODELS EXCEPT VERADA Xi>

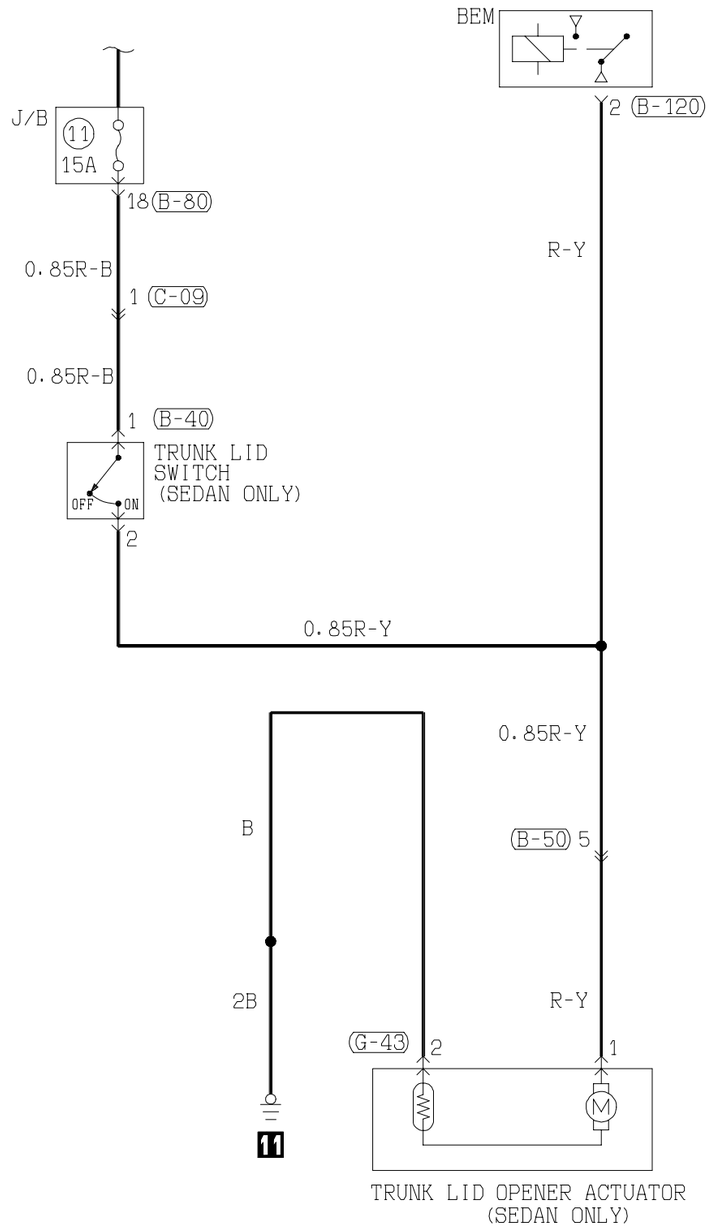



TRUNK LID/FUEL TANK DOOR OPENER <VERADA Xi ONLY>

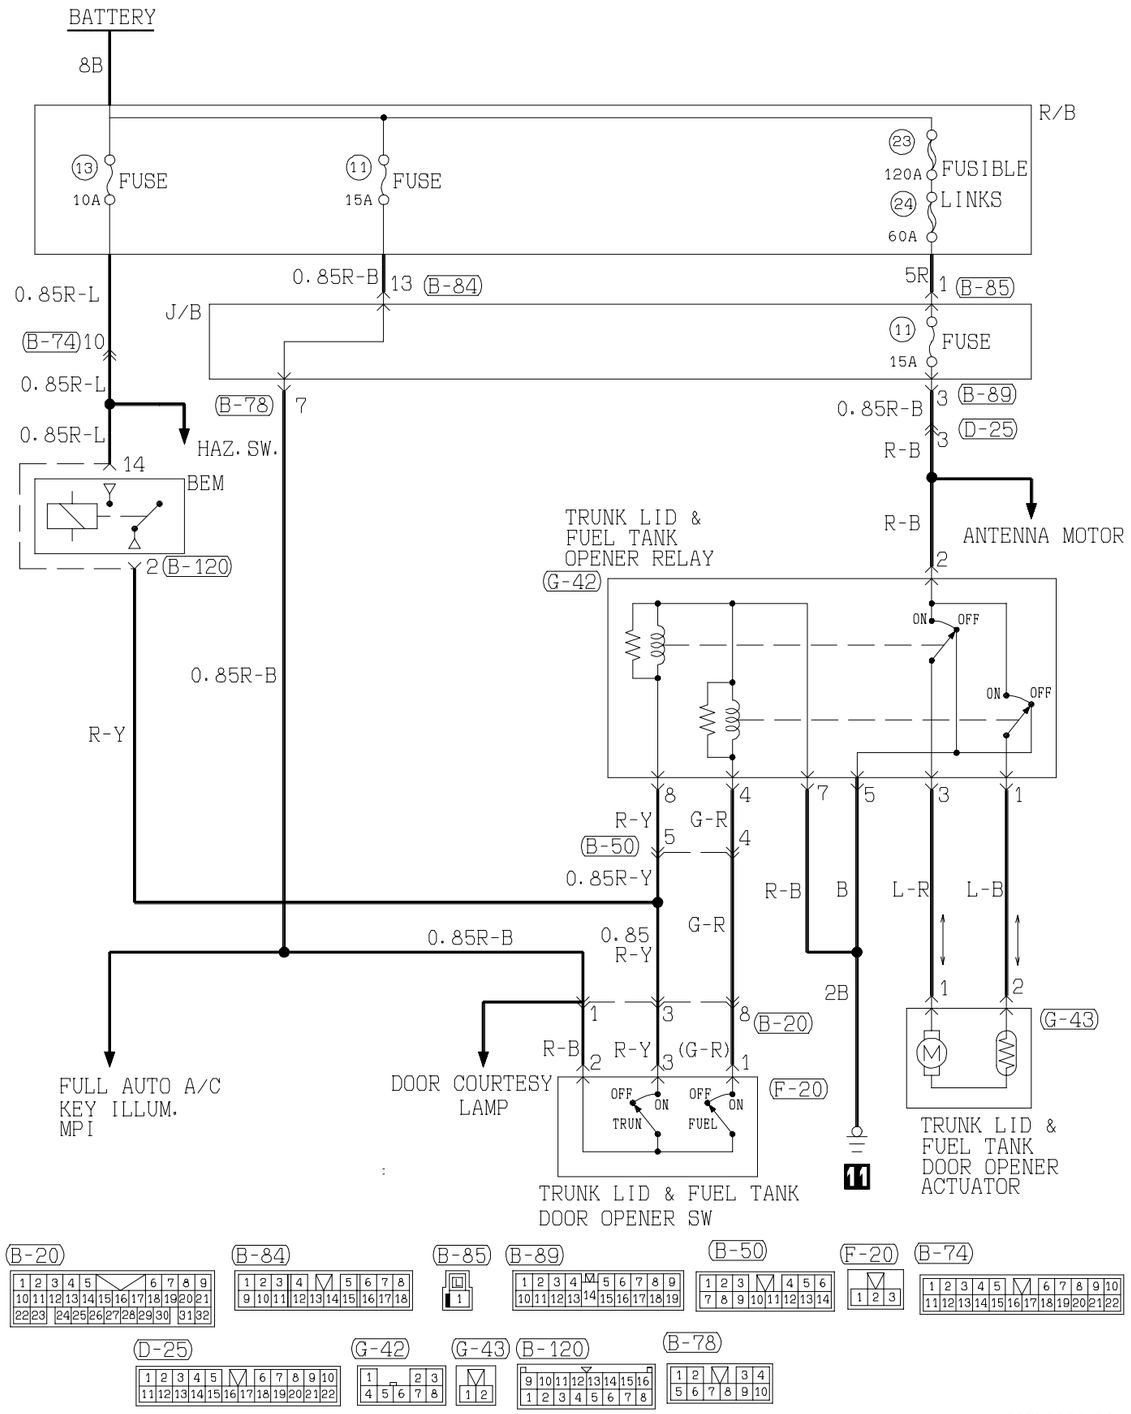

36TL032A BA

FULL AUTOMATIC AIR CONDITIONING

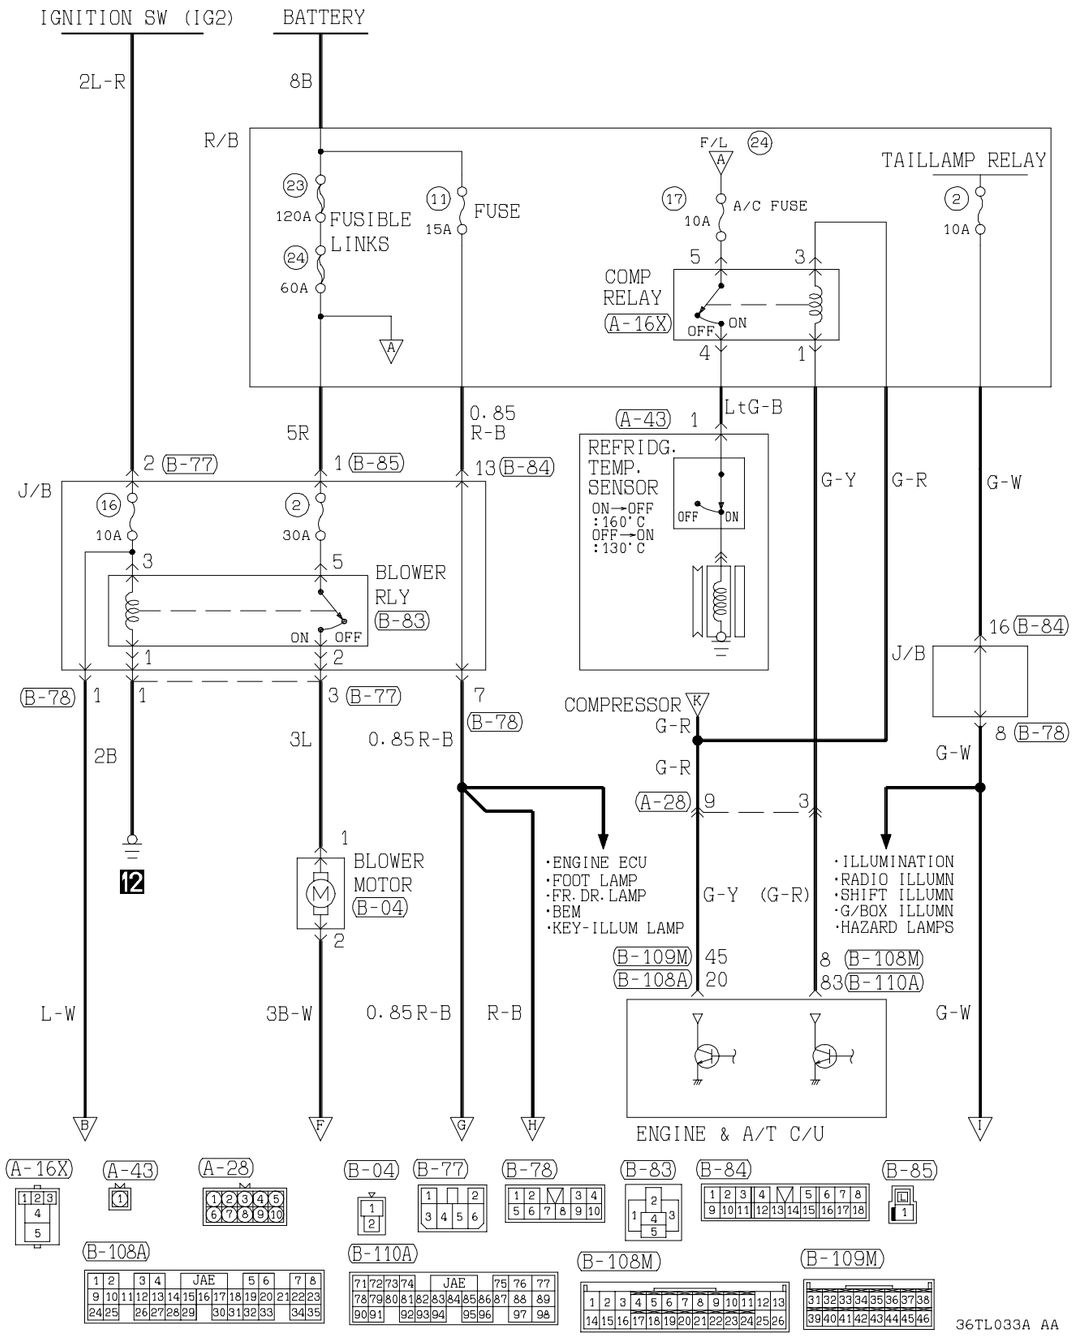

FULL AUTOMATIC AIR CONDITIONING (CONTINUED)

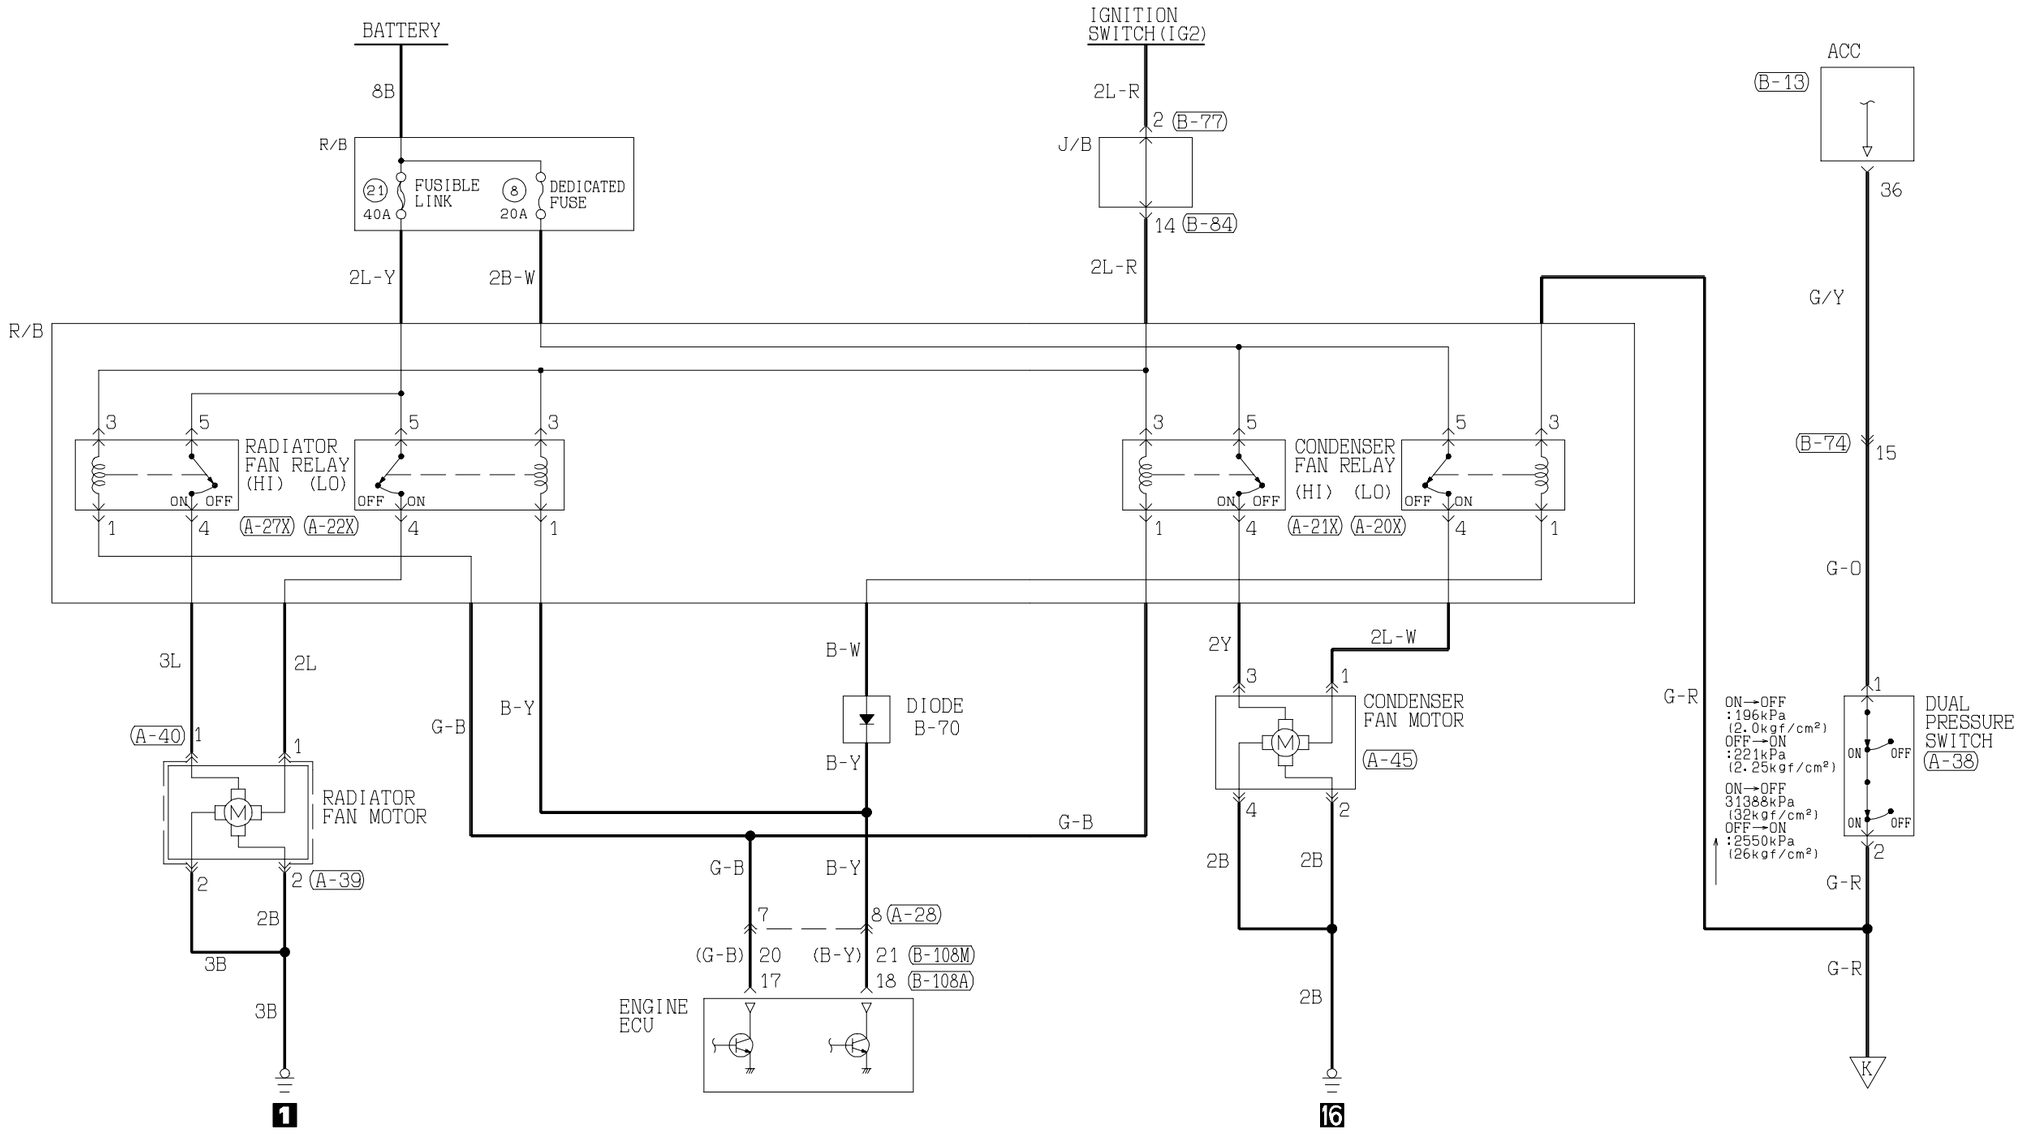

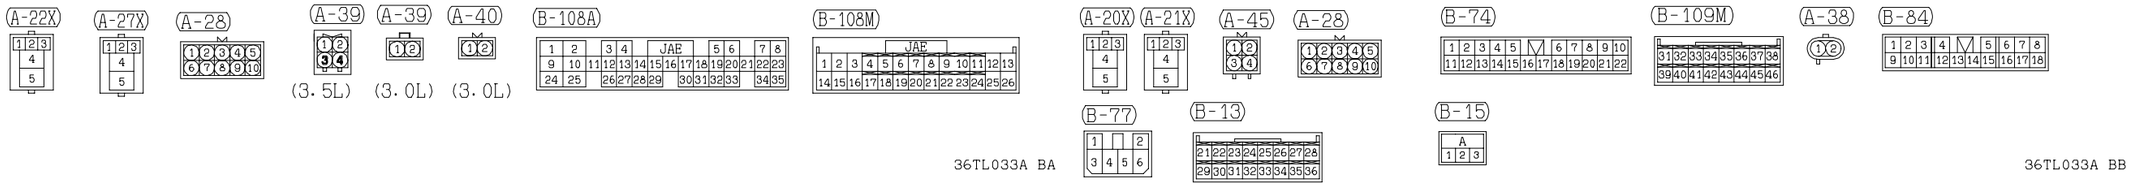

Main Index
54 Index
54C Index
A
B
C
D
E
F
G
H
J
K

FULL AUTOMATIC AIR CONDITIONING (CONTINUED)

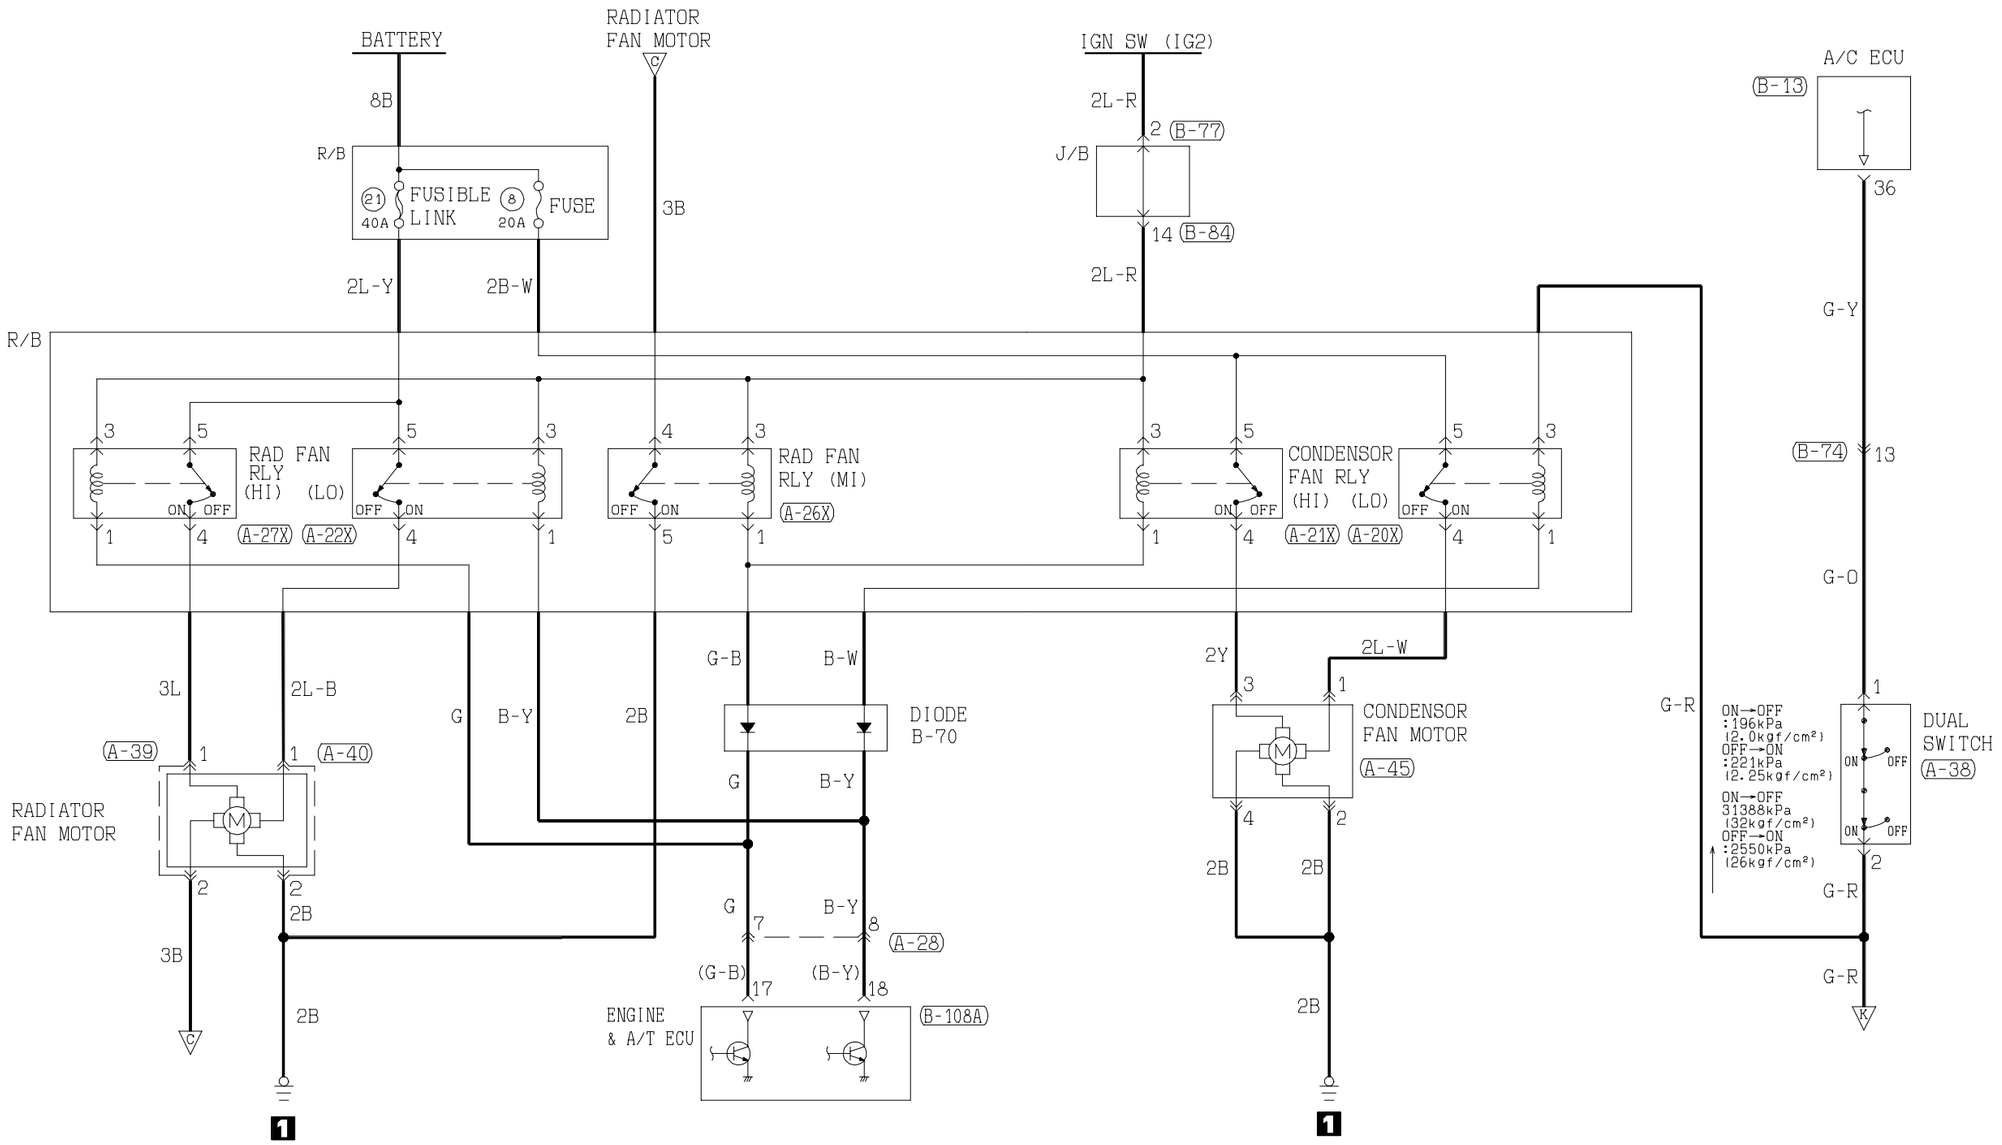

36TL033A CA

36TL033A CB

FULL AUTOMATIC AIR CONDITIONING (CONTINUED)

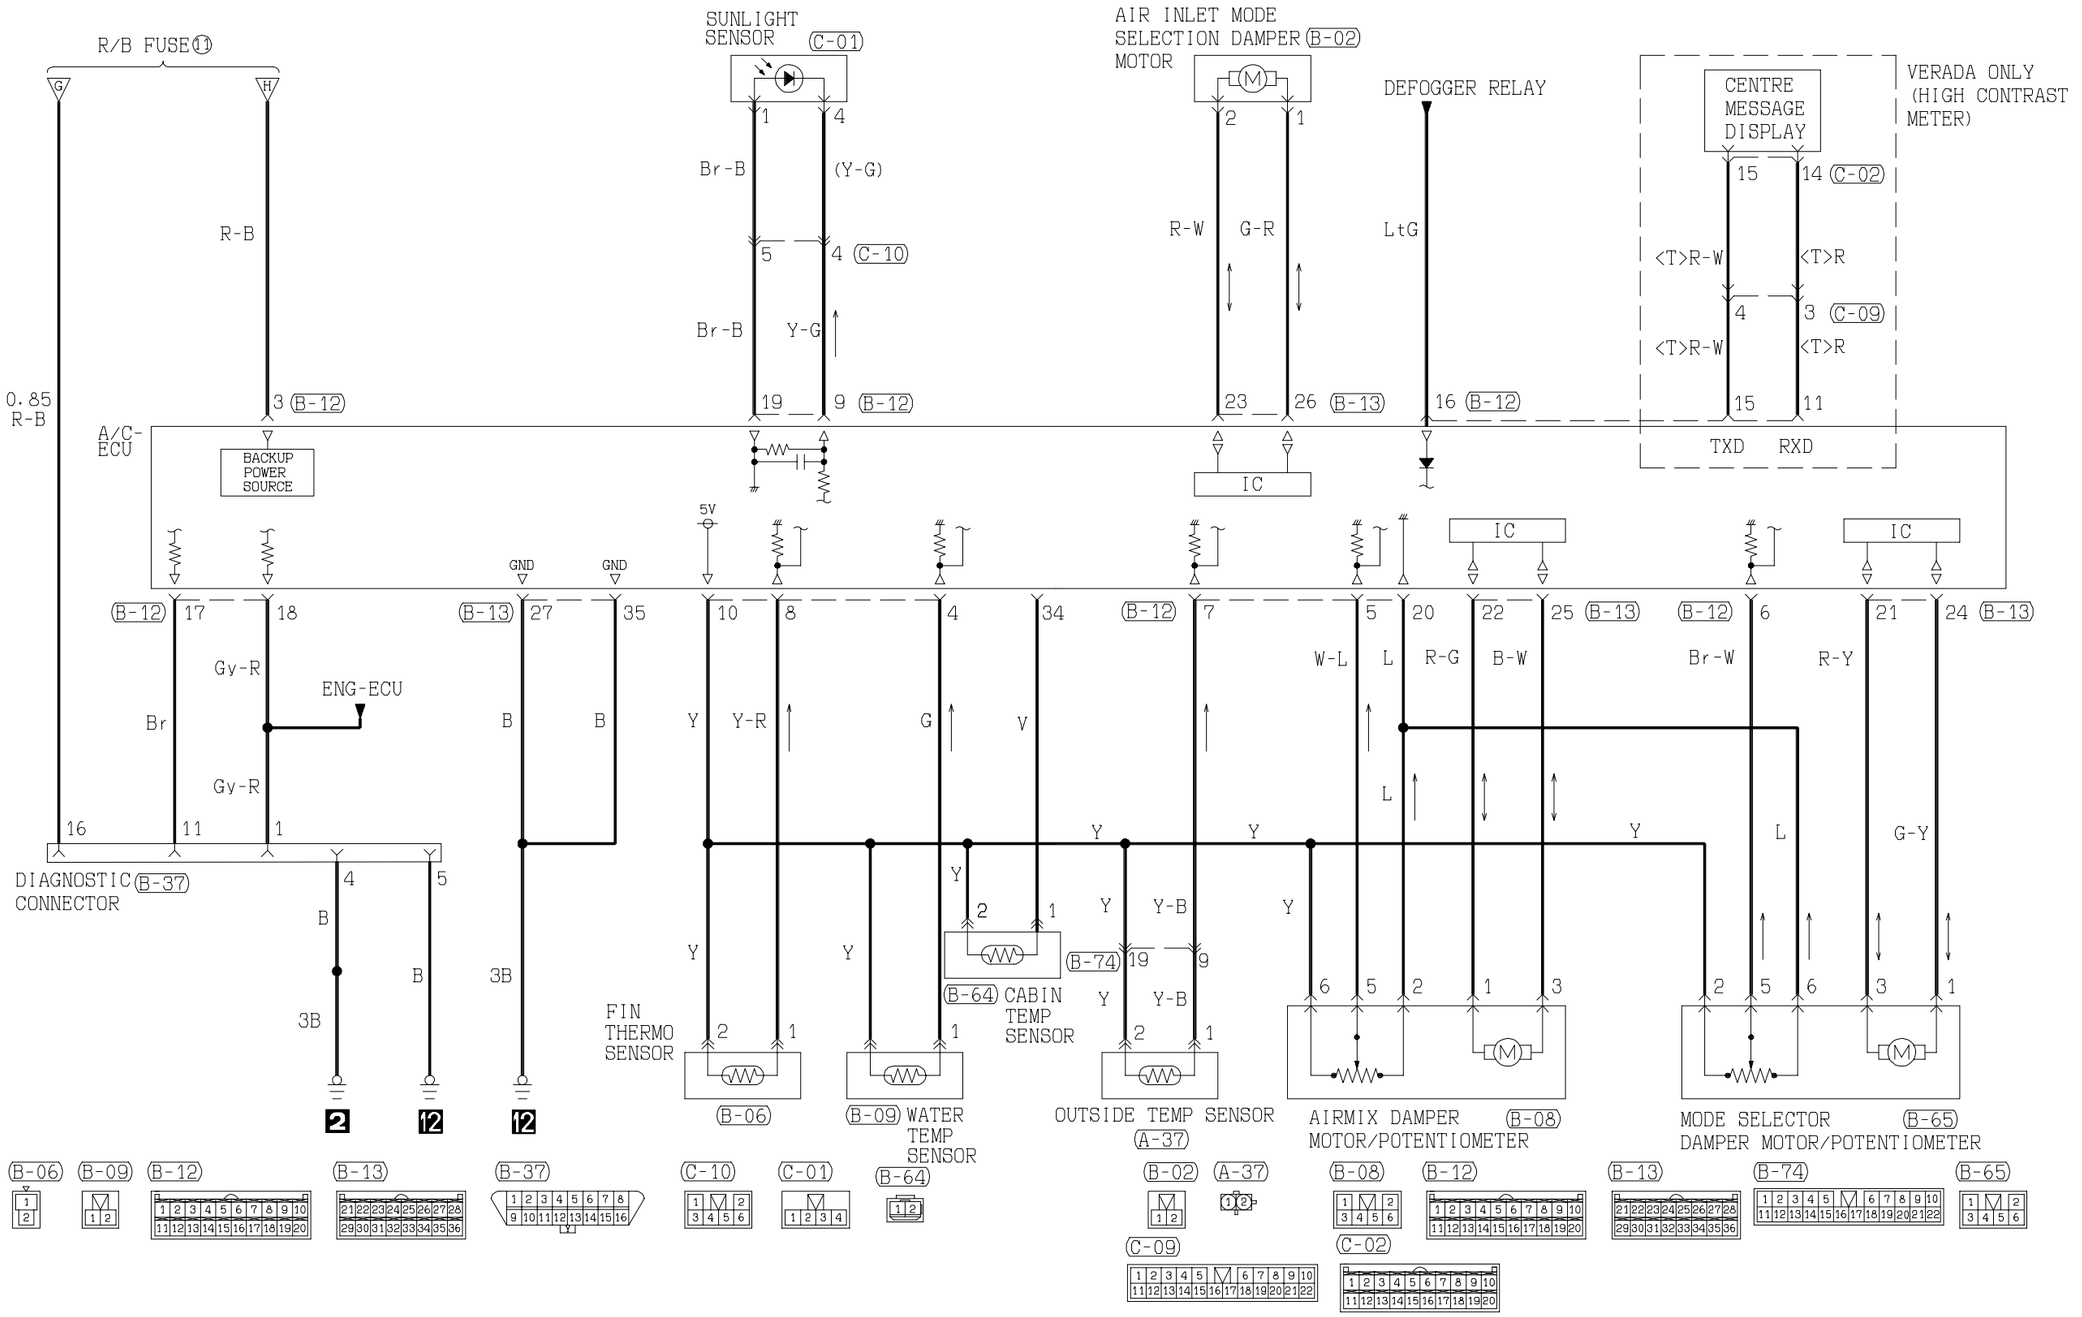

36TL033A DA

36TL033A DB

WINDSHIELD WIPER/WASHER <FRONT>

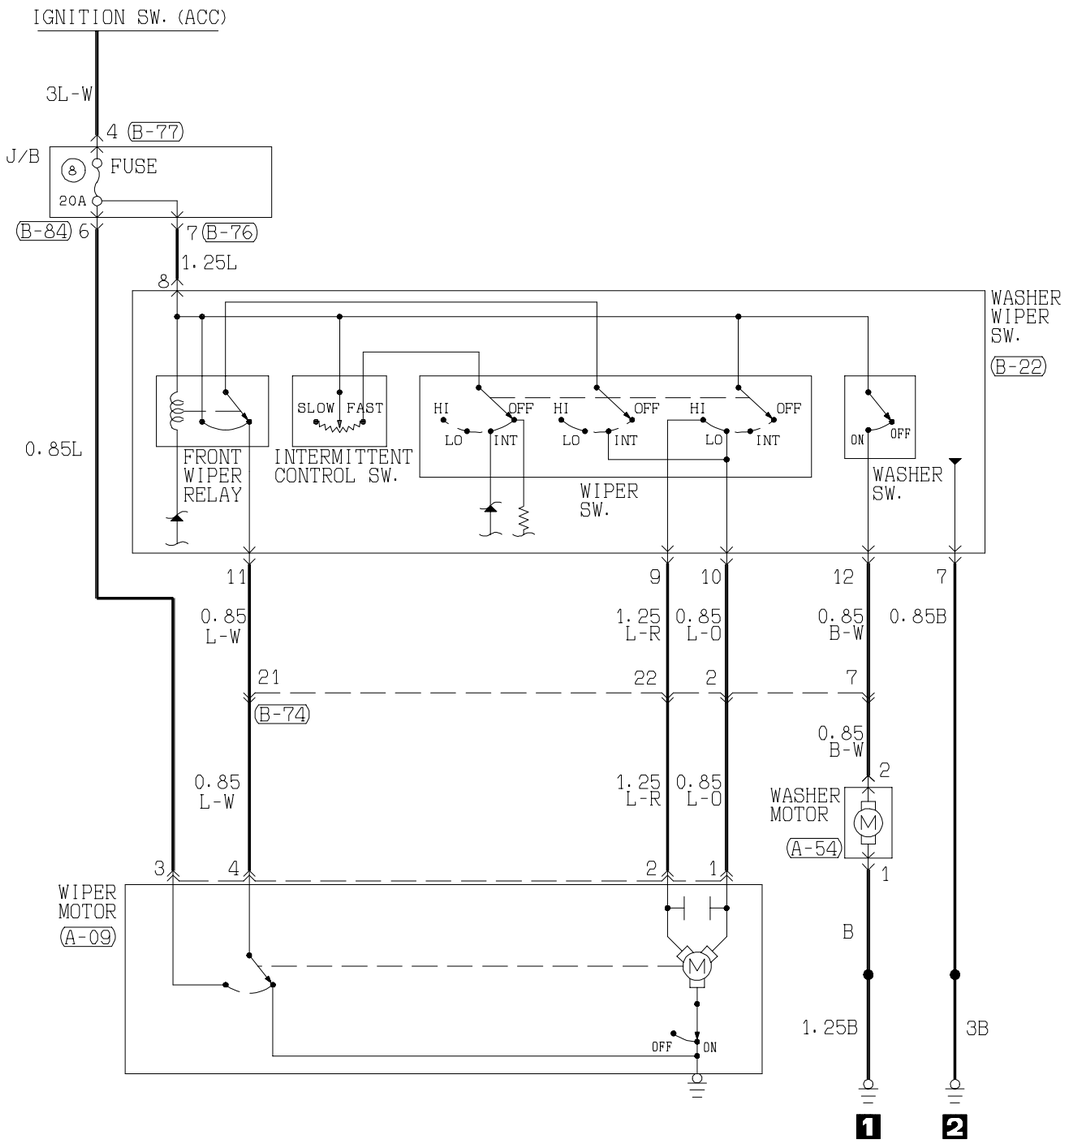



36TL035A AA

WINDSHIELD WIPER/WASHER <REAR>

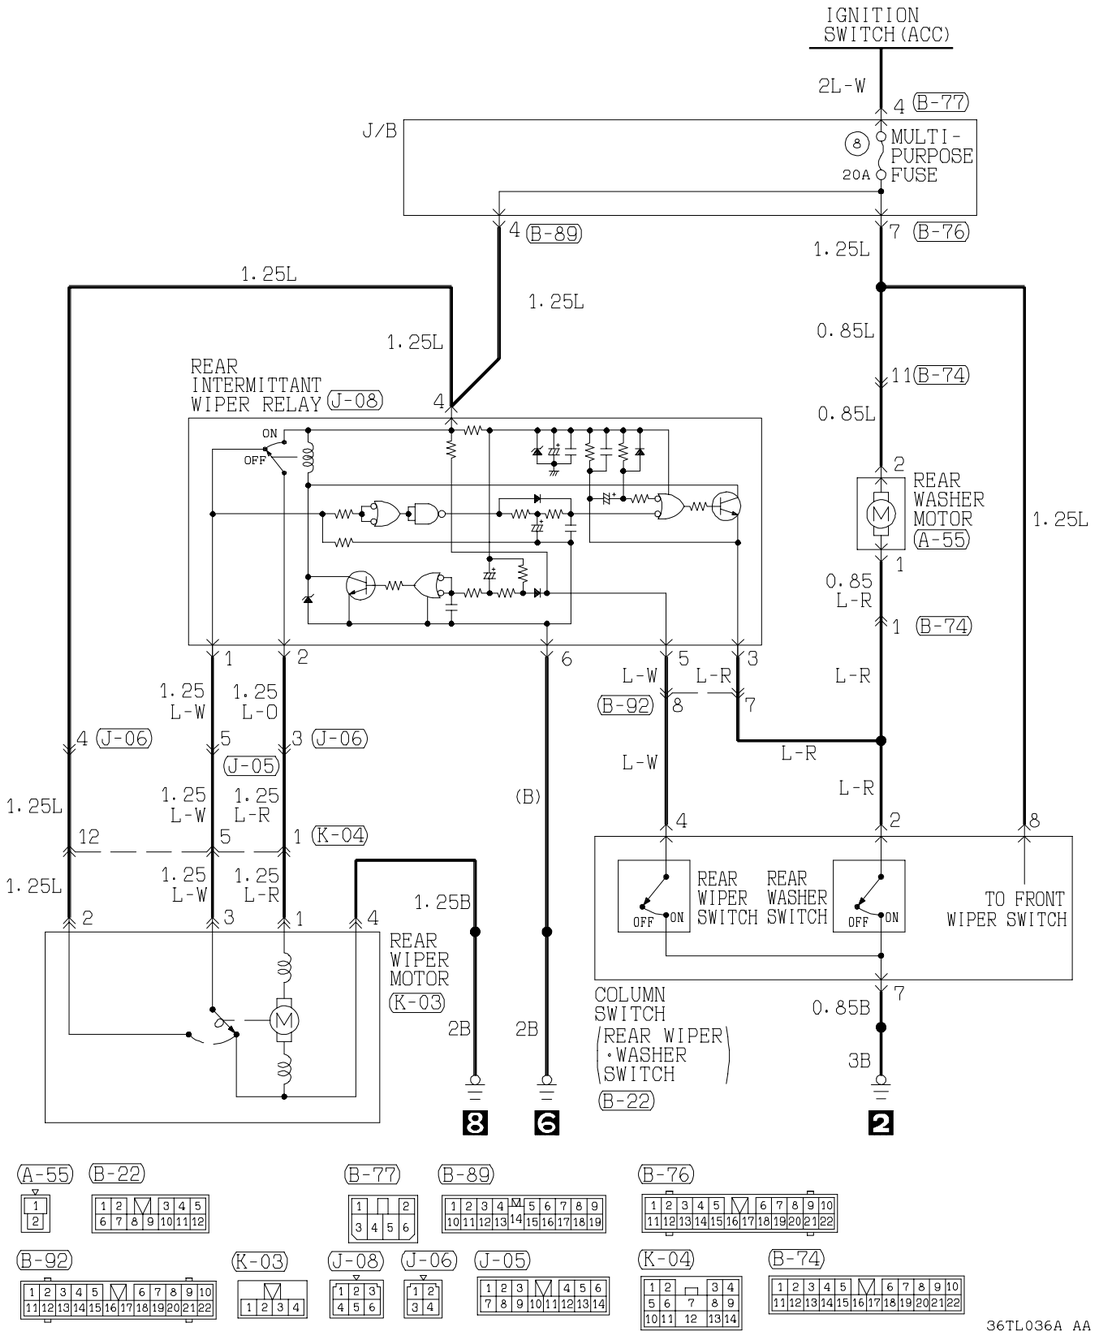

DEFOGGER

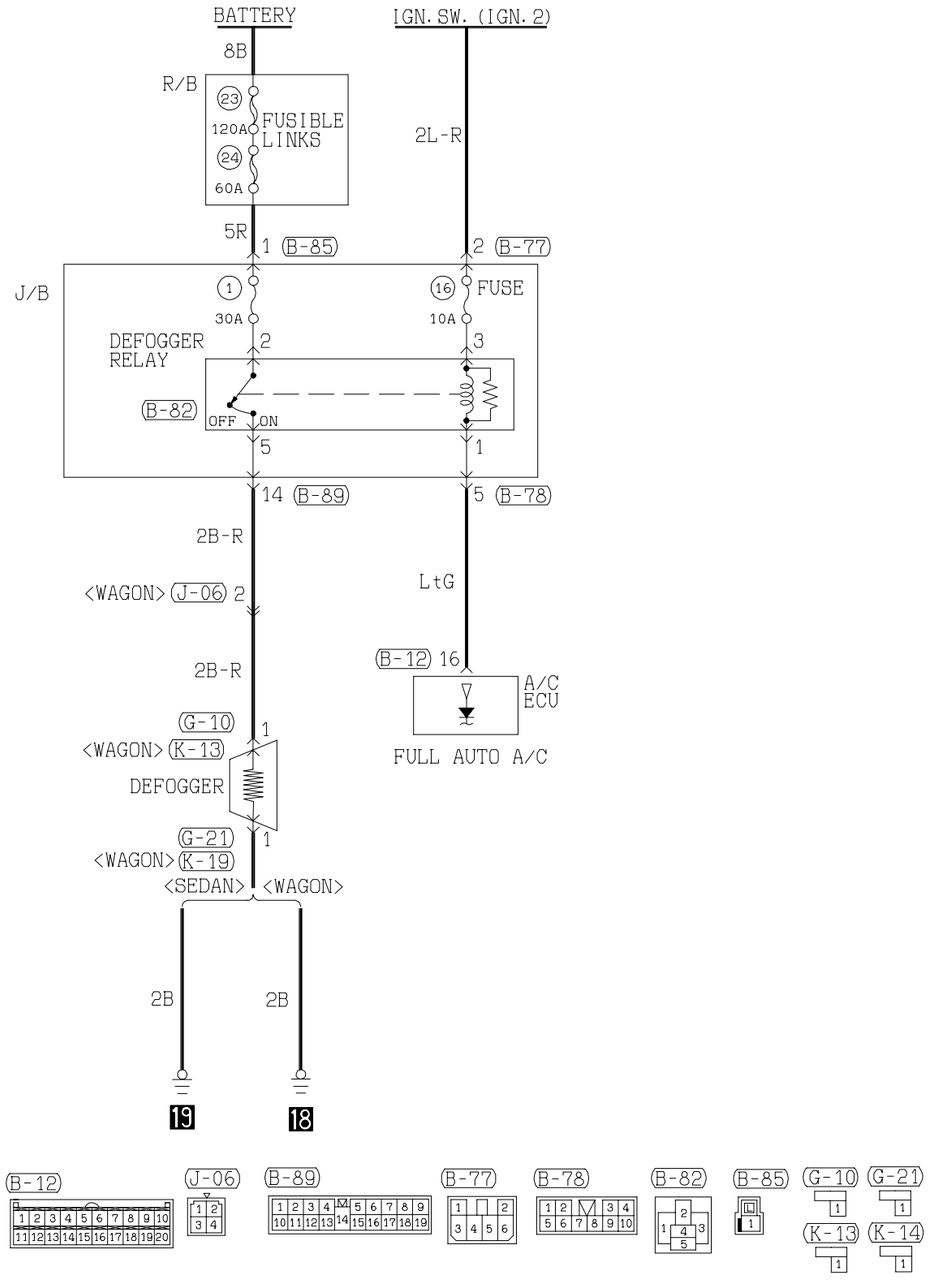

36TL037A AA

REMOTE CONTROL MIRROR

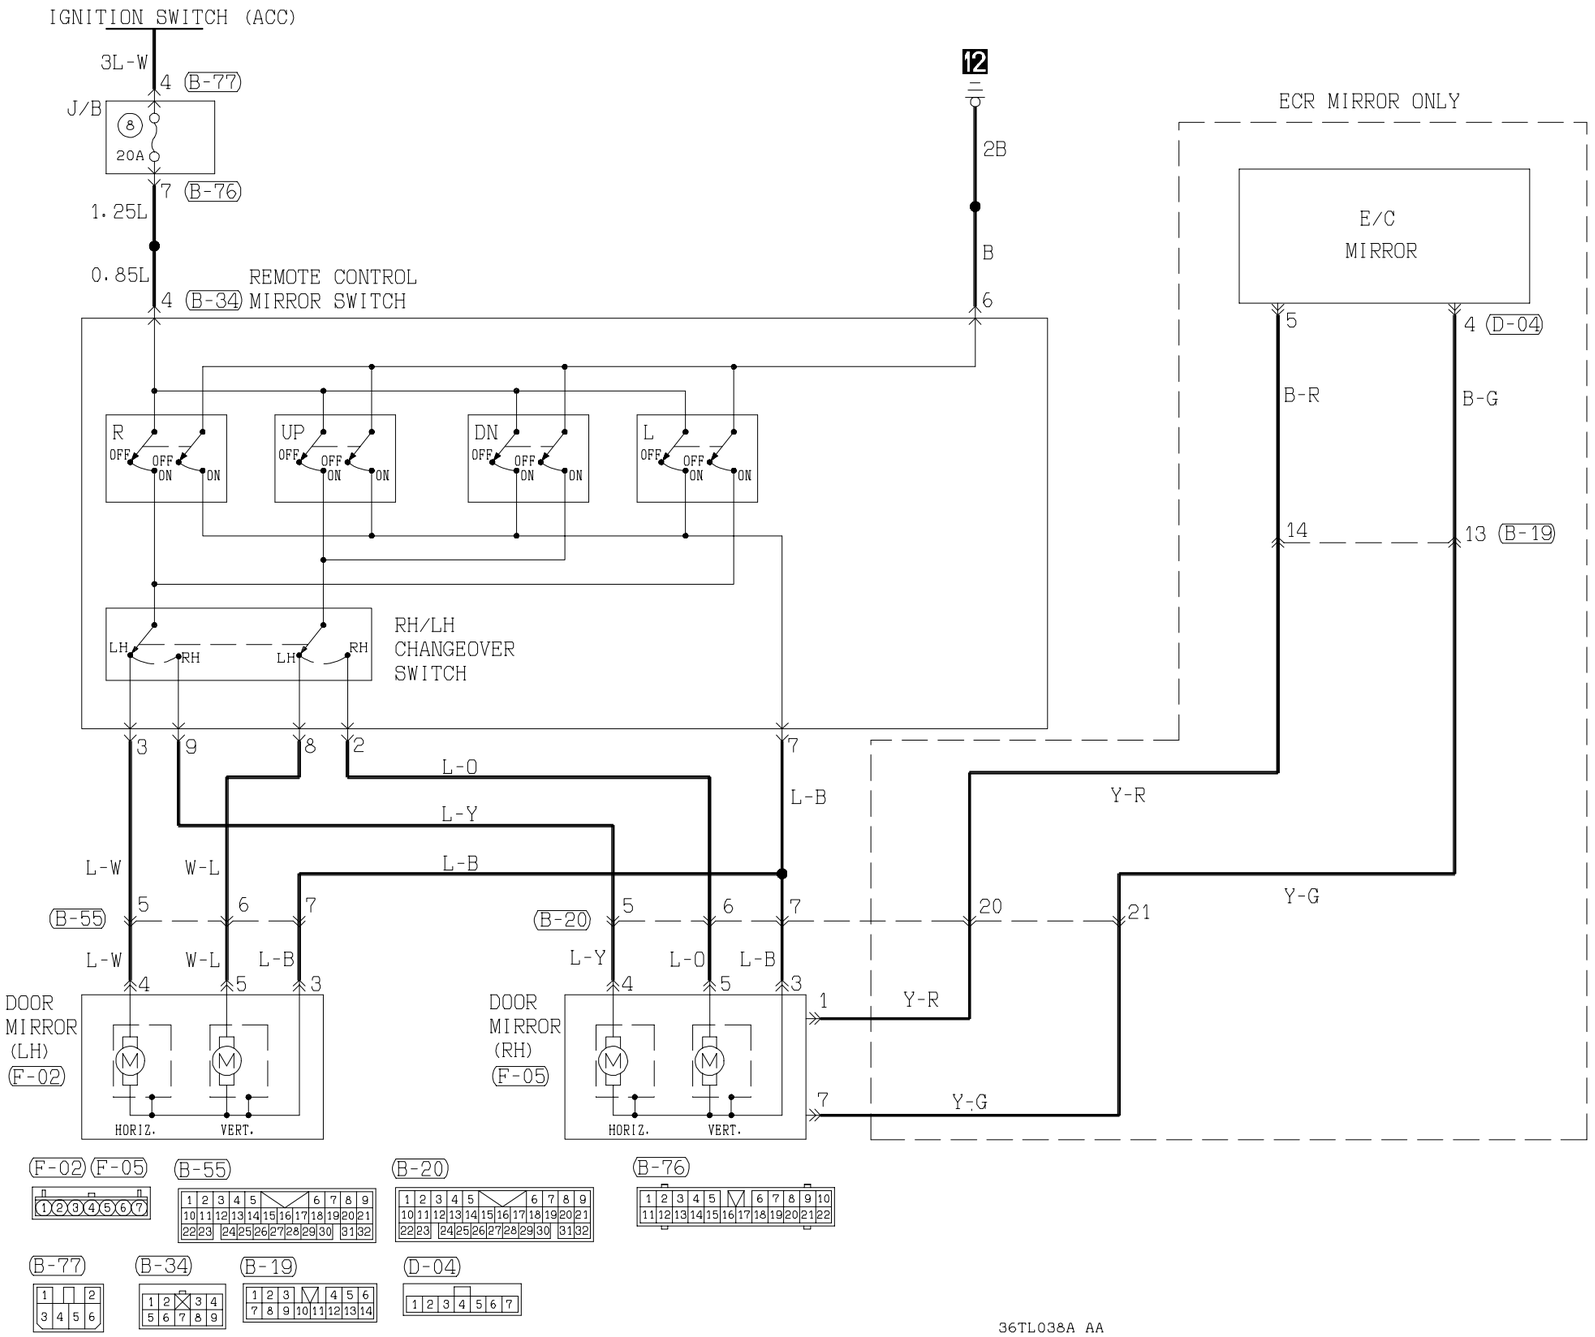

36TL038A AA

36TL038A AB

CLOCK

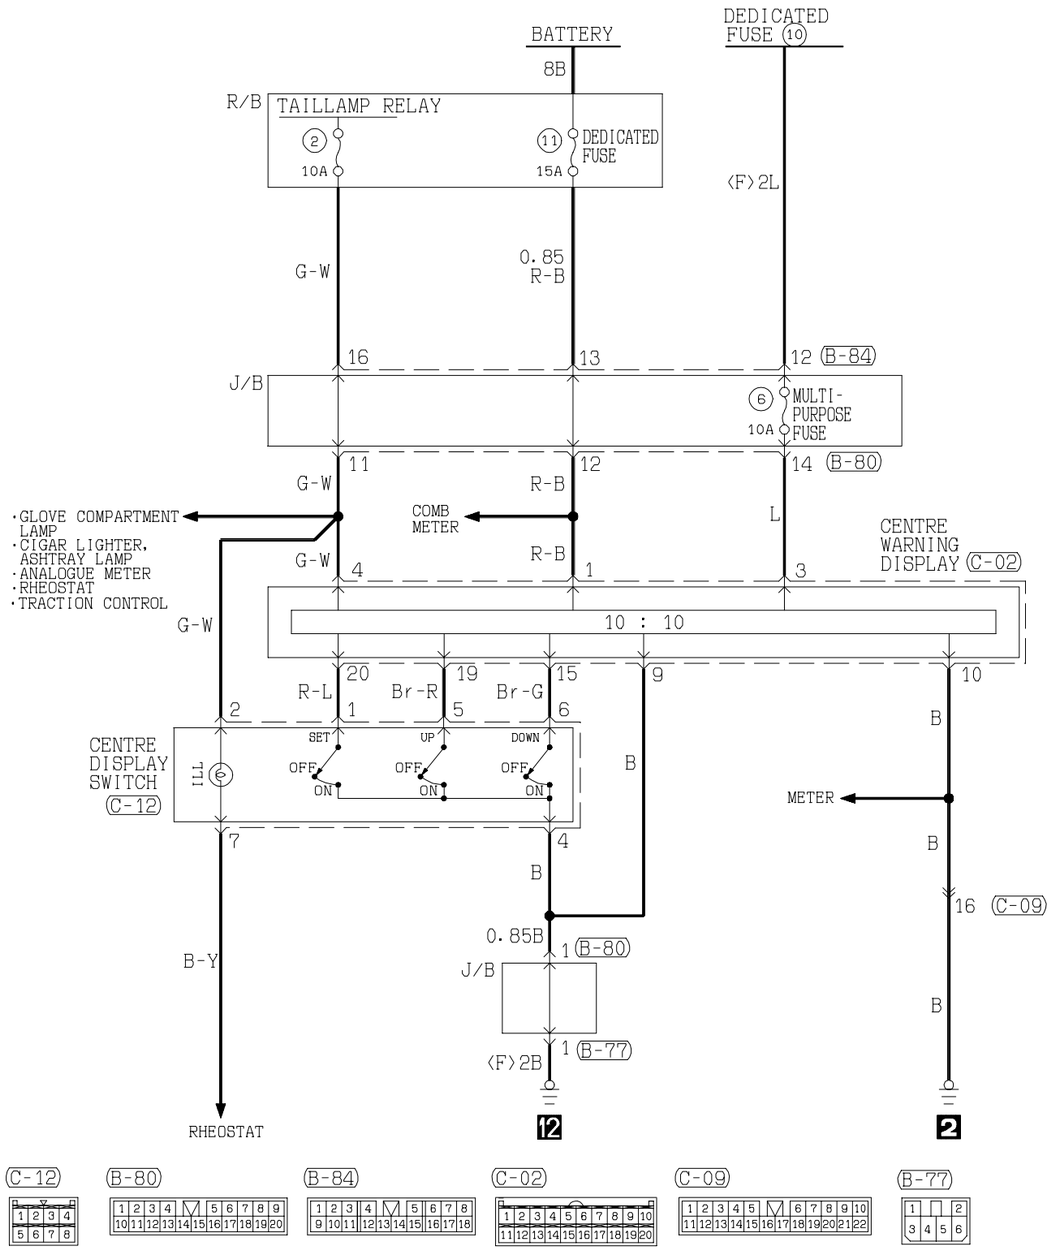

36TH035D AA

PHONE CONNECTION

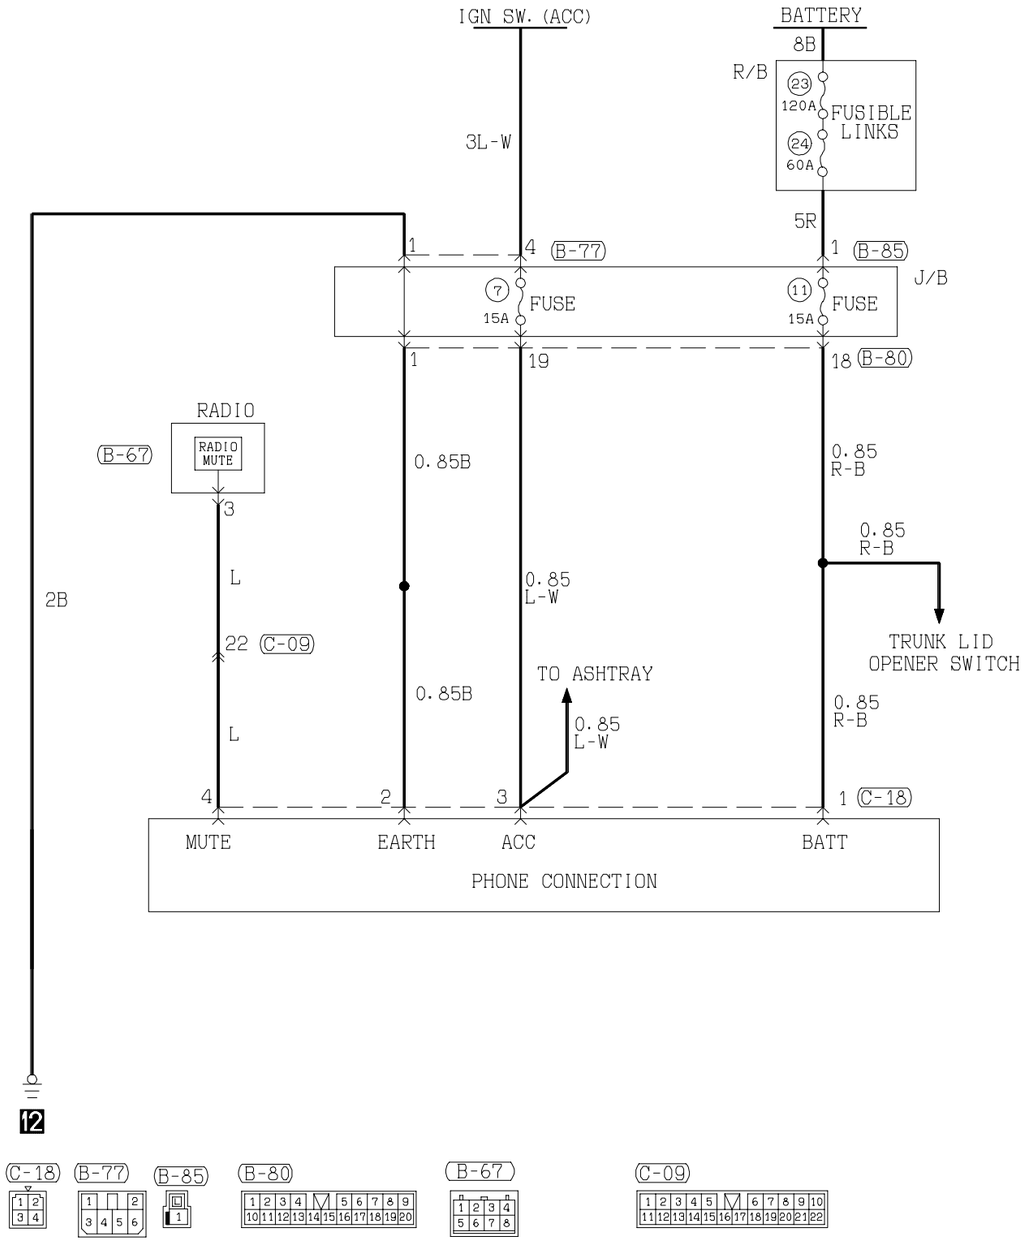

AUDIO SYSTEM

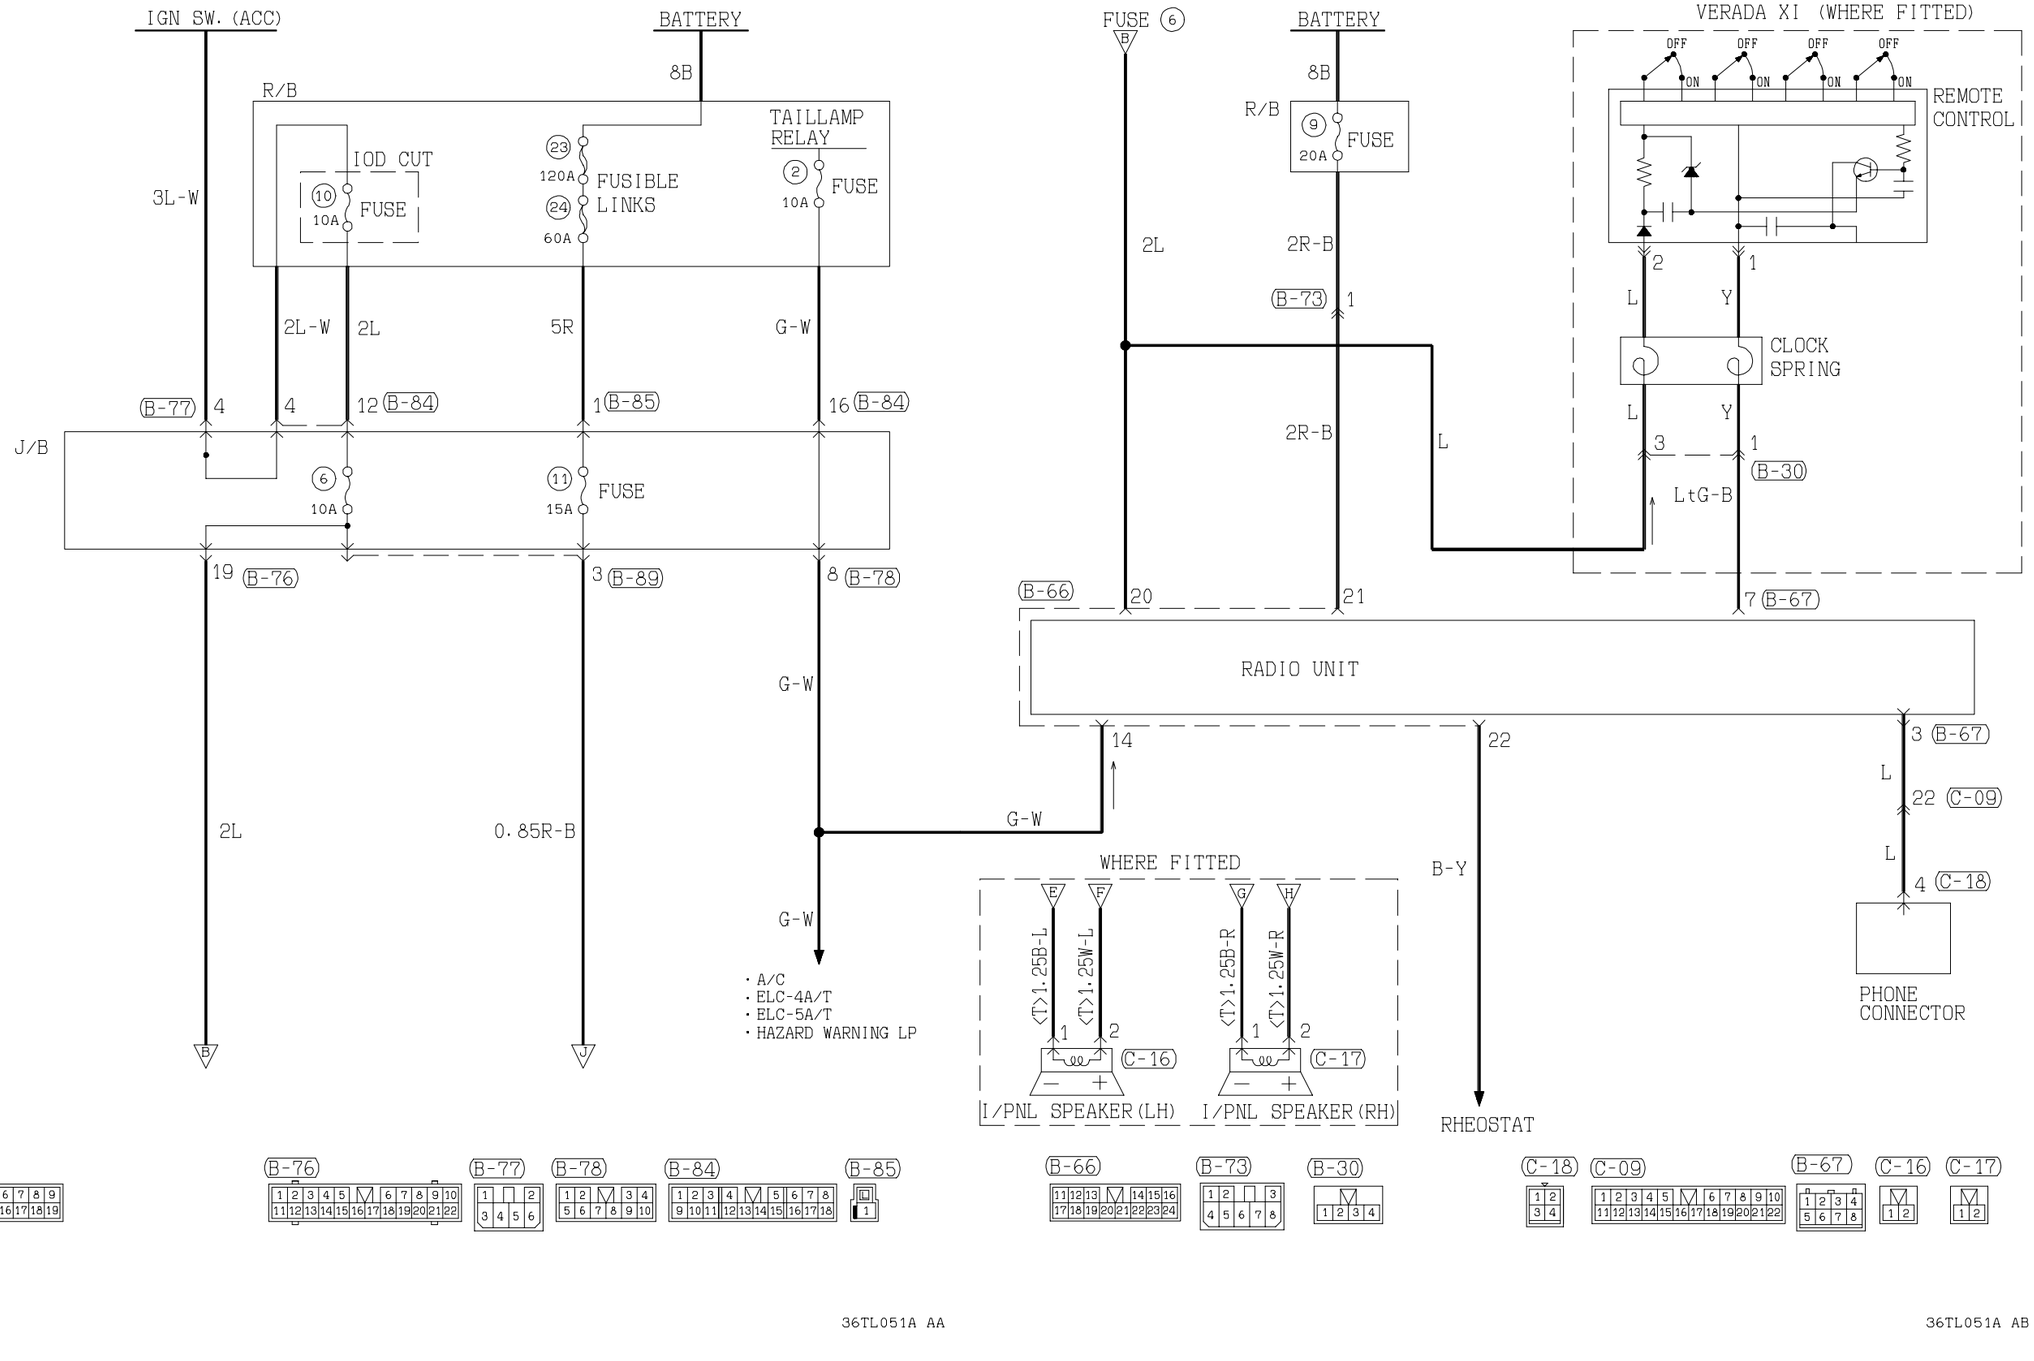

36TL051A AA

36TL051A AB

AUDIO SYSTEM <CONTINUED>

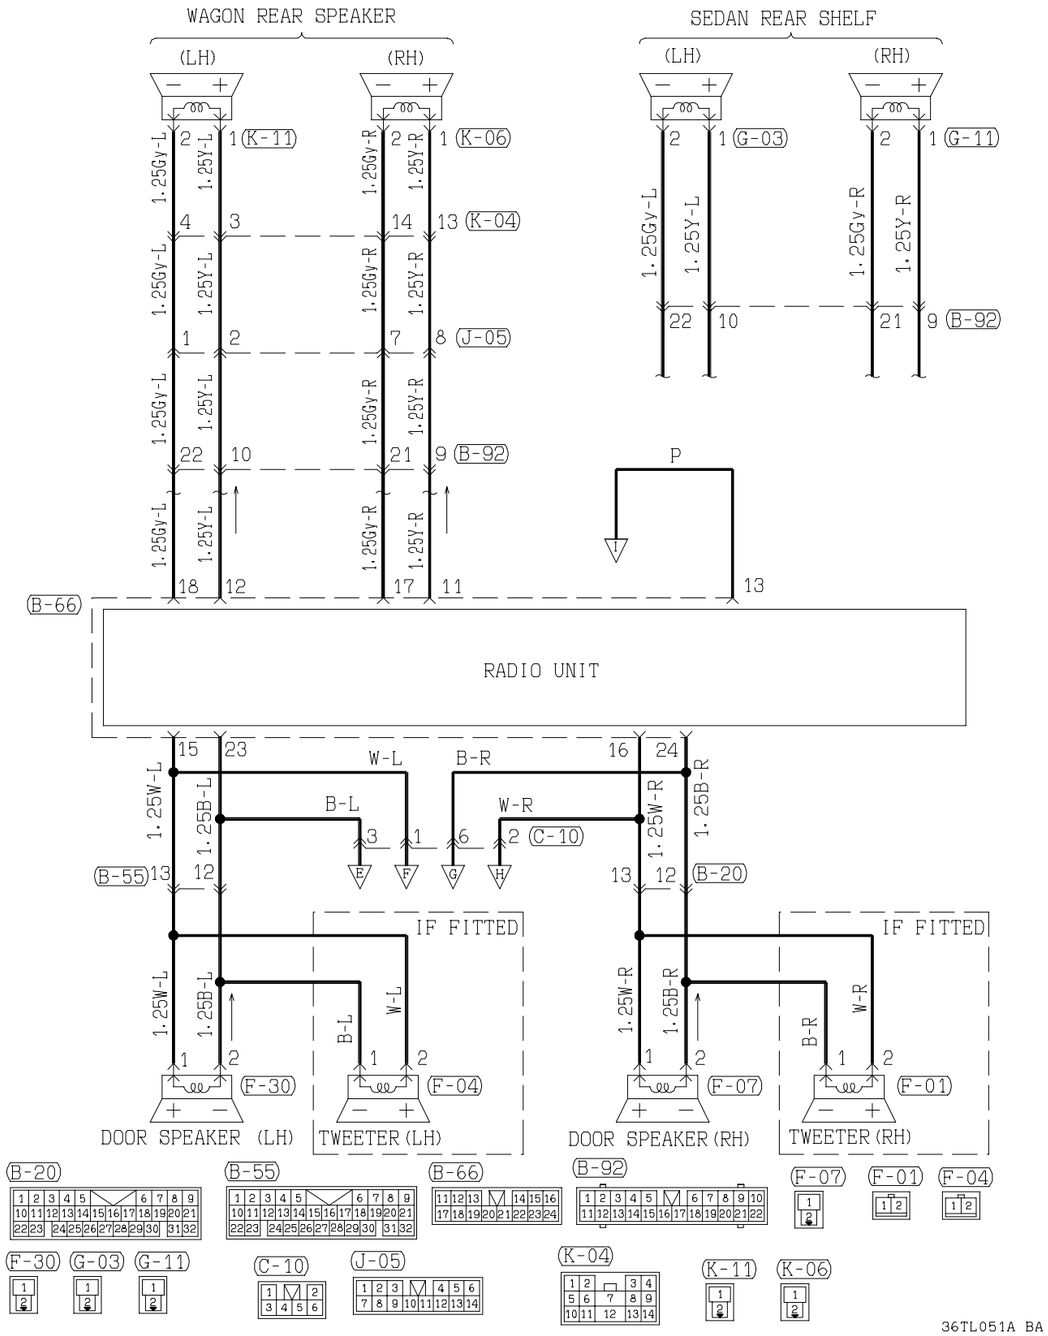

ANTI-SKID BRAKING SYSTEM (ABS) <Without Traction Control>

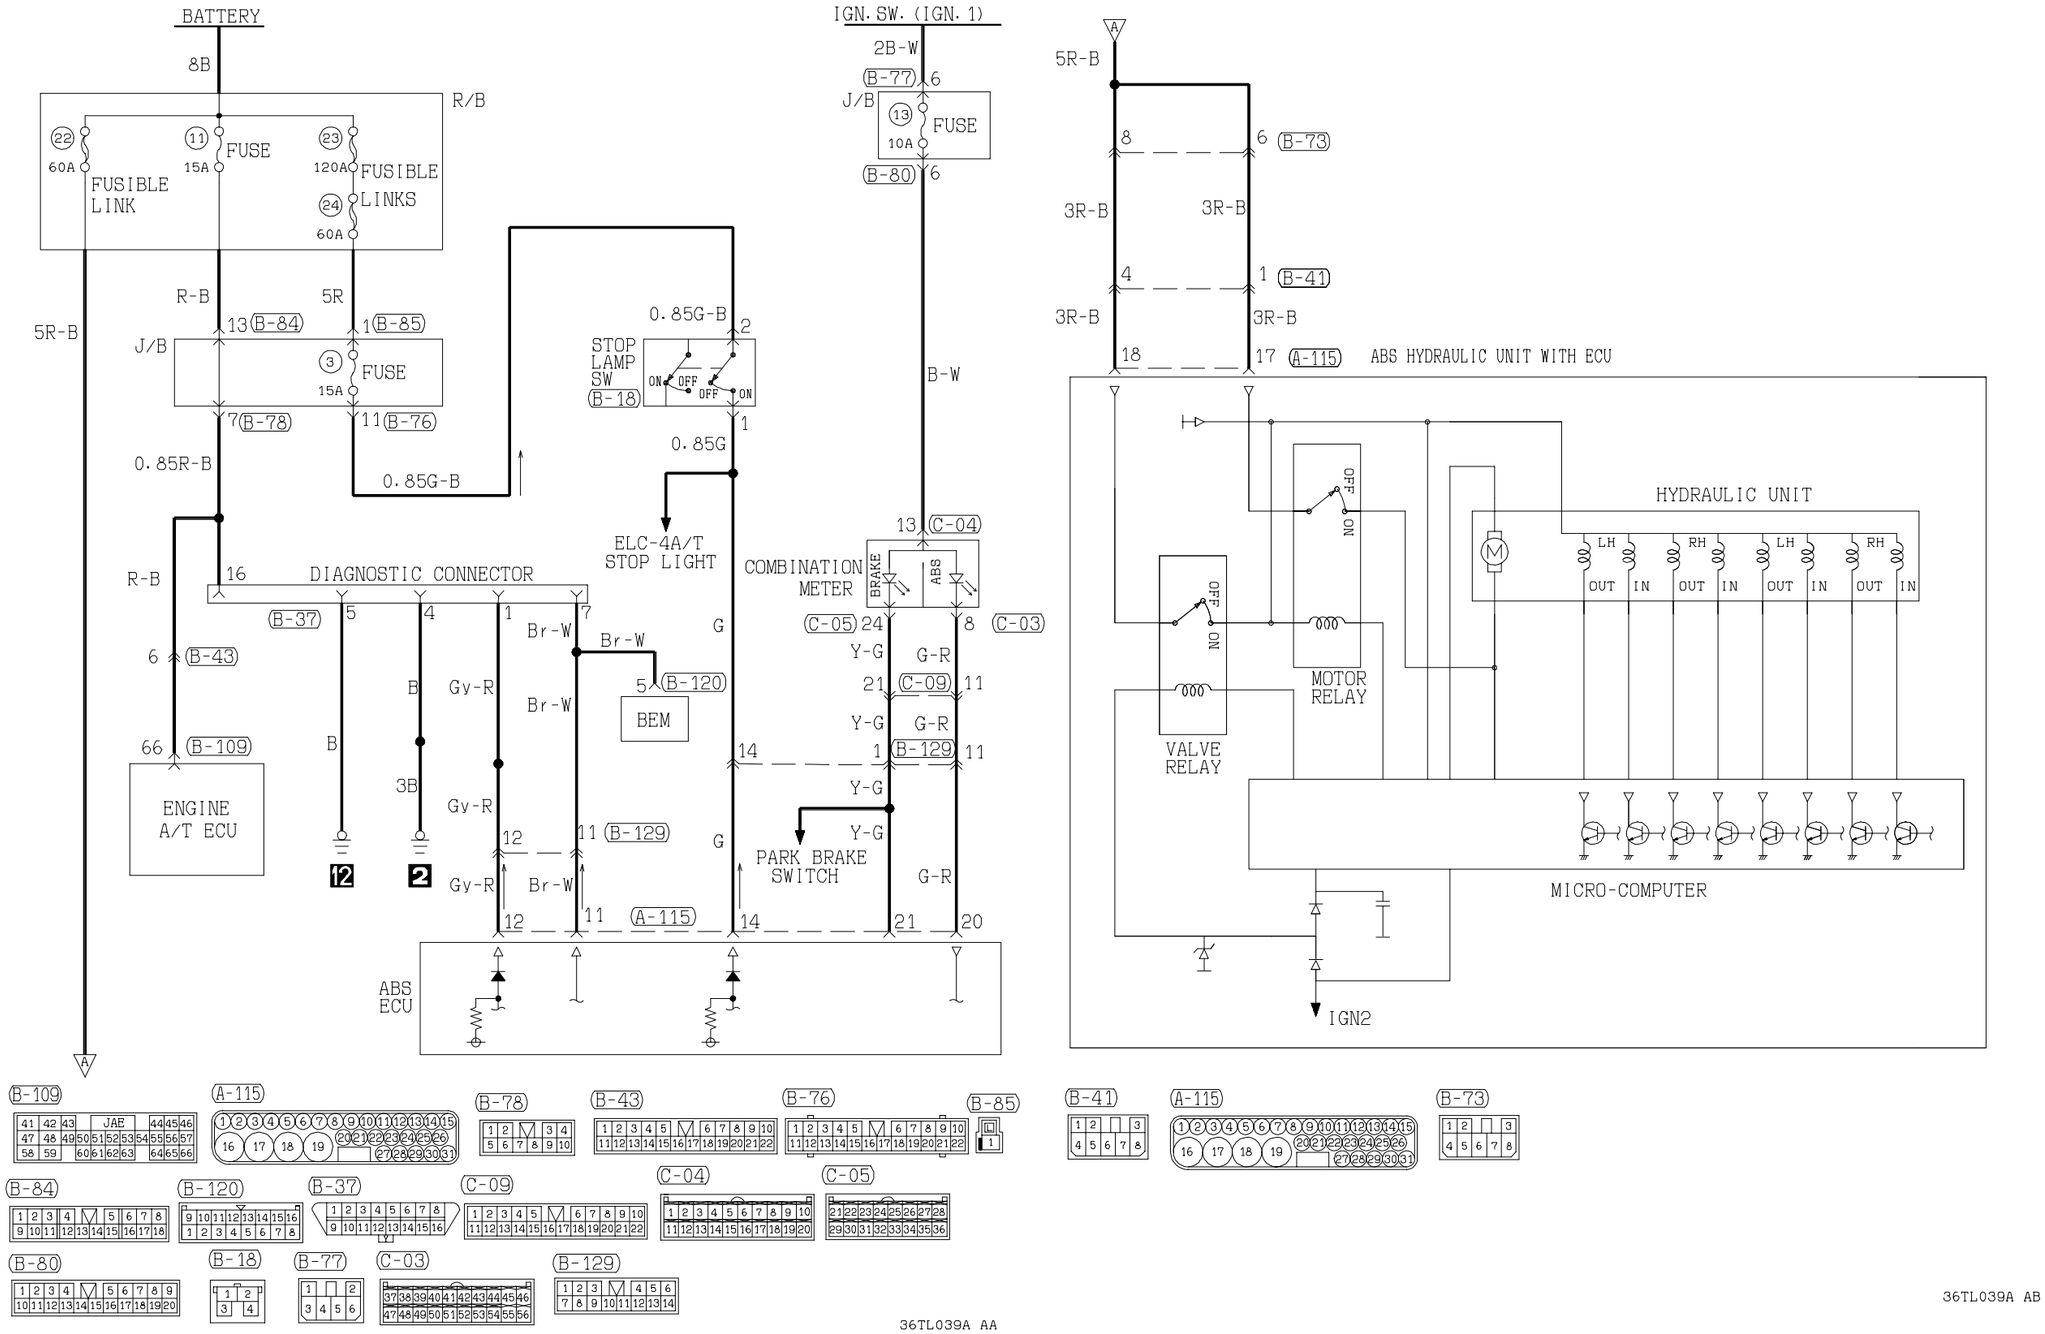

36TL039A AA

36TL039A AB

ANTI-SKID BRAKING SYSTEM (ABS) <Without Traction Control> (CONTINUED)

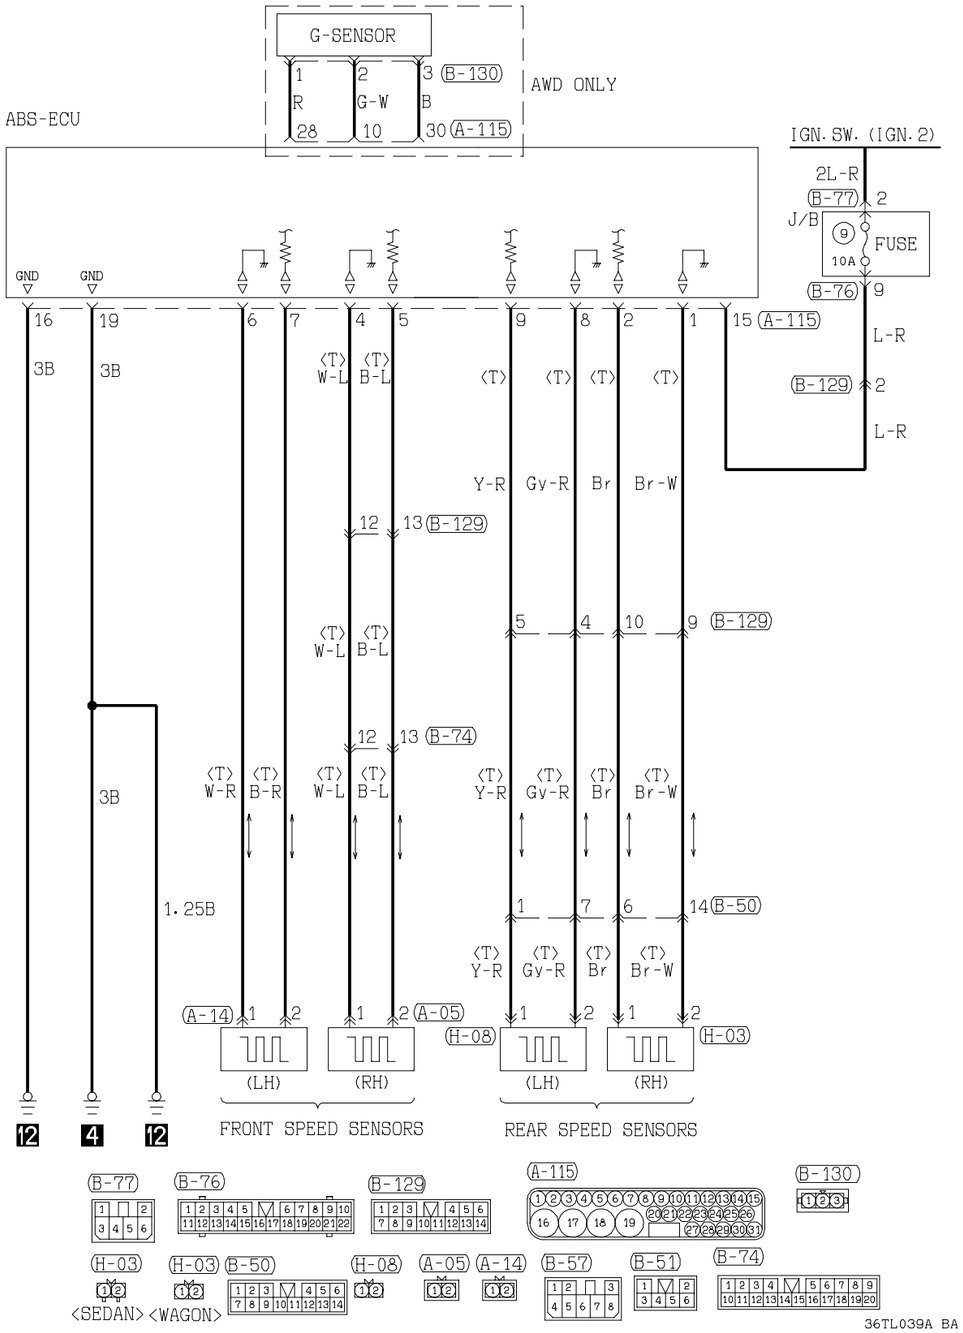

ANTI-SKID BRAKING SYSTEM (ABS) <With Traction Control>

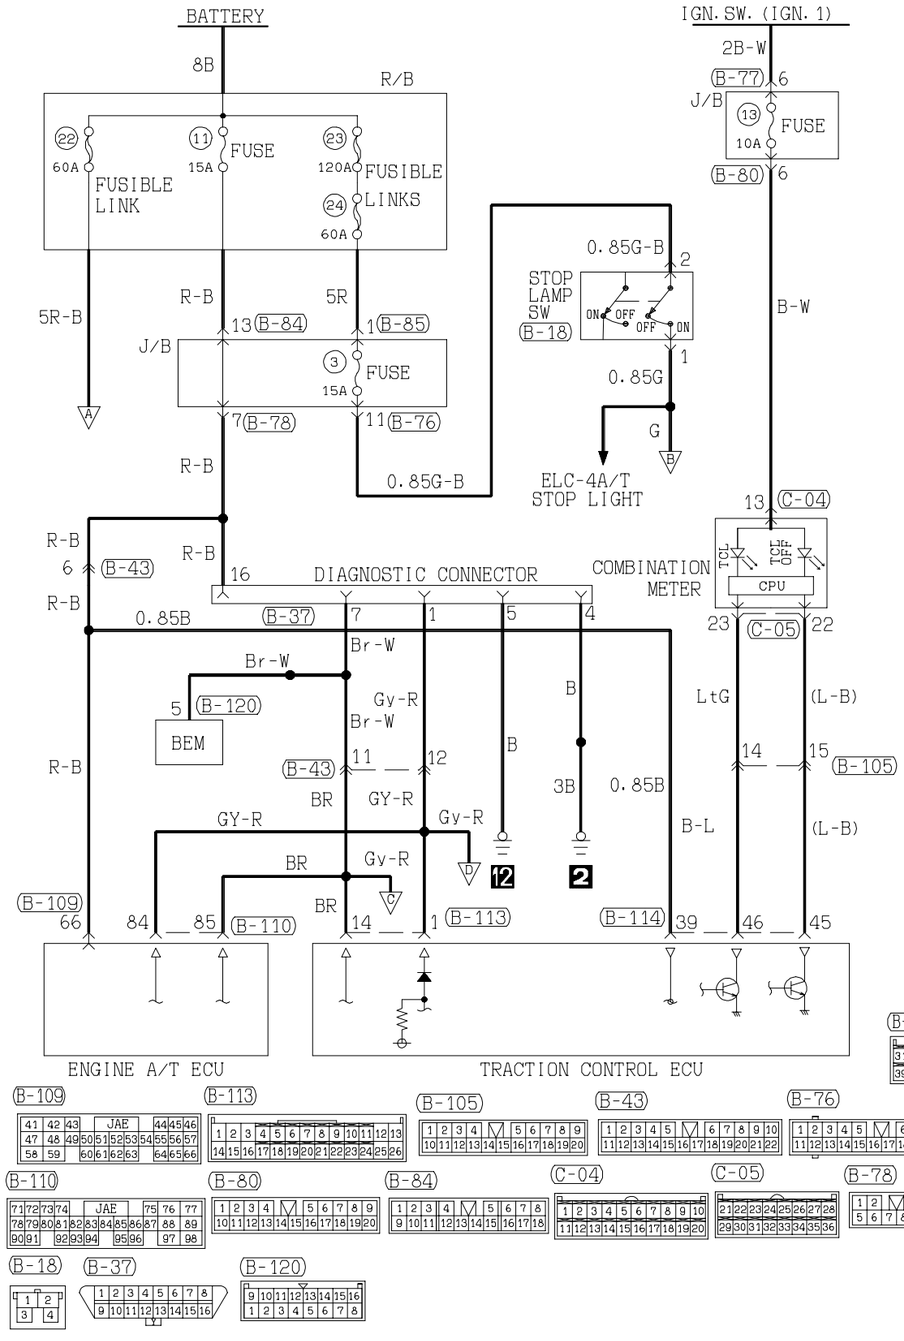

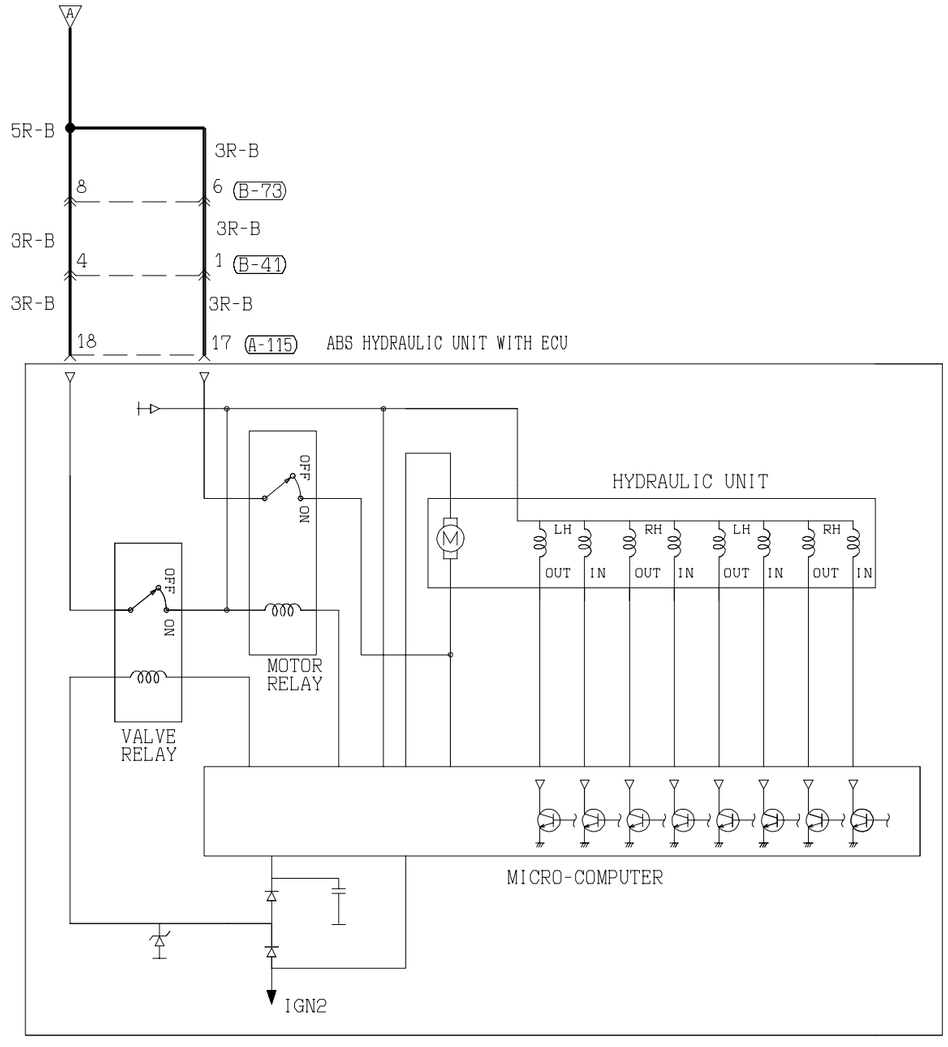

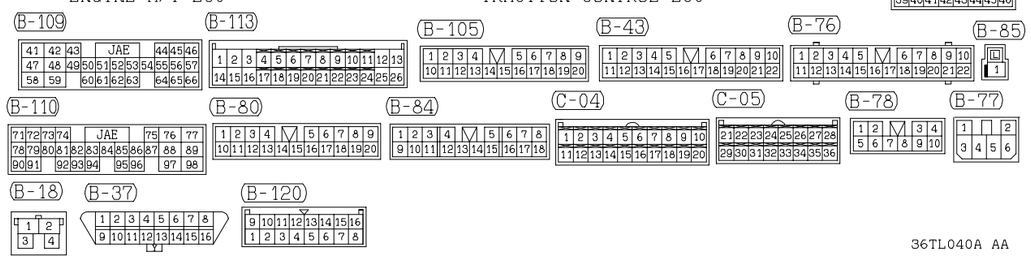

36TL040A AA

36TL040A AB

ANTI-SKID BRAKING SYSTEM (ABS) <With Traction Control> (CONTINUED)

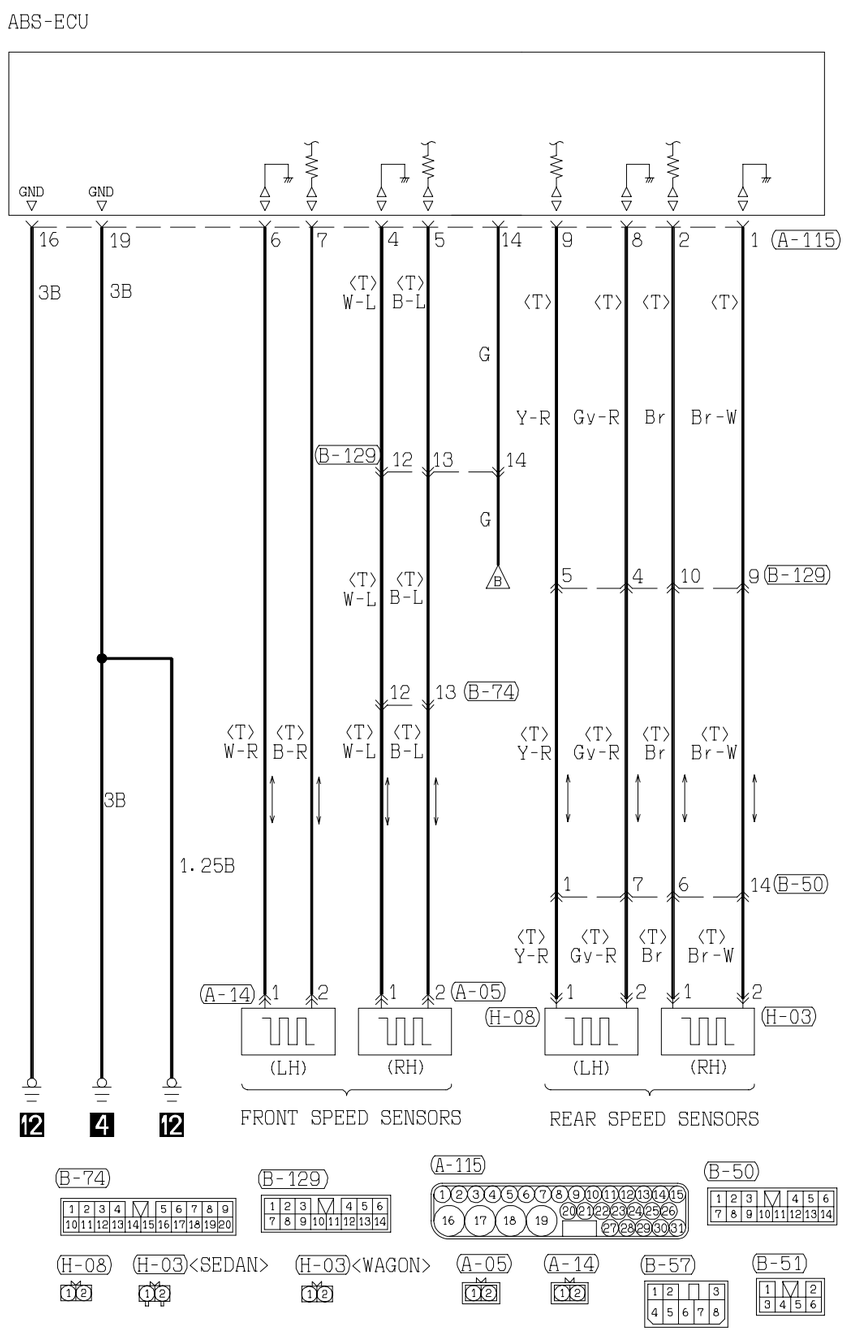

36TL040A BA

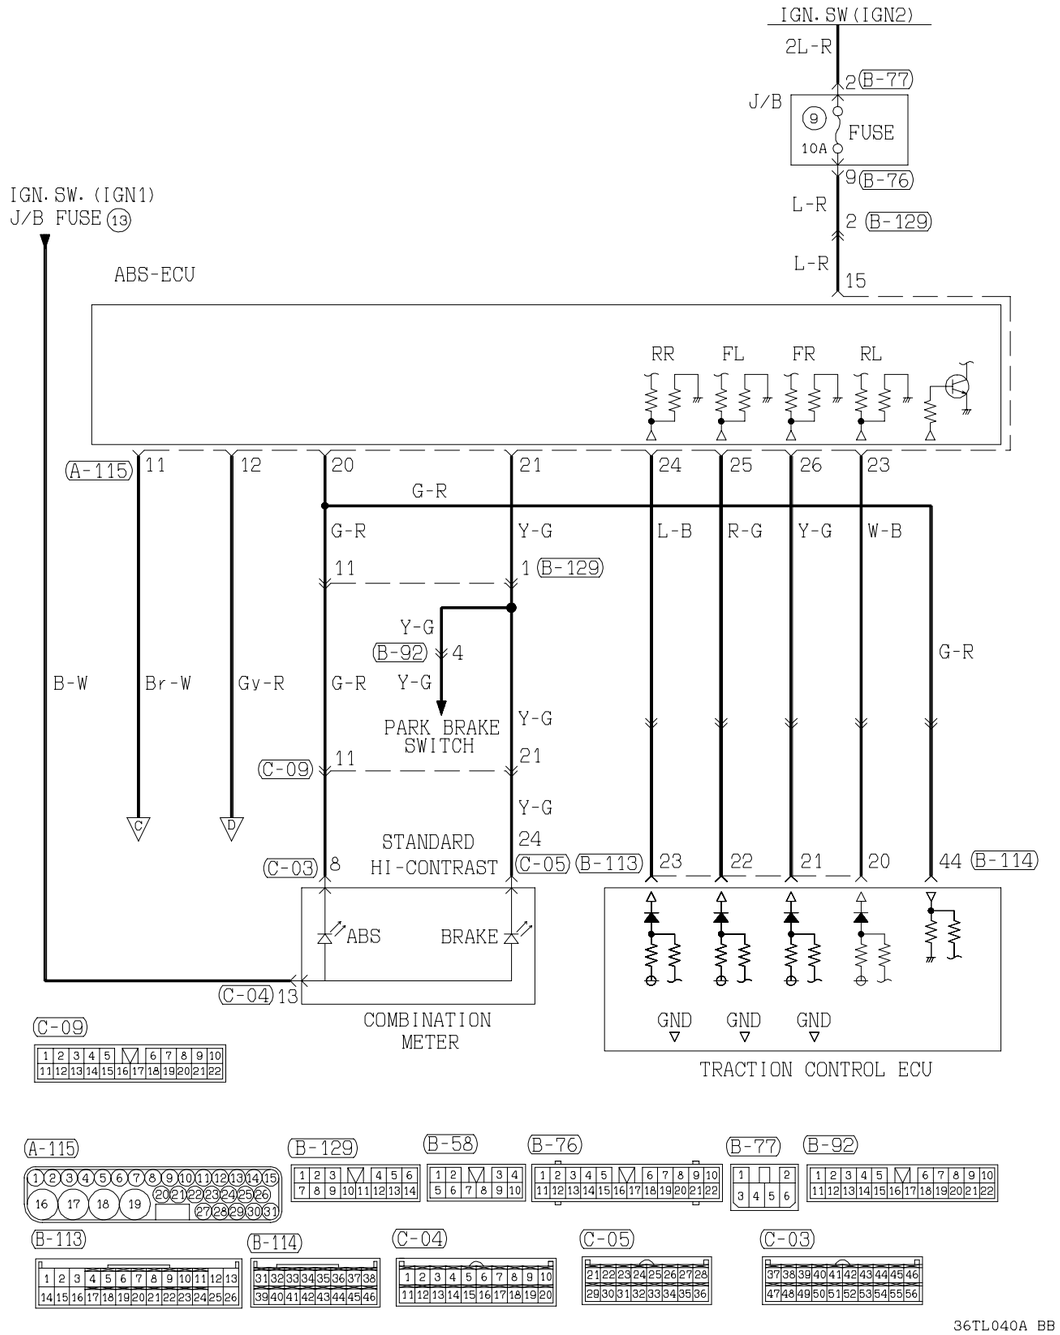

36TL040A BB

TRACTION CONTROL SYSTEM

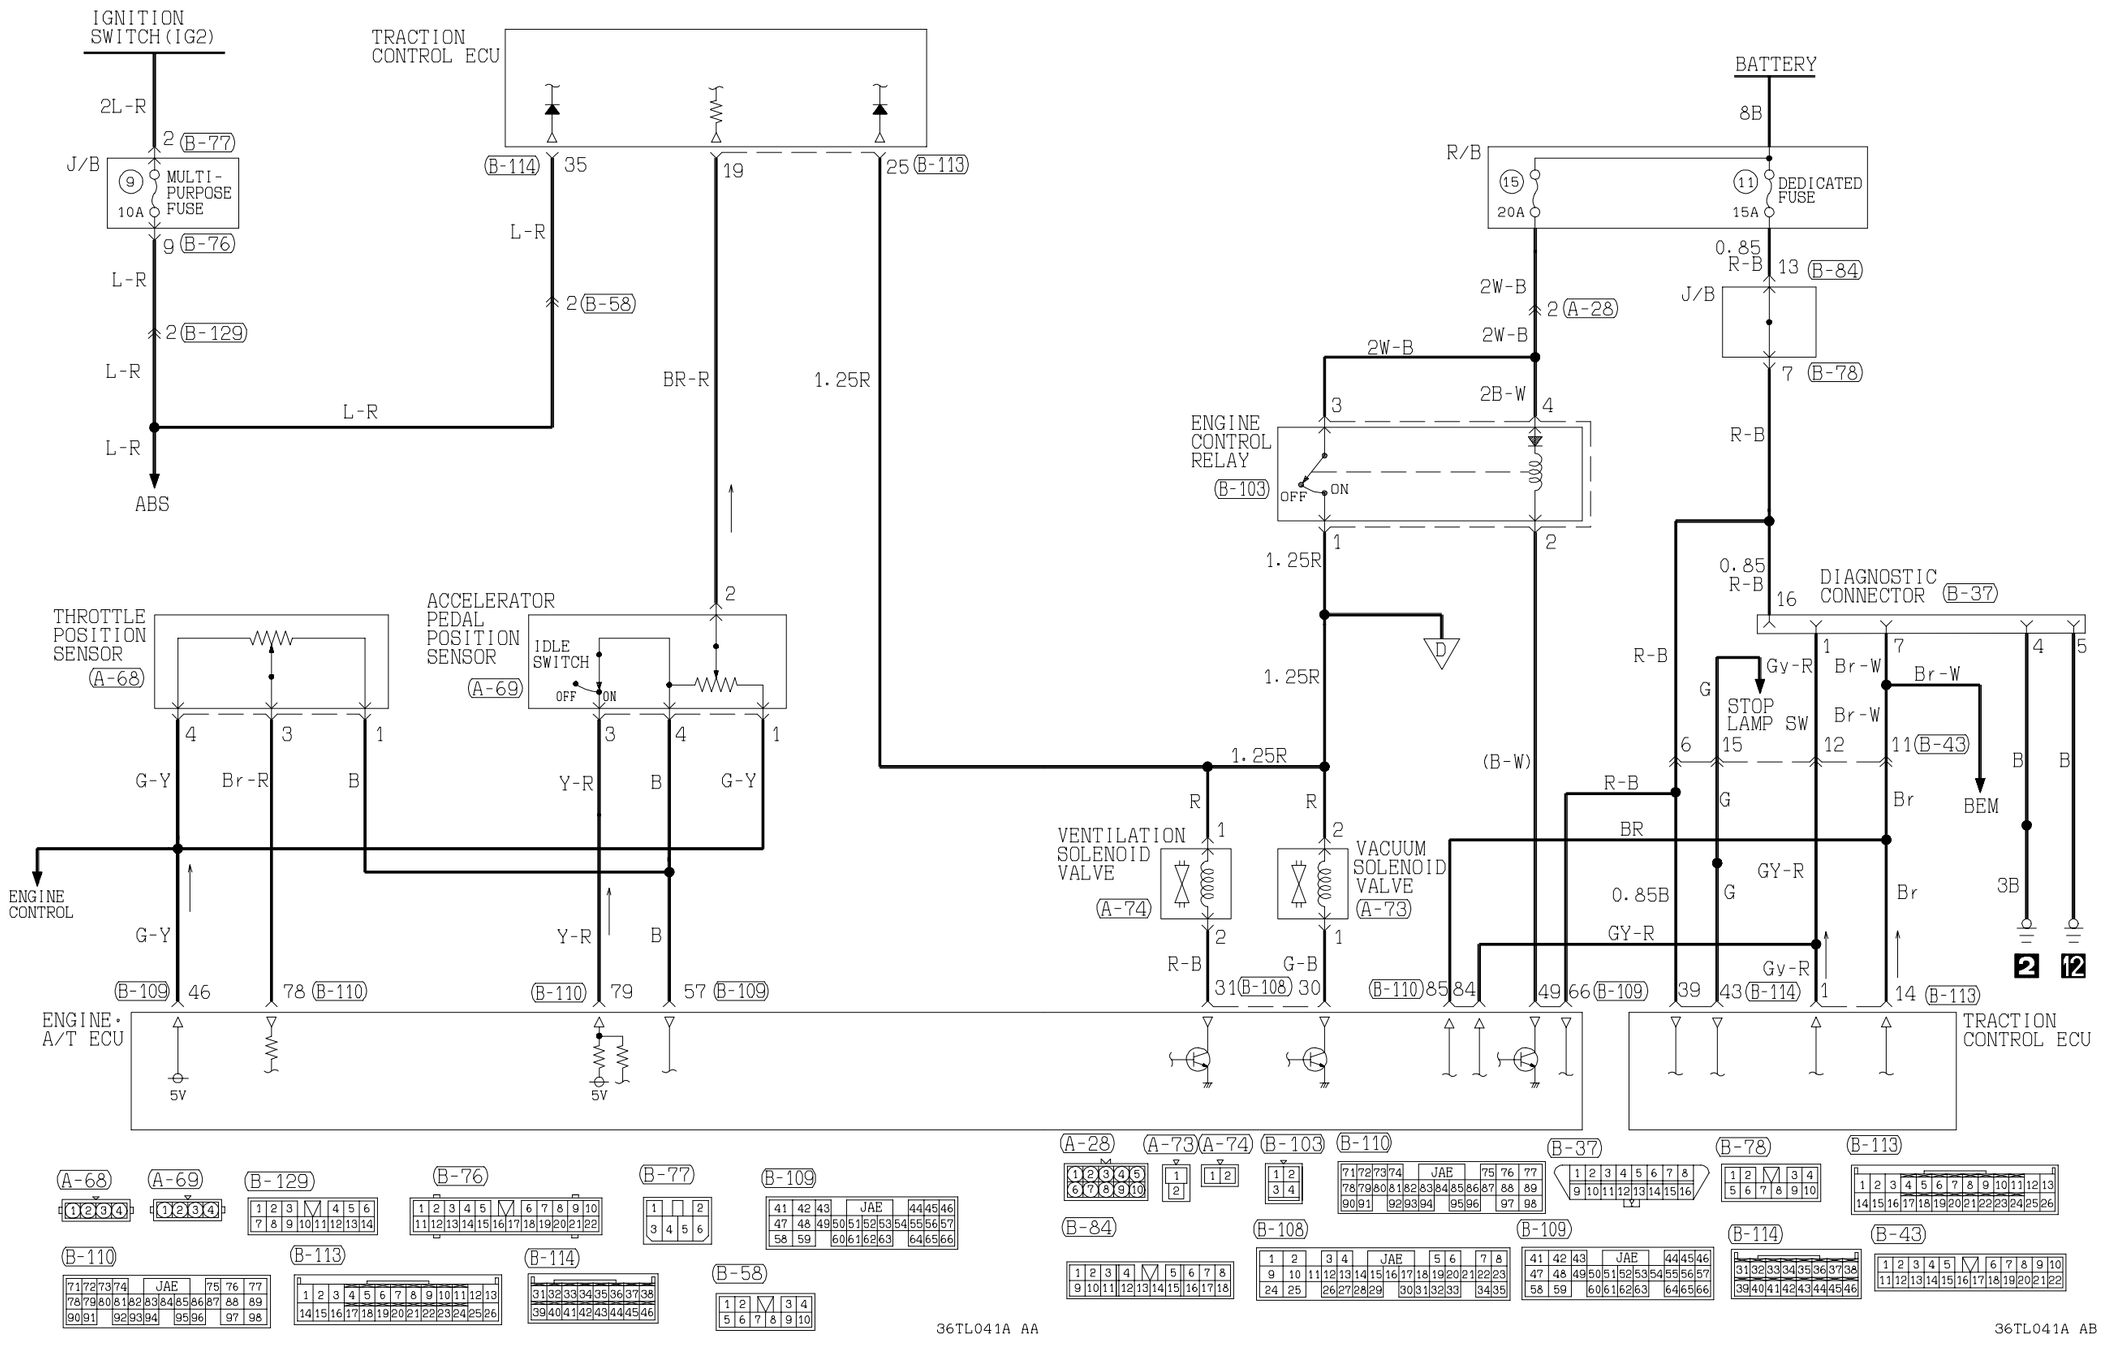

36TL041A AA

36TL041A AB

TRACTION CONTROL SYSTEM (CONTINUED)

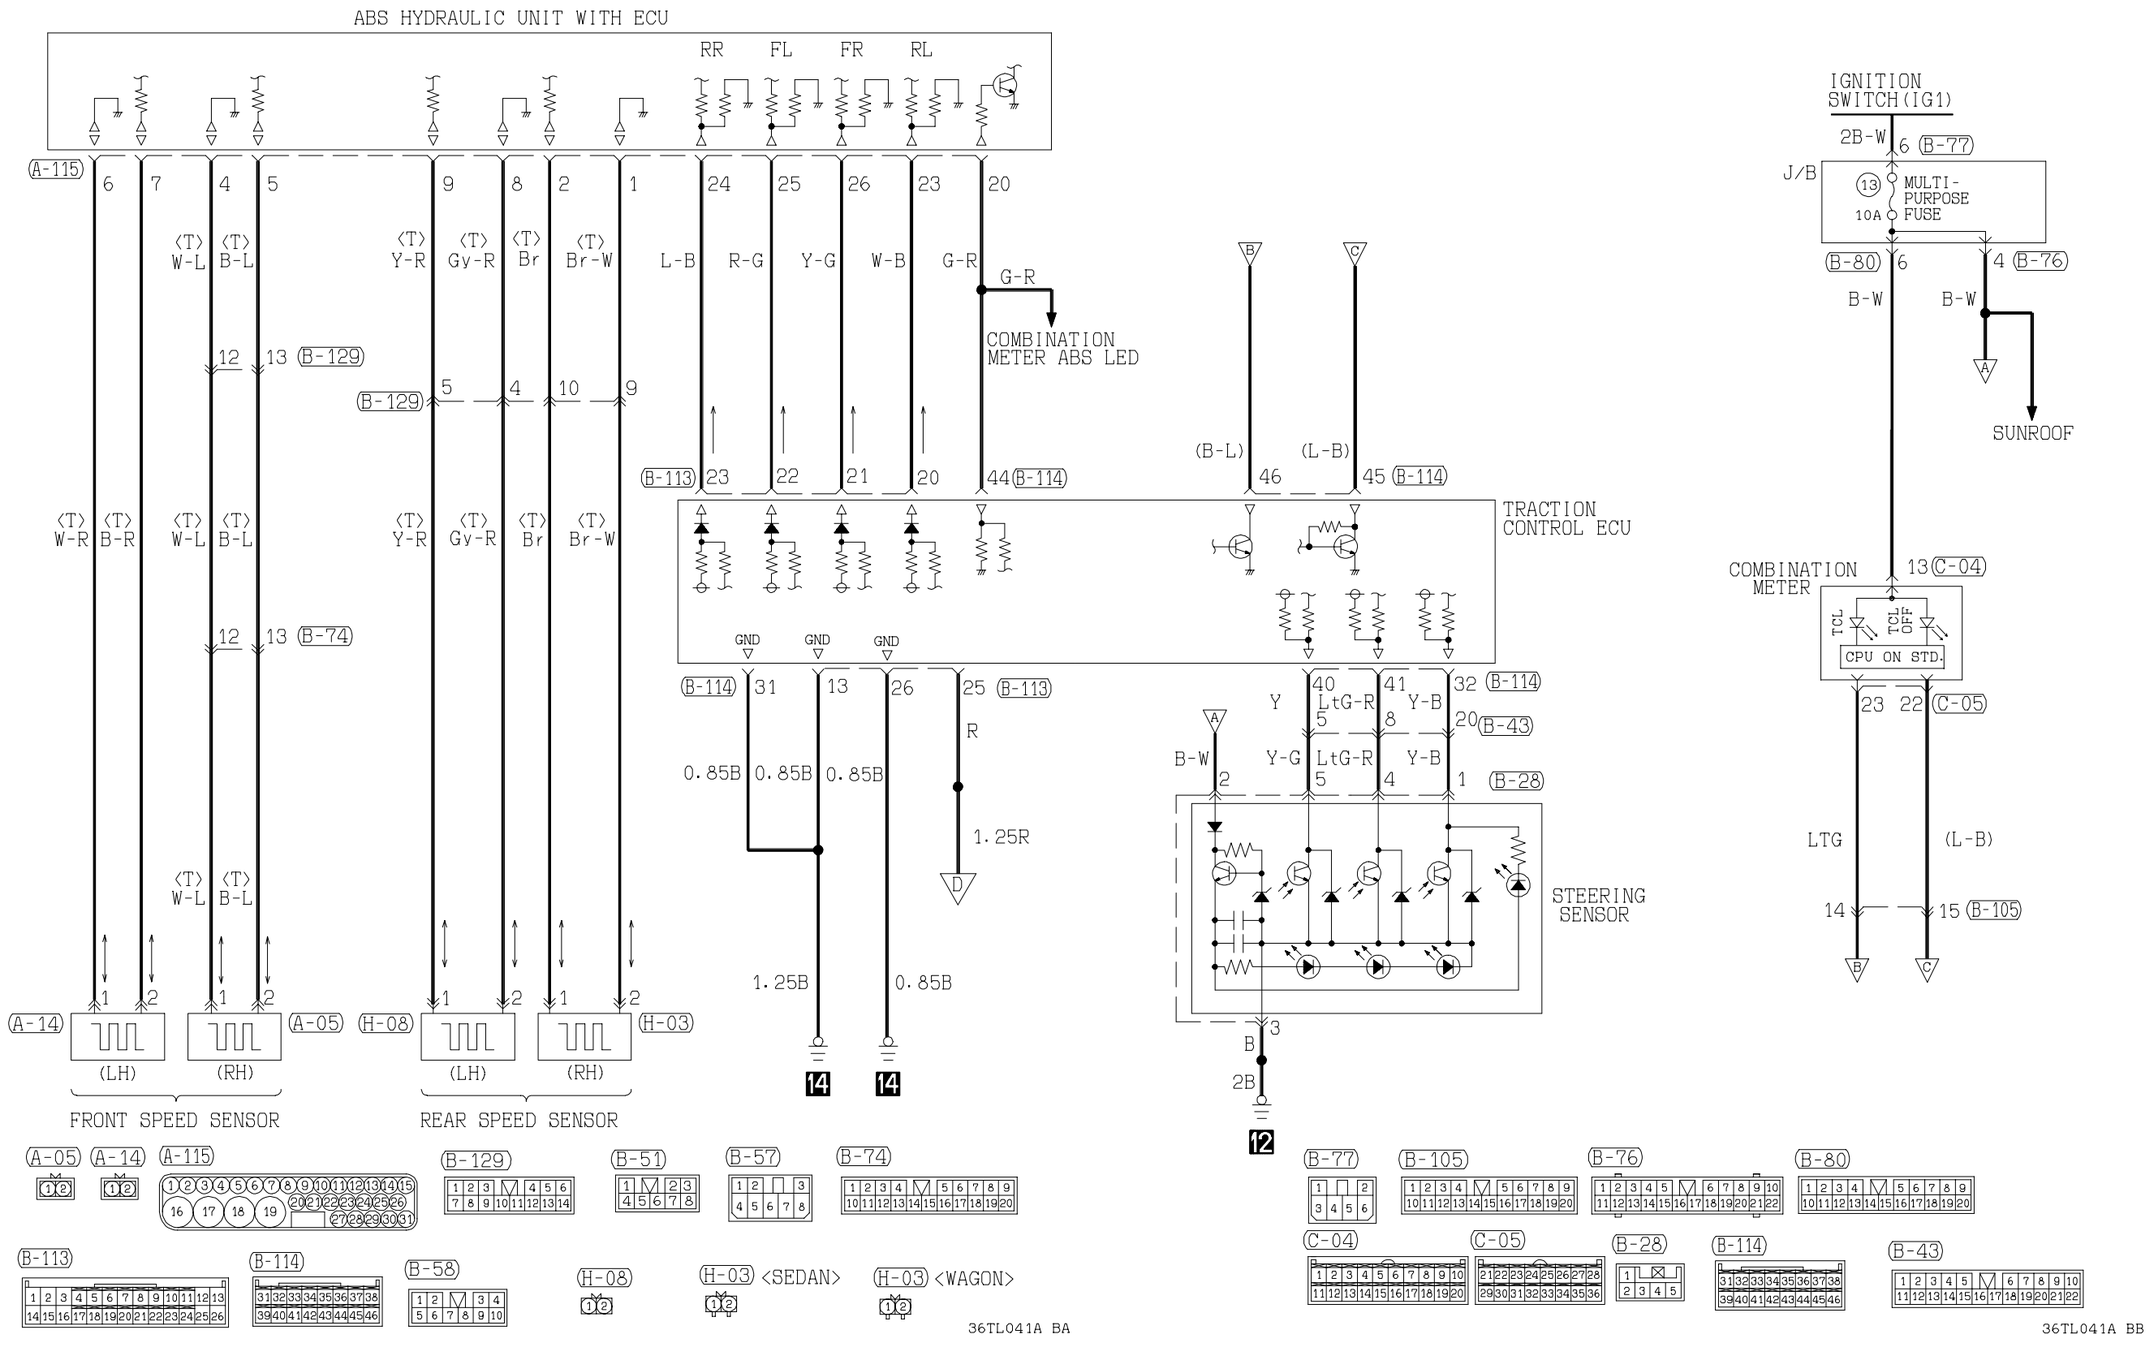

TRACTION CONTROL SYSTEM (CONTINUED)

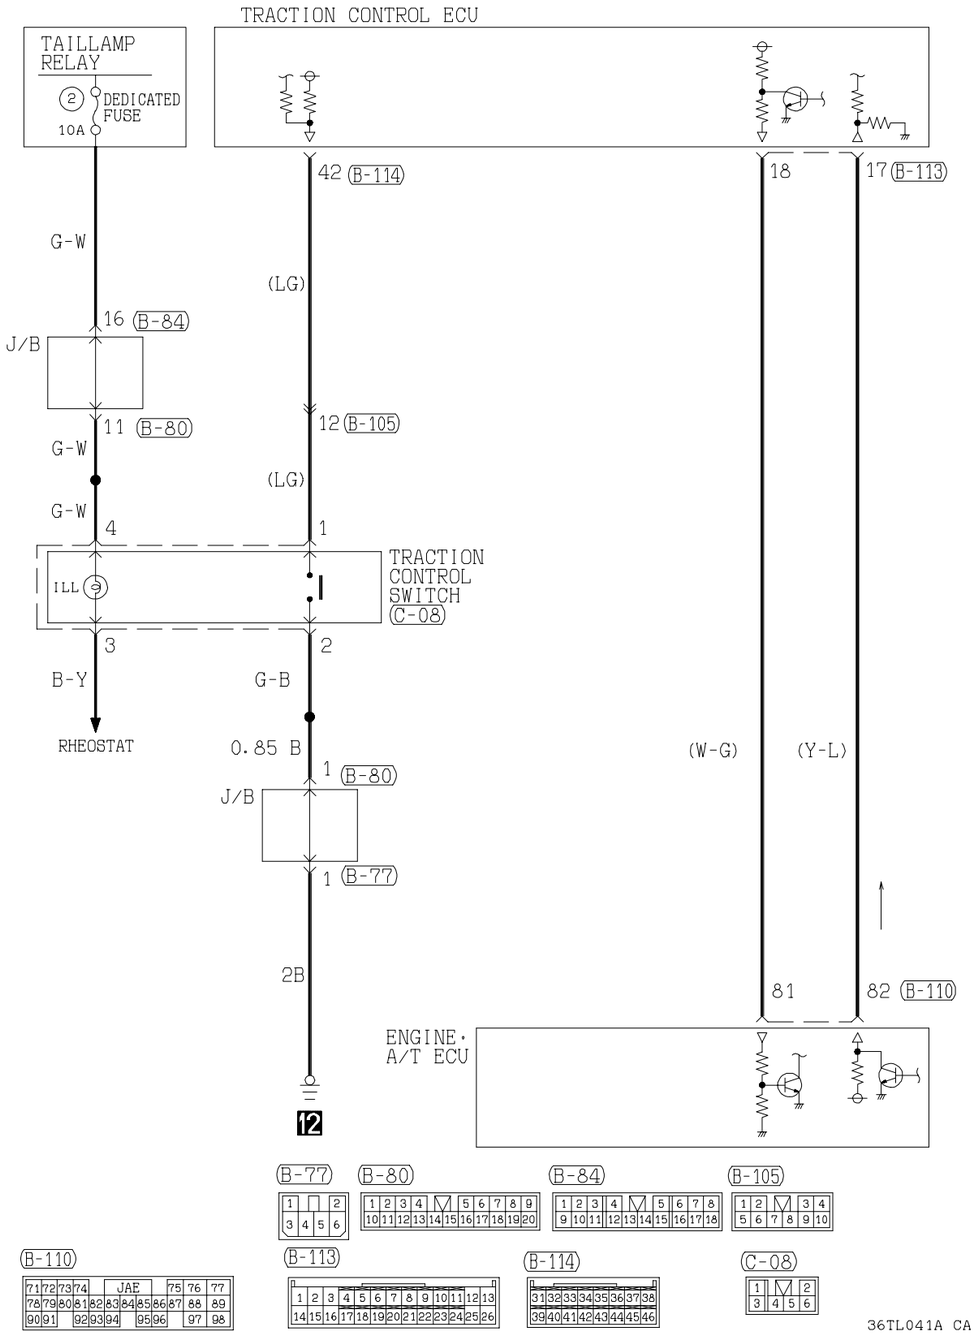

CRUISE CONTROL

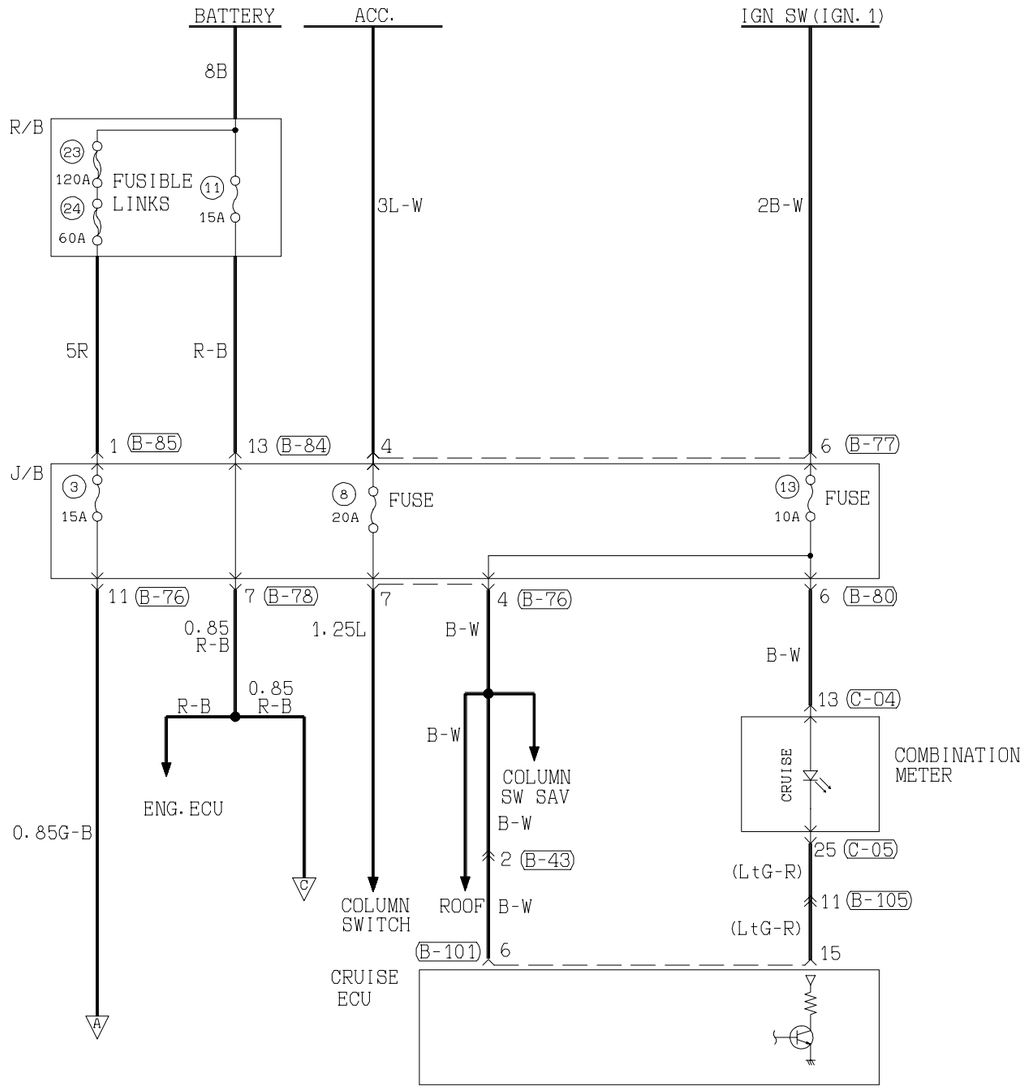

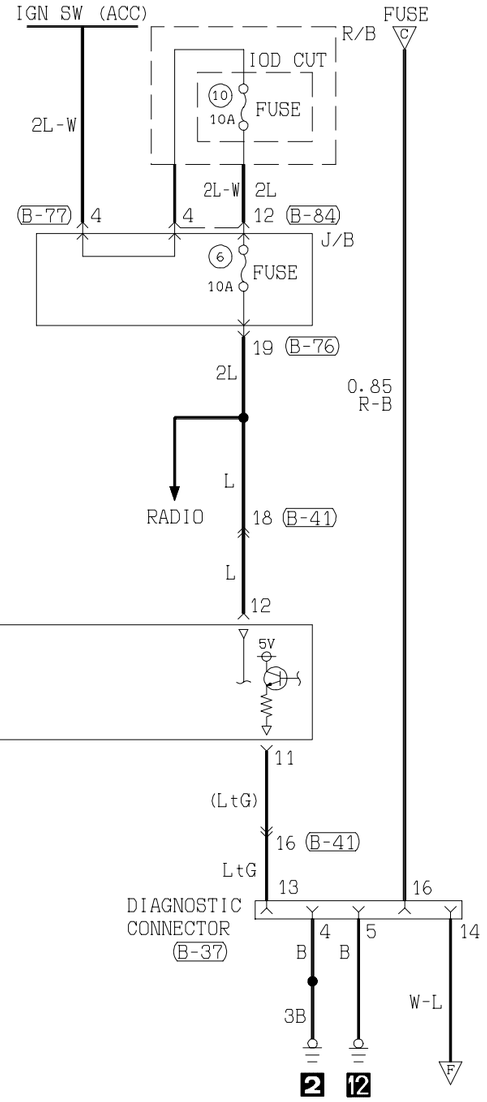

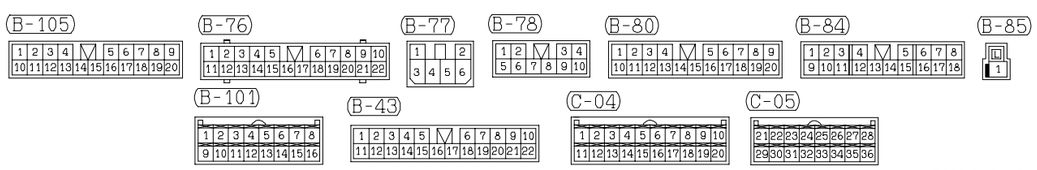

36TL044A AA

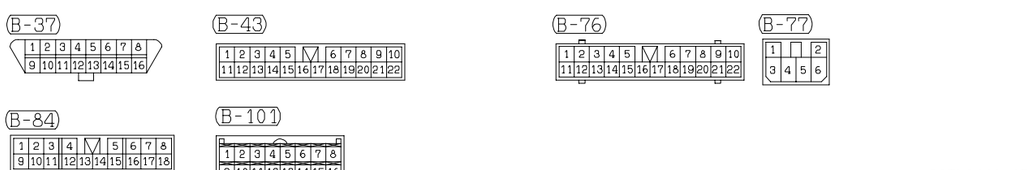

36TL044A AB

CRUISE CONTROL (CONTINUED)

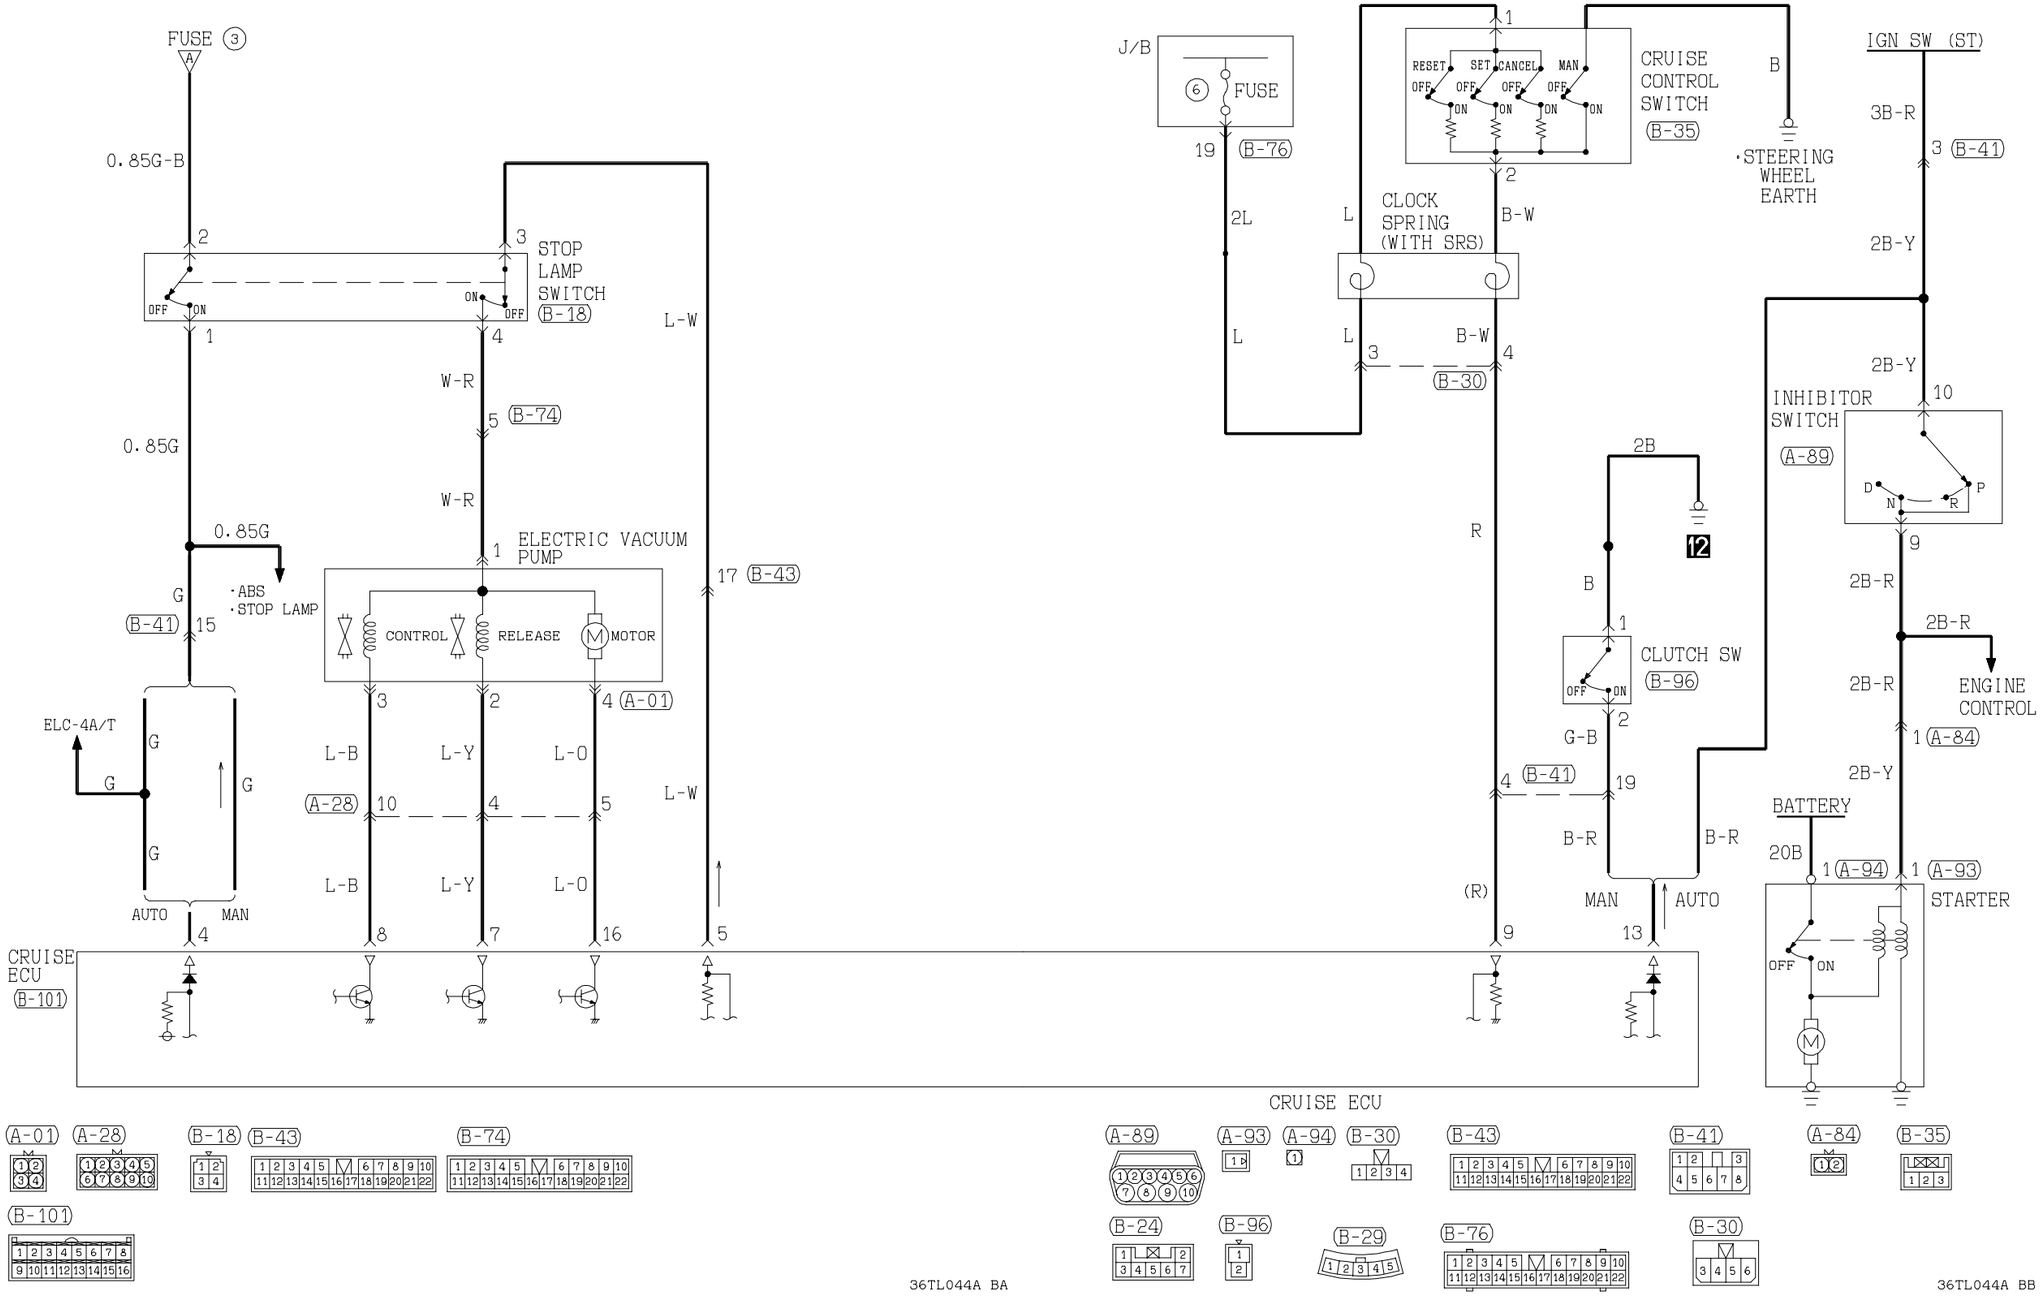

CRUISE ECU

A-01 A-28 B-18 B-43 B-74 B-101

A-89 A-93 A-94 B-30 B-43 B-41 A-84 B-35 B-24 B-96 B-29 B-76 B-30

36TL044A BA

36TL044A BB

CRUISE CONTROL (CONTINUED)

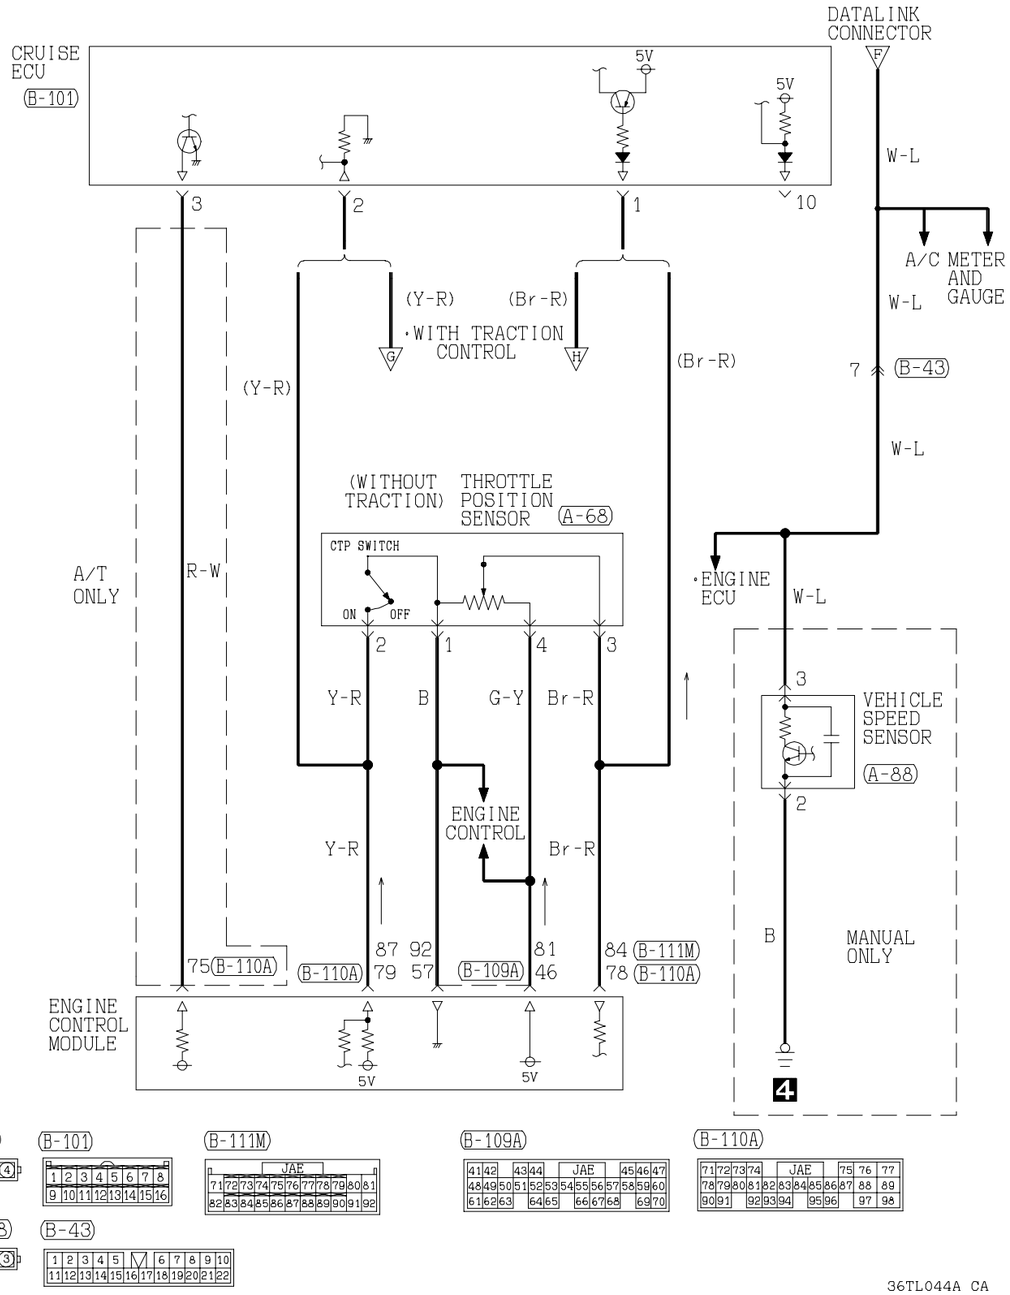

36TL044A CA

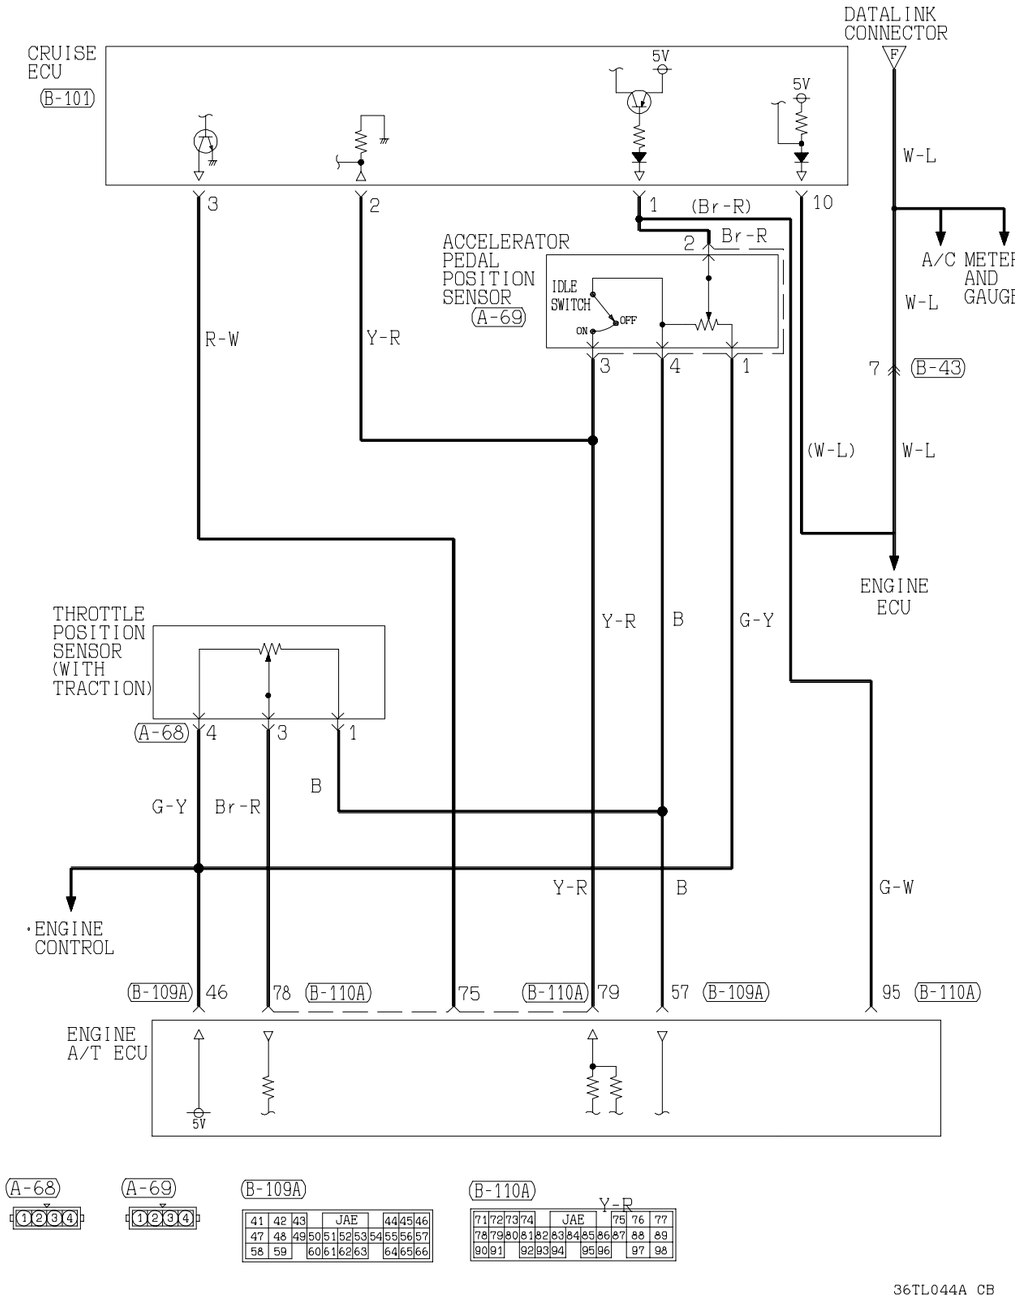

36TL044A CB

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

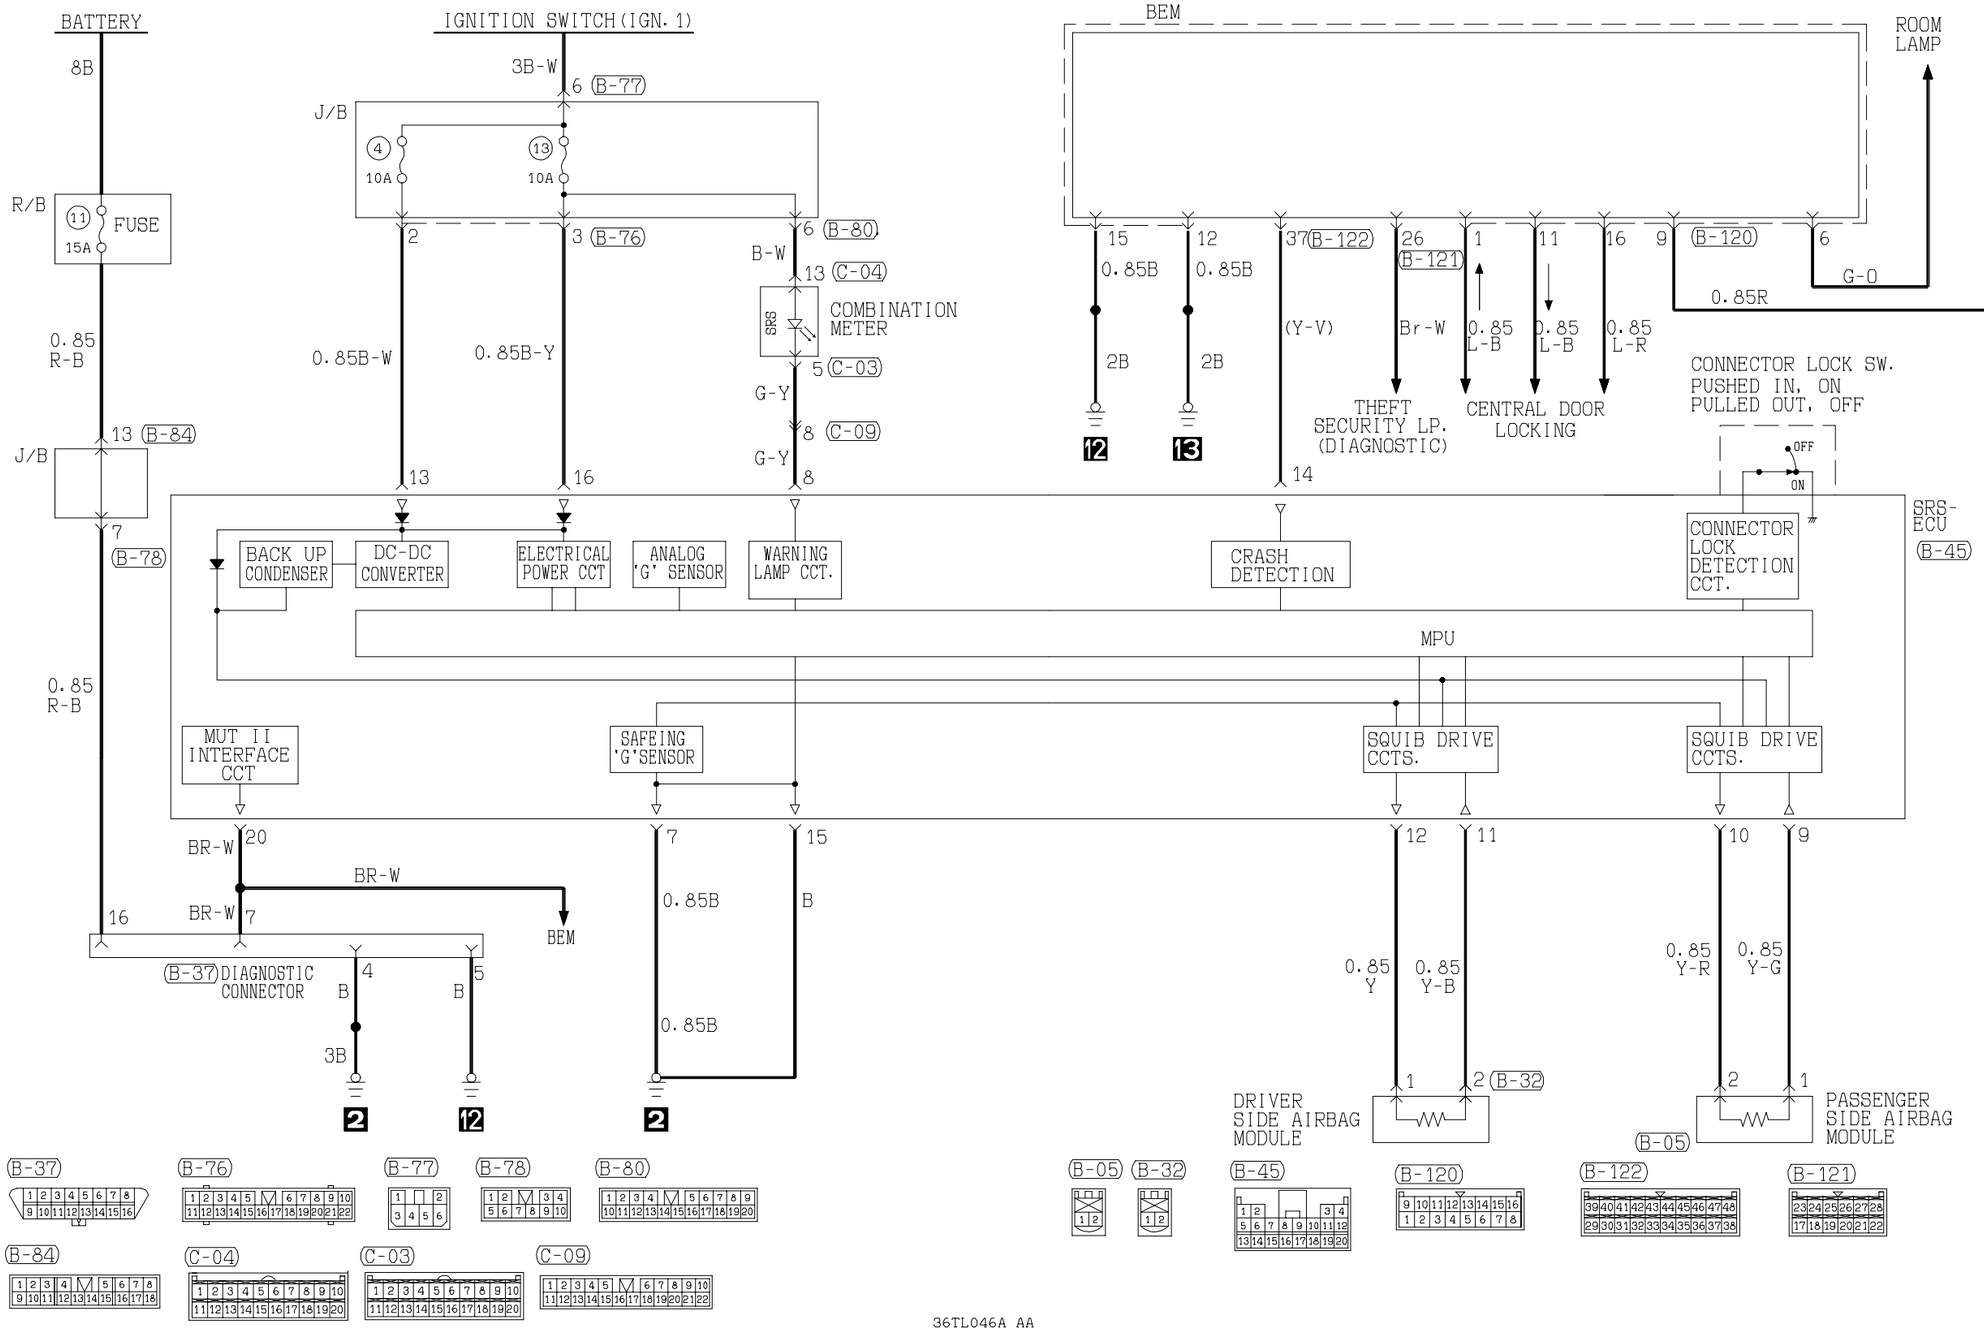

36TL046A AA

36TL046A AB

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) (CONTINUED)

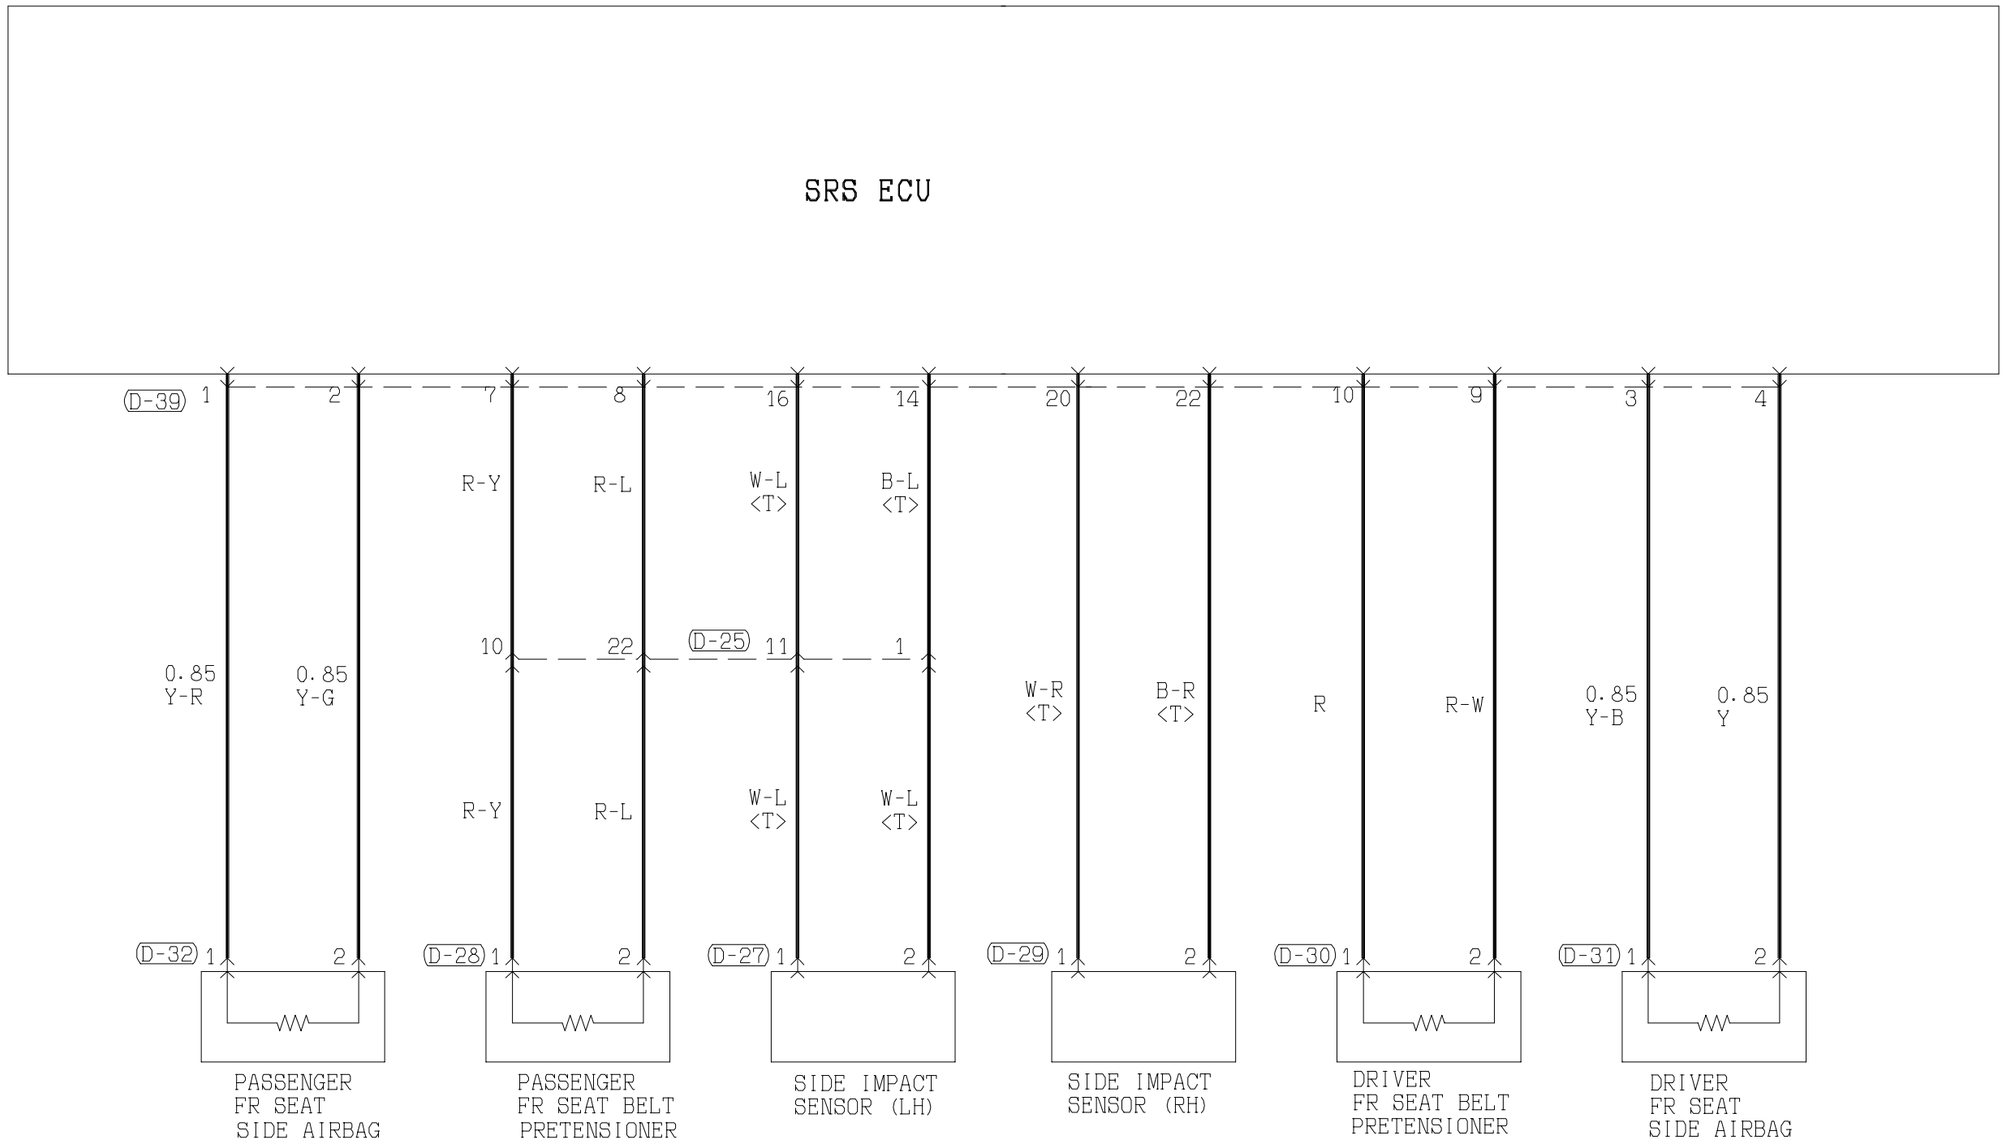

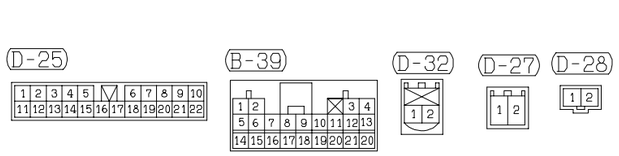



36TL046A BA

36TL046A BB

THEFT ALARM

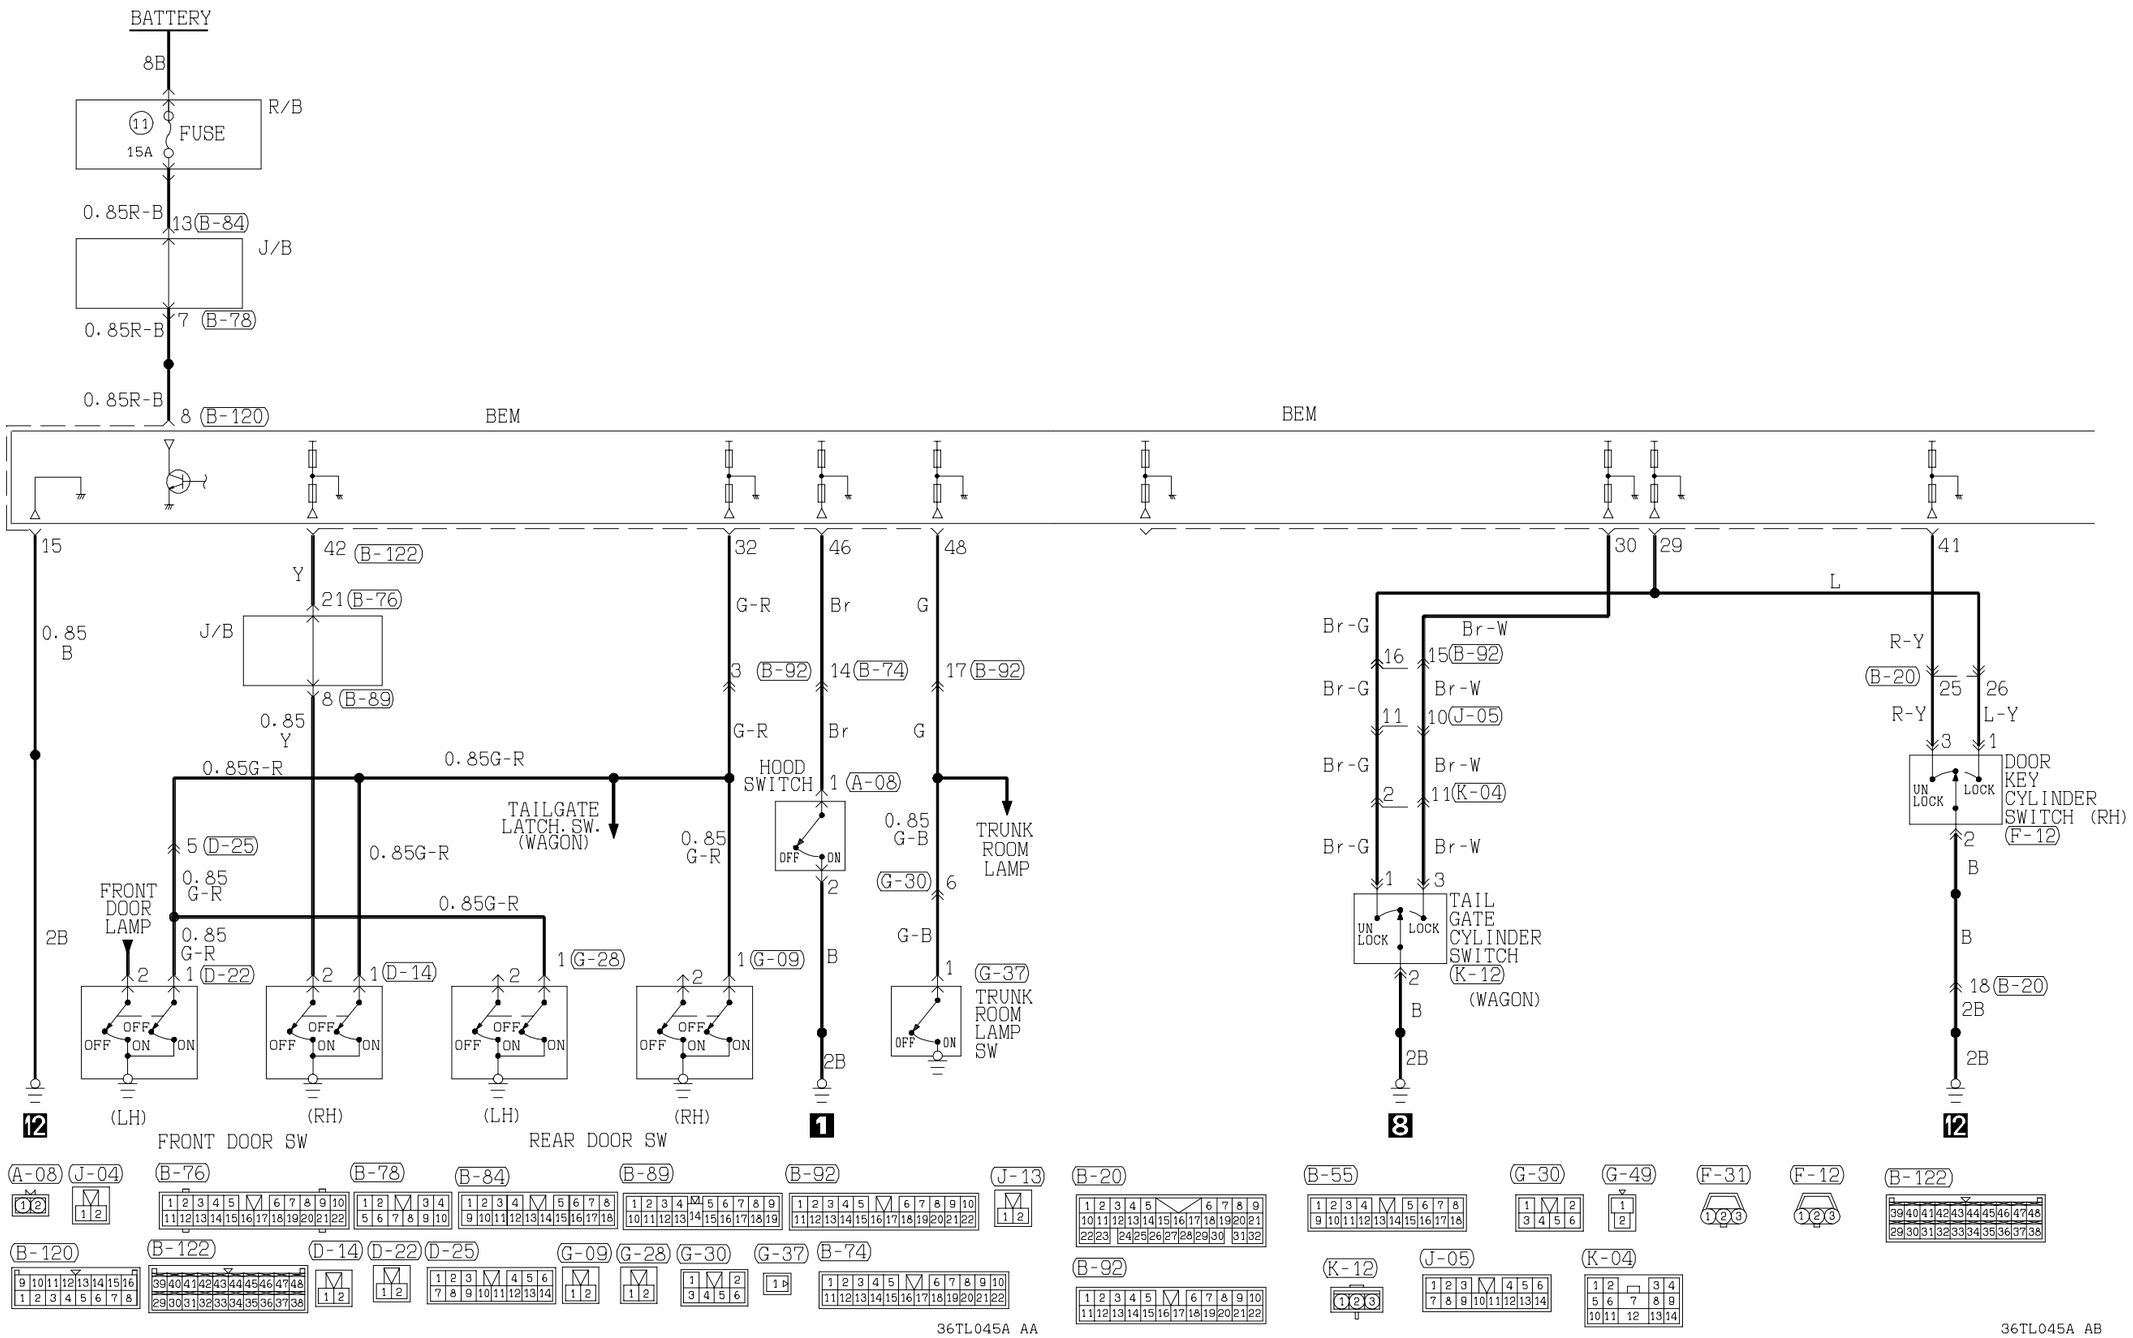
BATTERY
8B
R/B
11
FUSE
15A
0.85R-B
13 (B-84)
J/B
7 (B-78)
0.85R-B
0.85R-B
8 (B-120)
BEM
BEM
15
42 (B-122)
Y
21 (B-76)
J/B
0.85 B
8 (B-89)
0.85 Y
32
46
48
G-R
Br
G
3 (B-92)
14 (B-74)
17 (B-92)
G-R
Br
G
0.85G-R
0.85G-R
HOOD SWITCH
1 (A-08)
TAILGATE LATCH. SW. (WAGON)
0.85 G-R
0.85 G-B
(G-30)
6
TRUNK ROOM LAMP
G-B
1
(G-37)
TRUNK ROOM LAMP SW
OFF
ON
5 (D-25)
0.85 G-R
0.85G-R
FRONT DOOR LAMP
0.85 G-R
0.85G-R
2B
2
1 (D-22)
2
1 (D-14)
2
1 (G-28)
2
1 (G-09)
B
2B
(LH)
(RH)
(LH)
(RH)
FRONT DOOR SW
REAR DOOR SW
12
1
30
29
41
L
Br-G
Br-W
16
15 (B-92)
Br-G
Br-W
11
10 (J-05)
Br-G
Br-W
2
11 (K-04)
Br-G
Br-W
1
3
TAIL GATE CYLINDER SWITCH (K-12)
(WAGON)
2
B
2B
8
R-Y
(B-20)
25
26
R-Y
L-Y
3
1
DOOR KEY CYLINDER SWITCH (RH)
(F-12)
2
B
B
18 (B-20)
2B
2B
12
A-08
J-04
B-76
B-78
B-84
B-89
B-92
J-13
B-120
B-122
D-14
D-22
D-25
G-09
G-28
G-30
G-37
B-74
B-20
B-92
B-55
K-12
J-05
G-30
G-49
K-04
F-31
F-12
B-122
36TL045A AA
36TL045A AB

THEFT ALARM (CONTINUED)

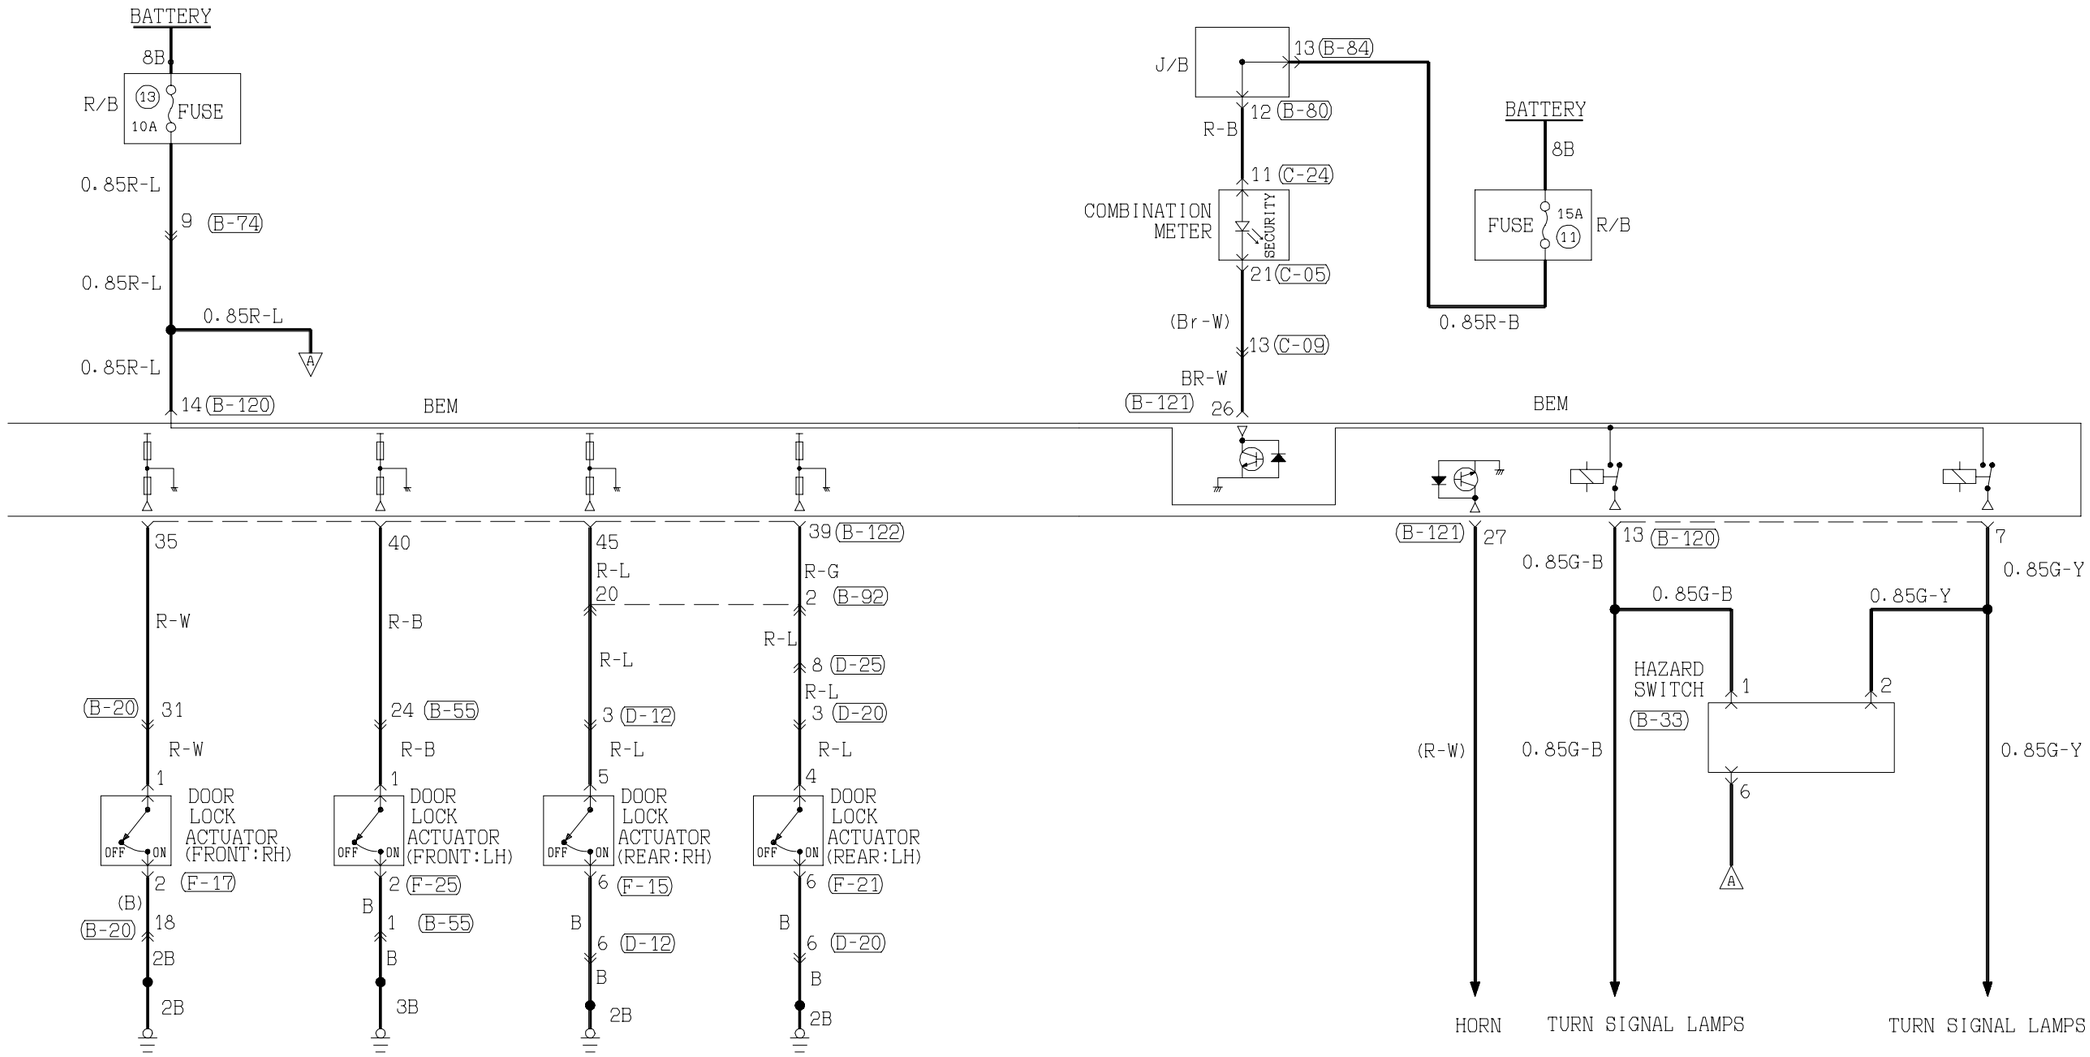

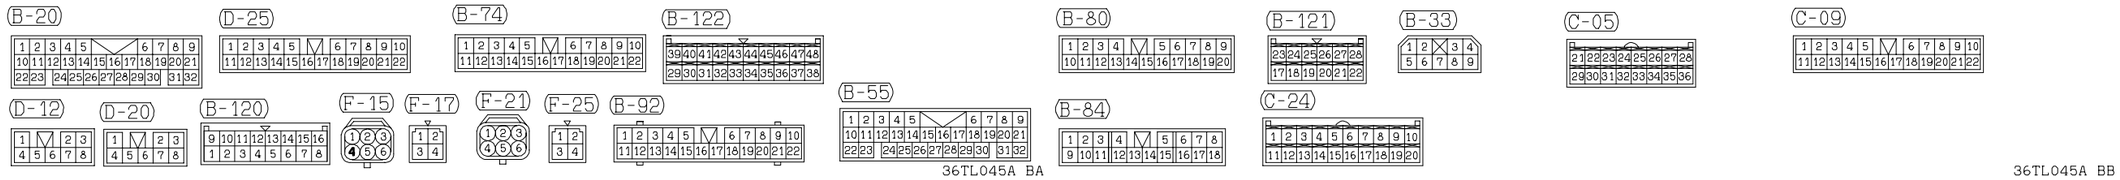

IMMOBILISATION

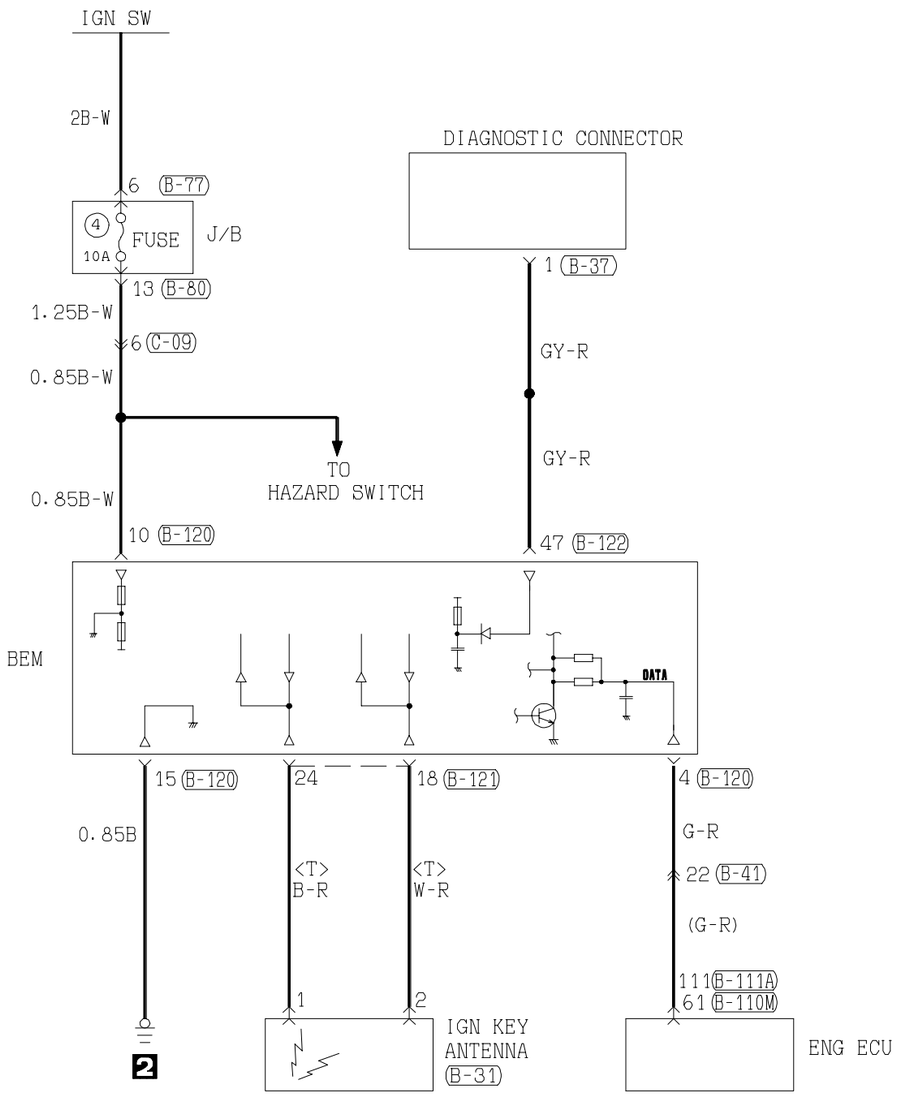

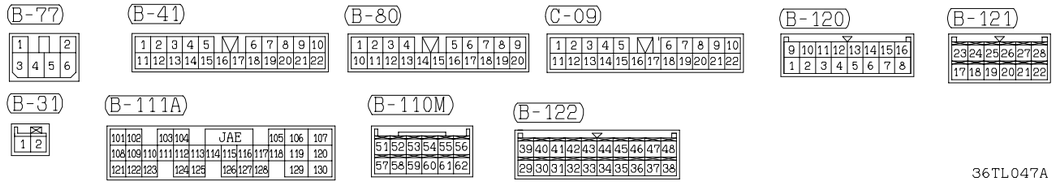

36TL047A AA

SUNROOF

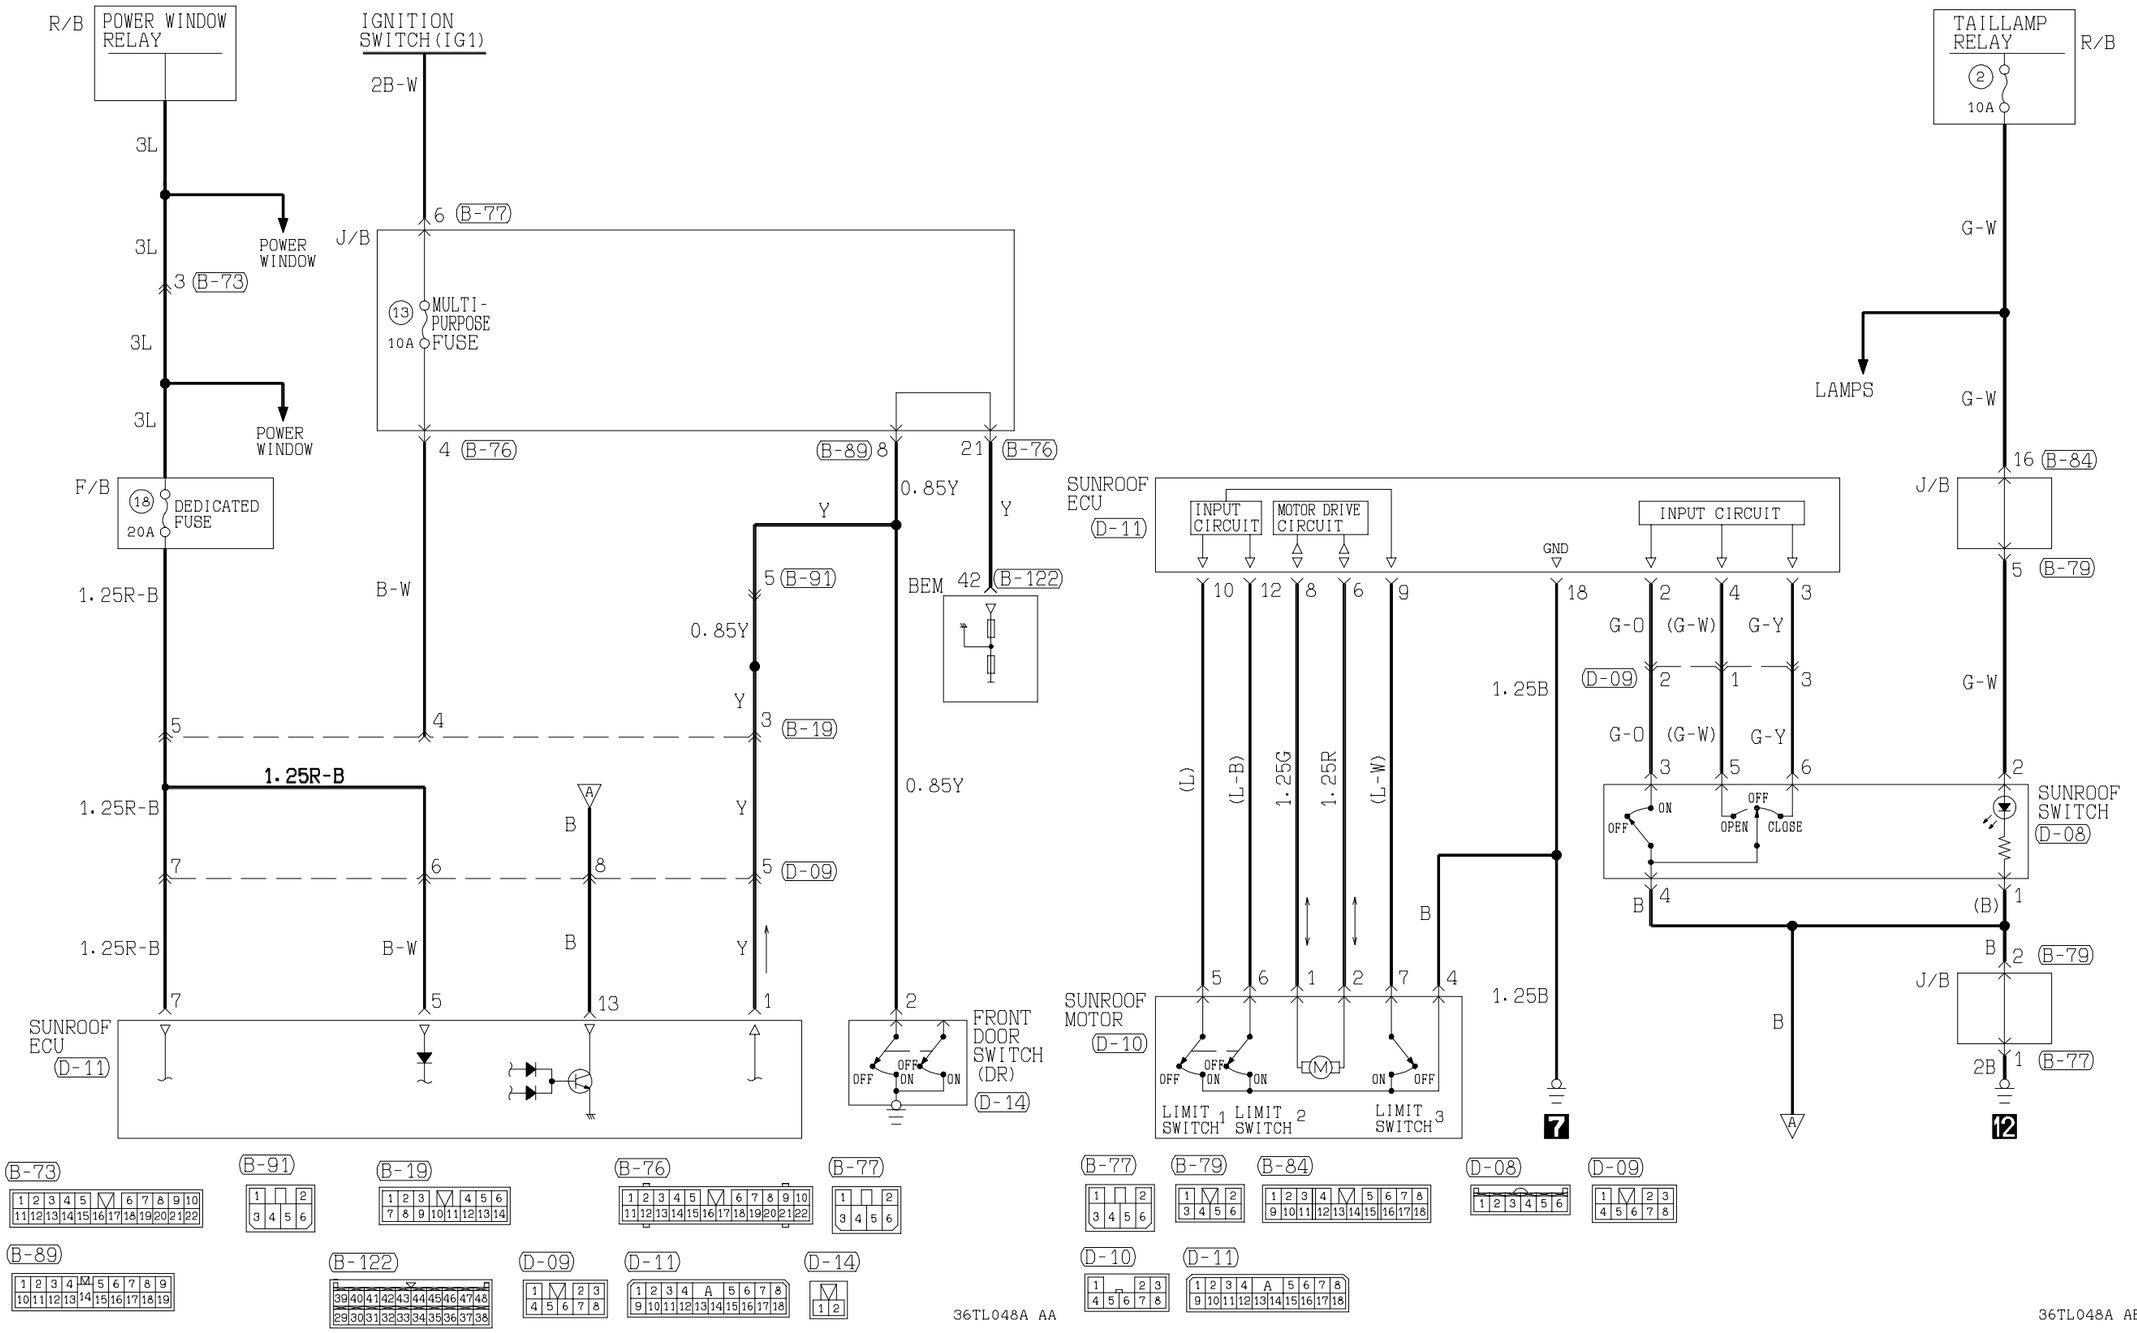
R/B
POWER WINDOW RELAY
3L
POWER WINDOW
3 B-73
F/B
18 DEDICATED FUSE 20A
1.25R-B
B-W
IGNITION SWITCH(IG1)
2B-W
6 B-77
J/B
13 MULTI-PURPOSE FUSE 10A
4 B-76
B-89 8
21 B-76
0.85Y
Y
5 B-91
BEM 42 B-122
3 B-19
1.25R-B
A
B
7
6
8
5 D-09
13
1
2
SUNROOF ECU D-11
FRONT DOOR SWITCH (DR) D-14
OFF ON
TAILLAMP RELAY
R/B
2
10A
G-W
LAMPS
16 B-84
J/B
5 B-79
SUNROOF ECU D-11
INPUT CIRCUIT
MOTOR DRIVE CIRCUIT
GND
10 12 8 6 9 18
(L) (L-B) 1.25G 1.25R (L-W) 1.25B
SUNROOF MOTOR D-10
LIMIT SWITCH 1
LIMIT SWITCH 2
LIMIT SWITCH 3
7
D-09
G-O (G-W) G-Y
1.25B
SUNROOF SWITCH D-08
OFF ON OPEN CLOSE
(B) 1
2 B-79
2B 1 B-77
12
36TL048A AA
36TL048A AB

POWER SEAT <DRIVER>

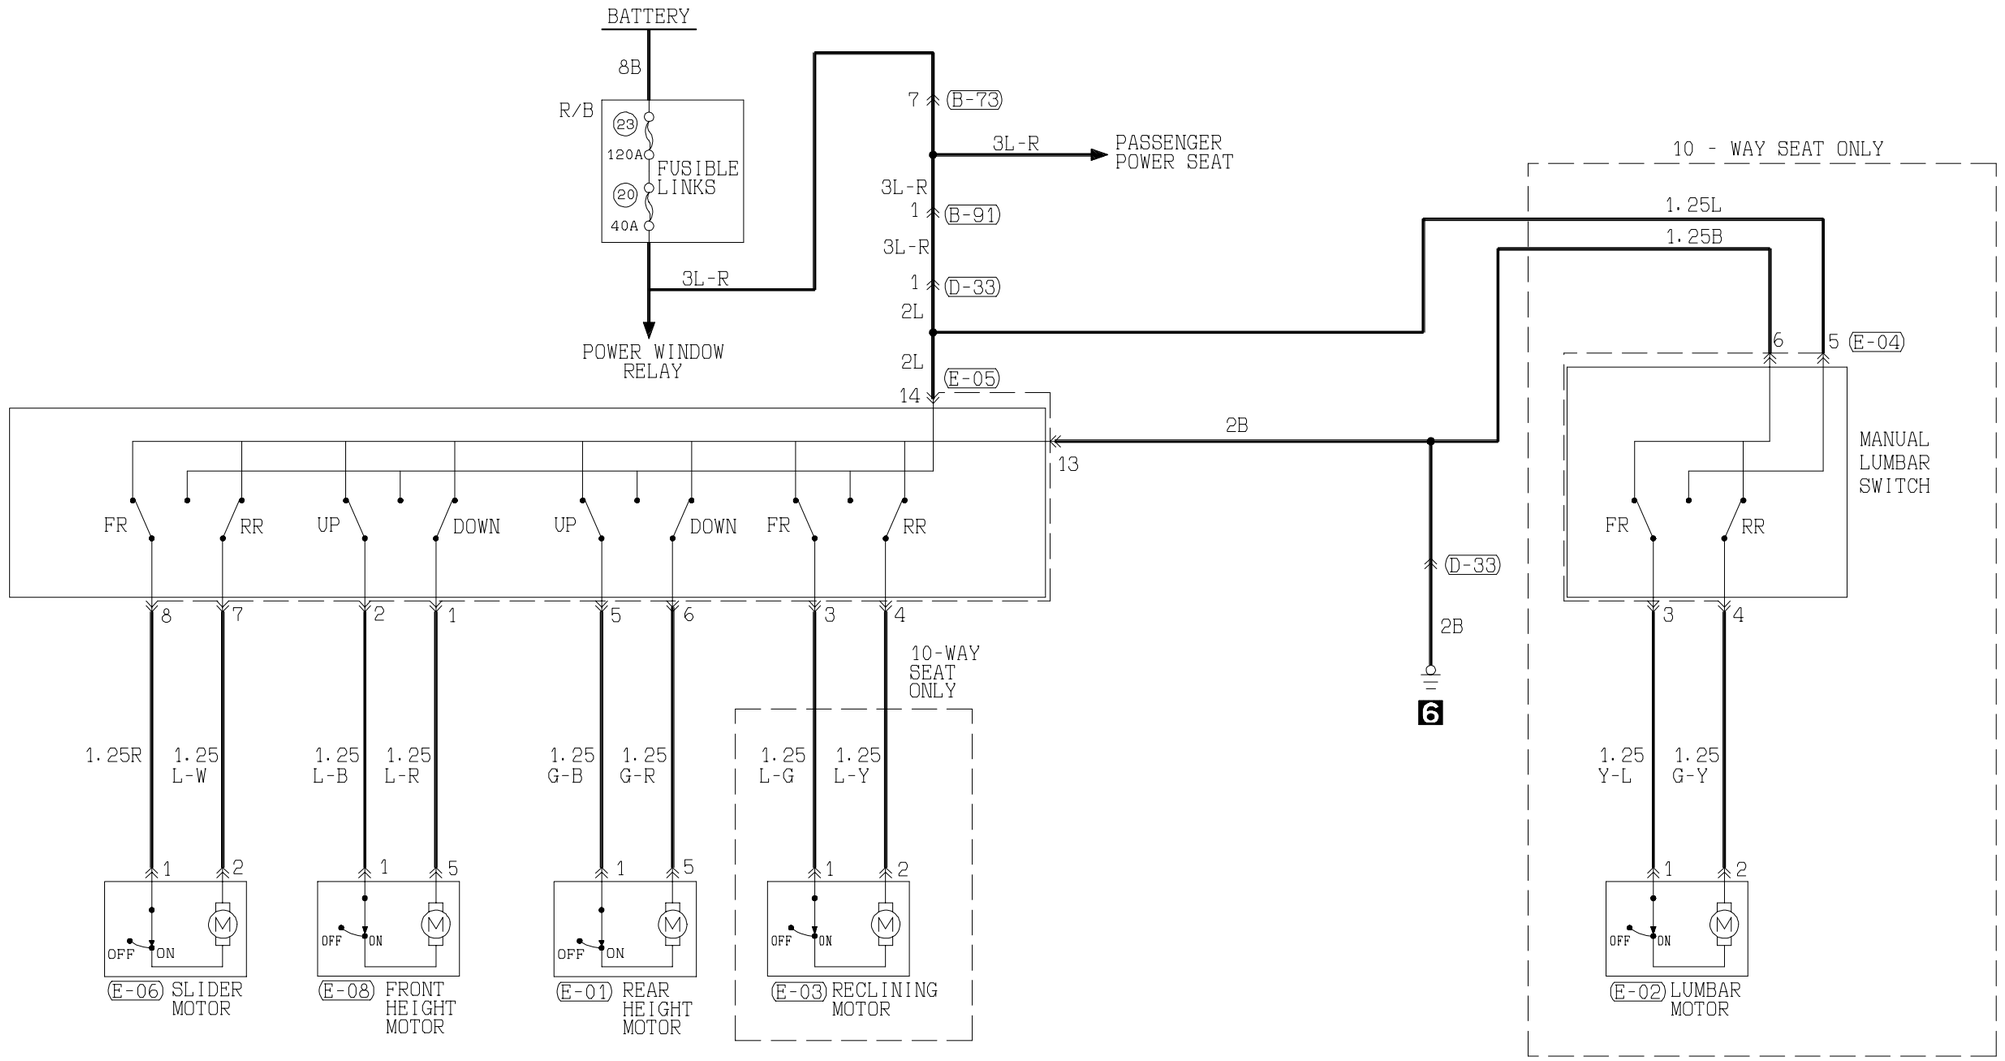





36TL052A AA

36TL052A AB

POWER SEAT <PASSENGER>

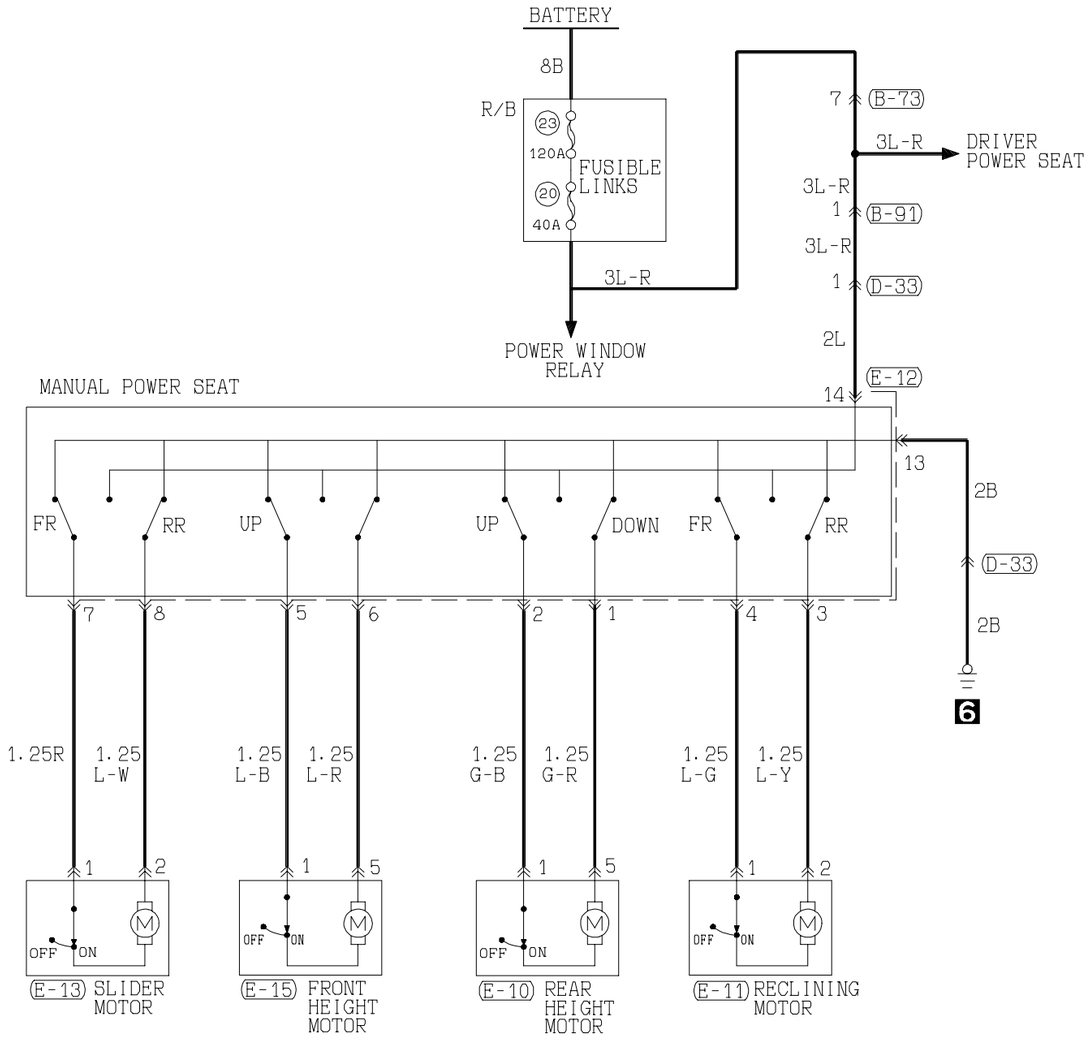



LIGHT MONITOR/ALARM BUZZER

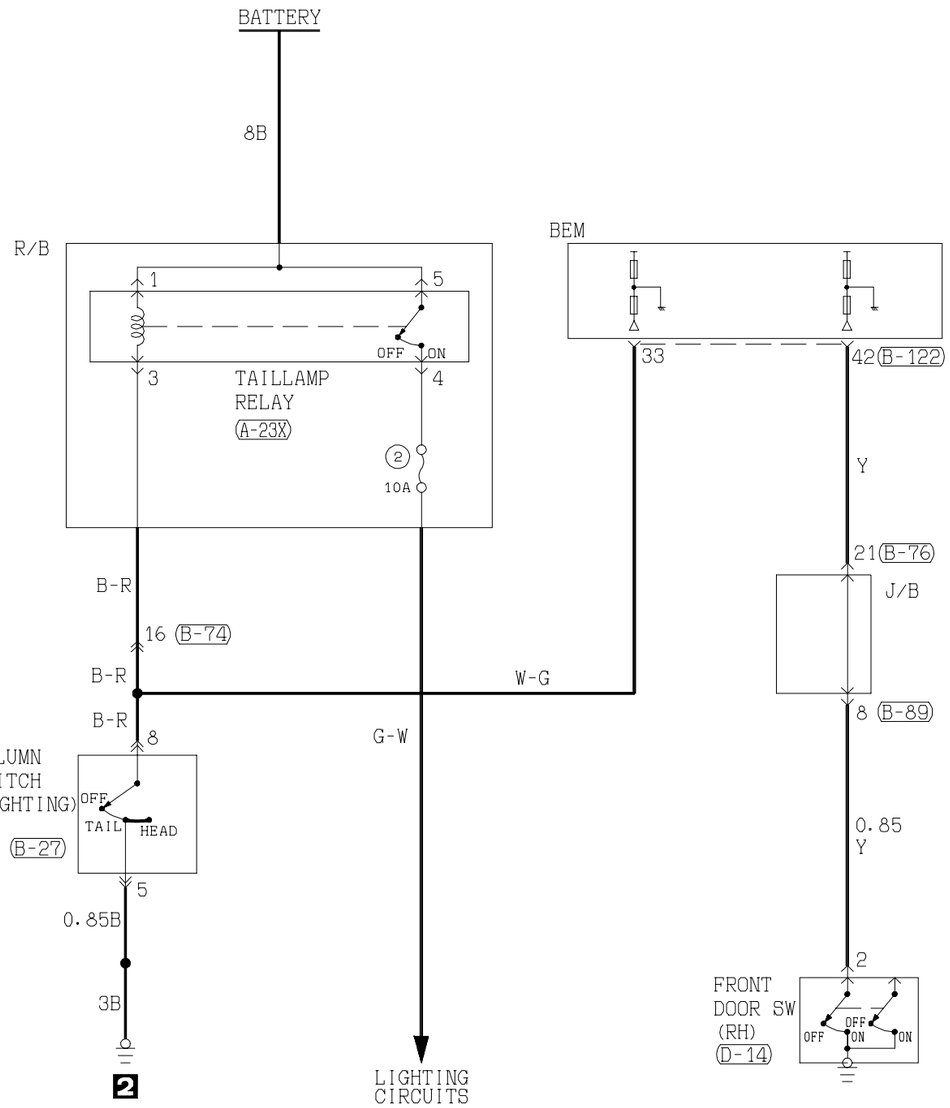

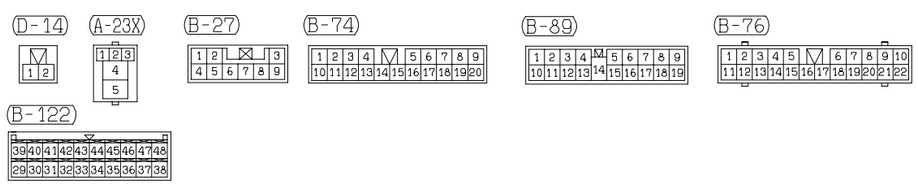

36TL049A AA

RHEOSTAT

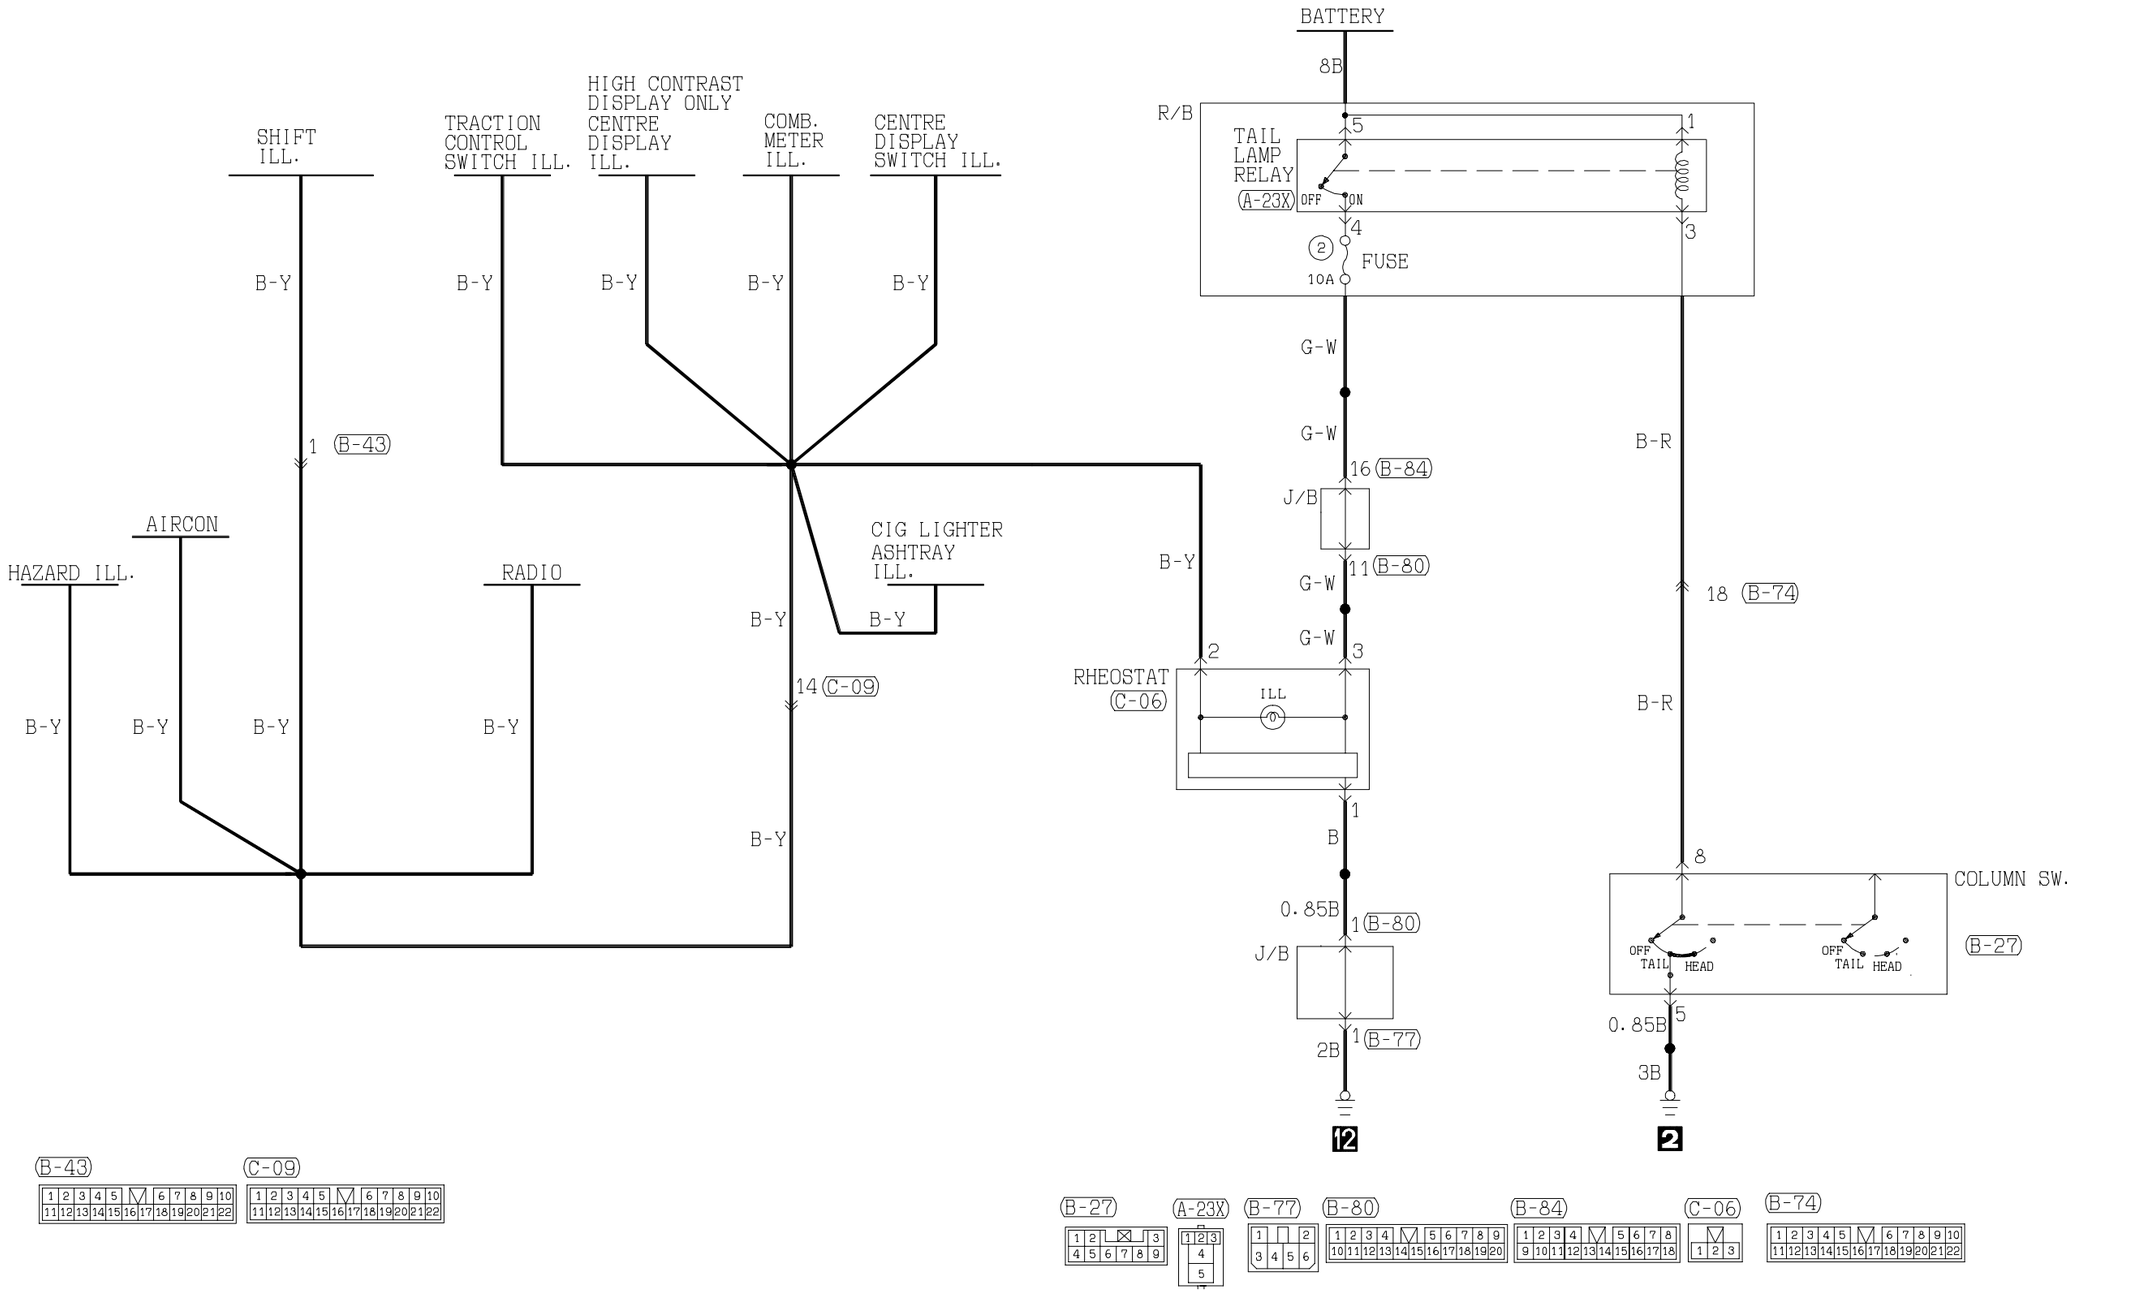

36TL050A AA

36TL050A AB