

## GROUP 54B

# SIMPLIFIED WIRING SYSTEM (SWS)

## CONTENTS

<b>GENERAL INFORMATION</b> .....	<b>54B-2</b>	<b>DIAGNOSTIC TROUBLE CODE CHART</b> .....	<b>54B-26</b>
COMMUNICATION METHOD .....	54B-2		
OPERATION .....	54B-2		
<b>SPECIAL TOOLS</b> .....	<b>54B-8</b>	<b>DIAGNOSTIC TROUBLE CODE PROCEDURES</b> .....	<b>54B-27</b>
<b>SWS DIAGNOSIS</b> .....	<b>54B-10</b>	<b>SYMPTOM CHART</b> .....	<b>54B-54</b>
GENERAL INFORMATION .....	54B-10	<b>INPUT SIGNAL CHART</b> .....	<b>54B-58</b>
BEFORE CARRYING OUT TROUBLESHOOTING .....	54B-10	<b>SYMPTOM PROCEDURES</b> .....	<b>54B-60</b>
DIAGNOSTIC FUNCTION .....	54B-10	<b>INPUT SIGNAL PROCEDURES</b> .....	<b>54B-495</b>
SWS DIAGNOSTIC TROUBLESHOOTING STRATEGY .....	54B-12	<b>CHECK AT ECU TERMINAL</b> .....	<b>54B-597</b>
HOW TO CONNECT SWS MONITOR ....	54B-13		
HOW TO USE SWS MONITOR .....	54B-15		
HOW TO CHECK ECUS .....	54B-16		
SERVICE DATA CHECK .....	54B-16		
PULSE CHECK .....	54B-25		




## GENERAL INFORMATION

## COMMUNICATION METHOD

As shown in the figure, SWS communications connect the ETACS\*<sup>1</sup>-ECU, the column switch (in the column-ECU), the front-ECU, and the sunroof-ECU.

NOTE: \*<sup>1</sup>: Electronic Time and Alarm Control System

M1549013000730

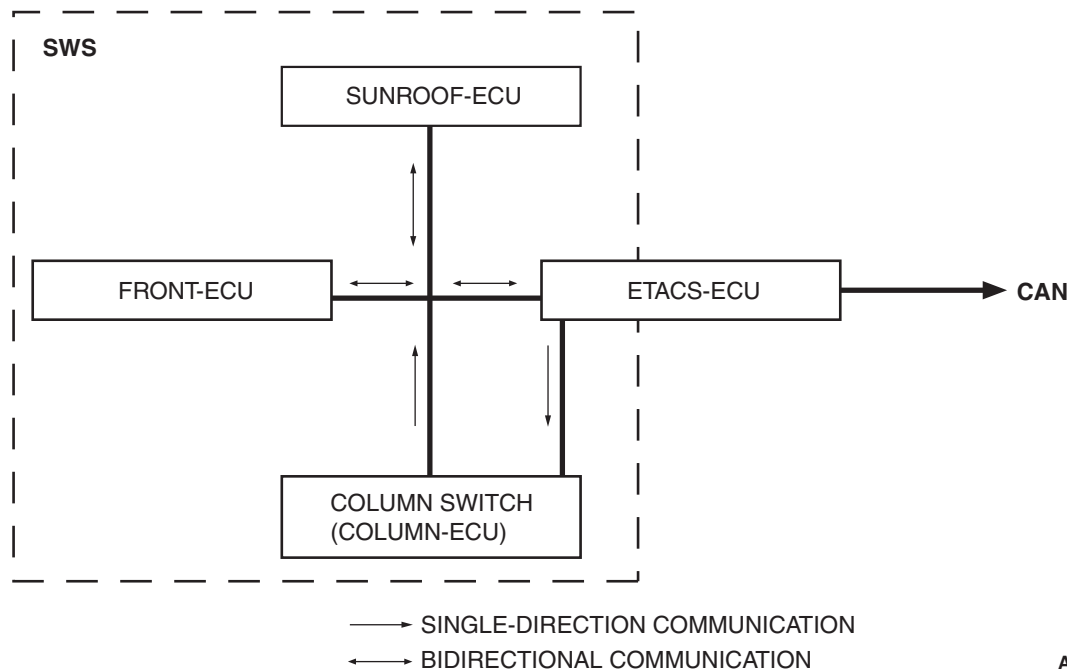

AC808181AB

## OPERATION

## TONE ALARM FUNCTION

## IGNITION KEY REMINDER TONE ALARM FUNCTION

When the driver's door is opened with the ignition key inserted in the ignition key cylinder (ignition switch is in the OFF position,) the tone alarm sounds intermittently to indicate that the ignition key has not been removed.

## LIGHT REMINDER TONE ALARM FUNCTION

When the taillights or headlights are ON, if the ignition key is removed and the driver's door is opened, a tone alarm will sound continuously to warn that the light is illuminated. However, if the taillights or headlights have been turned off by the headlight automatic-shutdown function, the tone alarm will not sound.

## SEAT BELT TONE ALARM FUNCTION

If any of the following conditions are met with the ignition switch at "ON" or "ST", the ETACS-ECU sounds the tone alarm by using the driver's seat belt switch signal and the vehicle speed signal from the combination meter.

- Sounds the tone alarm for 6 seconds when the ignition switch is turned "ON" with the seat belt switch on (the driver's seat belt is not fastened) (Timer function).
- Sounds the tone alarm 12 cycles (after 0.5 second) if any of the following conditions are met when 60 seconds or more have elapsed since the ignition switch is turned "ON". One cycle consists of 5 seconds "on" and then 3 seconds "off".
  - a. The vehicle speed has reached 8 km/h (5 mph) while the seat belt switch is turned on (driver's seat belt is not fastened) with the ignition switch "ON".
  - b. The seat belt switch has been turned on (driver's seat belt has not been fastened) for at least 10 seconds while the ignition switch has been turned "ON" and the vehicle speed has been 8 km/h (5 mph) or more.

M1549013100759



*NOTE: Once the tone alarm has sounded 12 cycles, it does not sound again until the vehicle speed reduces to 3 km/h (2 mph) or less even if any of the following conditions is met.*

- The tone alarm stops sounding if the ignition switch or the seat belt switch is turned off (the driver's seat belt is fastened) while the timer operation is active.

## DOOR AJAR TONE ALARM FUNCTION

The buzzer is sounded 4 times by the ETACS-ECU to warn the driver if any door is open when the ignition is switched ON and the vehicle speed reaches 8 km/h (5 mph) or faster. The buzzer will continue to sound 4 times even if the ignition, door status, or vehicle speed requirements are not maintained.

## CENTRAL DOOR LOCKING SYSTEM

### CENTRAL DOOR LOCKING SYSTEM OPERATION

Door locking or unlocking by operating the driver's or passenger's door lock switch:

- When the door is locked by the driver's or passenger's door lock switch, the ETACS-ECU operates its door lock relay and passes a current through the door lock actuators of all doors for 0.25 second to lock all doors.
- When the door is unlocked by the driver's or passenger's door lock switch, the ETACS-ECU operates its door unlock relay and passes a current through the door lock actuators of all doors for 0.25 second to unlock all doors.
- When the door is locked and unlocked by driver's or passenger's door lock switch consecutively, the ETACS-ECU operates its door lock relay and passes a current through the door lock actuators of all doors for 0.25 second to lock all doors. Then, the ETACS-ECU operates its door unlock relay and passes a current through the door lock actuators of all doors for 0.25 second to unlock all doors. Due to this, there may be a time lag between the driver's or passenger's door lock switch actuation and the time when all doors are unlocked.

## FORGOTTEN KEY PREVENTION FUNCTION

- If the driver's door is locked while it is open and when the key is still in the ignition key cylinder, approximately 0.3 second later the ETACS-ECU activates the unlock relay output for 0.25 second to prevent the door from being locked with the key inside the vehicle. In addition, if locking the door was not prevented, a re-try current is sent (an unlock relay output ON is sent for 0.25 second up to 5 times including the first attempt).
- If the passenger's door or driver's door are locked while the passenger's door is open and when the key is still in the ignition key cylinder, approximately 0.3 second later the ETACS-ECU activates the unlock relay output for 0.25 second to prevent the door from being locked with the key inside the vehicle. In addition, if locking the door was not prevented, a re-try current is sent (an unlock relay output ON is sent for 0.25 second up to 5 times including the first attempt).

## POWER WINDOW RELAY CONTROL

### POWER WINDOW RELAY OPERATION

If the ignition switch is turned to "ON" position, the power window relay is energized to activate the power windows.

### POWER WINDOW TIMER FUNCTION

Even after the ignition is switched off, the ETACS-ECU keeps the power window relay activated for approximately 30 seconds, enabling raising and lowering of the power windows by using the power window switches. After approximately 30 seconds, the power window relay is deactivated. During this timed operation, if the driver or passenger doors are opened, the power window relay is deactivated from that moment.

## KEYLESS ENTRY SYSTEM

### KEYLESS ENTRY HAZARD ANSWER-BACK FUNCTION

If the keyless entry transmitter is used to send a lock signal to the ETACS-ECU, all doors are locked and the hazard warning lights flash once. If an unlock signal is sent, the driver's door is unlocked first, and if a second signal is sent, all doors are unlocked. Each time the unlock signal is sent, the hazard warning lights flash twice.



**KEYLESS ENTRY HORN ANSWERBACK  
FUNCTION**

When the lock signal from the keyless entry transmitter is received into ETACS-ECU, all doors are locked and the horn sounds. If the driver's door cannot be locked even when the keyless entry transmitter is operated, the horn does not sound.

**LIFTGATE UNLOCK FUNCTION  
<ECLIPSE>**

Press the "LIFTGATE" button twice within 5 seconds and the liftgate will be unlocked.

**TRUNK LID UNLOCK FUNCTION  
<ECLIPSE SPYDER>**

Press the "TRUNK LID" button twice within 5 seconds and the trunk lid will be unlocked.

**TIMED LOCKING MECHANISM**

After unlocking the doors with the keyless entry transmitter, if no doors are opened or if the ignition key is not inserted, the ETACS-ECU automatically locks the doors in 30 seconds.

**SUNROOF CONTROL****SUNROOF TIMER FUNCTION**

The ETACS-ECU enables opening and closing of the sunroof for 30 seconds after the ignition is switched off. During this timed operation, if the driver's or passenger's door is opened, the sunroof timer function is deactivated from that moment.

**WINDSHIELD WIPER AND WASHER****LOW-SPEED WIPER, HIGH-SPEED  
WIPER CONTROL**

- When the ignition switch is in the ACC or ON position, and the windshield low-speed wiper switch of the column switch is turned ON, the front-ECU turns ON the windshield wiper drive signal, turns OFF (LOW) the windshield wiper speed relay, and operates the windshield wiper at low-speed.
- When the windshield high speed wiper switch is turned ON, the windshield wiper drive signal is turned ON, the windshield wiper speed switching relay is turned ON (HIGH), and the windshield wiper is operated at high-speed.

**INTERMITTENT CONTROL**

ETACS-ECU uses the dial position of the variable intermittent wiper control switch and the vehicle speed signal sent by the combination meter to calculate the interval to be sent to the front-ECU. The front-ECU determines the intermittent time from the input SWS data signal, and turns ON the windshield wiper drive signal. When the wiper is at the STOP position, the windshield wiper auto-stop signal goes OFF to turn OFF the windshield wiper drive signal. After the intermittent time from when the windshield wiper drive signal turned ON, the windshield wiper drive signal is turned ON again and the above operation is repeated.

**MIST WIPER CONTROL**

When the ignition switch is in the ACC or ON position, and the windshield mist wiper switch of the column switch is turned ON, the front-ECU turns ON the windshield wiper drive signal. At the same time, the wiper speed switching relay is turned ON (HIGH-SPEED). While the windshield mist wiper switch is ON, the windshield wiper will operate at high speed. Then, if the windshield mist wiper switch is turned off, the wiper operates at low speed until it stops at the predetermined park position. When the windshield mist switch is turned on briefly, the wiper operates once at low speed. At the point the windshield mist switch is turned ON, if the windshield wiper has been operating intermittently, the same operations as the above will be performed while the windshield mist wiper switch is ON. After the windshield mist wiper switch goes OFF, the intermittent operations will be set again after the windshield wiper auto-stop signal last is turned ON.

**WASHER CONTROL**

When the ignition switch is in the ACC or ON position, and the windshield washer switch of the column switch is turned ON, the front-ECU turns ON the windshield washer relay. The windshield wiper drive signal is turned ON in 0.15 seconds until 2 seconds after the windshield washer switch goes OFF to operate the windshield wiper continuously. When the windshield washer switch is turned ON, if the windshield wiper is operating intermittently, intermittent operation will resume after two or three wipes.



## REAR WIPER AND WASHER

### INTERMITTENT CONTROL (BASIC CONTROL)

When the rear wiper switch on the column switch is turned ON with the ignition switch ACC or ON, ETACS-ECU turns ON the rear wiper relay and operates the rear wiper twice consecutively. After that, operation continues at 8-second intervals.

### "R" POSITION-LINKED CONTROL

When the shift lever <M/T> or the selector lever <A/T> is moved to R (reverse) position during the rear wiper operation, the backup light switch <M/T> or the transmission range switch R (reverse) <A/T> turns ON. One second after that, the ETACS-ECU turns the rear wiper relay ON, and operates the rear wiper twice consecutively.

### REAR WASHER CONTROL

When the rear washer switch on the column switch is turned ON with the ignition switch ACC or ON, the ETACS-ECU turns ON the rear washer relay. If the rear washer switch remains ON for 0.9 second or more, the rear wiper operates. 3 seconds after the rear washer switch is turned OFF, the rear wiper is stopped. If the rear washer switch is turned ON during the intermittent operation of the rear wiper, the rear wiper operates along with the rear washer consecutively. 7.4 seconds after the rear wiper stops consecutive operation, it returns to the intermittent operation.

## HEADLIGHT

### HEADLIGHT AUTOMATIC SHUTDOWN FUNCTION

Even if the lighting switch (taillight switch or headlight switch) is ON, the headlights and taillights will automatically go off in the following conditions to prevent the battery from discharging:

When the ignition key is turned from "ON" to "LOCK" (OFF) or "ACC" position with the lighting switch turned ON, and this state continues for three minutes, the light will automatically be turned off. If the driver's seat door is opened during these 3 minutes, the light will go off 1 second later.

## HIGH-BEAM INDICATOR

At the same time that the high-beams are illuminated, the ETACS-ECU sends a signal to illuminate the high-beam indicator via the CAN bus line. The combination meter receives the transmitted signal and turns the high-beam indicator on and off.

### DAYTIME RUNNING LIGHT FUNCTION

The ETACS-ECU outputs the daytime running light forced-OFF signal to the front-ECU based on the input signal sent via CAN communication. The front-ECU controls illumination and extinction of the daytime running light according to the daytime running light forced-OFF signal.

#### Illumination control of daytime running lights

- If the engine is started when the parking brake is not pulled, the headlights illuminate with the brightness reduced.
- If the engine is started while the parking brake is pulled, the daytime running light function OFF mode is entered and the headlights do not illuminate. If the parking brake is released, the OFF mode is cancelled and the headlights illuminate.

## FLASHER TIMER

### TURN-SIGNAL LIGHT

The turn-signal light output (flashing signal) is turned ON when the ignition switch is ON and the turn-signal light switch is ON (LH or RH). If the front turn-signal light or rear turn-signal light bulb has burned out, the flashing speed increases to indicate that the bulb has burned out.

### HAZARD WARNING LIGHT

Detects the signal where the hazard warning light switch input changes from OFF to ON, and reverses the flashing state according to this signal. The hazard warning lights toggle on and off whenever the hazard warning light switch is operated.

### TURN-SIGNAL INDICATORS

At the same time that the turn-signal lights are illuminated, the ETACS-ECU sends a signal to illuminate the turn-signal light indicator via the CAN bus line. The combination meter receives the transmitted signal and turns the turn-signal light indicator on and off.



## FRONT FOG LIGHT

### FRONT FOG LIGHT

The front fog lights will illuminate only when the front fog light switch is operated while the low-beam headlights are on.

The front fog lights will be switched off when any of the following conditions is met. The front fog lights will also be switched off automatically by headlight automatic shutdown function.

- When the high-beam headlights are switched on, the front fog lights will be switched off. If the low-beam headlights are switched on again, the front fog lights will illuminate again.
- When the headlight switch is turned off while the taillights are on or the taillights and headlights are off, the front fog lights will be switched off. If the low-beam headlights are switched on again, the front fog lights will not illuminate again.

### FRONT FOG LIGHT INDICATOR

At the same time that the front fog lights are illuminated, the ETACS-ECU sends a signal to illuminate the front fog light indicator via the CAN bus line. The combination meter receives the transmitted signal and turns the front fog light indicator on and off.

## INTERIOR LIGHT

The ETACS-ECU controls the interior lights by turning them on and off in the following way:

- When a door is opened with the ignition switch off, the interior lights up to a luminance of 100 percent. When a door is closed, the interior lights dim to a luminance of 65 percent, and go off 30 seconds later. However if the ignition switch is turned ON or if a door is locked while the interior lights are dimming, the dome light will go off at that point.
- When a door is opened with the ignition switch ON, the interior lights up at a luminance of 100 percent. When a door is closed, the interior lights go off.
- When the ignition key is removed with all doors closed, the interior lights up at a luminance of 100 percent, and goes off 30 seconds later. However if the ignition key is inserted again or if a door is locked while the interior lights is lighting, the interior lights will go off at that point.
- To check keyless entry operations more easily, the interior lights flash once when the doors are locked. When the doors are unlocked, the interior lights at a luminance of 100 percent, and go off 15 seconds later.

## INTERIOR LIGHT AUTOMATIC SHUTDOWN FUNCTION

Illuminated interior lights such as the front dome light, etc. (all lights using the dome light fuse as the power supply) will automatically go off in the following conditions to prevent the battery from discharging as a result of forgetting to turn off the lights or incomplete closing of the door.

- When the ignition switch is turned off and more than 30 minutes pass by with the interior light illuminated, the interior lights will go off automatically.
- When the ignition switch is turned off and one of the door switches remains open for 30 minutes continuously, the interior lights will go off automatically.

## SEAT BELT INDICATOR

If any of the following conditions is met with the ignition switch at "ON" or "ST", the ETACS-ECU illuminates, flashes or turns off the seat belt indicator by using the driver's seat belt switch signal and the vehicle speed signal sent from the combination meter.

- Illuminates when the ignition switch is at "ON" and the seat belt switch is turned on (the driver's seat belt is unfastened).
- Flashes and illuminates the indicator 12 cycles (after 0.5 second) if any of the following conditions is met when sixty seconds or more have elapsed since the ignition switch is turned "ON". One cycle consists of five-second "flashing" and then three-second "illumination".
  - a. The vehicle speed has reached 8 km/h (5 mph) while the seat belt switch is turned on (driver's seat belt is not fastened) with the ignition switch "ON".
  - b. The seat belt switch has been turned on (driver's seat belt has not been fastened) for at least ten seconds while the ignition switch has been turned "ON" and the vehicle speed has been 8 km/h (5 mph) or more.

*NOTE: Once this timer operation has been activated, it will not be activated again until the vehicle speed reduces to 3 km/h (2 mph) or less even if any of the following conditions is met.*

- The indicator turns off if the ignition switch or the seat belt switch is turned off (the driver's seat belt is fastened) while the timer operation is active.



## **DOOR-AJAR INDICATOR LIGHT**

The combination meter receives the signal sent from the ETACS-ECU about whether each door is open or closed and turns the door ajar indicator on and off. While the door ajar indicator is illuminated, the door ajar tone alarm function is activated and the door ajar indicator flashes 4 times. If the door remains open even after the 4 warning flashes, the door ajar indicator will be illuminated again. And when the interior light automatic-shutoff function is activated, the door ajar indicator turns off.








## **IGNITION KEY CYLINDER ILLUMINATION FUNCTION**

The ignition key cylinder illumination light illuminates when the driver's door is opened with the ignition switch off, and for 30 seconds after the driver's door is closed. It also illuminates for 30 seconds after the ignition key is pulled out. In any case, it goes out when the ignition switch is turned on.






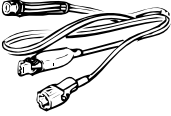
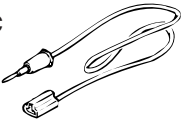

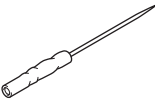


## SPECIAL TOOLS

M1549000301251

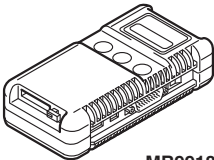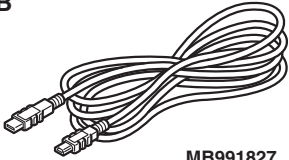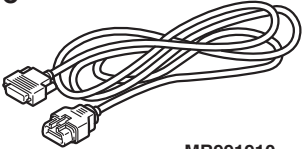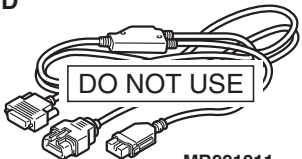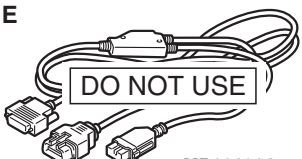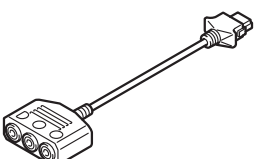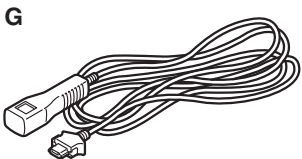TOOL	TOOL NUMBER AND NAME	SUPERSESSION	APPLICATION
<p><b>A</b></p>  <p>MB991824</p> <p><b>B</b></p>  <p>MB991827</p> <p><b>C</b></p>  <p>MB991910</p> <p><b>D</b></p>  <p>MB991911</p> <p><b>E</b></p>  <p>MB991914</p> <p><b>F</b></p>  <p>MB991825</p> <p><b>G</b></p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>A: MB991824 B: MB991827 C: MB991910 D: MB991911 E: MB991914 F: MB991825 G: MB991826</p> <p>Scan tool (M.U.T.-III sub assembly)</p> <p>A: Vehicle communication interface (V.C.I.)</p> <p>B: M.U.T.-III USB cable</p> <p>C: M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>D: M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>E: M.U.T.-III main harness C (for Chrysler models only)</p> <p>F: M.U.T.-III measurement adapter</p> <p>G: M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b></p> <p><b>For vehicles with CAN communication, use M.U.T.-III main harness A to send simulated vehicle speed. If you connect M.U.T.-III main harness B instead, the CAN communication does not function correctly.</b></p> <p>SWS communication line check (ECU check and service data)</p>

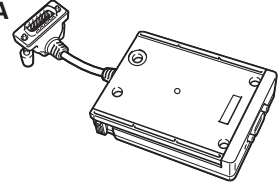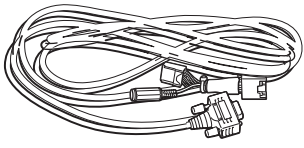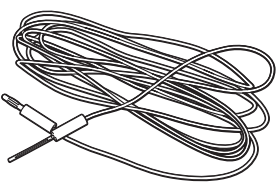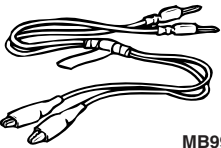

TOOL	TOOL NUMBER AND NAME	SUPERSESSION	APPLICATION
<p><b>A</b></p>  <p><b>B</b></p>  <p><b>C</b></p>  <p align="right">B991813</p>	<p>MB991813 A: MB991806 B: MB991812 C: MB991822 SWS monitor kit A: SWS monitor cartridge B: SWS monitor harness (for column-ECU) C: Probe harness</p>	-	SWS communication line check (ECU check and service data)
 <p align="right">MB991529</p>	<p>MB991529 Diagnostic trouble code check harness</p>	Tool not necessary if the scan tool (M.U.T.-III) is available	Checking input signal when using a voltmeter
<p><b>A</b></p>  <p><b>B</b></p>  <p><b>C</b></p>  <p><b>D</b></p>  <p align="right">DO NOT USE MB991223AZ</p>	<p>MB991223 A: MB991219 B: MB991220 C: MB991221 D: MB991222 Harness set A: Test harness B: LED harness C: LED harness adaptor D: Probe</p>	General service tools	<p>Making voltage and resistance measurement during troubleshooting</p> <p>A: Connector pin contact pressure inspection B: Power circuit inspection C: Power circuit inspection D: Commercial tester connection</p>
 <p align="right">MB992006</p>	<p>MB992006 Extra fine probe</p>	General service tool	Making voltage and resistance measurement during troubleshooting



## SWS DIAGNOSIS

### GENERAL INFORMATION

#### BEFORE CARRYING OUT TROUBLESHOOTING

Before carrying out troubleshooting, check the following two items.

- Make sure that the ETACS-ECU, the junction block (J/B), the front-ECU and the engine compartment relay box are connected securely.

- Make sure that fuses and fusible links related to relevant systems are not blown.

M1549014700970

### DIAGNOSTIC FUNCTION

#### ON-BOARD DIAGNOSTICS

If an error occurs in the ECU or the SWS or CAN communication line which performs the SWS or CAN communication, the DTC is memorized in ETACS-ECU. The DTCs have 16 items. The DTCs are checked to connect scan tool MB991958 (M.U.T.-III sub assembly). The memorized DTCs are not erased even if the ignition switch is turned to the "LOCK" (OFF) position. The DTCs are erased to operate scan tool MB991958 (M.U.T.-III sub assembly).

*NOTE: \*1: For vehicles that do not have a sunroof, the diagnosis code is always sent but it does not indicate a problem.*

*NOTE: \*2: The diagnostic trouble code is always set, but it does not indicate a problem.*

*NOTE: \*3: The diagnosis code for a past problem is not sent.*

M1549028900353


CODE NUMBER	TROUBLE CONTENT
U1700	Malfunction in the SWS communication line
U1701	Communication error in the column switch
U1702	Communication error in the front-ECU
U1703 <sup>*1</sup>	Communication error in the sunroof-ECU or the sunroof not installed
U1704 <sup>*2</sup>	Communication error in the power window main switch
U1073	Bus Off
U1100	ECM <M/T> or PCM <A/T> time-out (related to engine)
U1101	ECM <M/T> or PCM <A/T> time-out (related to transaxle)
U1108	Combination meter time-out
U1110	A/C-ECU time-out
U1111 <sup>*2</sup>	Multi-center display unit (middle-grade type) time-out
U1128	Failure information on combination meter
B1702 <sup>*3</sup>	Reception error of transponder data
B1703 <sup>*3</sup>	Transponder data inconsistent
B1731	Immobilizer communication failure.
B1761	VIN not recorded

#### HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

##### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



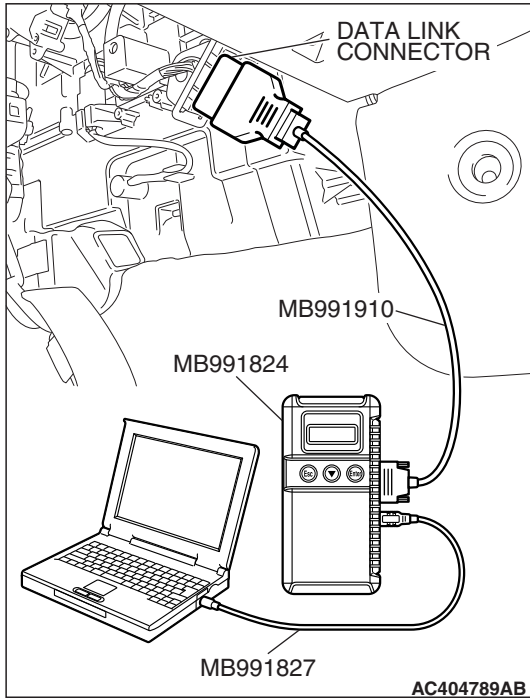

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

7. Start the M.U.T.-III system on the personal computer.

*NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.*

## HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

### Required Special Tools:


- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

*NOTE: If the battery voltage is low, diagnostic trouble codes will not be set. Check the battery if scan tool MB991958 does not display.*

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "Interactive Diagnosis" from the start-up screen.
4. Select "System select."
5. Choose "ETACS" from the "BODY" tab.
6. Select "Diagnostic Trouble Code" to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.

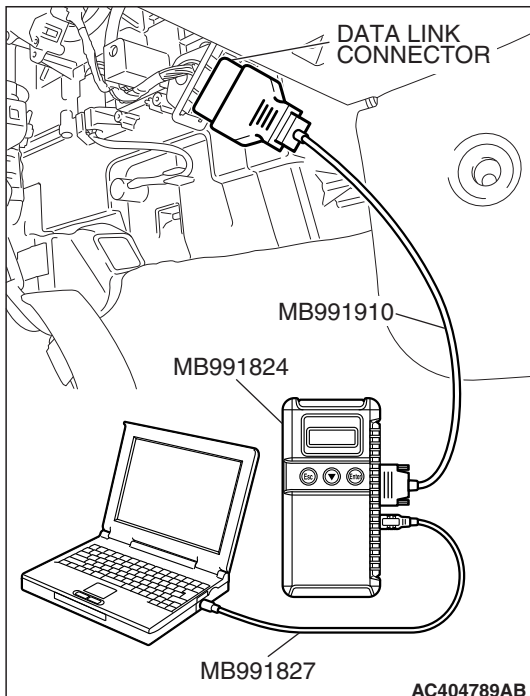



## HOW TO DIAGNOSE THE CAN BUS LINES


## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "CAN bus diagnosis" from the start-up screen.
4. When the vehicle information is displayed, confirm that it matches the vehicle being diagnosed.
  - If they match, go to step 8.
  - If not, go to step 5.
5. Select the "view vehicle information" button.
6. Enter the vehicle information and select the "OK" button.
7. When the vehicle information is displayed, confirm again that it matches the vehicle being diagnosed.
  - If they match, go to step 8.
  - If not, go to step 5.
8. Select the "OK" button.
9. When the optional equipment screen is displayed, choose the one which the vehicle is fitted with, and then select the "OK" button.

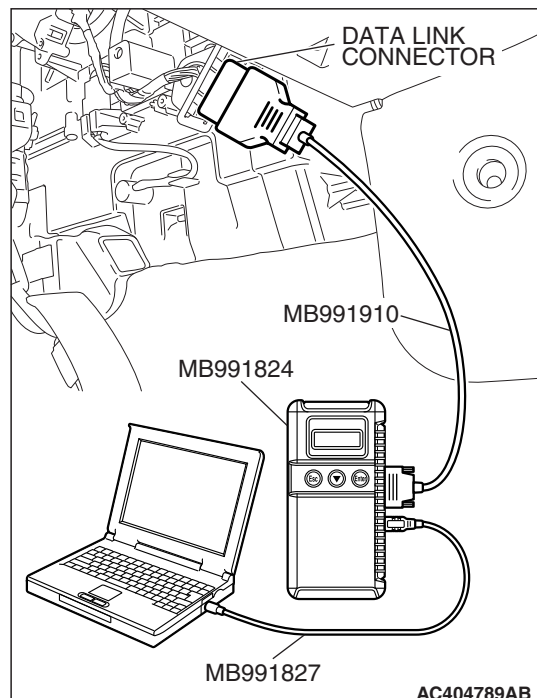

## SWS DIAGNOSTIC TROUBLESHOOTING STRATEGY

M1549000501158

1. Gather information about the problem from the customer.
2. Verify that the condition described by the customer exists.

*NOTE: If an error occurs in the SWS communication line, the ECU isolated from the communication line performs a fail-safe or backup operation, so the problem may not match the one shown in the Trouble Symptom Chart. However, the cause of the failure can be tracked down by performing the following troubleshooting with the SWS monitor.*

3. Version number and destination check

Check whether the SWS version number (1) and destination (North America) meet the vehicle specifications. If they are different, replace the ETACS-ECU with a correct one.

4. Use scan tool MB991958 (M.U.T.-III Sub Assembly) to select "ECU COMM Check" on the SWS monitor display.

Check whether the communication status of the input- or output-signal-side ECU associated with the defective function is normal.

- If "OK" is displayed for all related ECUs, they communicate with each other normally and the input or output signal circuit system may be defective. Therefore, check SWS monitor service data.
- If "NG" is displayed for any of the related ECUs, something may be wrong with the ECU for which "NG" appears, its power supply or grounding system, or a wiring harness or connector between the SWS monitor and the ECU. Check the wiring harness and connectors associated with the ECU and examine the ECU itself.

5. Service data on the SWS monitor

Select the defective function from the function-specific diagnostic menu, and check the service data that appears for each function item.



When the SWS communication line is monitored, you can determine whether the problem lies in the input or output signal circuit system by checking whether communication data is correct:

- If the switch condition does not meet the service data display, the input signal is defective.
- If the switch condition meets the service data display, the output signal system is defective.

**NOTE:** In addition to the function-specific diagnostic menu, a service data menu is available for SWS monitor service data to check all items for each ECU.

#### 6. Check the input signal circuit system

Check the relevant switch, sensor, input signal-side ECU and their wiring harness and connector.

#### 7. Check the output signal circuit system

Check an output signal-side ECU, electrical load components and their wiring harness and connector.

## HOW TO CONNECT SWS MONITOR

M1549014800881


### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness


### **⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect the main harness A MB991910 before connecting the SWS monitor harness (for column-ECU) MB991812. Be sure to connect SWS monitor cartridge MB991806 after turning on the V.C.I. MB991824.


1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.

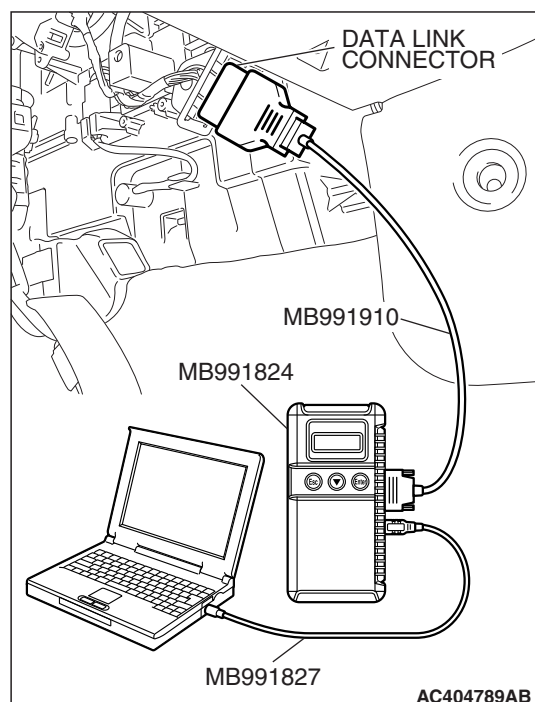



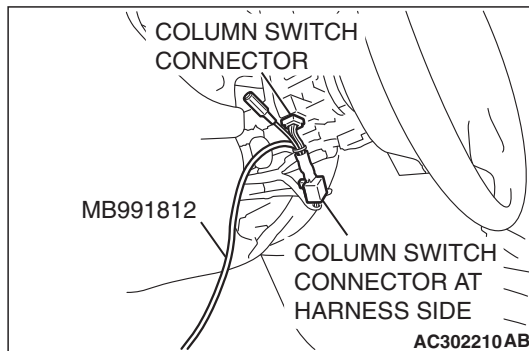

6. Remove the steering column cover.
7. Remove the steering column switch connector.
8. Connect special tool MB991812 to the column switch connector.

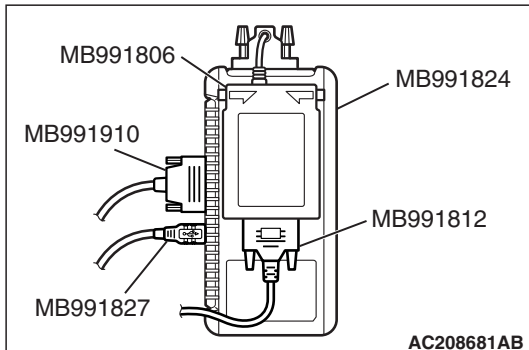

9. Connect special tool MB991812 to special tool MB991806.
10. Connect special tool MB991806 to special tool MB991824.
11. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

12. Start the M.U.T.-III system on the personal computer.




## HOW TO USE SWS MONITOR


M1549020400417

To carry out troubleshooting, operate scan tool MB991958 (M.U.T.-III Sub Assembly) as follows.


Select "SWS" on the System Selection screen.

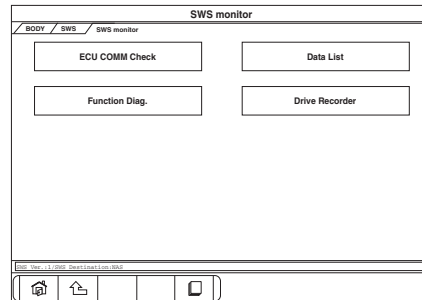


For the ECU comm check, select "ECU COMM Check".

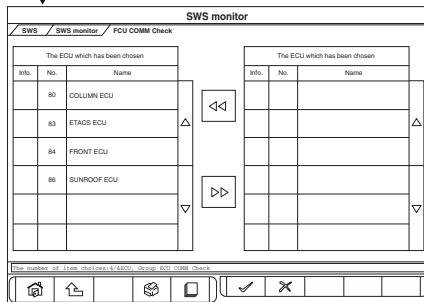


Press the "OK" button.

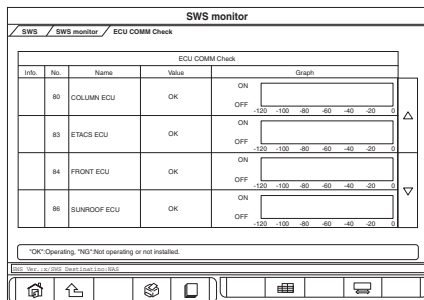


For the data list, select "Data List".

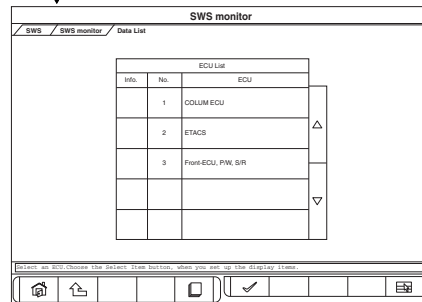


Select the ECU, and then press the "OK" button.

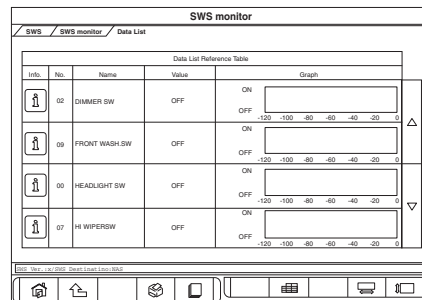


For the function diagnosis, select "Function Diag".

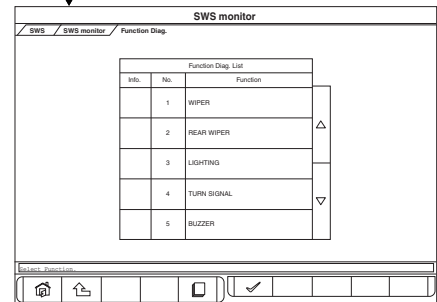

Select the desired item from "Function", and then press the "OK" button.

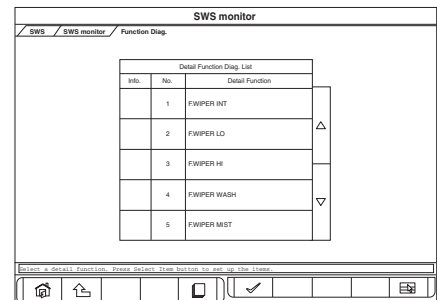

Select the desired function from "Detail Function", and then press the "OK" button.

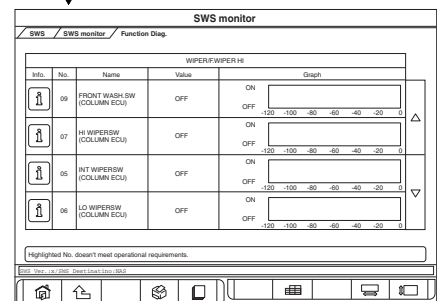

AC207215AC



**HOW TO CHECK ECUS**

M1549014900822

1. Use the scan tool MB991958 (M.U.T.-III Sub Assembly) and the SWS monitor kit to check ECUs.
2. The following ECUs can be checked by using the scan tool MB991958 (M.U.T.-III Sub Assembly) and the SWS monitor kit.

**NOTE:** The "ECU COMM Check" function checks the communication status of ECUs. "NG" does not always mean ECU malfunction. If a malfunction is found by the "ECU COMM Check", proceed to "Symptom Procedure" (Refer to [P.54B-54](#)).

**SWS monitor kit-compatible ECUs and their conditions**

ITEM NO.	ECUS TO BE CHECKED	DISPLAY ON SCAN TOOL	NORMAL CONDITION	ECU CONDITION
80	Column switch (column-ECU)	COLUMN ECU	OK* <sup>1</sup>	All of the column switch, power supply, ground and interconnecting communication lines are normal
83	ETACS-ECU	ETACS-ECU	OK	All of the ETACS-ECU, power supply, ground and interconnecting communication lines are normal
84	Front-ECU	FRONT ECU	OK* <sup>2</sup>	All of the front-ECU, power supply, ground and interconnecting communication lines are normal
86	Sunroof motor assembly (sunroof-ECU)	SUNROOF ECU	OK* <sup>2</sup>	All of the sunroof motor assembly, power supply, ground and interconnecting communication lines are normal

**NOTE:**

- \*<sup>1</sup>: If the ignition switch is turned to "LOCK" (OFF) or "ACC" when "NG" is displayed beside "ETACS ECU" or the signal request line is abnormal, the scan tool shows "NG" beside the "COLUMN ECU".

- \*<sup>2</sup>: When "NG" is displayed beside "ETACS ECU", the scan tool shows "NG" beside the "FRONT ECU" and "SUNROOF ECU".

**SERVICE DATA CHECK**

M1549015000877

Use the scan tool MB991958 (M.U.T.-III Sub Assembly) and the SWS monitor kit to check "Data List" or "Function Diag.". This "Data List" or "Function Diag." check is applicable for signals, which are transmitted and received through the SWS communication line. For input signals, which are not compatible with the SWS monitor kit, refer to the Pulse Check procedure (by using the scan tool or voltmeter) [P.54B-25](#).

1. The following input signals can be checked by using the scan tool MB991958 (M.U.T.-III Sub Assembly) and the SWS monitor kit.

**NOTE:** If a problem is found in the "Service Data" check, refer to Input Signal Chart [P.54B-58](#).

**<DATA LIST REFERENCE TABLE>**

The table below shows the service data and their normal condition, which are displayed during the "Data List."



**COLUMN-ECU**

CHECK ITEM	ITEM NO.	DISPLAY ON SCAN TOOL	CHECK CONDITION	NORMAL CONDITION
Headlight switch	00	HEADLIGHT SW	Lighting switch: HEAD	ON
			Lighting switch: Other than HEAD	OFF
Taillight switch	01	TAILLIGHT SW	Lighting switch: TAIL	ON
			Lighting switch: OFF	OFF
Dimmer switch	02	DIMMER SW	Dimmer switch: ON	ON
			Dimmer switch: OFF	OFF
Passing light switch	03	PASSING SW	Passing light switch: ON	ON
			Passing light switch: OFF	OFF
Windshield intermittent wiper switch	05	INT WIPER SW	Wiper switch: INT	ON
			Wiper switch: Other than INT	OFF
Windshield low-speed wiper switch	06	LO WIPER SW	Wiper switch: LO	ON
			Wiper switch: Other than LO	OFF
Windshield high-speed wiper switch	07	HI WIPER SW	Wiper switch: HI	ON
			Wiper switch: Other than HI	OFF
Windshield mist wiper switch	08	MIST WIPER SW	Wiper switch: Mist	ON
			Wiper switch: Other than "Mist" position	OFF
Windshield washer switch	09	FRONT WASH.SW	Windshield washer switch: ON	ON
			Windshield washer switch: OFF	OFF
Turn-signal light switch (RH)	10	T/S RH SW	Turn-signal light switch: RH	ON
			Turn-signal light switch: Other than RH	OFF
Turn-signal light switch (LH)	11	T/S LH SW	Turn-signal light switch: LH	ON
			Turn-signal light switch: Other than LH	OFF
Rear wiper switch	13	REAR WIPER SW	Rear wiper switch: ON	ON
			Rear wiper switch: OFF	OFF
Rear washer switch	14	REAR WASH.SW	Rear washer switch: ON	ON
			Rear washer switch: OFF	OFF
Windshield intermittent wiper interval adjusting knob	15	INT WIPE KNOB	Vehicles with intermittent wiper control	EQUIP
			Vehicles without intermittent wiper control	NON



## ETACS

CHECK ITEM	ITEM NO.	DISPLAY ON SCAN TOOL	CHECK CONDITION	NORMAL CONDITION
Ignition switch (IG1)	30	IG SW (IG1)	Ignition switch: ON or START	ON
			Ignition switch: LOCK (OFF) or ACC	OFF
Ignition switch (ACC)	31	IG SW (ACC)	Ignition switch: ACC or ON	ON
			Ignition switch: LOCK (OFF) or START	OFF
Door switch	32	FRONT DOOR SW	Driver's door switch or passenger's door switch is on	ON
			Driver's door switch and passenger's door switch is off	OFF
Headlight automatic shutoff function	35	H/L AUTO-CUT	1. Lighting switch: Other than OFF 2. Ignition switch: from ON or START to LOCK (OFF) or ACC 3. Door switch: ON (door open)	OFF to ON (after approximately one second)
			When requirements for the headlight automatic shutoff are not satisfied	OFF
Front fog lights	36	F.FOG LIGHT	1. Lighting switch: HEAD 2. Front fog light switch: ON	ON
			Other than the condition above	OFF
Windshield intermittent wiper interval	37	INT WIPE TIME	1. Ignition switch: ACC or ON 2. Operate the intermittent wiper control, and change the wiper interval	The scan tool MB991958 (M.U.T.-III Sub Assembly) displays intermittent wiper interval in response to the intermittent wiper control positions.
Backup light switch	41	PNP SW (R)	Backup light switch: ON	ON
			Backup light switch: OFF	OFF
Tone alarm	43	BUZZER	1. Ignition switch: LOCK (OFF) 2. Remove the ignition key. 3. Door switch: ON (door open)	ON
			When requirements for sounding each warning tone alarm are not satisfied	OFF

**NOTE:** For item No.43, the scan tool MB991958 (M.U.T.-III Sub Assembly) also displays "ON" when the light reminder tone alarm or the seat belt tone alarm function is triggered.



**Front-ECU, Power window, Sunroof**

<b>CHECK ITEM</b>	<b>ITEM NO.</b>	<b>DISPLAY ON SCAN TOOL</b>	<b>CHECK CONDITION</b>	<b>NORMAL CONDITION</b>
Response by the front-ECU	70	FRONT ECU ACK	Lighting switch: Other than OFF (excluding when high-beam is on) or the wiper switch is at position other than OFF (ignition switch: ACC or ON)	NORMAL ACK
			<ul style="list-style-type: none"> <li>• Ignition switch: Other than ON</li> <li>• Lighting switch: OFF</li> <li>• Wiper switch: OFF</li> </ul>	SLEEP ACK
			<ul style="list-style-type: none"> <li>• Lighting switch: HEAD</li> <li>• Headlights: at high-beam</li> </ul>	HI-BEAM ACK
			Other than the condition above	NO ACK
Response by the sunroof-ECU	72	S/R ECU ACK	1. Door switch: OFF 2. Ignition switch: ON → OFF 3. While sunroof is off	NORMAL ACK → SLEEP ACK (after approximately 30 seconds)
			1. Ignition switch: ON or START 2. One of the sunroof switches is on	INPUT CHECK to NORMAL ACK
			Other than the above conditions	NO ACK

*NOTE: For item No.70, the scan tool MB991958 (M.U.T.-III Sub Assembly) also displays "NG" under "ECU COMM Check" when it displays "NO ACK" under the front-ECU check.*

*NOTE: For item No.72, the scan tool MB991958 (M.U.T.-III Sub Assembly) also displays "NG" under "ECU COMM Check" when it displays "NO ACK" under the sunroof-ECU check.*



## &lt;FUNCTION DIAGNOSIS&gt;

The table below shows the service data and their normal condition, which are displayed during the "Function Diag." The column "Normal condition" shows values that are shown when each operation is made.

**WIPER**

ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
F.WIPER HI	05	Windshield intermittent wiper switch	INT WIPER SW (COLUMN ECU)	OFF
	06	Windshield low-speed wiper switch	LO WIPER SW (COLUMN ECU)	OFF
	07	Windshield high-speed wiper switch	HI WIPER SW (COLUMN ECU)	ON
	08	Windshield mist wiper switch	MIST WIPER SW (COLUMN ECU)	OFF
	09	Windshield washer switch	FRONT WASH.SW (COLUMN ECU)	OFF
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK
F.WIPER INT	05	Windshield intermittent wiper switch	INT WIPER SW (COLUMN ECU)	ON
	06	Windshield low-speed wiper switch	LO WIPER SW (COLUMN ECU)	OFF
	07	Windshield high-speed wiper switch	HI WIPER SW (COLUMN ECU)	OFF
	08	Windshield mist wiper switch	MIST WIPER SW (COLUMN ECU)	OFF
	09	Windshield washer switch	FRONT WASH.SW (COLUMN ECU)	OFF
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON
	37	Windshield intermittent wiper interval	INT WIPE TIME (ETACS ECU)	The scan tool MB991958 (M.U.T.-III Sub Assembly) displays intermittent wiper interval in response to the intermittent wiper control positions.
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK



ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
F.WIPER LO	05	Windshield intermittent wiper switch	INT WIPER SW (COLUMN ECU)	OFF
	06	Windshield low-speed wiper switch	LO WIPER SW (COLUMN ECU)	ON
	07	Windshield high-speed wiper switch	HI WIPER SW (COLUMN ECU)	OFF
	08	Windshield mist wiper switch	MIST WIPER SW (COLUMN ECU)	OFF
	09	Windshield washer switch	FRONT WASH.SW (COLUMN ECU)	OFF
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK
F.WIPER MIST	05	Windshield intermittent wiper switch	INT WIPER SW (COLUMN ECU)	OFF
	06	Windshield low-speed wiper switch	LO WIPER SW (COLUMN ECU)	OFF
	07	Windshield high-speed wiper switch	HI WIPER SW (COLUMN ECU)	OFF
	08	Windshield mist wiper switch	MIST WIPER SW (COLUMN ECU)	ON
	09	Windshield washer switch	FRONT WASH.SW (COLUMN ECU)	OFF
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK
F.WIPER WASH	08	Windshield mist wiper switch	MIST WIPER SW (COLUMN ECU)	OFF
	09	Windshield washer switch	FRONT WASH.SW (COLUMN ECU)	ON
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK



**REAR WIPER**

ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
REAR WIPER	13	Rear wiper switch	REAR WIPER SW (COLUMN ECU)	ON
	14	Rear washer switch	REAR WASH.SW (COLUMN ECU)	OFF
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON
REV.INTERLOCK	13	Rear wiper switch	REAR WIPER SW (COLUMN ECU)	ON
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON
	41	Backup light switch	PNP SW (R) (ETACS ECU)	ON
REAR WASHER	14	Rear washer switch	REAR WASH.SW (COLUMN ECU)	ON
	31	Ignition switch (ACC)	IG SW (ACC) (ETACS ECU)	ON

**LIGHTING**

ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
H/L AUTO-CUT	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	Either is ON
	01	Taillight switch	TAILLIGHT SW (COLUMN ECU)	
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	OFF
	32	Door switch	FRONT DOOR SW (ETACS ECU)	ON
	35	Headlight automatic shutoff function	H/L AUTO-CUT (ETACS ECU)	ON
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or SLEEP ACK
OFF	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	OFF
	01	Taillight switch	TAILLIGHT SW (COLUMN ECU)	OFF
	03	Passing light switch	PASSING SW (COLUMN ECU)	OFF
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON or OFF
	35	Headlight automatic shutoff function	H/L AUTO-CUT (ETACS ECU)	OFF
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or SLEEP ACK



ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
HEADLIGHT HI	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	ON
	02	Dimmer switch	DIMMER SW (COLUMN ECU)	ON or OFF
	03	Passing light switch	PASSING SW (COLUMN ECU)	OFF
	30	Ignition switch (IG1)	IG SW (IG1) (COLUMN ECU)	ON
	35	Headlight automatic shutoff function	H/L AUTO-CUT (COLUMN ECU)	OFF
	70	Response by the front-ECU	FRONT ECU ACK (COLUMN ECU)	HI-BEAM ACK
HEADLIGHT LO	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	ON
	03	Passing light switch	PASSING SW (COLUMN ECU)	OFF
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON or OFF
	35	Headlight automatic shutoff function	H/L AUTO-CUT (ETACS ECU)	OFF
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK
PASSING LIGHT	03	Passing light switch	PASSING SW (COLUMN ECU)	ON
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK
F.FOG LIGHT	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	ON
	35	Headlight automatic shutoff function	H/L AUTO-CUT (ETACS ECU)	OFF
	36	Front fog light switch	F.FOG LIGHT (COLUMN ECU)	ON
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON or OFF
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK or HI-BEAM ACK



ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
TAILLIGHT	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	OFF
	01	Taillight switch	TAILLIGHT SW (COLUMN ECU)	ON
	03	Passing light switch	PASSING SW (COLUMN ECU)	OFF
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON or OFF
	35	Headlight automatic shutoff function	H/L AUTO-CUT (ETACS ECU)	OFF
	70	Response by the front-ECU	FRONT ECU ACK (FRONT ECU)	NORMAL ACK

*NOTE: When checking the input signals (off, tail, low-beam or high-beam), turn the ignition switch to the "ON" position in order to disable the headlight automatic shutoff function. However, since the headlight operation does not depend on the ignition switch positions, the scan tool MB991958 (M.U.T.-III Sub Assembly) does not display the title "IGNITION SWITCH".*

*For checking item "HEADLIGHT HI", the scan tool MB991958 (M.U.T.-III Sub Assembly) displays "OFF" on the item No.2 "DIMMER SW" when the headlights are at high-beam. Therefore, the scan tool MB991958 (M.U.T.-III Sub Assembly) should display "ON" momentarily when the dimmer switch is operated.*

## TURN SIGNAL

ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
TURN-SIG.LH	10	Turn-signal light switch (RH)	T/S RH SW (COLUMN ECU)	OFF
	11	Turn-signal light switch (LH)	T/S LH SW (COLUMN ECU)	ON
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON
TURN-SIG.RH	10	Turn-signal light switch (RH)	T/S RH SW (COLUMN ECU)	ON
	11	Turn-signal light switch (LH)	T/S LH SW (COLUMN ECU)	OFF
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON

## BUZZER

ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
KEY REMND.ALM	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	OFF
	32	Door switch	FRONT DOOR SW (ETACS ECU)	ON
	43	Tone alarm	BUZZER (ETACS ECU)	ON



ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
LGT MONI.ALARM	00	Headlight switch	HEADLIGHT SW (COLUMN ECU)	Either is ON
	01	Taillight switch	TAILLIGHT SW (COLUMN ECU)	
	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	OFF
	32	Door switch	FRONT DOOR SW (ETACS ECU)	ON
	35	Headlight automatic shutoff function	H/L AUTO-CUT (ETACS ECU)	OFF
	43	Tone alarm	BUZZER (ETACS ECU)	ON
OTHER ALARM	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON
	43	Tone alarm	BUZZER (ETACS ECU)	ON

*NOTE: The headlight automatic shutoff function operates approximately one second after the lighting monitor tone alarm starts sounding, and then the tone alarm ceases sounding.*

## SUNROOF

ITEM	ITEM NO.	INPUT SIGNAL	DISPLAY ON SCAN TOOL	NORMAL CONDITION
SUNROOF OPE.	30	Ignition switch (IG1)	IG SW (IG1) (ETACS ECU)	ON
	72	Response by the sunroof-ECU	S/R ECU ACK (SUNROOF ECU)	INPUT CHECK (only momentarily when switch is operated)

## PULSE CHECK

1. The input signals (signals other than SWS communication line signals), which are compatible with the SWS monitor by using the scan tool MB991958 (M.U.T.-III Sub Assembly) or voltmeter, can be confirmed by the Pulse Check.

2. Use the scan tool MB991958 (M.U.T.-III Sub Assembly) or voltmeter to check the following input signals.

*NOTE: If a problem is found in the Pulse Check, refer to Input Signal Chart [P.54B-58](#).*

M1549015100904

## SWITCHES AND THEIR CONDITIONS, WHICH ARE APPLICABLE FOR PULSE CHECK

INPUT SIGNAL	REQUIREMENTS FOR SOUNDING TONE ALARM
Key reminder switch	When the ignition key is pulled out
Hazard warning light switch	When the switch is turned from off to on
Driver's or passenger's door lock actuator switch	Move the door lock knob from lock position to unlock position
Door lock switch (incorporated in power window main switch and power window sub switch)	Press "LOCK" or "UNLOCK" side
Liftgate latch switch <ECLIPSE> or trunk lid latch switch <ECLIPSE SPYDER>	Open the liftgate <ECLIPSE> or trunk lid <ECLIPSE SPYDER>



INPUT SIGNAL	REQUIREMENTS FOR SOUNDING TONE ALARM
Liftgate lock release switch <ECLIPSE>	When the liftgate lock release switch is operated
Interior light loaded signal	Illuminates the interior lights
Keyless entry transmitter	When each transmitter switch is turned ON
Transmission range switch ("R" position) <A/T> (CAN signal)	When the selector lever is moved to the R position
Parking brake switch (CAN signal)	When the parking brake is pulled
Vehicle speed signal (CAN signal)	When the vehicle speed displayed on the meter has reached 8km/h (5 mph) or more
Driver's seat belt switch (CAN signal)	When the seat belt is fastened.

## DIAGNOSTIC TROUBLE CODE CHART

M1549000700632

**NOTE: \*1:** For vehicles that do not have a sunroof, the diagnosis code is always sent but it does not indicate a problem.

**NOTE: \*2:** The diagnostic trouble code is always set, but it does not indicate a problem.

**NOTE: \*3:** The diagnosis code for the past problem is not sent.

DIAGNOSTIC TROUBLE CODE NO.	DESCRIPTION	REFERENCE PAGE
U1700	Malfunction in the SWS communication line	P.54B-27
U1701	Communication error in the column switch	P.54B-30
U1702	Communication error in the front-ECU	P.54B-33
U1703 <sup>*1</sup>	Communication error in the sunroof-ECU or the sunroof not installed	P.54B-36
U1704 <sup>*2</sup>	Communication error in the power window main switch	–
U1073	Bus off	P.54B-39
U1100	ECM <M/T> or PCM <A/T> time-out (related to engine)	P.54B-40
U1101	ECM <M/T> or PCM <A/T> time-out (related to transaxle)	
U1108	Combination meter time-out	P.54B-44
U1110	A/C-ECU time-out	P.54B-47
U1111 <sup>*2</sup>	Multi center display unit (middle-grade type) time-out	–
U1128	Failure information on combination meter	P.54B-51
B1702 <sup>*3</sup>	Reception error of transponder data	Refer to GROUP 54A – Immobilizer system P.54A-22.
B1703 <sup>*3</sup>	Transponder data inconsistent	
B1731	Immobilizer communication failure.	
B1761	VIN not recorded	



## DIAGNOSTIC TROUBLE CODE PROCEDURES

### DTC U1700: Malfunction in the SWS communication line

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

#### CAUTION

If DTC U1700 is set in the ETACS-ECU, always diagnose the CAN main bus line.

#### TROUBLE JUDGMENT

The ETACS-ECU communicates with the column switch, the front-ECU and the sunroof-ECU through the SWS communication line. If there is any trouble in the SWS communication line and the ETACS-ECU, DTC U1700 will be set.

#### TECHNICAL DESCRIPTION (COMMENT)

##### Current trouble

- The wiring harness wire or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector, or the ETACS-ECU may be defective.

##### Past trouble

- If DTC U1700 is set as past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the SWS communication line. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble P.00-16).

#### TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector.

#### DIAGNOSIS

##### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

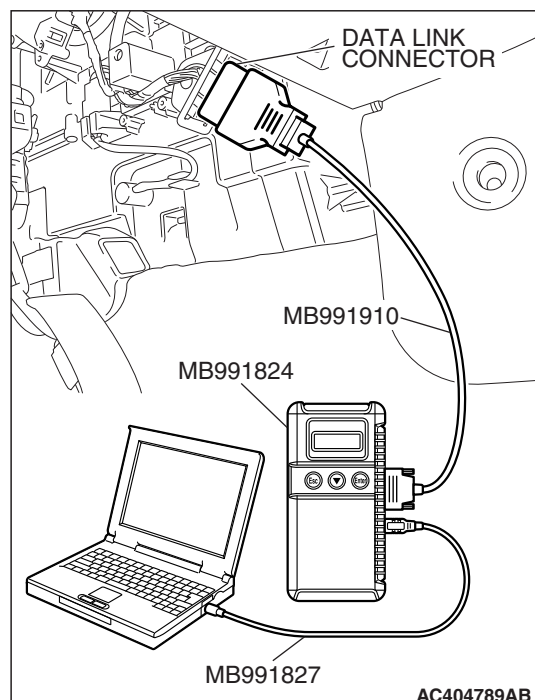

AC404789AB

**STEP 2. Recheck for diagnostic trouble code.**


Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 3.

**NO :** There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction P.00-14).

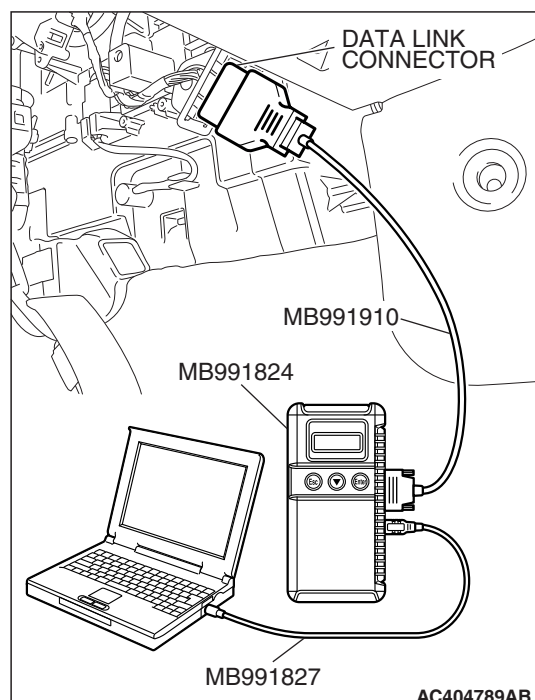

AC404789AB



**STEP 3. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- ETACS-ECU
- Column switch (column-ECU)
- Front-ECU
- Sunroof-ECU <Vehicles with sunroof only>

**⚠ CAUTION**

**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**

- (1) Connect the SWS monitor. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for the "ETACS ECU", "COLUMN ECU" and "FRONT ECU" menus.
- (5) Turn the ignition switch to the "ON" position.
- (6) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for the "SUNROOF ECU" menu.

**Q: Are "OK" displayed for the "ETACS ECU," "COLUMN ECU," "FRONT ECU" and "SUNROOF ECU" menus?**


**"OK" are displayed for all the items :** It is determined that there is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).

**"NG" is displayed for the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."


**"NG" is displayed for the "COLUMN ECU" menu :** Refer to Inspection Procedure A-2 "Communication with the column switch (column-ECU) is not possible [P.54B-66](#)."

**"NG" is displayed for the "FRONT ECU" menu :** Refer to Inspection Procedure A-4 "Communication with the front-ECU is not possible [P.54B-82](#)."

**"NG" is displayed for the "SUNROOF ECU" menu :** Refer to Inspection Procedure A-5 "Communication with the sunroof-ECU is not possible [P.54B-90](#)."

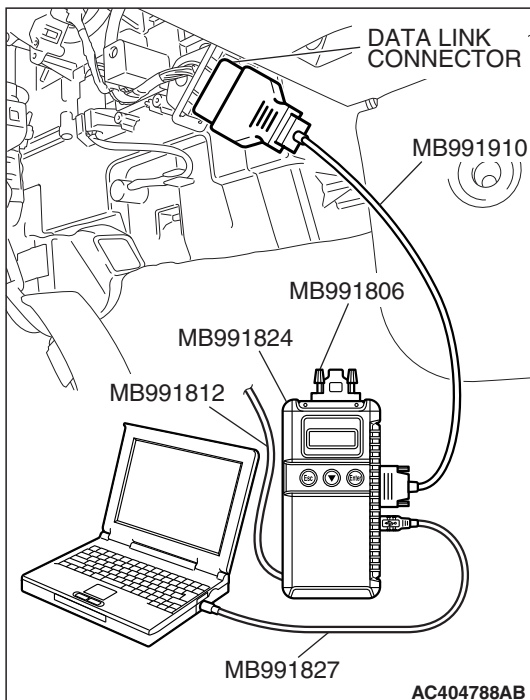

AC404788AB

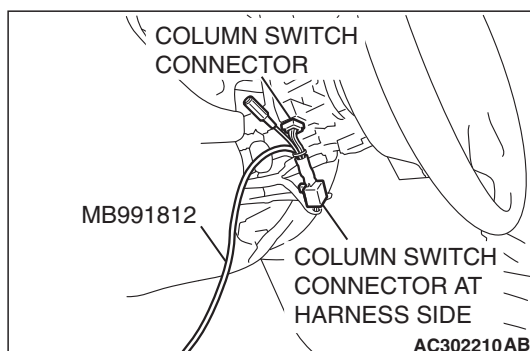

AC302210AB



**DTC U1701: Communication error in the column switch**

---

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**⚠ CAUTION**

**If DTC U1701 is set in the ETACS-ECU, always diagnose the CAN main bus line.**

**TROUBLE JUDGMENT**

The ETACS-ECU communicates with the column switch through the SWS communication line. If there is any trouble in that communication, DTC U1701 will be set.

**TECHNICAL DESCRIPTION (COMMENT)****Current trouble**

- The column switch, the ETACS-ECU, connector(s), or wiring harness between the two may be defective.

**Past trouble**

- If DTC U1701 is set as past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the column switch and the ETACS-ECU or power supply to the column switch. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble P.00-16).

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector.

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

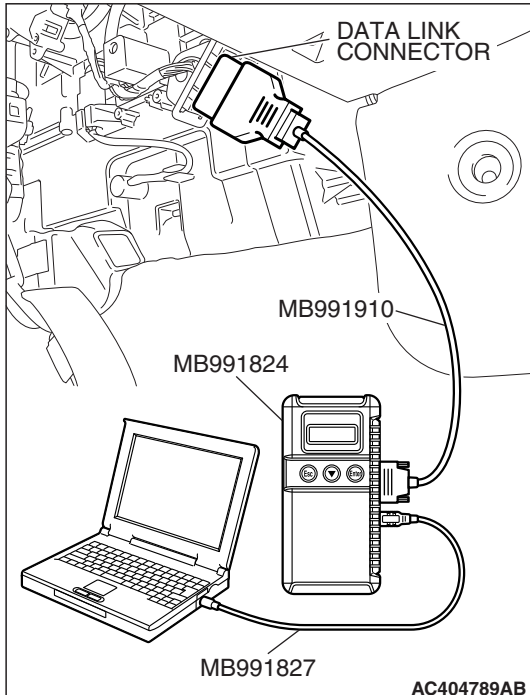

**STEP 2. Recheck for diagnostic trouble code.**


Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 3.

**NO :** There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction P.00-16).

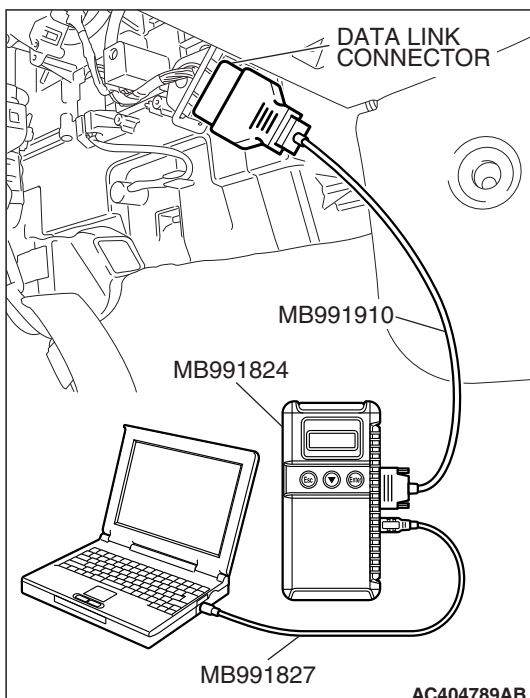



**STEP 3. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- Column-ECU
- ETACS-ECU

**⚠ CAUTION**

**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**



- (1) Connect the SWS monitor. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "COLUMN ECU" and the "ETACS ECU" menus.

**Q: Are "OK" displayed for both the "COLUMN ECU" and "ETACS ECU" menus?**

**"OK" are displayed for all the items :** It is determined that there is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-16](#)).

**"NG" is displayed for the "COLUMN ECU" menu :** Refer to Inspection Procedure A-2 "Communication with the column switch (column-ECU) is not possible [P.54B-66](#)."

**"NG" is displayed for the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

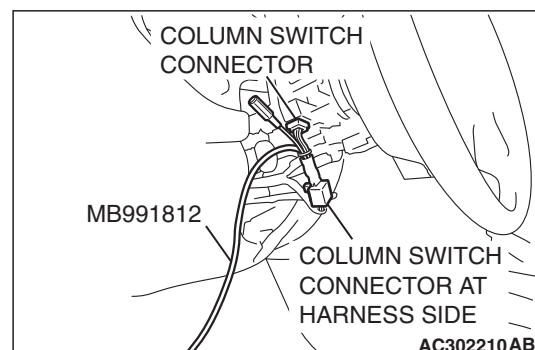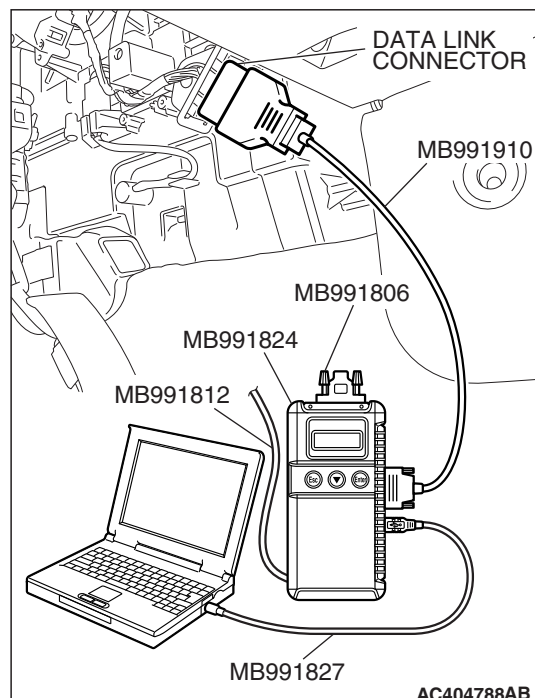



---

**DTC U1702: Communication error in the front-ECU**

---

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**⚠ CAUTION**

**If DTC U1702 is set in the ETACS-ECU, always diagnose the CAN main bus line.**

**TROUBLE JUDGMENT**

The ETACS-ECU communicates with the front-ECU through the SWS communication line. If there is any trouble in that communication, DTC U1702 will be set.

**TECHNICAL DESCRIPTION (COMMENT)**

**Current trouble**

- The front-ECU, the ETACS-ECU, connector(s), or wiring harness between the two may be defective.

**Past trouble**

- If DTC U1702 is set as past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the front-ECU and the ETACS-ECU or power supply to the front-ECU. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to cope with past trouble P.00-16).

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector.

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

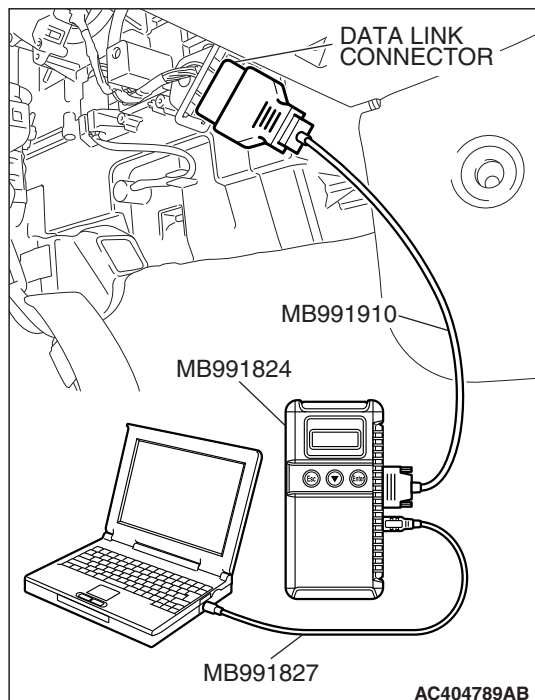

**STEP 2. Recheck for diagnostic trouble code.**


Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 3.

**NO :** There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction P.00-14).

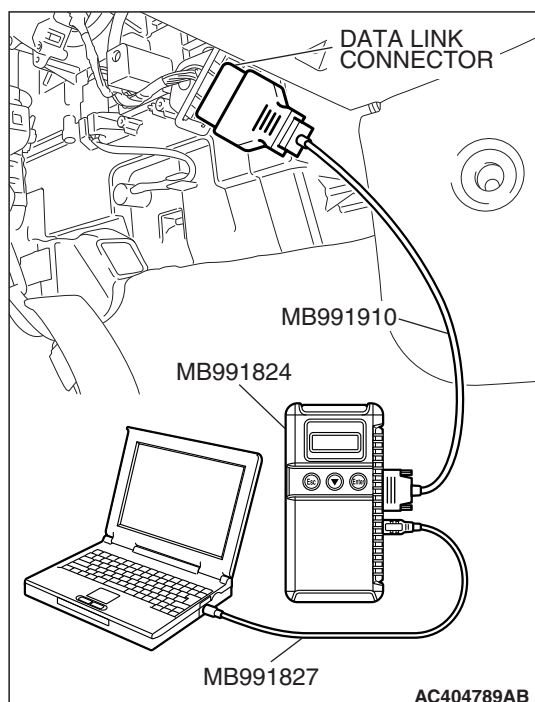



**STEP 3. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- Front-ECU
- ETACS-ECU

**⚠ CAUTION**

**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**



- (1) Connect the SWS monitor. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "ETACS ECU" and the "FRONT ECU" menus.

**Q: Are "OK" displayed for both the "ETACS ECU" and "FRONT ECU" menus?**

**"OK" are displayed for all the items :** It is determined that there is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).

**"NG" is displayed for the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with the ETACS ECU is not possible [P.54B-74](#)."

**"NG" is displayed for the "FRONT ECU" menu :** Refer to Inspection Procedure A-4 "Communication with the front-ECU is not possible [P.54B-82](#)."

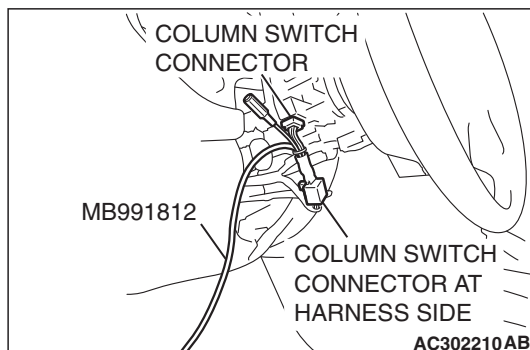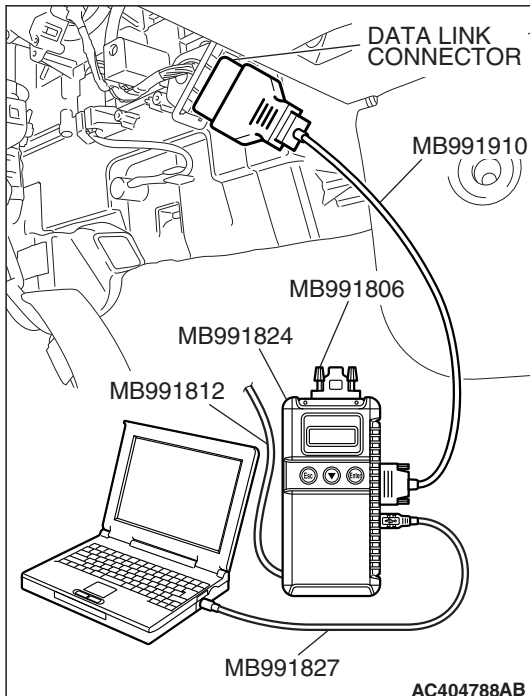



**DTC U1703: Communication error in the sunroof-ECU or the sunroof not installed**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**⚠ CAUTION**

- **DTC U1703 may also set on vehicles without sunroof, but there is no fault.**
- **If DTC U1703 is set in the ETACS-ECU, always diagnose the CAN main bus line.**

**TROUBLE JUDGMENT**

The ETACS-ECU communicates with the sunroof-ECU through the SWS communication line. If there is any trouble in that communication, DTC U1703 will be set.

**TECHNICAL DESCRIPTION (COMMENT)****Current trouble**

- The sunroof-ECU, the ETACS-ECU, connector(s), or wiring harness between the two may be defective.

**Past trouble**

- If DTC U1703 is set as past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) between the sunroof-ECU and the ETACS-ECU or power supply to the sunroof-ECU. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble P.00-16).

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector.

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

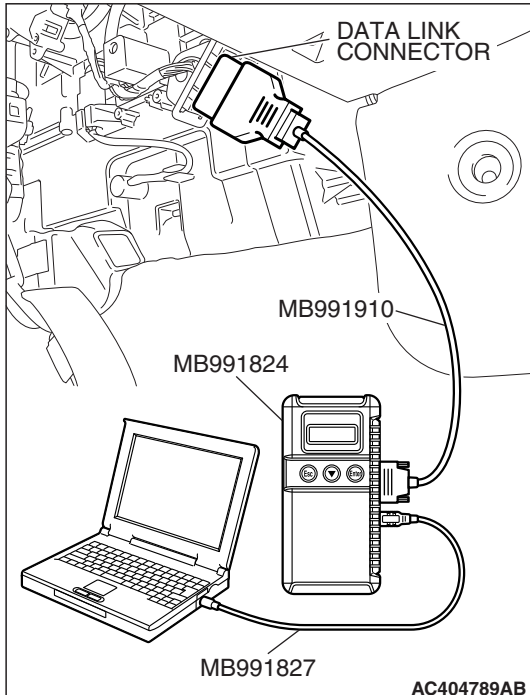

**STEP 2. Recheck for diagnostic trouble code.**


Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 3.

**NO :** There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction P.00-14).

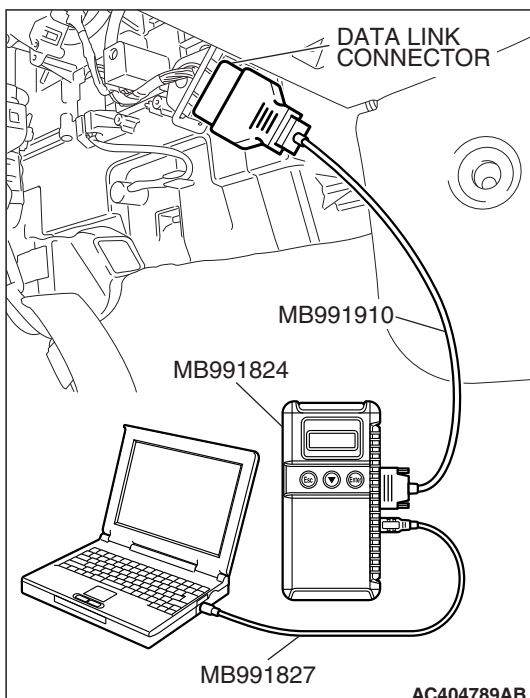



**STEP 3. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- Sunroof-ECU
- ETACS-ECU

**⚠ CAUTION**

**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**



- (1) Connect the SWS monitor. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "SUNROOF ECU" and the "ETACS ECU" menus.

**Q: Are "OK" displayed for both the "SUNROOF ECU" and "ETACS ECU" menus?**

**"OK" are displayed for all the items :** It is determined that there is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).

**"NG" is displayed for the "SUNROOF ECU" menu :** Refer to Inspection Procedure A-5 "communication with the sunroof-ECU is not possible [P.54B-90](#)."

**"NG" is displayed for the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

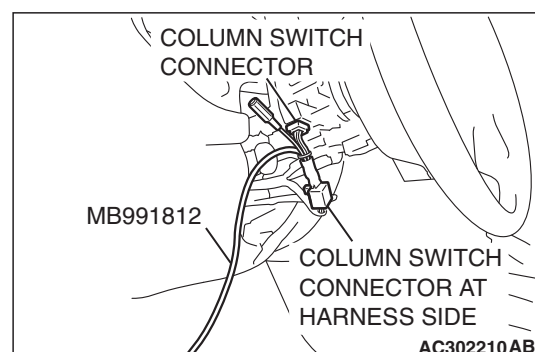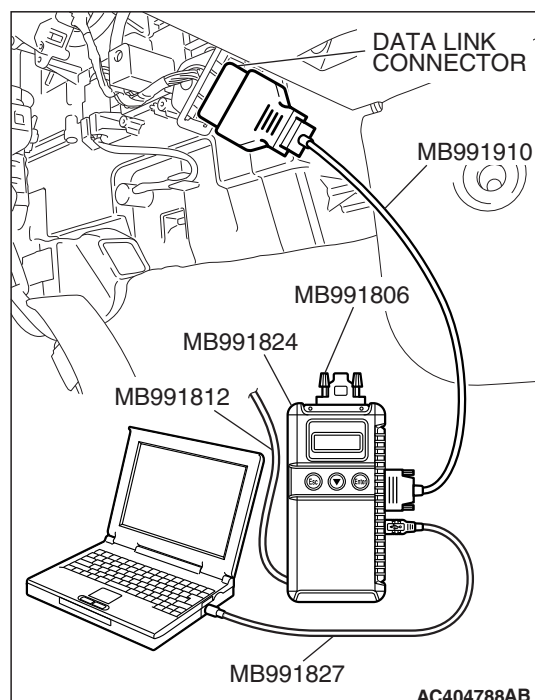



DTC U1073: Bus off

**CAUTION**

- If DTC U1073 is set in the ETACS-ECU, always diagnose the CAN main bus line.
- If the DTC is set as past trouble, the ECU cannot be defective. Do not replace it.

**TROUBLE JUDGMENT**

DTC U1073 will be stored when the ETACS-ECU ceases CAN communication error (bus off) and then resumes the communication by turning the ignition switch to the "LOCK" (OFF) position

**TECHNICAL DESCRIPTION (COMMENT)**

Carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus lines. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble P.00-16).

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector.

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**


**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

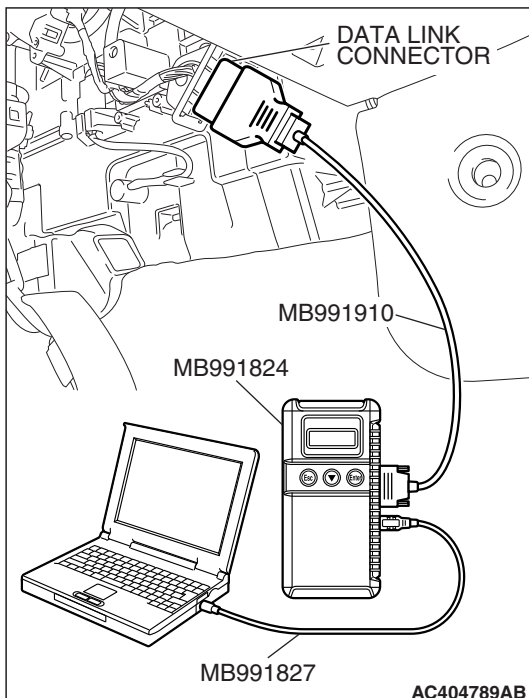

AC404789AB

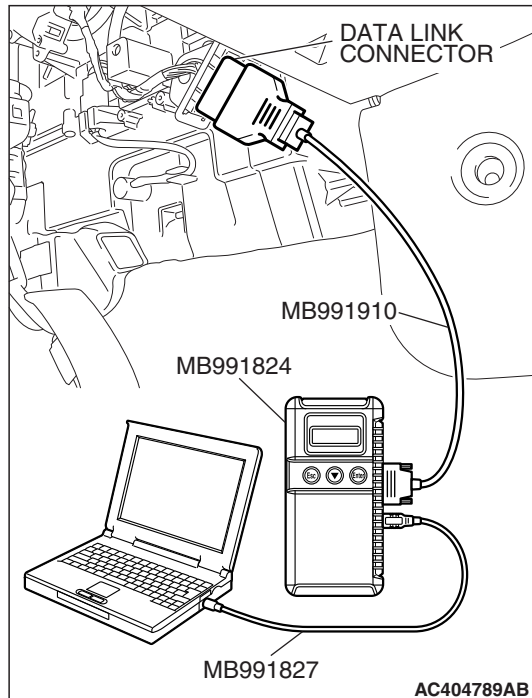

**STEP 2. Recheck for diagnostic trouble code.**

Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table P.54A-19. After replacement, verify that the DTC is not reset.

**NO :** There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction P.00-14).

**DTC U1100: ECM <M/T> or PCM <A/T> time-out (related to engine)**

**DTC U1101: ECM <M/T> or PCM <A/T> time-out (related to transaxle)**

**CAUTION**

- If DTC U1100 or U1101 is set in the ETACS-ECU, always diagnose the CAN main bus line.
- Whenever the ECU is replaced, ensure that the communication circuit is normal.

**TROUBLE JUDGMENT****DTC U1100**

- The ETACS-ECU receives engine control system-related signal from the ECM <M/T> or PCM <A/T>. If the ECU cannot receive the signal, DTC U1100 will be set.

**DTC U1101**

- The ETACS-ECU receives transaxle control system-related signal from the ECM <M/T> or PCM <A/T>. If transaxle control system-related signal cannot be received, DTC U1101 will be set.

**TECHNICAL DESCRIPTION (COMMENT)****Current trouble**

- Connector(s) or wiring harness in the CAN bus lines between the ECM <M/T> or PCM <A/T> and the ETACS-ECU, the power supply system to the ECM <M/T> or PCM <A/T>, the ECM <M/T> or PCM <A/T> itself, or the ETACS-ECU may be defective.

**Past trouble**

- If DTC U1100 or U1101 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the ETACS-ECU and the ECM <M/T> or PCM <A/T>, and the power supply system to the ECM <M/T> or PCM <A/T>. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble P.00-16).

*NOTE: You cannot find a past trouble, by the M.U.T.-III CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Cope with Intermittent Malfunction P.00-14 and check the CAN bus lines.*



*You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, CAN Bus Line Diagnostic Flow P.54C-10).*

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector.
- The ECM <M/T> or PCM <A/T> may be defective.
- The ETACS-ECU may be defective.

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


#### Q: Is the CAN bus line found to be normal?

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

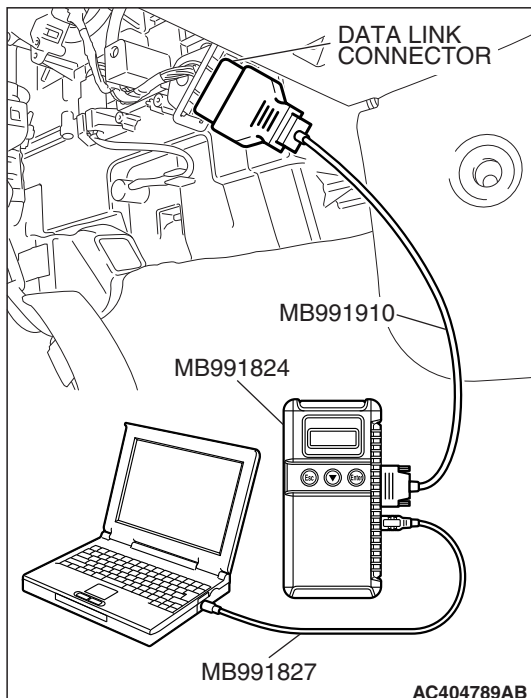



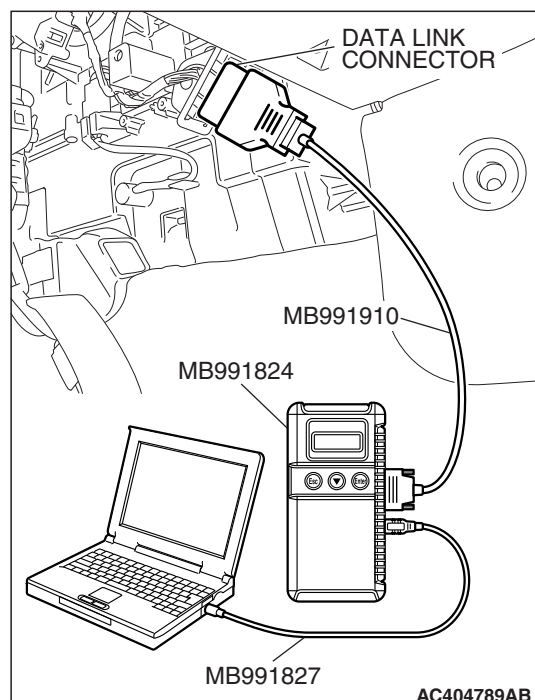

**STEP 2. Using scan tool MB991958, read the ECM <M/T> or PCM <A/T> diagnostic trouble code.**


Check whether engine and transaxle DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for engine and transaxle DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the ECM <M/T> or PCM <A/T> (Refer to GROUP 13A, Diagnosis [P.13A-41](#) <2.4 L engine>, GROUP 13B, [P.13B-43](#) <3.8 L engine> or GROUP 23A, Diagnosis [P.23A-65](#) <A/T>).

**NO :** Go to Step 3.

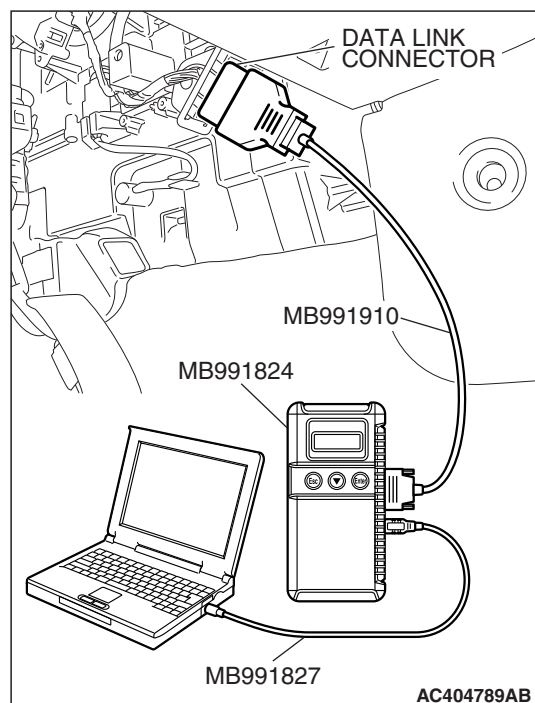

**STEP 3. Using scan tool MB991958, read the for any diagnostic trouble code.**

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- Combination meter (DTC U1100 or U1101)  
DTC indicating a time-out error related to the engine or automatic transaxle control system
- A/C (DTC U1100)  
DTC indicating a time-out error related to the engine or automatic transaxle control system


- (1) Turn the ignition switch to the "ON" position.
- (2) Check for DTC U1100 or U1101 related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.



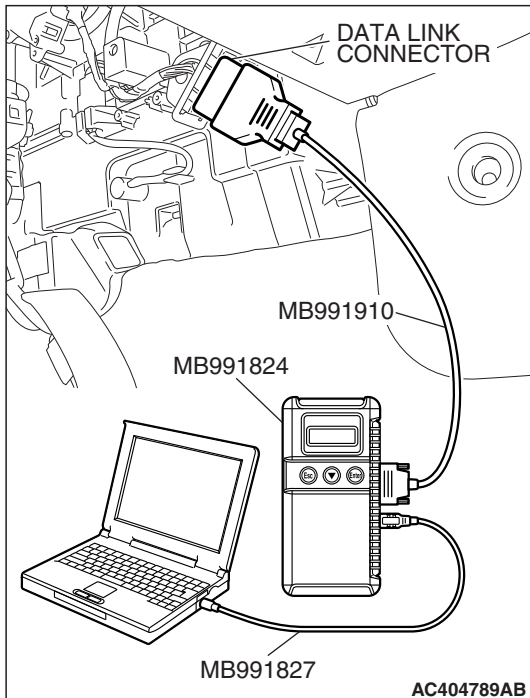

**STEP 4. Recheck for diagnostic trouble code.**


Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ECM <M/T> or PCM <A/T>. On completion, verify that the DTC is not reset.

**NO :** A poor connection, open circuit or other intermittent malfunction is present in the CAN bus lines between the ECM <M/T> or PCM <A/T> and the ETACS-ECU (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).

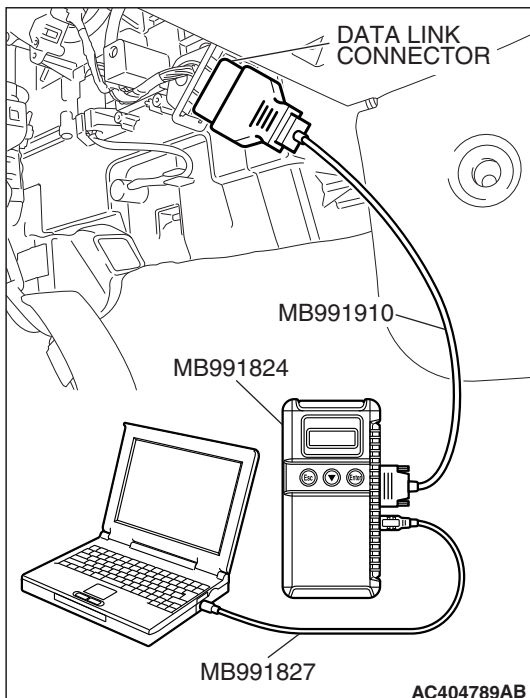

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). On completion, verify that the DTC is not reset.

**NO :** A poor connection, open circuit or other intermittent malfunction is present in the CAN bus lines between the ECM <M/T> or PCM <A/T> and the ETACS-ECU (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).



---

DTC U1108: Combination meter time-out.

---

**⚠ CAUTION**

- If DTC U1108 is set in the ETACS-ECU, always diagnose the CAN main bus line.
- Whenever the ECU is replaced, ensure that the communication circuit is normal.

**TROUBLE JUDGMENT**

The ETACS-ECU receives combination meter-related signal from the combination meter. If the ECU cannot receive the signal, DTC U1108 will be set.

**TECHNICAL DESCRIPTION (COMMENT)****Current trouble**

- Connector(s) or wiring harness in the CAN bus lines between the combination meter and the ETACS-ECU, the power supply system to the combination meter, the combination meter itself, or the ETACS-ECU may be defective.

**Past trouble**

- If DTC U1108 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the combination meter and the ETACS-ECU, and the power supply system to the combination meter. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble [P.00-16](#)).

*NOTE: You cannot find a past trouble, by the M.U.T.-III CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, CAN Bus Line Diagnostic Flow [P.54C-10](#)).*

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The combination meter may be defective
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

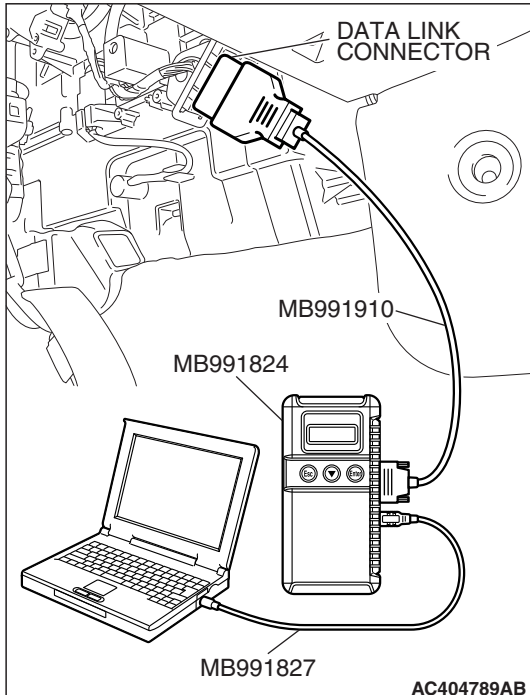

**STEP 2. Using scan tool MB991958, read the combination meter diagnostic trouble code.**


Check whether the combination meter-related DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check whether the combination meter-related DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.


**Q: Is the DTC set?**

**YES :** Diagnose the combination meter (Refer to GROUP 54A, Diagnosis P.54A-60).

**NO :** Go to Step 3.

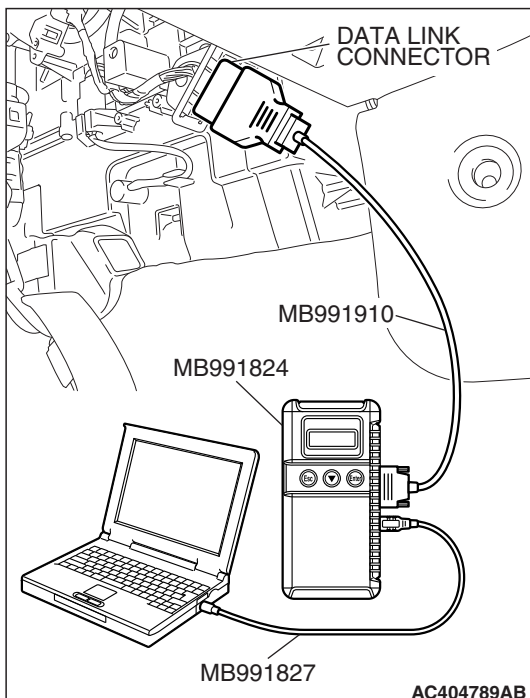

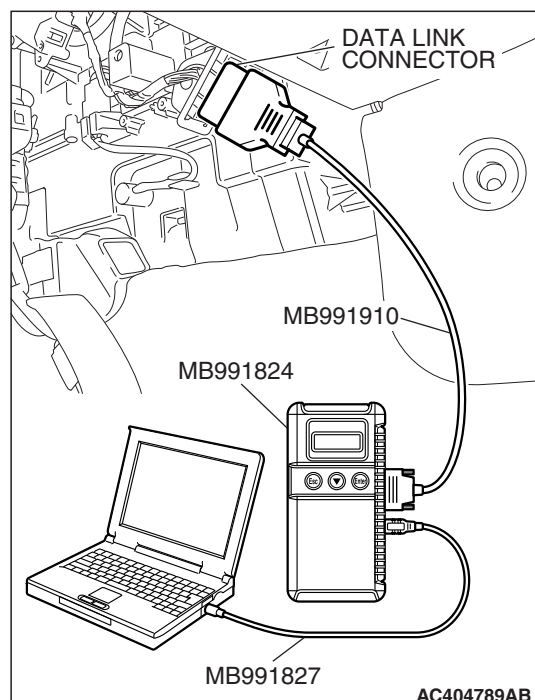

**STEP 3. Using scan tool MB991958, read the for any diagnostic trouble code.**

Check if a DTC, which relates to CAN communication-linked systems below, is set.


- Engine  
Meter-related time-out DTC

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC U1108 related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Go to Step 4.

**NO** : Go to Step 5.

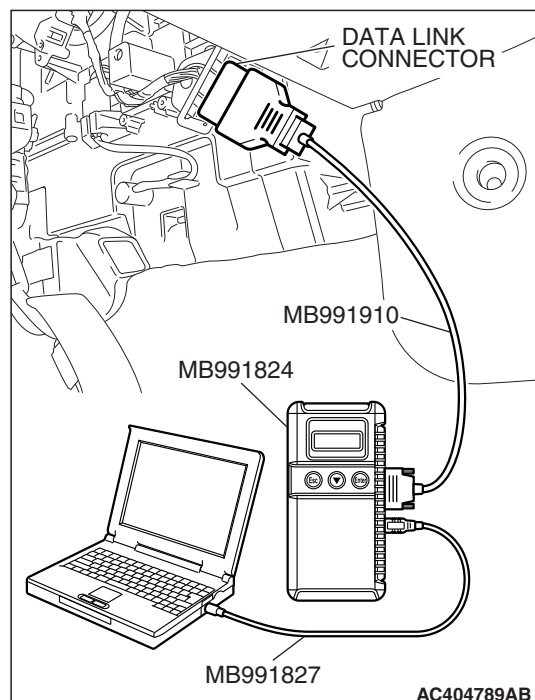**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set.


- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Replace the combination meter. On completion, verify that the DTC is not reset.

**NO** : A poor connection, open circuit or other intermittent malfunction is present in the CAN bus lines between the combination meter and the ETACS-ECU (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).



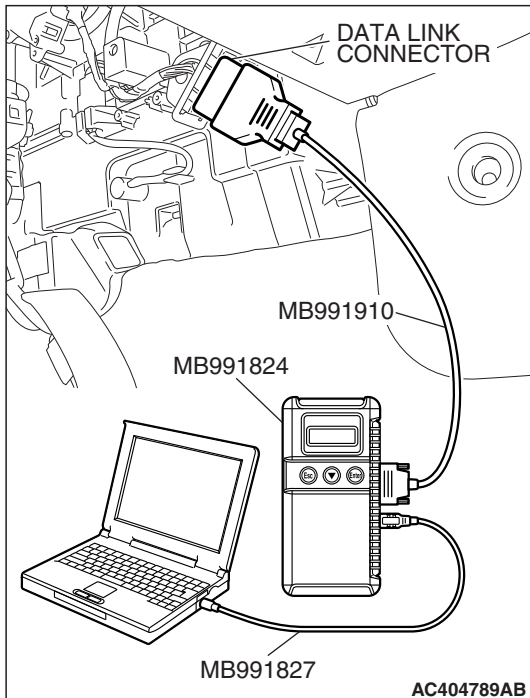

### STEP 5. Recheck for diagnostic trouble code.

Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### Q: Is the DTC set?

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). On completion, verify that the DTC is not reset.

**NO :** A poor connection, open circuit or other intermittent malfunction is present in the CAN bus lines between the combination meter and the ETACS-ECU (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).

### DTC U1110: A/C-ECU time-out.

#### **CAUTION**

- If DTC U1110 is set in the ETACS-ECU, always diagnose the CAN main bus line.
- Whenever the ECU is replaced, ensure that the communication circuit is normal.

### TROUBLE JUDGMENT

The ETACS-ECU receives air conditioning system-related signal from the A/C-ECU. If an air conditioning control system-related signal cannot be received, DTC U1110 will be set.

### TECHNICAL DESCRIPTION (COMMENT)

#### Current trouble

- Connector(s) or wiring harness in the CAN bus lines between the A/C-ECU and the ETACS-ECU, the power supply system to the A/C-ECU, the A/C-ECU, or the ETACS-ECU may be defective.

#### Past trouble

- If DTC U1110 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the A/C-ECU and the ETACS-ECU, and the power supply system to the A/C-ECU. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble [P.00-16](#)).

*NOTE: You cannot find a past trouble, by the M.U.T.-III CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, CAN Bus Line Diagnostic Flow [P.54C-10](#)).*

### TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The A/C-ECU may be defective
- The ETACS-ECU may be defective



**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

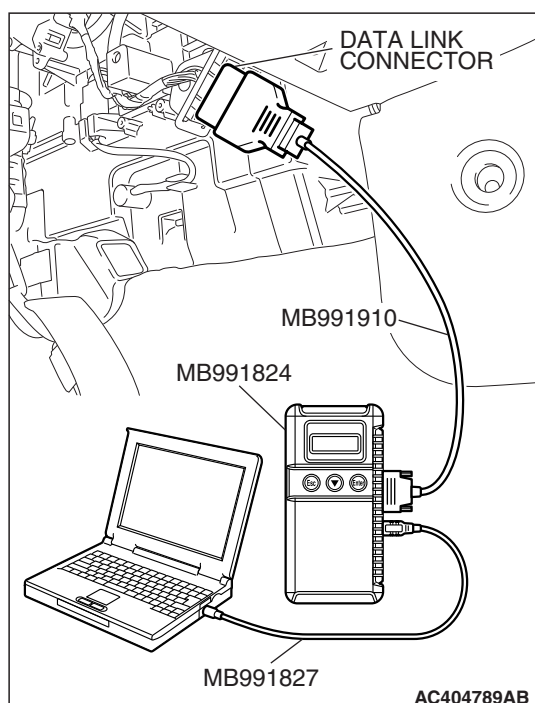



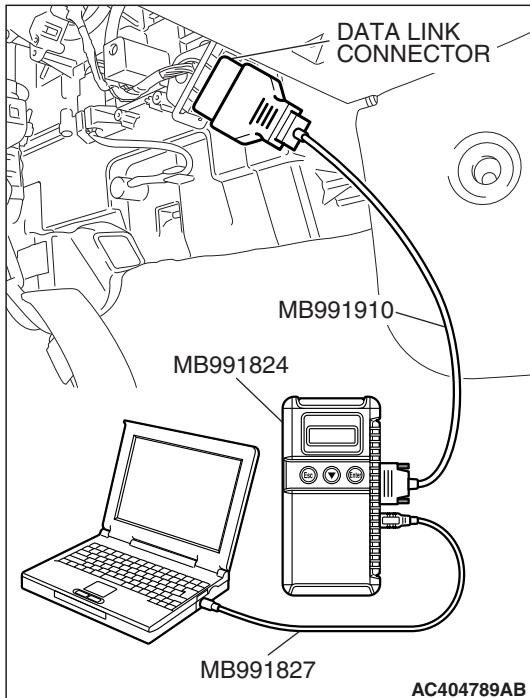

**STEP 2. Using scan tool MB991958, read the A/C diagnostic trouble code.**


Check if an A/C-ECU DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check whether A/C system-related DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the air conditioning system (Refer to GROUP 55A, Diagnosis [P.55A-9](#)<manual A/C> or GROUP 55B, Diagnosis [P.55B-8](#)<automatic A/C>).

**NO :** Go to Step 3.

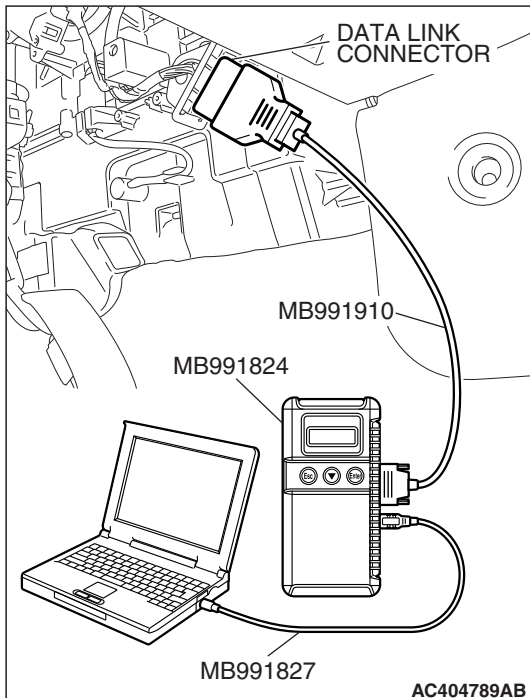

**STEP 3. Using scan tool MB991958, read the for any diagnostic trouble code.**

Check if a DTC, which relates to CAN communication-linked systems below, is set.

- ECM <M/T> or PCM <A/T>  
A/C-related time-out DTC


- (1) Turn the ignition switch to the "ON" position.
- (2) Check for a DTC U1110 related to the relevant system.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

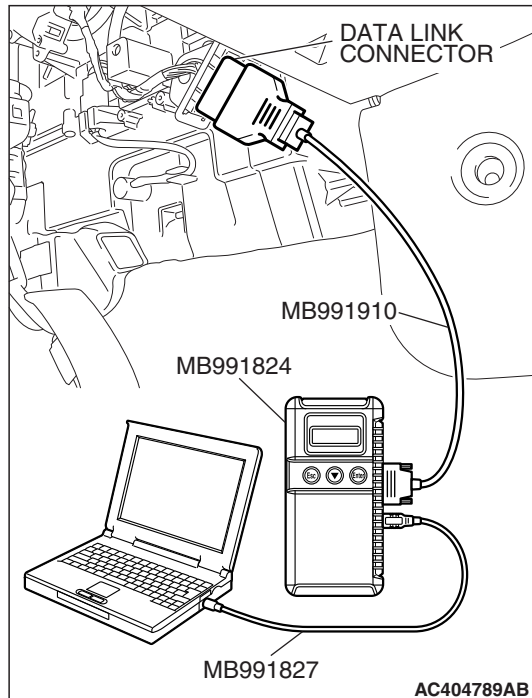

**STEP 4. Recheck for diagnostic trouble code.**


Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the A/C-ECU. On completion, verify that the DTC is not reset.

**NO :** A poor connection, open circuit or other intermittent malfunction is present in the CAN bus lines between the A/C-ECU and the ETACS-ECU (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).

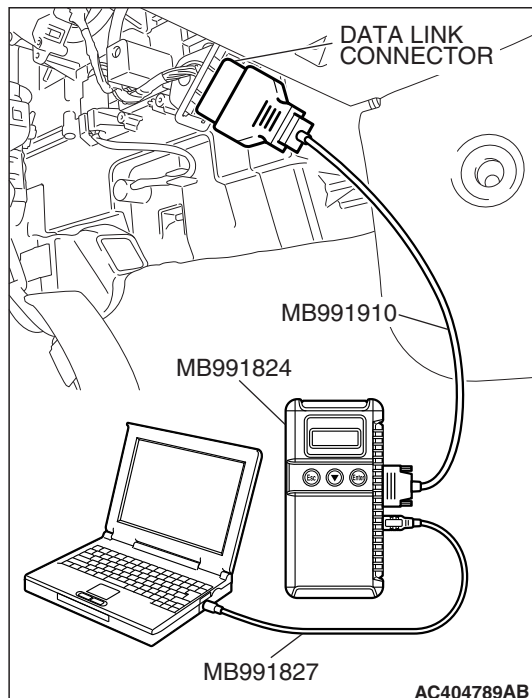**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). On completion, verify that the DTC is not reset.

**NO :** A poor connection, open circuit or other intermittent malfunction is present in the CAN bus lines between the A/C-ECU and the ETACS-ECU (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).



---

**DTC U1128: Failure information on combination meter.**

---

**⚠ CAUTION**

- If DTC U1128 is set in the ETACS-ECU, always diagnose the CAN main bus line.
- Whenever the ECU is replaced, ensure that the communication circuit is normal.

**TROUBLE JUDGMENT**

The ETACS-ECU receives combination meter-related signal from the combination meter via the CAN bus lines. If a fail-safe related data is contained in the signal from the combination meter, DTC U1128 will be stored.

**TECHNICAL DESCRIPTION (COMMENT)**

**Current trouble**

- The wiring harness wire or connectors may have loose, corroded, or damage terminals, or terminals pushed back in the connector, the ECM <M/T> or PCM <A/T>, the combination meter or the ETACS-ECU may be defective.

**Past trouble**

- If DTC U1128 is stored as a past trouble, carry out diagnosis with particular emphasis on wiring and connector(s) in the CAN bus line between the combination meter and the ETACS-ECU, and the power supply system to the combination meter. For diagnosis procedures, refer to "How to cope with past trouble" (Refer to GROUP 00, How to treat past trouble [P.00-16](#)).

*NOTE: You cannot find a past trouble, by the M.U.T.-III CAN bus diagnostics even if there is a failure in CAN bus lines. In this case, refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#) and check the CAN bus lines. You can narrow down the possible cause of the trouble by referring to the DTC, which is set regarding the CAN communication-linked ECUs (Refer to GROUP 54C, CAN Bus Line Diagnostic Flow [P.54C-10](#)).*

**TROUBLESHOOTING HINTS**

- The ETACS-ECU may be defective

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

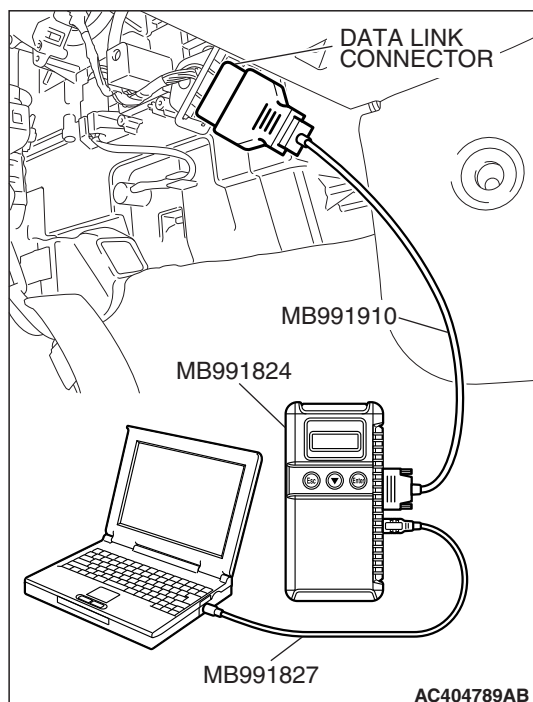

**STEP 2. Using scan tool MB991958, read the ECM <M/T> or PCM <A/T> diagnostic trouble code.**


Check whether engine and transaxle DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for engine and transaxle DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.


**Q: Is the DTC set?**

**YES :** Diagnose the ECM <M/T> or PCM <A/T> (Refer to GROUP 13A, Diagnosis P.13A-41 <2.4 L engine> or GROUP 13B, P.13B-43 <3.8 L engine>).

**NO :** Go to Step 3.

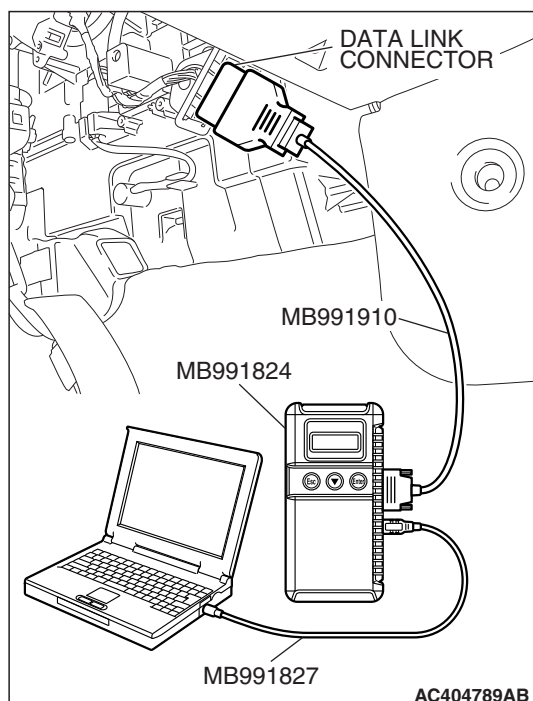



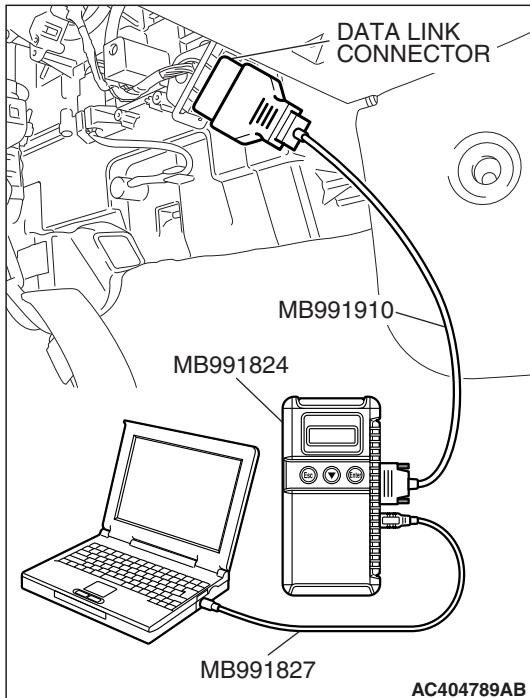

**STEP 3. Using scan tool MB991958, read the combination meter diagnostic trouble code.**


Check whether the combination meter-related DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check whether the combination meter-related DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Diagnose the combination meter (Refer to GROUP 54A, Diagnosis [P.54A-60](#)).

**NO** : Go to Step 4.

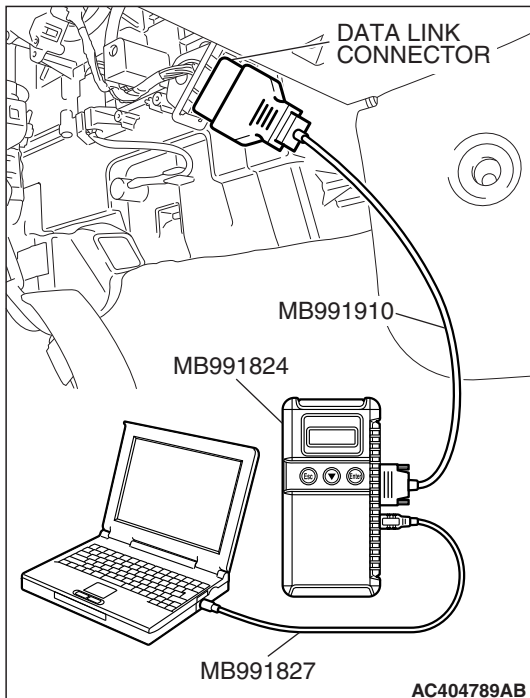

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set.

- (1) Erase the DTC.
- (2) Turn the ignition switch to the "ON" position.
- (3) Check if the DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). On completion, verify that the DTC is not reset.

**NO** : There is an intermittent malfunction such as poor engaged connector(s) or open circuit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-14](#)).



## SYMPTOM CHART

M1549000802981

## ECU COMMUNICATION SYSTEM

SYMPTOM	INSPECTION PROCEDURE	REFERENCE PAGE
Communication with the SWS monitor kit is not possible.	A-1	<a href="#">P.54B-60</a>
Communication with the column switch (column-ECU) is not possible.	A-2	<a href="#">P.54B-66</a>
Communication with the ETACS-ECU is not possible.	A-3	<a href="#">P.54B-74</a>
Communication with the front-ECU is not possible.	A-4	<a href="#">P.54B-82</a>
Communication with the sunroof-ECU is not possible.	A-5	<a href="#">P.54B-90</a>

## FUNCTION SYSTEM

SYSTEM	SYMPTOM	INSPECTION PROCEDURE	REFERENCE PAGE
Tone alarm	General description concerning the tone alarm	–	<a href="#">P.54B-98</a>
	Ignition key reminder tone alarm function does not work normally.	B-1	<a href="#">P.54B-101</a>
	Light reminder tone alarm function does not work normally.	B-2	<a href="#">P.54B-105</a>
	Seat belt tone alarm function does not work normally.	B-3	<a href="#">P.54B-108</a>
	Door ajar tone alarm function does not work normally.	B-4	<a href="#">P.54B-113</a>
Central door locking system	General description concerning central door locking system	–	<a href="#">P.54B-117</a>
	The central door locking system does not work at all.	C-1	<a href="#">P.54B-119</a>
	Some doors do not lock or unlock.	C-2	<a href="#">P.54B-124</a>
	None of the doors lock and unlock with just the door lock switch operation.	C-3	<a href="#">P.54B-140</a>
	None of the doors lock and unlock with just the driver's or passenger's inside lock knob operation.	C-4	<a href="#">P.54B-142</a>
	Forgotten key prevention function does not work normally.	C-5	<a href="#">P.54B-144</a>
Power windows	General description concerning the power windows	–	<a href="#">P.54B-147</a>
	Power windows do not work at all.	D-1	<a href="#">P.54B-148</a>
	The power window timer function does not work normally.	D-2	<a href="#">P.54B-160</a>
	Only the door window (LH) does not work by operating the power window main switch.	D-3	<a href="#">P.54B-163</a>
	Power window (RH) does not work normally by operating the power window sub switch.	D-4	<a href="#">P.54B-169</a>
	Power window (RH) does not work normally by operating the power window main switch.	D-5	<a href="#">P.54B-176</a>



<b>SYSTEM</b>	<b>SYMPTOM</b>	<b>INSPECTION PROCEDURE</b>	<b>REFERENCE PAGE</b>
Keyless entry system	General description concerning the keyless entry system	–	<a href="#">P.54B-179</a>
	Keyless entry system does not operate.	E-1	<a href="#">P.54B-180</a>
	The dome light, the turn-signal lights and the horn do not operate through the answerback function.	E-2	<a href="#">P.54B-182</a>
	Encrypted code cannot be registered.	E-3	<a href="#">P.54B-191</a>
	The liftgate <ECLIPSE> or trunk lid <ECLIPSE SPYDER> is not opened when the keyless entry transmitter "LIFTGATE" <ECLIPSE> or "TRUNK LID" <ECLIPSE SPYDER> button is operated.	E-4	<a href="#">P.54B-193</a>
Sunroof	General description concerning the sunroof	–	<a href="#">P.54B-195</a>
	Sunroof does not operate.	F-1	<a href="#">P.54B-196</a>
	Any of the sunroof switch positions is defective.	F-2	<a href="#">P.54B-205</a>
	Sunroof timer function does not work normally.	F-3	<a href="#">P.54B-207</a>
Windshield wiper and washer	General description concerning the windshield wiper and washer	–	<a href="#">P.54B-210</a>
	The windshield wipers do not work at all.	G-1	<a href="#">P.54B-213</a>
	The windshield wipers do not work when the windshield wiper switch is at "INT" or "MIST" position or the windshield washer switch is at "ON" position. However, the wipers work at low speed when the windshield wiper switch is at "LO" or "HI."	G-2	<a href="#">P.54B-220</a>
	Either of the windshield wiper switch positions are defective.	G-3	<a href="#">P.54B-222</a>
	Windshield wipers does not stop at the predetermined park position.	G-4	<a href="#">P.54B-227</a>
	The windshield intermittent wiper interval cannot be adjusted by using the variable intermittent wiper control switch.	G-5	<a href="#">P.54B-232</a>
	The windshield intermittent wiper interval is not changed according to the vehicle speed.	G-6	<a href="#">P.54B-234</a>
	The windshield washer does not work.	G-7	<a href="#">P.54B-237</a>
Rear wiper and washer	General description concerning the rear wiper and washer	–	<a href="#">P.54B-245</a>
	Rear wiper does not work at all.	H-1	<a href="#">P.54B-247</a>
	Rear wiper does not stop at the predetermined park position.	H-2	<a href="#">P.54B-253</a>
	When the selector lever is moved to "R" position during the rear wiper operation, the rear wiper does not operate at the continuous mode.	H-3	<a href="#">P.54B-255</a>
	Rear washer does not operate.	H-4	<a href="#">P.54B-258</a>



SYSTEM	SYMPTOM	INSPECTION PROCEDURE	REFERENCE PAGE
Headlight and taillight	General description concerning the headlights and taillights	–	<a href="#">P.54B-265</a>
	None of the taillight illuminate normally.	I-1	<a href="#">P.54B-268</a>
	None of the headlight (low-beam) illuminate normally.	I-2	<a href="#">P.54B-273</a>
	The headlights (high-beam) do not illuminate normally.	I-3	<a href="#">P.54B-279</a>
	When the passing switch is turned "ON," the headlights (low-beam or high-beam) do not illuminate.	I-4	<a href="#">P.54B-282</a>
	Headlights do not illuminate when the lighting switch is at "TAIL," and "PASSING" position, but illuminate at low-beam when the switch is at "HEAD" position. At this position, the headlights cannot be changed to high beam by operating the dimmer switch.	I-5	<a href="#">P.54B-284</a>
	The taillights, the front parking lights or the license plate light do not illuminate. <Halogen Type Headlight>	I-6	<a href="#">P.54B-286</a>
	The taillights, the front parking lights or the license plate light do not illuminate. <Discharge Type Headlight>		<a href="#">P.54B-309</a>
	One of the headlights does not illuminate. <Halogen Type Headlight>	I-7	<a href="#">P.54B-331</a>
	One of the headlights does not illuminate. <Discharge Type Headlight>		<a href="#">P.54B-340</a>
	The high-beam indicator light does not illuminate.	I-8	<a href="#">P.54B-347</a>
	Headlight automatic shutoff function does not work normally.	I-9	<a href="#">P.54B-351</a>
	Headlight dimmer switch automatic resetting function does not work normally.	I-10	<a href="#">P.54B-353</a>
	Daytime running light function does not work normally.	I-11	<a href="#">P.54B-354</a>
Flasher timer	General description concerning the flasher timer	–	<a href="#">P.54B-357</a>
	Turn-signal lights do not flash when the turn-signal light switch is turned on.	J-1	<a href="#">P.54B-358</a>
	Hazard warning lights do not flash when the hazard warning light switch is turned on.	J-2	<a href="#">P.54B-365</a>
	One of the turn-signal lights does not illuminate. <Halogen Type Headlight>	J-3	<a href="#">P.54B-367</a>
	One of the turn-signal lights does not illuminate. <Discharge Type Headlight>		<a href="#">P.54B-383</a>
	The turn-signal light indicator does not illuminate normally.	J-4	<a href="#">P.54B-399</a>



<b>SYSTEM</b>	<b>SYMPTOM</b>	<b>INSPECTION PROCEDURE</b>	<b>REFERENCE PAGE</b>
Front fog light	General description concerning the front fog lights	–	<a href="#">P.54B-403</a>
	Front fog lights do not illuminate when the front fog light switch is turned on.	K-1	<a href="#">P.54B-404</a>
	Front fog lights do not go out when the headlights (low-beam) are turned off while the front fog lights are on.	K-2	<a href="#">P.54B-409</a>
	One of the front fog lights does not illuminate.	K-3	<a href="#">P.54B-410</a>
	The front fog light indicator does not illuminate normally.	K-4	<a href="#">P.54B-416</a>
Interior light	General description concerning the interior light	–	<a href="#">P.54B-420</a>
	The dome lights do not illuminate and go out normally.	L-1	<a href="#">P.54B-424</a>
	The front dome light or rear dome light does not illuminate or go out normally. <ECLIPSE>	L-2	<a href="#">P.54B-429</a>
	The dome light does not illuminate or go out normally. <ECLIPSE SPYDER>		<a href="#">P.54B-442</a>
	The luggage compartment light does not illuminate or go out normally. <ECLIPSE>	L-3	<a href="#">P.54B-446</a>
	Dome light dimming function does not work normally.	L-4	<a href="#">P.54B-451</a>
	The ignition key hole illumination light does not illuminate or go out normally.	L-5	<a href="#">P.54B-455</a>
	The interior light automatic shutoff function does not work normally.	L-6	<a href="#">P.54B-464</a>
	The door ajar indicator lights do not illuminate or go out normally	L-7	<a href="#">P.54B-469</a>
	The seat belt warning light does not illuminate or go out normally	L-8	<a href="#">P.54B-474</a>
Theft-alarm system	General description concerning the theft-alarm system	–	<a href="#">P.54B-478</a>
	Theft-alarm system is not armed (theft-alarm indicator does not illuminate).	O-1	<a href="#">P.54B-480</a>
	The theft-alarm system is not armed.	O-2	<a href="#">P.54B-489</a>
	Horn does not sound when the theft-alarm system is triggered.	O-3	<a href="#">P.54B-491</a>
	Headlights (high-beam) do not flash when the theft-alarm system is triggered.	O-4	<a href="#">P.54B-492</a>
	Panic alarm function does not work.	O-5	<a href="#">P.54B-493</a>



## INPUT SIGNAL CHART

M1549024201184

## SWS MONITOR

If a problem is found in the Data List inspection, observe the table below.

SYMPTOM		INSPECTION PROCEDURE	REFERENCE PAGE
ETACS-ECU does not receive any signal from the ignition switch (ACC).		M-1	<a href="#">P.54B-495</a>
ETACS-ECU does not receive any signal from the ignition switch (IG1).		M-2	<a href="#">P.54B-499</a>
ETACS-ECU does not receive any signal from the front fog light switch.		M-3	<a href="#">P.54B-502</a>
ETACS-ECU does not receive "R" position signal from the backup light switch <M/T>.		M-4	<a href="#">P.54B-506</a>
ETACS-ECU does not receive one of signals from the door switches.		M-5	<a href="#">P.54B-512</a>
Column switch	ETACS-ECU does not receive any signal from the taillight switch.	M-6	<a href="#">P.54B-522</a>
	ETACS-ECU does not receive any signal from the headlight switch.		
	ETACS-ECU does not receive any signal from the passing light switch.		
	ETACS-ECU does not receive any signal from the dimmer switch.		
	ETACS-ECU does not receive any signal from the turn-signal light switch.		
	ETACS-ECU does not receive any signal from the windshield mist wiper switch.	M-7	<a href="#">P.54B-525</a>
	ETACS-ECU does not receive any signal from the windshield intermittent wiper switch.		
	ETACS-ECU does not receive any signal from the windshield low-speed wiper switch.		
	ETACS-ECU does not receive any signal from the windshield high-speed wiper switch.		
	ETACS-ECU does not receive any signal from the rear wiper switch.		
	ETACS-ECU does not receive any signal from the variable intermittent wiper control switch.	M-8	<a href="#">P.54B-529</a>
	ETACS-ECU does not receive any signal from the windshield washer switch.	M-7	<a href="#">P.54B-525</a>
	ETACS-ECU does not receive any signal from the rear washer switch.		
Sunroof switch	ETACS-ECU does not receive any signal from the up, open or close/down switch.	M-9	<a href="#">P.54B-533</a>



## SCAN TOOL OR VOLTMETER

If a problem is found in the Pulse Check, observe the table below.


SYMPTOM		INSPECTION PROCEDURE	REFERENCE PAGE
ETACS-ECU does not receive any signal from the key reminder switch.		N-1	<a href="#">P.54B-537</a>
ETACS-ECU does not receive any signal from the hazard warning light switch.		N-2	<a href="#">P.54B-541</a>
ETACS-ECU does not receive one of signals from the door lock actuators.		N-3	<a href="#">P.54B-545</a>
ETACS-ECU does not receive one of signals from the door lock switch (incorporated in the power window main switch and power window sub switch).		N-4	<a href="#">P.54B-555</a>
ETACS-ECU does not receive any signal from the liftgate latch switch. <ECLIPSE>		N-5	<a href="#">P.54B-565</a>
ETACS-ECU does not receive any signal from the trunk lid latch switch. <ECLIPSE SPYDER>			<a href="#">P.54B-570</a>
ETACS-ECU does not receive any signal from the liftgate lock release handle. <ECLIPSE>		N-6	<a href="#">P.54B-574</a>
Transmitter	ETACS-ECU does not receive any signal from the lock, unlock, liftgate <ECLIPSE>, trunk lid <ECLIPSE SPYDER> or panic switch.	N-7	<a href="#">P.54B-579</a>
ETACS-ECU does not receive any interior light loaded signal.		N-8	<a href="#">P.54B-581</a>
ETACS-ECU does not receive an auto-stop signal from the rear wiper motor.		N-9	<a href="#">P.54B-587</a>
ETACS-ECU does not receive any signal from hood switch.		N-10	<a href="#">P.54B-592</a>






SYMPTOM PROCEDURES

INSPECTION PROCEDURE A-1: Communication with the SWS monitor kit is not possible.

Scan Tool Communication and ETACS-ECU Ground Circuit

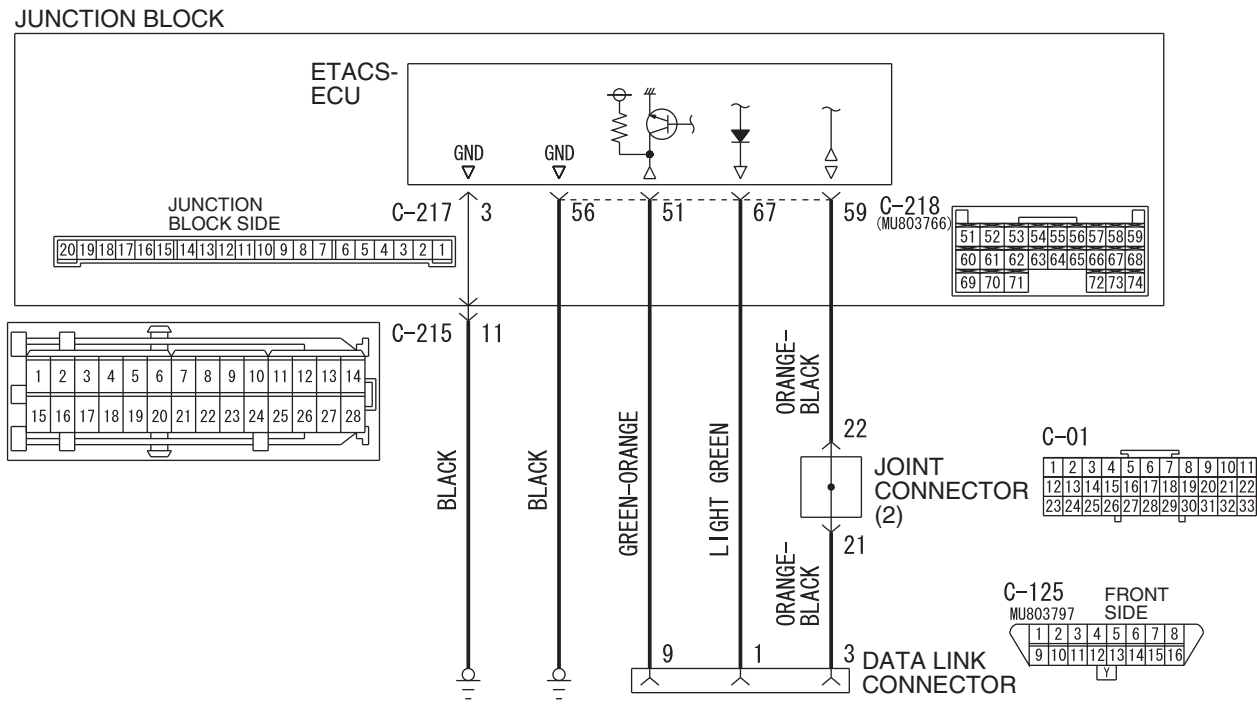

W6P54M022A

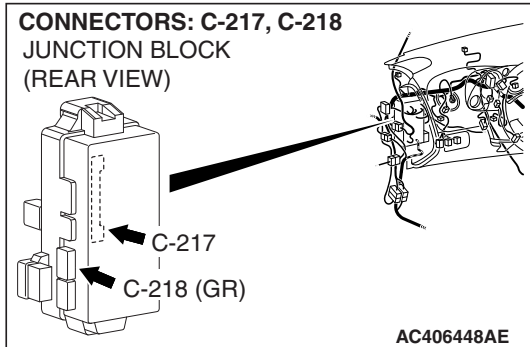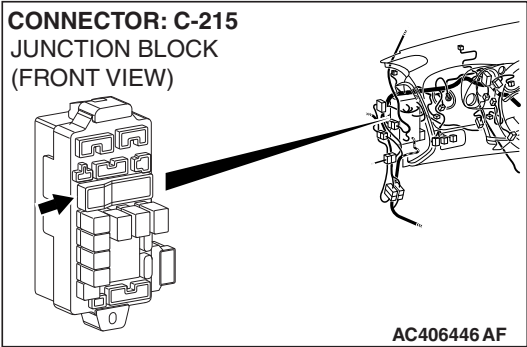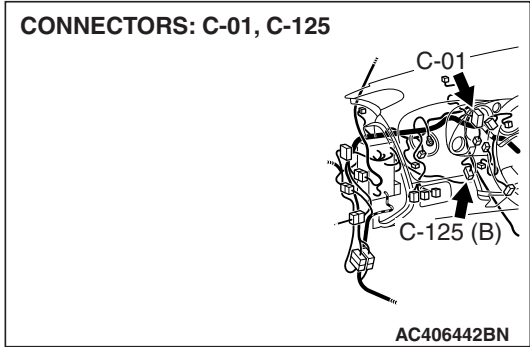



## TECHNICAL DESCRIPTION (COMMENT)

The SWS monitor kit may be connected improperly.

## TROUBLESHOOTING HINTS

- The SWS monitor body (I/F cartridge) may be defective
- The SWS monitor harness may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness

---

### STEP 1. Verify SWS monitor kit MB991813 for proper connection.

**Q: Is SWS monitor kit MB991813 connected with the column switch properly?**

**YES :** Go to Step 2.

**NO :** Connect SWS monitor kit MB991813 to the column switch securely.

---


### STEP 2. Verify the power supply circuit to the ETACS-ECU.

**Q: Does the system communicate with scan tool MB991958 when the ignition switch is turned to the "ON" position?**

**YES :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

**NO :** Go to Step 3.



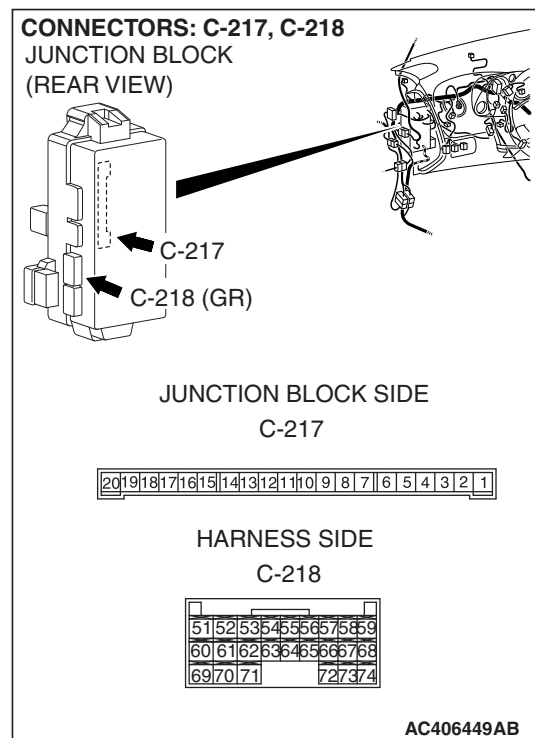


**STEP 3. Check ETACS-ECU connectors C-217 and C-218 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are ETACS-ECU connectors C-217 and C-218 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

[P.00E-2](#). Verify that the system communicates with the SWS monitor normally.

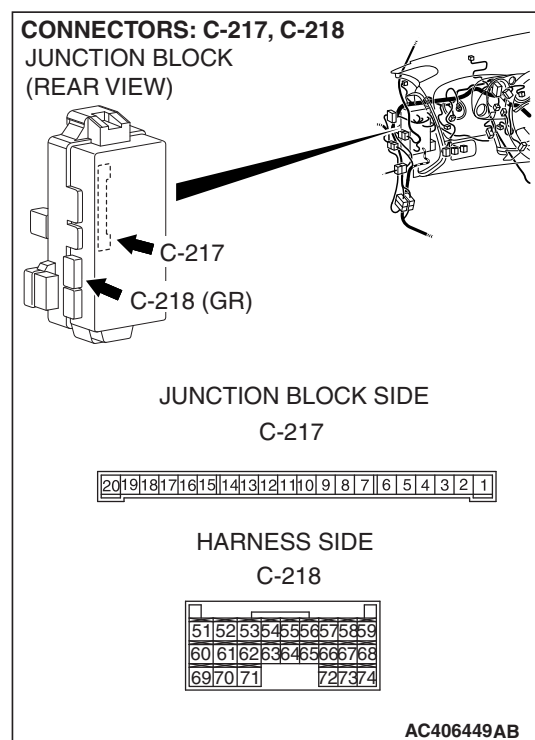


**STEP 4. Check the ground circuit to the ETACS-ECU.**


**Measure the resistance at ETACS-ECU connectors C-217 and C-218.**

- (1) Disconnect ETACS-ECU connectors C-217 and C-218, and measure the resistance available at the junction block side of the connector.



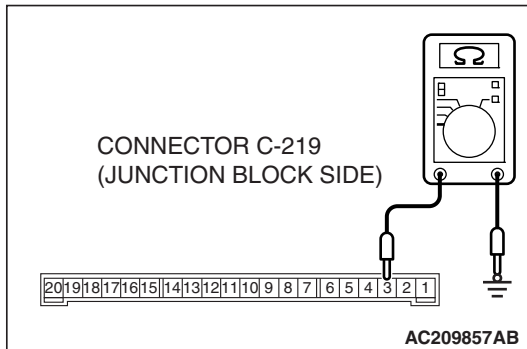

- (2) Measure the resistance value between ETACS-ECU connector C-217 terminal 3 and ground.
- The resistance should be 2 ohms or less.

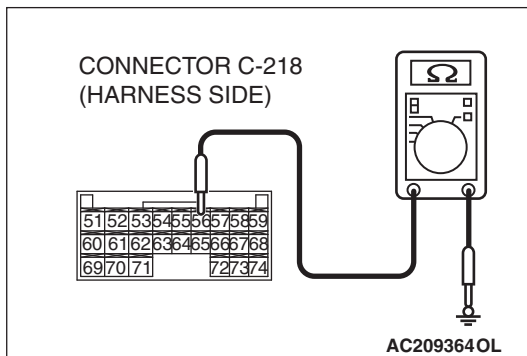

- Measure the resistance value between ETACS-ECU connector C-218 terminal 56 and ground.
- The resistance should be 2 ohms or less.


**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 6.


**NO :** Go to Step 5.

**STEP 5. Check the wiring harness between ETACS-ECU connector C-217 (terminal 3) or ETACS-ECU connector C-218 (terminal 56) and ground.**

- Check the ground wire for open circuit.

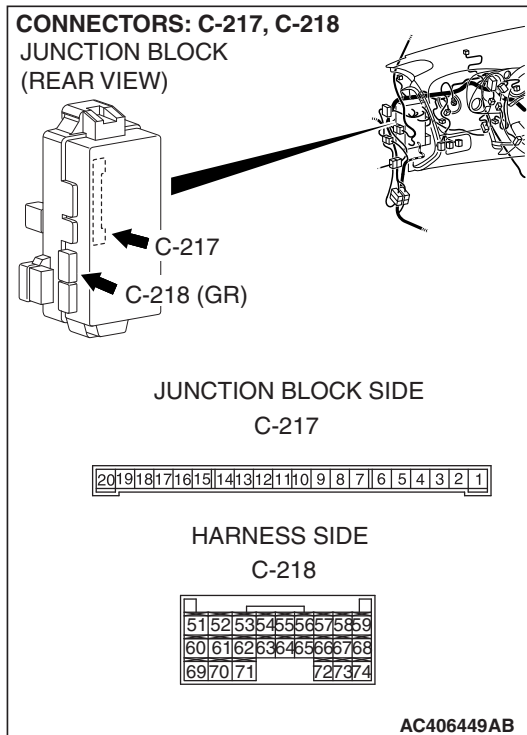

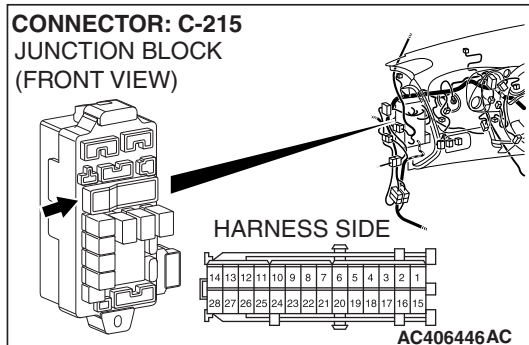

**CONNECTOR: C-215**  
JUNCTION BLOCK  
(FRONT VIEW)

**NOTE:** Also check junction block connector C-215 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-215 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**Q:** Is the wiring harness between ETACS-ECU connector C-217 (terminal 3) or ETACS-ECU connector C-218 (terminal 56) and ground in good condition?

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the system communicates with the SWS monitor kit normally.


---

**STEP 6. Check data link connector C-125 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q:** Is data link connector C-125 in good condition?

**YES :** Go to Step 7.



**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the system communicates with the SWS monitor kit normally.

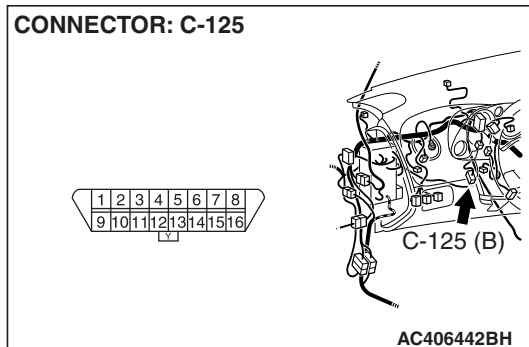**CONNECTOR: C-125**



**STEP 7. Check the wiring harness between ETACS-ECU connector C-218 (terminals 51, 59 and 67) and data link connector C-125 (terminals 9, 3 and 1).**

- Check the communication lines for open circuit and short circuit.

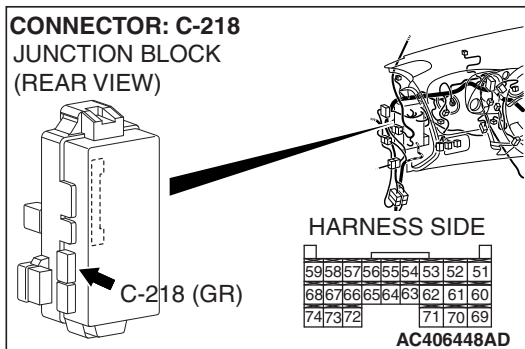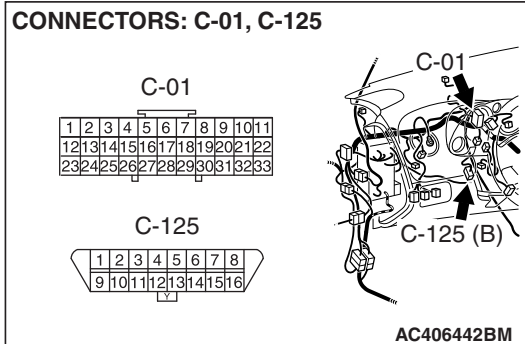

*NOTE: Also check joint connector C-01 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector C-01 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-218 (terminals 51, 59 and 67) and data link connector C-125 (terminals 9, 3 and 1) in good condition?**


**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The system should communicate with the SWS monitor kit normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the system communicates with the SWS monitor kit normally.




**INSPECTION PROCEDURE A-2: Communication with the column switch (column-ECU) is not possible.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

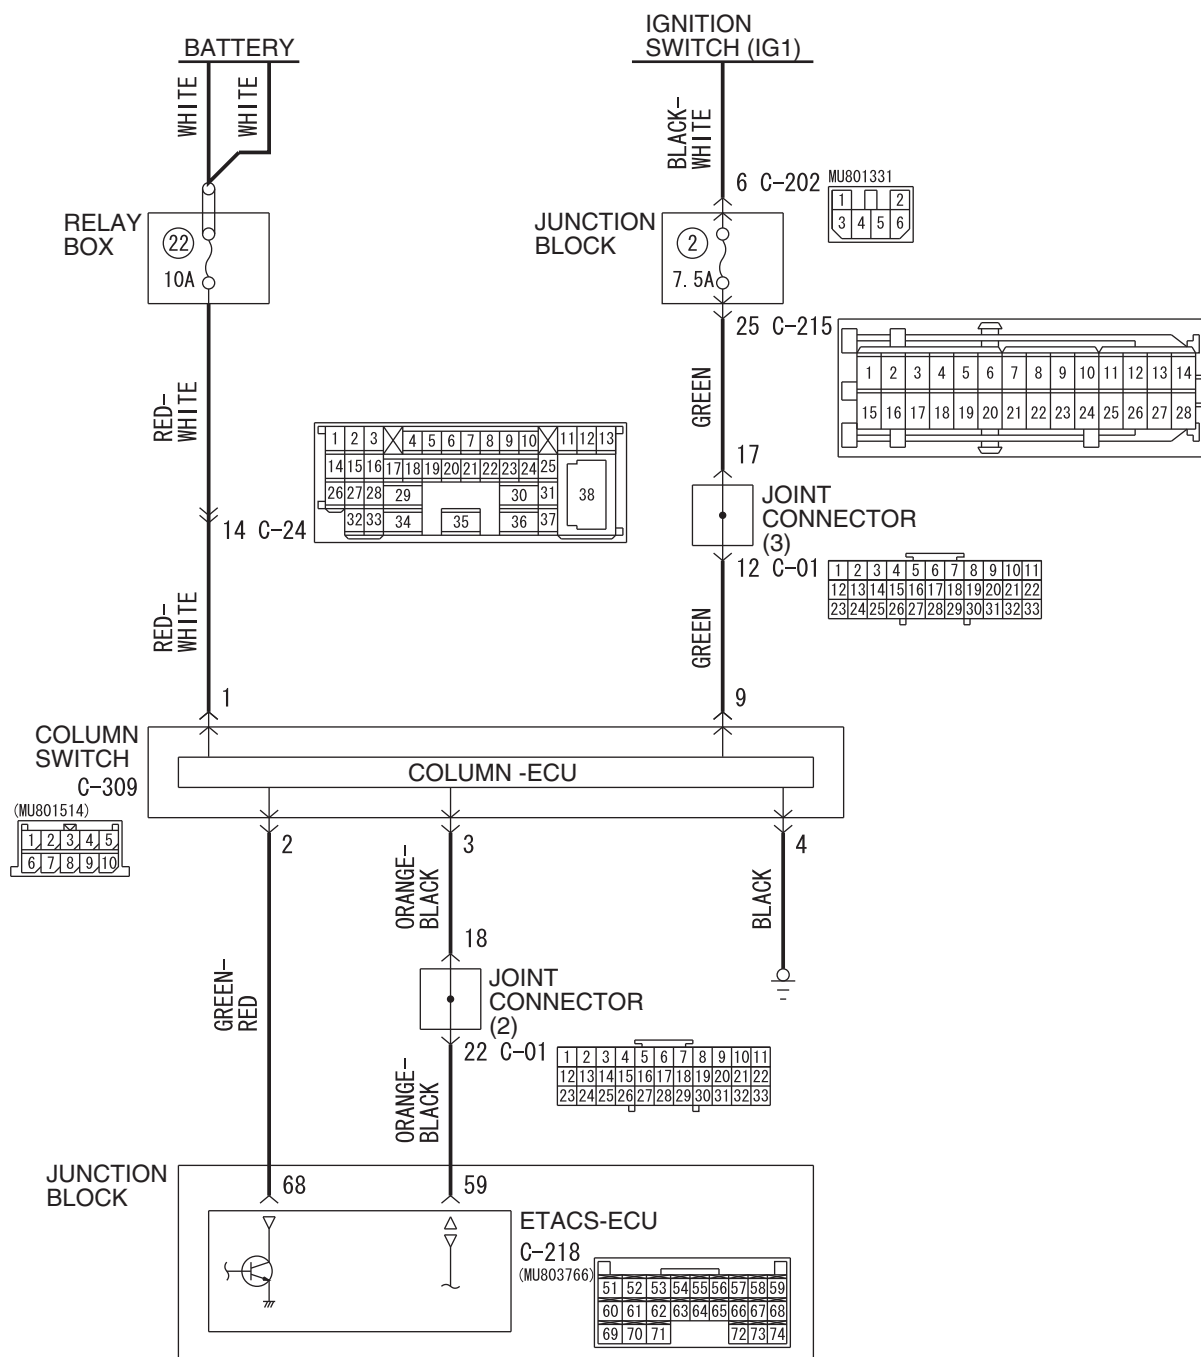
**Column Switch Power Supply and SWS Communication Circuit**




CONNECTORS: C-01, C-24

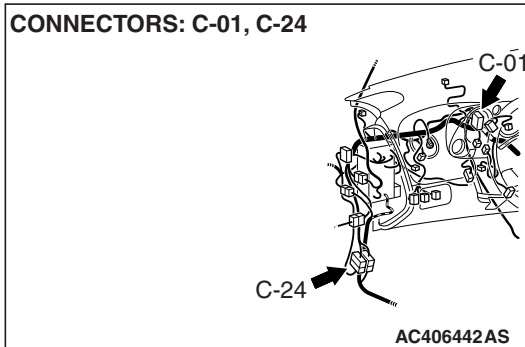

CONNECTOR: C-218  
JUNCTION BLOCK  
(REAR VIEW)

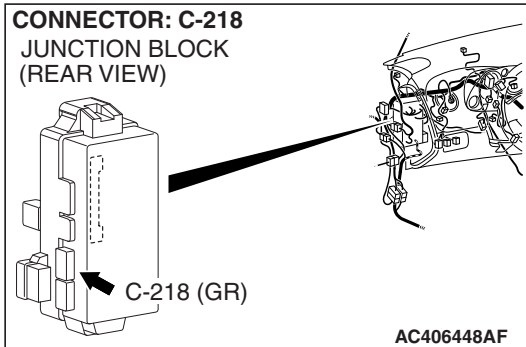

CONNECTOR: C-309

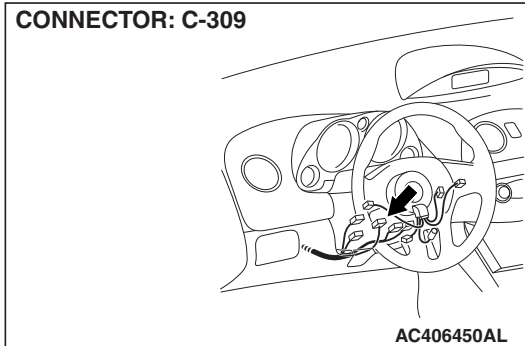

## CIRCUIT OPERATION

- The power supply to the column switch is provided by the battery and the ignition switch (IG1).
- If the power supply system from the battery is defective, the system operates by the power supply from the ignition switch (IG1).

## TECHNICAL DESCRIPTION (COMMENT)

The power supply circuit to the column switch (column-ECU) may be defective. If the battery power supply circuit (terminal 1 of the column switch) to the ECU is damaged, also check the power supply circuit from the ignition switch (IG1) (terminal 9 of the column switch), and repair if necessary.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The column switch may be defective
- The ETACS-ECU may be defective

## DIAGNOSIS


### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness




- ETACS-ECU
- Column-ECU

**"NG" is displayed for all the items :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible P.54B-74."

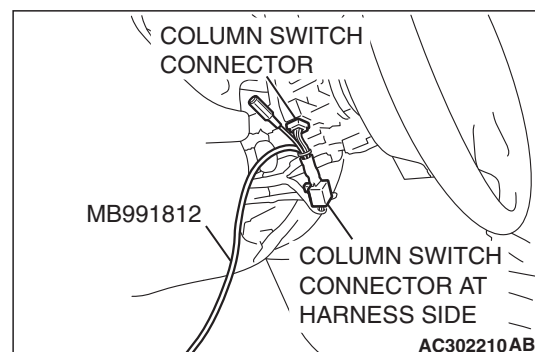



CONNECTOR: C-309

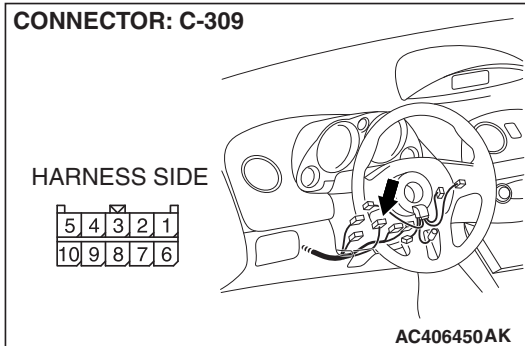


**STEP 2. Check column switch connector C-309 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is column switch connector C-309 in good condition?**

**YES :** Go to Step 3.


**NO :** Repair or replace the damaged component(s). The system should communicate with the column switch (column-ECU) normally.

CONNECTOR: C-309

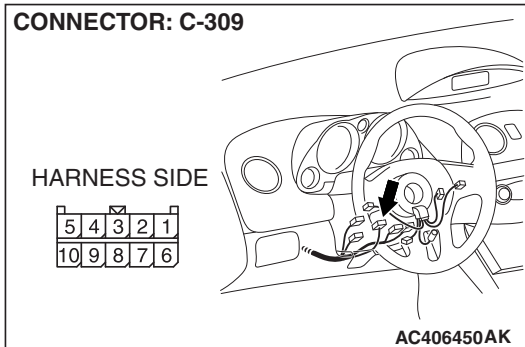

**STEP 3. Check the power supply circuit to the column switch. Measure the voltage at column switch connector C-309.**

(1) Disconnect column switch connector C-309 and measure the voltage available at the wiring harness side of the connector.

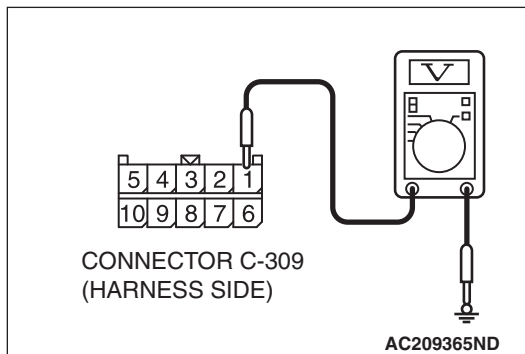

(2) Measure the voltage between terminal 1 and ground by backprobing.

- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**



**YES :** Go to Step 5.

**NO :** Go to Step 4.



**STEP 4. Check the wiring harness between column switch connector C-309 (terminal 1) and the battery.**

- Check the power supply line (battery supply) for open circuit and short circuit.

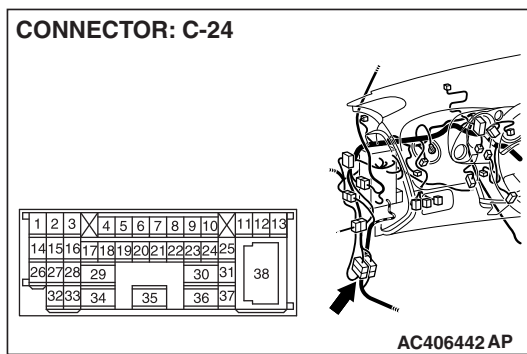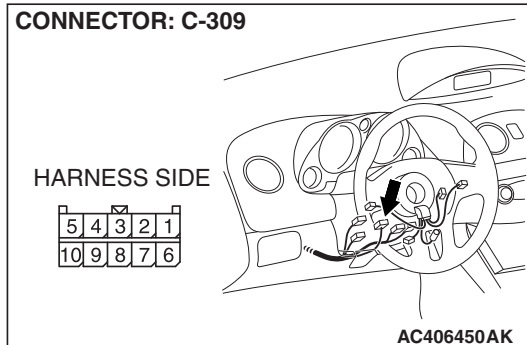



*NOTE: Also check intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-24 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between column switch connector C-309 (terminal 1) and the battery in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the column switch (column-ECU) normally.



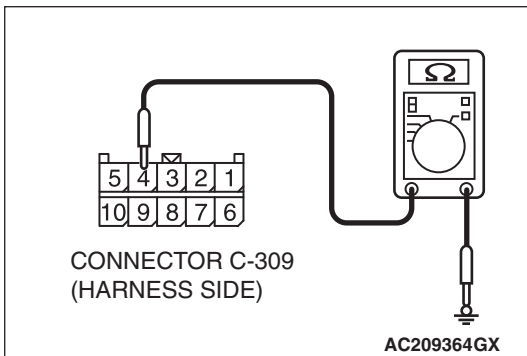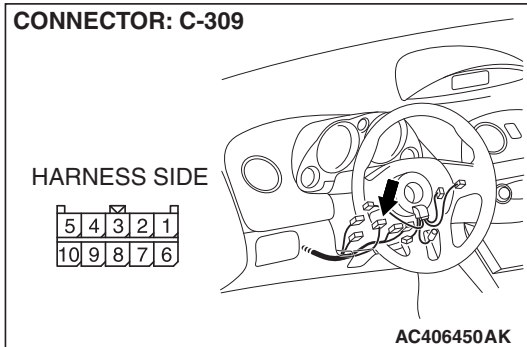

**STEP 5. Check the ground circuit to the column switch.  
Measure the resistance at column switch connector C-309.**

(1) Disconnect column switch connector C-309 and measure the resistance available at the wiring harness side of the connector.


(2) Measure the resistance value between terminal 4 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 7.

**NO :** Go to Step 6.

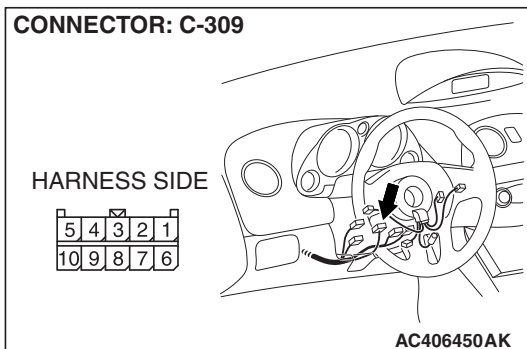


**STEP 6. Check the wiring harness between column switch connector C-309 (terminal 4) and ground.**

- Check the ground wire for open circuit.

**Q: Is the wiring harness between column switch connector C-309 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the column switch (column-ECU) normally.

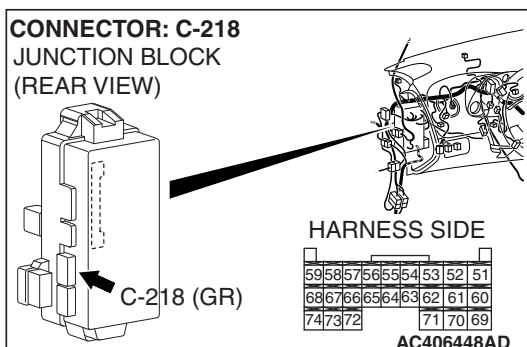

**STEP 7. Check ETACS-ECU connector C-218 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-218 in good condition?**




**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the column switch (column-ECU) normally.



**STEP 8. Check the wiring harness between column switch connector C-309 (terminal 3) and ETACS-ECU connector C-218 (terminal 59).**

- Check the communication lines for open circuit and short circuit.

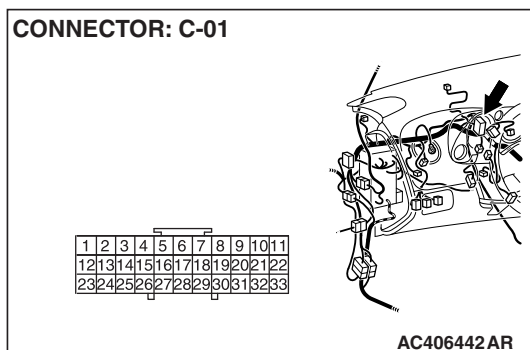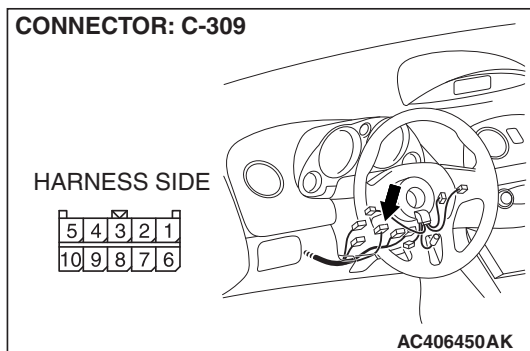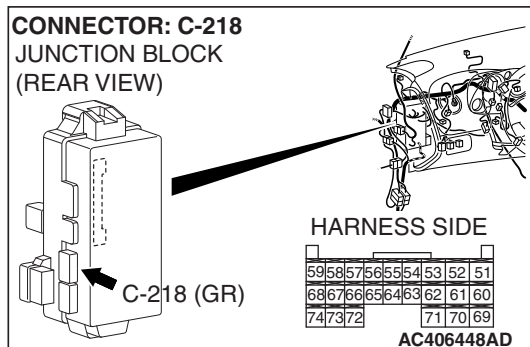



*NOTE: Also check joint connector C-01 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector C-01 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between column switch connector C-309 (terminal 3) and ETACS-ECU connector C-218 (terminal 59) in good condition?**

**YES :** Go to Step 9.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the column switch (column-ECU) normally.



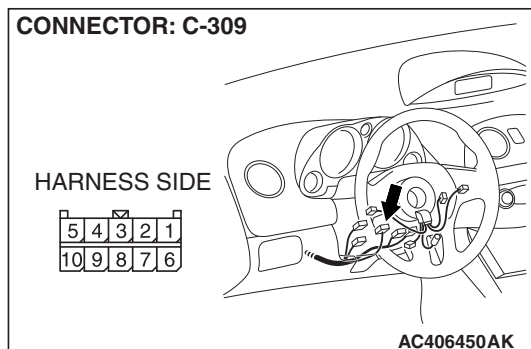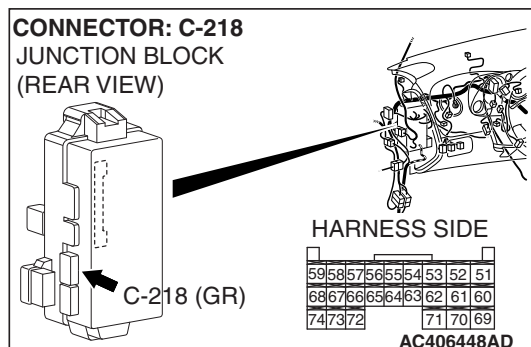

**STEP 9. Check the wiring harness between column switch connector C-309 (terminal 2) and ETACS-ECU connector C-218 (terminal 68).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between column switch connector C-309 (terminal 2) and ETACS-ECU connector C-218 (terminal 68) in good condition?**

**YES :** Go to Step 10.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the column switch (column-ECU) normally.

**STEP 10. Replace the column switch.**

- (1) Replace the column switch.
- (2) The system should communicate with the column switch (column-ECU) normally.

**Q: Can the system communicate with the column switch (column-ECU)?**


**YES :** No action is necessary and testing is complete.

**NO :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The system should communicate with the column switch (column-ECU) normally.







## INSPECTION PROCEDURE A-3: Communication with the ETACS-ECU is not possible.

ETACS-ECU Power Supply and SWS Communication Circuit

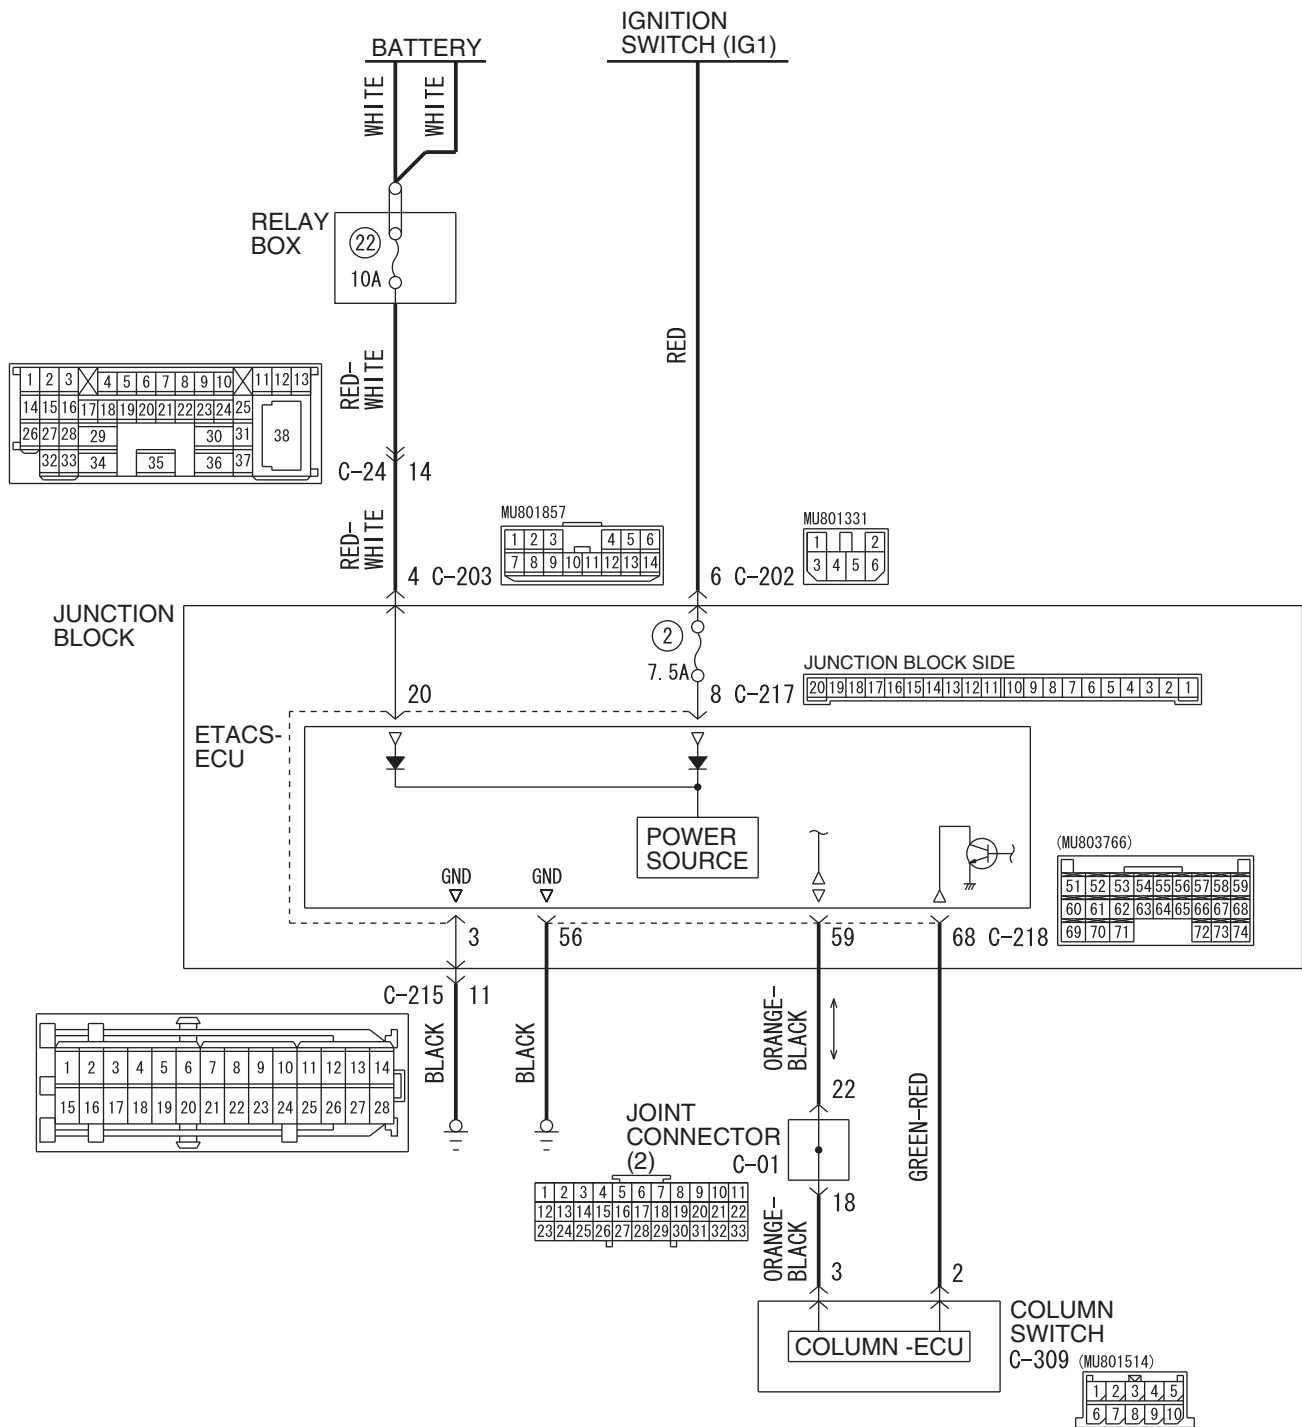



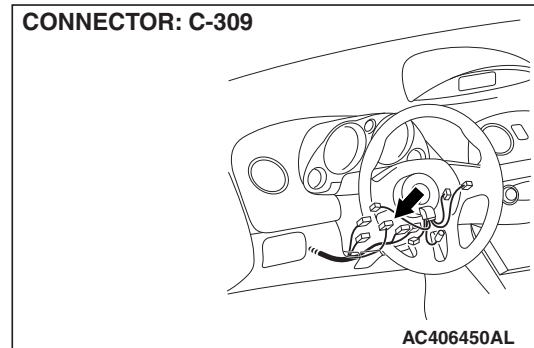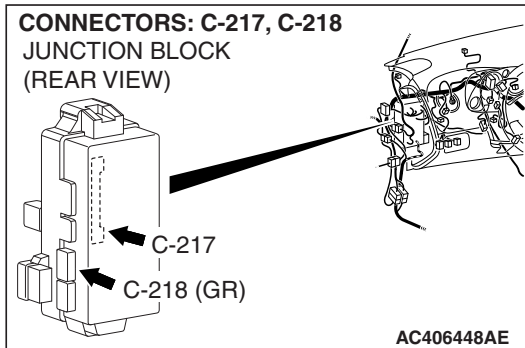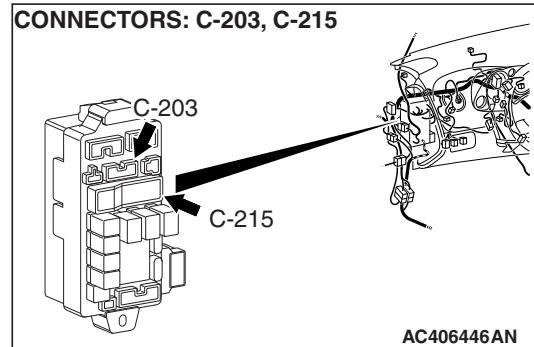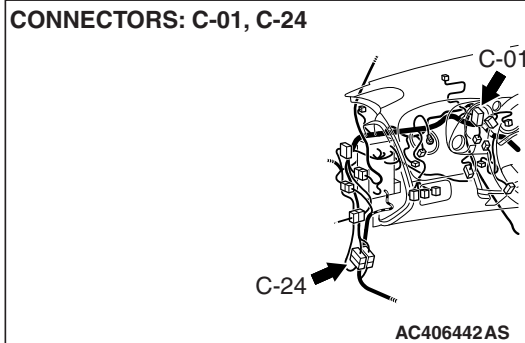

## CIRCUIT OPERATION

- The power supply to the ETACS-ECU is provided by the battery and the ignition switch (IG1).
- If the power supply system from the battery is defective, the system operates by the power supply from the ignition switch (IG1).

## TECHNICAL DESCRIPTION (COMMENT)

It is suspected that the power supply circuit to the ETACS-ECU is defective, or the wiring harness between the SWS monitor kit and the ETACS-ECU or their connector(s) is damaged. If the battery power supply circuit to the ECU (terminal 20 of the

ETACS-ECU) is damaged, also check the power supply circuit from the ignition switch (IG1) (terminal 8 of the ETACS-ECU), and repair if necessary. If the ground circuit to the ECU (terminal 3 of the ETACS-ECU) is damaged, also check the ground circuit to the sensor (terminal 56 of the ETACS-ECU), and repair if necessary.

## TROUBLESHOOTING HINTS


- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



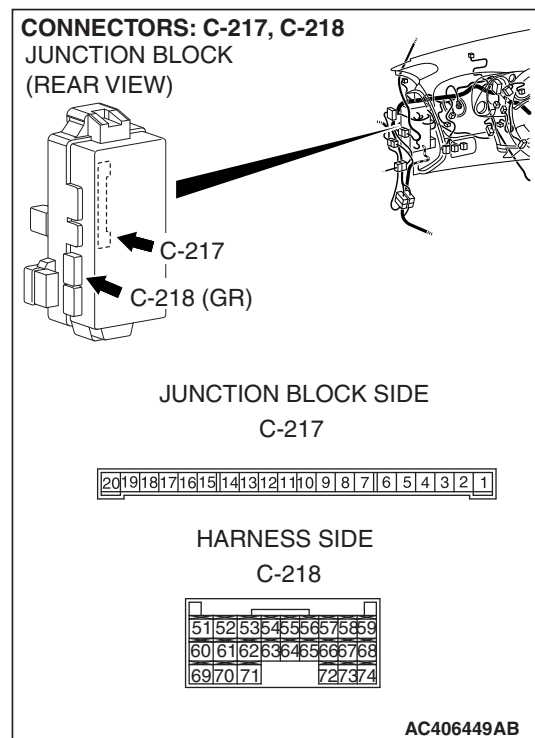


**STEP 1. Check ETACS-ECU connectors C-217 and C-218 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are ETACS-ECU connectors C-217 and C-218 in good condition?**


**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the ETACS-ECU normally.

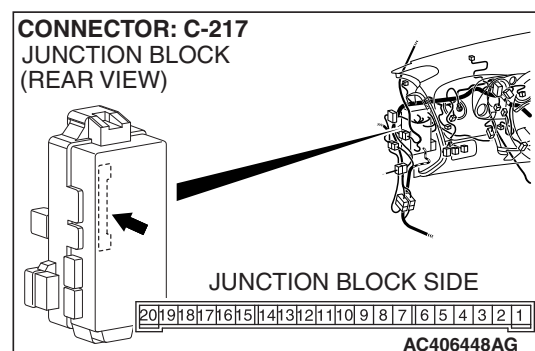

**STEP 2. Check the battery power supply circuit to the ETACS-ECU. Measure the voltage at ETACS-ECU connector C-217.**

(1) Disconnect ETACS-ECU connector C-217 and measure the voltage available at the junction block side of the connector.

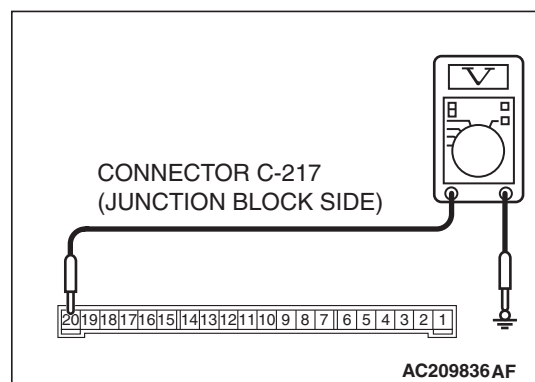

(2) Measure the voltage between terminal 20 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**



**YES :** Go to Step 4.

**NO :** Go to Step 3.



**STEP 3. Check the wiring harness between ETACS-ECU connector C-217 (terminal 20) and the battery.**

- Check the power supply line (battery supply) for open circuit and short circuit.

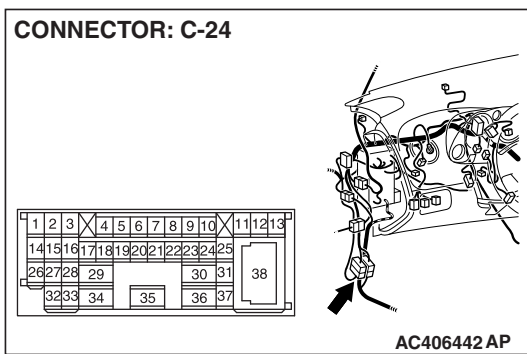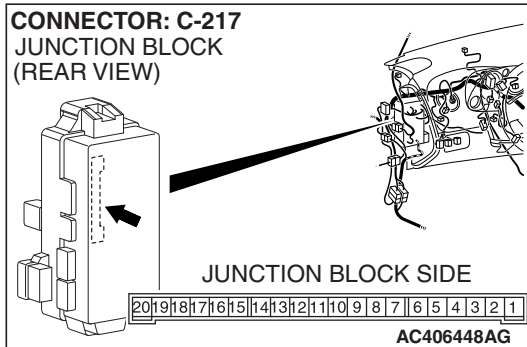


*NOTE: Also check intermediate connector C-24 and junction block connector C-203 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-24 or junction block connector C-203 are damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the wiring harness between ETACS-ECU connector C-217 (terminal 20) and the battery in good condition?**



**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the ETACS-ECU normally.

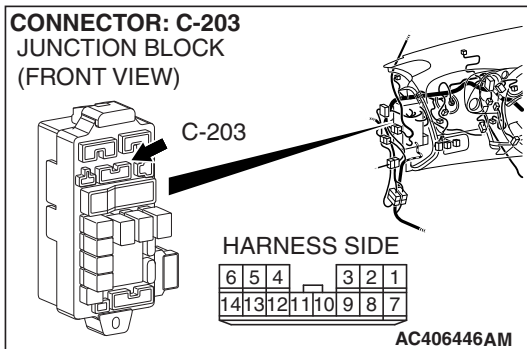



**CONNECTOR: C-217**  
JUNCTION BLOCK  
(REAR VIEW)

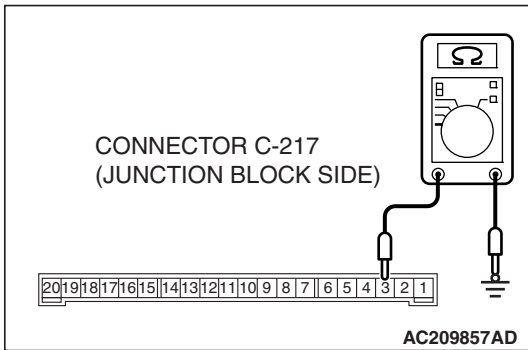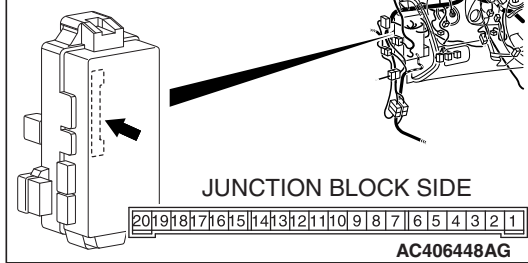

**STEP 4. Check the ground circuit to the ETACS-ECU.**

**Measure the resistance at ETACS-ECU connector C-217.**

- (1) Disconnect ETACS-ECU connector C-217 and measure the resistance available at the junction block side of the connector.

- (2) Measure the resistance value between terminal 3 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**


**YES :** Go to Step 6.

**NO :** Go to Step 5.

**STEP 5. Check the wiring harness between ETACS-ECU connector C-217 (terminal 3), C-218 (terminal 56) and ground.**


- Check the ground wire for open circuit.

**CONNECTORS: C-217, C-218**  
JUNCTION BLOCK  
(REAR VIEW)

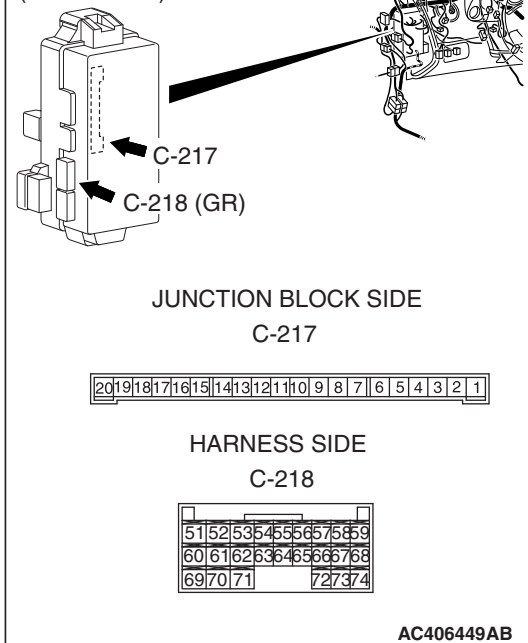



**CONNECTOR: C-215**  
**JUNCTION BLOCK**  
**(FRONT VIEW)**

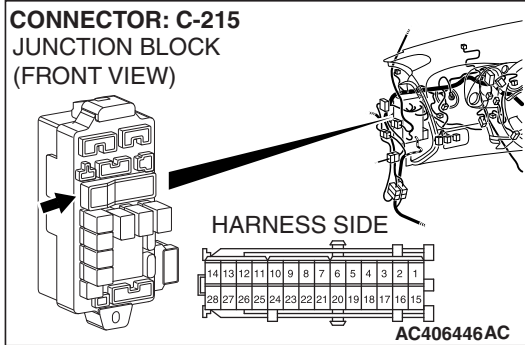

*NOTE: Also check junction block connector C-215 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-215 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-217 (terminal 3), C-218 (terminal 56) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the ETACS-ECU normally.


**STEP 6. Check column switch connector C-309 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is column switch connector C-309 in good condition?**



**YES :** Go to Step 7.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the ETACS-ECU normally.

**CONNECTOR: C-309**

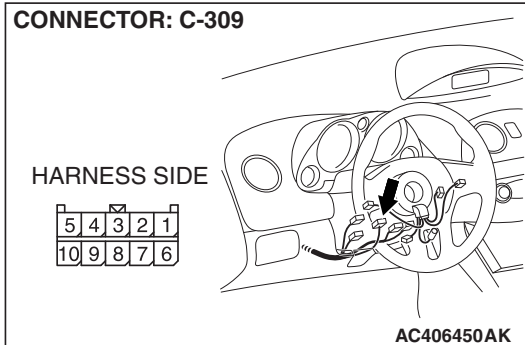



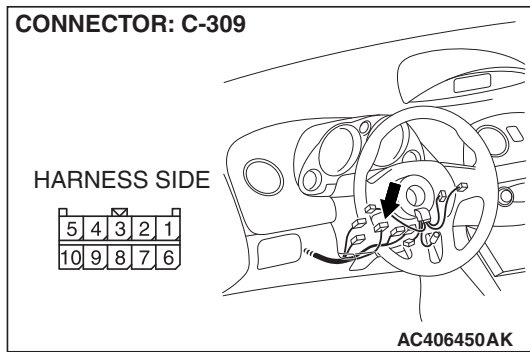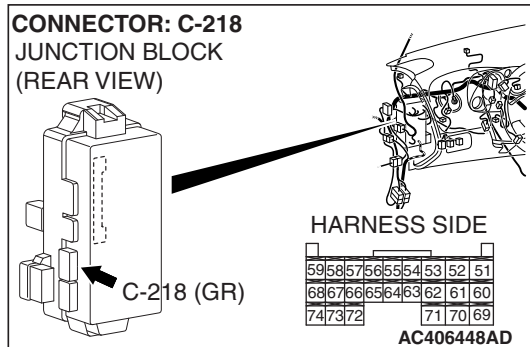

**STEP 7. Check the wiring harness between column switch connector C-309 (terminal 2) and ETACS-ECU connector C-218 (terminal 68).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between column switch connector C-309 (terminal 2) and ETACS-ECU connector C-218 (terminal 68) in good condition?**




**YES :** Go to Step 8.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the ETACS-ECU normally.



**STEP 8. Check the wiring harness between column switch connector C-309 (terminal 3) and ETACS-ECU connector C-218 (terminal 59).**

- Check the communication lines for open circuit and short circuit.

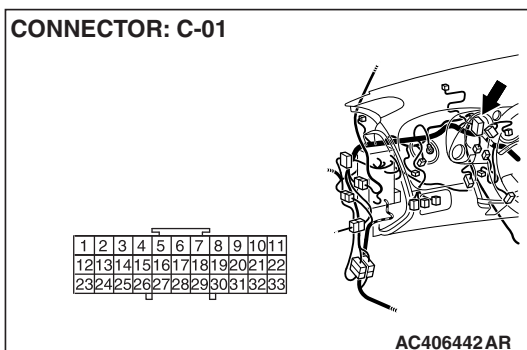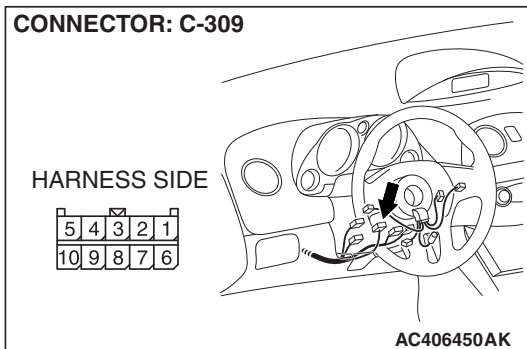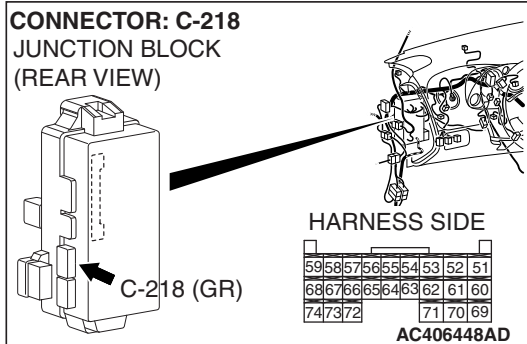

*NOTE: Also check joint connector C-01 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector C-01 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between column switch connector C-309 (terminal 3) and ETACS-ECU connector C-218 (terminal 59) in good condition?**


**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The system should communicate with the ETACS-ECU normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the ETACS-ECU normally.






**INSPECTION PROCEDURE A-4: Communication with the front-ECU is not possible.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor [P.54B-15](#)."*

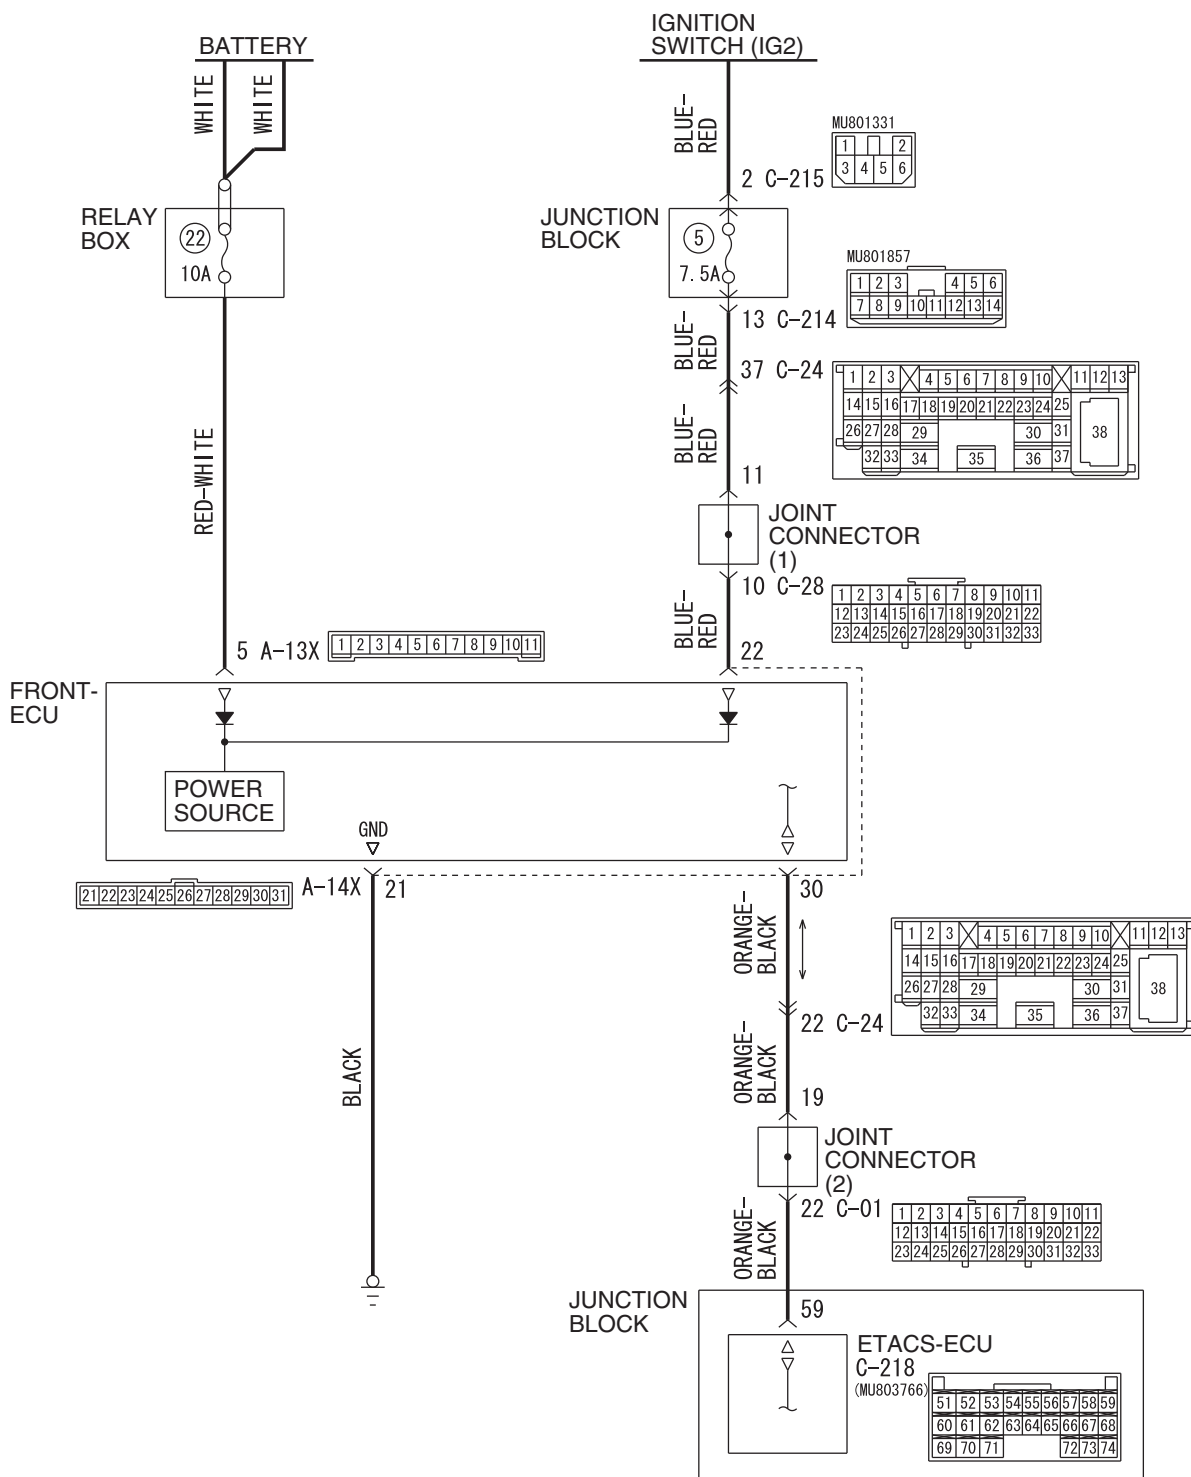**Front-ECU Power Supply and SWS Communication Circuit**



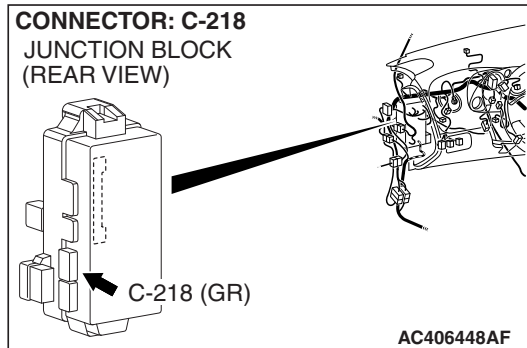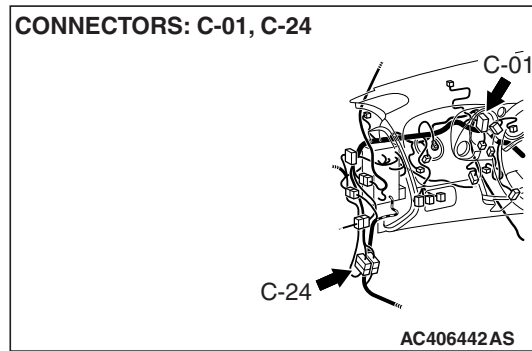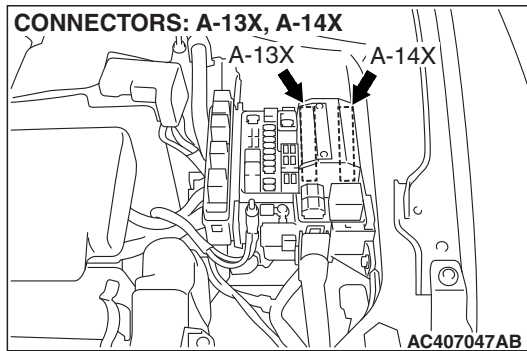

## CIRCUIT OPERATION

- The power supply to the front-ECU is provided by the battery and the ignition switch (IG2).
- If the power supply system from the battery is defective, the system operates by the power supply from the ignition switch (IG2).

## TECHNICAL DESCRIPTION (COMMENT)

It is suspected that the power supply circuit to the front-ECU is defective, or the wiring harness between the SWS monitor kit and the front-ECU or their connector(s) is damaged. If the battery power supply circuit to the ECU (terminal 5 of the front-ECU) is damaged, also check the power supply circuit from the ignition switch (IG2) (terminal 22 of the front-ECU), and repair if necessary.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The front-ECU may be defective
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1.** Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.

Check the ETACS-ECU.

**⚠ CAUTION**



To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.


**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible P.54B-74."

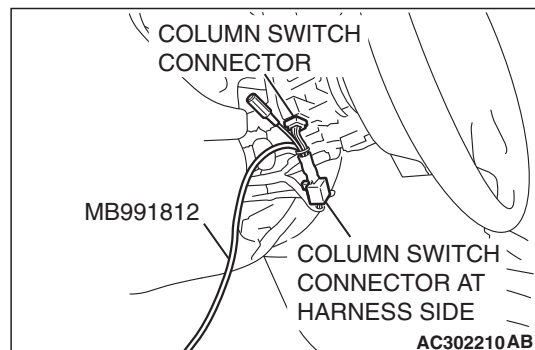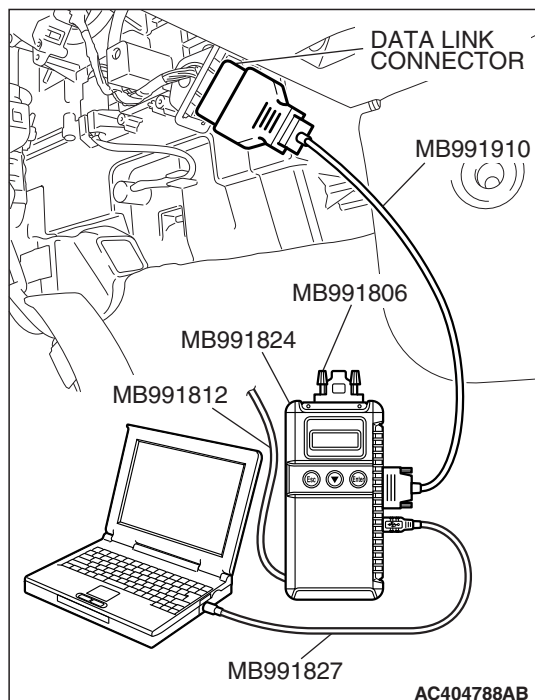



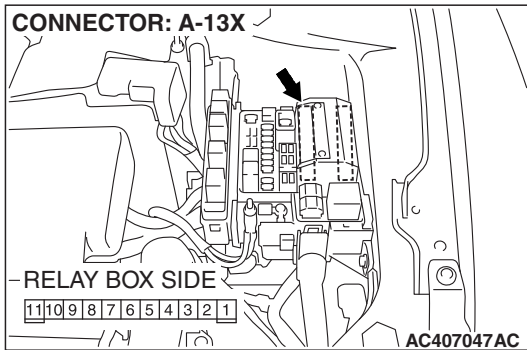


**STEP 2. Check front-ECU connector A-13X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front-ECU connector A-13X in good condition?**

**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the front-ECU normally.

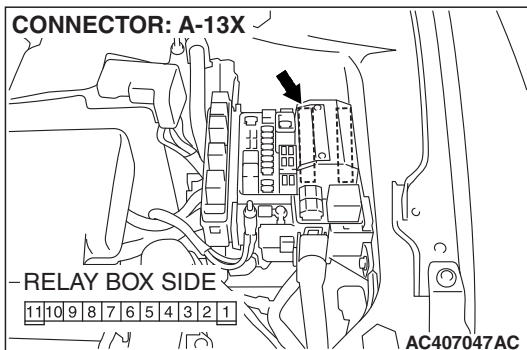

**STEP 3. Check the battery power supply circuit to the front-ECU. Measure the voltage at front-ECU connector A-13X.**

(1) Disconnect front-ECU connector A-13X and measure the voltage available at the relay box side of the connector.


(2) Measure the voltage between terminal 5 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage).


**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 5.

**NO :** Go to Step 4.

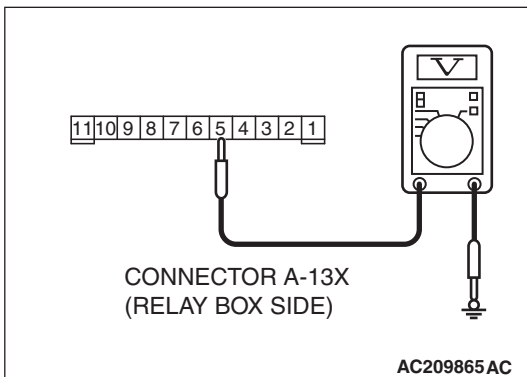



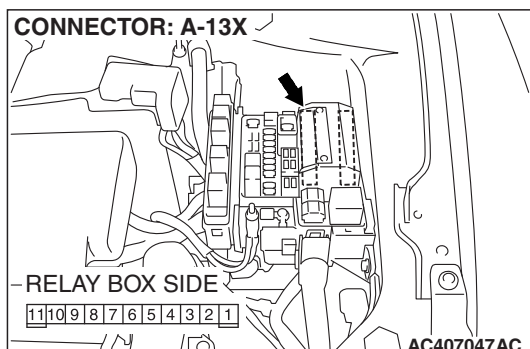


**STEP 4. Check the wiring harness between front-ECU connector A-13X (terminal 5) and the battery.**

- Check the power supply line (battery supply) for open circuit and short circuit.

**Q: Is the wiring harness between front-ECU connector A-13X (terminal 5) and the battery in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the front-ECU normally.

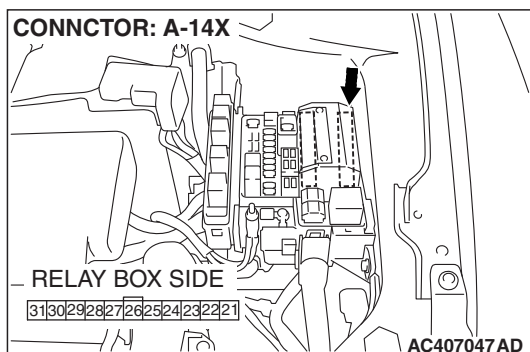


**STEP 5. Check front-ECU connector A-14X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front-ECU connector A-14X in good condition?**

**YES :** Go to Step 6.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the front-ECU normally.

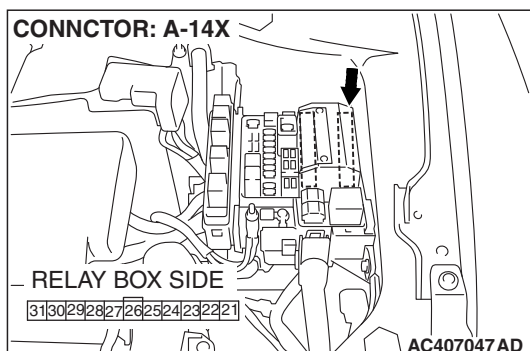


**STEP 6. Check the ground circuit to the front-ECU.**

**Measure the resistance at front-ECU connector A-14X.**

- (1) Disconnect front-ECU connector A-14X and measure the resistance available at the relay box side of the connector.



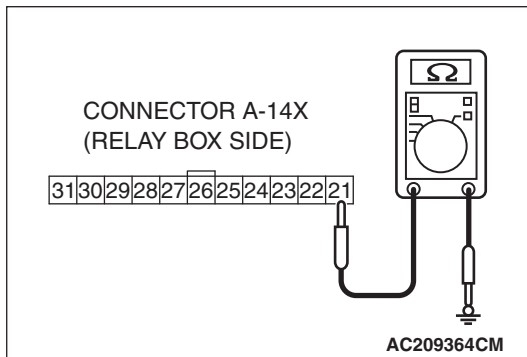


(2) Measure the resistance value between terminal 21 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 8.

**NO :** Go to Step 7.

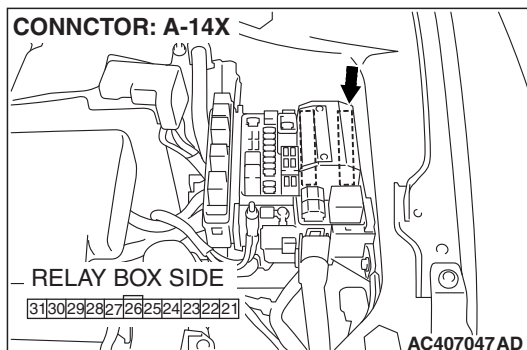


**STEP 7. Check the wiring harness between front-ECU connector A-14X (terminal 21) and ground.**

- Check the ground wire for open circuit.

**Q: Is the wiring harness between front-ECU connector A-14X (terminal 21) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the front-ECU normally.

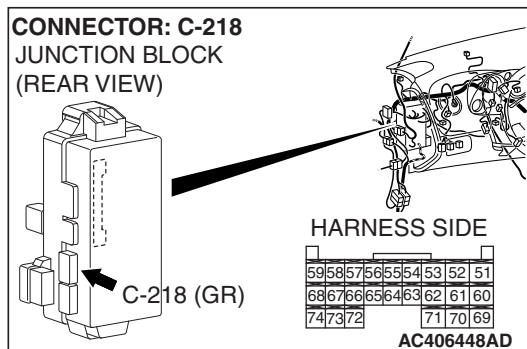

**STEP 8. Check ETACS-ECU connector C-218 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-218 in good condition?**




**YES :** Go to Step 9.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the front-ECU normally.



**STEP 9. Check the wiring harness between front-ECU connector A-14X (terminal 30) and ETACS-ECU connector C-218 (terminal 59).**

- Check the communication lines for open circuit and short circuit.

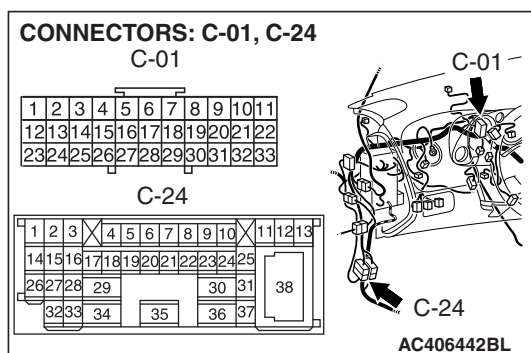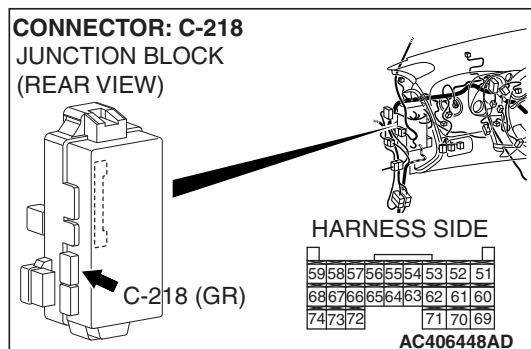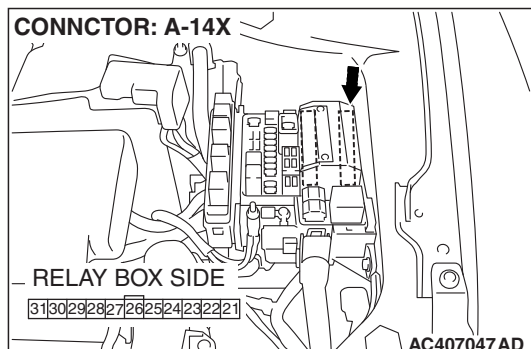

**NOTE:** Also check joint connector C-01 and intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector C-01 or intermediate connector C-24 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**Q: Is the wiring harness between front-ECU connector A-14X (terminal 30) and ETACS-ECU connector C-218 (terminal 59) in good condition?**

**YES :** Go to Step 10.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the front-ECU normally.



---

**STEP 10. Replace the front-ECU.**


- (1) Replace the front-ECU.
- (2) The system should communicate with the front-ECU normally.

**Q: Can the system communicate with the front-ECU?**






**YES :** No action is necessary and testing is complete.

**NO :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The system should communicate with the front-ECU normally.

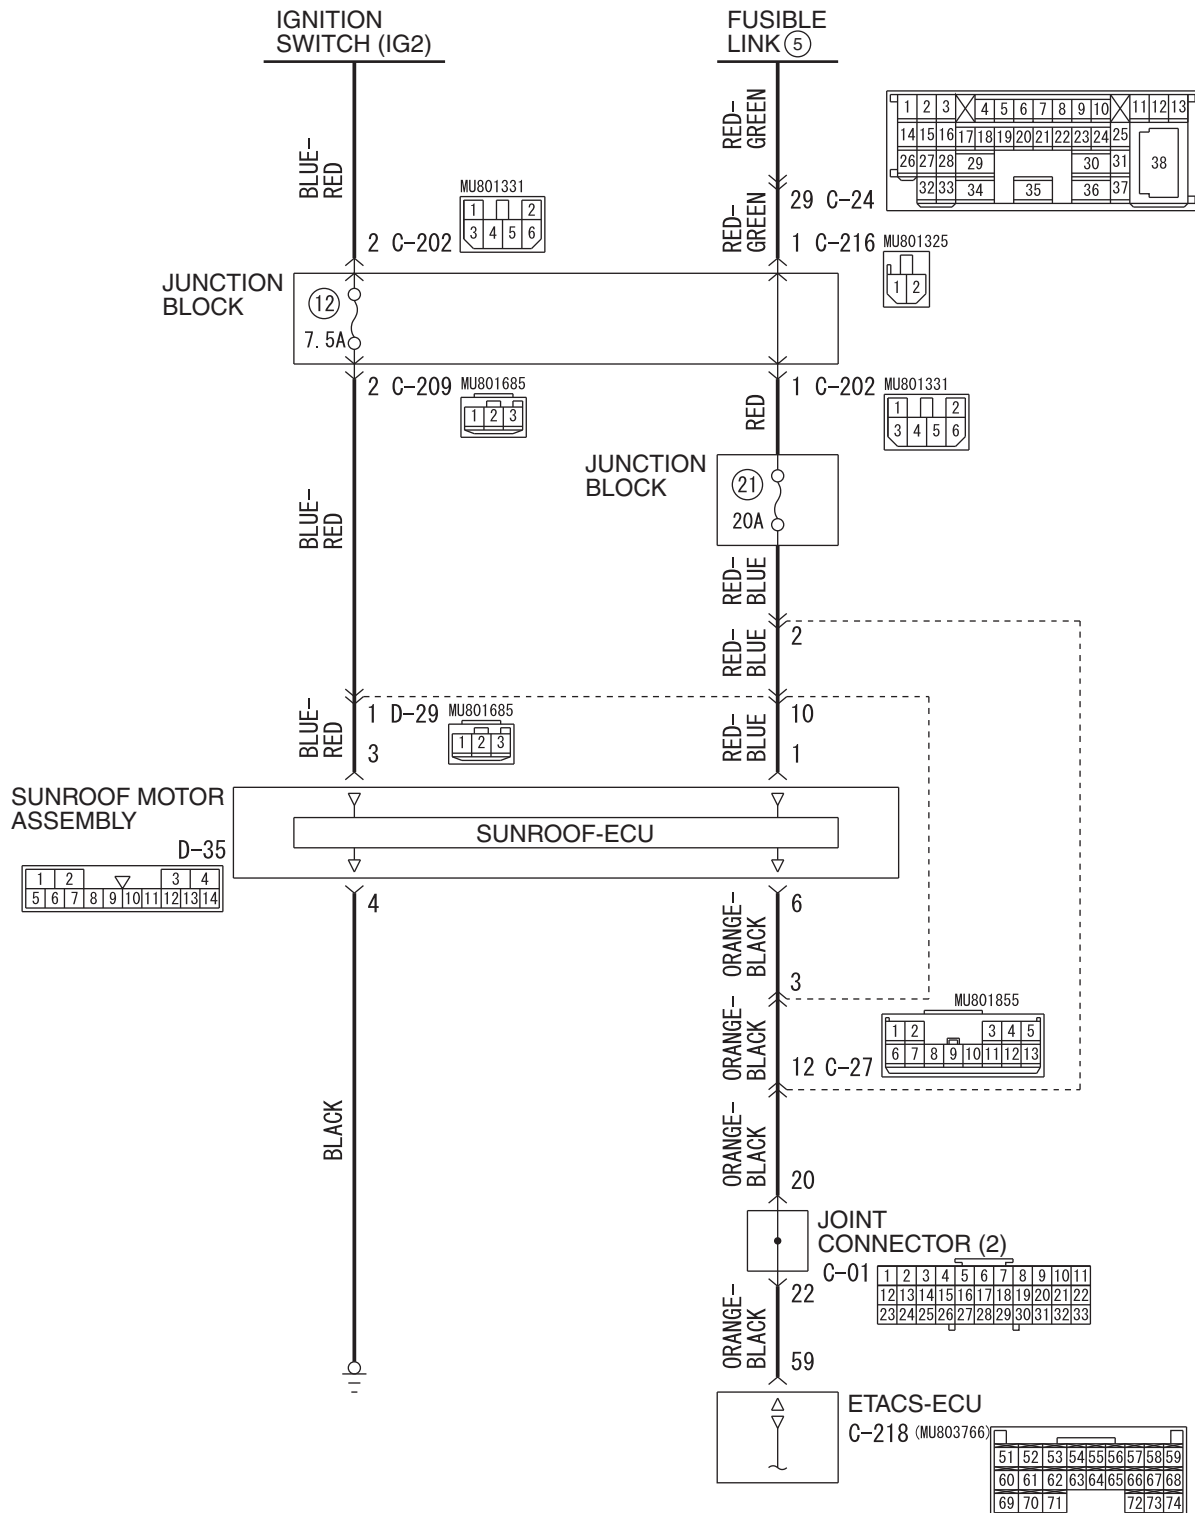

**INSPECTION PROCEDURE A-5: Communication with the sunroof-ECU is not possible.****Sunroof Motor Assembly (Sunroof-ECU) and SWS Communication Circuit**



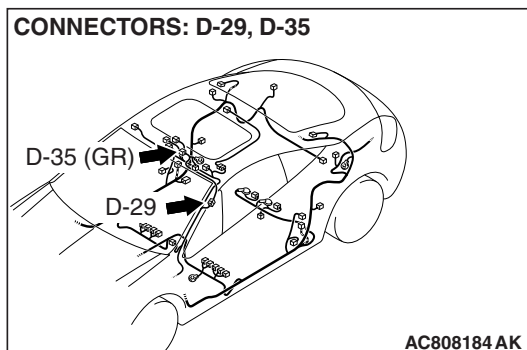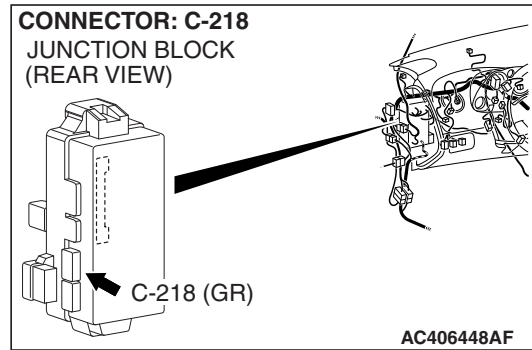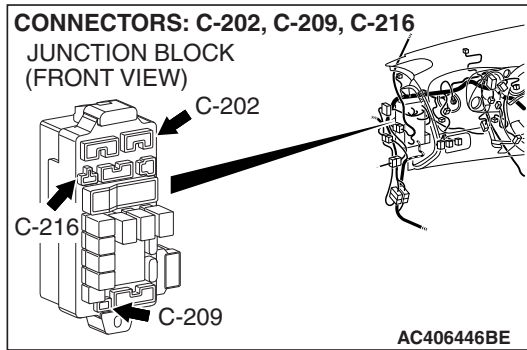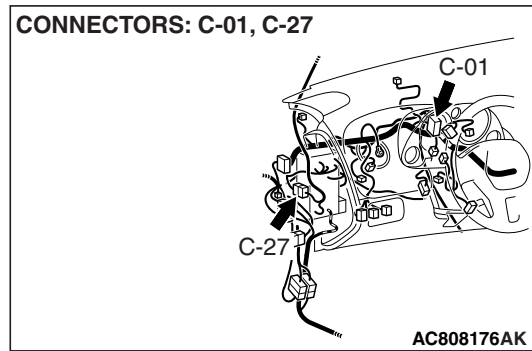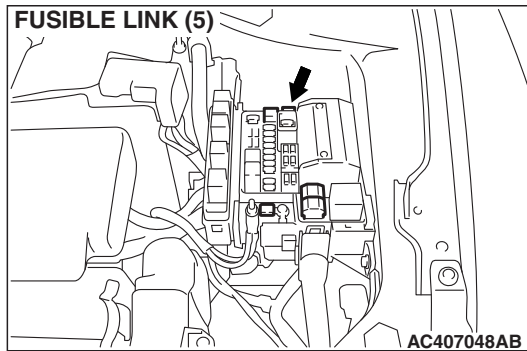

## CIRCUIT OPERATION

- Power to the sunroof motor assembly is supplied through fusible link (5).
- When the ignition switch (IG2) signal is on, the sunroof motor assembly is ready to operate.

## TECHNICAL DESCRIPTION (COMMENT)

The power supply circuit or the communication circuit to the sunroof motor assembly or the sunroof motor assembly may be defective.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The sunroof motor assembly may be defective
- The ETACS-ECU may be defective


## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



CONNECTOR: D-35

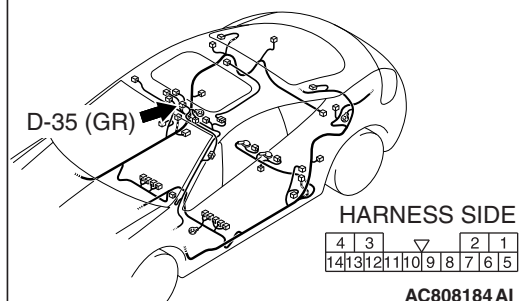

**STEP 1. Check sunroof motor assembly connector D-35 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**


**Q: Is sunroof motor assembly connector D-35 in good condition?**

**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

**P.00E-2.** The system should communicate with the sunroof-ECU normally.

CONNECTOR: D-35

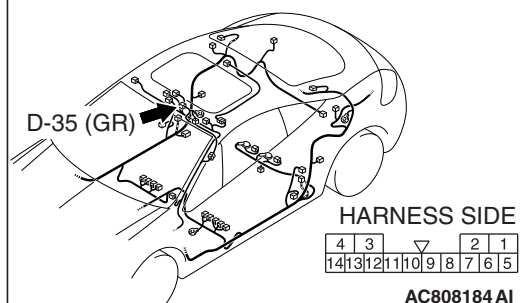

**STEP 2. Check the fusible link (5) line of power supply circuit to the sunroof motor assembly. Measure the voltage at sunroof motor assembly connector D-35.**

(1) Disconnect sunroof motor assembly connector D-35 and measure the voltage available at the wiring harness side of the connector.


(2) Measure the voltage between terminal 1 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 4.




**NO :** Go to Step 3.

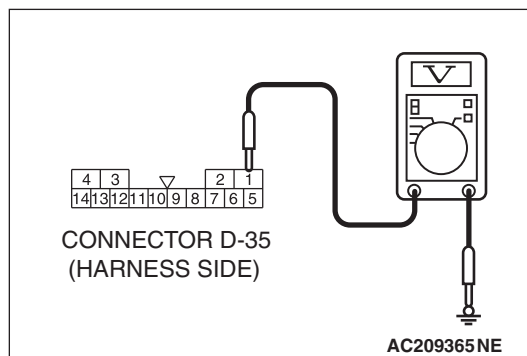



**STEP 3. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 1) and fusible link (5).**

- Check the power supply line for open circuit and short circuit.

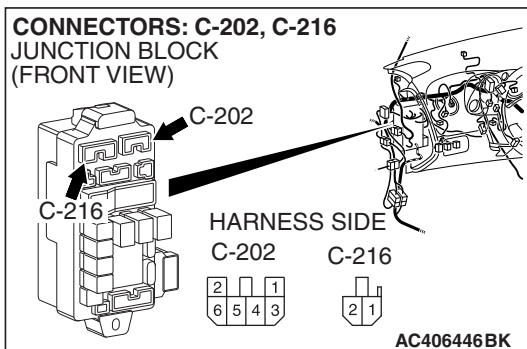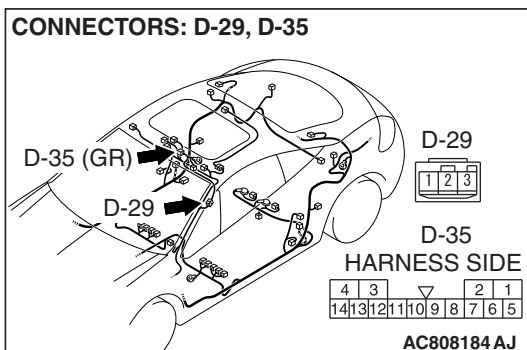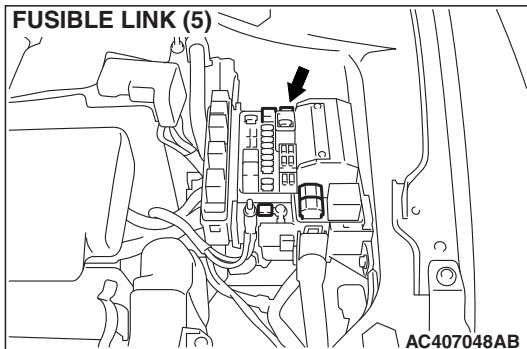


*NOTE: Also check junction block connectors C-202, C-216, intermediate connectors C-24, C-27 and D-29 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-202, C-216, intermediate connectors C-24, C-27 or D-29 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 1) and fusible link (5) in good condition?**


**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the sunroof-ECU normally.

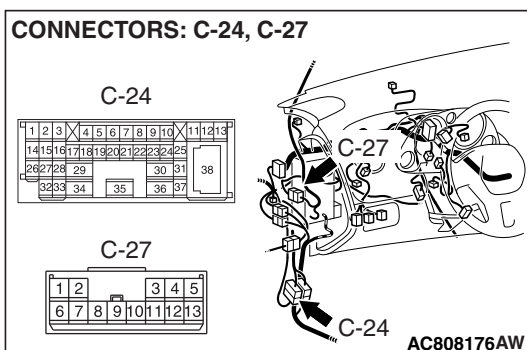



## CONNECTOR: D-35

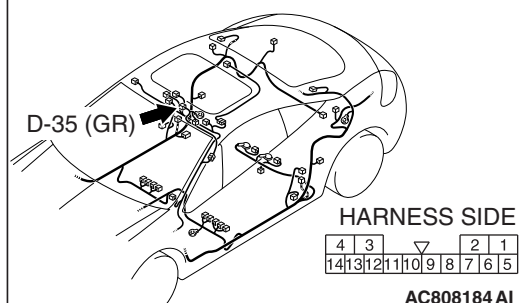

**STEP 4. Check the ignition switch (IG2) circuit to the sunroof motor assembly. Measure the voltage at sunroof motor assembly connector D-35.**


- (1) Disconnect sunroof motor assembly connector D-35 and measure the voltage available at the wiring harness side of the connector.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal 3 and ground.
  - The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 6.


**NO :** Go to Step 5.

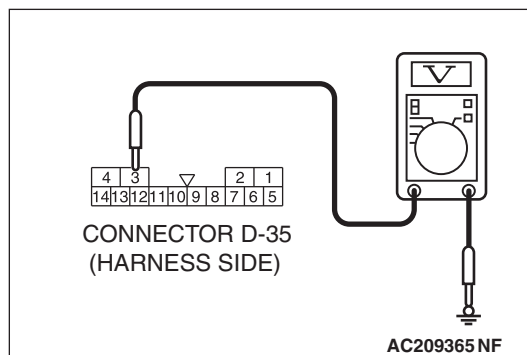


**STEP 5. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 3) and ignition switch (IG2).**

- Check the power supply line for open circuit and short circuit.

## CONNECTORS: D-29, D-35

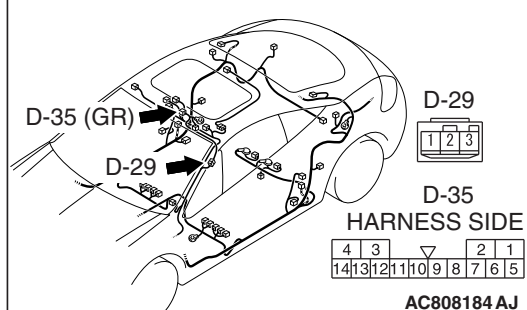



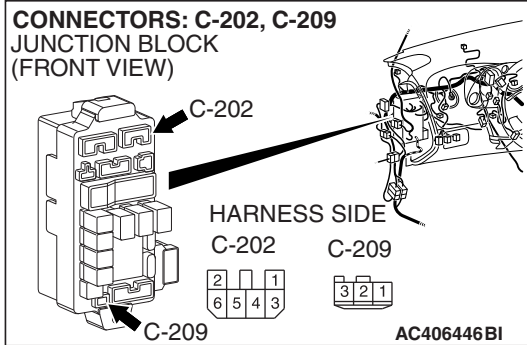

*NOTE: Also check junction block connectors C-202, C-209 and intermediate connector D-29 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-202, C-209 or intermediate connector D-29 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*



**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 3) and the ignition switch (IG2) in good condition?**

**YES :** Refer to GROUP 54A – Ignition switch, trouble symptom chart P.54A-9.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the sunroof-ECU normally.

**STEP 6. Check the ground circuit to the sunroof motor assembly. Measure the resistance at sunroof motor assembly connector D-35.**

(1) Disconnect sunroof motor assembly connector D-35 and measure the resistance available at the wiring harness side of the connector.

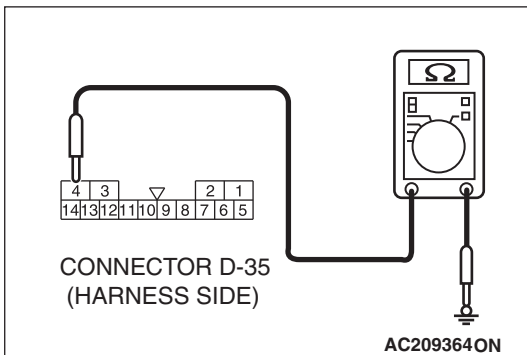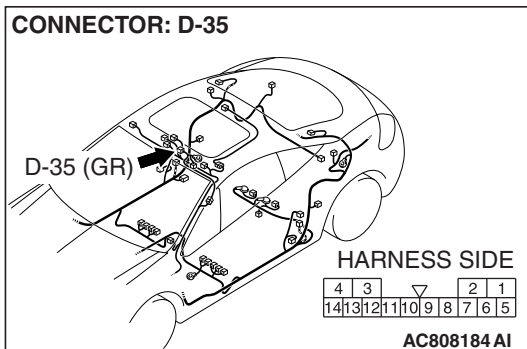

(2) Measure the resistance value between terminal 4 and ground.


- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 8.

**NO :** Go to Step 7.

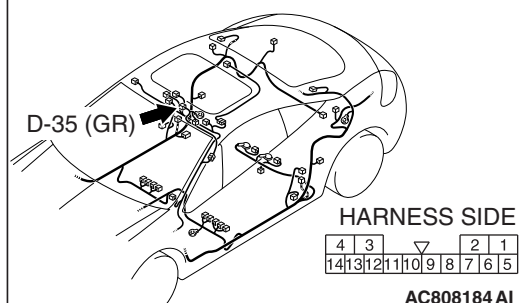

**CONNECTOR: D-35**

**STEP 7. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 4) and ground.**


- Check the ground wire for open circuit.

**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the sunroof-ECU normally.

**CONNECTOR: C-218**  
**JUNCTION BLOCK**  
**(REAR VIEW)**

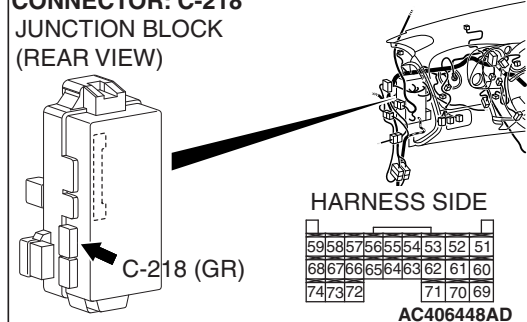

**STEP 8. Check ETACS-ECU connector C-218 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-218 in good condition?**




**YES :** Go to Step 9.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The system should communicate with the sunroof-ECU normally.



**STEP 9. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 6) and ETACS-ECU connector C-218 (terminal 59).**

- Check the communication lines for open circuit and short circuit.

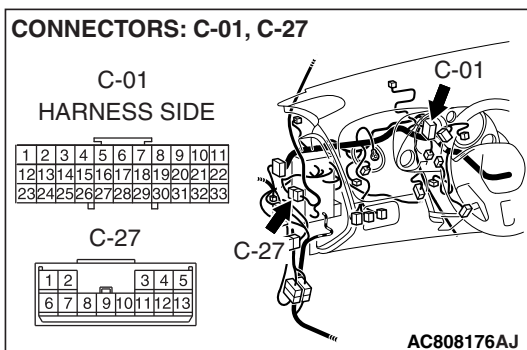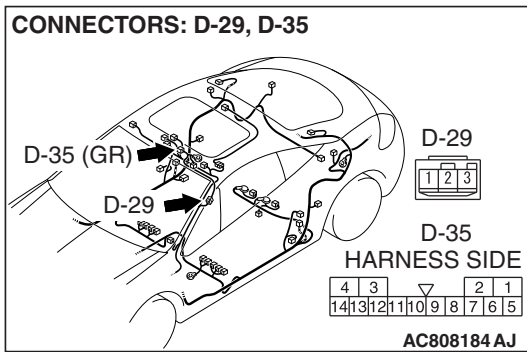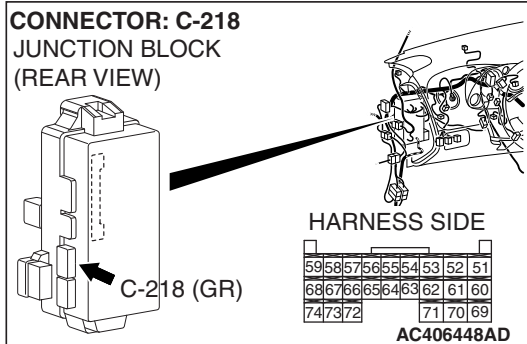

*NOTE: Also check intermediate connector C-27, D-29 and joint connector C-01 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-27, D-29 or joint connector C-01 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 6) and ETACS-ECU connector C-218 (terminal 59) in good condition?**

**YES :** Go to Step 10.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the sunroof-ECU normally.



STEP 10. Replace the sunroof motor assembly.

- (1) Replace the sunroof motor assembly.
  - (2) The system should communicate with the sunroof-ECU normally.
- Q: Can the system communicate with the sunroof-ECU?**
- YES :** No action is necessary and testing is complete.
- NO :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table P.54A-19. The system should communicate with the sunroof-ECU normally.

TONE ALARM

GENERAL DESCRIPTION CONCERNING THE TONE ALARM

M1549021000423


The tone alarm functions are as follows. These functions are controlled by relevant ECUs.

FUNCTION	CONTROL ECU
Ignition key reminder tone alarm function	ETACS-ECU
Light reminder tone alarm function	ETACS-ECU, column switch
Seat belt tone alarm function	ETACS-ECU
Door ajar tone alarm function	ETACS-ECU

TONE ALARM


IGNITION KEY REMINDER TONE ALARM FUNCTION

When the driver's door is opened with the ignition key inserted in the ignition key cylinder (ignition switch is in the OFF position,) the tone alarm sounds intermittently to indicate that the ignition key has not been removed.

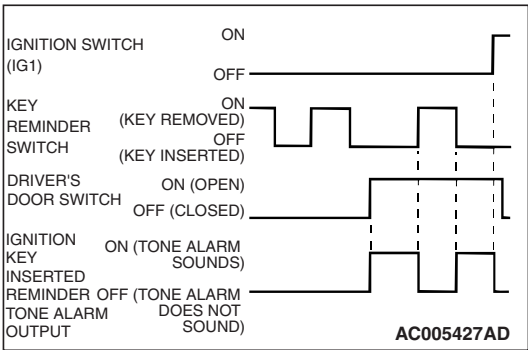


LIGHT REMINDER TONE ALARM FUNCTION

When the taillights or headlights are ON, if the ignition key is removed and the driver's door is opened, a tone alarm will sound continuously to warn that the lights are on. However, if the taillights or headlights have been turned off by the headlight automatic-shutoff function, the tone alarm will not sound.

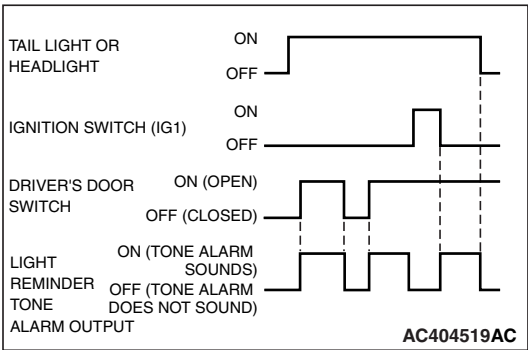




## Seat belt tone alarm function

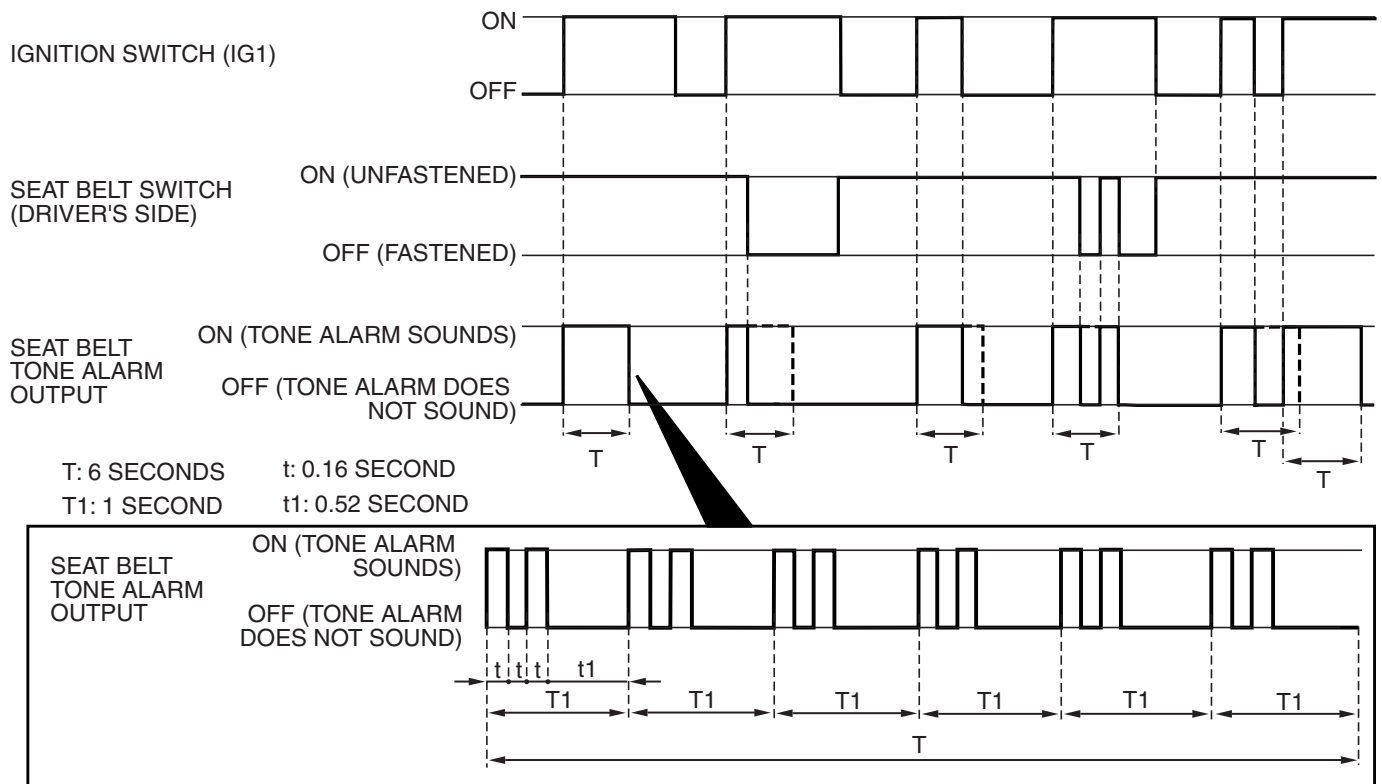

AC305326 AC



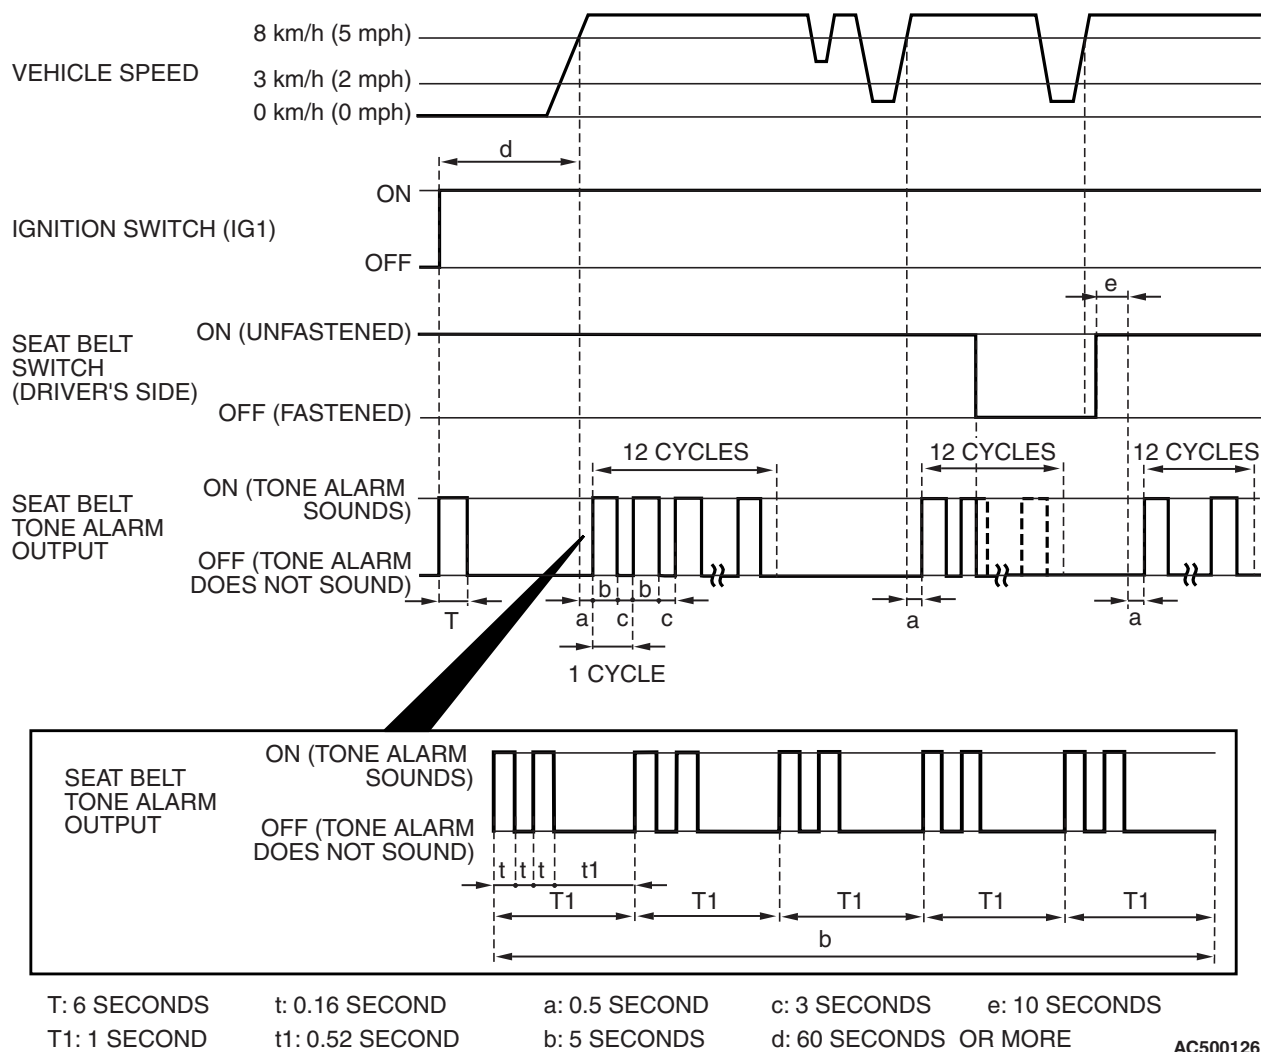

If any of the following conditions are met with the ignition switch at "ON" or "ST", the ETACS-ECU sounds the tone alarm by using the driver's seat belt switch signal and the vehicle speed signal from the combination meter.

- Sounds the tone alarm for 6 seconds when the ignition switch is turned "ON" with the seat belt switch on (the driver's seat belt is not fastened) (Timer function).
- Sounds the tone alarm 12 cycles (after 0.5 second) if any of the following conditions are met when 60 seconds or more have elapsed since the ignition switch is turned "ON". One cycle consists of 5 seconds "on" and then 3 seconds "off".

- The vehicle speed has reached 8 km/h (5 mph) while the seat belt switch is turned on (driver's seat belt is not fastened) with the ignition switch "ON".
- The seat belt switch has been turned on (driver's seat belt has not been fastened) for at least 10 seconds while the ignition switch has been turned "ON" and the vehicle speed has been 8 km/h (5 mph) or more.

**NOTE:** Once the tone alarm has sounded 12 cycles, it does not sound again until the vehicle speed reduces to 3 km/h (2 mph) or less even if any of the following conditions is met.

- The tone alarm stops sounding if the ignition switch or the seat belt switch is turned off (the driver's seat belt is fastened) while the timer operation is active.




**DOOR AJAR TONE ALARM FUNCTION**

The buzzer is sounded 4 times by the ETACS-ECU to warn the driver if any door (including liftgate <ECLIPSE> or trunk lid <ECLIPSE SPYDER>) is open when the ignition is switched ON and the vehicle speed reaches 8 km/h (5 mph) or faster. The buzzer will continue to sound 4 times even if the ignition, door status, or vehicle speed requirements are not maintained.

**INSPECTION PROCEDURE B-1: Tone Alarm: Ignition key reminder tone alarm function does not work normally.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

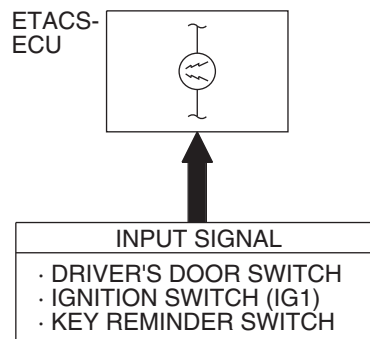**Ignition Key Reminder Tone Alarm Function**

W5Z54M058A

**CIRCUIT OPERATION**

The ETACS-ECU operates the ignition key reminder tone alarm function under the following conditions:

- Ignition key position: "LOCK" (OFF) position
- Ignition key: Inserted in the ignition key cylinder
- Driver's door: open

**TECHNICAL DESCRIPTION (COMMENT)**

If the function does not work normally, the input circuit system from the switches or the ETACS-ECU may be defective (refer to "CIRCUIT OPERATION").

**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit



- MB991806: SWS Monitor Cartridge
- MB991812: SWS Monitor Harness (For Column-ECU)
- MB991822: Probe Harness

**STEP 1. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the ETACS-ECU.

**⚠ CAUTION**



To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.



**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

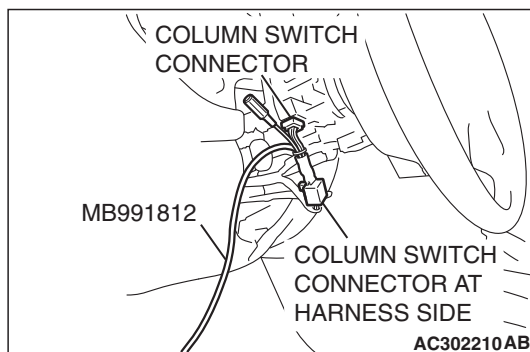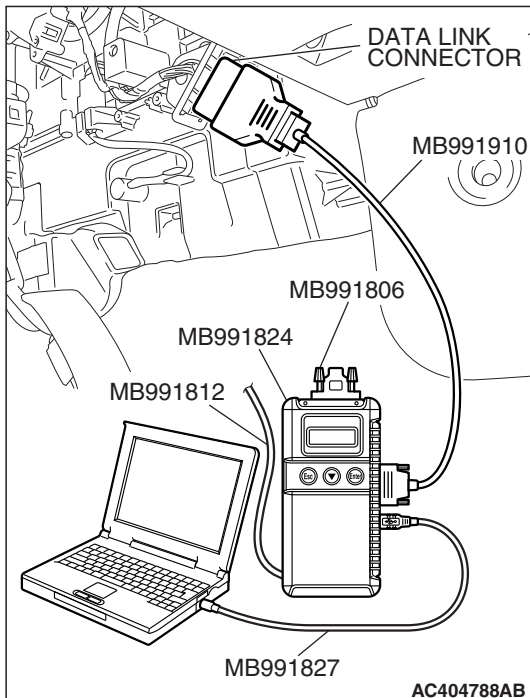

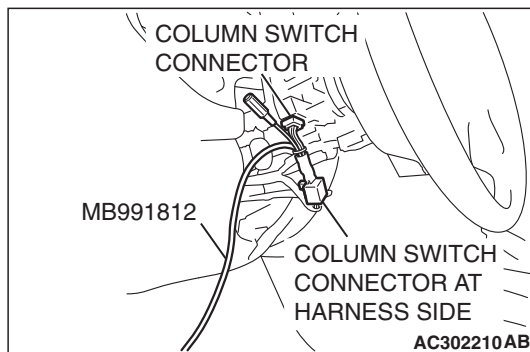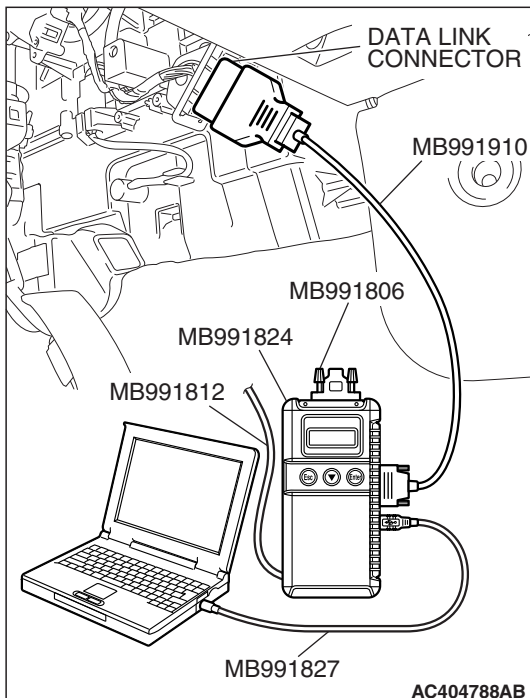

**STEP 2. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.**

Check the input signals from the following switches:

- Ignition switch: OFF (key inserted)
- Driver's door: open
- Passenger's door: closed

- (1) Operate scan tool MB991958 according to the procedure below to display "KEY RMND. ALM."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "BUZZER."
  - g. Select "KEY RMND. ALM."
- (2) Check that normal conditions are displayed for the items described in the table below.

*NOTE: Scan tool MB991958 display changes when the driver's or the passenger's door is opened. If any of the doors is open, the system cannot be checked correctly.*

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 30	IG SW (IG1)	OFF
ITEM 32	FRONT DOOR SW	ON
ITEM 43	BUZZER	ON

**Q: Does scan tool MB991958 display the items "IG SW (IG1)", "FRONT DOOR SW" and "BUZZER" as normal condition?**

**Normal conditions are displayed for all the items :**

Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The ignition key reminder tone alarm function should now work normally.

**Normal condition is not displayed for "IG SW (IG1)" :**


Refer to Inspection Procedure M-2 "ETACS-ECU does not receive any signal from the ignition switch (IG1) [P.54B-499](#)."

**Normal condition is not displayed for "FRONT DOOR SW" :** Refer to Inspection Procedure M-5 "ETACS-ECU does not receive any signal from the door switches

[P.54B-512](#)."

**Normal condition is not displayed for "BUZZER" :** Go to Step 3.

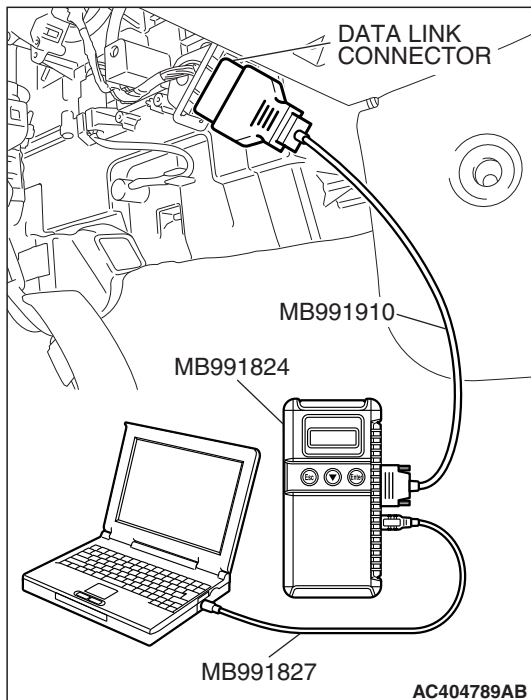

**STEP 3. Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the key reminder switch.

- Check whether scan tool MB991958 sounds or not when the ignition key is removed.

- (1) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."

**Q: Does scan tool MB991958 sound when the ignition key is removed and reinserted?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The ignition key reminder tone alarm function should now work normally.


**NO :** Refer to Inspection Procedure N-1 "ETACS-ECU does not receive any signal from the key reminder switch [P.54B-537](#)."



**INSPECTION PROCEDURE B-2: Tone Alarm: Light reminder tone alarm function does not work normally.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**Light Reminder Tone Alarm Function**

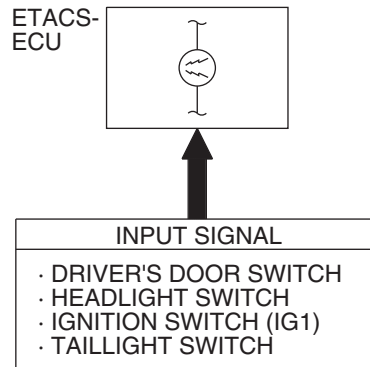

W5Z54M059A

**CIRCUIT OPERATION**

The ETACS-ECU operates the light reminder tone alarm function under the following conditions:

- Ignition switch: "LOCK" (OFF) position
- Ignition key: Removed from the ignition key cylinder
- Driver's door: open
- Taillights or headlights: ON

**TECHNICAL DESCRIPTION (COMMENT)**

If the function does not work normally, the input circuit system from the switches or the ETACS-ECU may be defective (refer to "CIRCUIT OPERATION").

**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- ETACS-ECU
- Column switch (column-ECU)

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.



- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "ETACS ECU" and the "COLUMN ECU" menus.

**Q: Are "OK" displayed for both the "ETACS ECU" and "COLUMN ECU" menus?**



**"OK" are displayed for all the items :** Go to Step 2.

**"NG" is displayed for the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

**"NG" is displayed for the "COLUMN ECU" menu :** Refer to Inspection Procedure A-2 "Communication with the column switch (column-ECU) is not possible [P.54B-66](#)."

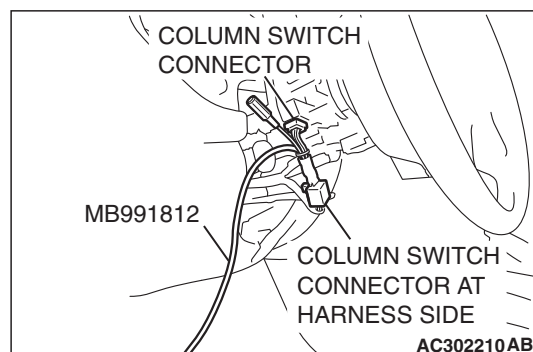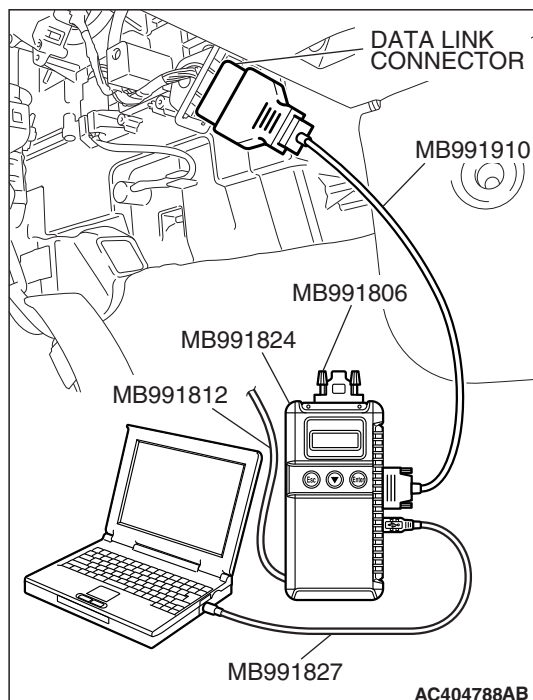



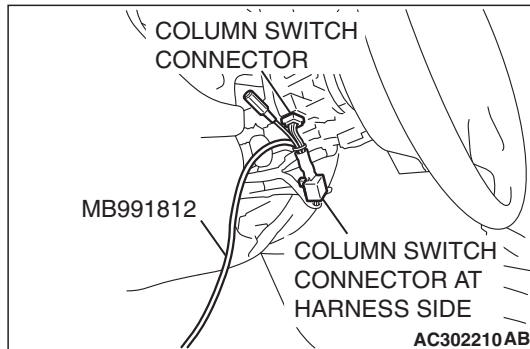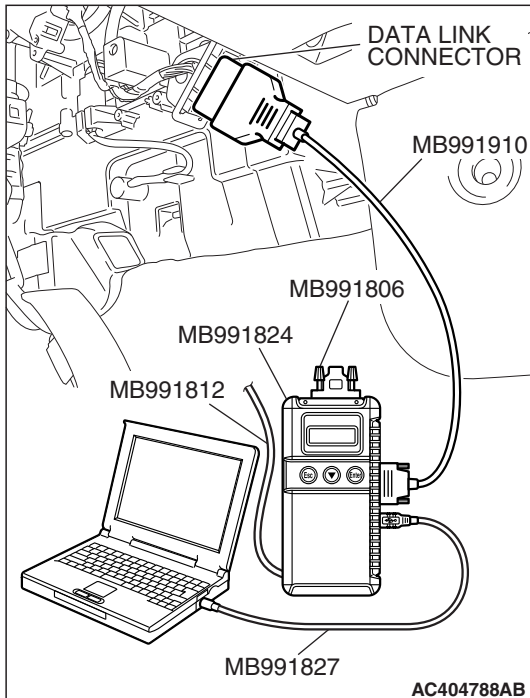

**STEP 2. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.**

Check the input signals from the following switches:

- Ignition switch: OFF (key removed)
- Lighting switch: TAIL or HEAD
- Driver's door: open
- Passenger's door: closed

- (1) Operate scan tool MB991958 according to the procedure below to display "LGT MONI. ALRM."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "BUZZER."
  - g. Select "LGT MONI. ALRM."
- (2) Check that normal conditions are displayed for the items described in the table below.

*NOTE: Scan tool MB991958 display changes when the driver's or the passenger's door is opened. If any of the doors is open, the system cannot be checked correctly.*

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 00	HEADLIGHT SW	Either of items is ON
ITEM 01	TAILLIGHT SW	
ITEM 30	IG SW (IG1)	OFF
ITEM 32	FRONT DOOR SW	ON
ITEM 35	H/L AUTO-CUT	OFF
ITEM 43	BUZZER	ON

**Q: Does scan tool MB991958 display "HEADLIGHT SW", "TAILLIGHT SW", "IG SW (IG1)", "FRONT DOOR SW", "H/L AUTO-CUT" and "BUZZER" as normal condition?**

**Normal conditions are displayed for all the items :**

Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The light reminder tone alarm function should now work normally.

**Normal condition is not displayed for "HEADLIGHT SW" :**

Refer to Inspection Procedure M-6 "ETACS-ECU does not receive any signal from the headlight switch [P.54B-522](#)."

**Normal condition is not displayed for "TAILLIGHT SW" :**

Refer to Inspection Procedure M-6 "ETACS-ECU does not receive any signal from the taillight switch [P.54B-522](#)."

**Normal condition is not displayed for "IG SW (IG1)" :**

Refer to Inspection Procedure M-2 "ETACS-ECU does not receive any signal from the ignition switch



(IG1) [P.54B-499.](#)"


**Normal condition is not displayed for "FRONT DOOR SW" :** Refer to Inspection Procedure M-5 "ETACS-ECU does not receive any signal from the door switches [P.54B-512.](#)"

**Normal condition is not displayed for "H/L AUTO-CUT" :** Refer to Inspection Procedure I-9 "Headlight automatic shutoff function does not work normally [P.54B-351.](#)"

**Normal condition is not displayed for "BUZZER" :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19.](#) The light reminder tone alarm function should now work normally.

### INSPECTION PROCEDURE B-3: Tone Alarm: Seat belt tone alarm function does not work normally.

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor [P.54B-15.](#)"*

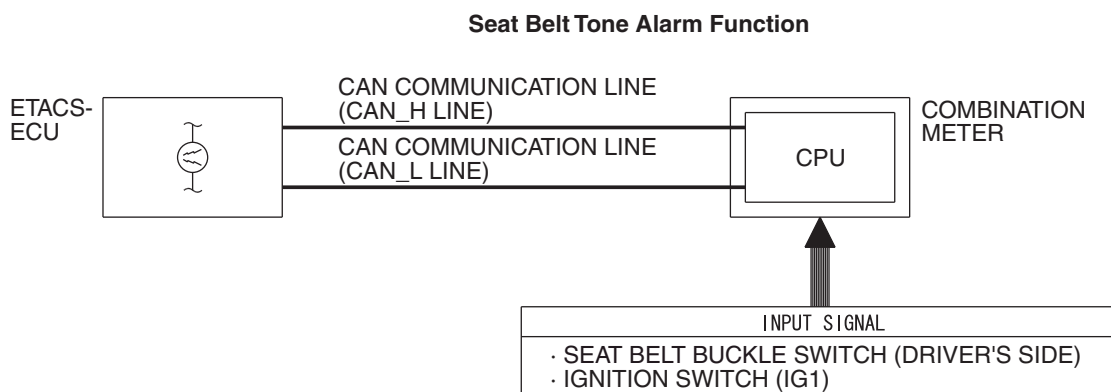

W4P54M31AA

### CIRCUIT OPERATION

The ETACS-ECU receives the driver's seat belt switch ON signal from the ignition switch (IG1) and the combination meter, and then controls the seat belt tone alarm function.

The ETACS-ECU operates the seat belt tone alarm function under the following conditions:

- Ignition switch: "ON" position
- Driver's seat belt: Unfastened

### TECHNICAL DESCRIPTION (COMMENT)

If the seat belt tone alarm does not work, connector(s), wiring harness in the CAN bus lines, the combination meter, the ETACS-ECU or the input signal circuit may be defective.

### TROUBLESHOOTING HINTS

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective



## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


#### Q: Is the CAN bus line found to be normal?

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

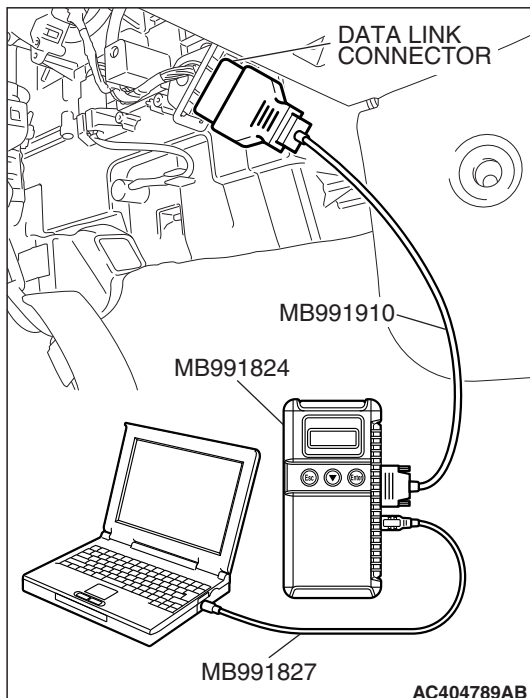

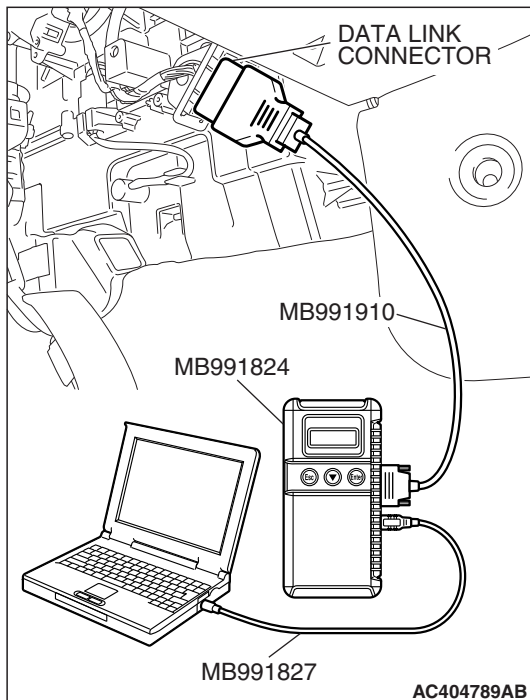

**STEP 2. Using scan tool MB991958, read the combination meter diagnostic trouble code.**

Check whether the combination meter-related DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check whether the combination meter-related DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Diagnose the combination meter (Refer to GROUP 54A, Diagnosis [P.54A-60](#)).

**NO** : Go to Step 3.



**STEP 3. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the ETACS-ECU.

**⚠ CAUTION**



**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**

- (1) Connect the SWS monitor. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.



**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 4.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

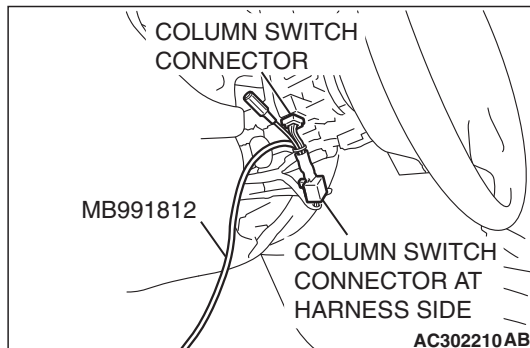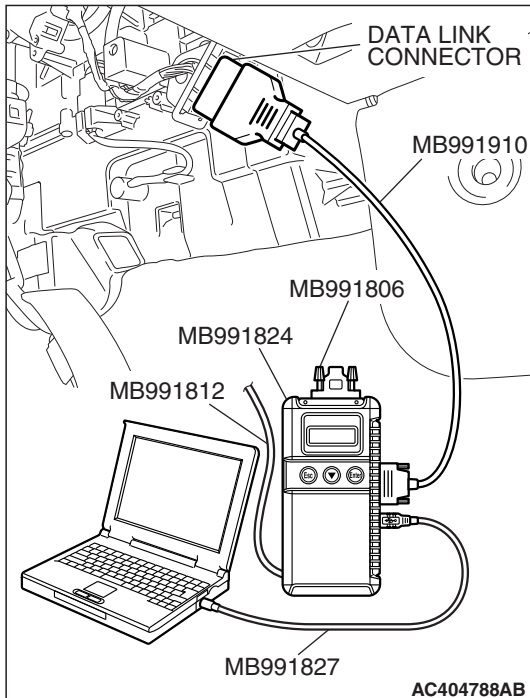



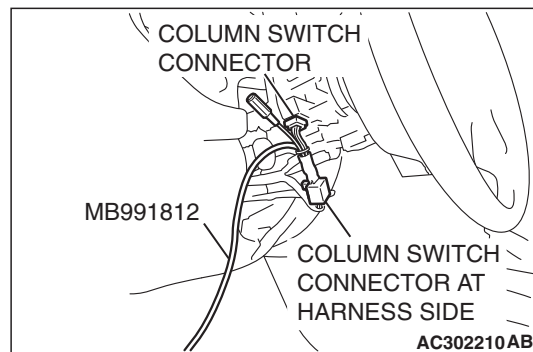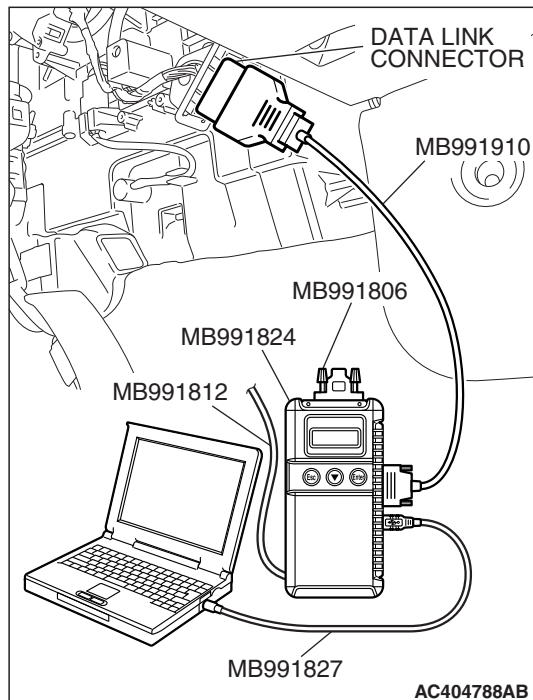

#### STEP 4. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.

Check the input signals from the following switches:

- Ignition switch: OFF → ON
- Driver's seat belt: Unfastened
- All door: Closed

- (1) Operate scan tool MB991958 according to the procedure below to display "OTHER ALARM"
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "BUZZER."
  - g. Select "OTHER ALARM"
- (2) Check that normal conditions are displayed for the items described in the table below.

*NOTE: Turn the ignition switch from the OFF position to the ON position. Then item No.43 should be ON for approximately six seconds only.*

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 30	IG SW (IG1)	ON
ITEM 43	BUZZER	ON (for approximately six seconds after the ignition switch is turned from OFF to ON), and then OFF

**Q: Does scan tool MB991958 display the items "IG SW (IG1)" and "BUZZER" as normal condition?**

**Normal conditions are displayed for all the items :**

Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the seat belt tone alarm function works normally.

**Normal condition is not displayed for "IG SW (IG1)" :**

Refer to Inspection Procedure M-2 "ETACS-ECU does not receive any signal from the ignition switch (IG1) [P.54B-499](#)."

**Normal condition is not displayed for "BUZZER" :**


Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the seat belt tone alarm function works normally.



**INSPECTION PROCEDURE B-4: Tone Alarm: Door ajar tone alarm function does not work normally.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**Door Ajar Tone Alarm Function Circuit**

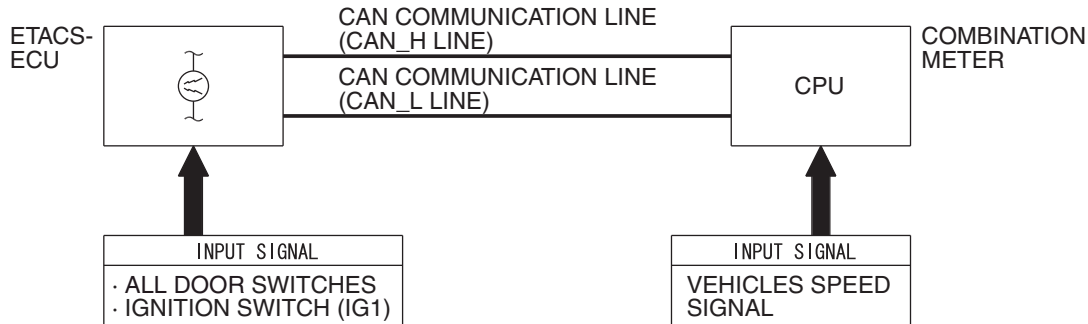

W4P54M32AA

**CIRCUIT OPERATION**

The ETACS-ECU controls the door-ajar tone alarm, based on the signals from the switches and sensors below.

- Ignition switch (IG1): ON
- One of the door switches: ON
- Vehicle speed signal: 8 km/h (5 mph) or more

**TECHNICAL DESCRIPTION (COMMENT)**

If the door-ajar tone alarm does not work, connector(s), wiring harness in the CAN bus lines, the combination meter, the ETACS-ECU or the input signal circuit may be defective.

**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The combination meter may be defective
- The ETACS-ECU may be defective

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

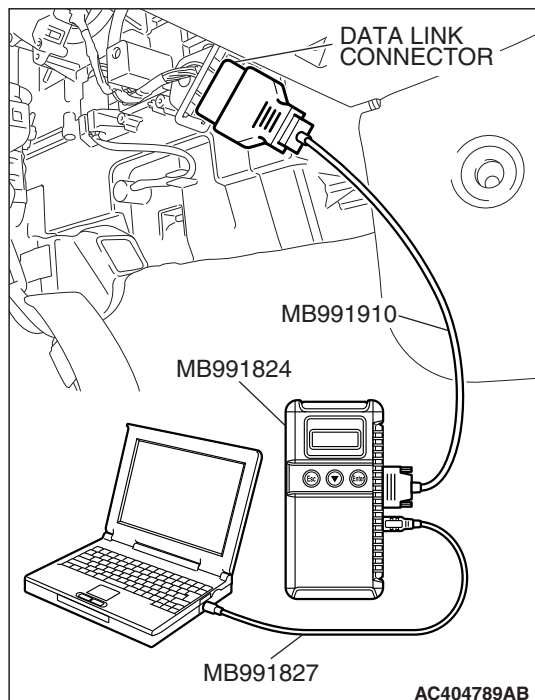

**STEP 2. Using scan tool MB991958, read the combination meter diagnostic trouble code.**


Check whether the combination meter-related DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check whether the combination meter-related DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the combination meter (Refer to GROUP 54A, Diagnostic trouble code chart P.54A-60).

**NO :** Go to Step 3.

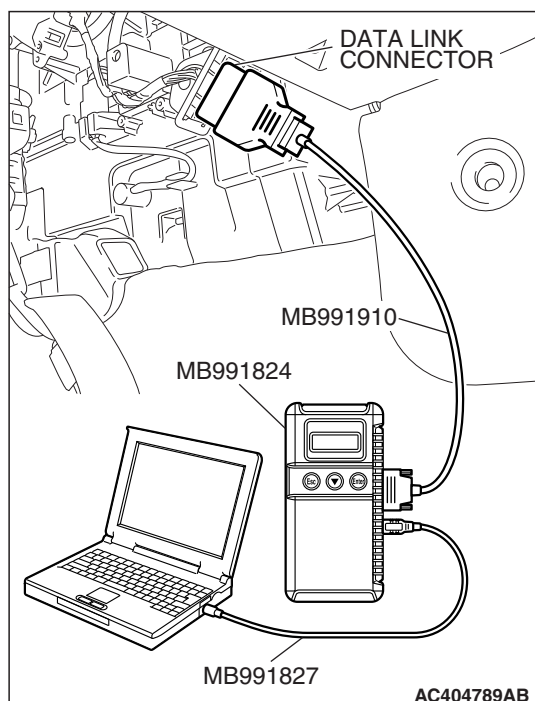



**STEP 3. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the ETACS-ECU.

**⚠ CAUTION**



**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**

- (1) Connect the SWS monitor. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.



**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 4.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

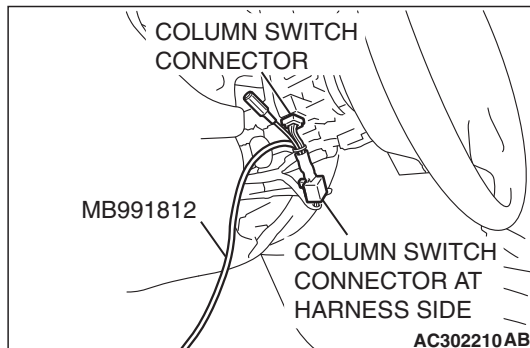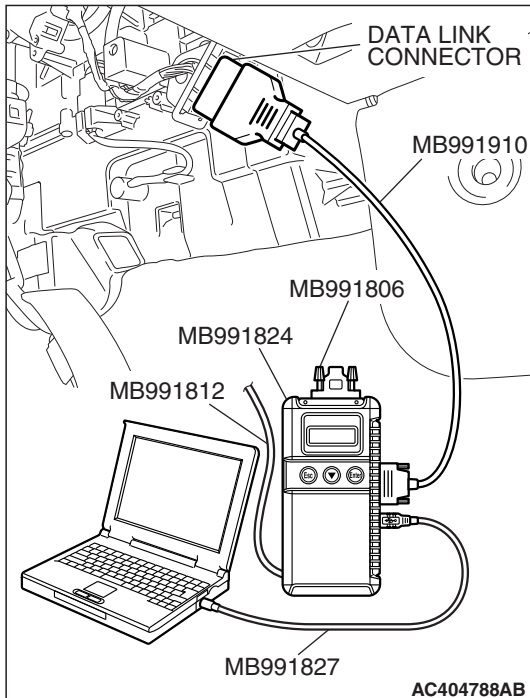



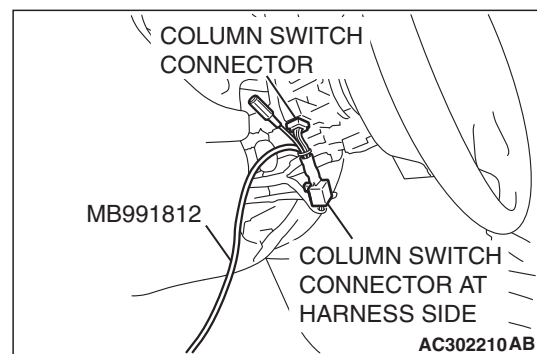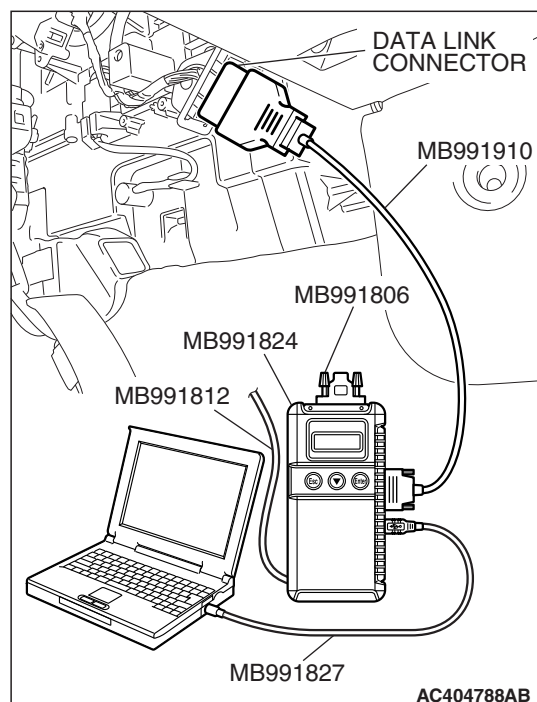

#### STEP 4. Check the input signal by using "DATA LIST" menu of the SWS monitor.

Check the input signals from the following switches:

- Ignition switch: ON
- Driver's door: Open
- Vehicle speed: 8 km/h (5 mph) or more

- (1) Operate scan tool MB991958 according to the procedure below to display "ETACS ECU."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "ETACS ECU."
- (2) Check that normal conditions are displayed for the items described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 30	IG SW (IG1)	ON
ITEM 32	FRONT DOOR SW	ON
ITEM 43	BUZZER	ON

**Q: Does scan tool MB991958 display the items "IG SW (IG1)", "FRONT DOOR SW" and "BUZZER" as normal condition?**

#### Normal conditions are displayed for all the items :

Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The door-ajar tone alarm function should now work normally.

#### Normal condition is not displayed for "IG SW (IG1)" :

Refer to Inspection Procedure M-2 "ETACS-ECU does not receive any signal from the ignition switch (IG1) [P.54B-499](#)."

#### Normal condition is not displayed for "FRONT DOOR SW" :

Refer to Inspection Procedure M-5 "ETACS-ECU does not receive any signal from the door switches [P.54B-512](#)."

#### Normal condition is not displayed for "BUZZER" :

Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The door-ajar tone alarm function should now work normally.



## CENTRAL DOOR LOCKING SYSTEM

### GENERAL DESCRIPTION CONCERNING CENTRAL DOOR LOCKING SYSTEM

M1549021100408

The following ECUs affect the functions and control of the central door locking system.

FUNCTION	CONTROL ECU
Door unlocking or unlocking by operating the driver's or passenger's door lock switch	ETACS-ECU
Forgotten key prevention function	ETACS-ECU


## CENTRAL DOOR LOCKING SYSTEM

### DOOR LOCKING OR UNLOCKING BY OPERATING THE DRIVER'S OR PASSENGER'S DOOR LOCK SWITCH


When the door is locked by the driver's or passenger's door lock switch, the ETACS-ECU operates its door lock relay and passes a current through the door lock actuators of all doors for 0.25 second to lock all doors.

When the door is unlocked by the driver's or passenger's door lock switch, the ETACS-ECU operates its door unlock relay and passes a current through the door lock actuators of all doors for 0.25 second to unlock all doors.

When the door is locked and unlocked by driver's or passenger's door lock switch consecutively, the ETACS-ECU operates its door lock relay and passes a current through the door lock actuators of all doors for 0.25 second to lock all doors. Then, the ETACS-ECU operates its door unlock relay and passes a current through the door lock actuators of all doors for 0.25 second to unlock all doors. Due to this, there may be a time lag between the driver's or passenger's door lock switch actuation and the time when all doors are unlocked.

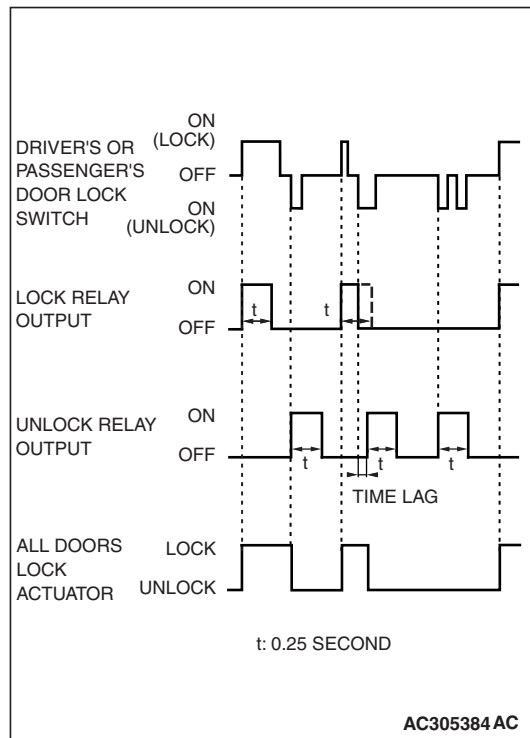

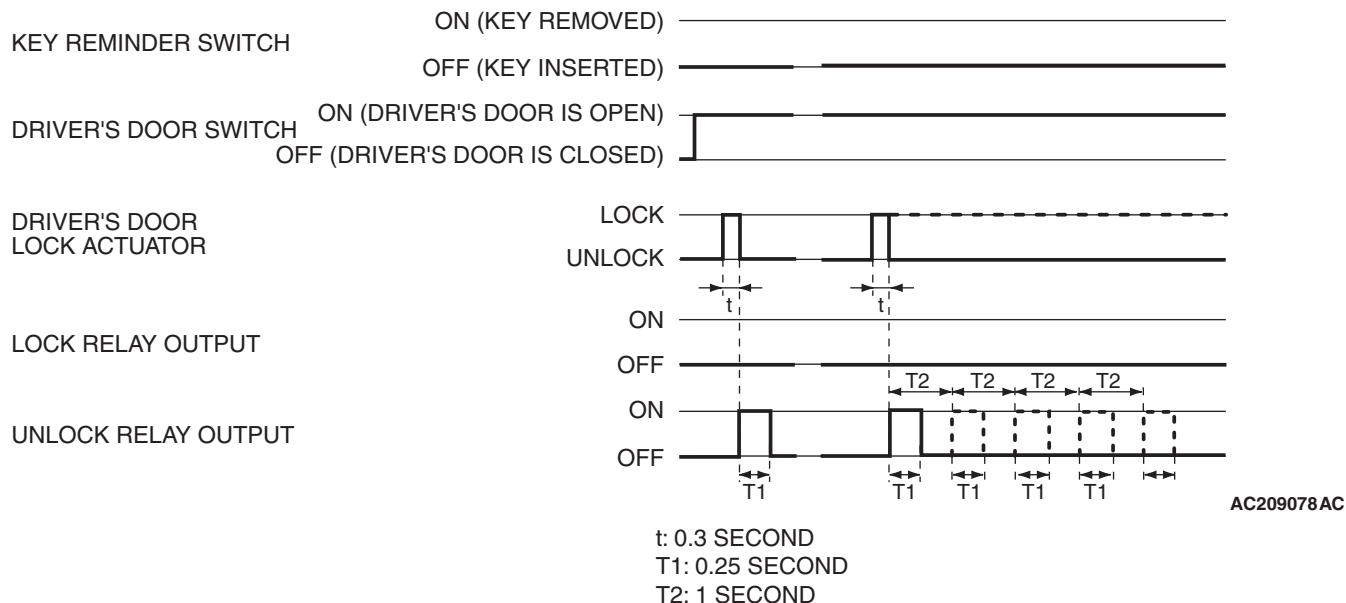


**Forgotten key prevention function****If the driver's door is locked while it is open**

If the driver's door is locked while it is open and when the key is still in the ignition key cylinder, approximately 0.3 second later the ETACS-ECU activates the unlock relay output for 0.25 second to prevent the door from being locked with the key inside the vehicle.

In addition, if locking the door was not prevented, a re-try current is sent (an unlock relay output ON is sent for 0.25 second up to 5 times including the first attempt).

**NOTE:** The dotted line indicates that the system is trying to turn on the unlock relay if the door cannot be unlocked.

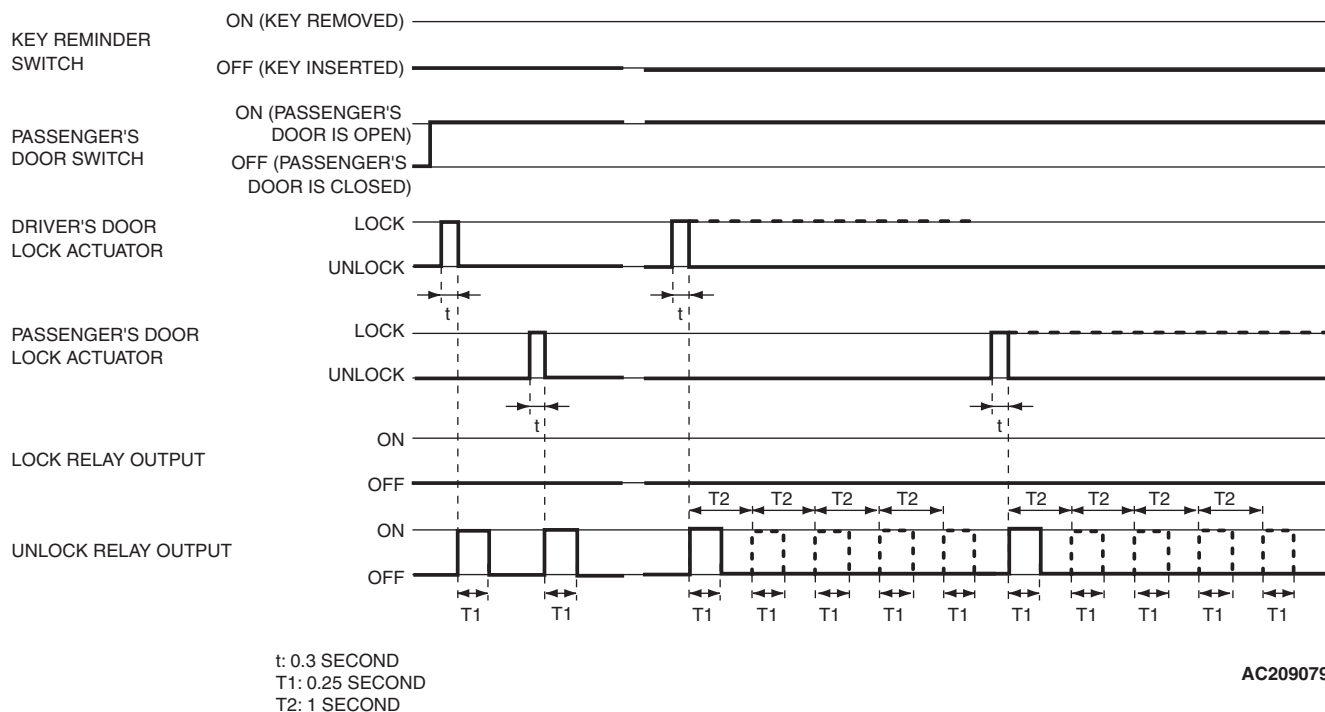**If the passenger's door is open when it is locked with the driver's door switch**



If the passenger's door or driver's door are locked while the passenger's door is open and when the key is still in the ignition key cylinder, approximately 0.3 second later the ETACS-ECU activates the unlock relay output for 0.25 second to prevent the door from being locked with the key inside the vehicle.


In addition, if locking the door was not prevented, a re-try current is sent (an unlock relay output ON is sent for 0.25 second up to 5 times including the first attempt).

*NOTE: The dotted line indicates that the system is trying to turn on the unlock relay if the door cannot be unlocked.*



**INSPECTION PROCEDURE C-1: Central Door Locking System: The central door locking system does not work at all.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*


**Central Door Lock Power Supply Circuit**

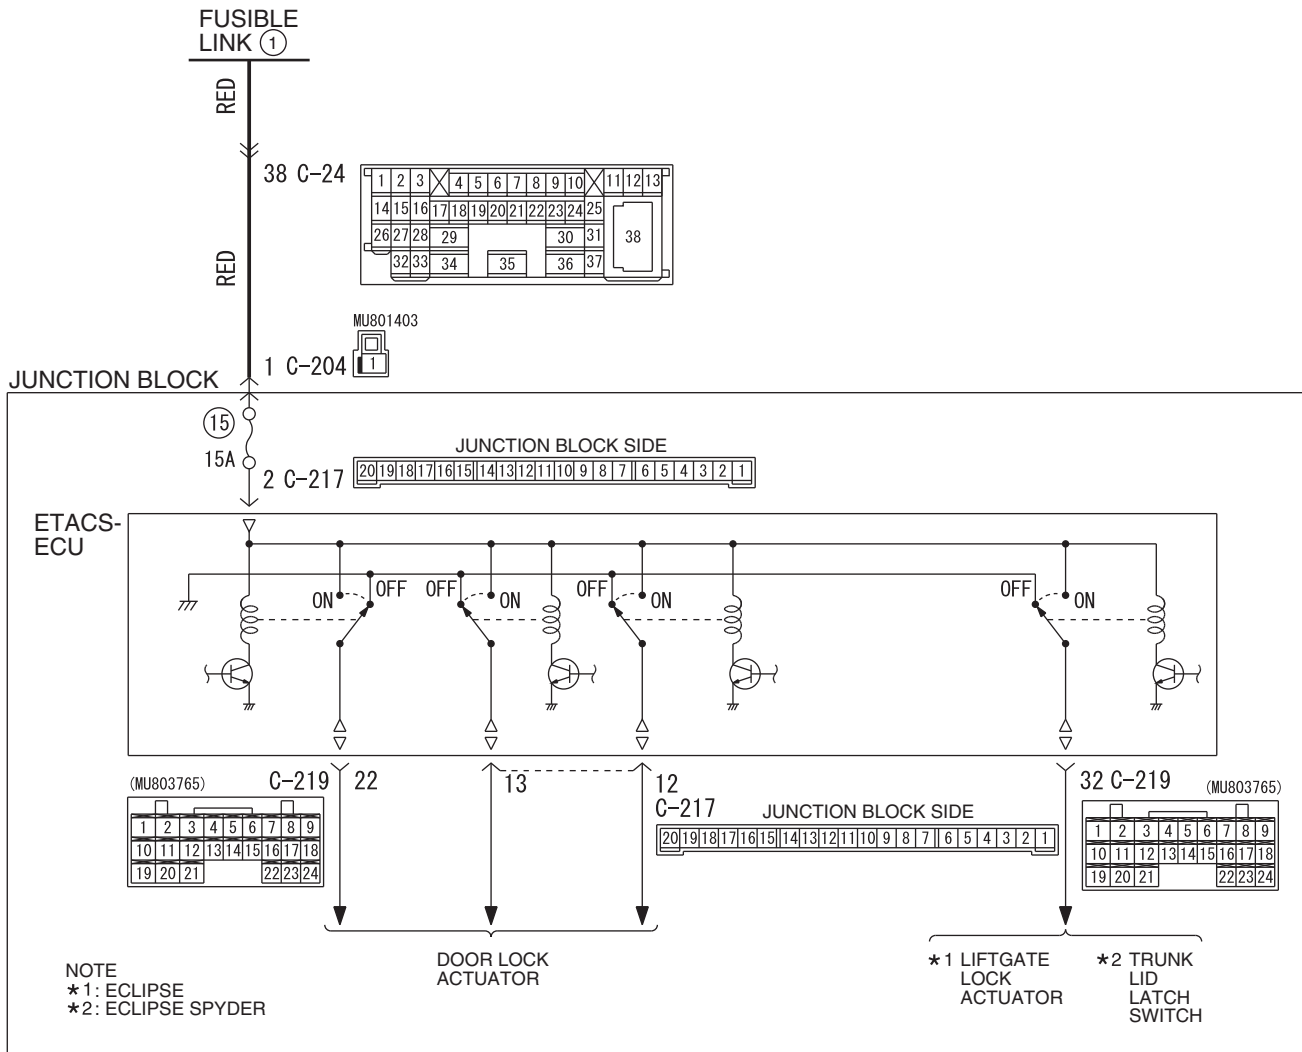

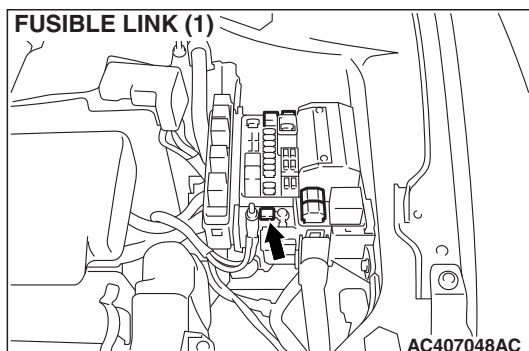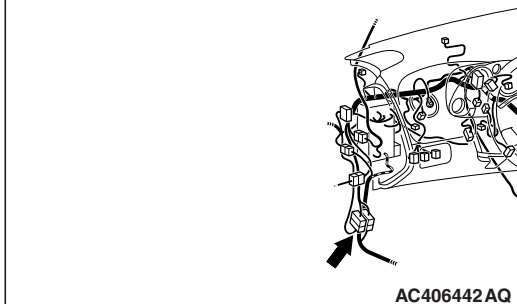


**CONNECTOR: C-24**

**CONNECTOR: C-204**  
JUNCTION BLOCK  
(FRONT VIEW)

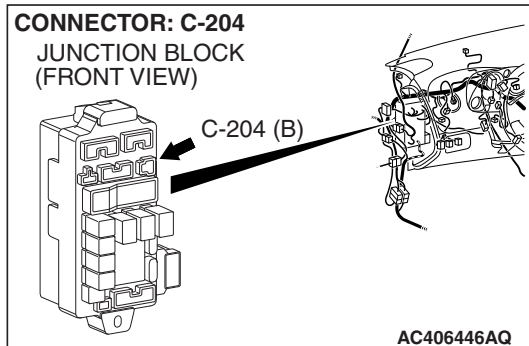

**CONNECTOR: C-217**  
JUNCTION BLOCK  
(REAR VIEW)

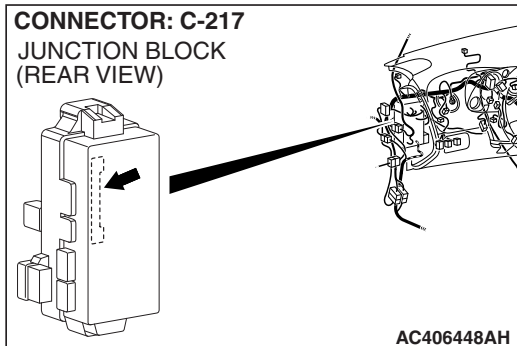

## CIRCUIT OPERATION

- The ETACS-ECU controls the central door lock system, locking or unlocking all the doors by activating the central door lock relay (built into the ETACS-ECU). The ETACS-ECU uses inputs from the following components:
  - Door lock actuator
  - Door lock key cylinder switch

- Door lock switch, which is incorporated in the power window main switch or power window sub switch

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the ETACS-ECU.

**⚠ CAUTION**



**To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."  
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) M.U.T.-III should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.


**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

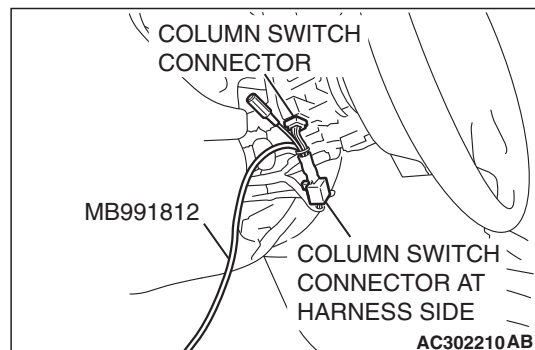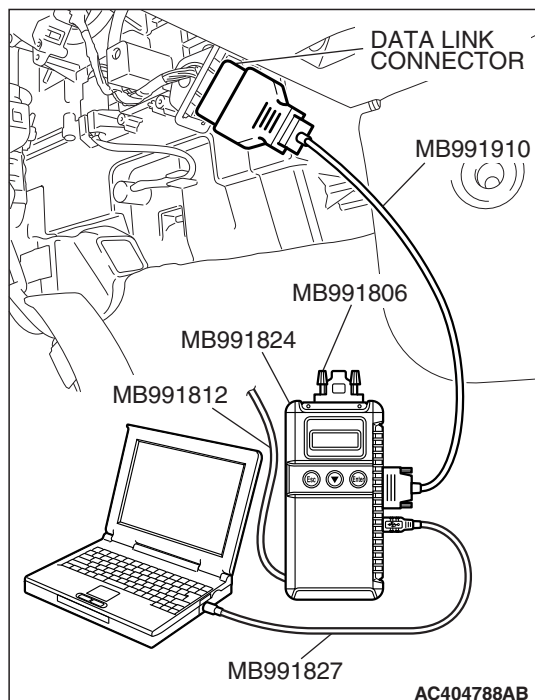



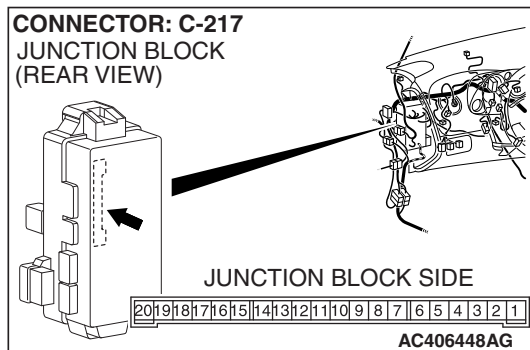


**STEP 2. Check ETACS-ECU connector C-217 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-217 in good condition?**


**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the central door locking system works normally.

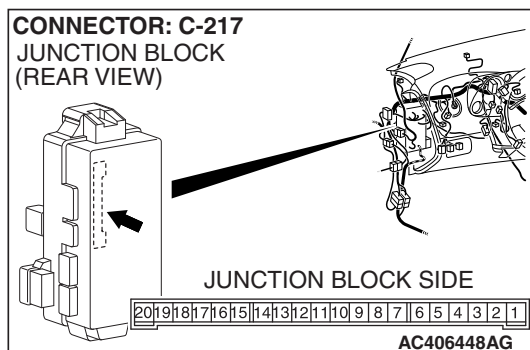

**STEP 3. Check the battery power supply circuit to the ETACS-ECU. Measure the voltage at ETACS-ECU connector C-217.**

(1) Disconnect ETACS-ECU connector C-217 and measure the voltage available at the junction block side of the connector.

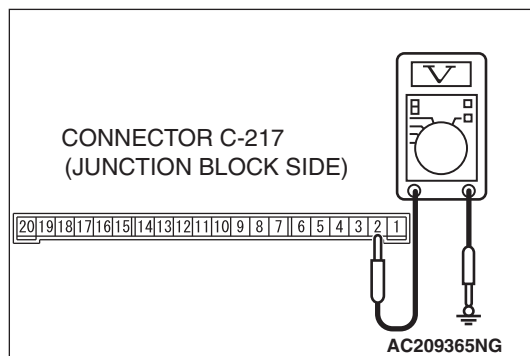

(2) Measure the voltage between terminal 2 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage)

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**





**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that all the doors can be locked and unlocked normally.

**NO :** Go to Step 4.



**STEP 4. Check the wiring harness between ETACS-ECU connector C-217 (terminal 2) and fusible link (1).**

- Check the power supply line for open circuit and short circuit.

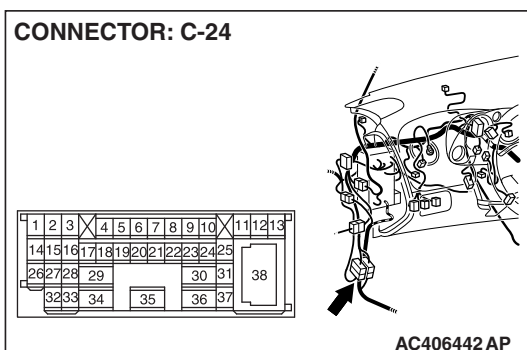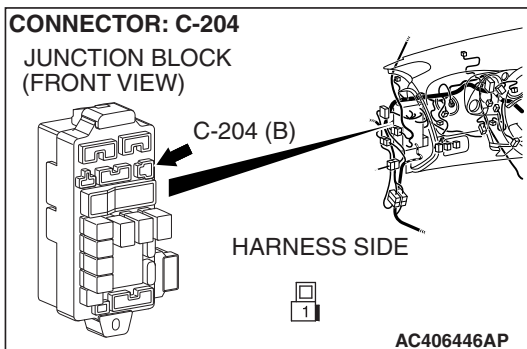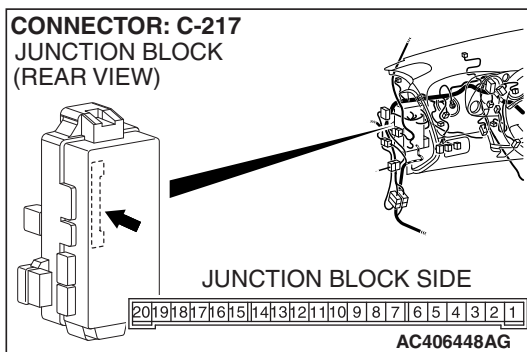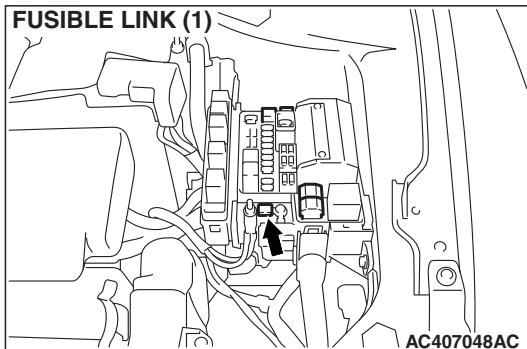

*NOTE: Also check junction block connector C-204 and intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-204 or intermediate connector C-24 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the wiring harness between ETACS-ECU connector C-217 (terminal 2) and fusible link (1) in good condition?**


**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the central door locking system works normally.




## INSPECTION PROCEDURE C-2: Central Door Locking System: Some doors do not lock or unlock.

## Central Door Lock Circuit




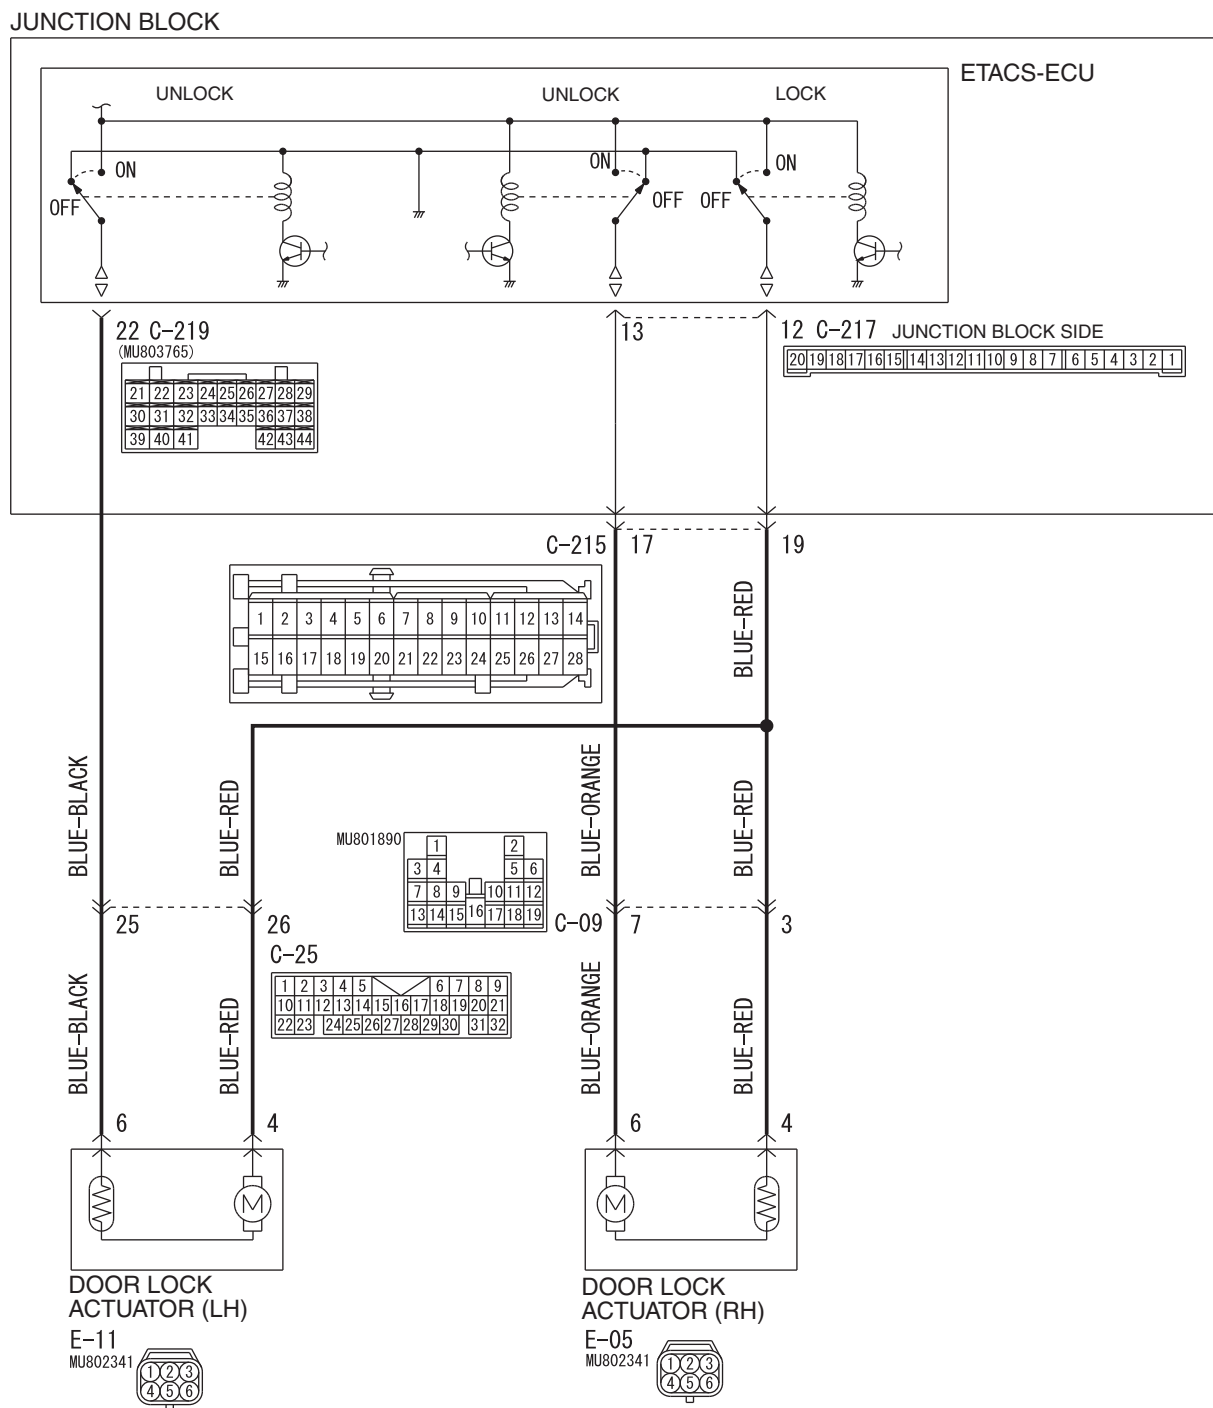




**Central Door Lock Circuit**

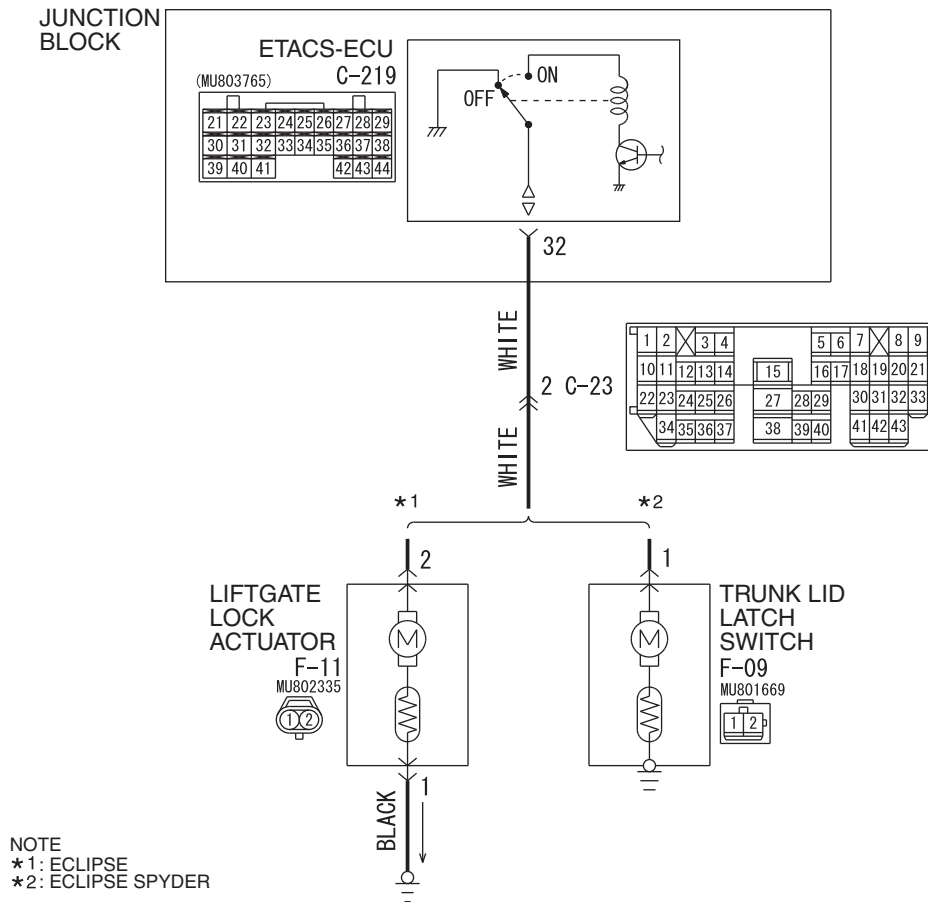


W7P54M016A  
AC712068AB

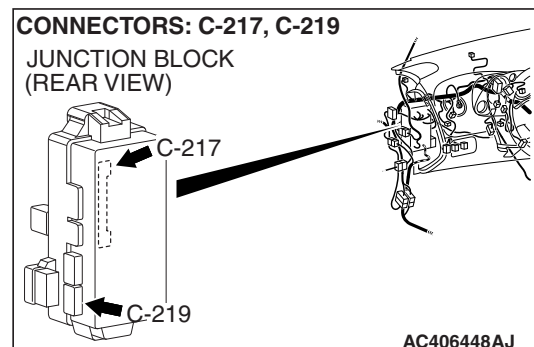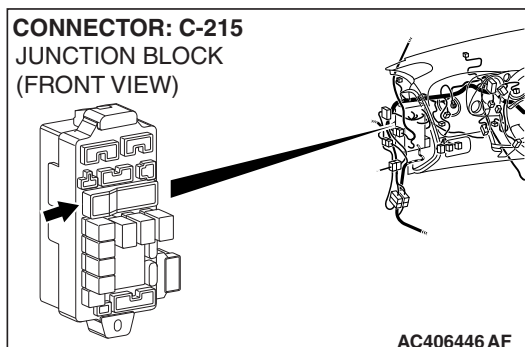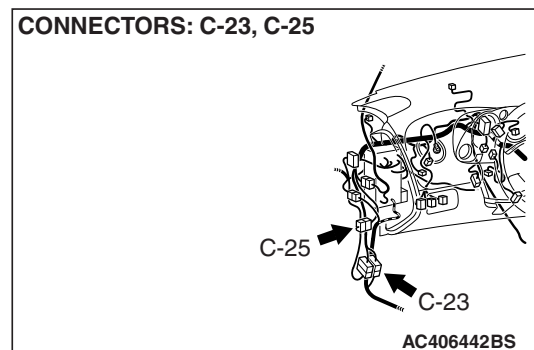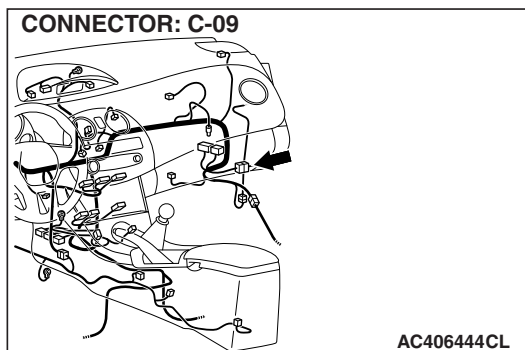





CONNECTOR: E-05

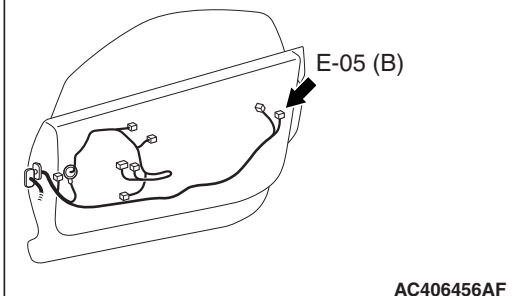


CONNECTOR: E-11

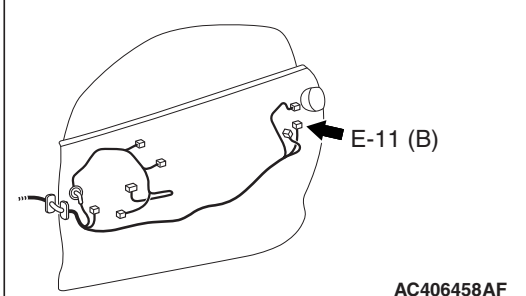

CONNECTOR: F-11 &lt;ECLIPSE&gt;

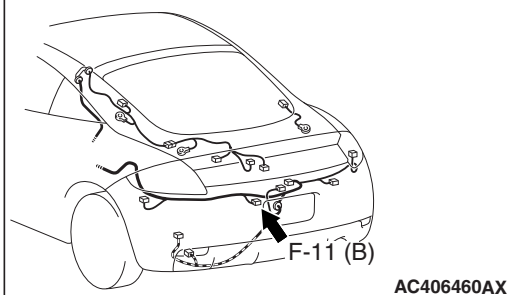

CONNECTOR: F-09 &lt;ECLIPSE SPYDER&gt;

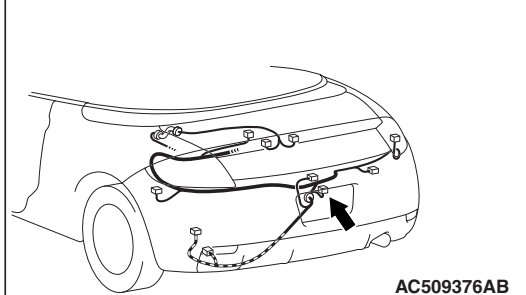

## CIRCUIT OPERATION

- The ETACS-ECU operates the central door lock system according to the following signals:
  - Door lock actuator switch
  - Door lock key cylinder switch
  - Door lock switch, which is incorporated in the power window main switch or power window sub switch
- The ETACS-ECU locks or unlocks all the doors by operating the central door lock relay (incorporated in the ECU) in response to input signals.

## TECHNICAL DESCRIPTION (COMMENT)

The wiring harness between the ETACS-ECU and the door lock actuator may be defective.

## TROUBLESHOOTING HINTS

- The door lock actuator may be defective
- The liftgate lock actuator may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

### STEP 1. Check which door lock is defective.

#### Q: Which of the door locks is defective?


**Driver's door :** Go to Step 2.

**Passenger's door :** Go to Step 7.

**Liftgate <ECLIPSE> :** Go to Step 11.

**Trunk lid <ECLIPSE SPYDER> :** Go to Step 18.



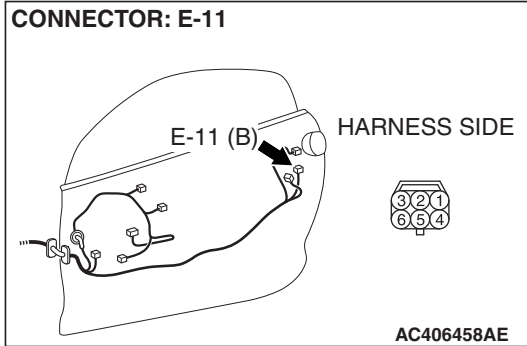


**STEP 2. Check door lock actuator (LH) connector E-11 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is door lock actuator (LH) connector E-11 in good condition?**

**YES :** Go to Step 3.

**NO :** Repair or check the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that all the doors can be locked and unlocked normally.

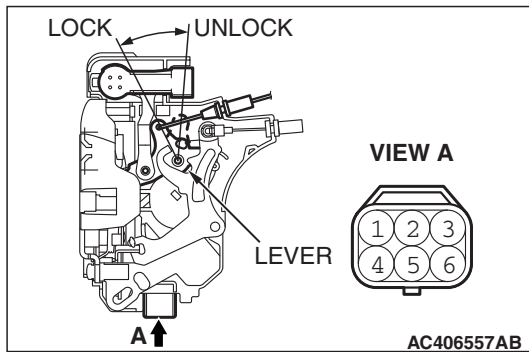

**STEP 3. Check the door lock actuator (LH).**

Remove the door lock actuator (LH). The illustration shows when the door lock actuator is viewed from inside the door. Refer to GROUP 42 – Door Handle and Latch [P.42-90](#).


LEVER POSITION	BATTERY CONNECTION	LEVER OPERATION
At the "LOCK" position	<ul style="list-style-type: none"> <li>Connect terminal No.4 and the negative battery terminal.</li> <li>Connect terminal No.6 and the positive battery terminal.</li> </ul>	The lever moves from the "LOCK" position to the "UNLOCK" position.
At the "UNLOCK" position	<ul style="list-style-type: none"> <li>Connect terminal No.6 and the negative battery terminal.</li> <li>Connect terminal No.4 and the positive battery terminal.</li> </ul>	The lever moves from the "UNLOCK" position to the "LOCK" position.

**Q: Does the door lock actuator (LH) work normally?**

**YES :** Go to Step 4.

**NO :** Replace the door lock actuator (LH). Verify that all the doors can be locked and unlocked normally.



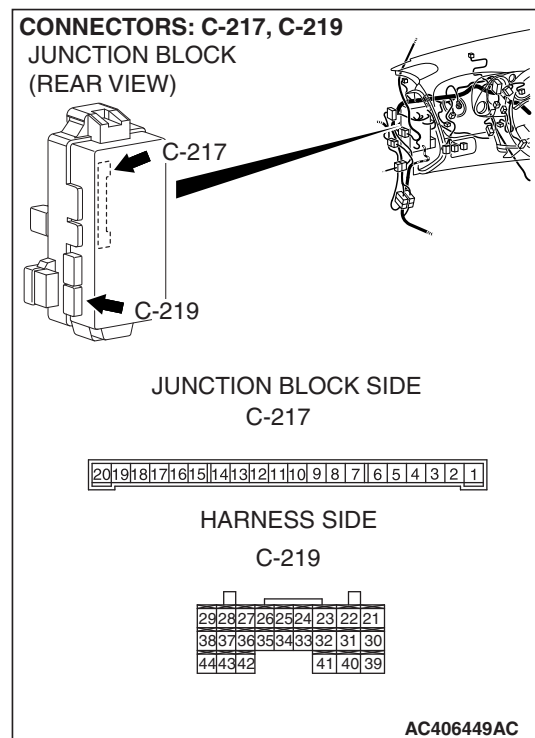

**STEP 4. Check ETACS-ECU connectors C-217 and C-219 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**



**Q: Are ETACS-ECU connectors C-217 and C-219 in good condition?**

**YES :** Go to Step 5.

**NO :** Repair or check the connector. Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that all the doors can be locked and unlocked normally.

**STEP 5. Check the wiring harness between ETACS-ECU connector C-219 (terminal 22) and door lock actuator (LH) connector E-11 (terminal 6).**


- Check the communication lines for open circuit and short circuit.

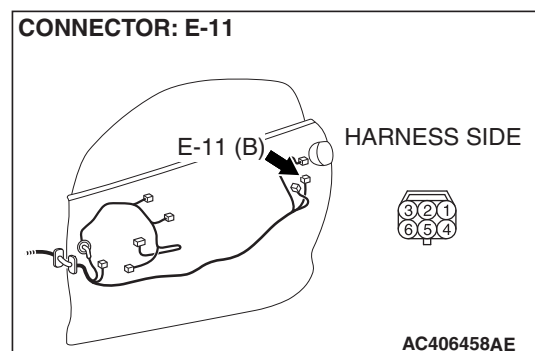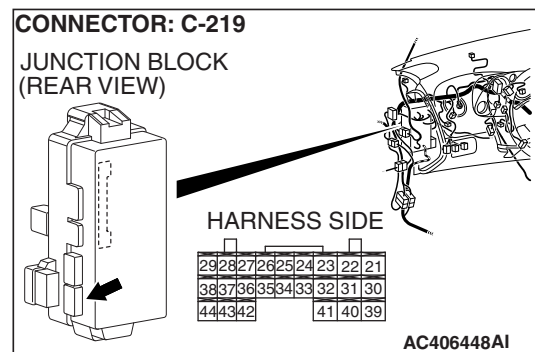



**CONNECTOR: C-25**

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32				

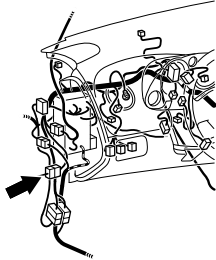

AC406442BR

*NOTE: Also check intermediate connector C-25 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-219 (terminal 22) and door lock actuator (LH) connector E-11 (terminal 6) in good condition?**


**YES :** Go to Step 6.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair or replace the damaged component(s). Verify that the central door locking system works normally.

**STEP 6. Check the wiring harness between ETACS-ECU connector C-217 (terminal 12) and door lock actuator (LH) connector E-11 (terminal 4).**

- Check the communication lines for open circuit and short circuit.

**CONNECTOR: C-217  
JUNCTION BLOCK  
(REAR VIEW)**

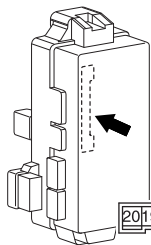


JUNCTION BLOCK SIDE

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

AC406448AG

**CONNECTOR: E-11**

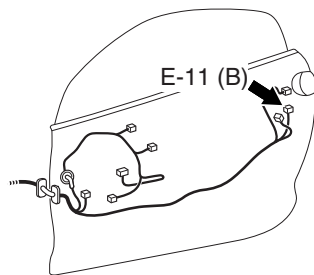

HARNESS SIDE


3	2	1
6	5	4

AC406458AE



## CONNECTOR: C-25

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32				

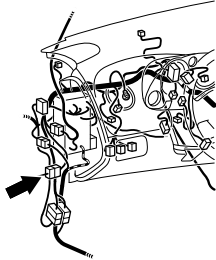


AC406442BR

**NOTE:** Also check intermediate connector C-25 and junction block connector C-215 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-25 or junction block connector C-215 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**Q:** Is the wiring harness between ETACS-ECU connector C-217 (terminal 12) and door lock actuator (LH) connector E-11 (terminal 4) in good condition?

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that all the doors can be locked and unlocked normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair or replace the damaged component(s). Verify that the central door locking system works normally.

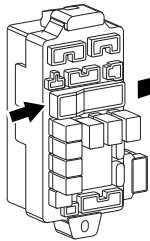
CONNECTOR: C-215  
JUNCTION BLOCK  
(FRONT VIEW)

HARNESS SIDE



AC406446AC

## CONNECTOR: E-05

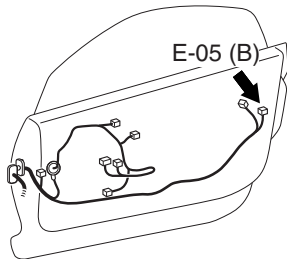

HARNESS SIDE



AC406456AE


**STEP 7. Check door lock actuator (RH) connector E-05 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q:** Is door lock actuator (RH) connector E-05 in good condition?

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that all the doors can be locked and unlocked normally.



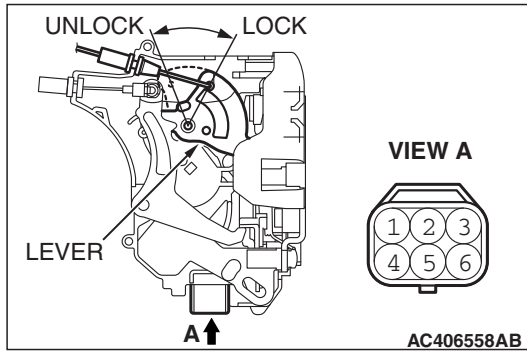

**STEP 8. Check the door lock actuator (RH).**

Remove the door lock actuator (RH). The illustration shows when the door lock actuator is viewed from inside the door. Refer to GROUP 42 – Door Handle and Latch [P.42-90](#).

LEVER POSITION	BATTERY CONNECTION	LEVER OPERATION
At the "LOCK" position	<ul style="list-style-type: none"> <li>Connect terminal No.4 and the negative battery terminal.</li> <li>Connect terminal No.6 and the positive battery terminal.</li> </ul>	The lever moves from the "LOCK" position to the "UNLOCK" position.
At the "UNLOCK" position	<ul style="list-style-type: none"> <li>Connect terminal No.6 and the negative battery terminal.</li> <li>Connect terminal No.4 and the positive battery terminal.</li> </ul>	The lever moves from the "UNLOCK" position to the "LOCK" position.

**Q: Is the door lock actuator (RH) normal?**

**YES :** Go to Step 9.


**NO :** Replace the door lock actuator (RH). Verify that all the doors can be locked and unlocked normally.

**STEP 9. Check ETACS-ECU connector C-217 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-217 in good condition?**

**YES :** Go to Step 10.





**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that all the doors can be locked and unlocked normally.

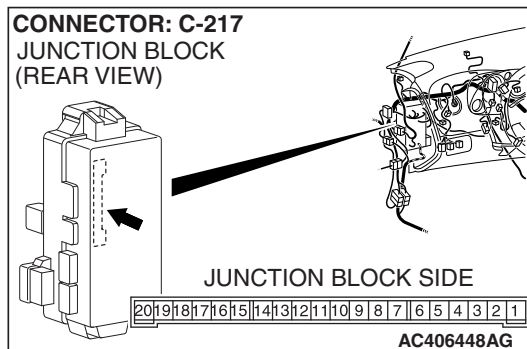



**STEP 10. Check the wiring harness between ETACS-ECU connector C-217 (terminals 12 and 13) and door lock actuator (RH) connector E-05 (terminals 4 and 6).**

- Check the communication lines for open circuit and short circuit.

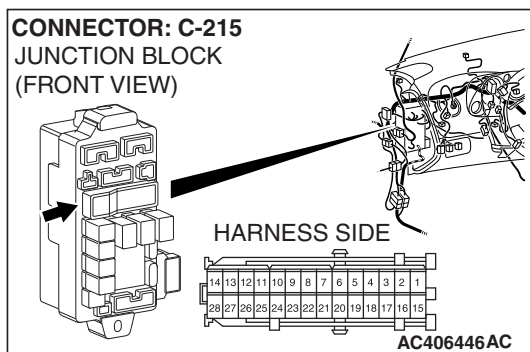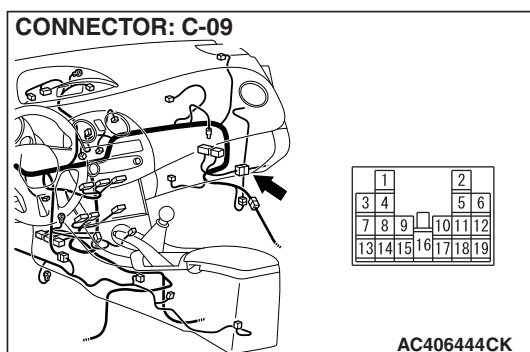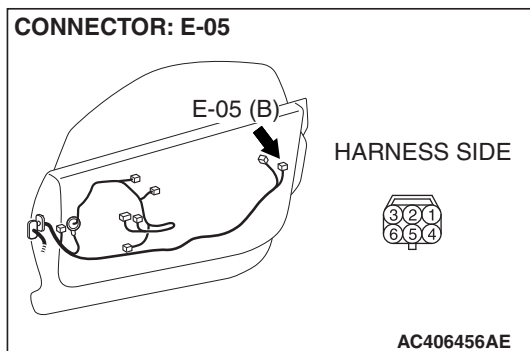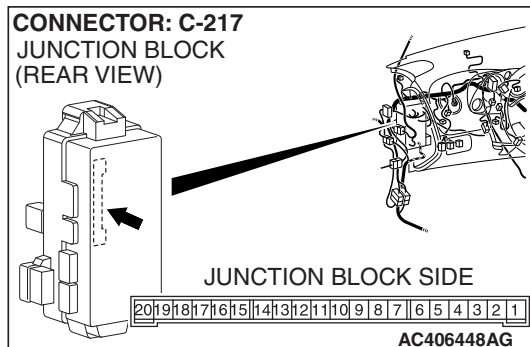


*NOTE: Also check intermediate connector C-09 and junction block connector C-215 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-09 or junction block connector C-215 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-217 (terminals 12 and 13) and door lock actuator (RH) connector E-05 (terminals 4 and 6) in good condition?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that all the doors can be locked and unlocked normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.



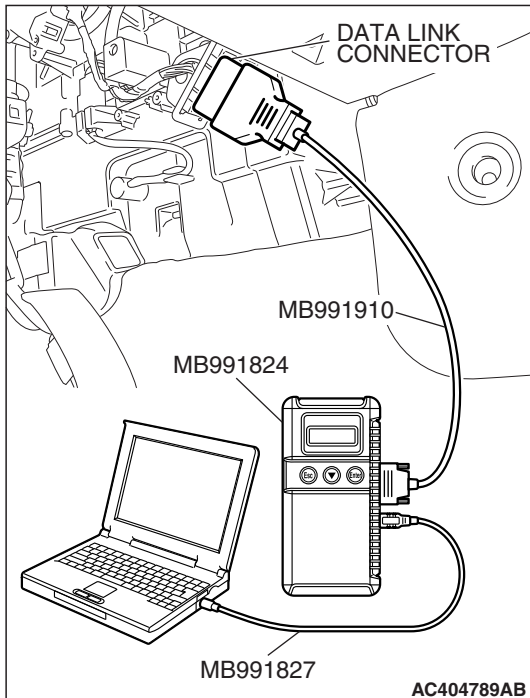

**STEP 11. Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the liftgate lock release switch.

**CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect the special tool. Refer to "How to connect SWS monitor P.54B-13."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) When the liftgate lock release switch is operated, check that scan tool MB991958 sounds.

**Q: Does scan tool MB991958 sound when the liftgate lock release switch is turned from "OFF" to "ON"?**

**YES :** Go to Step 12.

**NO :** Refer to Inspection Procedure N-6 "ETACS-ECU does not receive any signal from the liftgate lock release switch P.54B-574. <ECLIPSE>"

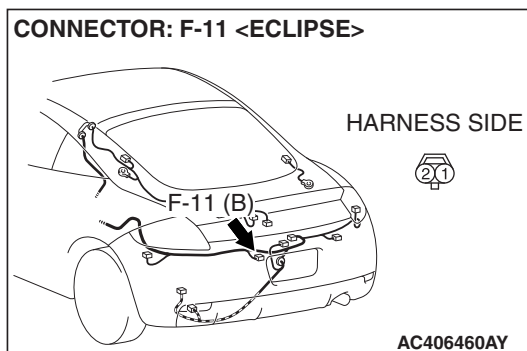


**STEP 12. Check liftgate lock actuator connector F-11 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is liftgate lock actuator connector F-11 in good condition?**

**YES :** Go to Step 13.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Verify that all the doors can be locked and unlocked normally.

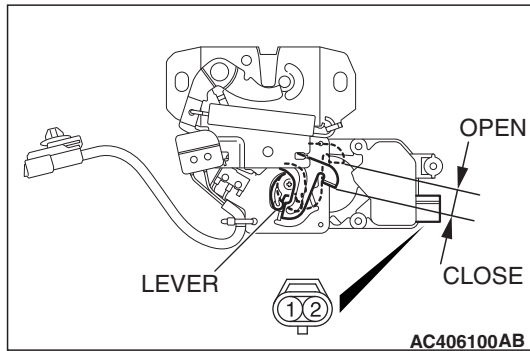

**STEP 13. Check the liftgate lock actuator.**

Remove the liftgate lock actuator. The illustration shows when the door lock actuator is viewed from inside the door. Refer to GROUP 42 – Door Handle and Latch P.42-90.

LEVER POSITION	BATTERY CONNECTION	LEVER OPERATION
At the "CLOSE" position	<ul style="list-style-type: none"> <li>Connect terminal No.1 and the negative battery terminal.</li> <li>Connect terminal No.2 and the positive battery terminal.</li> </ul>	The lever moves from the "CLOSE" position to the "OPEN" position.



**Q: Is the liftgate lock actuator normal?**

**YES** : Go to Step 14.

**NO** : Replace the liftgate lock actuator. Verify that all the doors can be locked and unlocked normally.

**STEP 14. Check the ground circuit to the liftgate lock actuator. Measure the resistance at liftgate lock actuator connector F-11.**

(1) Disconnect liftgate lock actuator connector F-11 and measure the resistance available at the wiring harness side of the connector.

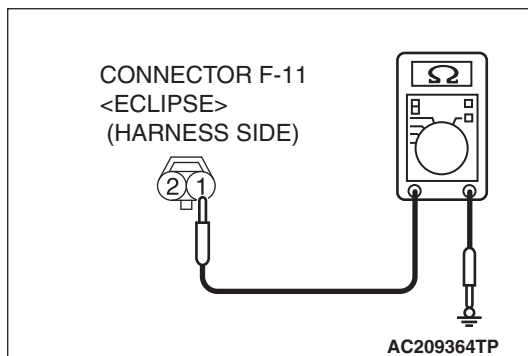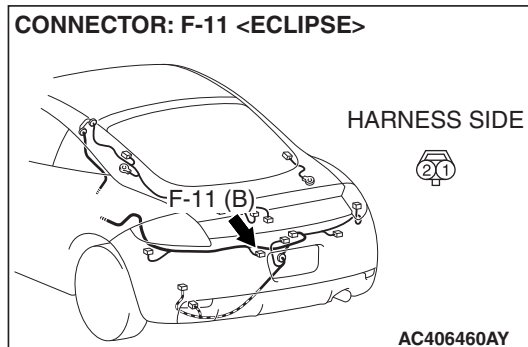

(2) Measure the resistance value between terminal 1 and ground.

- The resistance should be 2 ohms or less.


**Q: Is the measured resistance 2 ohms or less?**

**YES** : Go to Step 16.

**NO** : Go to Step 15.



CONNECTOR: F-11 <ECLIPSE>

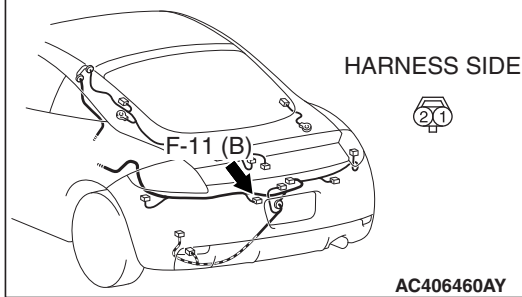

**STEP 15. Check the wiring harness between liftgate lock actuator connector F-11 (terminal 1) and ground.**

- Check the ground line for open circuit.


**Q: Is the wiring harness between liftgate lock actuator connector F-11 (terminal 1) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. If the front fog light switch operates normally, a correct signal is sent from the front fog light switch.

CONNECTOR: C-219

JUNCTION BLOCK  
(REAR VIEW)

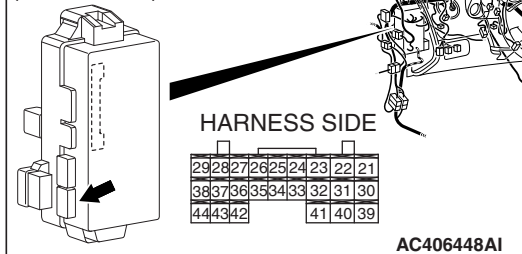

**STEP 16. Check ETACS-ECU connector C-219 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-219 in good condition?**

**YES :** Go to Step 17.




**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

**P.00E-2.** Verify that all the doors can be locked and unlocked normally.



**STEP 17. Check the wiring harness between ETACS-ECU connector C-219 (terminal 32) and liftgate lock actuator connector F-11 (terminal 2).**

- Check the communication lines for open circuit and short circuit.

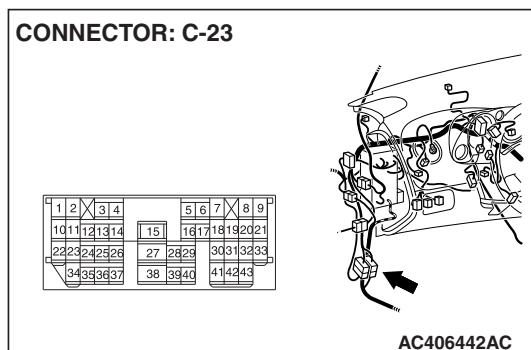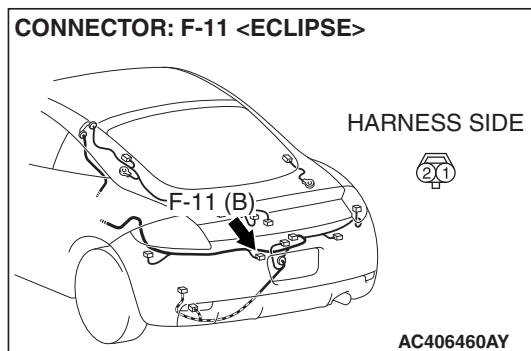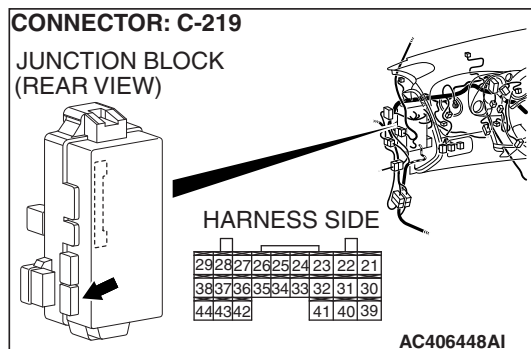

*NOTE: Also check intermediate connector C-23 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-23 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-219 (terminal 32) and liftgate lock actuator connector F-11 (terminal 2) in good condition?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that all the doors can be locked and unlocked normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.



**STEP 18. Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the trunk lid latch switch.

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect the special tool. Refer to "How to connect SWS monitor P.54B-13."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) When the liftgate lock release switch is operated, check that scan tool MB991958 sounds.

**Q: Does scan tool MB991958 sound when the trunk lid latch switch is turned from "OFF" to "ON"?**

**YES :** Go to Step 19.

**NO :** Refer to Inspection Procedure N-5 "ETACS-ECU does not receive any signal from the trunk lid latch switch P.54B-570. <ECLIPSE SPYDER>"

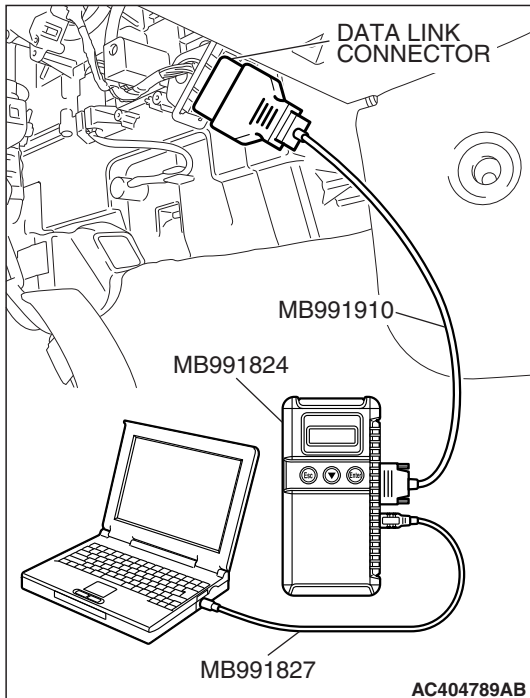


**STEP 19. Check trunk lid latch switch connector F-09 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**


**Q: Is trunk lid latch switch connector F-09 in good condition?**

**YES :** Go to Step 20.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Verify that all the doors can be locked and unlocked normally.

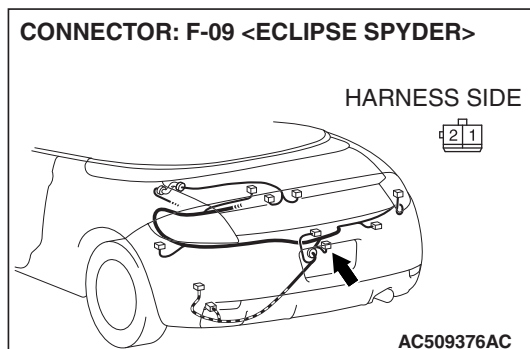



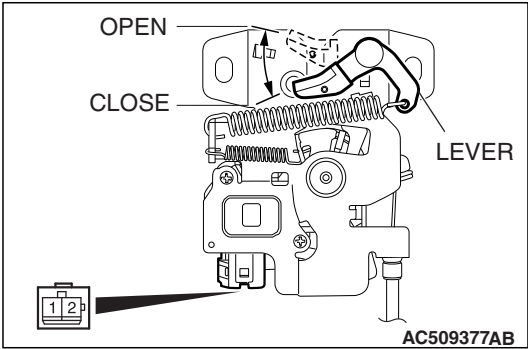

**STEP 20. Check the trunk lid latch switch.**

Remove the trunk lid latch switch. The illustration shows when the door lock actuator is viewed from inside the door. Refer to GROUP 42 – Door Handle and Latch [P.42-90](#).

LEVER POSITION	BATTERY CONNECTION	LEVER OPERATION
At the "OFF" position	<ul style="list-style-type: none"><li>• Connect ground and the negative battery terminal.</li><li>• Connect terminal No. 1 and the positive battery terminal.</li></ul>	The lever moves from the "OFF" position to the "OPEN" position.

**Q: Is the liftgate lock actuator normal?**

**YES :** Go to Step 21.


**NO :** Replace the trunk lid latch switch. Verify that all the doors can be locked and unlocked normally.

**STEP 21. Check ETACS-ECU connector C-219 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-219 in good condition?**

**YES :** Go to Step 22.




**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that all the doors can be locked and unlocked normally.

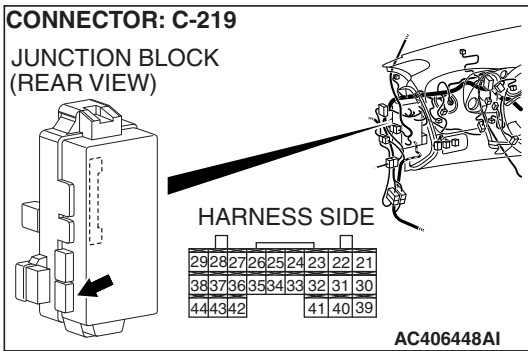



**STEP 22. Check the wiring harness between ETACS-ECU connector C-219 (terminal 32) and trunk lid latch switch connector F-09 (terminal 1).**

- Check the communication lines for open circuit and short circuit.

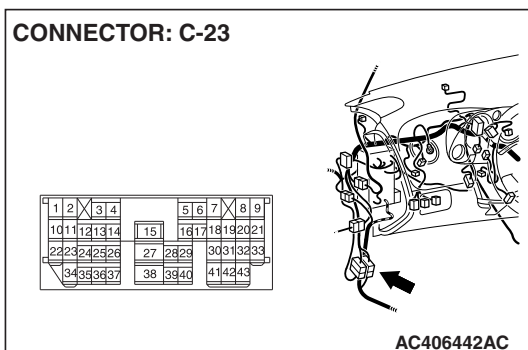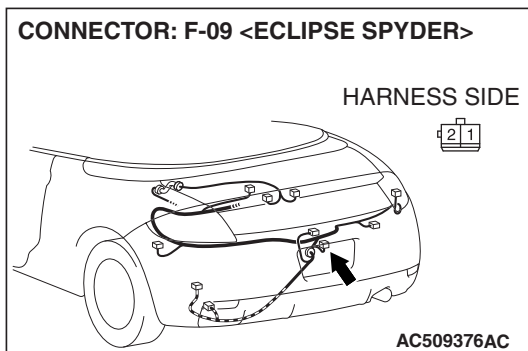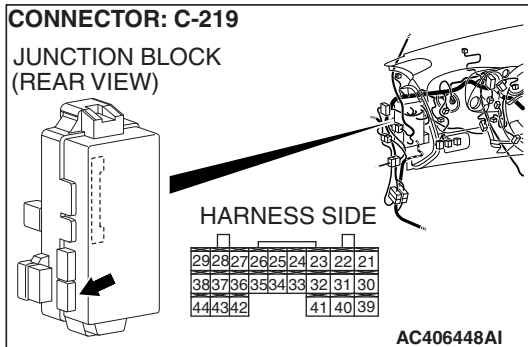


*NOTE: Also check intermediate connector C-23 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-23 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-219 (terminal 32) and trunk lid latch switch connector F-09 (terminal 1) in good condition?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that all the doors can be locked and unlocked normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

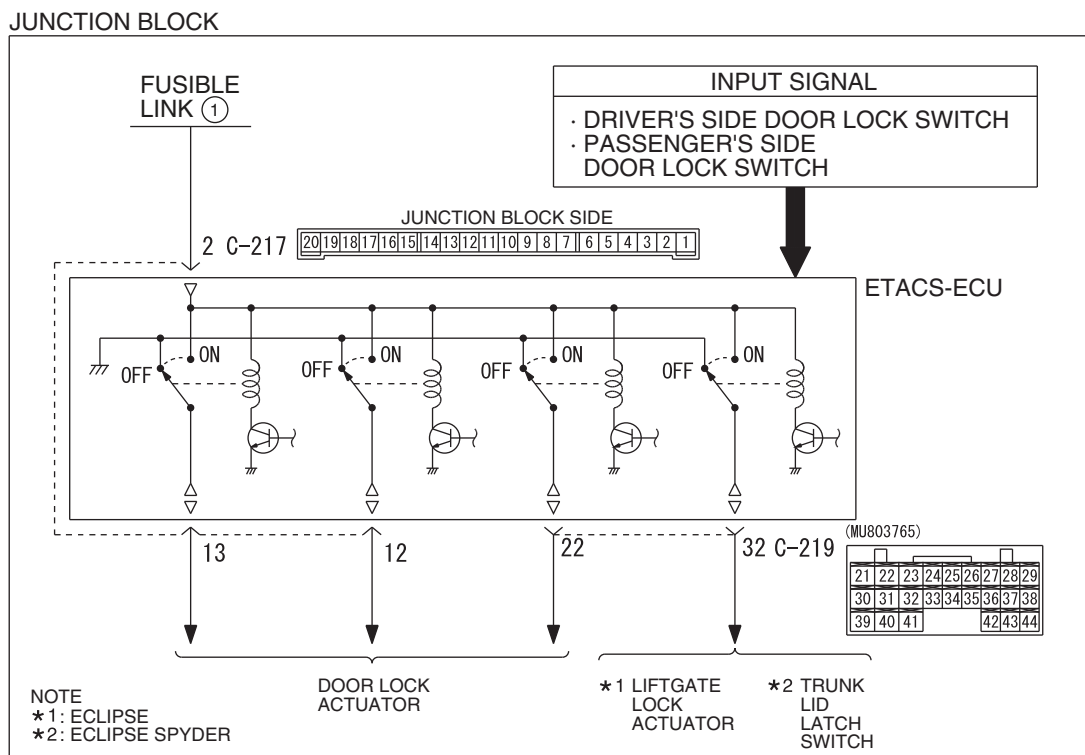

**INSPECTION PROCEDURE C-3: Central Door Locking System: None of the doors lock and unlock with just the door lock switch operation.****Central Door Lock (Door Lock Switch) Circuit**

W7P54M002A

**TECHNICAL DESCRIPTION (COMMENT)**

The door lock switch (incorporated in the power window main switch and power window sub switch) or the ETACS-ECU may be defective.


**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



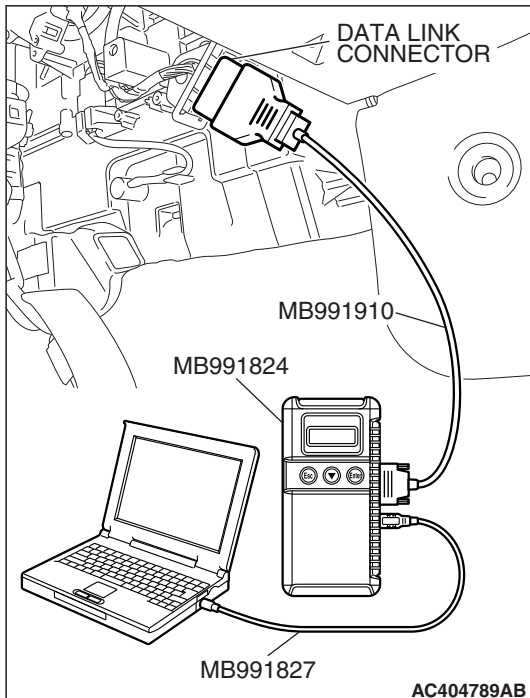

**Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the door lock switch (incorporated in the power window main switch and power window sub switch):

**⚠ CAUTION**

**To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.**


- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) When the driver's or the passenger's door lock switch is moved from "LOCK" to "UNLOCK" and vice versa, check if scan tool MB991958 sounds or not.

**Q: Does scan tool MB991958 sound when the driver's or the passenger's door lock switch is moved from "LOCK" to "UNLOCK" and vice versa?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Check that all the doors should be locked and unlocked by the door lock switch.

**NO :** Refer to Inspection Procedure N-4 "ETACS-ECU does not receive any signal from the door lock switch (incorporated in the power window main switch and power window sub switch) [P.54B-555](#)."

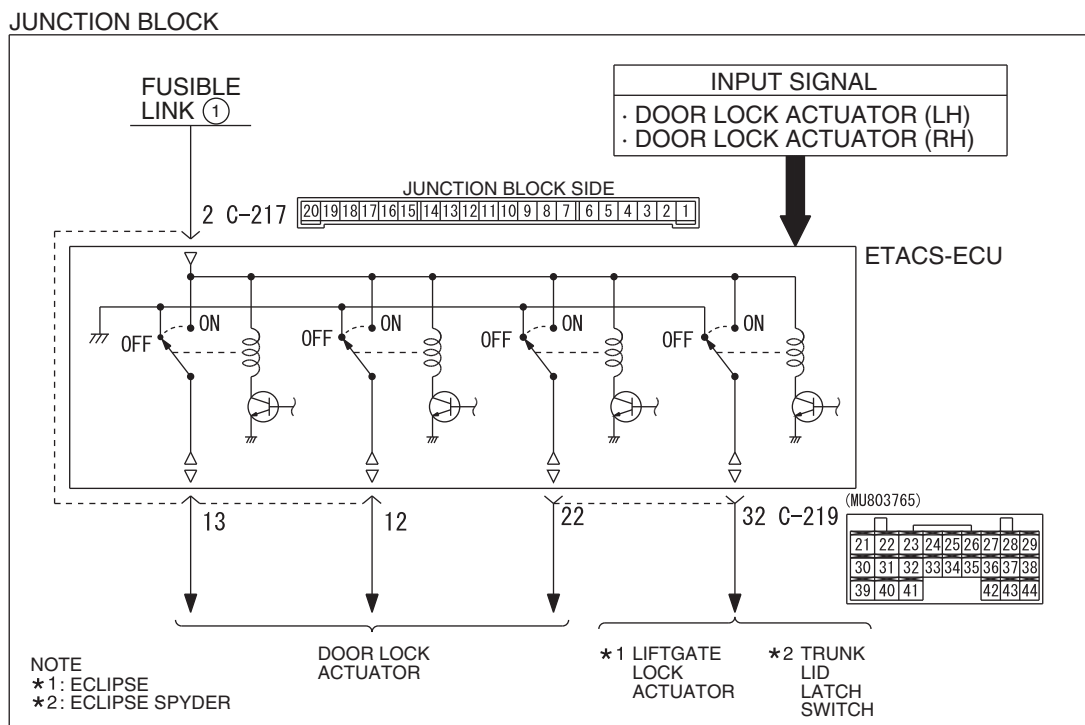

**INSPECTION PROCEDURE C-4: Central Door Locking System: None of the doors lock and unlock with just the driver's or passenger's inside lock knob operation.**

W7P54M004A

**TECHNICAL DESCRIPTION**

The door lock actuator or the ETACS-ECU may be defective.


**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



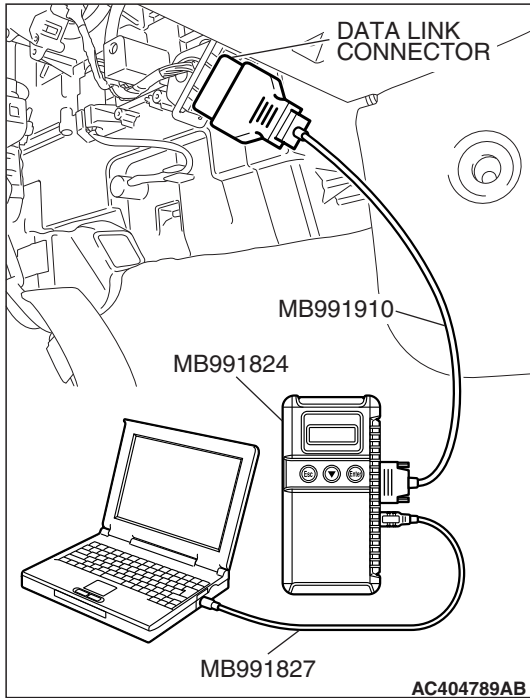

**Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the driver's or passenger's door lock actuator.

**⚠ CAUTION**

**To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.**

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) When the driver's inside lock knob is locked or unlocked, check if scan tool MB991958 sounds or not.

**Q: Does scan tool MB991958 sound when the driver's or the passenger's inside lock knob is moved from "LOCK" to "UNLOCK" or vice versa?**


**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Check that all the doors can be locked or unlocked by operating the driver's inside lock knob.

**NO :** Refer to Inspection Procedure N-3 "ETACS-ECU does not receive any signal from the door lock actuator [P.54B-545](#)."



**INSPECTION PROCEDURE C-5: Central Door Locking System: Forgotten key prevention function does not work normally.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

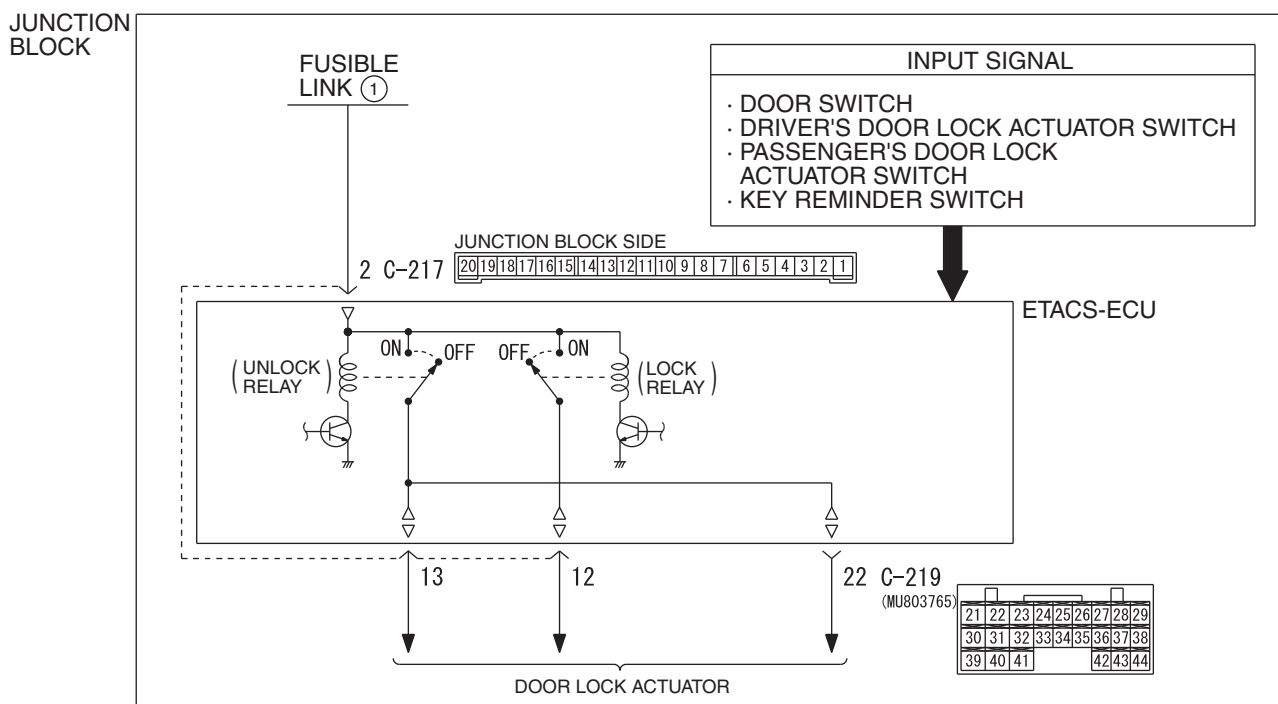**Forgotten Key Prevention Circuit**

W6P54M049A

**CIRCUIT OPERATION**

The ETACS-ECU operates the forgotten key prevention function under the following conditions:

- Ignition key: inserted into the ignition key cylinder
- Door: open
- Door lock: being locked

**TECHNICAL DESCRIPTION (COMMENT)**

If the function does not work normally, the input circuit system from the switches or the ETACS-ECU may be defective (refer to "CIRCUIT OPERATION").

**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable



- MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness

**STEP 1. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the ETACS-ECU.

**⚠ CAUTION**



To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.



**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

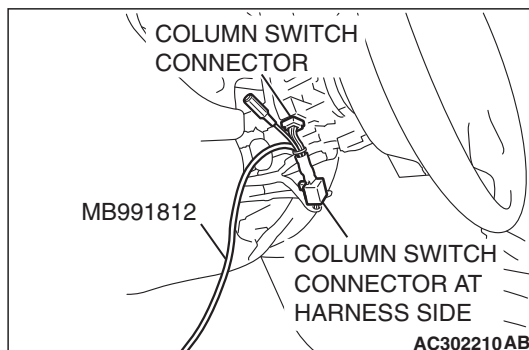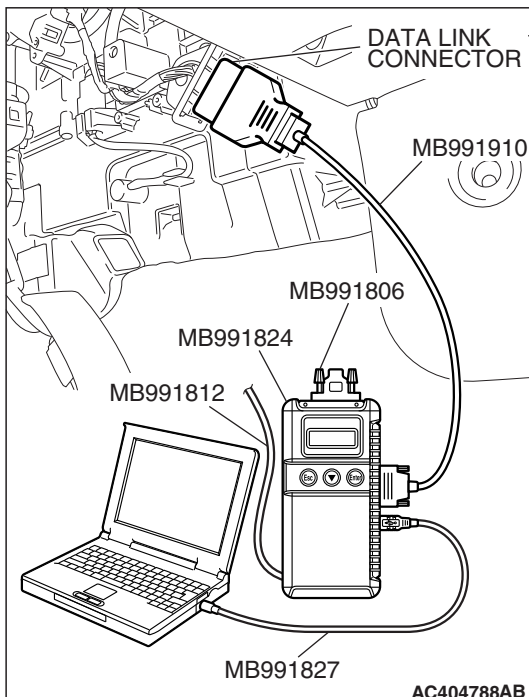



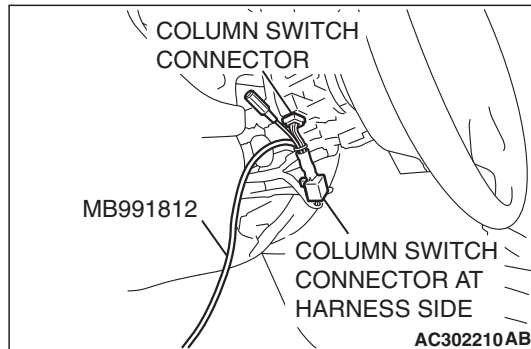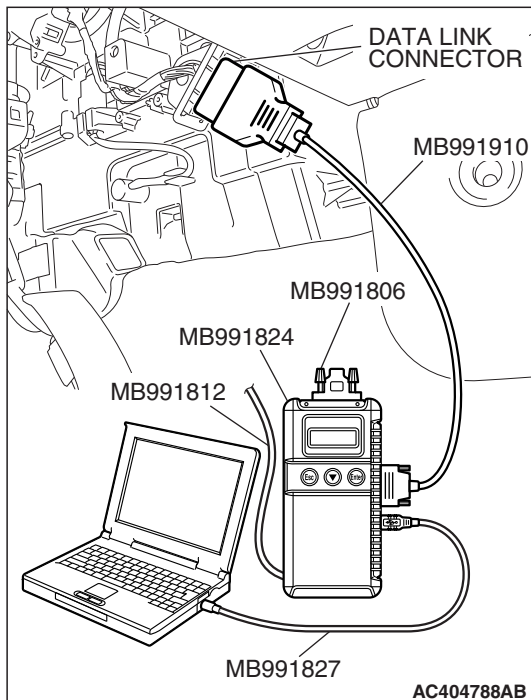

### STEP 2. Check the input signal by using "DATA LIST" menu of the SWS monitor.

Turn the ignition switch to the "ON" position before checking input signals from the ignition switch (IG1).

- (1) Operate the scan tool MB991958 according to the procedure below to display "ETACS ECU."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "ETACS ECU."
- (2) Check that normal conditions are displayed for the items described in the table below.


ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 32	FRONT DOOR SW	ON

**Q: Does scan tool MB991958 display "FRONT DOOR SW" as normal condition?**

**YES :** Go to Step 3.

**NO :** Refer to Inspection Procedure M-5 "ETACS-ECU does not receive any signal from the door switches [P.54B-512.](#)"



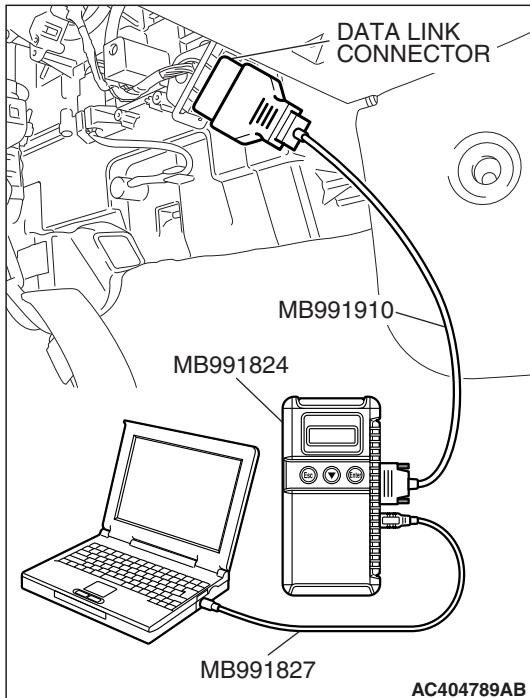

**STEP 3. Check the input signal (by using the pulse check mode of the monitor).**

Check the following switches and input signals:

- Key reminder switch

- (1) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (2) Check if scan tool MB991958 sounds or not.

ITEM NAME	CONDITION
Key reminder switch	Remove and reinsert the ignition key

**Q: When the key reminder switch is operated, does scan tool MB991958 sound?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table P.54A-19. The forgotten key prevention function should work normally.

**NO :** Refer to Inspection Procedure N-1 "ETACS-ECU does not receive any signal from the key reminder switch P.54B-537."

## POWER WINDOWS

### GENERAL DESCRIPTION CONCERNING THE POWER WINDOWS

M1549021900318

The following ECUs affect the functions and control of the power windows.


FUNCTION	CONTROL ECU
Power window timer function	ETACS-ECU

## POWER WINDOW

### POWER WINDOW TIMER FUNCTION

Even after the ignition is switched off, the ETACS-ECU keeps the power window relay activated for approximately 30 seconds, enabling raising or lowering of the power windows by using the power window switches. After approximately 30 seconds, the power window relay is deactivated.


During this timed operation, if the driver's or passenger's doors are opened, the power window relay is deactivated from that moment.

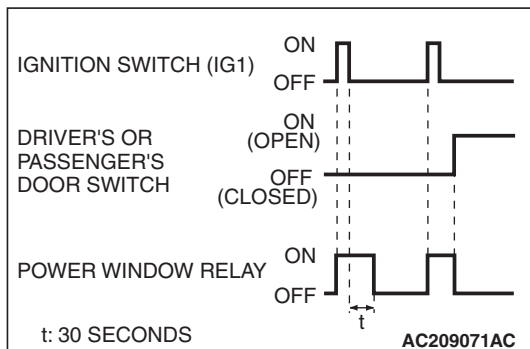








**INSPECTION PROCEDURE D-1: Power Windows: Power windows do not work at all.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

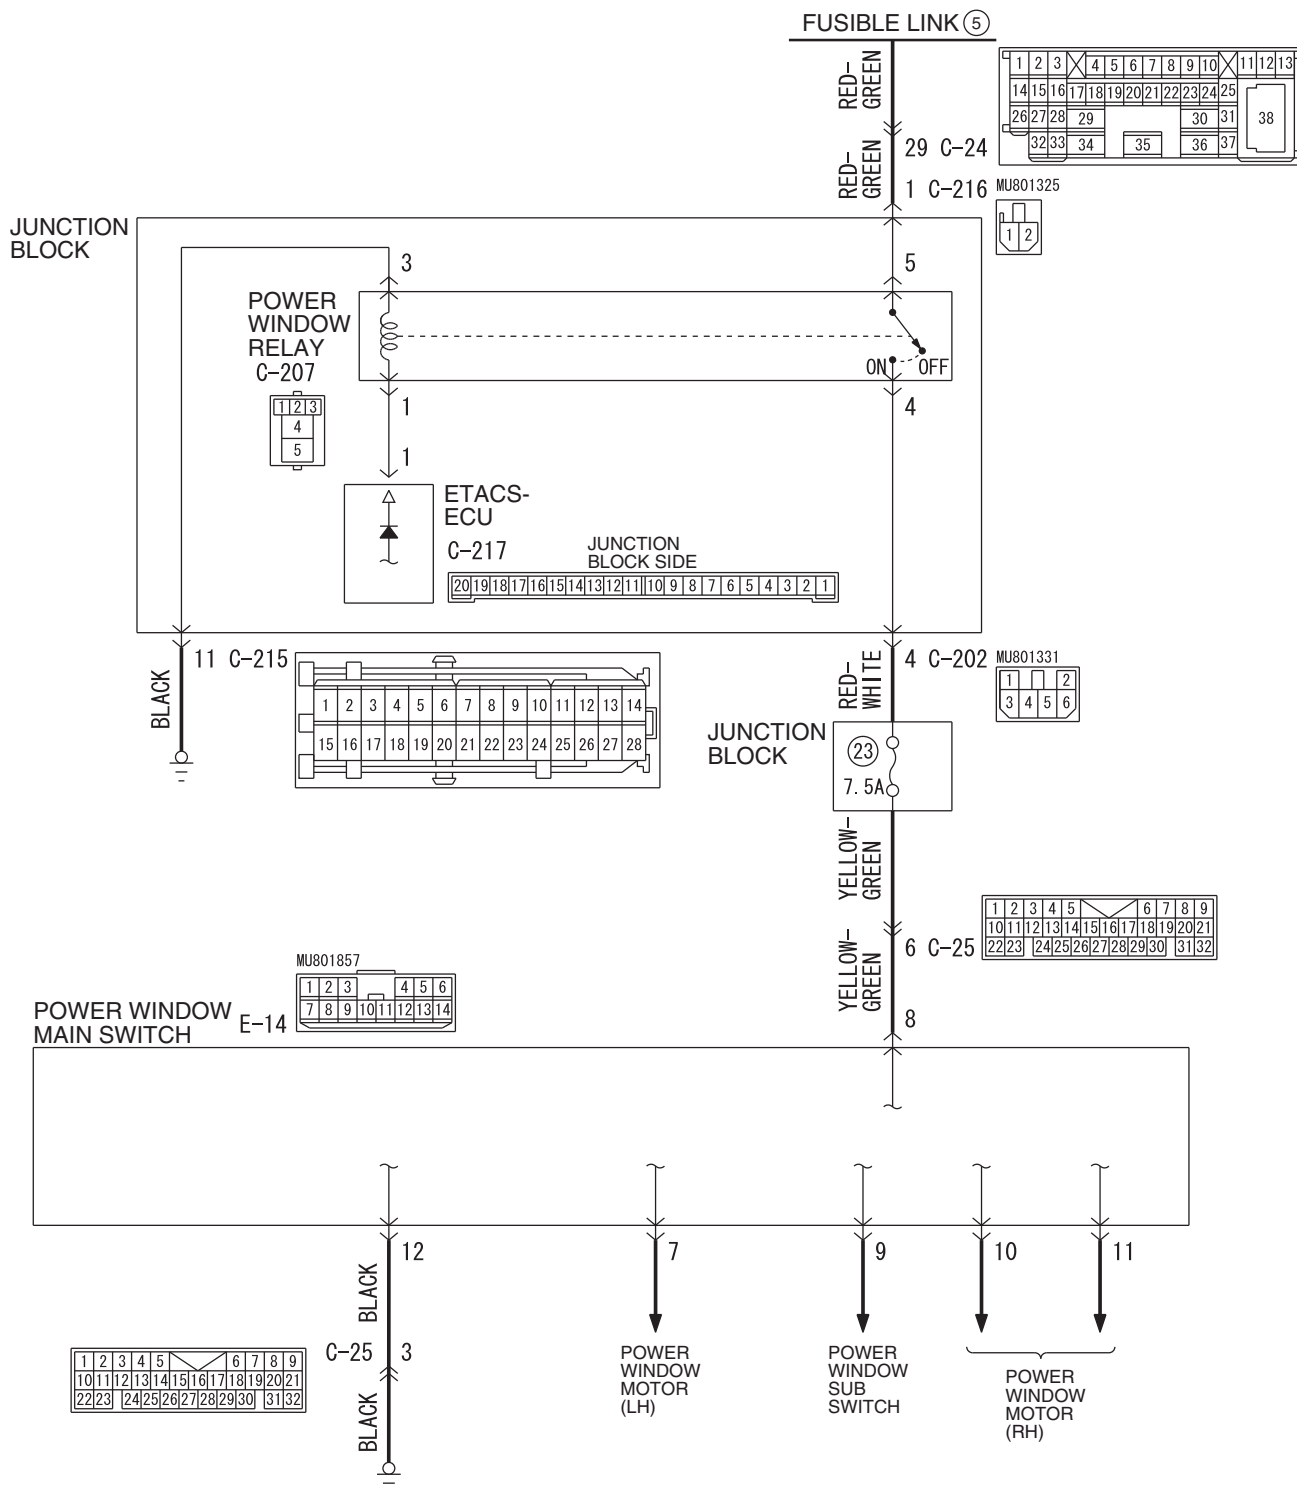**Power Window Relay Circuit**



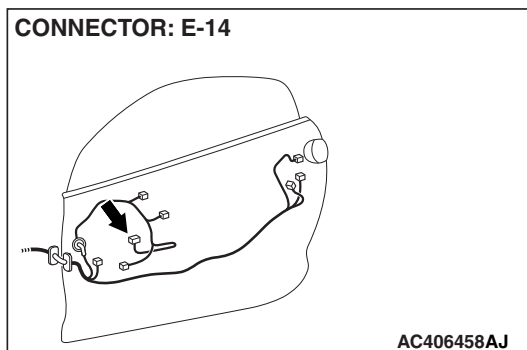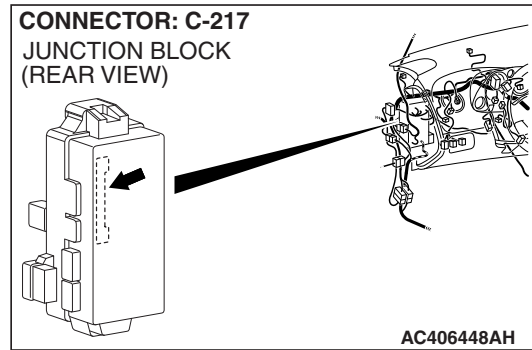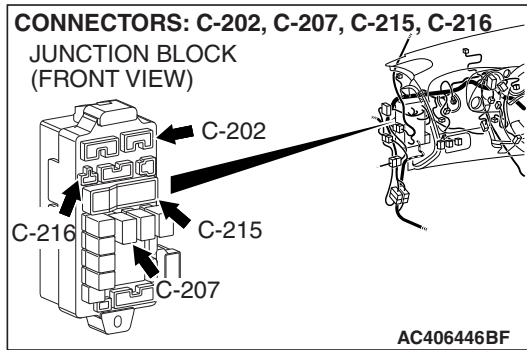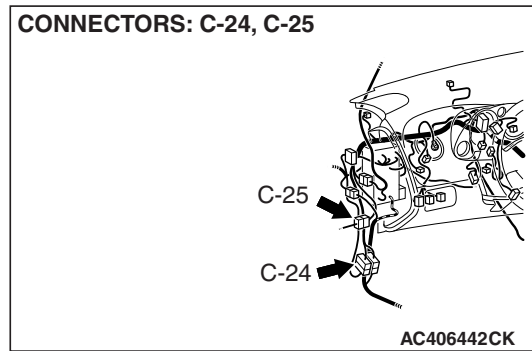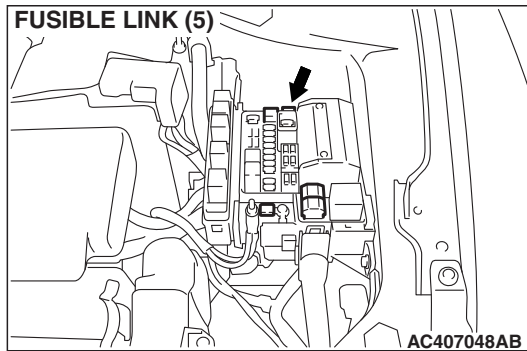

## CIRCUIT OPERATION

The ETACS-ECU turns on the power window relay (installed on the junction block) to activate the power windows when the ignition switch (IG1) is turned to the "ON" position.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The power window relay may be defective
- The power window main switch may be defective
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1.** Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.

Check the ETACS-ECU.

**⚠ CAUTION**



To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Operate the scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.



**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible P.54B-74."

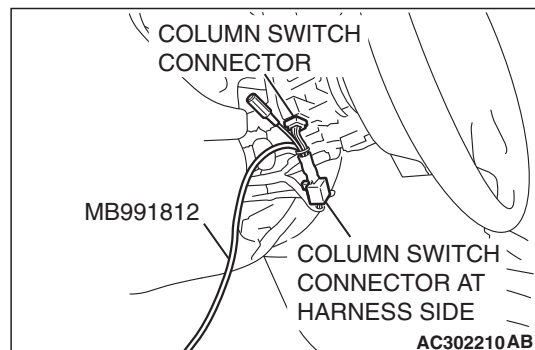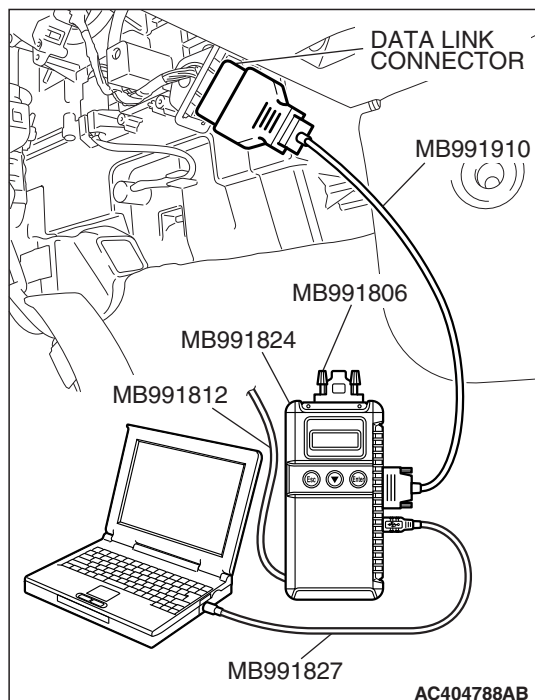



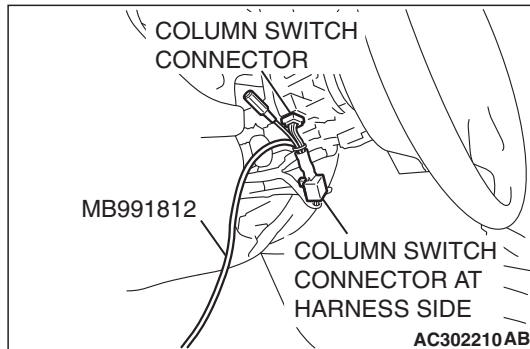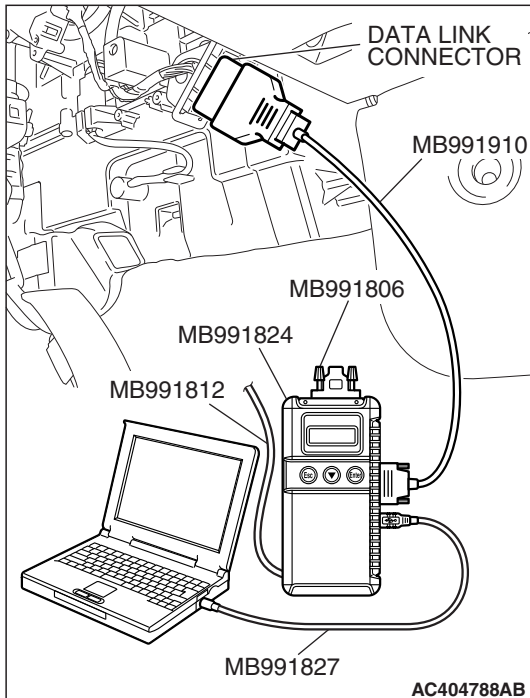

**STEP 2. Check the input signal by using "DATA LIST" menu of the SWS monitor.**

Turn the ignition switch to the "ON" position before checking input signals from the ignition switch (IG1).

- (1) Operate the scan tool MB991958 according to the procedure below to display "ETACS ECU."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "ETACS ECU."
- (2) Check that normal conditions are displayed for the items described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 30	IG SW (IG1)	ON

**Q: Does the scan tool MB991958 display "IG SW (IG1)" as normal condition?**

**YES :** Go to Step 3.


**NO :** Refer to Inspection Procedure M-2 "ETACS-ECU does not receive any signal from the ignition switch (IG1) [P.54B-499](#)."

**STEP 3. Check power window relay connector C-207 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**



**Q: Is power window relay connector C-207 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The power windows function should now work normally.

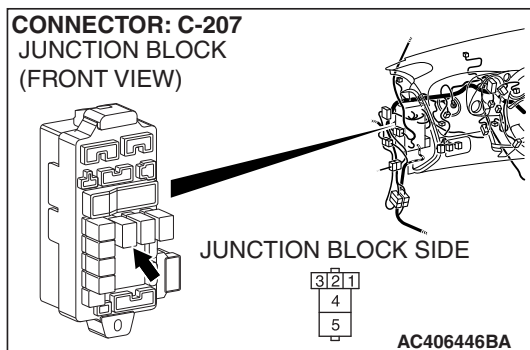



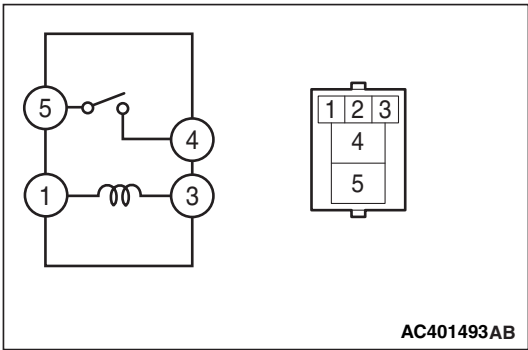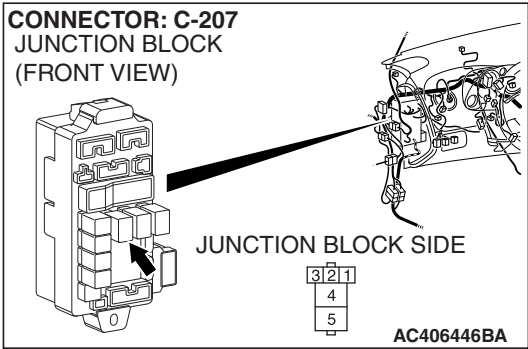

**STEP 4. Check the power window relay.**

BATTERY CONNECTION	TESTER CONNECTION	SPECIFIED CONDITION
Not applied	4 – 5	Open circuit
<ul style="list-style-type: none"><li>Connect terminal 1 to the positive battery terminal</li><li>Connect terminal 3 to the negative battery terminal</li></ul>	4 – 5	Continuity exists (2 ohms or less)



**Q: Is the power window relay normal?**

**YES :** Go to Step 5.

**NO :** Replace the power window relay. Verify that the power windows work normally.

**STEP 5. Check the battery power supply circuit to the power window relay. Measure the voltage at power window relay connector C-207.**

(1) Disconnect power window relay connector C-207 and measure the voltage available at the junction block side of the connector.

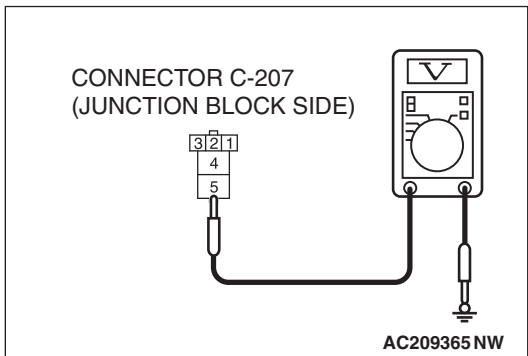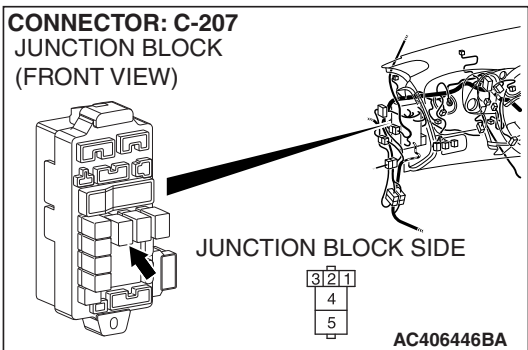

(2) Measure the voltage between terminal 5 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**



**YES :** Go to Step 7.

**NO :** Go to Step 6.





**STEP 6. Check the wiring harness between power window relay connector C-207 (terminal 5) and fusible link (5).**

- Check the power supply line for open circuit and short circuit.

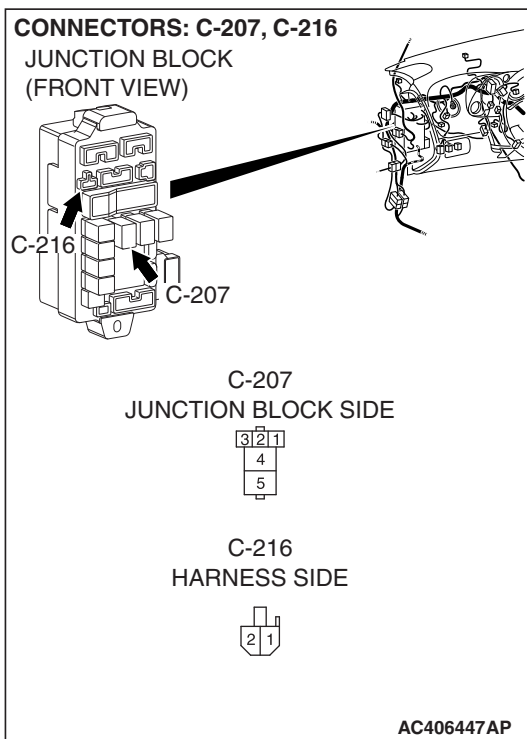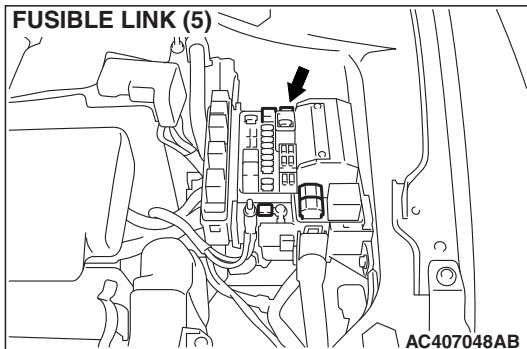



## CONNECTOR: C-24

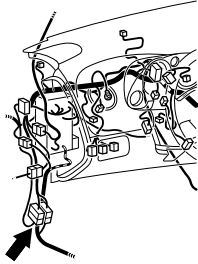

AC406442 AP

**NOTE:** Also check junction block connector C-216 and intermediate connector C-24 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If junction block connector C-216 or intermediate connector C-24 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.


**Q: Is the wiring harness between power window relay connector C-207 (terminal 5) and fusible link (5) in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The power windows function should now work normally.

**STEP 7. Check the ground circuit to the power window relay. Measure the resistance at power window relay connector C-207.**


(1) Disconnect power window relay connector C-207 and measure the resistance available at the junction block side of the connector.

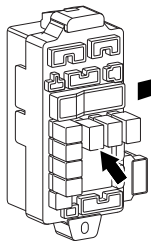CONNECTOR: C-207  
JUNCTION BLOCK  
(FRONT VIEW)

JUNCTION BLOCK SIDE



AC406446BA

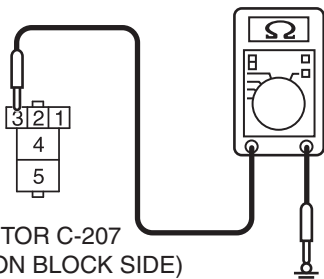CONNECTOR C-207  
(JUNCTION BLOCK SIDE)

AC209364PT

(2) Measure the resistance value between terminal 3 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**


**YES :** Go to Step 9.

**NO :** Go to Step 8.



**STEP 8. Check the wiring harness between power window relay connector C-207 (terminal 3) and ground.**

- Check the ground wire for open circuit.

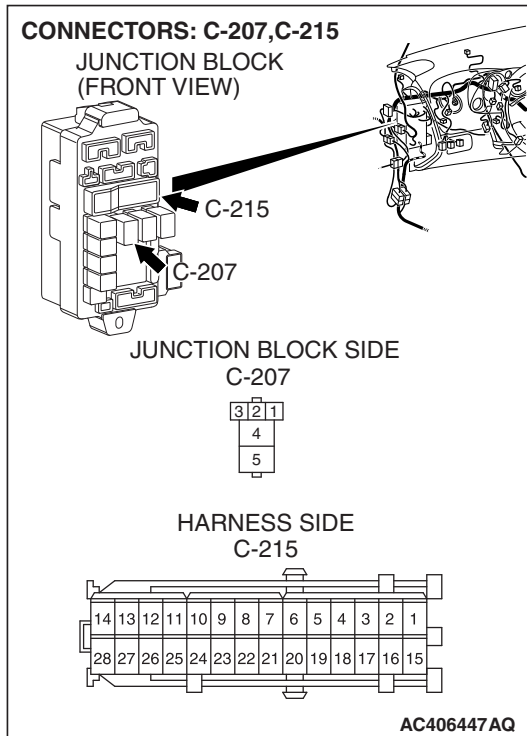

*NOTE: Also check junction block connector C-215 for loose, corroded or damaged terminals, or terminals pushed back in the connector. If junction block connector C-215 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*


**Q: Is the wiring harness between power window relay connector C-207 (terminal 3) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The power windows function should now work normally.



CONNECTOR: E-14

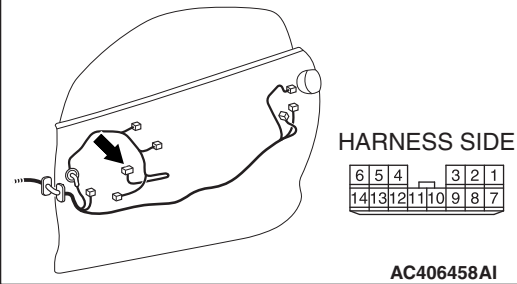


**STEP 9. Check power window main switch connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is power window main switch connector E-14 in good condition?**

**YES :** Go to Step 10.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The power windows function should now work normally.

CONNECTOR: E-14

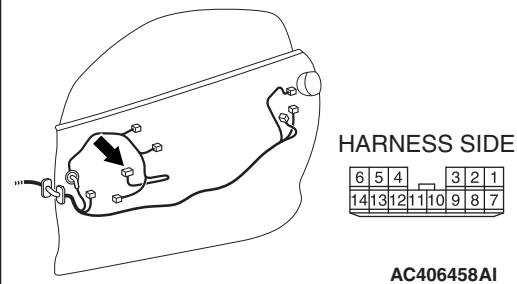

**STEP 10. Check the ground circuit to the power window main switch. Measure the resistance at power window main switch connector E-14.**

(1) Disconnect power window main switch connector E-14 and measure the resistance available at the harness side of the connector.


(2) Measure the resistance value between terminal 12 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 12.



**NO :** Go to Step 11.

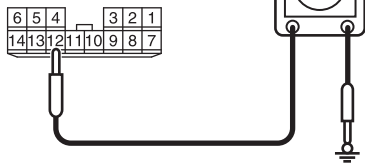CONNECTOR E-14  
(HARNESS SIDE)



**STEP 11. Check the wiring harness between power window main switch E-14 (terminal 12) and ground.**

- Check the ground wire for open circuit.

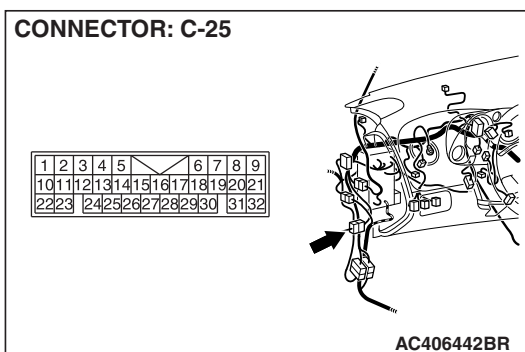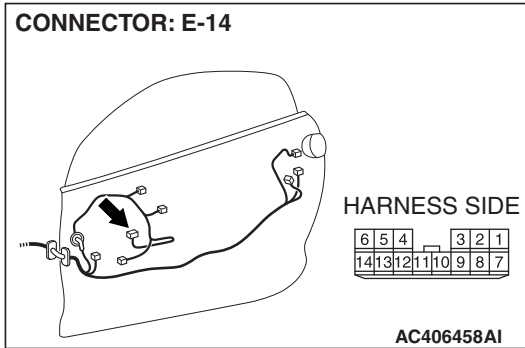

*NOTE: Also check intermediate connector C-25 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If intermediate connector C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*


**Q: Is the wiring harness between power window main switch connector E-14 (terminal 12) and ground in good condition?**

**YES :** No action is necessary and testing is complete.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The power windows function should now work normally.

**STEP 12. Check the battery power supply circuit to the power window main switch. Measure the voltage at power window main switch connector E-14.**

- (1) Disconnect power window main switch connector E-14 and measure the voltage available at the harness side of the connector.
- (2) Turn the ignition switch to "ON" position.

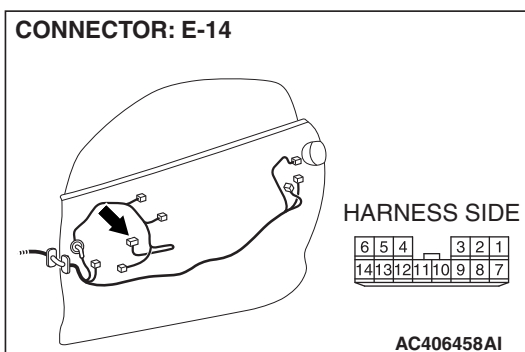



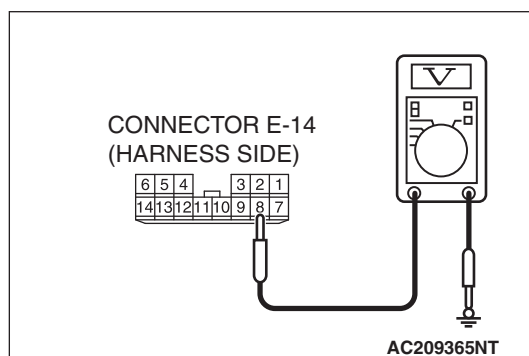


- (3) Measure the voltage between terminal 8 and ground.
- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Replace the power window main switch. The power windows function should now work normally.

**NO :** Go to Step 13.

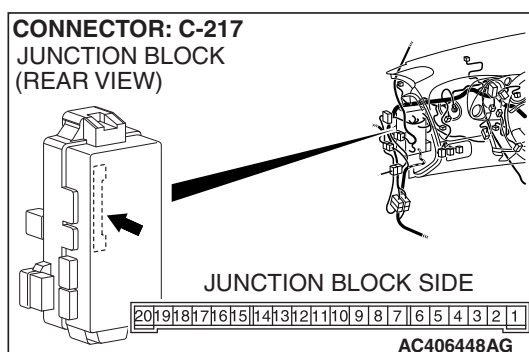


**STEP 13. Check ETACS-ECU connector C-217 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-217 in good condition?**

**YES :** Go to Step 14.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The power windows function should now work normally.

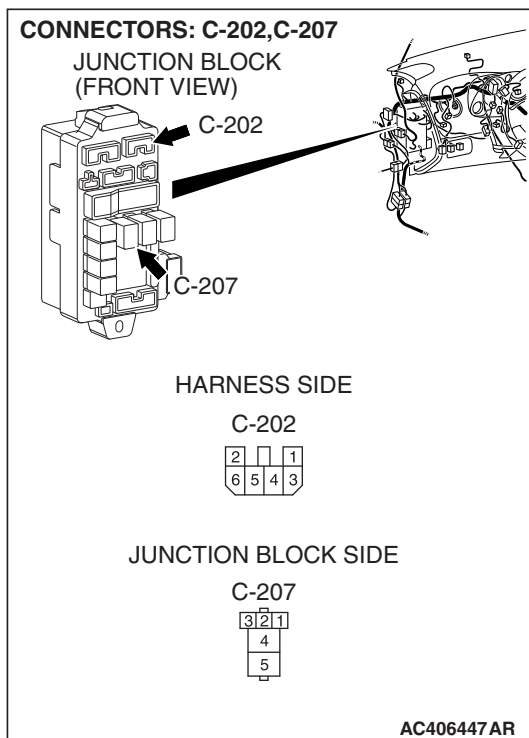


**STEP 14. Check the wiring harness between power window relay connector C-207 (terminal 4) and power window main switch connector E-14 (terminal 8).**


- Check the communication lines for open circuit and short circuit.



CONNECTOR: E-14

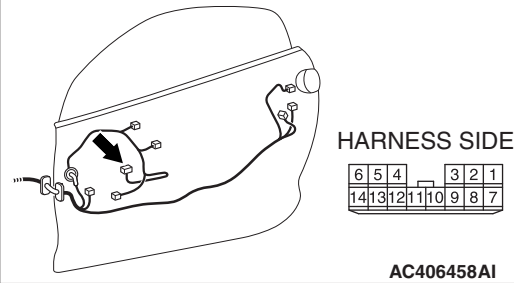

CONNECTOR: C-25

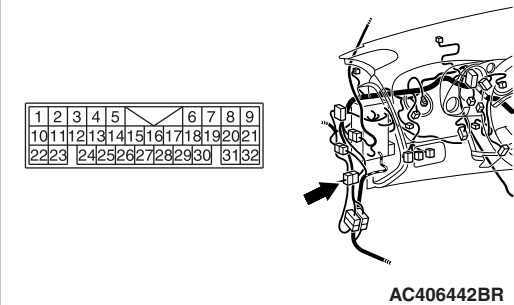

*NOTE: Also check junction block connector C-202 and intermediate connectors C-25 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If junction block connector C-202 or intermediate connector C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the wiring harness between power window relay connector C-207 (terminal 4) and power window main switch connector E-14 (terminal 8) in good condition?**


**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table P.54A-19. The power windows function should now work normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The power windows function should now work normally.



**INSPECTION PROCEDURE D-2: Power Window: The power window timer function does not work normally.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

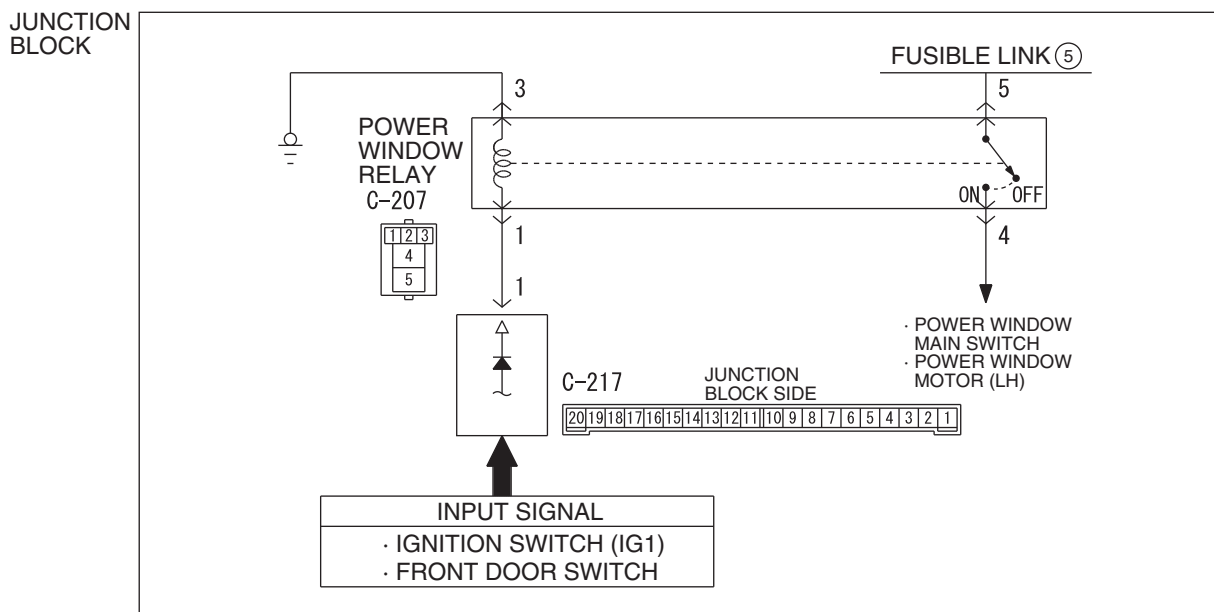**Power Window Timer Function Circuit**

W6P54M093A

**CIRCUIT OPERATION**

The ETACS-ECU operates the power window timer function according to the following signals:

- Ignition switch (IG1)
- Front door switch

**TECHNICAL DESCRIPTION (COMMENT)**

If the power window timer function does not work normally, its input circuit, the ETACS-ECU or the front-ECU may be defective.

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1.** Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.

Check the ETACS-ECU.

**⚠ CAUTION**



To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate the scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System Select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menu for the "ETACS ECU" menu.



**Q: Is "OK" displayed for the "ETACS ECU" menu?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

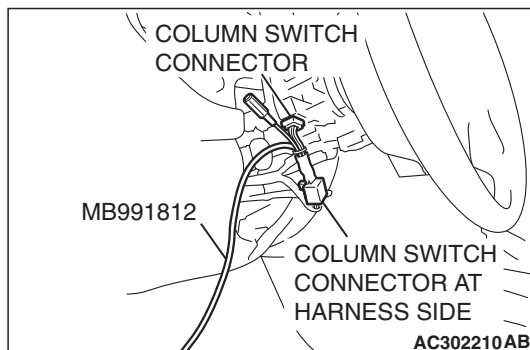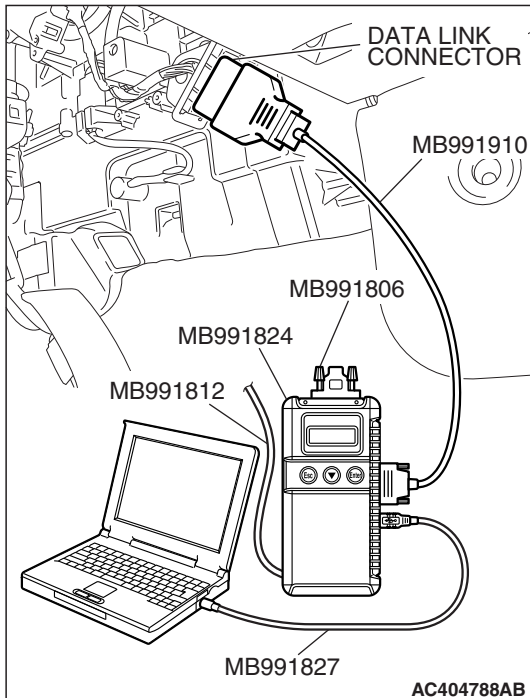



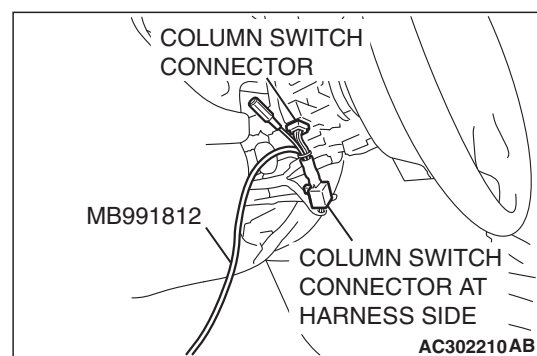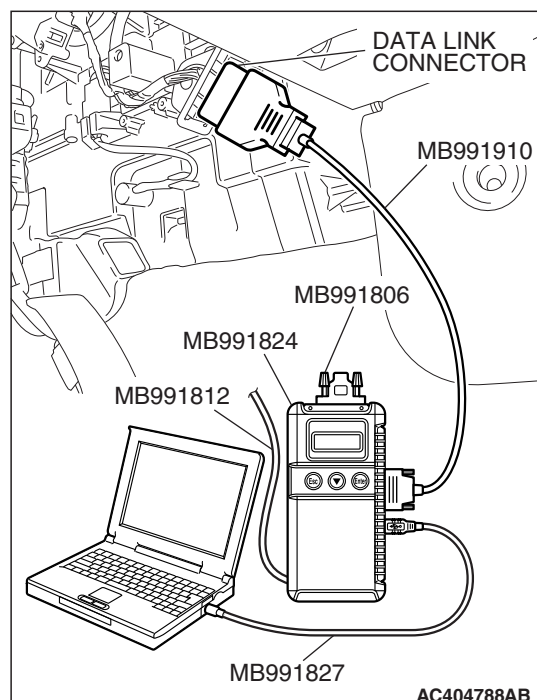

## STEP 2. Check the input signal by using "DATA LIST" menu of the SWS monitor.

Turn the ignition switch to the "LOCK (OFF)" position before checking input signals from the ignition switch (IG1).

- (1) Operate scan tool MB991958 according to the procedure below to display "ETACS ECU."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "ETACS ECU."
- (2) Check that normal conditions are displayed for the items described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 30	IG SW (IG1)	OFF
ITEM 32	FRONT DOOR SW	

**Q: Does the scan tool MB991958 display the items "IG SW (IG1)", "FRONT DOOR SW" as normal condition?**

**Normal condition displayed for all the items :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the power window timer works normally.


**Normal condition is not displayed for "IG SW (IG1)" :** Refer to Inspection Procedure M-2 "ETACS-ECU does not receive any signal from the ignition switch (IG1) [P.54B-499](#)."

**Normal condition is not displayed for "FRONT DOOR SW" :** Refer to Inspection Procedure M-5 "ETACS-ECU does not receive any signal from the door switches [P.54B-512](#)."





**INSPECTION PROCEDURE D-3: Power Window: Only the door window (LH) does not work by operating the power window main switch.**

**Power Window (LH) Circuit**

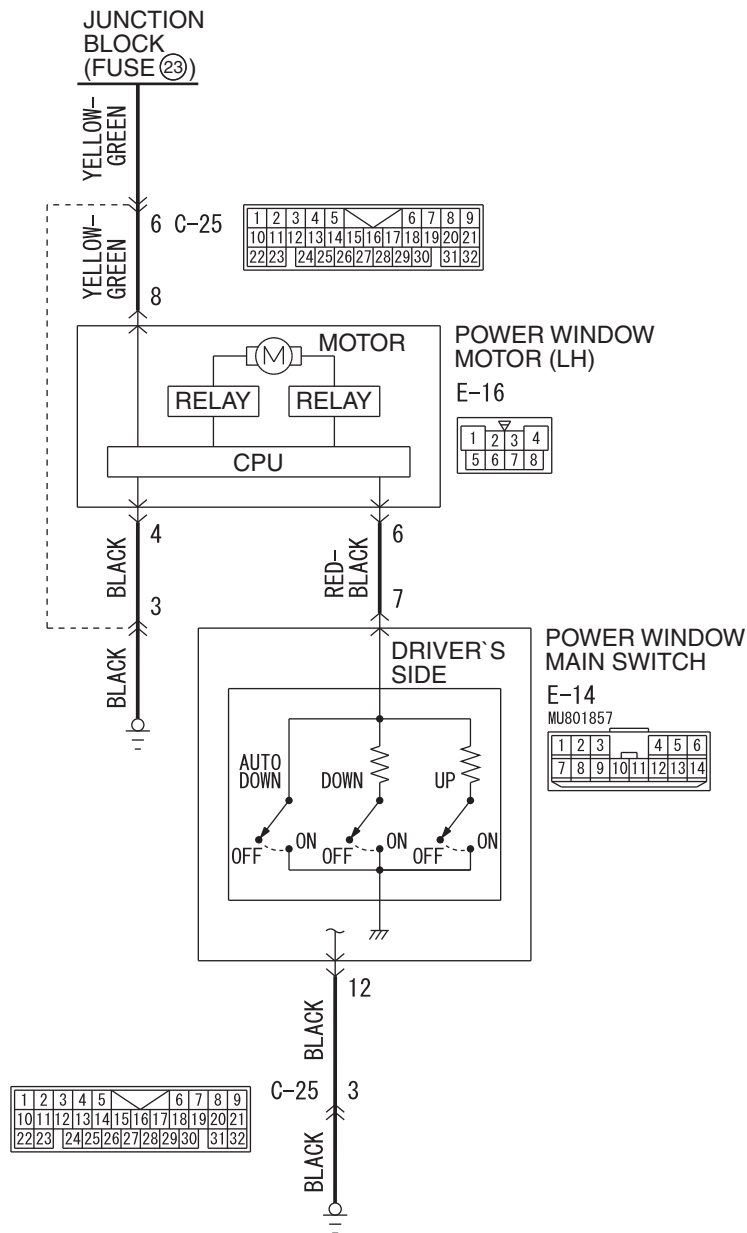


W6P54M094A  
AC712079 AB

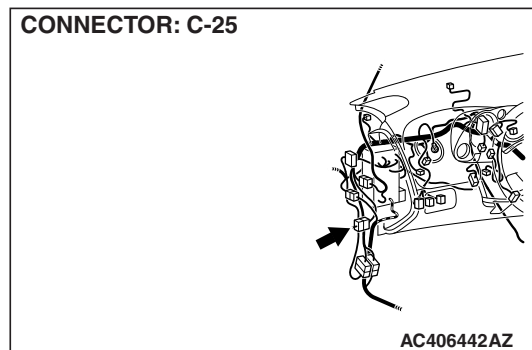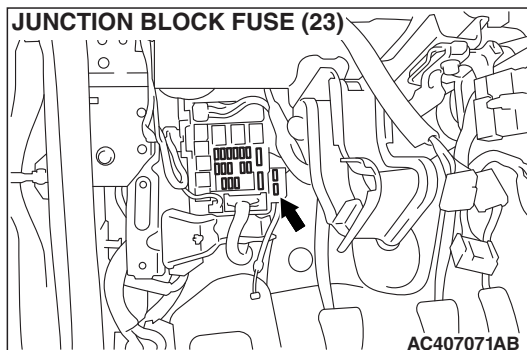



## CONNECTORS: E-14, E-16

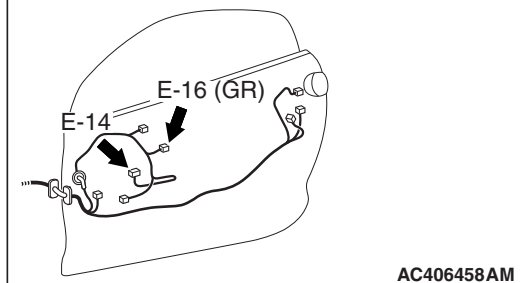**CIRCUIT OPERATION**

The power window motor (LH) receives a signal ("UP", "DOWN" or "AUTO DOWN") from the power window main switch and controls the power window (LH).

**TECHNICAL DESCRIPTION (COMMENT)**

The power window main switch or the power window motor (LH) may be defective.

**TROUBLESHOOTING HINTS**

- The power window main switch may be defective
- The power window motor (LH) may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Check power window motor (LH) connector E-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**


**Q: Is power window motor (LH) connector E-16 in good condition?**

**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection


**P.00E-2.** When the power window main switch is operated, the front power window (LH) should lower or raise normally.

## CONNECTOR:E-16

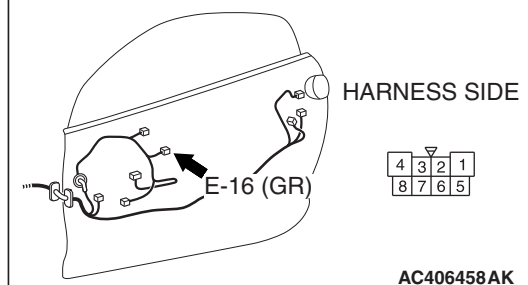



CONNECTOR:E-16

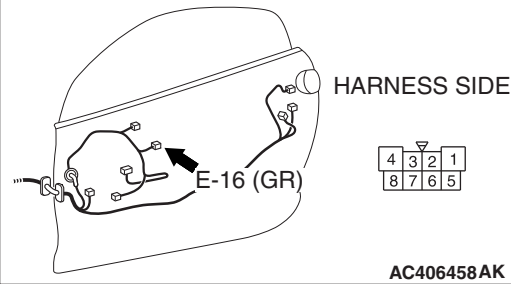

**STEP 2. Check the battery power supply circuit to the power window motor (LH). Measure the voltage at power window motor (LH) connector E-16.**

(1) Disconnect power window motor (LH) connector E-16 and measure the voltage available at the harness side of the connector.

(2) Measure the voltage between terminal 8 and ground.


- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 4.

**NO :** Go to Step 3.


CONNECTOR E-16  
(HARNESS SIDE)

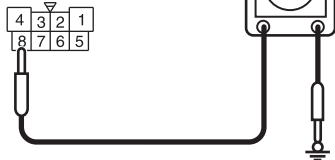


**STEP 3. Check the wiring harness between power window motor (LH) connector E-16 (terminal 8) and junction block (fuse 23).**

- Check the power supply line for open circuit and short circuit.

JUNCTION BLOCK FUSE (23)

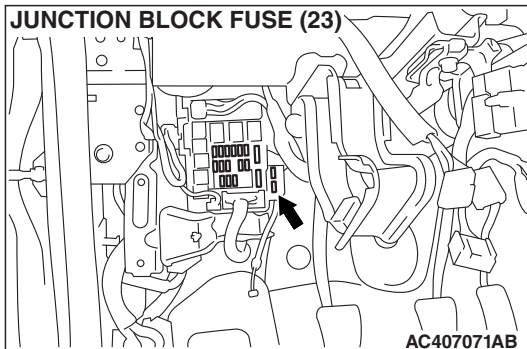


CONNECTOR:E-16

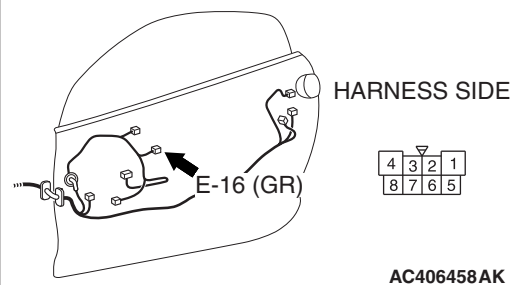



## CONNECTOR: C-25

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32				

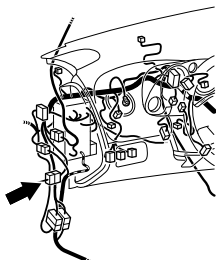

AC406442BR

**NOTE:** Also check intermediate connector C-25 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If intermediate connector C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**Q: Is the wiring harness between power window motor (LH) connector E-16 (terminal 8) and junction block (fuse 23) in good condition?**


**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The power windows function should now work normally.

**STEP 4. Check the ground circuit to the power window motor (LH). Measure the resistance at power window motor (LH) connector E-16.**

(1) Disconnect power window motor (LH) connector E-16 and measure the resistance available at the harness side of the connector.

## CONNECTOR: E-16

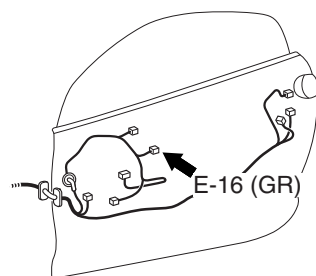

HARNESS SIDE

4	3	2	1
8	7	6	5

AC406458AK

(2) Measure the resistance value between terminal 4 and ground.


- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 6.

**NO :** Go to Step 5.

CONNECTOR E-16  
(HARNESS SIDE)


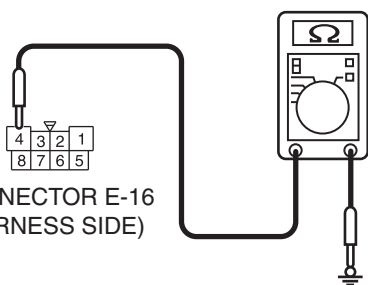


AC209364 PV



**STEP 5. Check the wiring harness between power window motor (LH) connector E-16 (terminal 4) and ground.**

- Check the ground wire for open circuit.

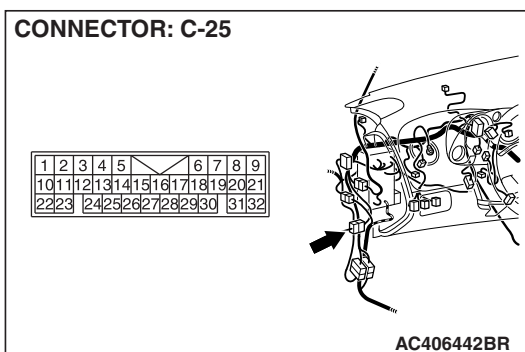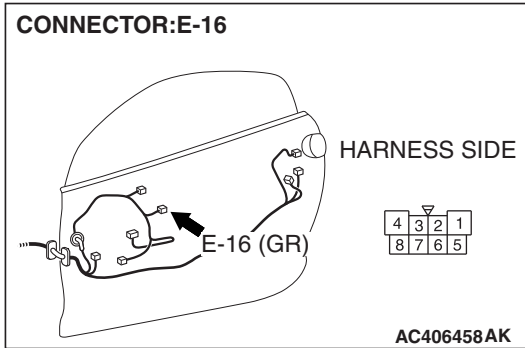

*NOTE: Also check intermediate connector C-25 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If intermediate connector C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between power window motor (LH) connector E-16 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The power windows function should now work normally.

**STEP 6. Check power window main switch connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**


**Q: Is power window main switch connector E-14 in good condition?**

**YES :** Go to Step 7.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). When the power window main switch is operated, the front power window (LH) should lower or raise normally.

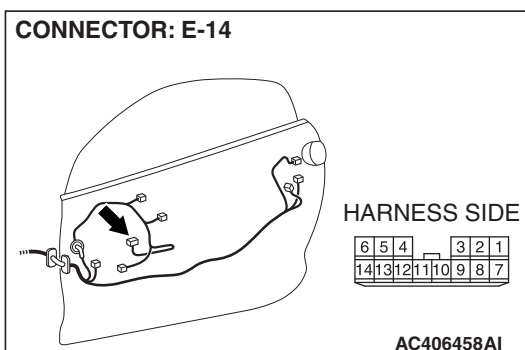

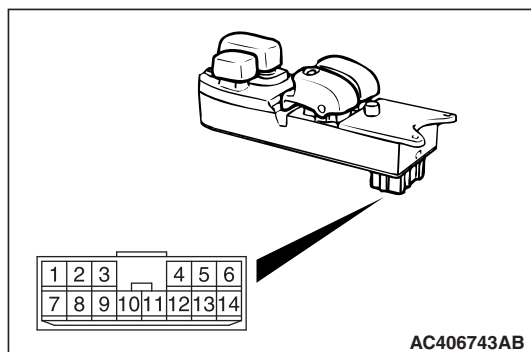


**STEP 7. Check the power window main switch.**

- (1) Remove the power window main switch. Refer to GROUP 42, Door, Door Glass and Regulator P.42-82.
- (2) Check continuity while power window main switch is moved to "UP" and "DOWN" position.

SWITCH POSITION (LH)	TESTER CONNECTION	SPECIFIED CONDITION
UP	7 – 12	Approximately 820 ohms
OFF	7 – 12	Open circuit
DOWN	7 – 12	Approximately 270 ohms
AUTO DOWN	7 – 12	Continuity exists (2 ohms or less)


**Q: Is the power window main switch normal?****YES :** Go to Step 8.**NO :** Replace the power window main switch. When the power window main switch is operated, the front power window (LH) should lower or raise normally.**STEP 8. Check the wiring harness between power window main switch connector E-14 (terminal 7) and power window motor (LH) connector E-16 (terminal 6).**

- Check the communication lines for open circuit and short circuit.

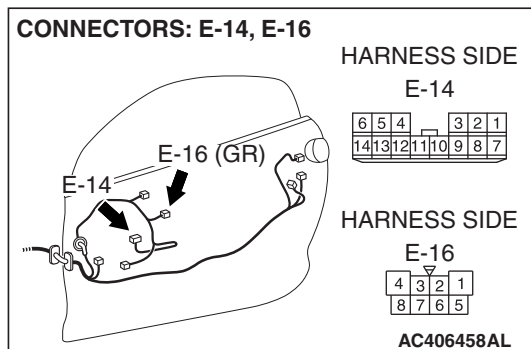**Q: Is the wiring harness between power window main switch connector E-14 (terminal 7) and power window motor (LH) connector E-16 (terminal 6) in good condition?****YES :** No action is necessary and testing is complete.**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. When the power window main switch is operated, the front power window (LH) should lower or raise normally.








**INSPECTION PROCEDURE D-4: Power Window: Power window (RH) does not work normally by operating the power window sub switch.**

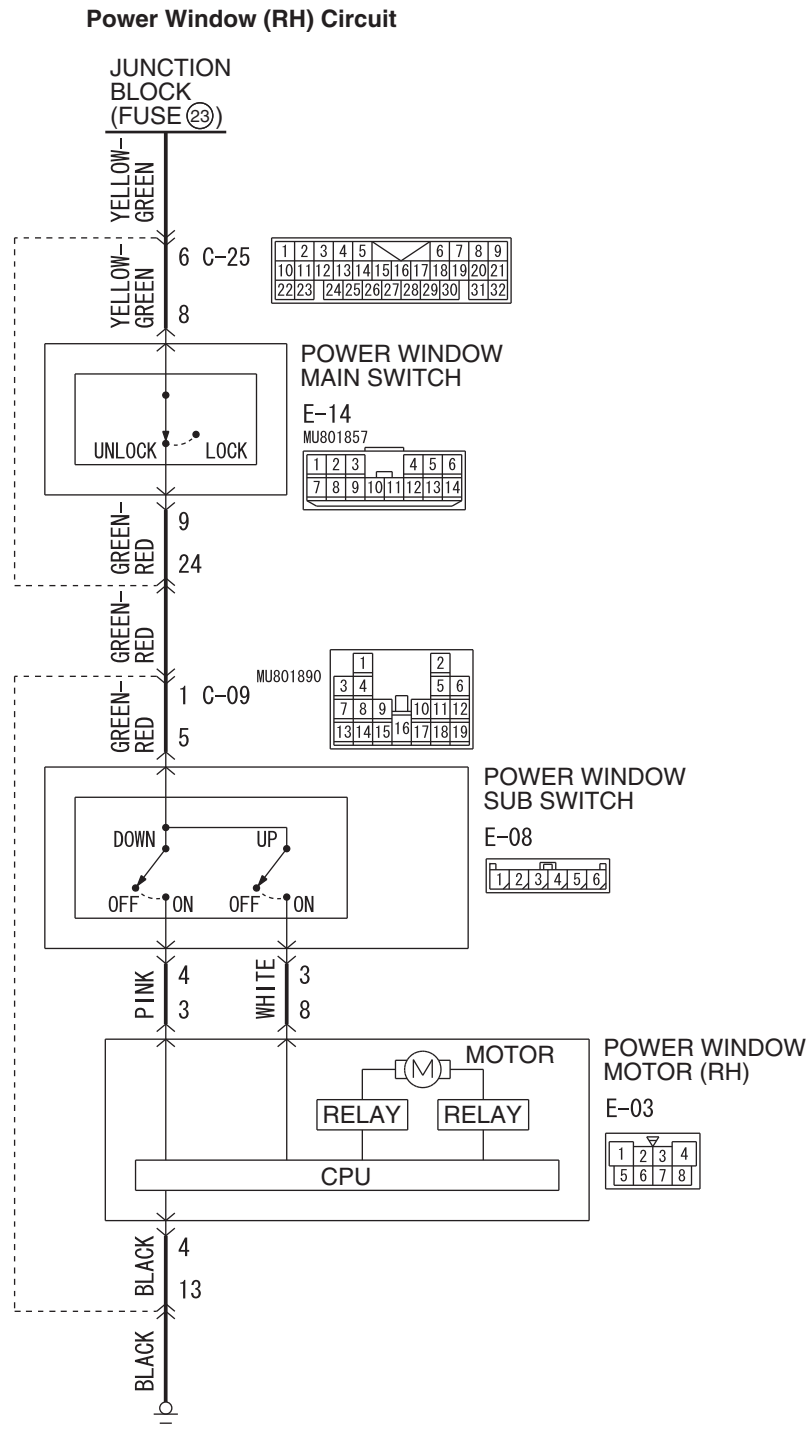

W6P54M095A



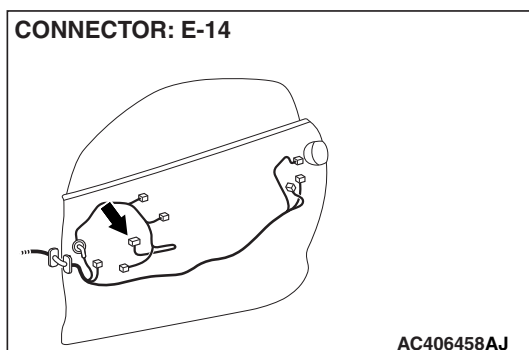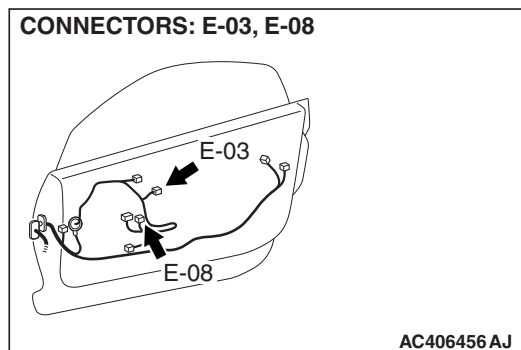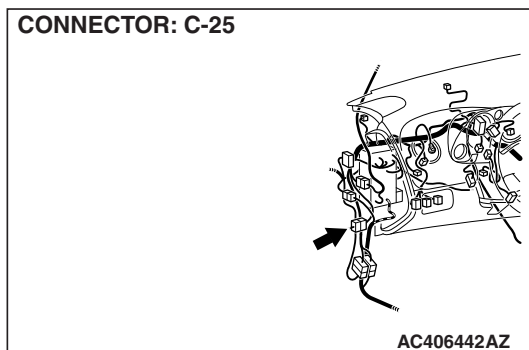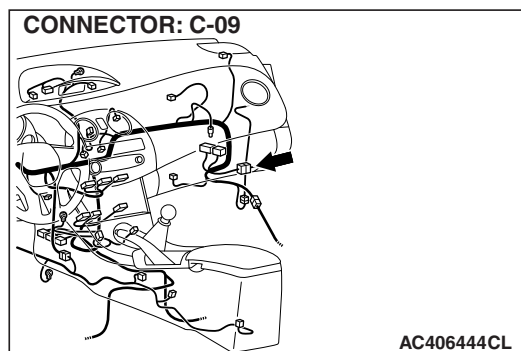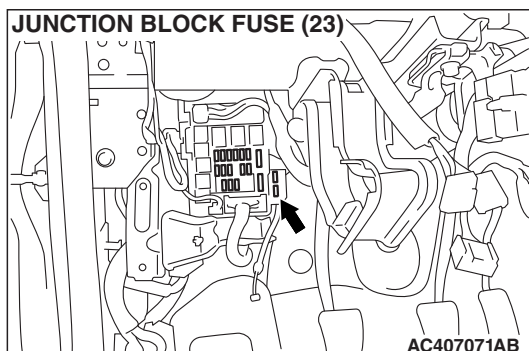

## CIRCUIT OPERATION

power window motor (RH) raise and lower the door windows when the passenger's sub switch is moved to "UP" or "DOWN" position.

## TECHNICAL DESCRIPTION (COMMENT)

A power window sub switch or power window motor (RH) may be defective. Or, the power window lock switch (incorporated in the power window main switch) may remain pressed in the "LOCK" position.

## TROUBLESHOOTING HINTS

- The power window main switch may be defective
- The power window sub switch may be defective
- The power window motor (RH) may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe



**STEP 1. Check the power window lock switch.**

**Q: Is the power window lock switch in the "UNLOCK" position?**

**YES :** Go to Step 2.


**NO :** Operate the power window lock switch to the "UNLOCK" position. When the power window sub switch is operated, the power window (RH) should raise and lower normally.

**STEP 2. Check power window main switch connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is power window main switch connector E-14 in good condition?**


**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). When the power window sub switch is operated, the power window (RH) should raise and lower normally.

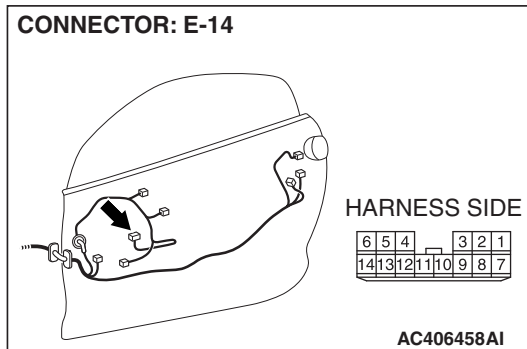

**STEP 3. Check the power window lock switch for continuity.**

- (1) Remove the power window main switch. Refer to GROUP 42, Door, Door Glass and Regulator [P.42-82](#).
- (2) Check continuity when the power window lock switch is operated to "LOCK" or "UNLOCK" position.

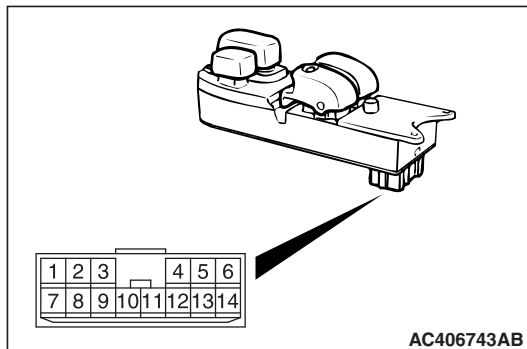

SWITCH POSITION	TESTER CONNECTION	SPECIFIED CONDITION
LOCK	8 – 9	Open circuit
UNLOCK	8 – 9	Continuity exists (2 ohms or less)


**Q: Is the power window lock switch normal?**

**YES :** Go to Step 4.

**NO :** Replace the power window main switch. When the power window sub switch is operated, the power window (RH) should raise and lower normally.



CONNECTOR: E-08

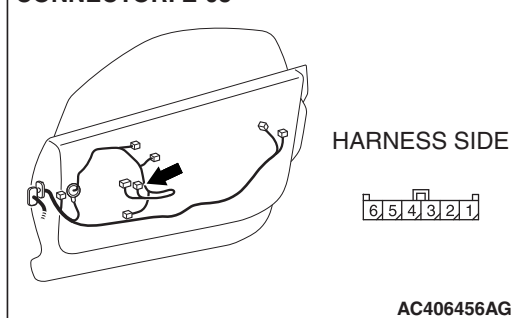

**STEP 4. Check power window sub switch connector E-08 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**


**Q: Is power window sub switch connector E-08 in good condition?**

**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). When the power window sub switch is operated, the power window (RH) should raise and lower normally.

**STEP 5. Check the front power window sub switch for continuity.**

- (1) Remove the front power window sub switch. Refer to GROUP 42, Door, Door Glass and Regulator [P.42-82](#).
- (2) Check continuity when the front power window sub switch is operated to "UP" or "DOWN" position.

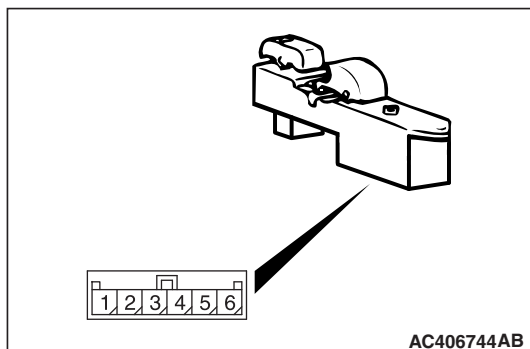

SWITCH POSITION	TESTER CONNECTION	SPECIFIED CONDITION
UP	3 – 5	Continuity exists (2 ohms or less)
OFF	3 – 5, 4 – 5	Open circuit
DOWN	4 – 5,	Continuity exists (2 ohms or less)



**Q: Is the front power window sub switch normal?**

**YES :** Go to Step 6.

**NO :** Replace the power window sub switch. When the power window sub switch is operated, the power window (RH) should raise and lower normally.



**CONNECTOR: E-08**

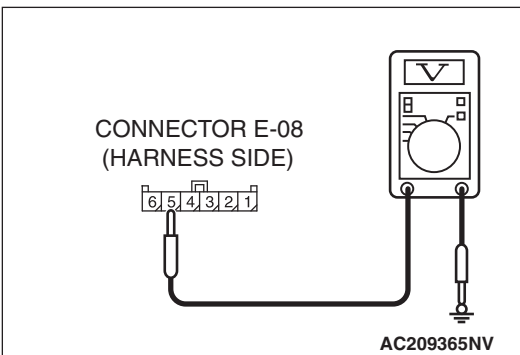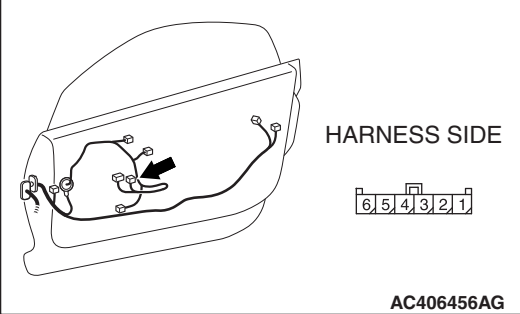

**STEP 6. Check the battery power supply circuit to the power window sub switch. Measure the voltage at power window sub switch connector E-08.**

(1) Disconnect power window sub switch connector E-08 and measure the voltage available at the wiring harness side of the connector.

(2) Turn the ignition switch to "ON" position.

(3) Measure the voltage between terminal 5 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage).


**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 8.


**NO :** Go to Step 7.

**STEP 7. Check the wiring harness between power window sub switch E-08 (terminal 5) and junction block (fuse 23).**

- Check the power supply line for open circuit and short circuit.

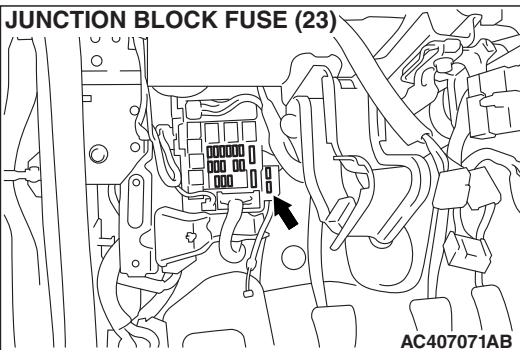


**CONNECTOR: E-08**

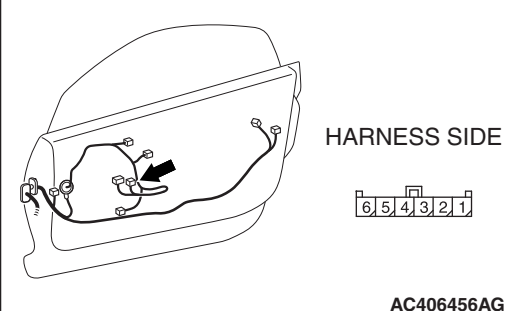



## CONNECTOR: C-09

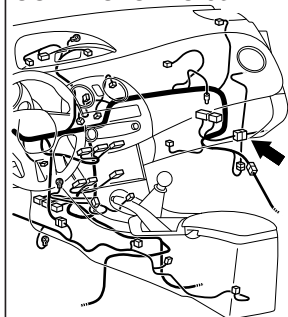

1	2
3	4
5	6
7	8
9	10
11	12
13	14
15	16
17	18
19	

AC406444CK

**NOTE:** Also check intermediate connectors C-09 and C-25 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If intermediate connector C-09 or C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.


**Q:** Is the wiring harness between power window sub switch E-08 (terminal 5) and junction block (fuse 23) in good condition?

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. When the power window sub switch is operated, the power window (RH) should raise and lower normally.

## CONNECTOR: C-25

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32				

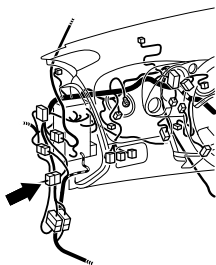

AC406442BR


**STEP 8. Check power window motor (RH) connector E-03 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q:** Is power window motor (RH) connector E-03 in good condition?

**YES :** Go to Step 9.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection P.00E-2. When the power window sub switch is operated, the power window (RH) should raise and lower normally.

## CONNECTOR: E-03

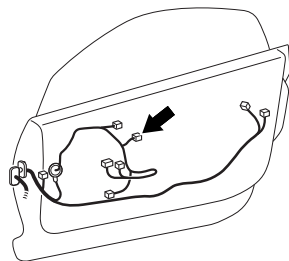

HARNESS SIDE


4	3	2	1
8	7	6	5

AC406456AH

**STEP 9. Check the ground circuit to the power window motor (RH). Measure the resistance at power window motor (RH) connector E-03.**

(1) Disconnect power window motor (RH) connector E-03 and measure the resistance available at the harness side of the connector.

## CONNECTOR: E-03

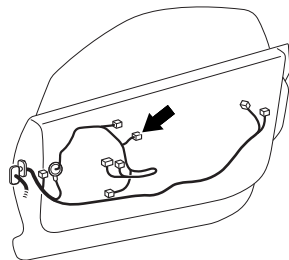


HARNESS SIDE

4	3	2	1
8	7	6	5

AC406456AH



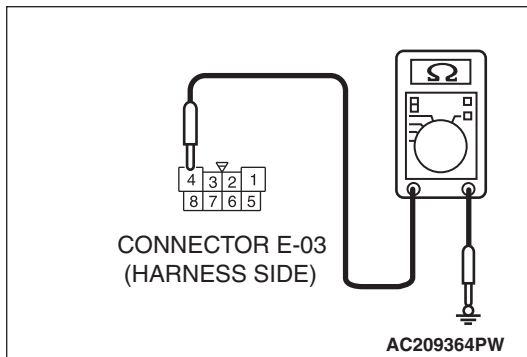

- (2) Measure the resistance value between terminal 4 and ground.

- The resistance should be 2 ohms or less.



**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 11.

**NO :** Go to Step 10.

**STEP 10. Check the wiring harness between power window motor (RH) connector E-03 (terminal 4) and ground.**

- Check the ground wire for open circuit.

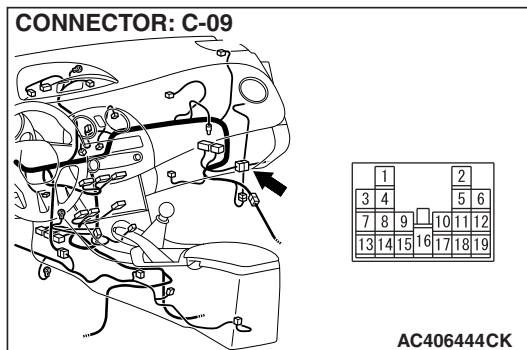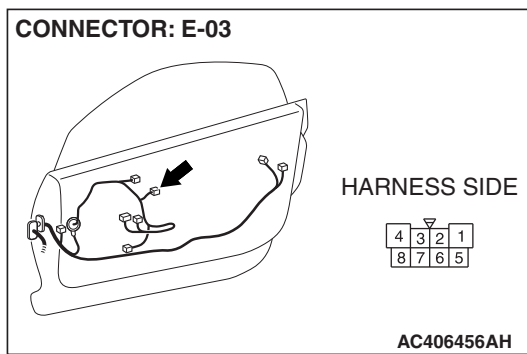


*NOTE: Also check intermediate connector C-09 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If intermediate connector C-09 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between power window motor (RH) connector E-03 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. When the power window sub switch is operated, the power window (RH) should raise and lower normally.



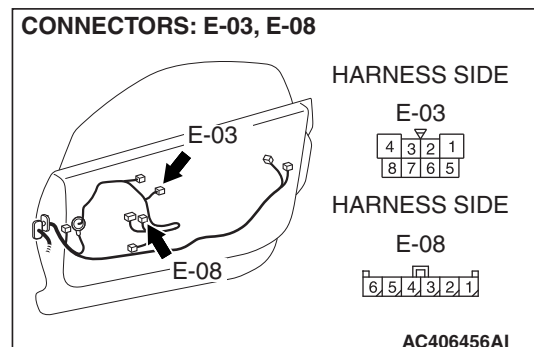


**STEP 11. Check the wiring harness between power window sub switch connector E-08 (terminals 3 and 4) and power window motor (RH) connector E-03 (terminals 8 and 3).**

- Check the communication lines for open circuit and short circuit.





**Q: Is the wiring harness between power window sub switch connector E-08 (terminals 3 and 4) and power window motor (RH) connector E-03 (terminals 8 and 3) in good condition?**

- YES :** Replace the power window motor (RH). When the power window sub switch is operated, the power window (RH) should raise and lower normally.
- NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. When the power window sub switch is operated, the power window (RH) should raise and lower normally.

**INSPECTION PROCEDURE D-5: Power Window: Power window (RH) does not work normally by operating the power window main switch.**

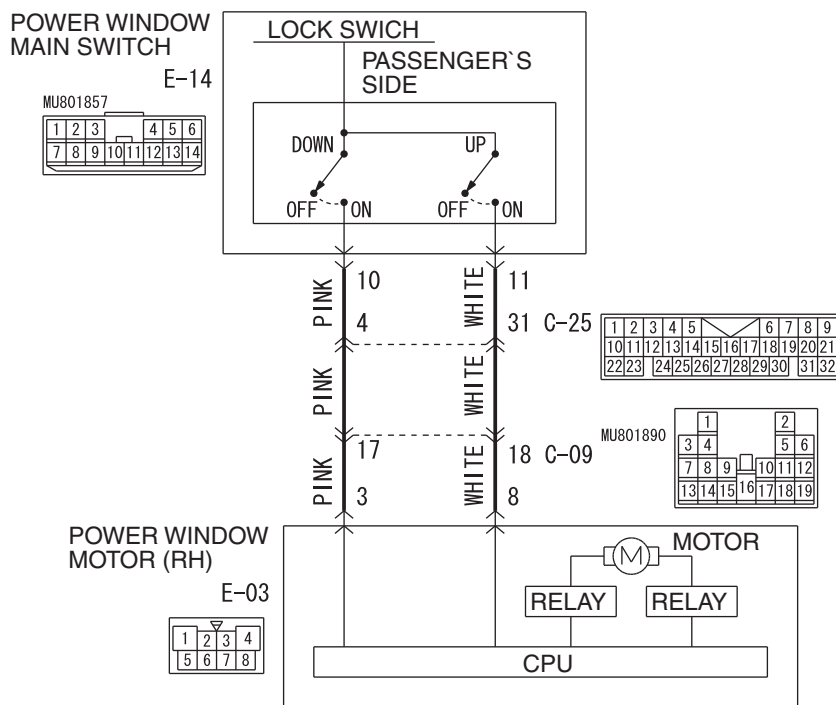



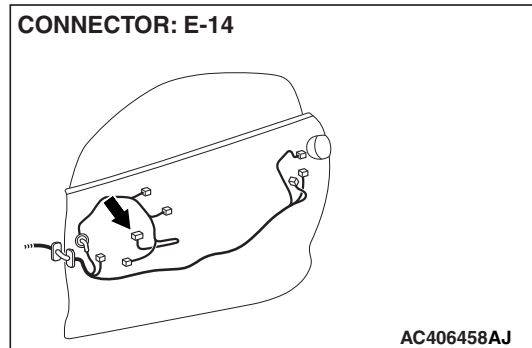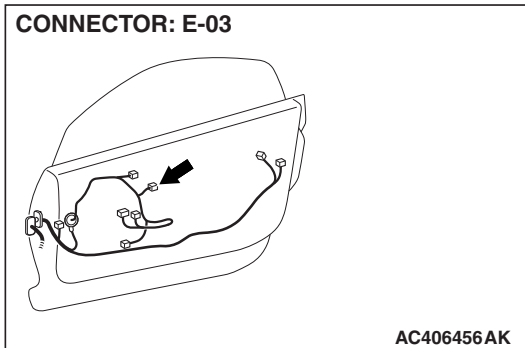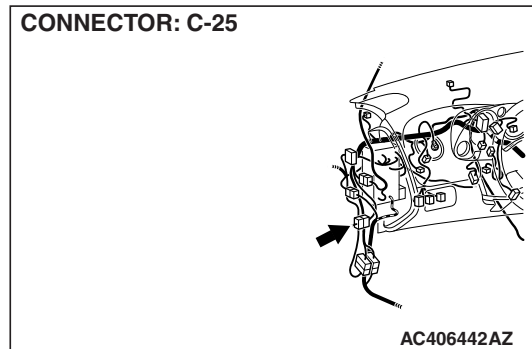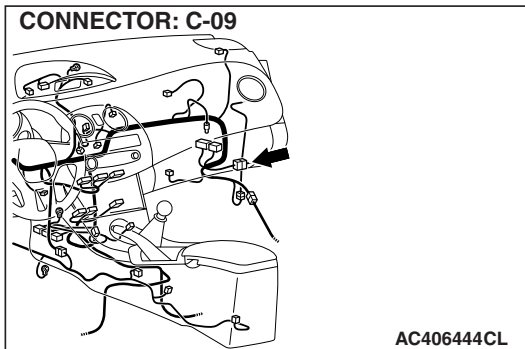

## CIRCUIT OPERATION

When you operate power window switch for passengers (incorporated in the power window main switch), the power window motor (RH) operates, opening or closing power window (RH).

## TECHNICAL DESCRIPTION (COMMENT)

If the power window (RH) opens and closes normally when power window sub switch is operated, the power window main switch may be defective.

## TROUBLESHOOTING HINTS

- The power window main switch may be defective
- The power window motor (RH) may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

## DIAGNOSIS



**STEP 1.** Check that power window sub switches operate normally.

**Q:** A power window (RH) cannot work by using the power window main switch. Can you operate the power window (RH) by using the power window sub switch?

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure D-4 "Power Window: Power window (RH) does not work normally by operating the power window sub switch [P.54B-169](#)."

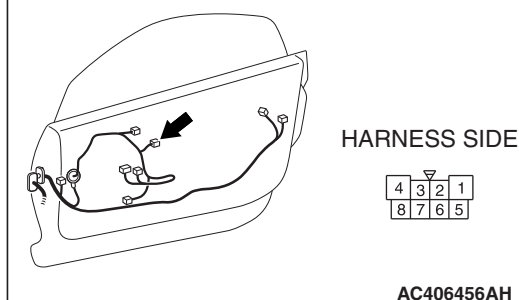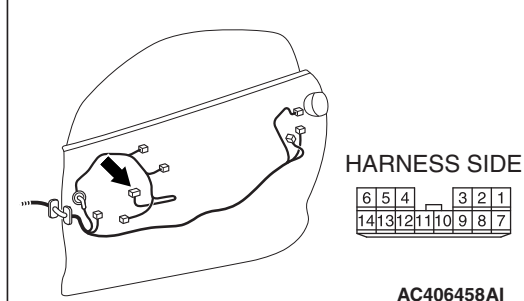

**CONNECTOR: E-03****CONNECTOR: E-14**

**STEP 2.** Check power window main switch connector E-14 and power window motor (RH) connector E-03 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

**Q:** Are power window main switch connector E-14 or power window motor (RH) connector E-03 in good condition?



**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

**P.00E-2.** When the power window main switch is operated, the power window (RH) should raise and lower normally.


**STEP 3.** Check the wiring harness between power window main switch connector E-14 (terminals 10 and 11) and power window motor (RH) connector E-03 (terminals 3 and 8).

- Check the communication lines for open circuit and short circuit.

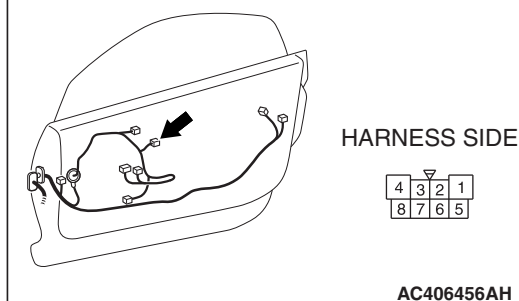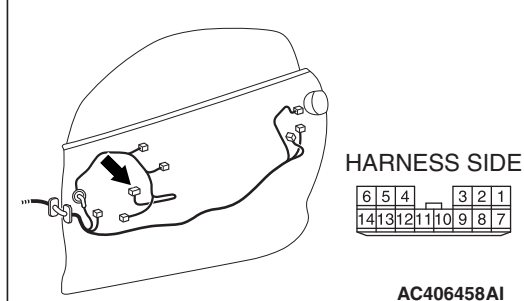**CONNECTOR: E-03****CONNECTOR: E-14**




**CONNECTOR: C-09**

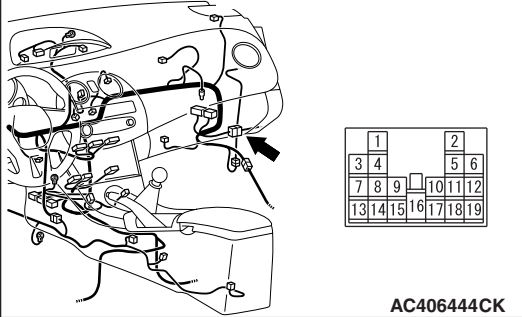

*NOTE: Also check intermediate connectors C-09 and C-25 for loose, corroded or damaged terminals, or terminals pushed back in the connectors. If intermediate connector C-09 or C-25 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**CONNECTOR: C-25**

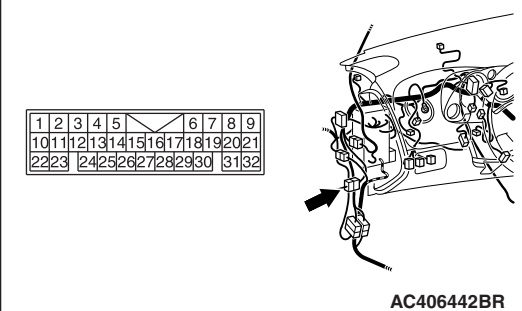

**Q: Is the wiring harness between power window main switch connector E-14 (terminals 10 and 11) and power window motor (RH) connector E-03 (terminals 3 and 8) in good condition?**

**YES :** Replace the power window main switch.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. When the power window main switch is operated, the power window (RH) should raise and lower normally.

## KEYLESS ENTRY SYSTEM

### GENERAL DESCRIPTION CONCERNING THE KEYLESS ENTRY SYSTEM

M1549022000352


The following ECUs affect the functions and control of the keyless entry system.

FUNCTION	CONTROL ECU
Keyless entry hazard answerback function	ETACS-ECU
Keyless entry horn answerback function	ETACS-ECU
Liftgate unlock function	ETACS-ECU
Timed locking mechanism	ETACS-ECU


## KEYLESS ENTRY SYSTEM

### KEYLESS ENTRY HAZARD ANSWERBACK FUNCTION

If the keyless entry transmitter is used to send a lock signal to the ETACS-ECU, all doors are locked and the hazard warning lights flash once. If an unlock signal is sent, the driver's door is unlocked first, and if a second signal is sent, all doors are unlocked. Each time the unlock signal is sent, the hazard warning lights flash twice.

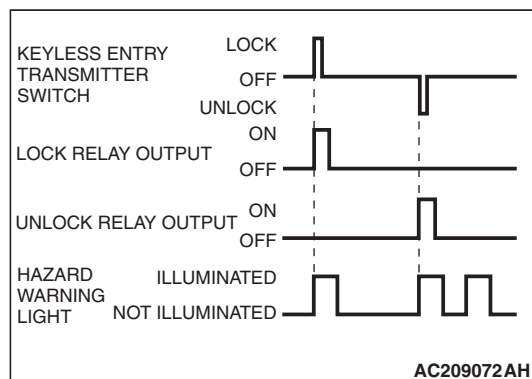

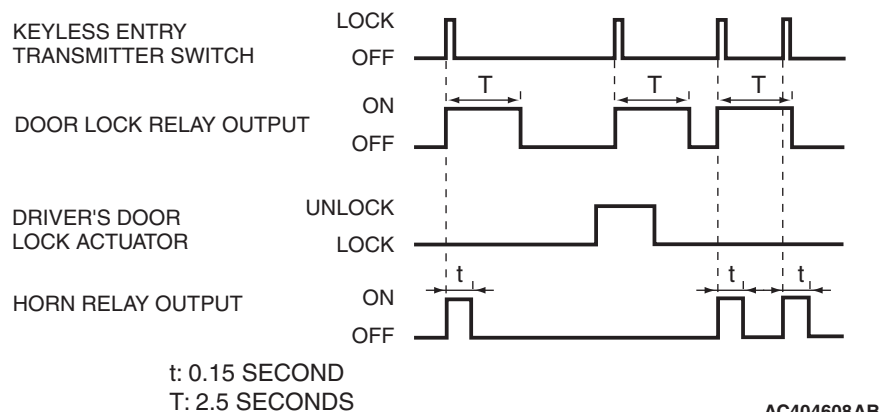

**KEYLESS ENTRY HORN ANSWERBACK  
FUNCTION**


When the lock signal from the keyless entry transmitter is received into ETACS-ECU, all doors are locked and the horn sounds. If the driver's door cannot be locked even when the keyless entry transmitter is operated, the horn does not sound.

**LIFTGATE UNLOCK FUNCTION**

Press the "LIFTGATE" button twice within 5 seconds and the liftgate will be unlocked.

**TIMED LOCKING MECHANISM**

After unlocking the doors with the keyless entry transmitter, if no doors are opened, if the ignition key is not inserted or if the locking function is not operated, the ETACS-ECU automatically locks the doors in 30 seconds.

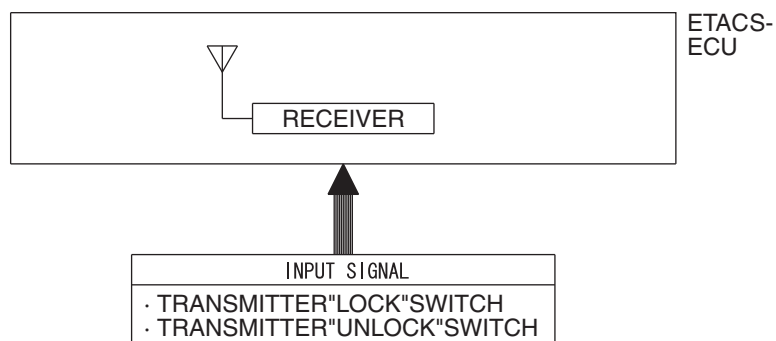**INSPECTION PROCEDURE E-1: Keyless Entry System: Keyless entry system does not operate.****Transmitter ("LOCK"/"UNLOCK") Input Signal**

W4P54M44AA



## CIRCUIT OPERATION

A receiver is incorporated in the ETACS-ECU. This receiver receives a lock or unlock signal from the transmitter.

## TROUBLESHOOTING HINTS

- The keyless entry transmitter may be defective
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

### STEP 1. Verify the central door locking system.

#### Q: Does the central door locking system work normally?

**YES** : Go to Step 2.

**NO** : Refer to Inspection Procedure C-1 "The central door locking system does not work at all [P.54B-119](#)."

### STEP 2. Check the input signal (by using the pulse check mode of the monitor).

Check input signals from the transmitter.

#### CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) Push the transmitter "LOCK" or "UNLOCK" button.
- (4) Check that scan tool MB991958 sounds


#### Q: When the transmitter "LOCK" or "UNLOCK" button is turned ON, does scan tool MB991958 sound?

**YES** : Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). All the doors can be locked or unlocked by means of the transmitter.



**NO** : Refer to Inspection Procedure N-7 "ETACS-ECU does not receive any signal from the lock, unlock, liftgate <ECLIPSE>, trunk lid <ECLIPSE SPYDER> or panic switch [P.54B-579](#)."

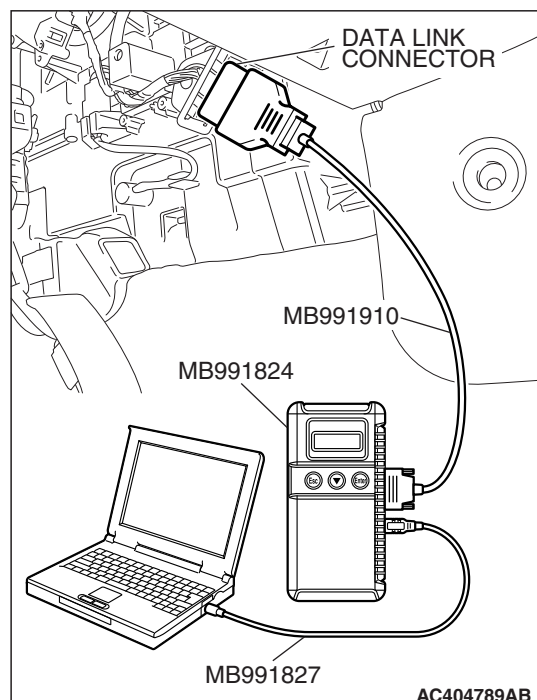

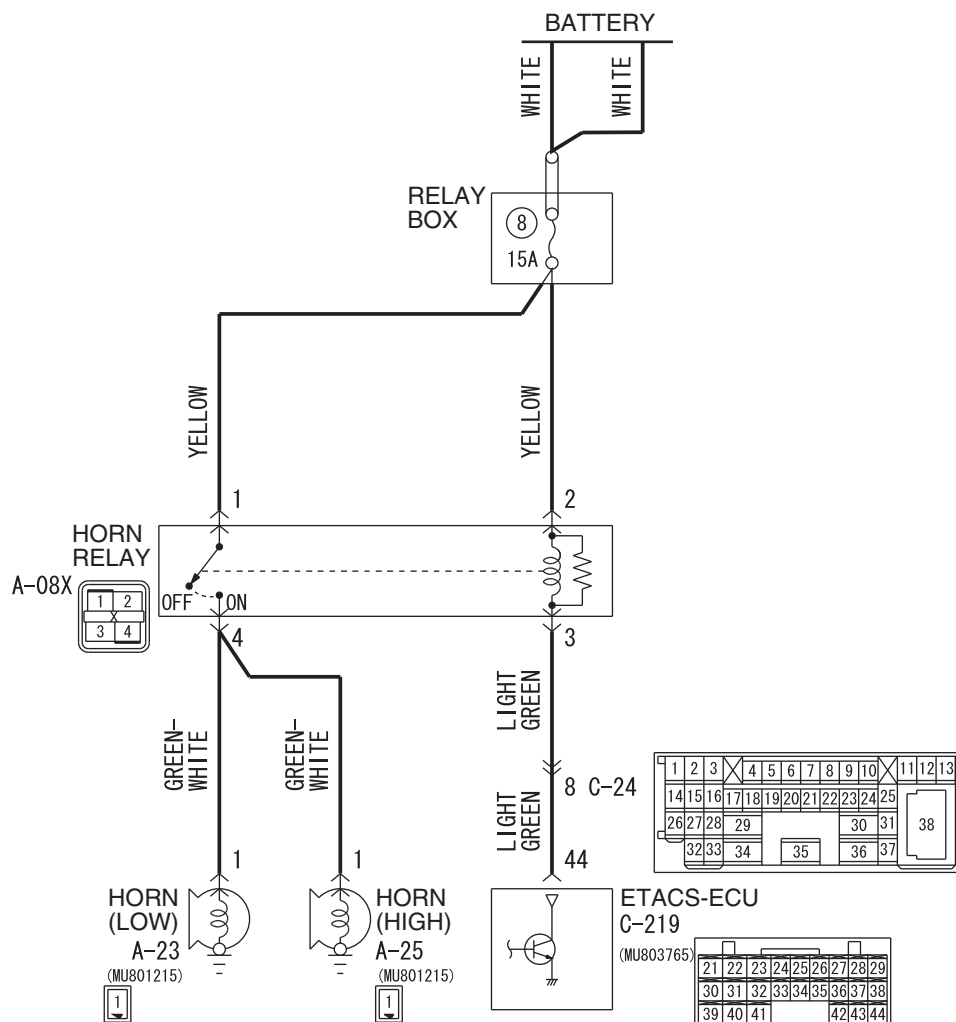


**INSPECTION PROCEDURE E-2: Keyless Entry System: The dome light, the turn-signal lights and the horn do not operate through the answerback function.****Horn Drive Circuit**

W6P54M053A

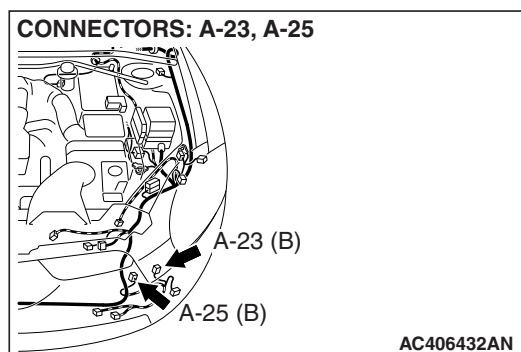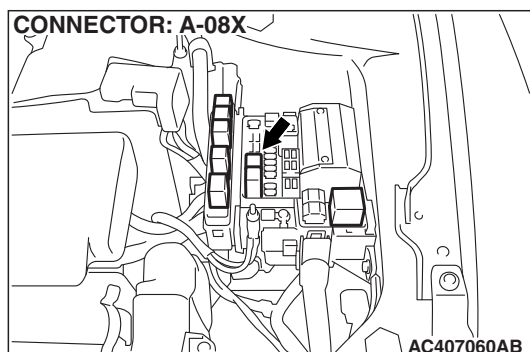




CONNECTOR: C-24

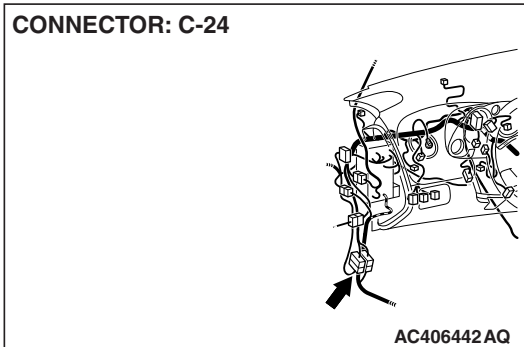

CONNECTOR: C-219  
JUNCTION BLOCK  
(REAR VIEW)

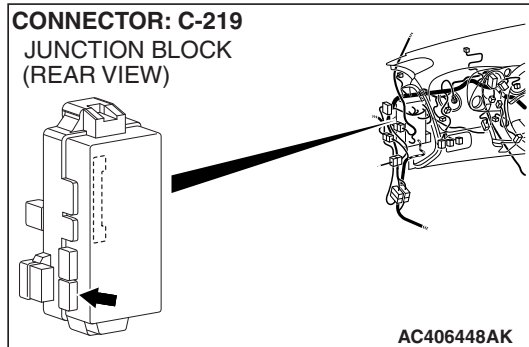

## CIRCUIT OPERATION

The ETACS-ECU operates the following functions when it receives lock or unlock signal from the transmitter:

- Dome light answerback function
- Turn-signal light answerback function
- Horn answerback function

## TECHNICAL DESCRIPTION (COMMENT)

The turn-signal lights and horn answerback functions can be disabled or enabled. However, the dome light answerback function cannot be disabled.

## TROUBLESHOOTING HINTS

- The turn-signal light may be defective
- The dome light may be defective
- The horn may be defective
- The ETACS-ECU may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

---

### STEP 1. Verify the keyless entry system.

#### Q: Does the keyless entry system work normally?

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure E-1 "Keyless entry system does not operate [P.54B-180](#)."

---

### STEP 2. Check the configuration function.

#### Q: Has the answerback function been enabled by means of the adjustment function?

**YES :** Go to Step 3.

**NO :** Enable the answerback function by means of the adjustment function. Verify that the answerback functions work normally.



---

**STEP 3. Verify trouble symptom.****Q: Which answerback function is defective?**

**Only the dome light :** Go to Step 4.

**Only the turn-signal lights :** Go to Step 5.

**Only the horn :** Go to Step 6.

**Dome light, turn-signal lights and horn :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the answerback functions work normally.

---

**STEP 4. Verify the dome light.****Q: Does the dome light illuminate normally?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the answerback functions work normally.

**NO :** Refer to Inspection Procedure L-1 "The dome lights do not illuminate and go out normally [P.54B-424](#)."

---

**STEP 5. Verify the hazard warning light.****Q: Does the hazard warning light work normally?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the answerback functions work normally.

**NO :** Refer to Inspection Procedure J-2 "Hazard warning lights do not flash when the hazard warning light switch is turned on [P.54B-365](#)."

---


**STEP 6. Verify which horn is defective.****Q: Which horn is (are) defective?**

**Horn (HIGH) :** Go to Step 7.

**Horn (LOW) :** Go to Step 11.

**Both horns :** Go to Step 15.



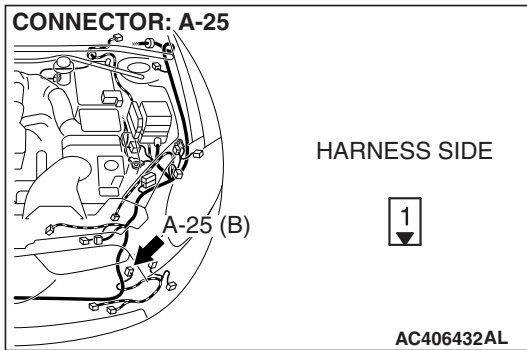


**STEP 7. Check horn (HIGH) connector A-25 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is horn (HIGH) connector A-25 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the horn sounds normally.

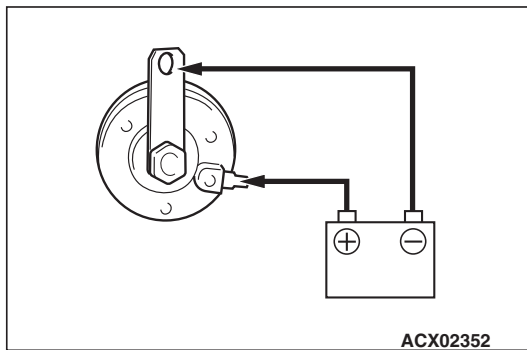


**STEP 8. Check the horn (HIGH).**

Connect the battery as shown, and verify that the horn sounds.

**Q: Is the horn normal?**

**YES :** Go to Step 9.

**NO :** Replace the horn (HIGH). Verify that the horn sounds normally.

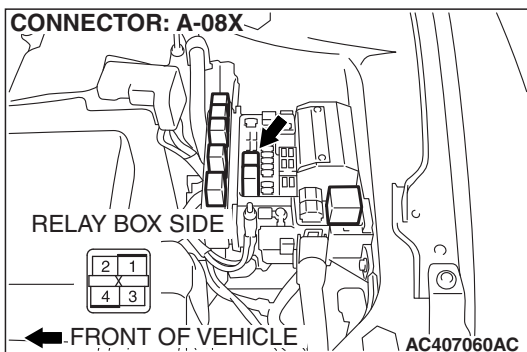




**STEP 9. Check horn relay connector A-08X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is horn relay connector A-08X in good condition?**

**YES :** Go to Step 10.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the horn sounds normally.



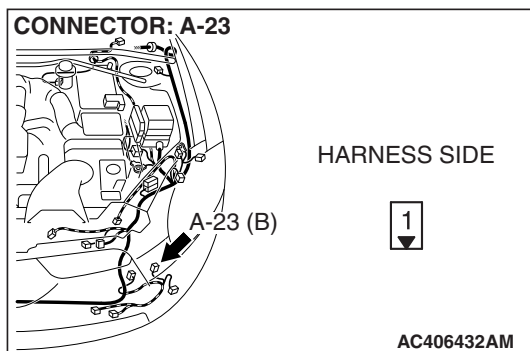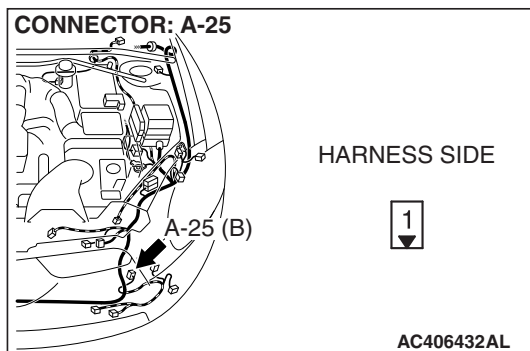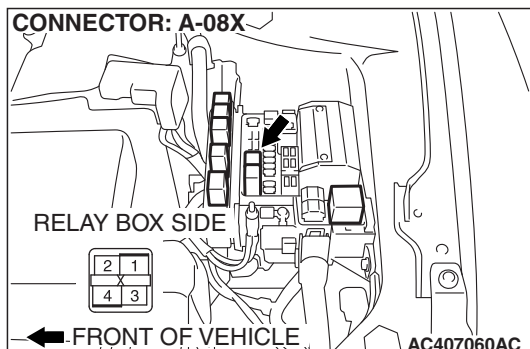

**STEP 10. Check the wiring harness between horn relay connector A-08X (terminal 4) and horn (HIGH) connector A-25 (terminal 1).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between horn relay connector A-08X (terminal 4) and horn (HIGH) connector A-25 (terminal 1) in good condition?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the horn sounds normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the horn sounds normally.


**STEP 11. Check horn (LOW) connector A-23 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is horn (LOW) connector A-23 in good condition?**

**YES :** Go to Step 12.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the horn sounds normally.



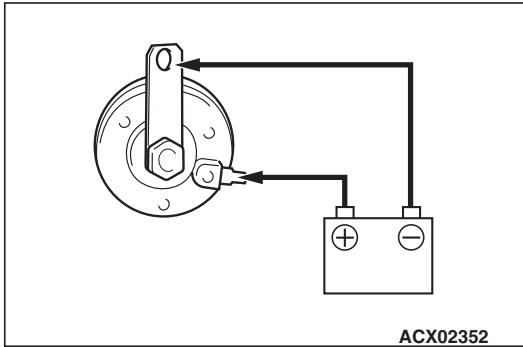


**STEP 12. Check the horn (LOW).**

Connect the battery as shown, and verify that the horn sounds.

**Q: Is the horn normal?**

**YES :** Go to Step 13.

**NO :** Replace the horn (LOW). Verify that the horn sounds normally.

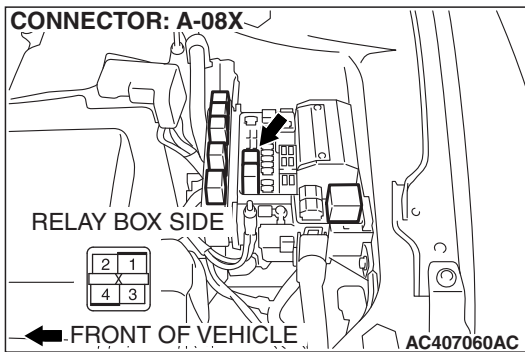


**STEP 13. Check horn relay connector A-08X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is horn relay connector A-08X in good condition?**

**YES :** Go to Step 14.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the horn sounds normally.

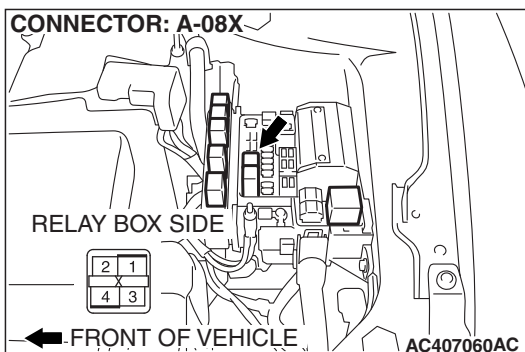


**STEP 14. Check the wiring harness between horn relay connector A-08X (terminal 4) and horn (LOW) connector A-23 (terminal 1).**

- Check the communication lines for open circuit and short circuit.


**Q: Is the wiring harness between horn relay connector A-08X (terminal 4) and horn (LOW) connector A-23 (terminal 1) in good condition?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the horn sounds normally.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the horn sounds normally.

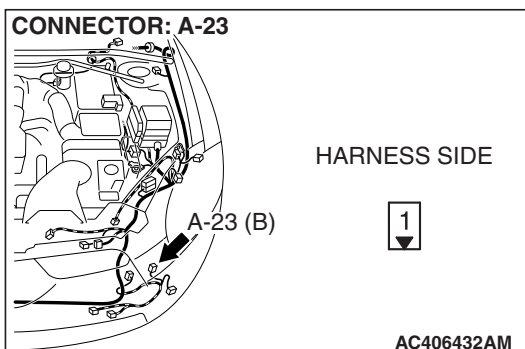



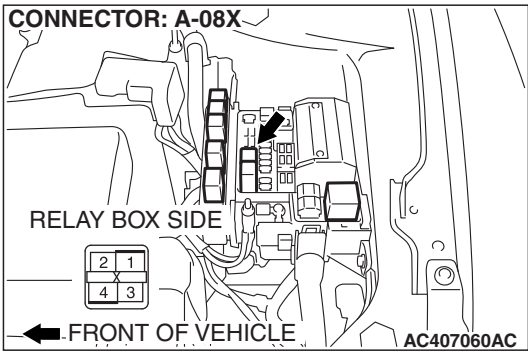


**STEP 15. Check horn relay connector A-08X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is horn relay connector A-08X in good condition?**

**YES :** Go to Step 16.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection P.00E-2. Verify that the horn sounds normally.

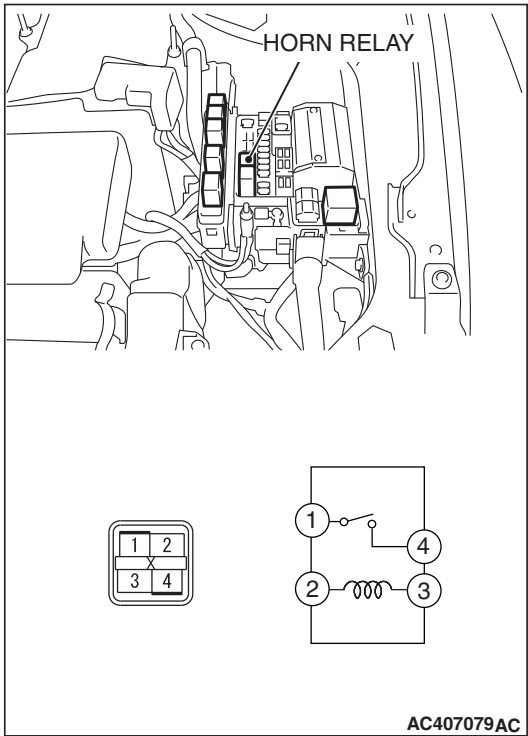


**STEP 16. Check the horn relay.**

BATTERY VOLTAGE	TESTER CONNECTION	SPECIFIED CONDITION
Not applied	1-4	Open circuit
<ul style="list-style-type: none"><li>Connect terminal 2 to the positive battery terminal</li><li>Connect terminal 3 to the negative battery terminal</li></ul>	1-4	Continuity exists (2 ohms or less)

**Q: Is the horn relay normal?**

**YES :** Go to Step 17.


**NO :** Replace the horn relay. Verify that the horn sounds normally.

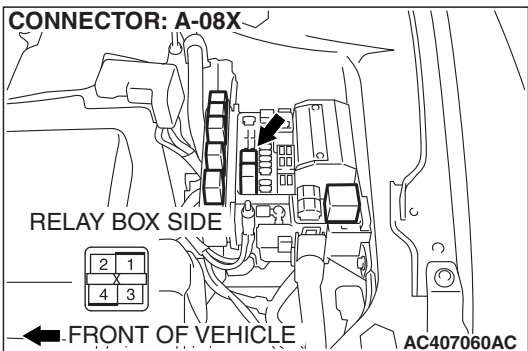

**STEP 17. Check the battery power supply circuit to the horn relay. Measure the voltage at horn relay connector A-08X.**

(1) Disconnect horn relay and measure the voltage available at the relay box side of the connector.



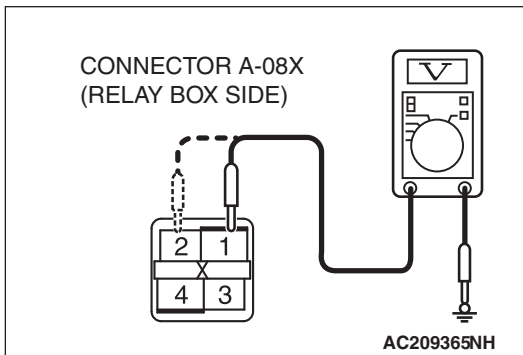


- (2) Measure the voltage between terminal 1 and ground, and also between terminal 2 and ground.
- The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 19.

**NO :** Go to Step 18.

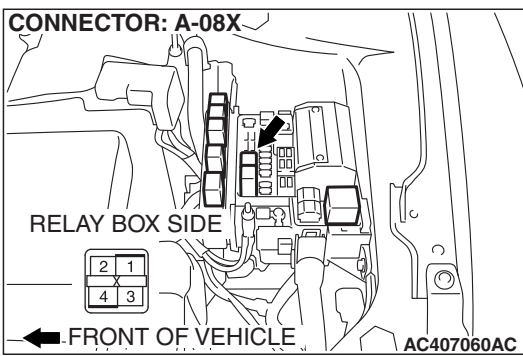


**STEP 18. Check the wiring harness between horn relay connector A-08X (terminals 1 and 2) and the battery.**

- Check the power supply line for open circuit and short circuit.

**Q: Is the wiring harness between horn relay connector A-08X (terminals 1 and 2) and the battery in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the horn sounds normally.

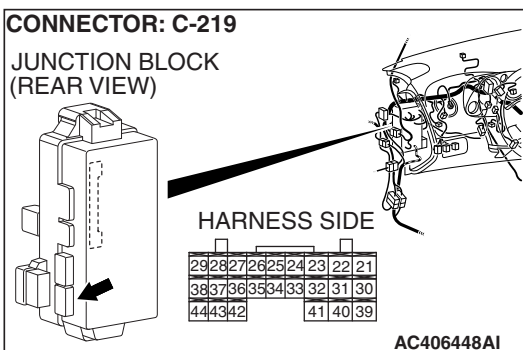

**STEP 19. Check ETACS-ECU connector C-219 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-219 in good condition?**




**YES :** Go to Step 20.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the horn sounds normally.



**STEP 20. Check the wiring harness between horn relay connector A-08X (terminal 3) and ETACS-ECU connector C-219 (terminal 44).**

- Check the communication lines for open circuit and short circuit.

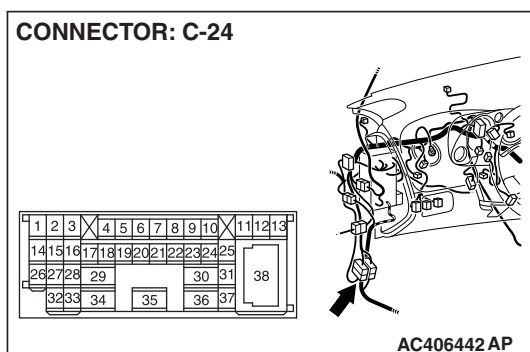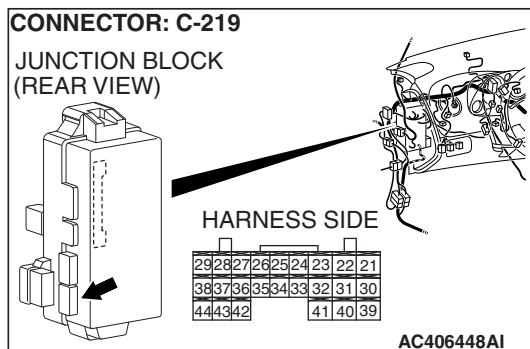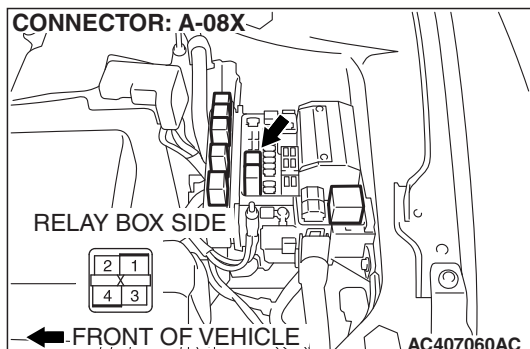

**NOTE:** Also check intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-24 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**Q: Is the wiring harness between horn relay connector A-08X (terminal 3) and ETACS-ECU connector C-219 (terminal 44) in good condition?**

- YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). Verify that the horn sounds normally.
- NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the horn sounds normally.



**INSPECTION PROCEDURE E-3: Keyless Entry System: Encrypted code cannot be registered.**

**Encrypted Transmitter Code Register Mode**

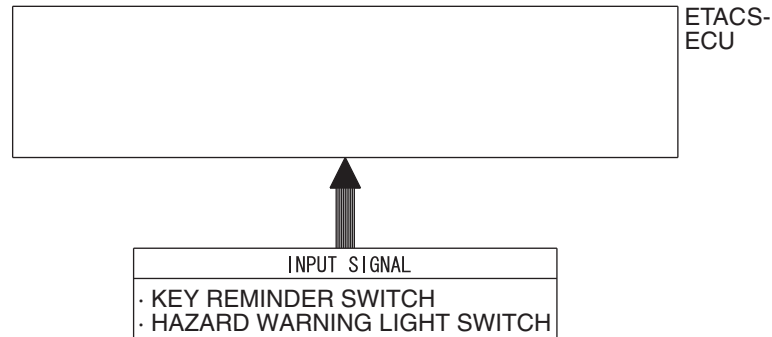

W4P54M46AA

**CIRCUIT OPERATION**

The ETACS-ECU operates the encrypted code register mode according to the following signals:

- Key reminder switch
- Hazard warning light switch

**TECHNICAL DESCRIPTION (COMMENT)**

If the encrypted code register mode cannot be set, the input circuits from the switches described in "CIRCUIT OPERATION" or the ETACS-ECU may be defective.

If the encrypted code register mode can be set but the transmitter cannot be registered, the transmitter or the ETACS-ECU may be defective.

**TROUBLESHOOTING HINTS**

- The key reminder switch may be defective
- The hazard warning light switch may be defective
- The transmitter may be defective
- The ETACS-ECU may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A


**STEP 1. Verify trouble symptom.**

**Q: Can the encrypted code register mode be set?**

**YES :** Go to Step 3.

**NO :** Go to Step 2.

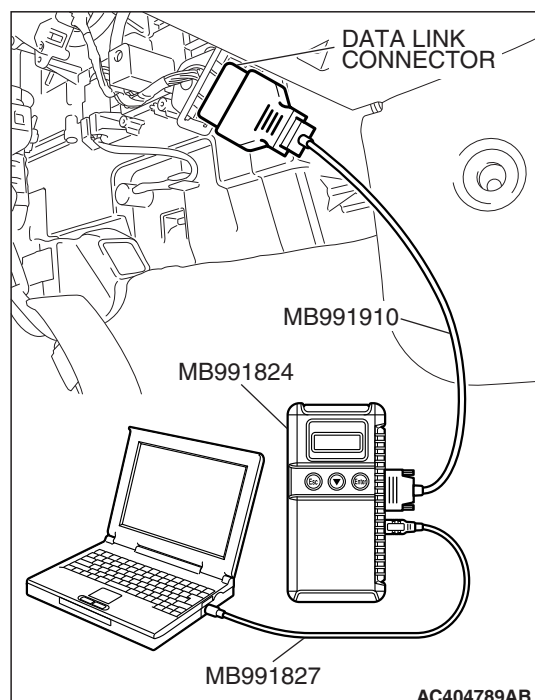

**STEP 2. Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the following switches:

- Key reminder switch
- Hazard warning light switch

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) Check the switches (see table below) applicable for the input signal check are operated.
- (4) Check scan tool MB991958 sounds or not.

ITEM NAME	CHECK CONDITION
Key reminder switch	Remove and reinsert the ignition key
Hazard warning light switch	Turn the hazard warning light switch from "OFF" to "ON" position.

**Q: When the key reminder switch and the hazard warning light switch are operated, does scan tool MB991958 sound in each case?**

**Buzzer of scan tool MB991958 sounds normally. :**

Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table P.54A-19. Verify that the encrypted code can be registered in the transmitter.

**Scan tool MB991958 does not sound when the ignition key is removed and reinserted :** Refer to Inspection Procedure N-1 "ETACS-ECU does not receive any signal from the key reminder switch P.54B-537."

**Scan tool MB991958 does not sound when the hazard warning light switch is turned from "OFF" to "ON" :**

Refer to Inspection Procedure N-2 "ETACS-ECU does not receive any signal from the hazard warning light switch P.54B-541."




**STEP 3. Check the transmitter.**

**Q: When the transmitter's battery is replaced, can the encrypted code be registered?**

**YES :** No action is necessary and testing is complete.

**NO :** Replace the transmitter. If the encrypted code cannot be registered using the new transmitter, replace the ETACS-ECU. Verify that the encrypted code can be registered in the transmitter.

**INSPECTION PROCEDURE E-4: Keyless Entry System: The liftgate <ECLIPSE> or trunk lid <ECLIPSE SPYDER> is not opened when the keyless entry transmitter "LIFTGATE" button <ECLIPSE> or "TRUNK LID" button <ECLIPSE SPYDER> is operated.**

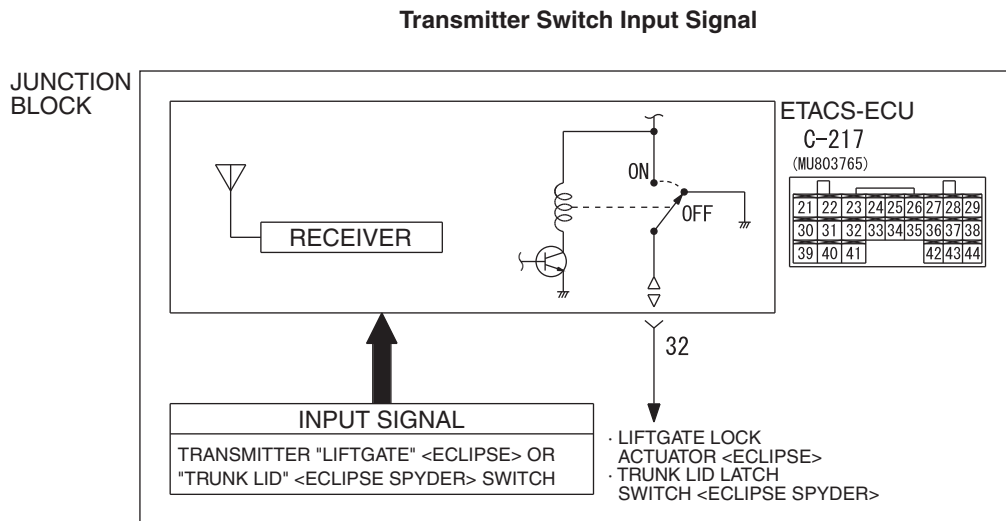

W6P54M054A  
**AC712071AC**

**CIRCUIT OPERATION**

A receiver is incorporated in the ETACS-ECU. This receiver receives a unlock signal from the transmitter.

**TROUBLESHOOTING HINTS**

- The keyless entry transmitter may be defective
- The ETACS-ECU may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



**STEP 1. Check the operation of the central door locking system.**

Check that the liftgate can be unlocked when the central door locking system is operated.

**Q: Does the liftgate work normally?**

**YES** : Go to Step 2.

**NO** : Refer to Inspection Procedure C-2 "Some doors do not lock or unlock [P.54B-124](#)."

**STEP 2. Check that the doors can be locked and unlocked by using the keyless entry transmitter.****Q: Can the doors be locked and unlocked normally when the keyless entry transmitter is operated?**

**YES** : Go to Step 3.

**NO** : Refer to Inspection Procedure E-1 "Keyless entry system does not operate [P.54B-180](#)."

**STEP 3. Check the input signal (by using the pulse check mode of the monitor).**

Check input signals from the transmitter.

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) Push the transmitter "LIFTGATE" button <ECLIPSE> or "TRUNK LID" button <ECLIPSE SPYDER>.
- (4) Check that scan tool MB991958 sounds

**Q: When the transmitter "LIFTGATE" button <ECLIPSE> or "TRUNK LID" button <ECLIPSE SPYDER> is turned ON, does scan tool MB991958 sound?**

**YES** : Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). All the doors can be locked or unlocked by means of the transmitter.

**NO** : Refer to Inspection Procedure N-7 "ETACS-ECU does not receive any signal from the lock, unlock, liftgate <ECLIPSE>, trunk lid <ECLIPSE SPYDER> or panic switch [P.54B-579](#)."

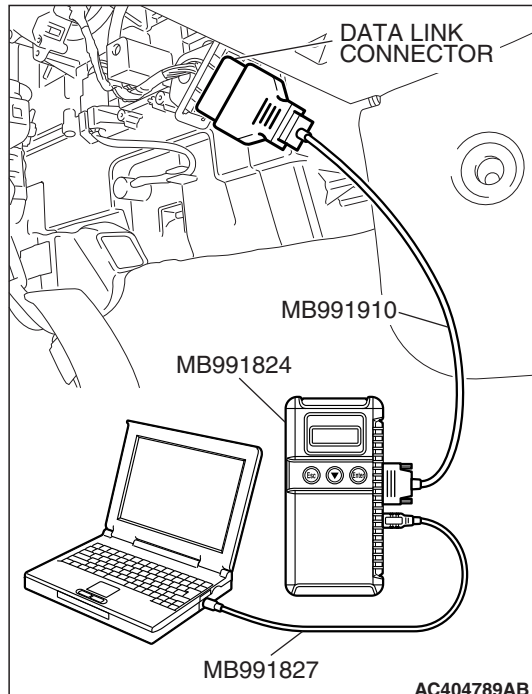



## SUNROOF

### GENERAL DESCRIPTION CONCERNING THE SUNROOF

M1549021200289

The following ECU affects the functions and control of the sunroof.

FUNCTION	CONTROL ECU
Sunroof timer function	ETACS-ECU, sunroof motor assembly

## SUNROOF

### SUNROOF TIMER FUNCTION


The ETACS-ECU enables opening and closing of the sunroof for 30 seconds after the ignition is switched off.

During this timed operation, if the driver's door or passenger's door is opened, the sunroof timer function is deactivated from that moment.







## INSPECTION PROCEDURE F-1: Sunroof: Sunroof does not operate.

Sunroof Motor Assembly Power Supply Circuit

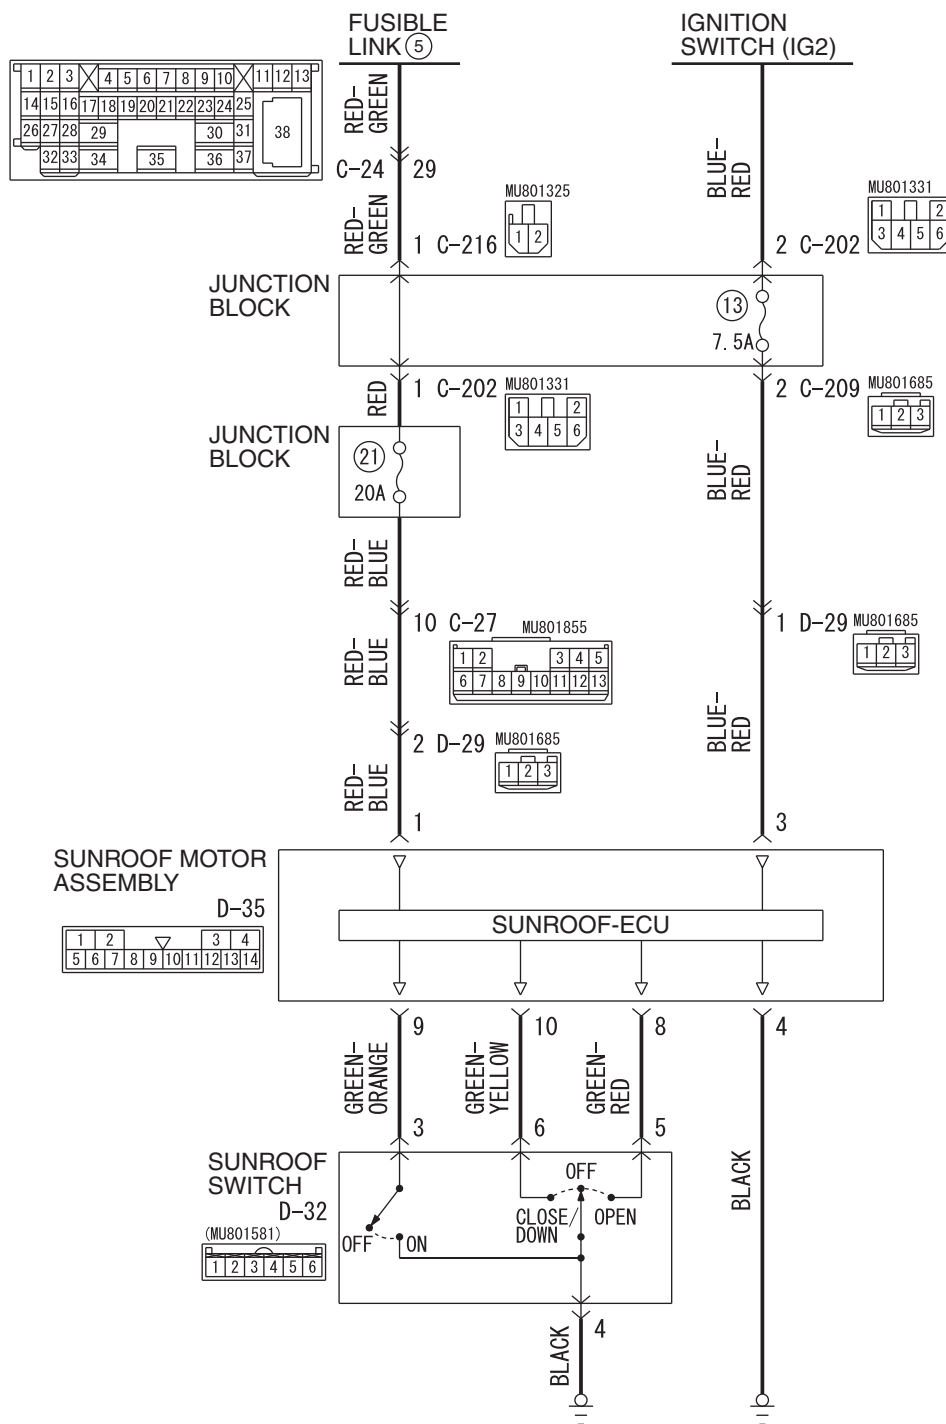

WAP54M019A



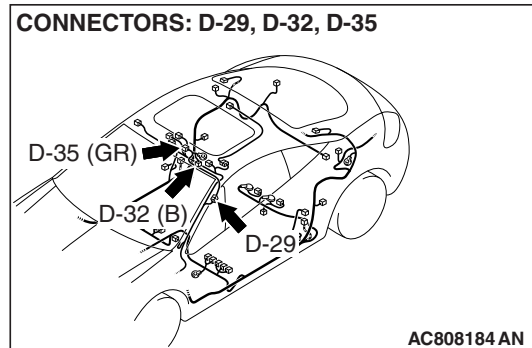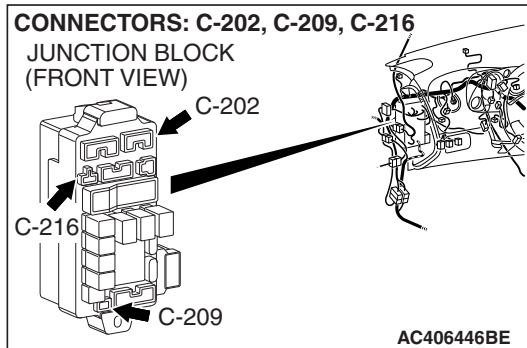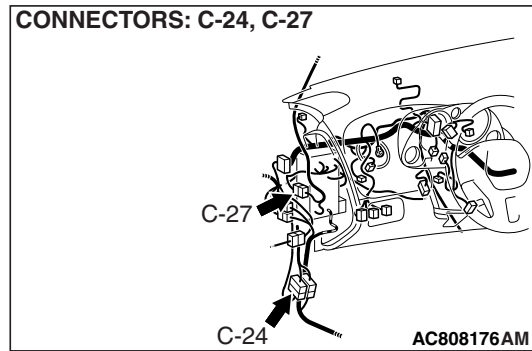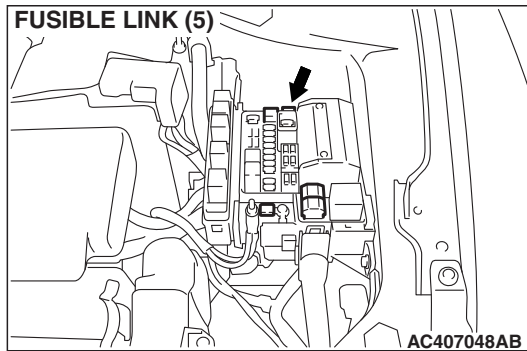

## CIRCUIT OPERATION

- The sunroof motor assembly is energized through fusible link (5) by the battery.
- When the ignition switch (IG2) signal is on, the sunroof motor assembly is ready to operate.

## TROUBLESHOOTING HINTS

- The sunroof switch may be defective
- The sunroof motor assembly may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

## DIAGNOSIS

### Required Special Tools:


- MB991223: Test Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Check sunroof motor assembly connector D-35 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**



**Q: Is sunroof motor assembly connector D-35 in good condition?**

**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the sunroof works normally.

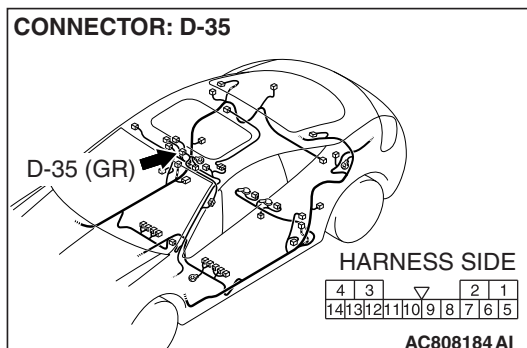

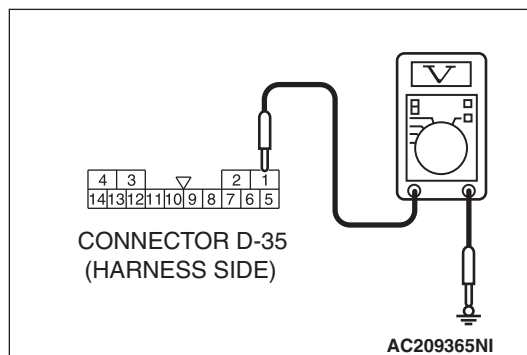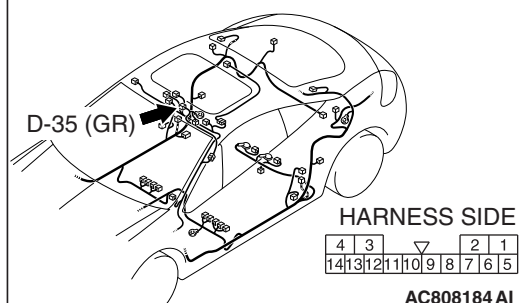

**CONNECTOR: D-35**

**STEP 2. Check the fusible link (5) line of power supply circuit to the sunroof motor assembly. Measure the voltage at sunroof motor assembly connector D-35.**

(1) Disconnect sunroof motor assembly connector D-35 and measure the voltage available at the wiring harness side of the connector.

(2) Measure the voltage between terminal 1 and ground.

- The voltage should measure approximately 12 volts (battery positive voltage).



**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 4.

**NO :** Go to Step 3.


**STEP 3. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 1) and fusible link (5).**

- Check the power supply line for open circuit and short circuit.

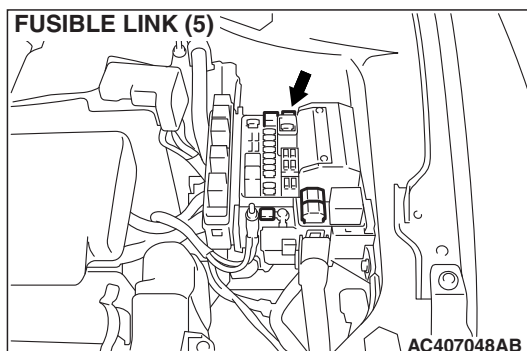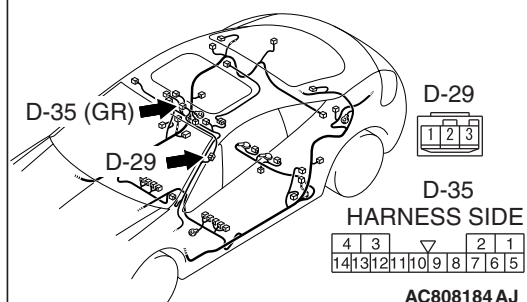**CONNECTORS: D-29, D-35**



**CONNECTORS: C-24, C-27**

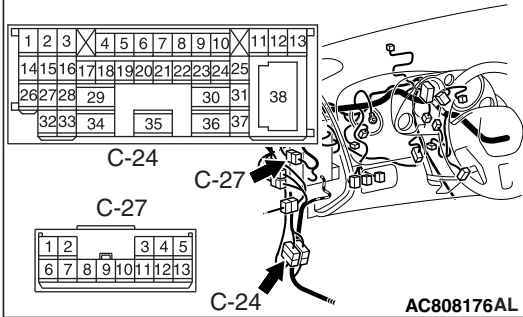


*NOTE: Also check junction block connectors C-202, C-216, intermediate connector C-24, C-27 and D-29 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-202, C-216, intermediate connector C-24, C-27 or D-29 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 1) and fusible link (5) in good condition?**


**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Check that the sunroof works normally.

**CONNECTORS: C-202, C-216  
JUNCTION BLOCK  
(FRONT VIEW)**

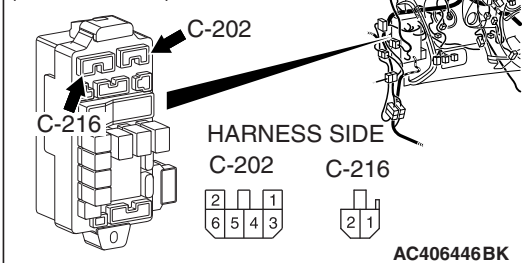

**CONNECTOR: D-35**

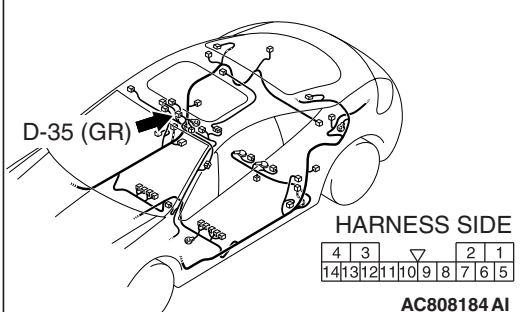

**STEP 4. Check the ignition switch (IG2) circuit to the sunroof motor assembly. Measure the voltage at sunroof motor assembly connector D-35.**


- (1) Disconnect sunroof motor assembly connector D-35 and measure the voltage available at the wiring harness side of the connector.
- (2) Turn the ignition switch to the "ON" position.

- (3) Measure the voltage between terminal 3 and ground.
  - The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 6.



**NO :** Go to Step 5.

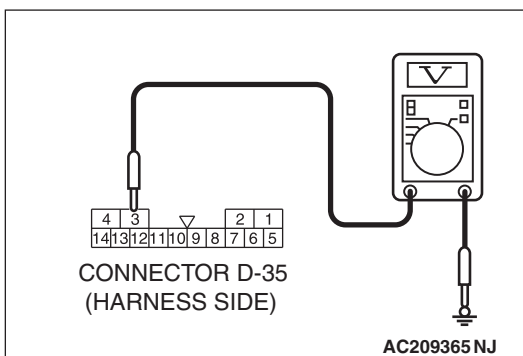



**STEP 5. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 3) and ignition switch (IG2).**

- Check the power supply line for open circuit and short circuit.

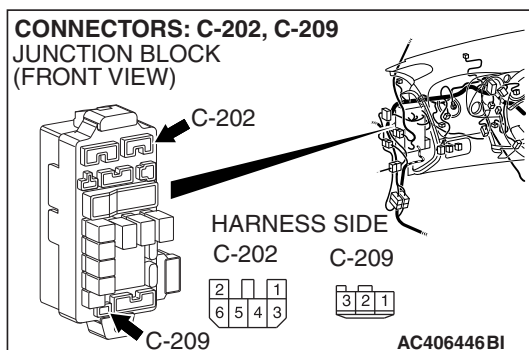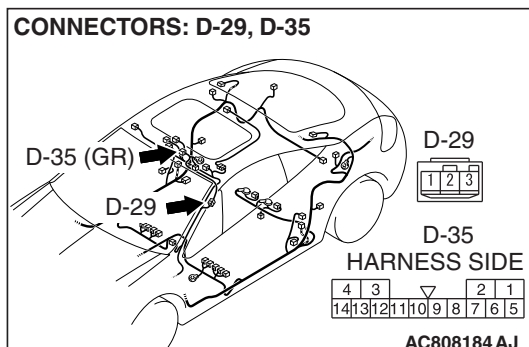

*NOTE: Also check junction block connectors C-202, C-209 and intermediate connector D-29 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block connector C-202, C-209 or intermediate connector D-29 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*



**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 3) and the ignition switch (IG2) in good condition?**

**YES :** Refer to GROUP 54A – Ignition switch, trouble symptom chart [P.54A-9](#).

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Check that the sunroof works normally.



**CONNECTOR: D-35**

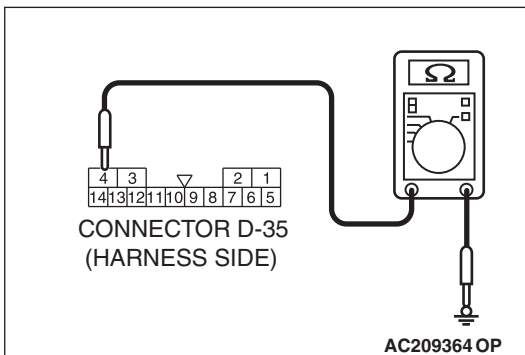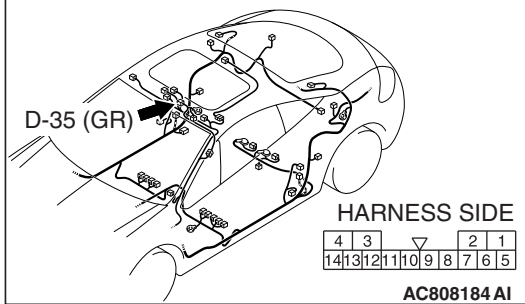

**STEP 6. Check the ground circuit to the sunroof motor assembly. Measure the resistance at sunroof motor assembly connector D-35.**

- (1) Disconnect sunroof motor assembly connector D-35 and measure the resistance available at the wiring harness side of the connector.

- (2) Measure the resistance value between terminal 4 and ground.


- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 8.

**NO :** Go to Step 7.

**CONNECTOR: D-35**

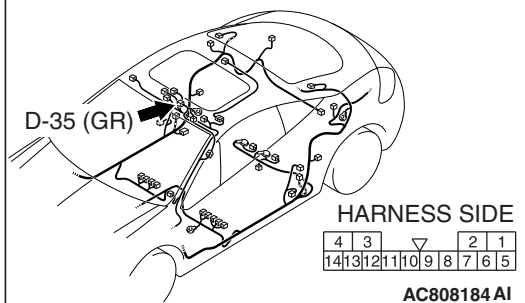

**STEP 7. Check the wiring harness between sunroof motor assembly connector D-35 (terminal 4) and ground.**

- Check the ground wire for open circuit.


**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Check that the sunroof works normally.



CONNECTOR: D-32

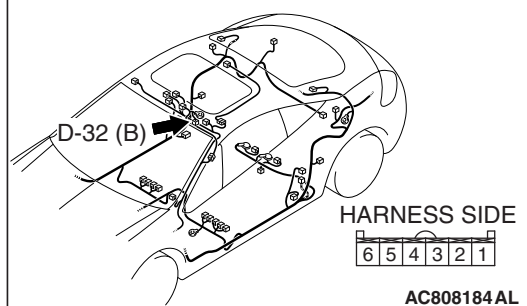

**STEP 8. Check the sunroof switch connector D-32 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is sunroof switch connector D-32 in good condition?**

**YES :** Go to Step 9.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Check that the sunroof works normally.

**STEP 9. Check the sunroof switch.**


Check continuity when the sunroof switch is operated to "OPEN", "TILT UP" or "CLOSE/TILT DOWN" positions. Refer to GROUP 42, Sunroof Assembly [P.42-127](#).

SWITCH POSITION	TESTER CONNECTION	SPECIFIED CONDITION
Open	4 – 5	Continuity exists (2 ohms or less)
Off	3 – 4, 3 – 5, 3 – 6, 4 – 5, 4 – 6, 5 – 6	Open circuit
Tilt-up	3 – 4	Continuity exists (2 ohms or less)
Close/Tilt-down	4 – 6	Continuity exists (2 ohms or less)

**Q: Does the check meet the specified conditions?**


**YES :** Go to Step 10.

**NO :** Replace the sunroof switch. Check that the sunroof works normally.

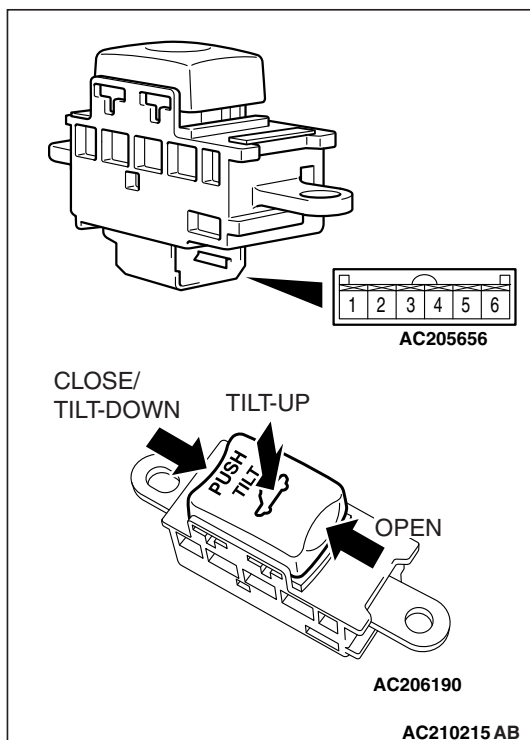




CONNECTOR: D-32

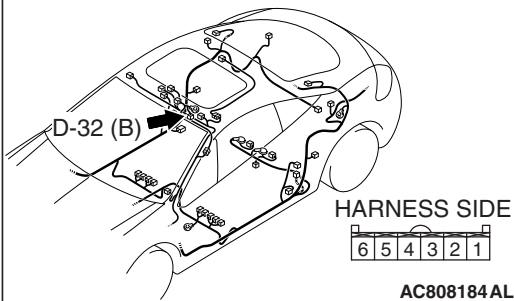

CONNECTOR D-32  
(HARNESS SIDE)

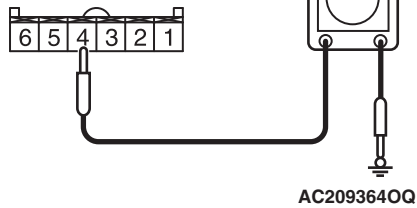

**STEP 10. Check the ground circuit to the sunroof switch.**  
**Measure the resistance at sunroof switch connector D-32.**

(1) Disconnect sunroof switch connector D-32 and measure the resistance available at the wiring harness side of the connector.


(2) Measure the resistance between terminal 4 and ground.  
• The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 12.

**NO :** Go to Step 11.

CONNECTOR: D-32

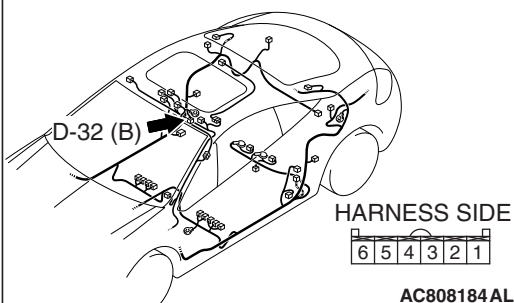

**STEP 11. Check the wiring harness sunroof switch connector D-32 (terminal 4) and ground.**

• Check the ground wire for open circuit.


**Q: Is the wiring harness between sunroof switch connector D-32 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Check that the sunroof works normally.



CONNECTORS: D-32, D-35

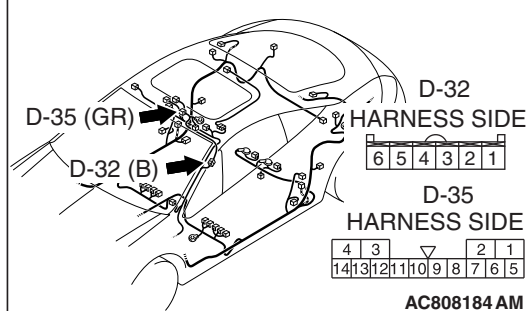

**STEP 12. Check the wiring harness between sunroof motor assembly connector D-35 (terminals 8, 9 and 10) and sunroof switch connector D-32 (terminals 5, 3 and 6).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between sunroof motor assembly connector D-35 (terminals 8, 9 and 10) and sunroof switch connector D-32 (terminals 5, 3 and 6) in good condition?**

**YES :** Go to Step 13.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Check that the sunroof works normally.

**STEP 13. Replace the sunroof switch.**

- (1) Replace the sunroof switch.
- (2) Check that the sunroof works normally.


**Q: Does the sunroof works normally?**

**YES :** No action is necessary and testing is complete.

**NO :** Replace the sunroof motor assembly. Check that the sunroof works normally.



**INSPECTION PROCEDURE F-2: Sunroof: Any of the sunroof switch positions is defective.**

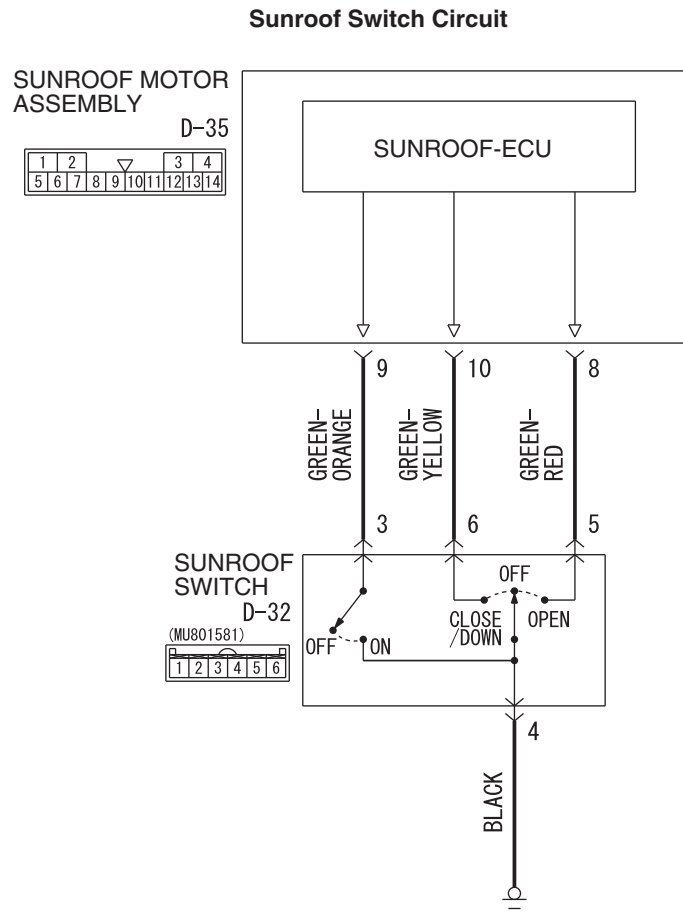

W6P54M051A

**TECHNICAL DESCRIPTION (COMMENT)**

The sunroof switch or the sunroof motor assembly may be defective.

**TROUBLESHOOTING HINTS**


- The sunroof switch may be defective
- The sunroof motor assembly may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A



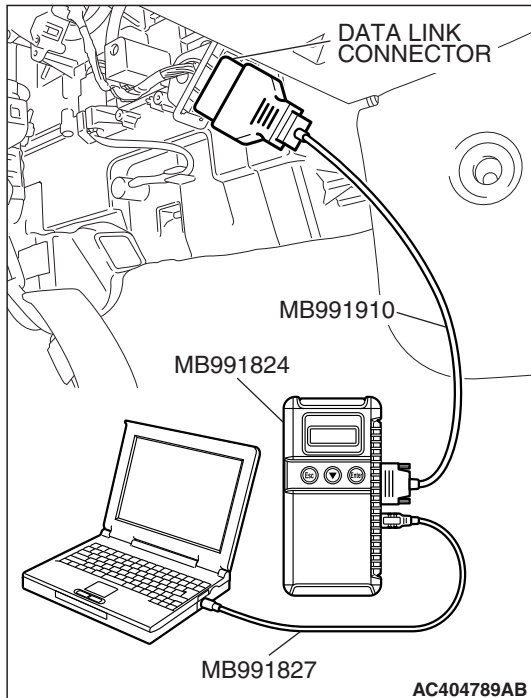

**Check the input signal (by using the pulse check mode of the monitor).**

Check the input signals from the sunroof switch.

**⚠ CAUTION**

**To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.**

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate the scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) When each function of the sunroof switch is operated (turned on), check that scan tool MB991958 sounds.

**Q: Does scan tool MB991958 sound when the sunroof switch is operated?**


**YES :** Replace the sunroof motor assembly. Check that the sunroof works at all positions normally.

**NO :** Refer to Inspection Procedure M-9 "ETACS-ECU does not receive any signal from the up, open or close/down switch [P.54B-533](#)."



**INSPECTION PROCEDURE F-3: Sunroof: Sunroof timer function does not work normally.**

*NOTE: This troubleshooting requires use of scan tool MB991958 and SWS monitor kit MB991813. For details of how to use the SWS monitor, refer to "How to use SWS monitor [P.54B-15](#)."*

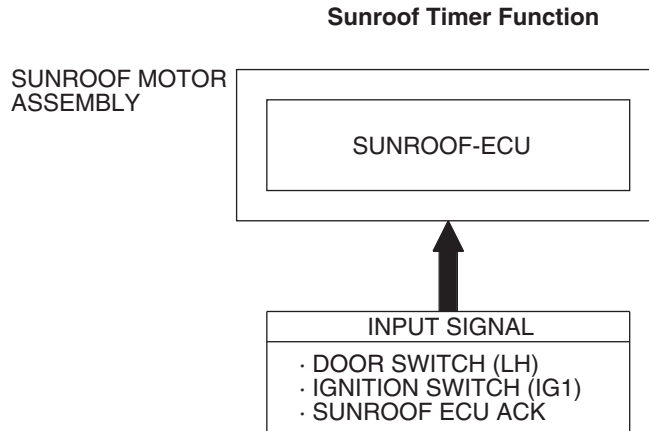

W6P54M052A

**CIRCUIT OPERATION**

- The sunroof timer function works according to the signals from the following switches:
  - Ignition switch (IG1): OFF
  - Door switch (LH): OFF
- Vehicle condition
  - Ignition switch: LOCK position
  - Door (LH): Closed
- When the driver's door is opened and closed while the sunroof timer function is on, the sunroof operative duration will be changed.

**TECHNICAL DESCRIPTION (COMMENT)**

If the sunroof timer function does not work normally, the input circuits from the switches described in "CIRCUIT OPERATION", the sunroof motor assembly, the ETACS-ECU or the SWS communication line may be defective.

**TROUBLESHOOTING HINTS**

- The front door switch may be defective
- The sunroof motor assembly may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Test Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- ETACS-ECU
- Sunroof-ECU

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

(1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."

(2) Turn the ignition switch to the "ON" position.

(3) Operate the scan tool MB991958 according to the procedure below to display "ECU COMM Check."

- a. Select "Interactive Diagnosis."
- b. Select "System select."
- c. Select "SWS."
- d. Select "SWS MONITOR."
- e. Select "ECU COMM Check."



(4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "ETACS ECU" and the "SUNROOF ECU" menus.

**Q: Are "OK" displayed for both the "ETACS ECU" and "SUNROOF ECU" menus?**



**"OK" are displayed for all the items :** Go to Step 2.

**"NG" is displayed for the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with the ETACS-ECU is not possible [P.54B-74](#)."

**"NG" is displayed for the "SUNROOF ECU" menu :** Refer to Inspection Procedure A-5 "Communication with the sunroof-ECU is not possible [P.54B-90](#)."

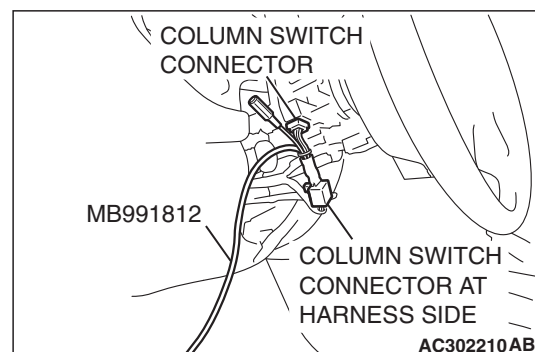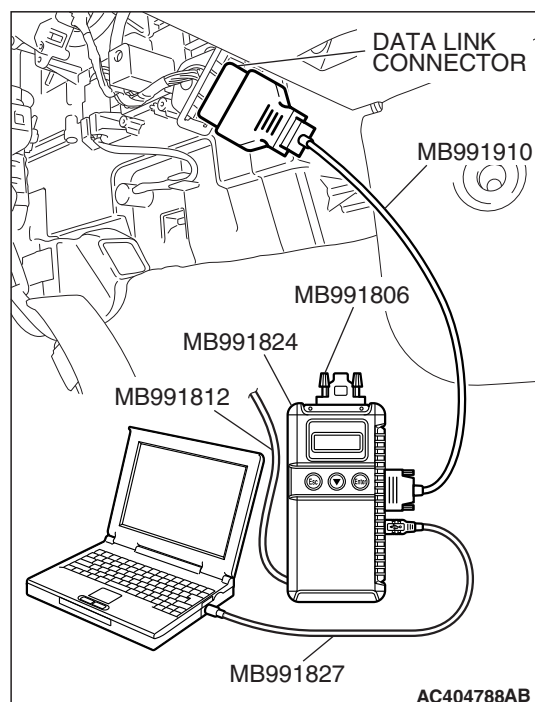



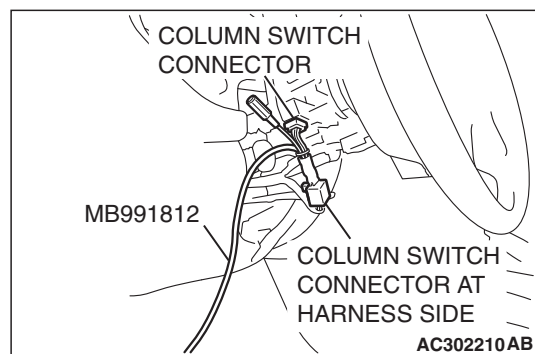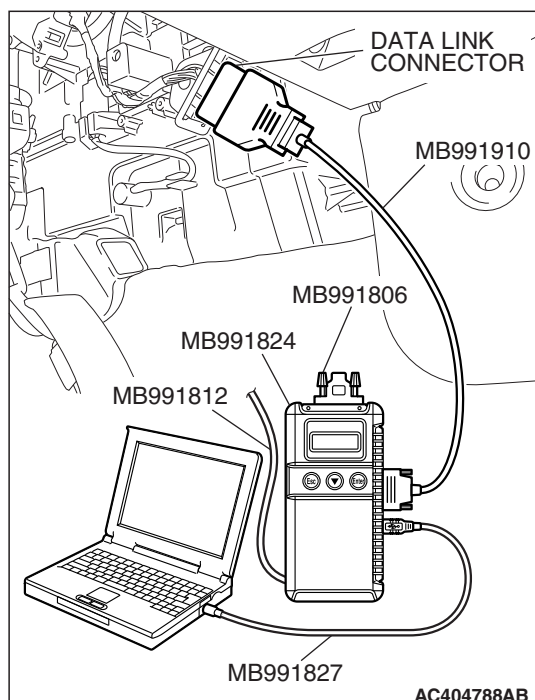

**STEP 2. Check the input signal by using "DATA LIST" menu of the SWS monitor.**

Observe how the input signal is changed when the ignition switch is turned from the ON position to the "LOCK" (OFF) position.

- (1) Operate scan tool MB991958 according to the procedure below to display "ETACS."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "ETACS."
- (2) Check that normal condition are displayed for the item described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 30	IG SW (IG1)	OFF

- (3) Operate scan tool MB991958 according to the procedure below to display "Front-ECU, P/W, S/R."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "Front-ECU, P/W, S/R."
- (4) Check that normal condition are displayed for the item described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 72	S/R ECU ACK	NORMAL ACK → SLEEP ACK (after approximately 30 seconds)

**Q: Does the M.U.T.-III display the items "IG SW (IG1)" and "S/R ECU ACK" as normal condition?**

**Normal conditions displayed for all the items :** Replace the sunroof motor assembly. Check that the sunroof timer function works normally.

**Normal condition is not displayed for the "IG SW (IG1)" :**  
Refer to Inspection Procedure M-2 "ETACS-ECU does not receive a signal from the ignition switch (IG1) [P.54B-499](#)."

**Normal condition is not displayed for the "S/R ECU ACK" :** Replace the sunroof motor assembly. Check that the sunroof timer function works normally.



WINDSHIELD WIPER AND WASHER

GENERAL DESCRIPTION CONCERNING THE WINDSHIELD WIPER AND WASHER

M1549021500332



The following ECUs affect the functions and control of the windshield wiper and washer.

FUNCTION	CONTROL ECU	
Windshield wiper and washer control function	Intermittent control (Vehicle speed-dependent variable type)	ETACS-ECU, front-ECU, column switch
	Mist wiper control	ETACS-ECU, column switch
	Low-speed wiper, high-speed wiper control	ETACS-ECU, column switch
	Washer control	ETACS-ECU, column switch

WINDSHIELD WIPER AND WASHER

INTERMITTENT CONTROL (VEHICLE SPEED-DEPENDENT VARIABLE TYPE)

ETACS-ECU uses the dial position of the variable intermittent wiper control switch and the vehicle speed signal sent by the combination meter to calculate the interval to be sent to the front-ECU.

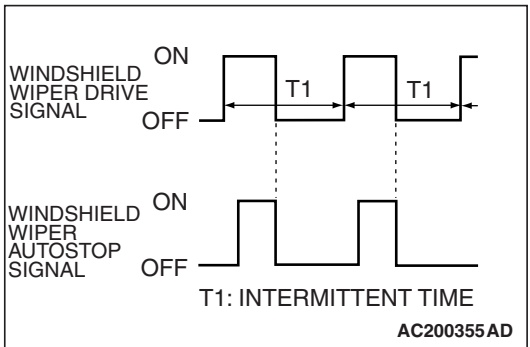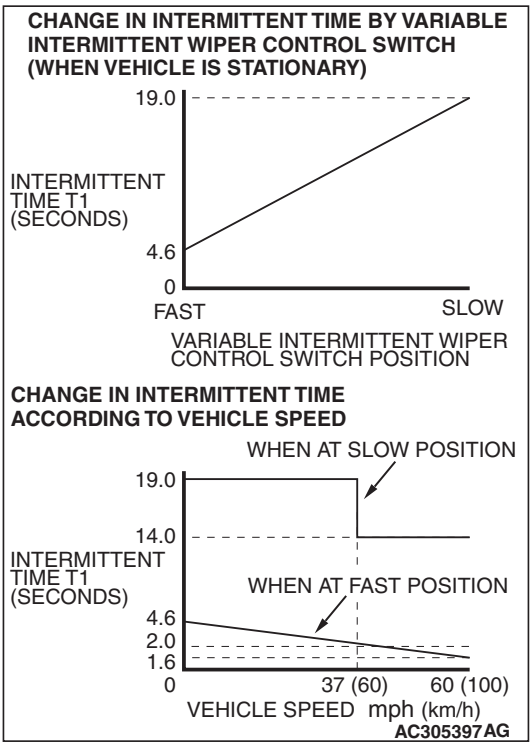


The front-ECU determines the intermittent time T1 from the input SWS data signal, and turns ON the windshield wiper drive signal. When the wiper is at the STOP position, the windshield wiper auto-stop signal goes OFF then turn OFF the windshield wiper drive signal. After the intermittent time T1 seconds from when the windshield wiper drive signal turned ON, the windshield wiper drive signal is turned ON again and the above operation is repeated.

*NOTE: If the intermittent time T1 is within 2 seconds, the wiper is operated consecutively at LOW-speed by the front-ECU.*




## Mist wiper control

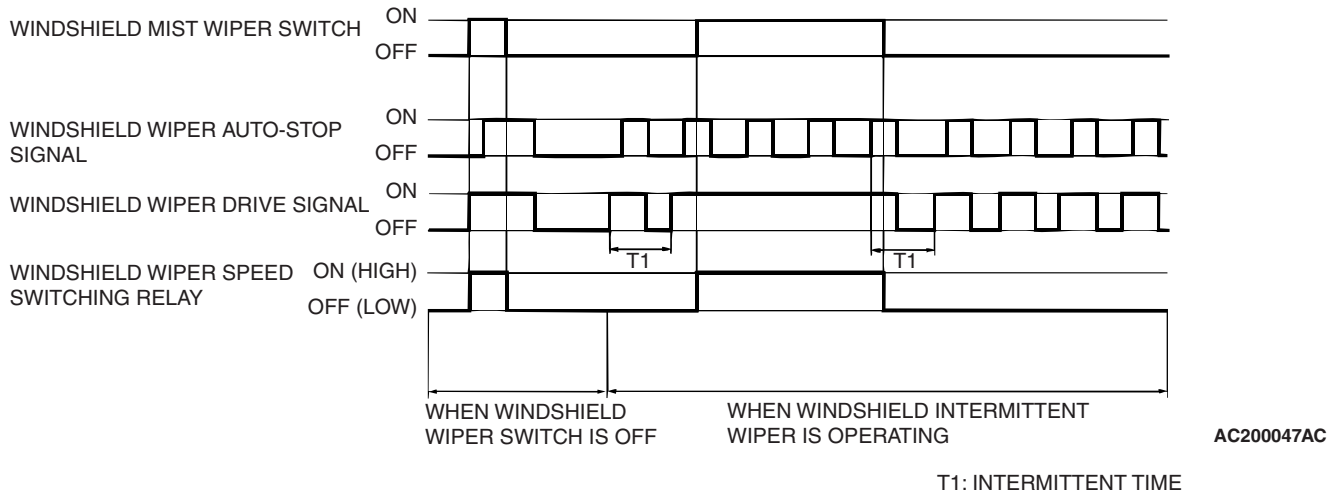

When the ignition switch is in the ACC or ON position, and the windshield mist wiper switch of the column switch is turned ON, the front-ECU turns ON the windshield wiper drive signal. At the same time, the wiper speed switching relay is turned ON (HIGH-SPEED). While the windshield mist wiper switch is ON, the windshield wiper will operate at high speed. Then, if the windshield mist wiper switch is turned off, the wiper operates at low speed until it stops at the predetermined park position.

When the windshield mist switch is turned on briefly, the wiper operates once at low speed. At the point the windshield mist switch is turned ON, if the windshield wiper has been operating intermittently, the same operations as the above will be performed while the windshield mist wiper switch is ON. After the windshield mist wiper switch goes OFF, the intermittent operations will be set again T1 seconds after the last windshield wiper auto-stop signal turning ON.

## Low-speed wiper, high-speed wiper control

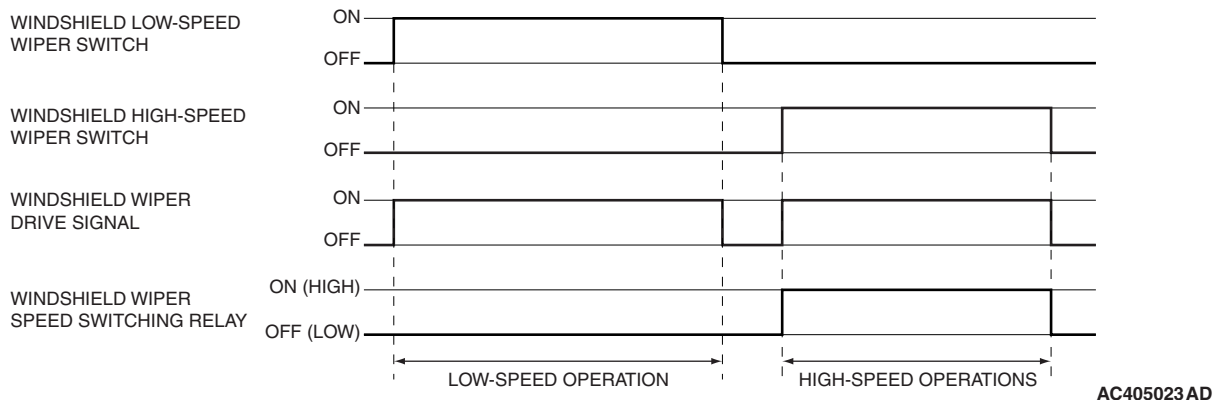


When the ignition switch in at the ACC or ON position, and the windshield low-speed wiper switch of the column switch is turned ON, the front-ECU turns ON the windshield wiper drive signal, turns OFF (LOW) the windshield wiper speed relay, and operates the windshield wiper at low-speed. Next, when

the windshield high speed wiper switch is turned ON, the windshield wiper drive signal is turned ON, the windshield wiper speed switching relay is turned ON (HIGH), and the windshield wiper is operated at high-speed.



Washer control

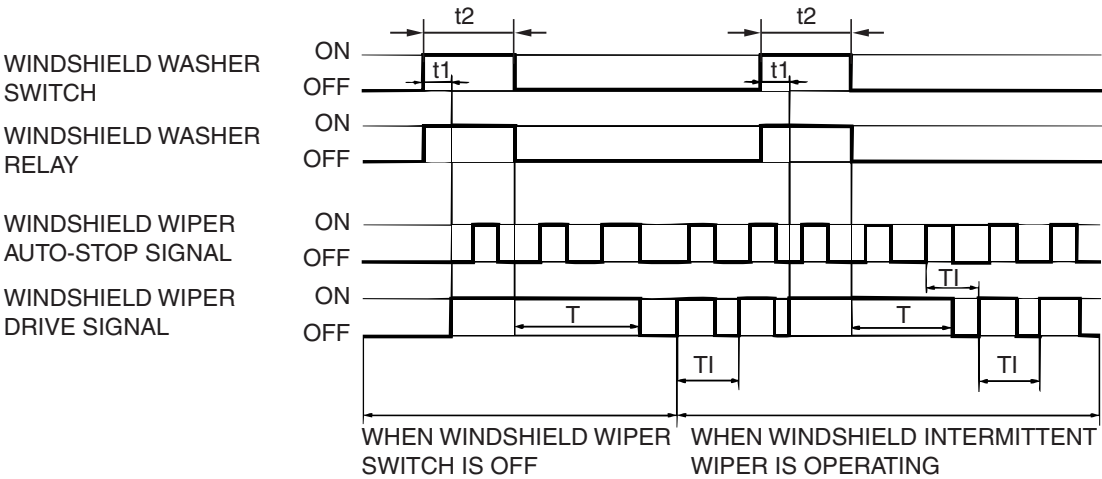

T: WIPER OPERATING TIME AFTER WINDSHIELD WASHER SWITCH IS OFF  
T<sub>I</sub>: INTERMITTENT TIME    t<sub>1</sub>: 0.15 SECOND    t<sub>2</sub>: WINDSHIELD WASHER OPERATING TIME    AC306460AC

When the ignition switch is in the ACC or ON position, and the windshield washer switch of the column switch is turned ON, the front-ECU turns ON the windshield washer relay. The windshield wiper drive signal is turned ON after 0.15 second until 2 seconds

after the windshield washer switch goes OFF to operate the windshield wiper continuously. When the windshield washer switch is turned ON, if the windshield wiper is operating intermittently, intermittent operation will resume after two or three wipes.

*NOTE: The wiper drive signal output time varies according to the conditions. Refer to the following table for details.*


	WHEN WIPER SWITCH IS OFF			WHEN WIPER SWITCH IS SET TO INT			WHEN WIPER SWITCH IS SET TO LO OR HI		
t <sub>2</sub>	0.15 second or less	0.15 - 0.8 second	0.8 second or more	0.15 second or less	0.15 - 0.8 second	0.8 second or more	0.15 second or less	0.15 - 0.8 second	0.8 second or more
T	0 second	1.2 seconds	2 seconds	0 second	1.2 seconds	2 seconds	0 second	1.2 seconds	2 seconds



**INSPECTION PROCEDURE G-1: Windshield Wiper and Washer: The windshield wipers do not work at all.**




*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**Windshield Wiper Motor Circuit**

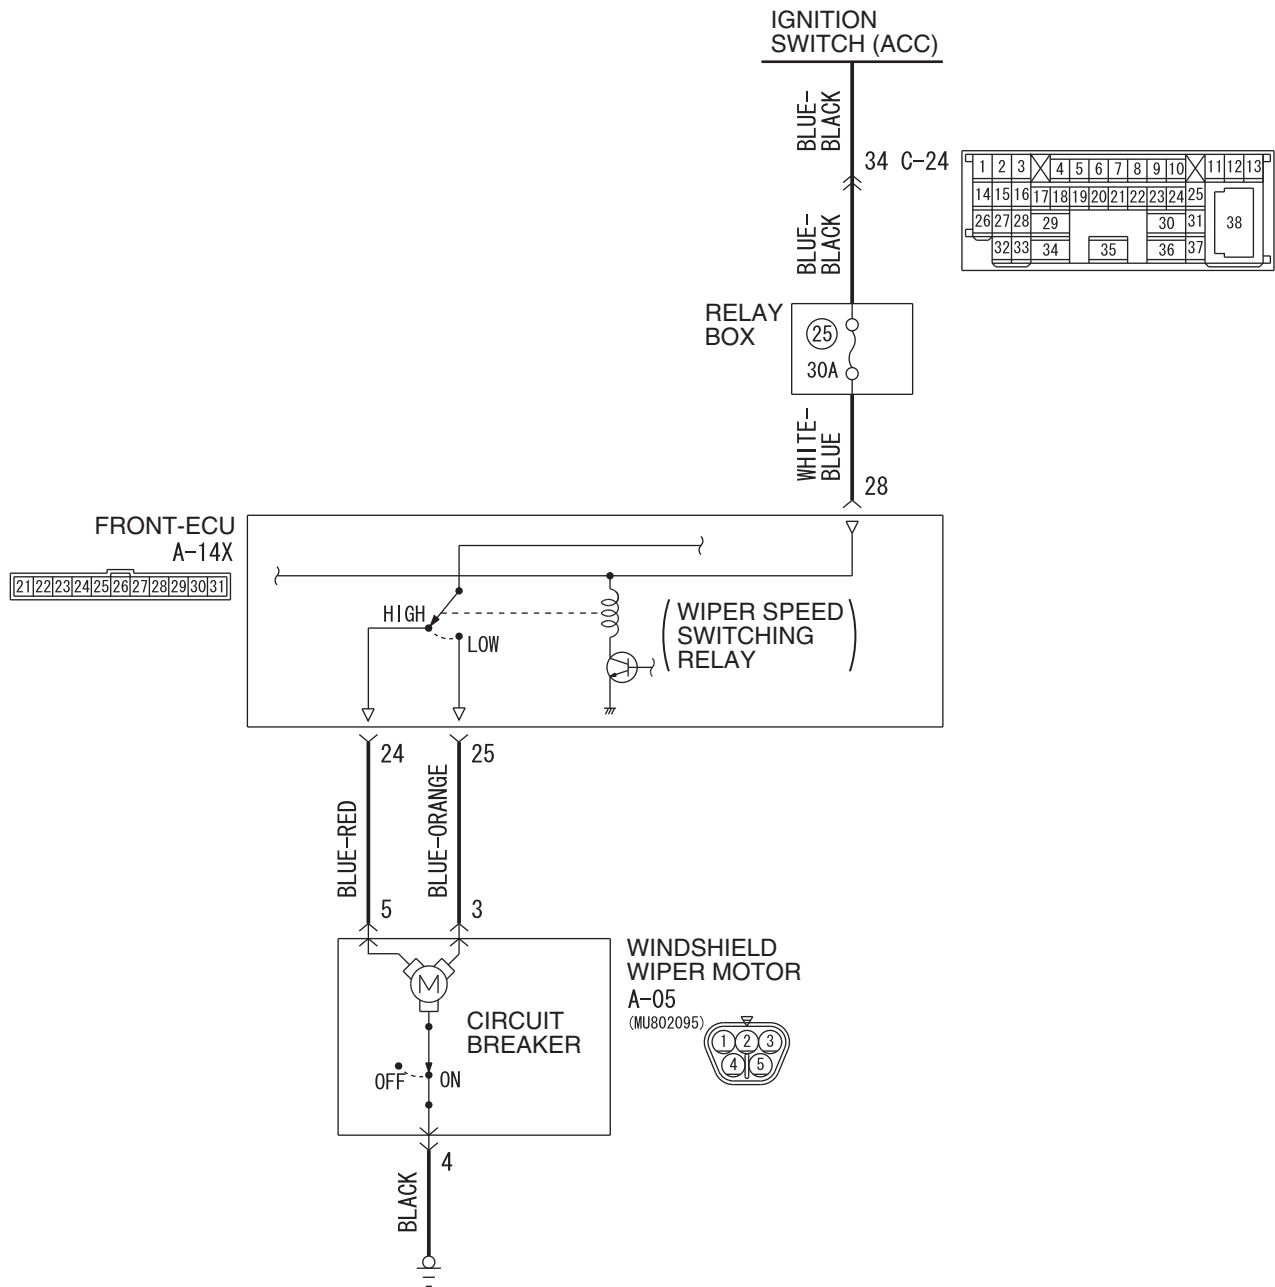

W6P54M026A



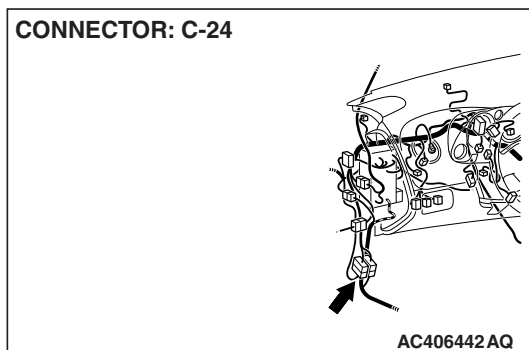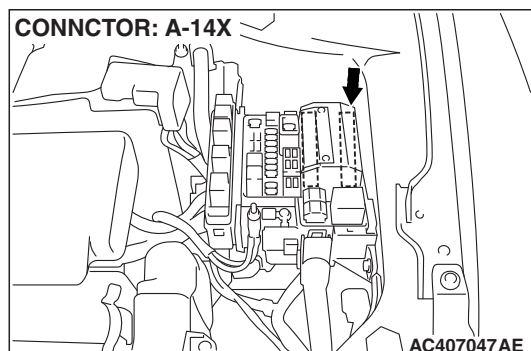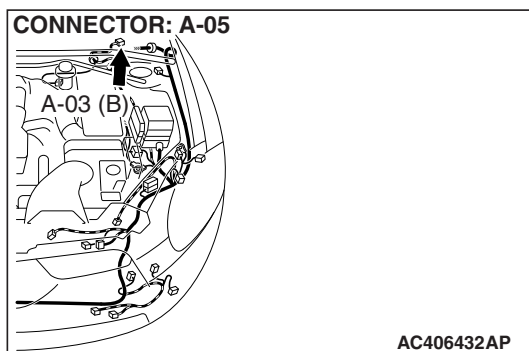

## CIRCUIT OPERATION

- The windshield wiper and washer switch sends a signal through the column-ECU (incorporated in the column switch) to the front-ECU. If the column-ECU sends a windshield wiper and washer switch "ON" signal to the front-ECU, the front-ECU turns on the relay (incorporated in the front-ECU), thus causing the windshield wiper and washer motor to be turned on.
- If the SWS communication line is defective, the front-ECU operates windshield wiper motor by using the other communication lines (wiper backup circuit) instead of that line. In this case, the windshield wiper works at low speed regardless of the windshield wiper and washer switch positions ("LO" or "HIGH").

## TECHNICAL DESCRIPTION (COMMENT)

If the windshield wiper does not work at all, the windshield wiper motor, column switch (windshield wiper and washer switch) or the front-ECU may be defective.

## TROUBLESHOOTING HINTS

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The wiper motor may be defective
- The column switch may be defective
- The front-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- Column-ECU
- Front-ECU

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.



- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "COLUMN ECU" and the "FRONT ECU" menus.

**Q: Are "OK" displayed for the "COLUMN ECU" and "FRONT ECU" menu?**




**"OK" are displayed for all the items :** Go to Step 2.

**"NG" is displayed for the "COLUMN ECU" menu :** Refer to Inspection Procedure A-2 "Communication with the column switch (column-ECU) is not possible [P.54B-66](#)."

**"NG" is displayed for the "FRONT ECU" menu :** Refer to Inspection procedure A-4 "Communication with the front-ECU is not possible [P.54B-82](#)."

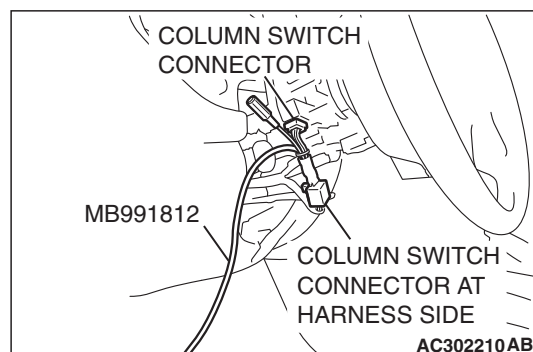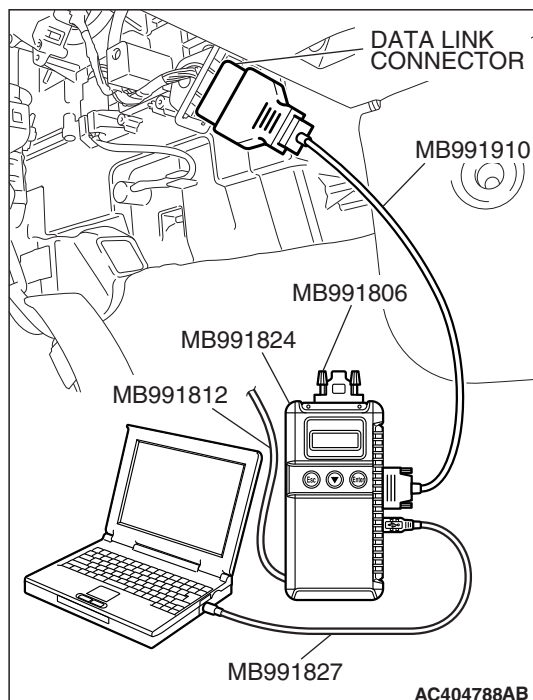



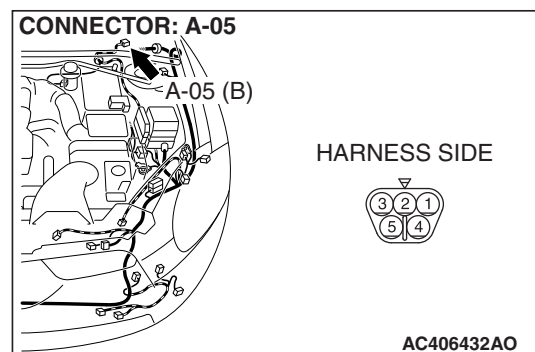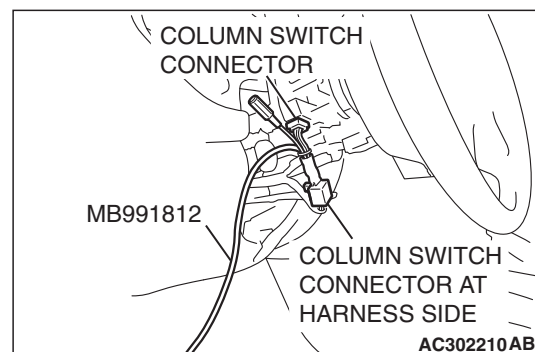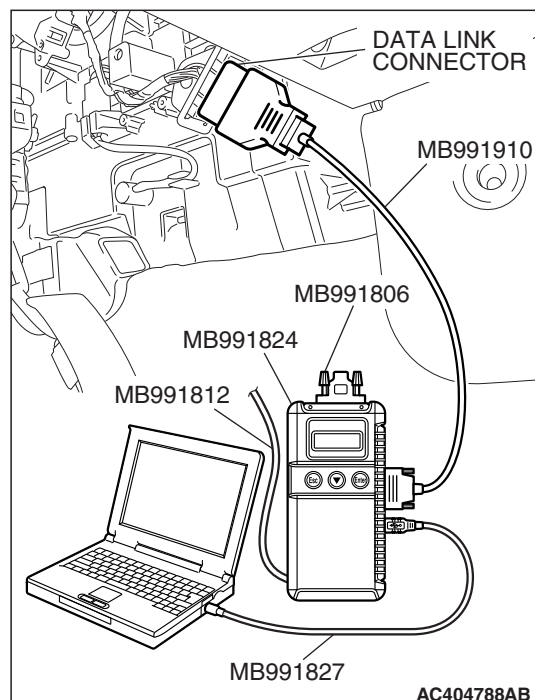

## STEP 2. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.

Check the input signals from the following switches:

- Ignition switch: ACC
- Windshield wiper switch: INT

- (1) Operate the M.U.T.-III according to the procedure below to display "F.WIPER INT."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "WIPER."
  - g. Select "F.WIPER INT."
- (2) Check that normal conditions are displayed for the items described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 05	INT WIPER SW	ON
ITEM 70	FRONT ECU ACK	NORMAL ACK or HI-BEAM ACK

**Q: Are normal conditions displayed for "INT WIPER SW" and "FRONT ECU ACK"?**

**Normal conditions displayed for all the items :** Go to Step 3.

**Normal condition is not displayed for the "INT WIPER SW" :** Replace the column switch. Verify that the windshield wiper works normally.

**Normal condition is not displayed for the "FRONT ECU ACK" :** Replace the front-ECU. Verify that the windshield wiper works normally.

## STEP 3. Check windshield wiper motor connector A-05 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

**Q: Is windshield wiper motor connector A-05 in good condition?**


**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the windshield wiper works normally.



**STEP 4. Check the windshield wiper motor.**

(1) Disconnect windshield wiper motor connector A-05.

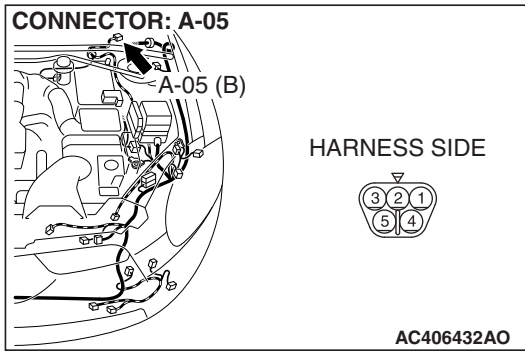


(2) Connect a battery to the windshield wiper motor as shown. Then check that the windshield wiper motor operates normally at high and low speeds.

**Q: Does the windshield wiper motor operate normally?**


**YES :** Go to Step 5.

**NO :** Replace the windshield wiper motor. Verify that the windshield wiper works normally.

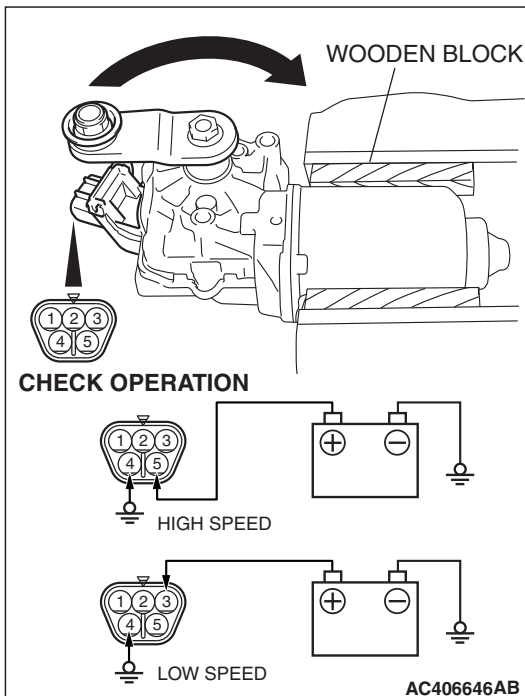


**STEP 5. Check the ground circuit to the windshield wiper motor. Measure the resistance at the windshield wiper motor connector A-05.**

(1) Disconnect windshield wiper motor connector A-05 and measure the resistance available at the wiring harness side of the connector.

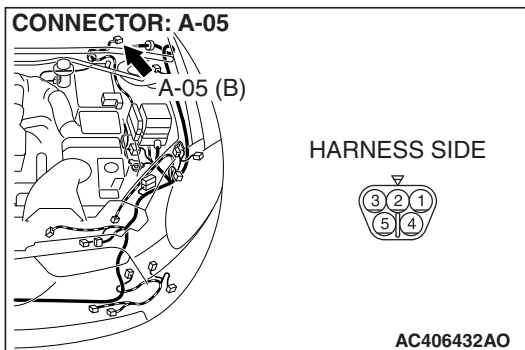



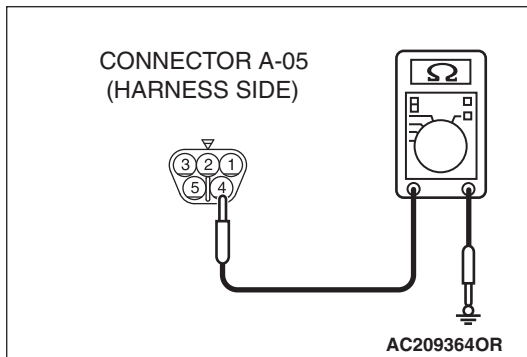


- (2) Measure the resistance value between terminal 4 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 7.

**NO :** Go to Step 6.

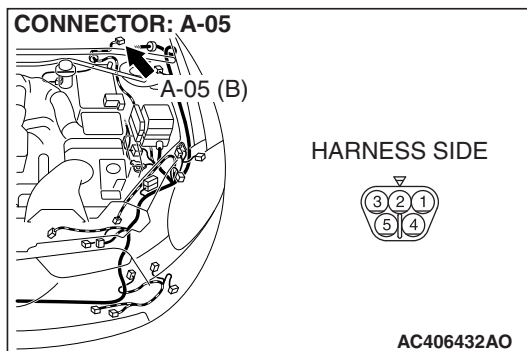


**STEP 6. Check the wiring harness between windshield wiper motor connector A-05 (terminal 4) and ground.**

- Check the ground wire for open circuit.

**Q: Is the wiring harness between windshield wiper motor connector A-05 (terminal 4) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify the windshield wiper works normally.

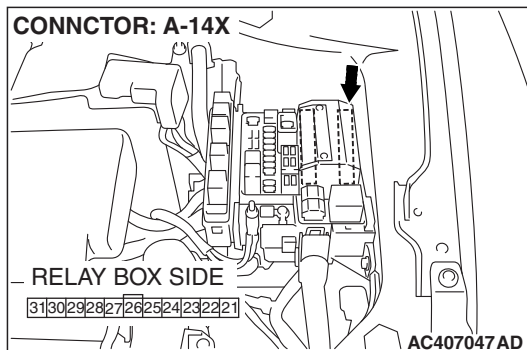


**STEP 7. Check front-ECU connector A-14X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front-ECU connector A-14X in good condition?**

**YES :** Go to Step 8.


**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the windshield wiper works normally.

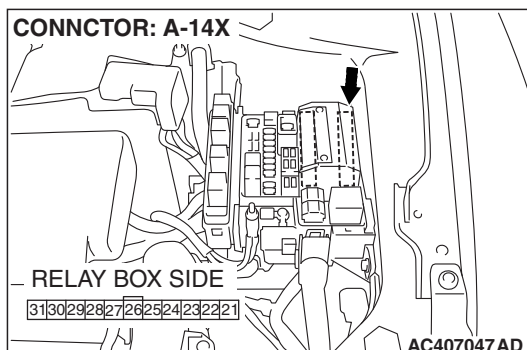

**STEP 8. Check the ignition switch (ACC) circuit to the front-ECU. Measure the voltage at front-ECU connector A-14X.**

- (1) Disconnect front-ECU and measure the resistance available at the relay box side of the connector.
- (2) Turn the ignition switch to the "ON" position.



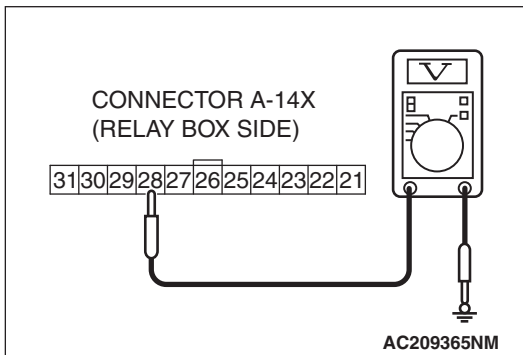

- (3) Measure the voltage between terminal 28 and ground.
- The voltage should measure approximately 12 volts (battery positive voltage).



**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Replace the front-ECU. Verify that the windshield wiper works normally.

**NO :** Go to Step 9.

**STEP 9. Check the wiring harness between front-ECU connector A-14X (terminal 28) and the ignition switch (ACC).**

- Check the power supply line for open circuit and short circuit.

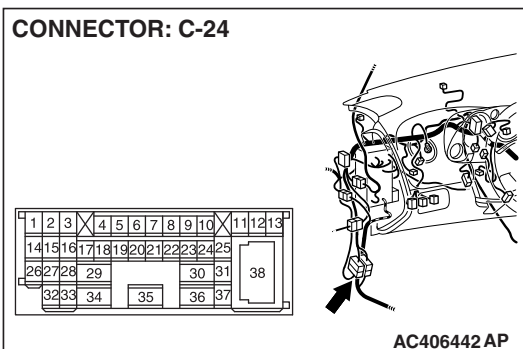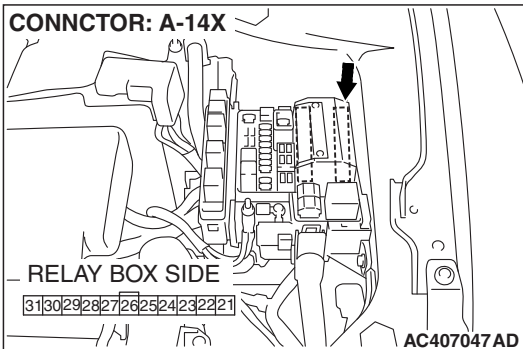

*NOTE: Also check intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-24 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between front-ECU connector A-14X (terminal 28) and the ignition switch (ACC) in good condition?**

**YES :** Refer to GROUP 54A – Ignition switch, trouble symptom chart [P.54A-9](#).


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield wiper works normally.



**INSPECTION PROCEDURE G-2: Windshield Wiper and Washer:** The windshield wipers do not work when the windshield wiper switch is at "INT" or "MIST" position or the windshield washer switch is at "ON" position. However, the wipers work at low speed when the windshield wiper switch is at "LO" or "HI."

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

Windshield Wiper Motor Circuit

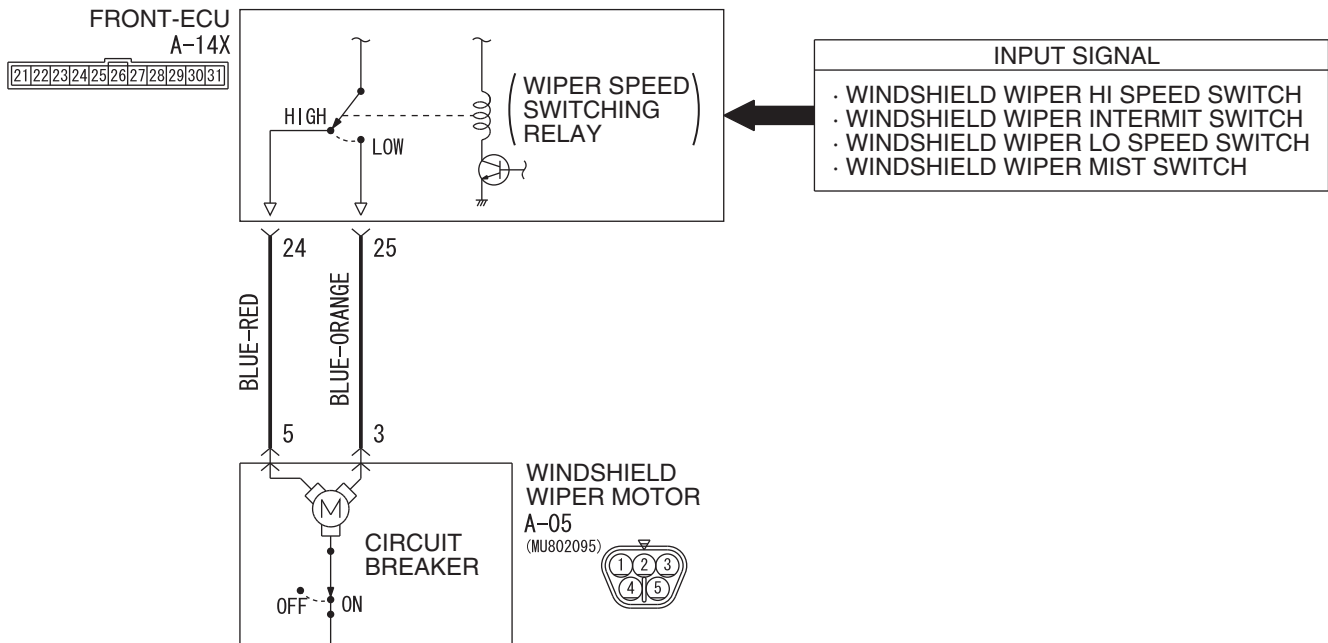

W6P54M027A

## TECHNICAL DESCRIPTION (COMMENT)

This system may be at fail-safe mode if the SWS communication line is defective. If the system cannot receive any signal from the column switch (windshield wiper and washer switch) due to an open circuit in the SWS communication line or other reasons, the system will enter the fail-safe mode when the ignition switch is at the "ACC" position.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The column switch may be defective
- The front-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit



- Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**


- Column-ECU
- Front-ECU

**To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM CHECK."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "COLUMN ECU" and the "FRONT ECU" menus.

**"OK" are displayed for all the items :** Replace the front-ECU. Verify that the windshield wiper works normally.


**"NG" is displayed for the "FRONT ECU" menu :** Refer to Inspection procedure A-4 "Communication with the front-ECU is not possible [P.54B-82](#)."

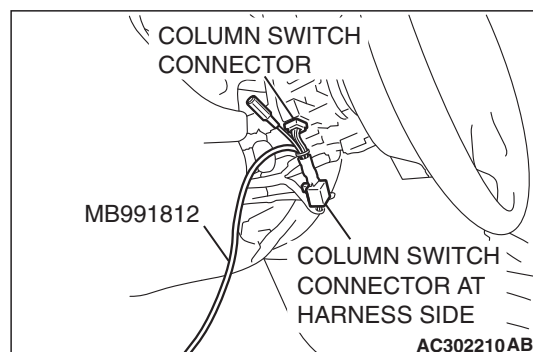





**INSPECTION PROCEDURE G-3: Windshield Wiper and Washer: Either of the windshield wiper switch positions are defective.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

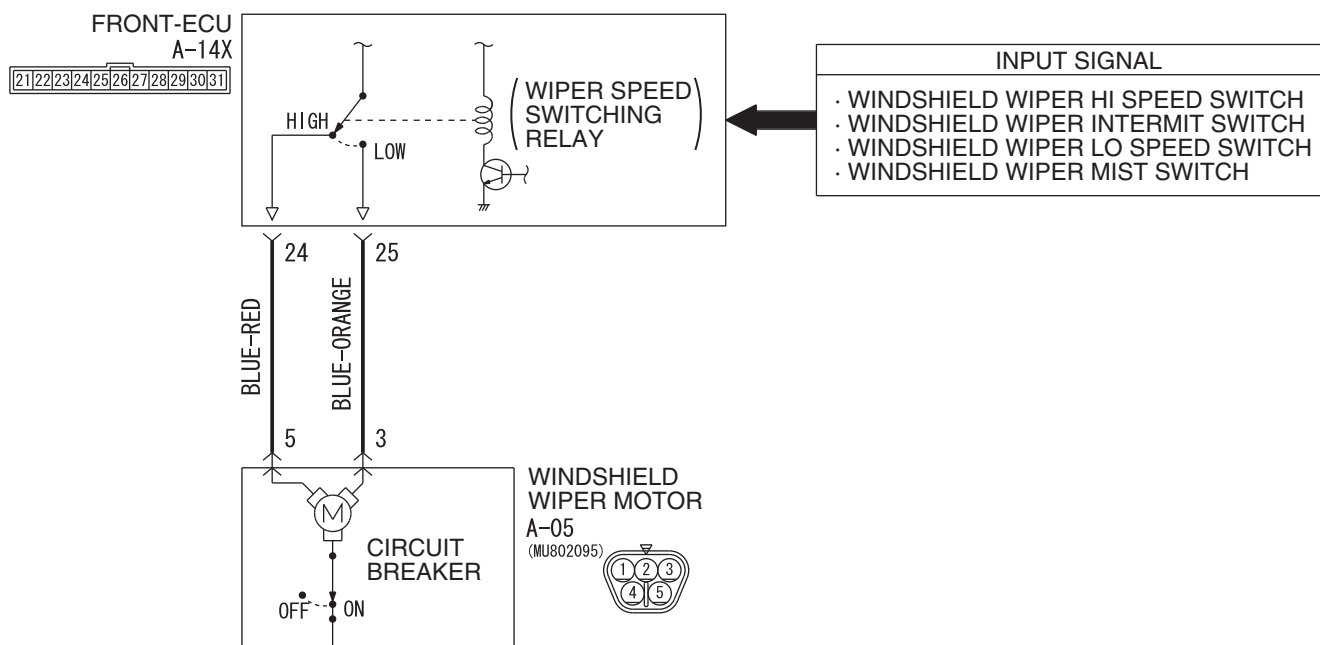**Windshield Wiper Motor Circuit**

W6P54M027A

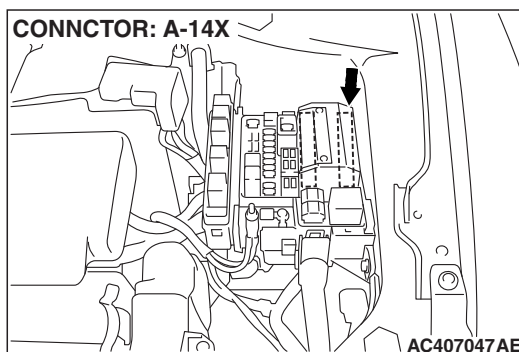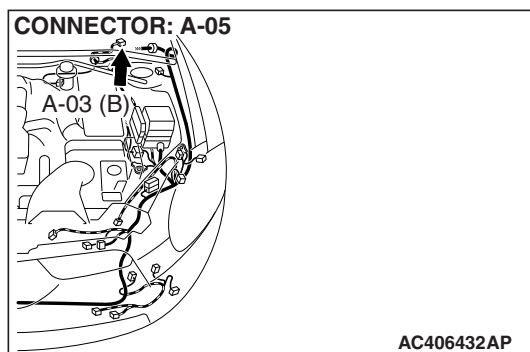**TECHNICAL DESCRIPTION (COMMENT)**

If either of the windshield wiper switch positions is defective, the windshield wiper motor, column switch (windshield wiper and washer switch) or the front-ECU may be defective.

**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The wiper motor may be defective
- The front-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set



- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)

**STEP 1. Check the input signal by using "DATA LIST" menu of the SWS monitor.**

Turn the ignition switch to the ACC position before checking input signals from the windshield wiper switch.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor P.54B-13."
- (2) Operate scan tool MB991958 according to the procedure below to display "COLUMN ECU."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Data List."
  - f. Select "COLUMN ECU."
- (3) Check that normal conditions are displayed for the items described in the table below.
  - Windshield wiper switch: "INT" position



ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 05	INT WIPER SW	ON

- Windshield wiper switch: "LO" position

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 06	LO WIPER SW	ON

- Windshield wiper switch: "HI" position

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 07	HI WIPER SW	ON

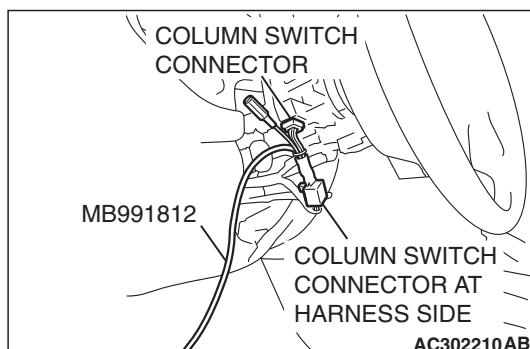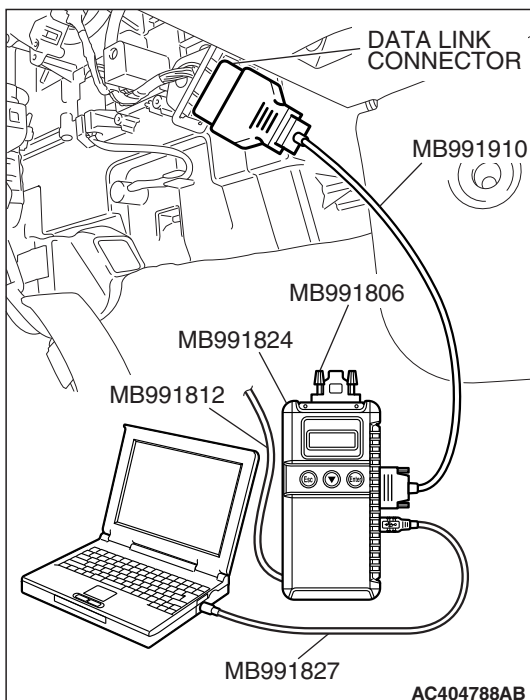



- Windshield wiper switch: "MIST" position

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 08	MIST WIPER SW	ON

**Q: Are normal conditions displayed for "INT WIPER SW", "LO WIPER SW", "HI WIPER SW" and "MIST WIPER SW"?**

**YES :** Go to Step 2.



**NO :** Refer to Inspection Procedure M-7 "ETACS-ECU does not receive any signal from the windshield mist wiper switch [P.54B-525](#)."

**STEP 2. Check windshield wiper motor connector A-05 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is windshield wiper motor connector A-05 in good condition?**

**YES :** Go to Step 3.


**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the windshield wiper operates normally when the windshield wiper switch is moved to each position.

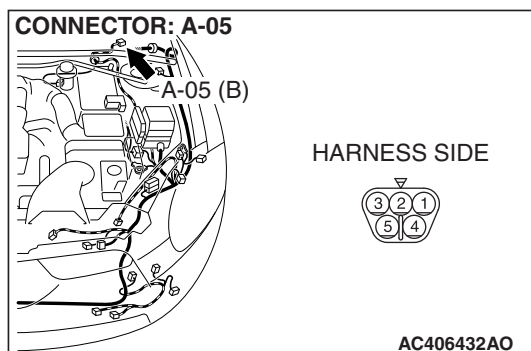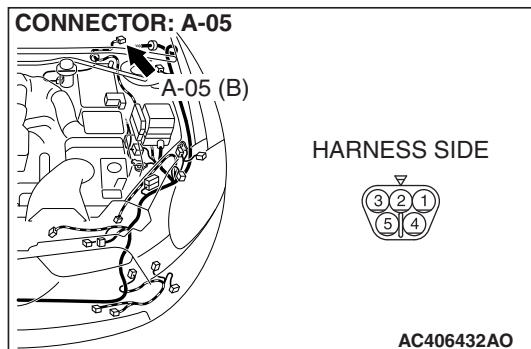

**STEP 3. Check the windshield wiper motor.**

(1) Disconnect windshield wiper motor connector A-05.



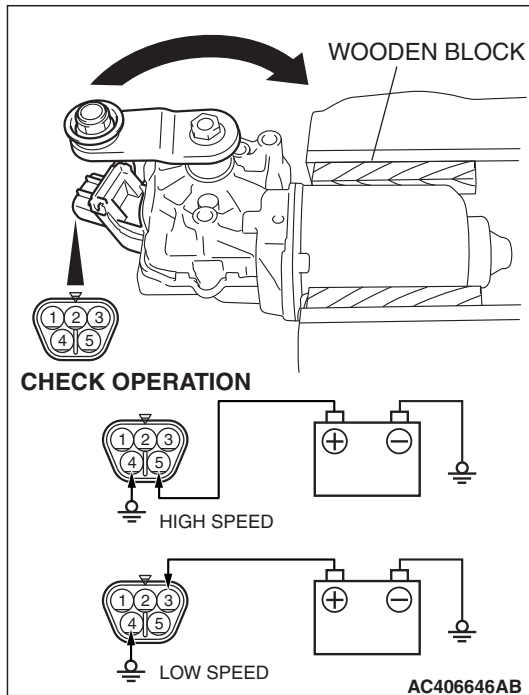


- (2) Connect a battery to the windshield wiper motor as shown. Then check if the windshield wiper motor operates normally at high and low speeds.

**Q: Does the windshield wiper motor operate normally?**

**YES :** Go to Step 4.

**NO :** Replace the windshield wiper motor. Verify that the windshield wiper operates normally when the windshield wiper switch is moved to each position.

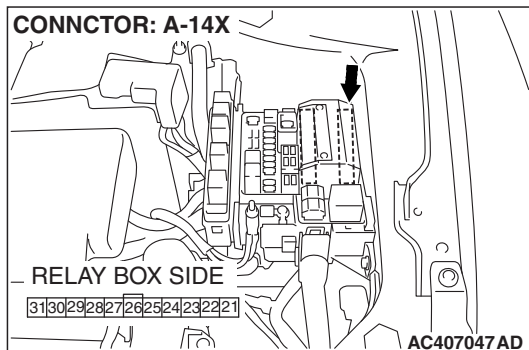

**STEP 4. Check front-ECU connector A-14X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**



**Q: Is front-ECU connector A-14X in good condition?**

**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

[P.00E-2](#). Verify that the windshield wiper operates normally when the windshield wiper switch is moved to each position.



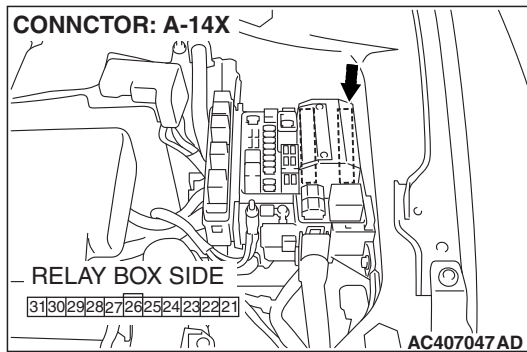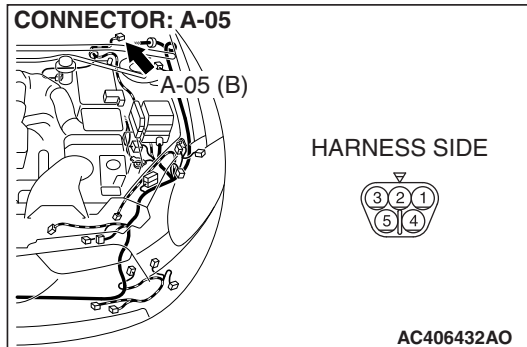

**STEP 5. Check the wiring harness between windshield wiper motor connector A-05 (terminals 3 and 5) and front-ECU connector A-14X (terminals 25 and 24).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between windshield wiper motor connector A-05 (terminals 3 and 5) and front-ECU connector A-14X (terminals 25 and 24) in good condition?**


**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield wiper operates normally when the windshield wiper switch is moved to each position.






**INSPECTION PROCEDURE G-4: Windshield Wiper and Washer: Windshield wipers does not stop at the predetermined park position.**

**Windshield Wiper Automatic Stop Relay Circuit**

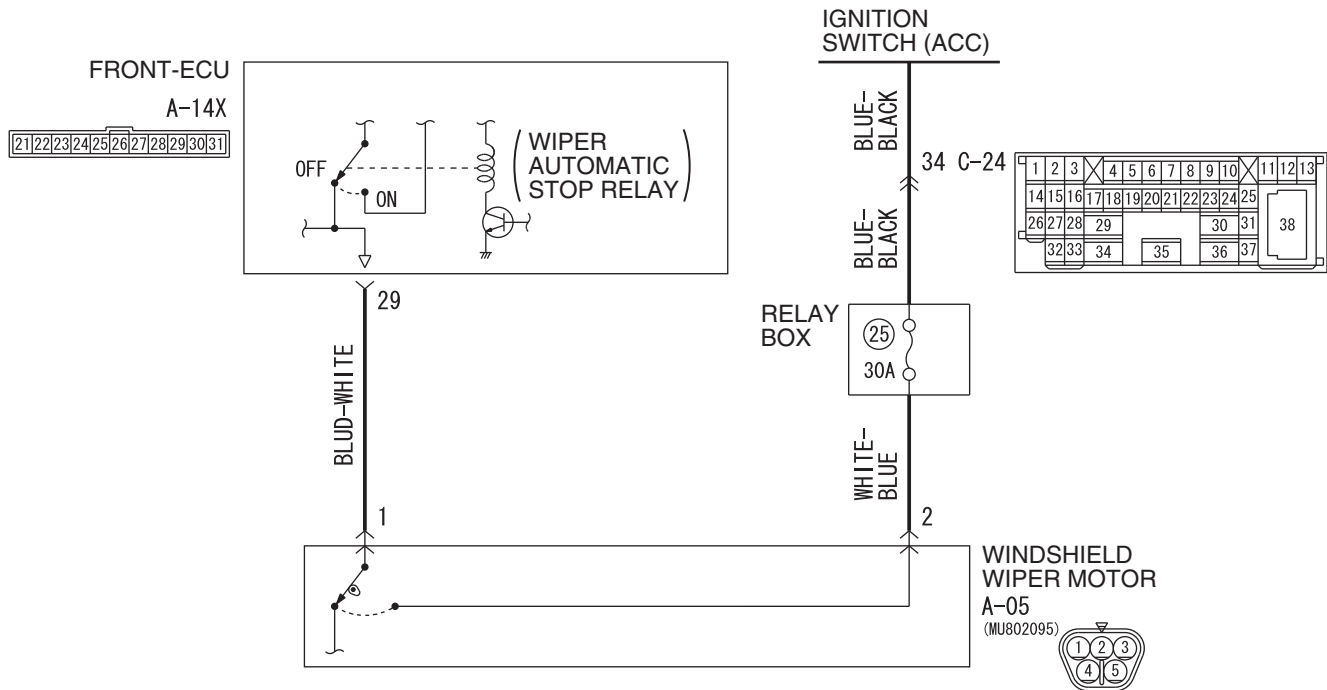

W6P54M028A

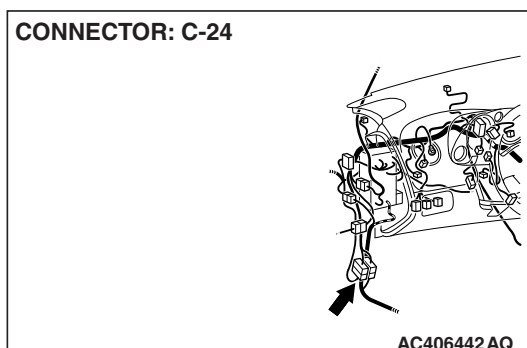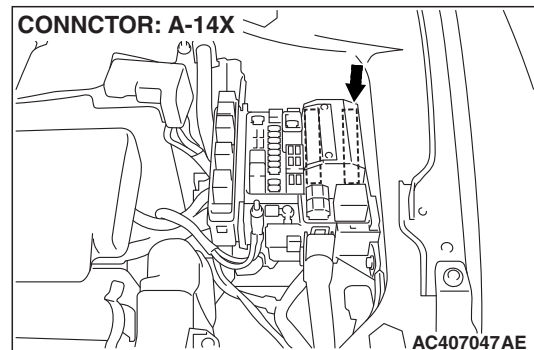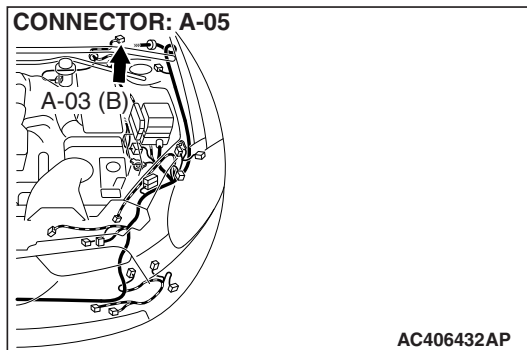



**TECHNICAL DESCRIPTION (COMMENT)**

If the windshield wipers do not stop at predetermined park position, the windshield wiper motor or the front-ECU may be defective.

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The windshield wiper motor may be defective
- The front-ECU may be defective

**DIAGNOSIS****Required Special Tools:**



- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP1. Check windshield wiper motor connector A-05 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is windshield wiper motor connector A-05 in good condition?**


**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the windshield wiper works normally.

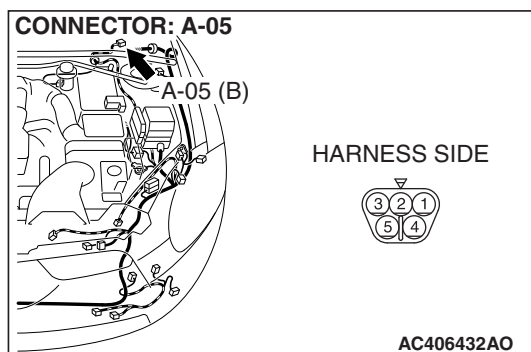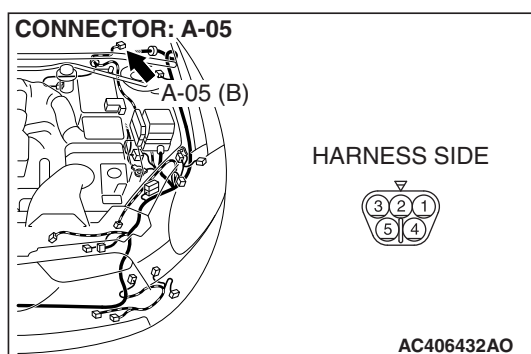**STEP 2. Check the windshield wiper motor.**

(1) Disconnect windshield wiper motor connector A-05.



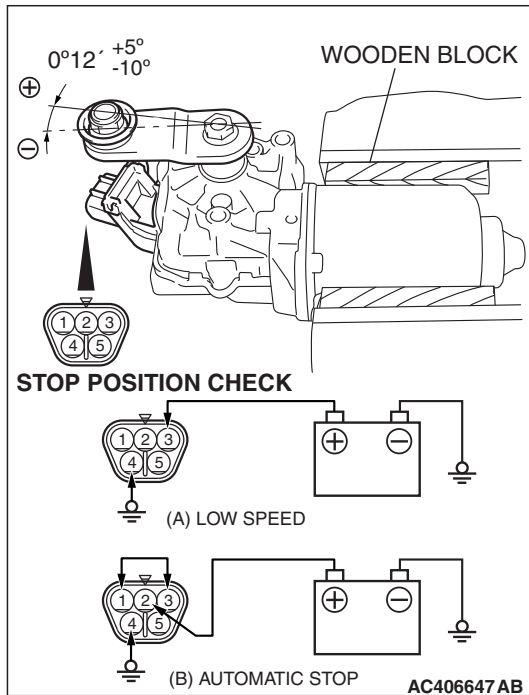


- (2) Connect the vehicle battery to the windshield wiper motor connector as shown, and operate the windshield wiper at low speed. While the windshield wiper is working, disconnect the battery at positions other than the predetermined park position to stop the windshield wiper motor.
- (3) When the battery is connected as shown, the motor should run at low speed, and then stop at the predetermined park position.

**Q: Does the windshield wiper motor operate normally?**


**YES :** Go to Step 3.

**NO :** Replace the windshield wiper motor. The windshield wiper should now stop at the predetermined park position.

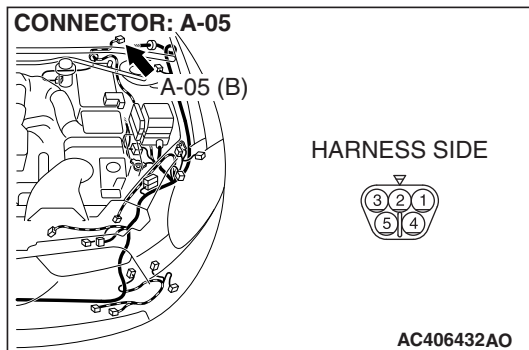

**STEP 3. Check the ignition switch (ACC) circuit to the windshield wiper motor. Measure the voltage at windshield wiper motor connector A-05.**

- (1) Disconnect windshield wiper motor connector A-05 and measure the voltage available at the wiring harness side of the connector.
- (2) Turn the ignition switch to the "ACC" position.

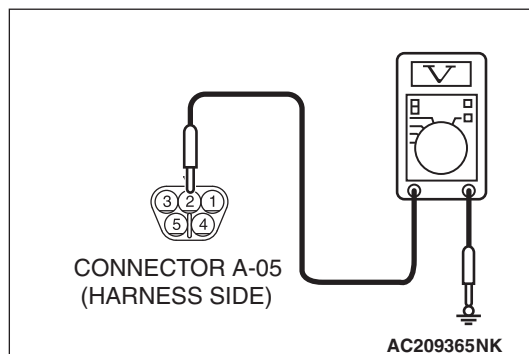

- (3) Measure the voltage between terminal 2 and ground.
  - The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**



**YES :** Go to Step 5.

**NO :** Go to Step 4.



**STEP 4. Check the wiring harness between windshield wiper motor connector A-05 (terminal 2) and the ignition switch (ACC).**

- Check the power supply line for open circuit and short circuit.

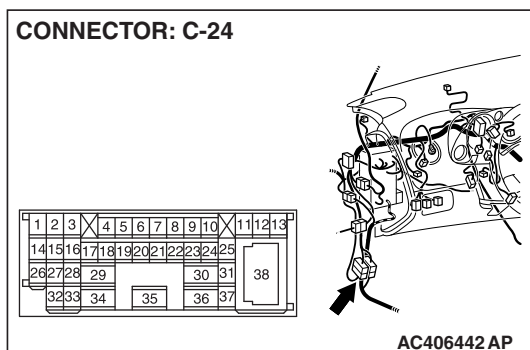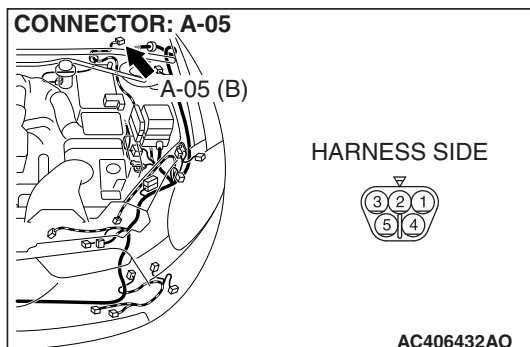

*NOTE: Also check intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-24 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between windshield wiper motor connector A-05 (terminal 2) and the ignition switch (ACC) in good condition?**

**YES :** Refer to GROUP 54A – Ignition switch, trouble symptom chart [P.54A-9](#).


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield wiper works normally.

**STEP 5. Check front-ECU connector A-14X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front-ECU connector A-14X in good condition?**

**YES :** Go to Step 6.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The windshield wiper should stop at the predetermined park position.

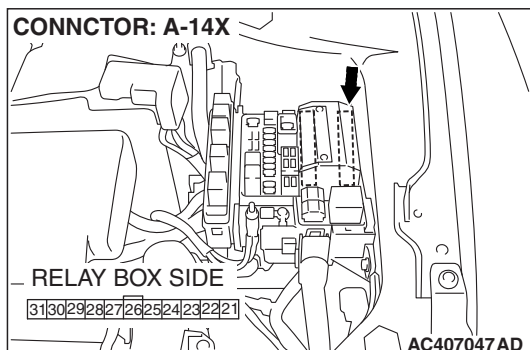





**STEP 6. Check the wiring harness between windshield wiper motor connector A-05 (terminal 1) and front-ECU connector A-14X (terminal 29).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between windshield wiper motor connector A-05 (terminal 1) and front-ECU connector A-14X (terminal 29) in good condition?**

**YES :** Replace the front-ECU. The windshield wiper should stop at the predetermined park position.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield wiper works normally.

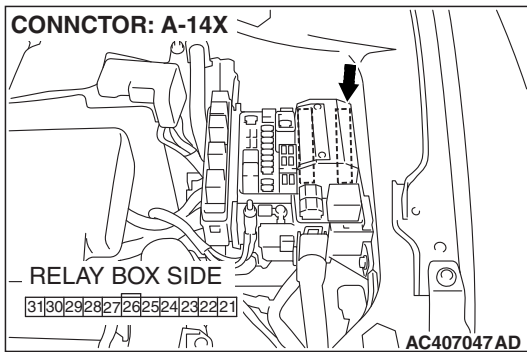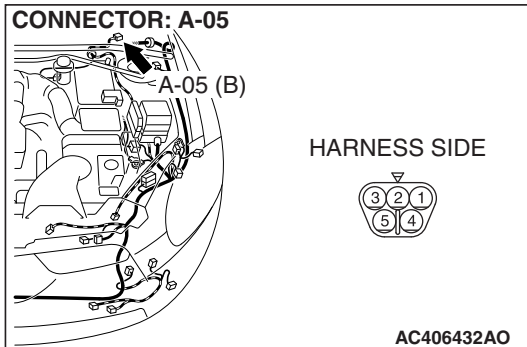



**INSPECTION PROCEDURE G-5: Windshield Wiper and Washer: The windshield intermittent wiper interval cannot be adjusted by using the variable intermittent wiper control switch.**

*NOTE: This troubleshooting procedure requires the use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

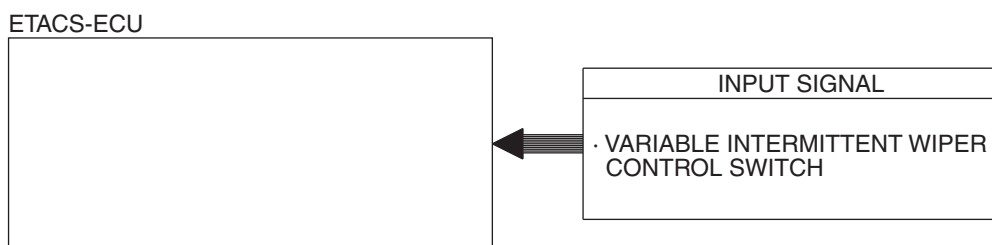**Variable Intermittent Wiper Control Switch Input Signal**

W4P54M56AA

**TECHNICAL DESCRIPTION (COMMENT)**

If the windshield intermittent wiper interval is not changed by operating the windshield intermittent wiper interval adjusting knob or according to the vehicle speed, the column switch, the ETACS-ECU or the front-ECU may be defective.

**TROUBLESHOOTING HINTS**

- Trouble in input signal system
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The ETACS-ECU may be defective
- The front-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.

Set each switch to the following condition to check input signals from the variable intermittent wiper control switch:

- Ignition switch: ACC
- Windshield wiper switch: INT



**CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor P.54B-13."
- (2) Operate scan tool MB991958 according to the procedure below to display "F.WIPER INT."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "WIPER."
  - g. Select "F.WIPER INT."
- (3) Check that normal conditions are displayed for the items described in the table below.

*NOTE: Also check that the windshield wiper interval changes smoothly when the variable intermittent wiper control switch is rotated from "SLOW" to "FAST" position.*

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 37	INT WIPER TIME	1.6 – 19.0 s

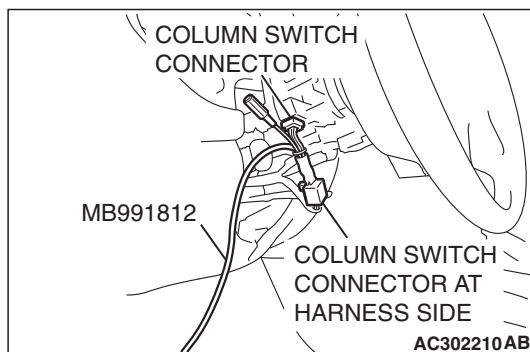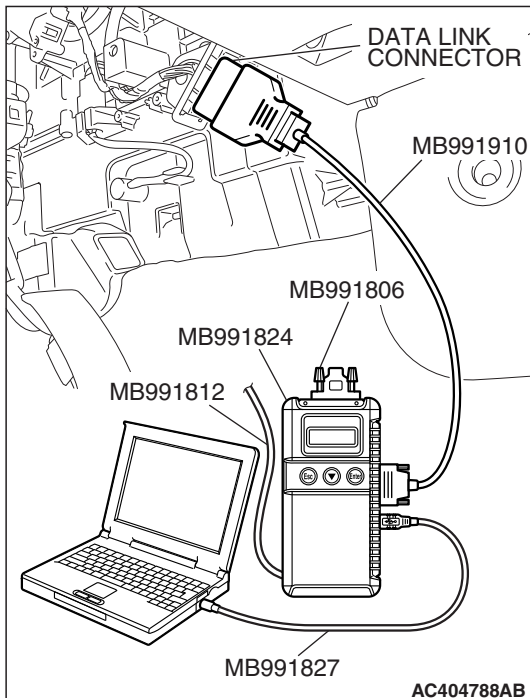

**Q: Does the value change within the normal range when the windshield intermittent wiper interval adjusting knob is rotated?**

**YES :** Replace the front-ECU. Check that the windshield intermittent wiper interval changes according to the vehicle speed or while the windshield intermittent wiper interval adjusting knob is rotated.

**NO :** Refer to Inspection Procedure M-8 "ETACS-ECU does not receive any signal from the variable intermittent wiper control switch P.54B-529."




**INSPECTION PROCEDURE G-6: Windshield Wiper and Washer: The windshield intermittent wiper interval is not changed according to the vehicle speed.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**Variable Intermittent Wiper Control Switch Input Signal**

ETACS-ECU

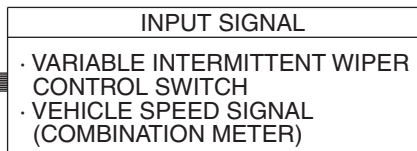

W4P54M57AA

**TECHNICAL DESCRIPTION (COMMENT)**

If the windshield intermittent wiper interval does not change according to the vehicle speed, the ETACS-ECU or the front-ECU may be defective.

**TROUBLESHOOTING HINTS**

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The combination meter may be defective
- The ETACS-ECU may be defective
- The front-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor P.54B-13."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis P.54C-17).

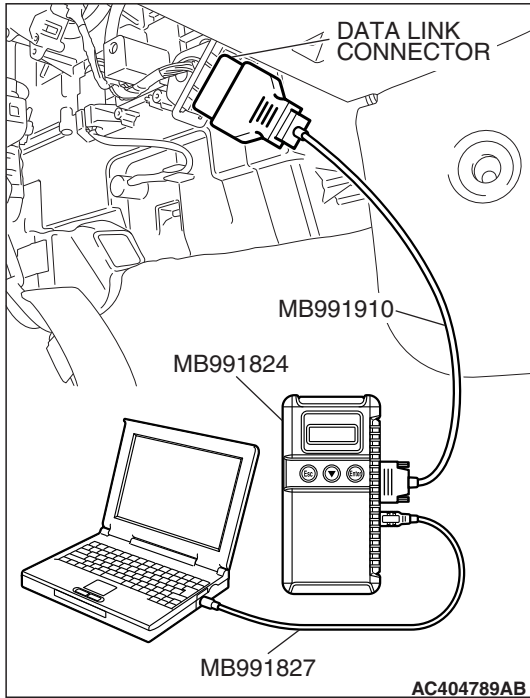

**STEP 2. Using scan tool MB991958, read the combination meter diagnostic trouble code.**


Check whether the combination meter-related DTC is set.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check whether the combination meter-related DTC is set.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the combination meter. Refer to P.54A-60.

**NO :** Go to Step 3.

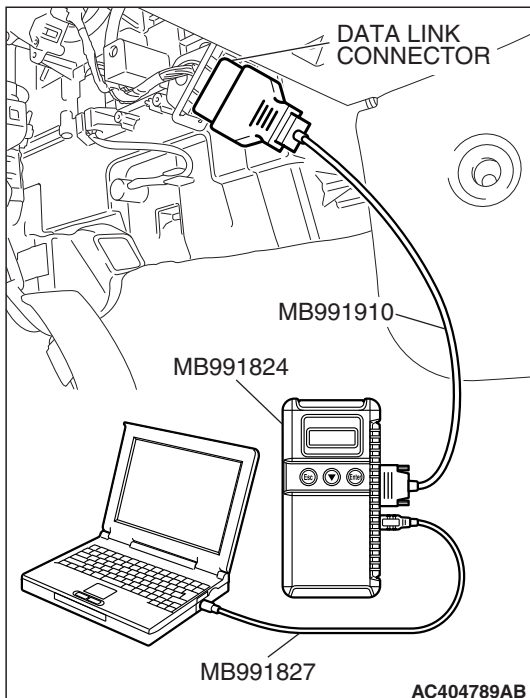



**STEP 3. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.**

Check the input signals from the following switches:

- Ignition switch: ACC
- Windshield wiper switch: INT
- Intermittent wiper control: slow side

**⚠ CAUTION**

**Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.**

- (1) Operate the scan tool MB991958 according to the procedure below to display "F.WIPER INT."
  - a. Select "System select."
  - b. Select "SWS."
  - c. Select "SWS MONITOR."
  - d. Select "Function Diag."
  - e. Select "WIPER."
  - f. Select "F.WIPER INT."
- (2) Check that normal conditions are displayed for the items described in the table below.



*NOTE: Also check that the wiper interval changes smoothly when the vehicle is accelerated from 0 km/h (0 mph) to 60 km/h (37.5 mph).*

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 37	INT WIPER TIME	14.0 – 19.0 s

**Q: Does the value change within the normal range when the variable intermittent wiper control switch is rotated?**

**YES :** Replace the front-ECU. The windshield intermittent wiper interval should change according to the vehicle speed.

**NO :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The windshield intermittent wiper interval should change according to the vehicle speed.

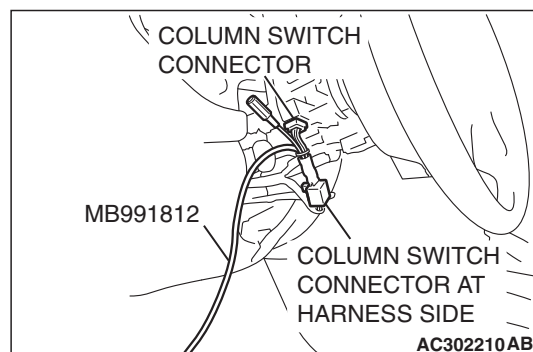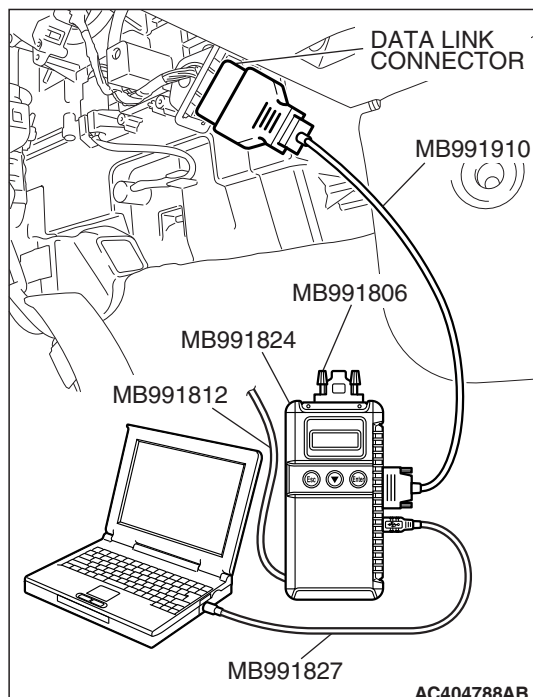








**INSPECTION PROCEDURE G-7: Windshield Wiper and Washer: The windshield washer does not work.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**Windshield Washer Motor Circuit**

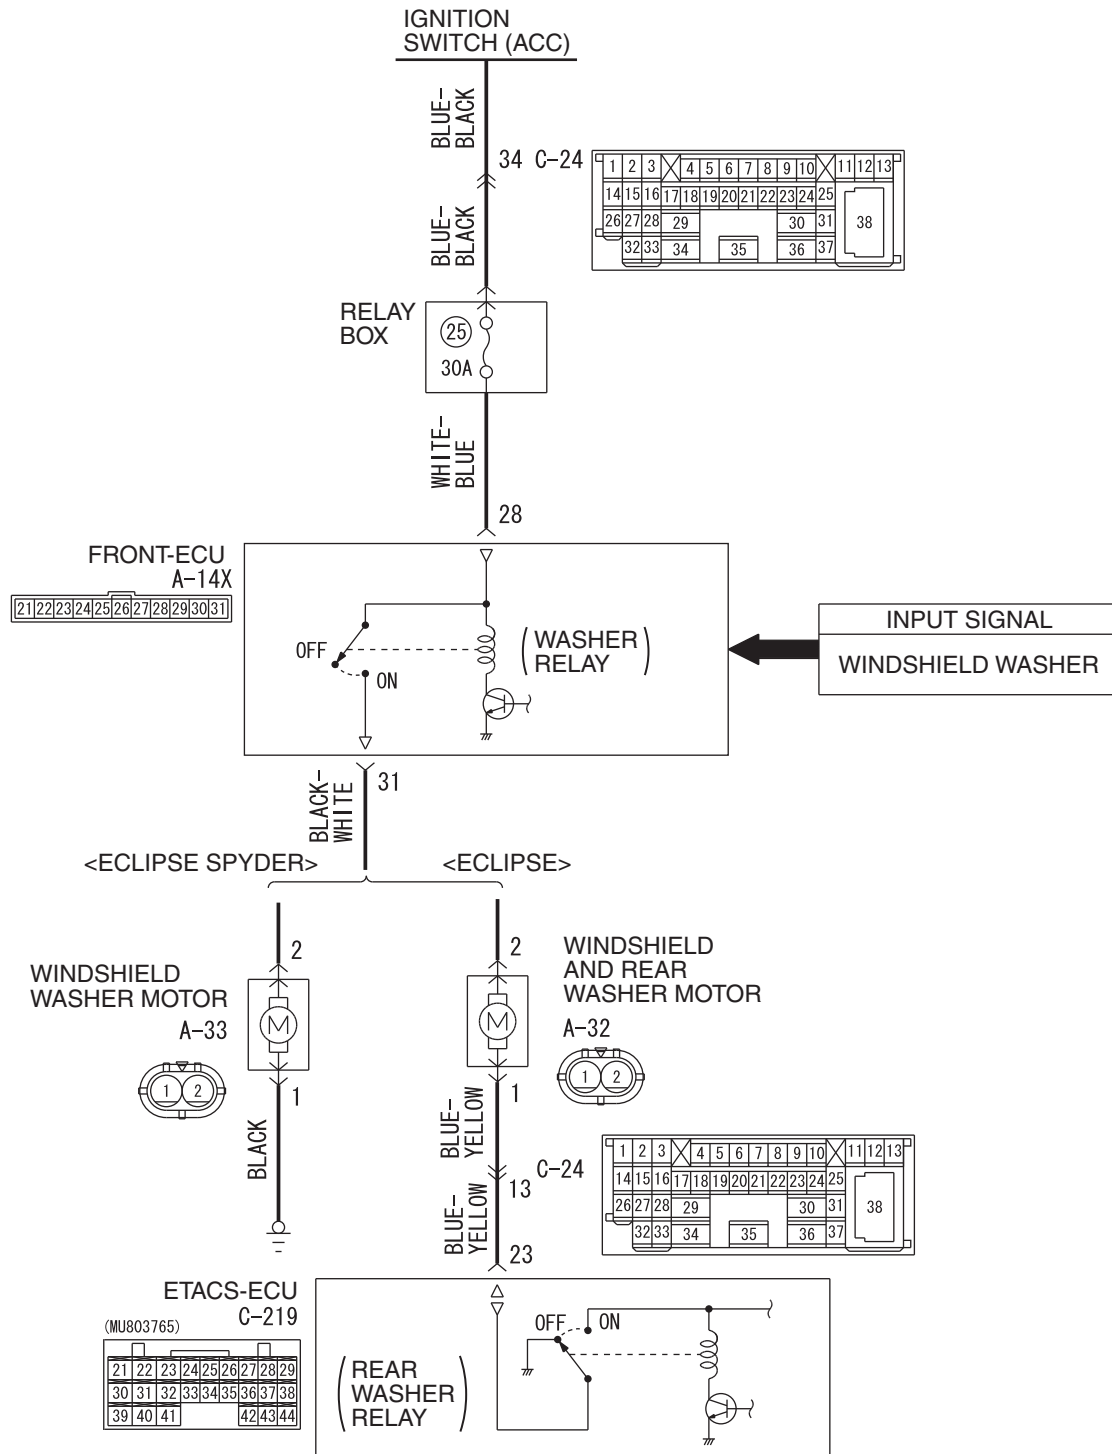



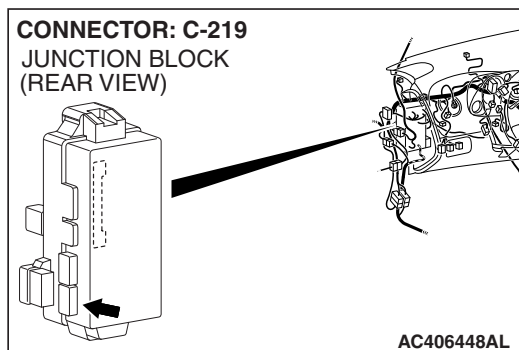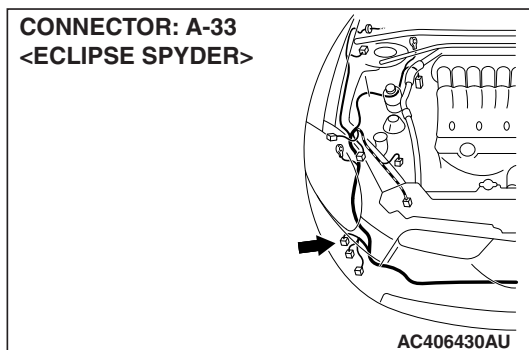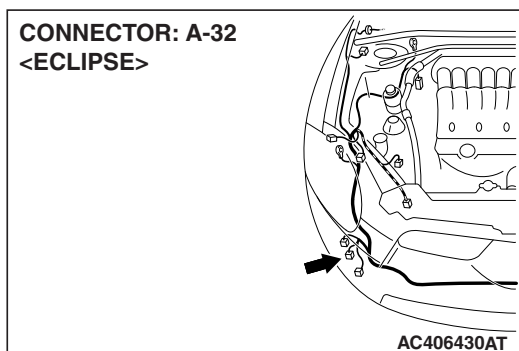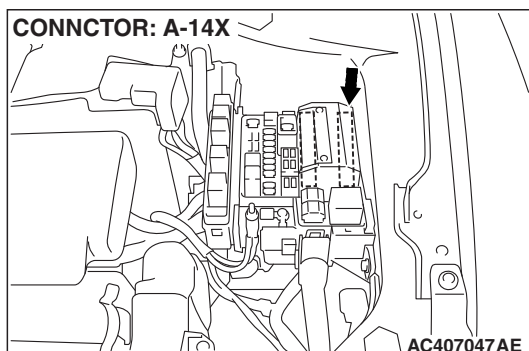

## CIRCUIT OPERATION

The windshield washer switch sends a signal through the column-ECU (incorporated in the column switch) to the front-ECU. If the column-ECU sends a windshield washer switch "ON" signal to the front-ECU, the front-ECU turns on the relay (incorporated in the front-ECU), thus causing the washer motor to be turned on.

## TECHNICAL DESCRIPTION (COMMENT)

If the windshield washer does not work normally, the washer motor, the column switch (windshield wiper and washer switch) or the front-ECU may be defective.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The washer motor may be defective
- The column switch may be defective
- The front-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A
- MB991813: SWS Monitor Kit
  - MB991806: SWS Monitor Cartridge
  - MB991812: SWS Monitor Harness (For Column-ECU)
  - MB991822: Probe Harness



**STEP 1. Verify the windshield wiper operation.**

**Q: Does the windshield wiper operate normally?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure G-1 "The windshield wipers do not work at all [P.54B-213](#)."

**STEP 2. Use scan tool MB991958 to select "ECU COMM Check" on the SWS monitor display.**

Check the following ECUs:

- Column-ECU
- Front-ECU

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.



- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "COLUMN ECU" and the "FRONT ECU" menus.

**Q: Are "OK" displayed for the "COLUMN ECU" and "FRONT ECU" menu?**



**"OK" are displayed for all the items :** Go to Step 3.

**"NG" is displayed for the "COLUMN ECU" menu :** Refer to Inspection Procedure A-2 "Communication with the column switch (column-ECU) is not possible [P.54B-66](#)."

**"NG" is displayed for the "FRONT ECU" menu :** Refer to Inspection procedure A-4 "Communication with the front-ECU is not possible [P.54B-82](#)."

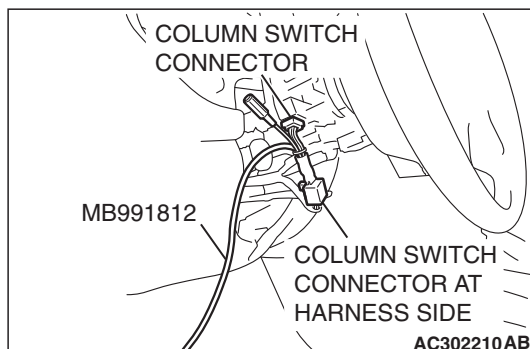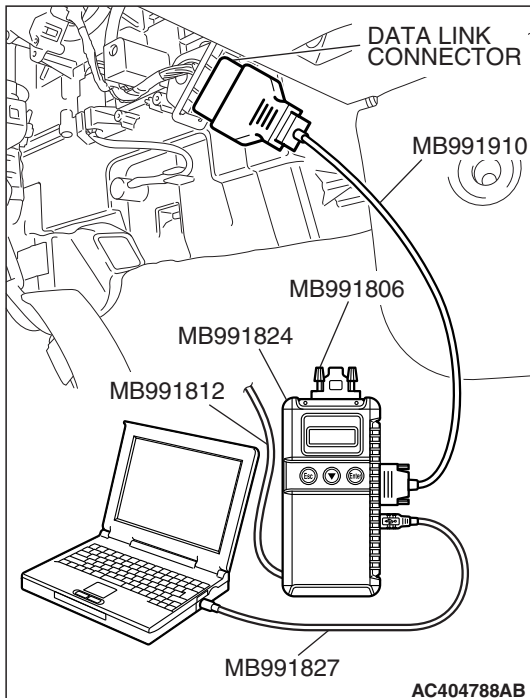



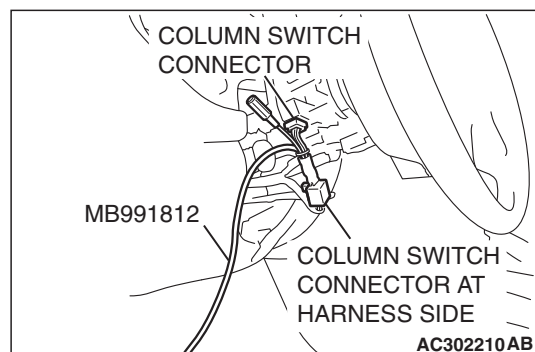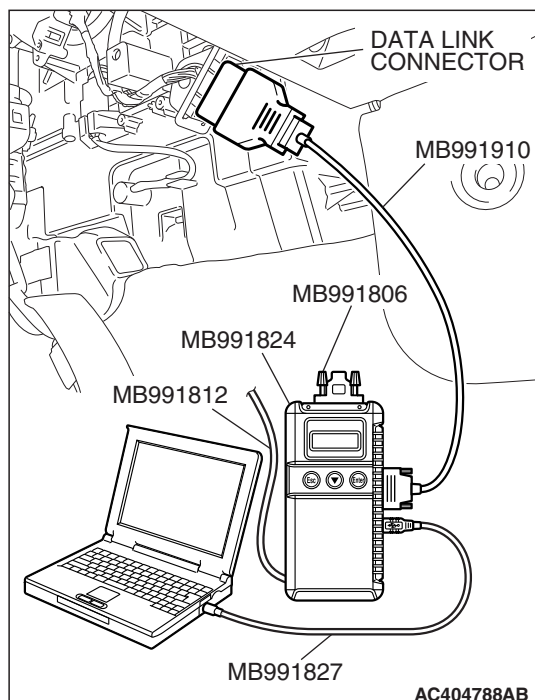

### STEP 3. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.

Check the input signals from the following switches:

- Ignition switch: ACC
- Windshield washer switch: ON

(1) Operate the scan tool MB991958 according to the procedure below to display "F.WIPER WASH."

- Select "Interactive Diagnosis."
- Select "System select."
- Select "SWS."
- Select "SWS MONITOR."
- Select "Function Diag."
- Select "WIPER."
- Select "F.WIPER WASH."

(2) Check that normal conditions are displayed for the items described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 09	FRONT WASH.SW	ON
ITEM 70	FRONT ECU ACK	NORMAL ACK or HI-BEAM ACK

**Q: Are normal conditions displayed for "FRONT WASH.SW" and "FRONT ECU ACK"?**

**Normal conditions displayed for all the items :** Go to Step 4.


**Normal condition is not displayed for the "FRONT WASH.SW" :** Replace the column switch. Verify that the windshield washer works normally.

**Normal condition is not displayed for the "FRONT ECU ACK" :** Replace the front-ECU. Verify that the windshield washer works normally.



CONNECTOR: A-32  
<ECLIPSE>


HARNESS SIDE

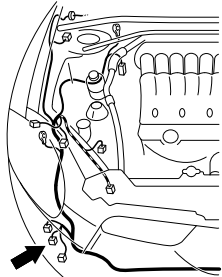

AC406430AV

CONNECTOR: A-33  
<ECLIPSE SPYDER>

HARNESS SIDE

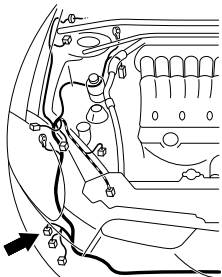

AC406430AW

**STEP 4. Check windshield and rear washer motor connector A-32 <ECLIPSE> or windshield washer motor connector A-33 <ECLIPSE SPYDER> for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is windshield and rear washer motor connector A-32 <ECLIPSE> or windshield washer motor connector A-33 <ECLIPSE SPYDER> in good condition?**


**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

[P.00E-2](#). Verify that the windshield washer works normally.

CONNECTOR: A-32  
<ECLIPSE>


HARNESS SIDE

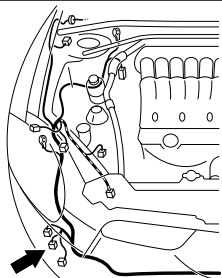

AC406430AV

CONNECTOR: A-33  
<ECLIPSE SPYDER>

HARNESS SIDE

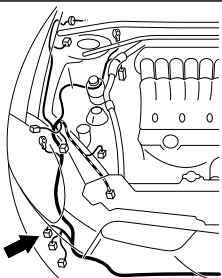


AC406430AW

**STEP 5. Check the washer motor.**

- (1) Disconnect windshield and rear washer motor connector A-32 <ECLIPSE> or windshield washer motor connector A-33 <ECLIPSE SPYDER>, and check at windshield and rear washer motor connector <ECLIPSE> or windshield washer motor connector <ECLIPSE SPYDER> side.
- (2) Fill the windshield washer tank with washer fluid.



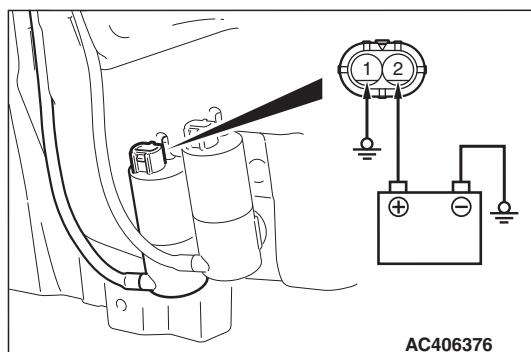

- (3) When battery voltage is applied between terminals 1 and 2, washer fluid should spray out.

**Q: Does the washer motor operate normally?**



**YES <ECLIPSE SPYDER>** : Go to Step 6.

**YES <ECLIPSE>** : Go to Step 10.

**NO** : Replace the washer motor. Verify that the windshield washer works normally.

**STEP 6. Check the ground circuit to the windshield washer motor. Measure the resistance at the windshield washer motor connector A-33.**

- (1) Disconnect windshield washer motor connector A-33 and measure the resistance available at the wiring harness side of the connector.

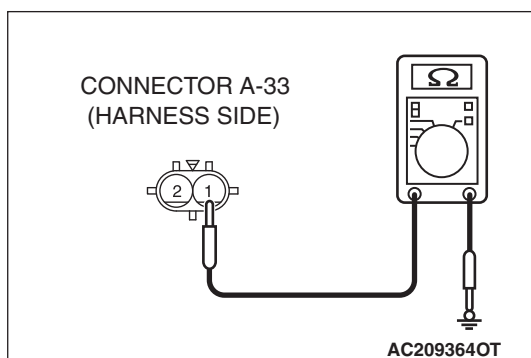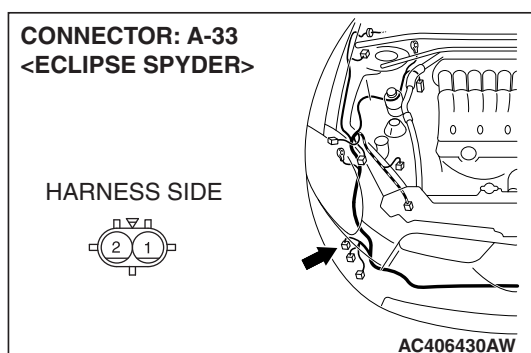

- (2) Measure the resistance value between terminal 1 and ground.
- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES** : Go to Step 8.

**NO** : Go to Step 7.


**STEP 7. Check the wiring harness between windshield washer motor connector A-33 (terminal 1) and ground.**

- Check the ground wire for open circuit.


**Q: Is the wiring harness between windshield washer motor connector A-33 (terminal 1) and ground in good condition?**

**YES** : No action is necessary and testing is complete.

**NO** : The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield washer works normally.

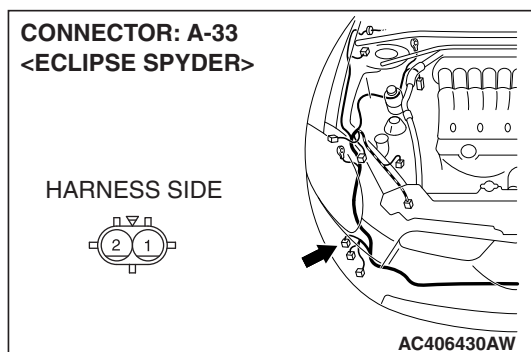



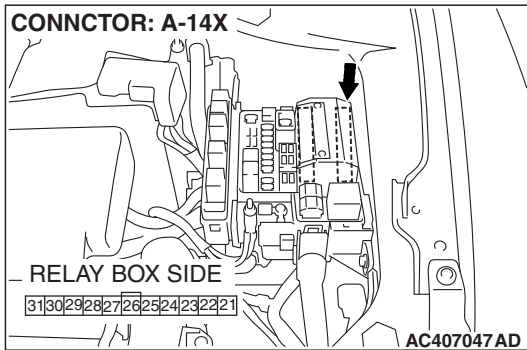


**STEP 8. Check front-ECU connector A-14X for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front-ECU connector A-14X in good condition?**

**YES :** Go to Step 9.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the windshield washer works normally.

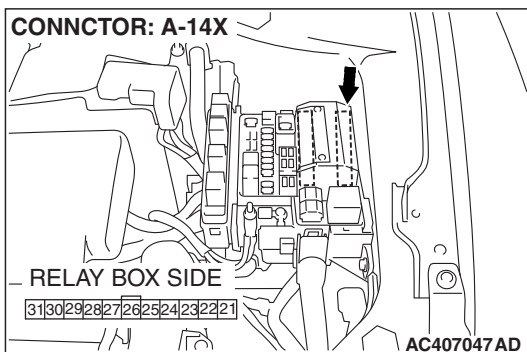



**STEP 9. Check the wiring harness between windshield and rear washer motor connector A-32 (terminal 2) <ECLIPSE> or windshield washer motor connector A-33 (terminal 2) <ECLIPSE SPYDER> and front-ECU connector A-14X (terminal 31).**

- Check the communication lines for open circuit and short circuit.


**Q: Is the wiring harness between windshield and rear washer motor connector A-32 (terminal 2) <ECLIPSE> or windshield washer motor connector A-33 (terminal 2) <ECLIPSE SPYDER> and front-ECU connector A-14X (terminal 31) in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield washer works normally.

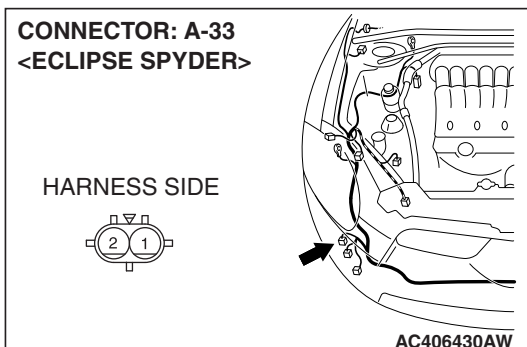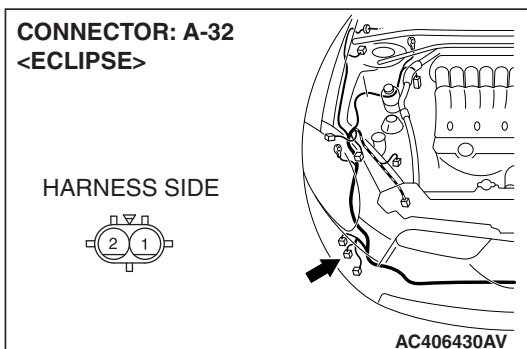



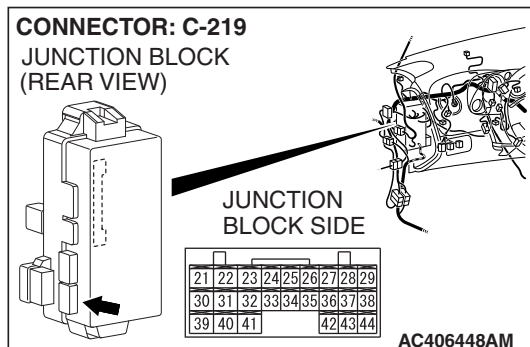


**STEP 10. Check ETACS-ECU connector C-219 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-219 in good condition?**

**YES :** Go to Step 11.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the windshield washer works normally.

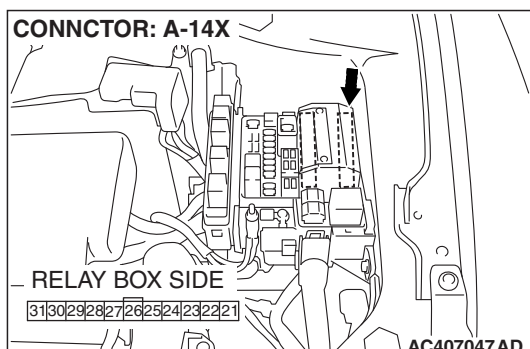


**STEP 11. Check the wiring harness between front and rear washer motor connector A-32 (terminal 1) and ETACS-ECU connector C-219 (terminal 23).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between front and rear washer motor connector A-32 (terminal 1) and ETACS-ECU connector C-219 (terminal 23) in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the windshield washer works normally.

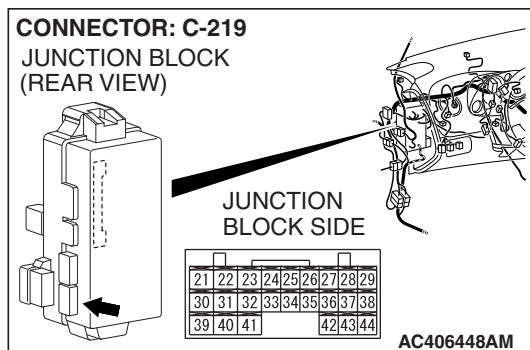



## REAR WIPER AND WASHER

### GENERAL DESCRIPTION CONCERNING THE REAR WIPER AND WASHER


M1549021600328

The following ECUs affect the functions and control of the rear wiper and washer.

FUNCTION	CONTROL ECU
Rear wiper control	ETACS-ECU, column switch
Rear washer control	ETACS-ECU, column switch

## REAR WIPER AND WASHER

### Rear wiper control

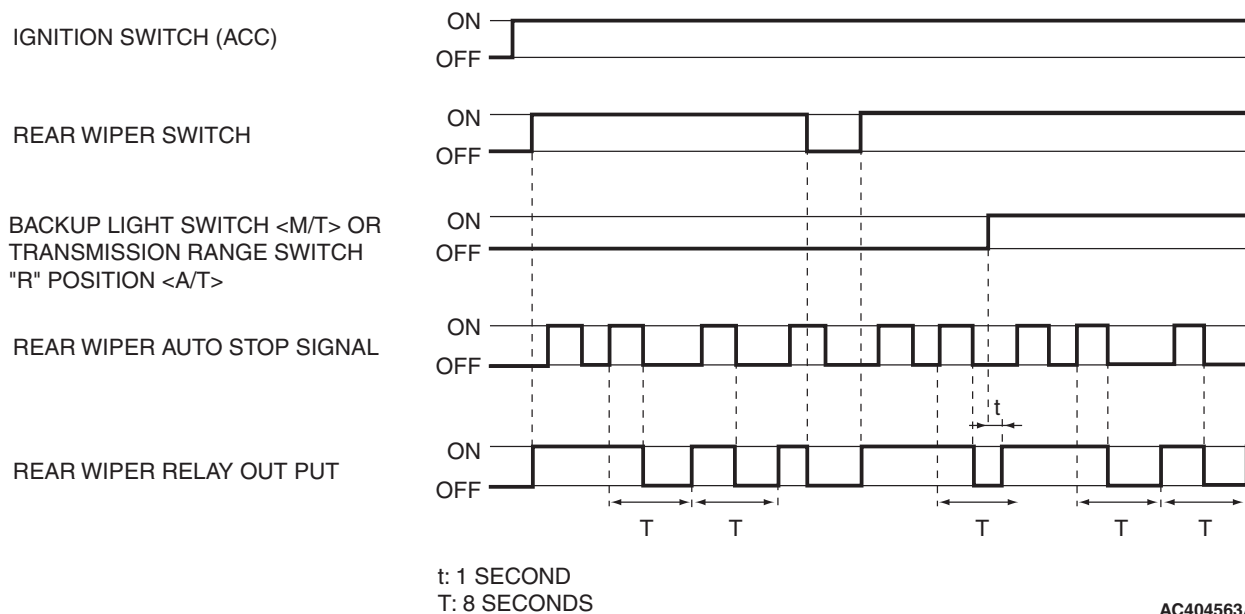

AC404563AB

#### Intermittent control (basic control)

When the rear wiper switch on the column switch is turned ON with the ignition switch ACC or ON, ETACS-ECU turns ON the rear wiper relay and operates the rear wiper twice consecutively. After that, operation continues at 8-second intervals.


#### "R" position-linked control

When the shift lever <M/T> or the selector lever <A/T> is moved to R (reverse) position during the rear wiper operation, the backup light switch <M/T> or the transmission range switch R (reverse) <A/T> turns ON. One second after that, the ETACS-ECU turns the rear wiper relay ON, and operates the rear wiper twice consecutively.

**NOTE:** If the rear wiper switch is turned OFF or the backup light switch <M/T> or the transmission range switch R (reverse) <A/T> is turned OFF while the rear wiper is operating twice consecutively, the rear wiper relay will be turned OFF and the rear wiper will be stopped.



## Rear washer control

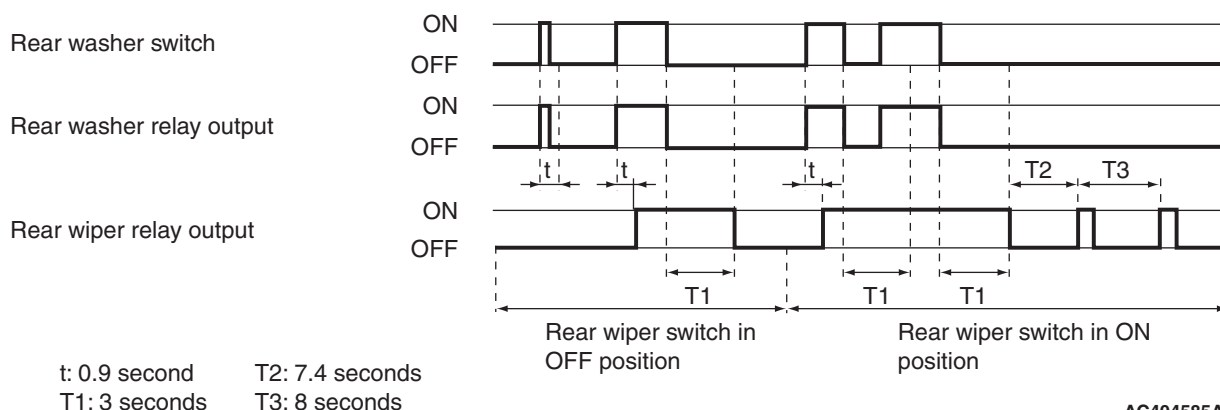

When the rear washer switch on the column switch is turned ON with the ignition switch ACC or ON, the ETACS-ECU turns ON the rear washer relay. If the rear washer switch remains ON for 0.9 second or more, the rear wiper operates. 3 seconds after the rear washer switch is turned OFF, the rear wiper is stopped.


If the rear washer switch is turned ON during the intermittent operation of the rear wiper, the rear wiper operates along with the rear washer consecutively. 7.4 seconds after the rear wiper stops consecutive operation, it returns to the intermittent operation.



**INSPECTION PROCEDURE H-1: Rear Wiper and Washer: Rear wiper does not work at all.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor [P.54B-15](#)."*



**Rear Wiper Drive Circuit**

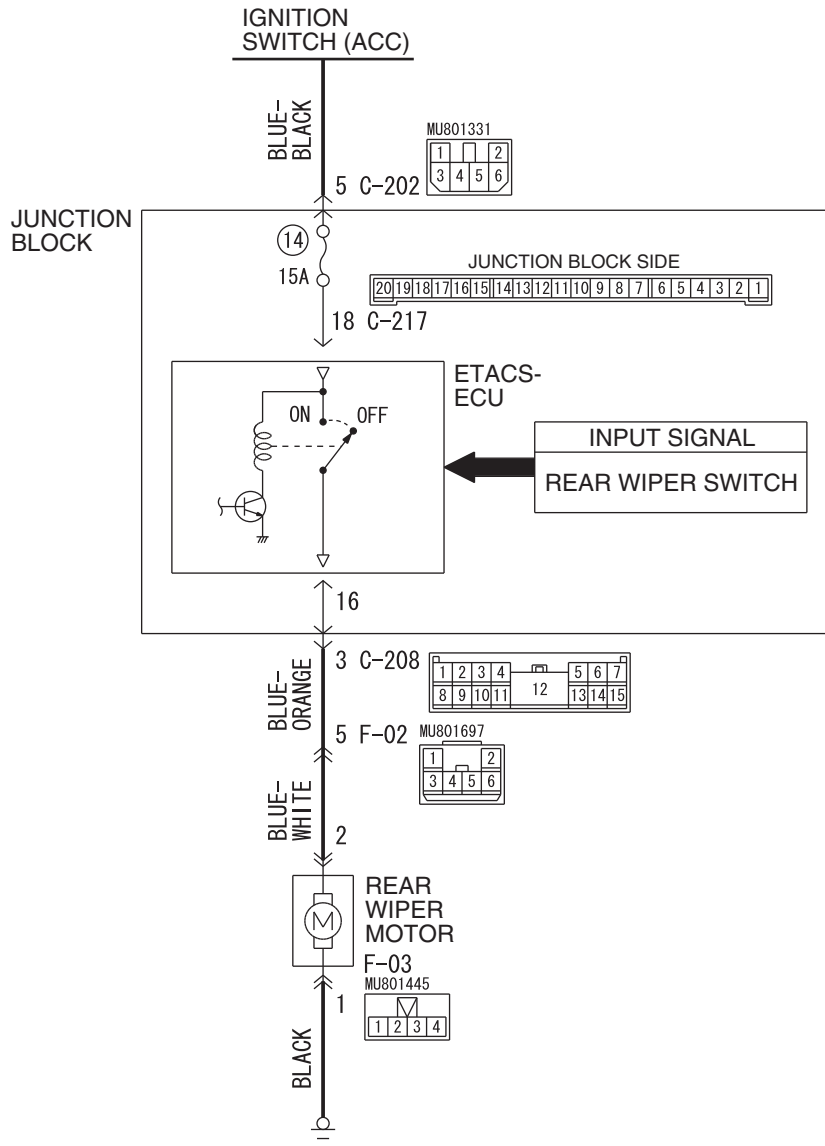


W6P54M030A



CONNECTOR: C-208

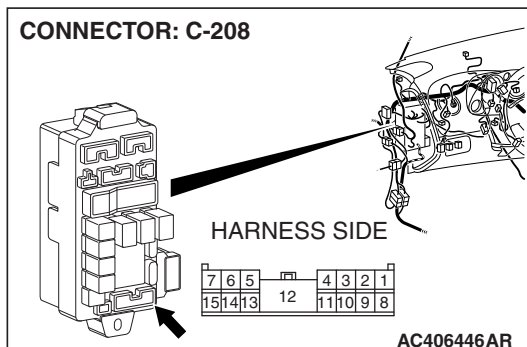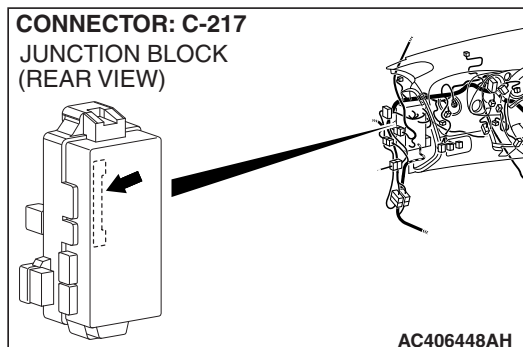CONNECTOR: C-217  
JUNCTION BLOCK  
(REAR VIEW)

CONNECTORS: F-02, F-03

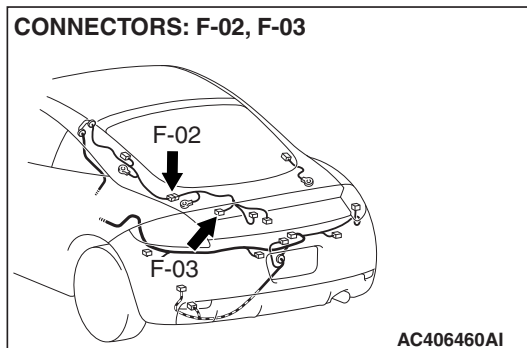

## CIRCUIT OPERATION

- The rear wiper switch sends a signal through the column-ECU (incorporated in the column switch) to the ETACS-ECU. If the column-ECU sends a rear wiper switch "ON" signal to the ETACS-ECU, the ETACS-ECU turns on the relay (incorporated in the ETACS-ECU), thus causing the rear wiper motor to be turned on.
- The ETACS-ECU operates the rear wiper according to the following switches:
  - Ignition switch (ACC)
  - Rear wiper switch

## TECHNICAL DESCRIPTION (COMMENT)

If the rear wiper does not work normally, the input circuit system from the switches, the rear wiper motor, the column switch (windshield wiper and windshield washer switch) or the ETACS-ECU may be defective (refer to "CIRCUIT OPERATION").

## TROUBLESHOOTING HINTS

- The rear wiper motor may be defective
- The column switch (windshield wiper and washer switch) may be defective
- The ETACS-ECU may be defective
- The wiring harness may be damaged or the connectors may have loose, corroded or damaged terminals, pushed back in the connector

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles communication interface (V.C.I.)
  - MB991827: M.U.T.-III USB cable
  - MB991911: M.U.T.-III Main harness B
- MB991813: SWS monitor kit
  - MB991806: SWS monitor cartridge
  - MB991812: SWS monitor harness (for column-ECU)
  - MB991922: Probe harness



**STEP 1. Use scan tool MB991958 to select "ECU COMM CHK" on the SWS monitor display.**

Check the following ECUs:

- ETACS-ECU
- Column-ECU

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.



- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "LOCK" (OFF) position.
- (3) Operate scan tool MB991958 according to the procedure below to display "ECU COMM Check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "ECU COMM Check."
- (4) Scan tool MB991958 should show "OK" on the "ECU COMM Check" menus for both the "ETACS ECU" and the "COLUMN ECU" menus.

**Q: Are "OK" displayed on the "ETACS ECU" and "COLUMN ECU" menu?**




**"OK" are displayed for all the items :** Go to Step 2.

**"NG" is displayed on the "ETACS ECU" menu :** Refer to Inspection Procedure A-3 "Communication with ETACS-ECU is not possible [P.54B-74](#)."

**"NG" is displayed on the "COLUMN ECU" menu :** Refer to Inspection Procedure A-2 "Communication with column switch (column-ECU) is not possible [P.54B-66](#)."

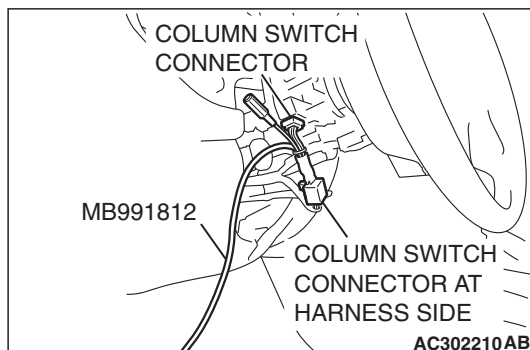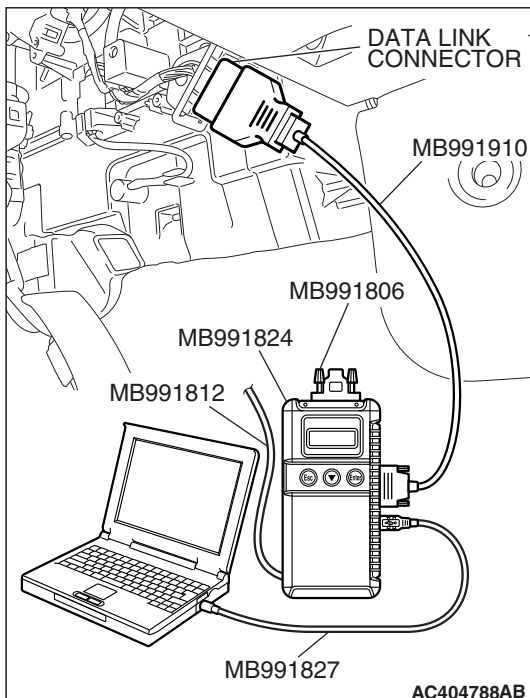



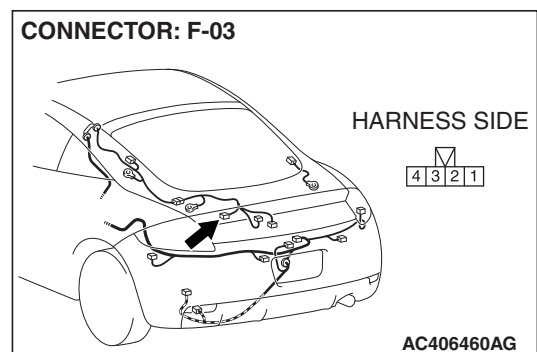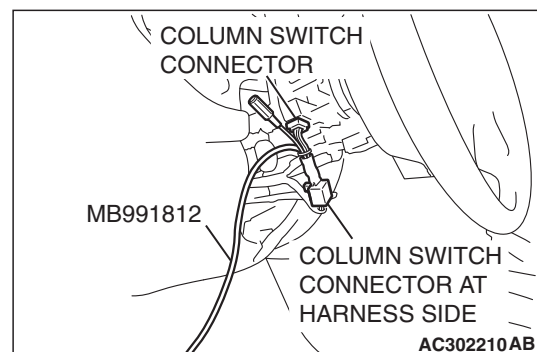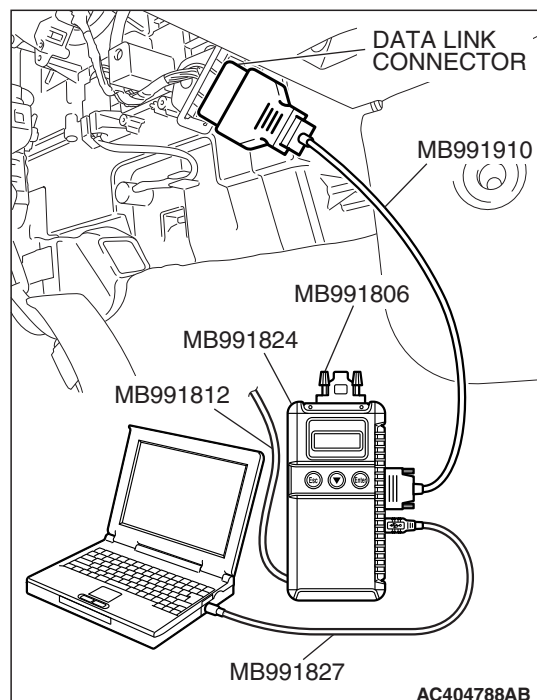

## STEP 2. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.

Check the input signals from the following switches:

- Ignition switch: ACC
- Rear wiper switch: INT

- (1) Operate scan tool MB991958 according to the procedure below to display "REAR WIPER."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "REAR WIPER."
- (2) Check that normal conditions are displayed for the items described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 13	REAR WIPER SW	ON
ITEM 31	IG SW (ACC)	ON

**Q: Are normal conditions displayed on the "REAR WIPER SW" and "IG SW (ACC)"?**

**Normal conditions are displayed for all the items :** Go to Step 3.

**Normal condition is not displayed for "REAR WIPER SW" :** Refer to Inspection Procedure M-7 "ETACS-ECU does not receive a signal from the rear wiper switch [P.54B-525.](#)"

**Normal condition is not displayed for "IG SW (ACC)" :** Refer to Inspection Procedure M-1 "ETACS-ECU does not receive a signal from the ignition switch (ACC) [P.54B-495.](#)"

## STEP 3. Check the rear wiper motor connector F-03 for loose, corroded or damaged terminals, or terminals pushed back in the connector.

**Q: Is rear wiper motor connector F-03 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2.](#) Verify that the rear wiper works normally.



---

**STEP 4. Check the rear wiper motor.**

Refer to GROUP 51, Rear Wiper and Washer [P.51-23](#).

**Q: Is the rear wiper motor in good condition?**



**YES :** Go to Step 5.

**NO :** Replace the rear wiper motor. Verify that the rear wiper works normally.

---

**STEP 5. Check the ground circuit to the rear wiper motor.**  
**Measure the resistance at the rear wiper motor connector F-03.**

(1) Disconnect rear wiper motor connector F-03 and measure the resistance available at the wiring harness side of the connector.

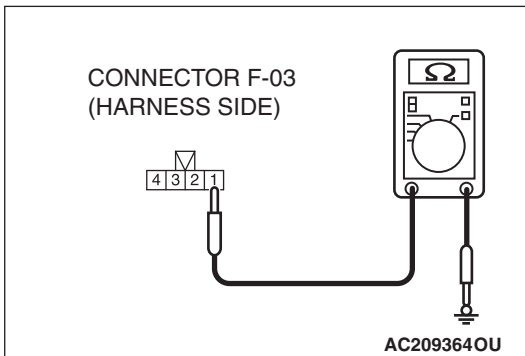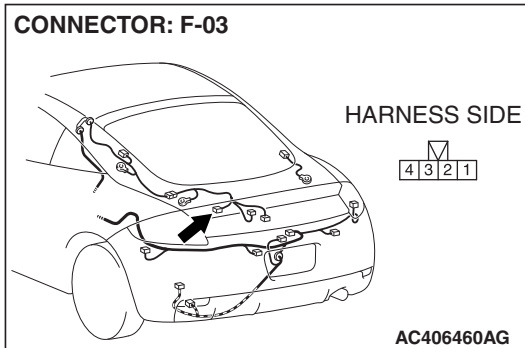

(2) Measure the resistance value between terminal 1 and ground.

- The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 7.

**NO :** Go to Step 6.

---


**STEP 6. Check the wiring harness between rear wiper motor connector F-03 (terminal 1) and ground.**

- Check the ground wire for open circuit.


**Q: Is the wiring harness between rear wiper motor connector F-03 (terminal 1) and ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the rear wiper works normally.

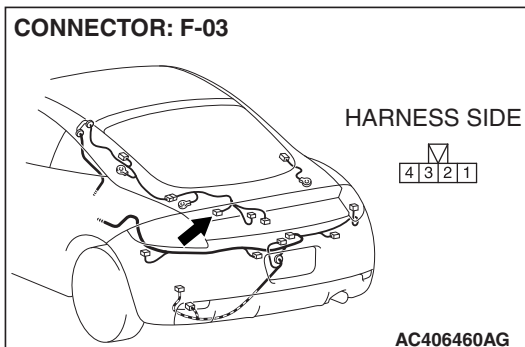



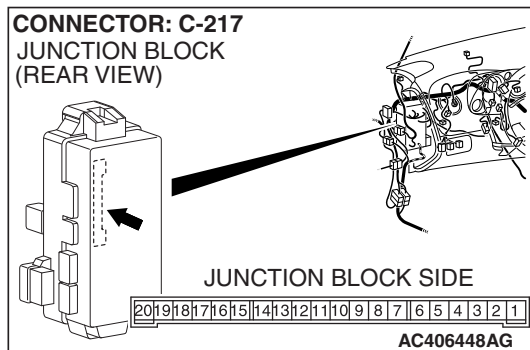

**STEP 7. Check ETACS-ECU connector C-217 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**




**Q: Is ETACS-ECU connector C-217 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). Verify that the rear wiper works normally.

**STEP 8. Check the wiring harness between rear wiper motor connector F-03 (terminal 2) and ETACS-ECU connector C-217 (terminal 16).**

- Check the communication lines for open circuit and short circuit.

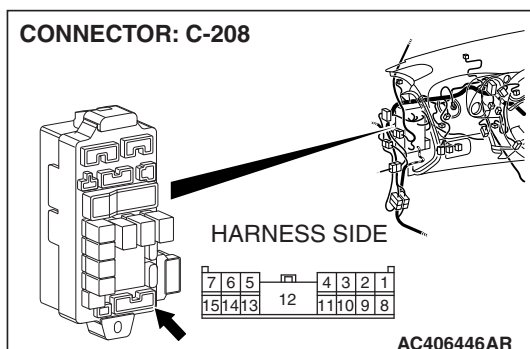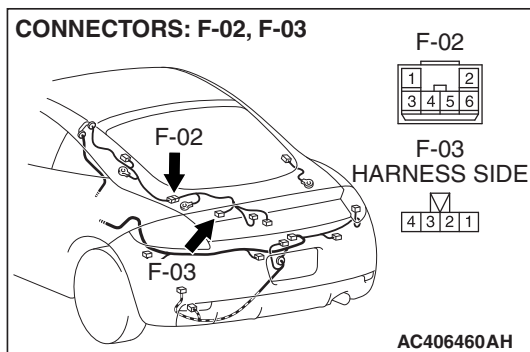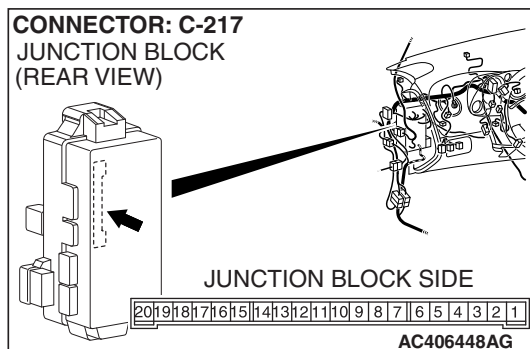

**NOTE:** Also check junction block connector C-208 and intermediate connector F-02 for loose, corroded, or damaged terminals, or terminals pushed back in the junction block connector C-208 or intermediate connector F-02 is damaged, repair or replace the damaged component(s) as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).



**Q: Is the wiring harness between rear wiper motor connector F-03 (terminal 2) and ETACS-ECU connector C-217 (terminal 16) in good condition?**


- YES :** Replace the ETACS-ECU. Verify that the rear wiper should work normally.
- NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the rear wiper works normally.

---

**INSPECTION PROCEDURE H-2: Rear Wiper and Washer: Rear wiper does not stop at the predetermined park position.**

---

**Rear Wiper Auto Stop Circuit**

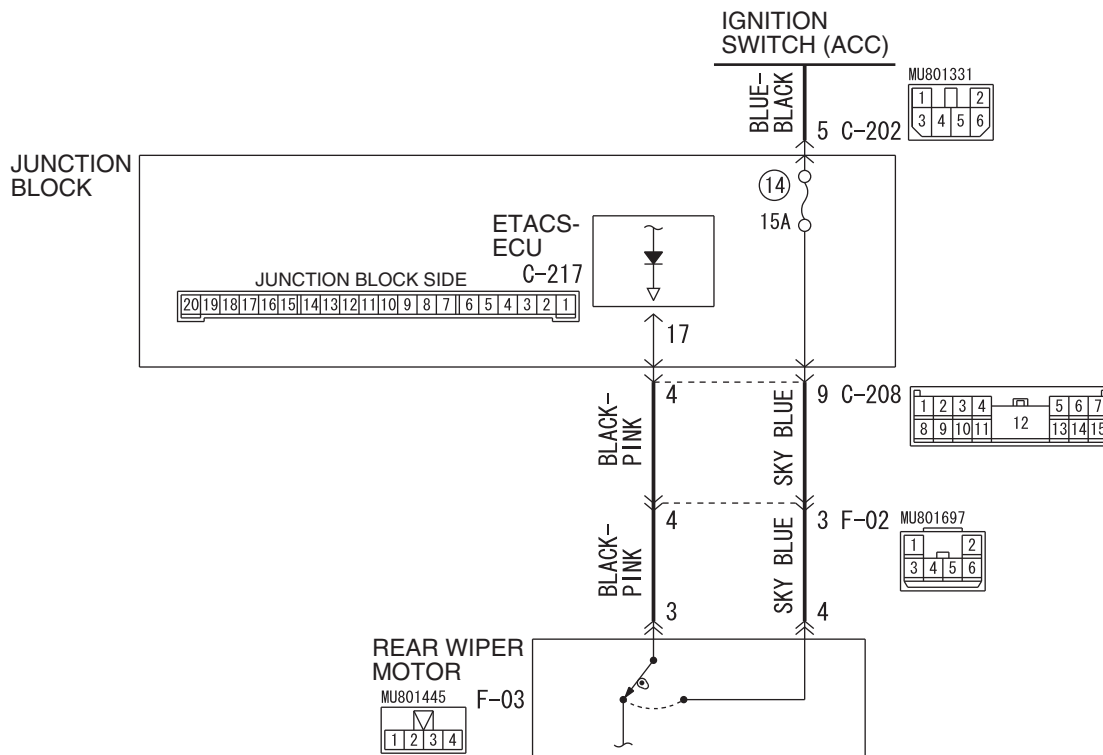

W6P54M031A

**TECHNICAL DESCRIPTION (COMMENT)**

If the rear wiper does not stop at predetermined park position, the rear wiper motor or the ETACS-ECU may be defective.

**TROUBLESHOOTING HINTS**

- The rear wiper motor may be defective
- The ETACS-ECU may be defective
- The wiring harness may be damaged or the connectors may have loose, corroded or damaged terminals, or terminals pushed back in the connector



**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles communication interface (V.C.I.)
  - MB991827: M.U.T.-III USB cable
  - MB991911: M.U.T.-III Main harness B

**Check the input signal (by using the Pulse check mode of the monitor).**

Check the automatic stop signal, which the rear wiper motor sends to the ETACS-ECU.

*NOTE: When the rear wiper is operated, a signal is sent to the ETACS-ECU.*

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate the scan tool MB991958 according to the procedure below to display "Pulse check."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "Pulse Checking."
- (3) Check that scan tool MB991958 sound when the rear wiper switch is operated.

**Q: Does scan tool MB991958 sound when the rear wiper switch is operated?**

**YES :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). The rear wiper should stop automatically at the predetermined park position.

**NO :** Refer to Inspection Procedure N-9 "ETACS-ECU does not receive an auto-stop signal from the rear wiper motor [P.54B-587](#)."

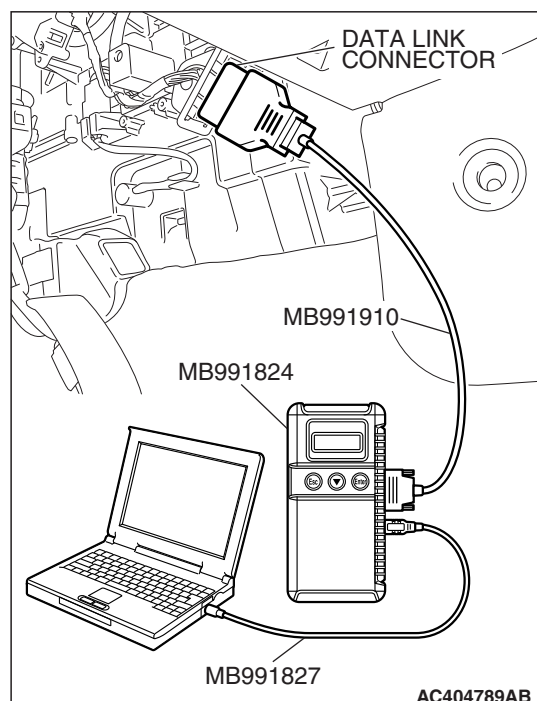




**INSPECTION PROCEDURE H-3: Rear Wiper and Washer: When the selector lever is moved to "R" position during the rear wiper operation, the rear wiper does not operate at the continuous mode.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

**"R" Position During Rear Wiper Operation Circuit**

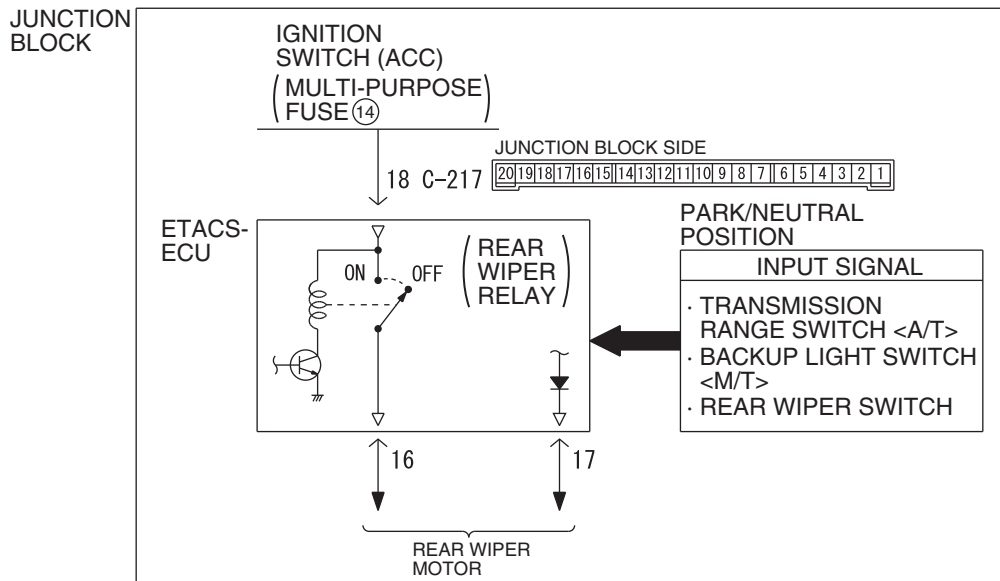

W6P54M032A

**CIRCUIT OPERATION**

The ETACS-ECU operates the rear wiper consecutively approximately twice when the selector lever is moved to "R" position while the rear wiper is turned on.

**TECHNICAL DESCRIPTION (COMMENT)**

If the rear wiper does not work consecutively approximately twice, the transmission range switch ("R" position) or the ETACS-ECU may be defective.

**TROUBLESHOOTING HINTS**

- The backup light switch may be defective
- The ETACS-ECU may be defective
- The wiring harness may be damaged or the connectors may have loose, corroded or damaged terminals, pushed back in the connector

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles communication interface (V.C.I.)
  - MB991827: M.U.T.-III USB cable
  - MB991911: M.U.T.-III Main harness B
- MB991813: SWS monitor kit
  - MB991806: SWS monitor cartridge
  - MB991812: SWS monitor harness (for column-ECU)
  - MB991922: Probe harness



**STEP 1. Verify the rear wiper.****Q: Does the rear wiper operate?****YES <M/T>** : Go to Step 2.**YES <A/T>** : Go to Step 3.**NO <Rear wiper does not work.>** : Refer to Inspection Procedure H-1 "Rear wiper does not work at all [P.54B-247](#)."**STEP 2. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.**

Set each switch to the following condition before checking input signal from the backup light switch.

- Ignition switch: ON
- Rear wiper switch: ON
- Shift position: R position

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.



- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate scan tool MB991958 according to the procedure below to display "REV.INTER LOCK."
  - a. Select "Interactive Diagnosis."
  - b. Select "System select."
  - c. Select "SWS."
  - d. Select "SWS MONITOR."
  - e. Select "Function Diag."
  - f. Select "REAR WIPER."
  - g. Select "REV.INTER LOCK."
- (3) Check that normal conditions are displayed on the item described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 41	PNP SW (R)	ON

**Q: Are normal conditions displayed?**

**YES** : Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). When the selector lever is moved to the "R" position, the rear wiper should operate consecutively approximately twice.

**NO** : Refer to Inspection Procedure M-4 "ETACS-ECU does not receive "R" position signal from the backup light switch <M/T>[P.54B-506](#)."

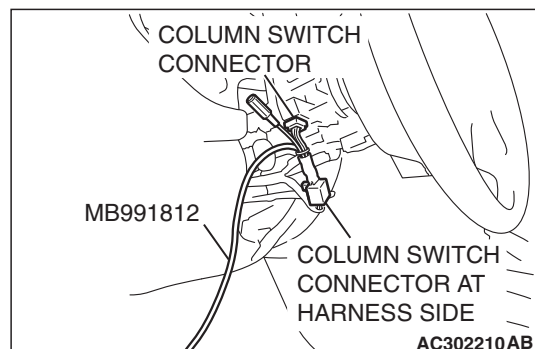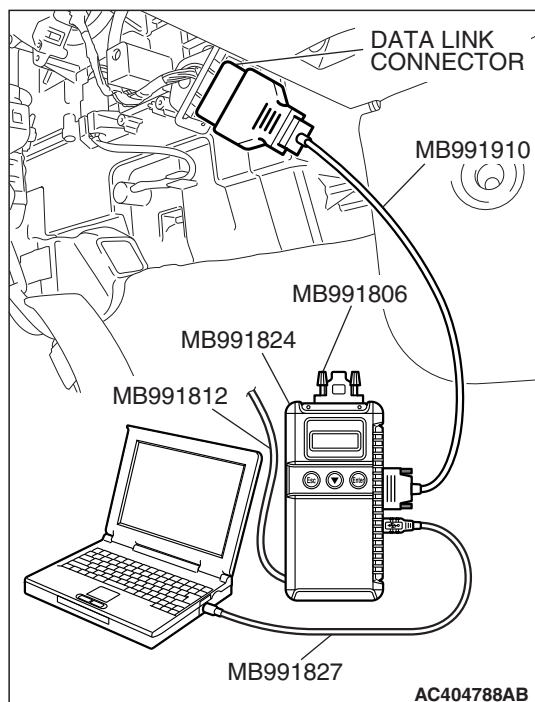



**STEP 3. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 4.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

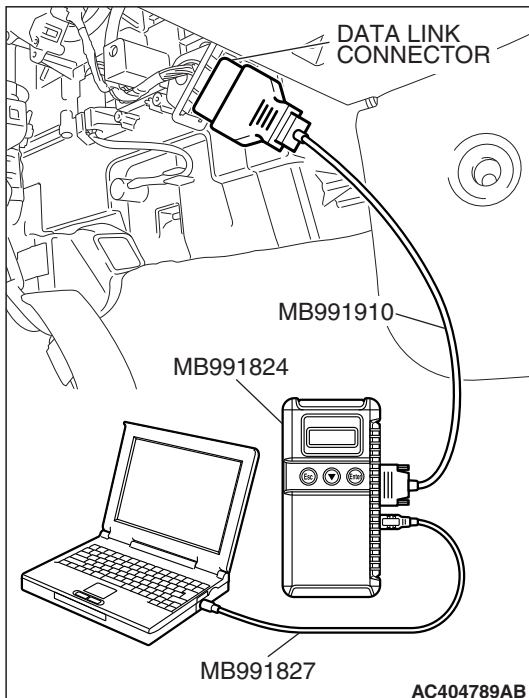

**STEP 4. Using scan tool MB991958, read the PCM <A/T> diagnostic trouble code.**


Check whether engine and automatic transaxle DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for engine and automatic transaxle DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the PCM <A/T> (Refer to GROUP 13A, Diagnosis [P.13A-41](#) <2.4 L engine> or GROUP 13B, [P.13B-43](#) <3.8 L engine>).


**NO :** Replace the ETACS-ECU. When the ETACS-ECU is replaced, register the encrypted code. Refer to GROUP 54A, Encrypted Code Registration Criteria Table [P.54A-19](#). When the selector lever is moved to the "R" position, the rear wiper should operate consecutively approximately twice.

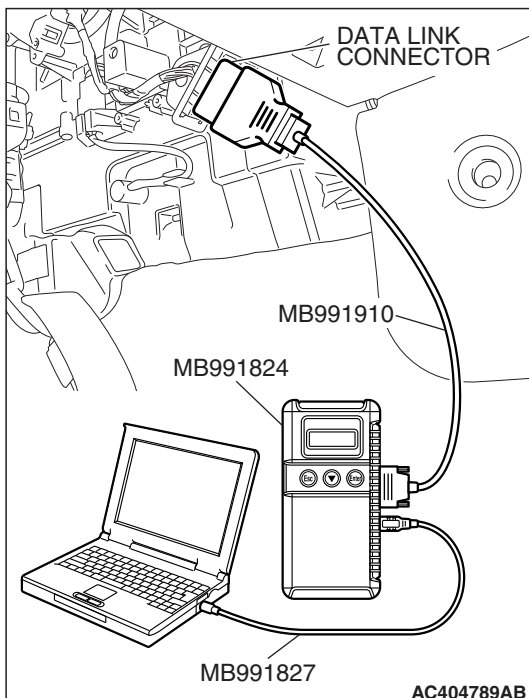







**INSPECTION PROCEDURE H-4: Rear Wiper and Washer: Rear washer does not operate.**

*NOTE: This troubleshooting procedure requires use of scan tool MB991958 and SWS monitor kit MB991813. For details on how to use the SWS monitor, refer to "How to use SWS monitor P.54B-15."*

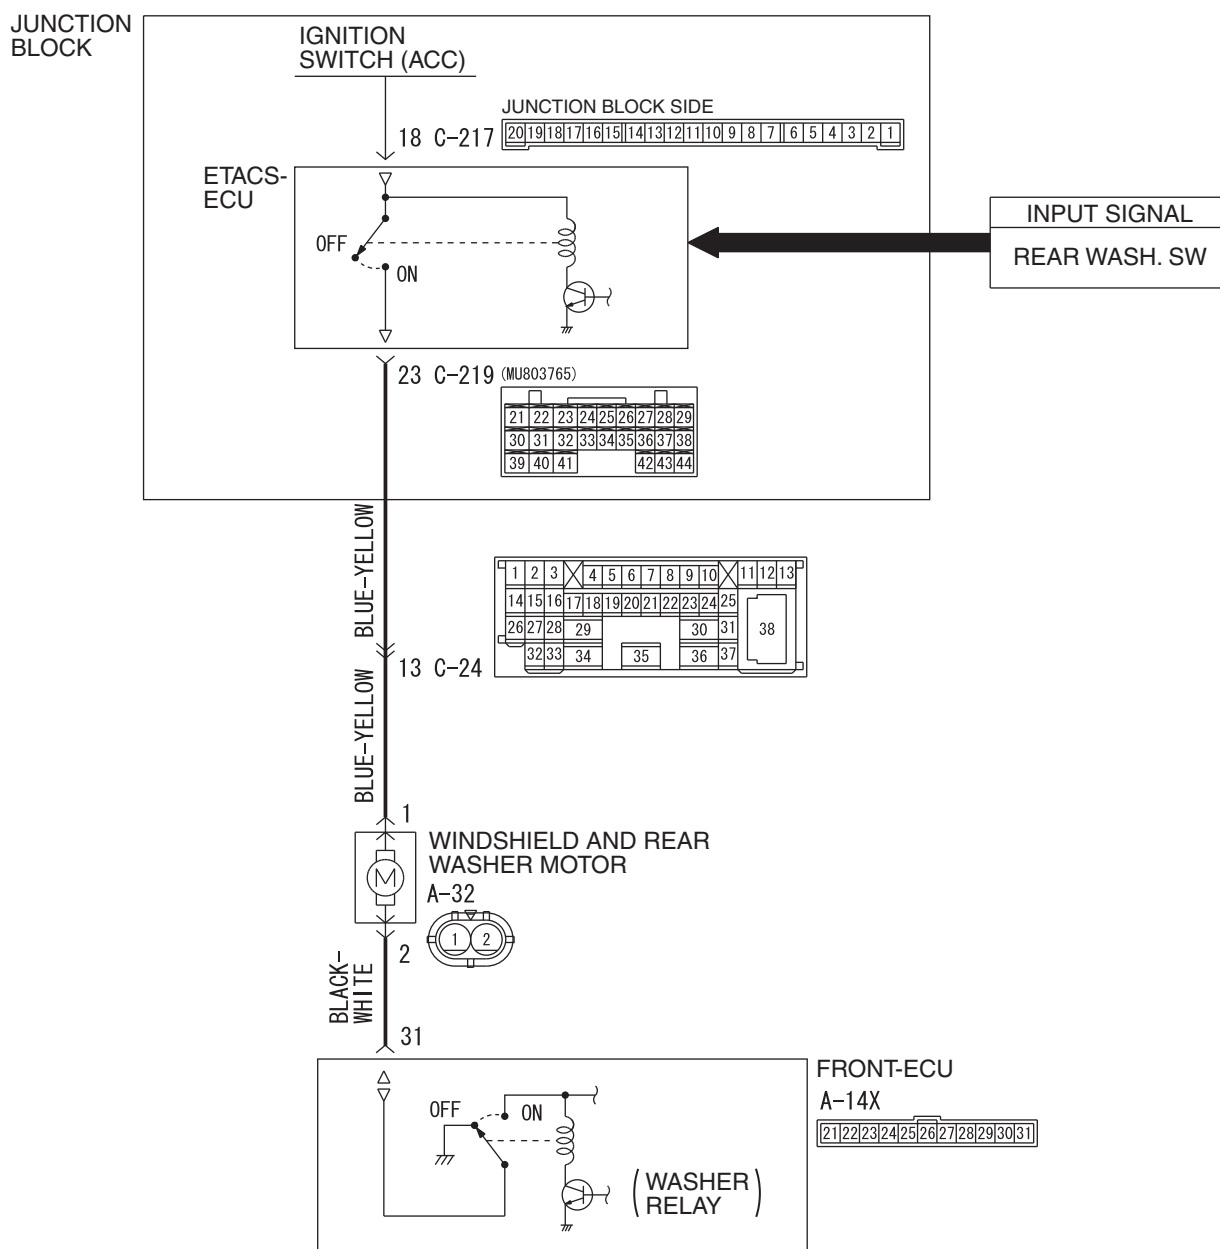**Rear Washer Motor Power Supply Circuit**

W7P54M021A



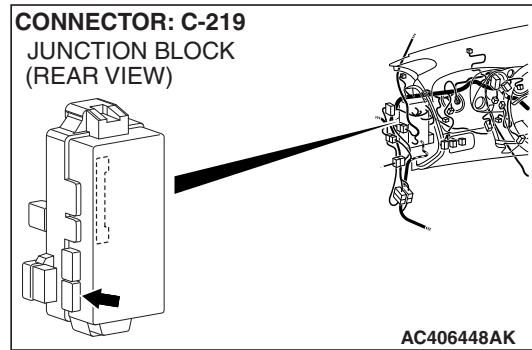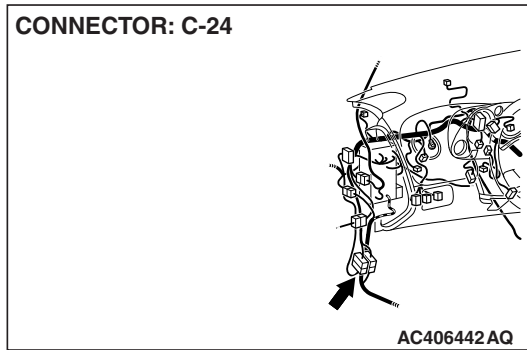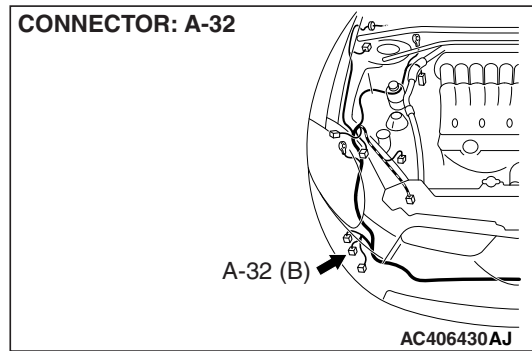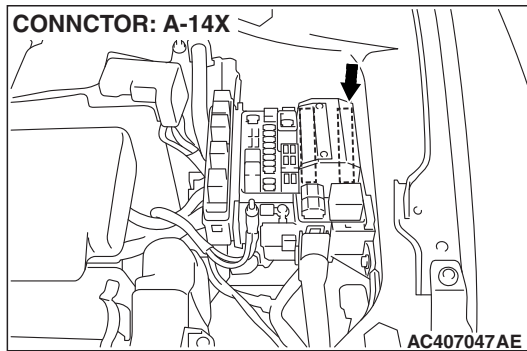

## CIRCUIT OPERATION

The rear washer switch sends a signal through the column-ECU (incorporated in the column switch) to the ETACS-ECU. If the column-ECU sends a rear washer switch "ON" signal to the ETACS-ECU, the ETACS-ECU turns on the relay (incorporated in the ETACS-ECU), thus causing the windshield and rear washer motor to be turned on.

## TECHNICAL DESCRIPTION (COMMENT)

If the rear washer does not work normally, the windshield and rear washer motor, the column switch (windshield wiper and washer switch), ETACS-ECU or the front-ECU may be defective.

## TROUBLESHOOTING HINTS

- The windshield and rear washer motor may be defective
- The column switch (windshield wiper, washer switch) may be defective
- The ETACS-ECU may be defective
- The front-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles communication interface (V.C.I.)
  - MB991827: M.U.T.-III USB cable
  - MB991911: M.U.T.-III Main harness B
- MB991813: SWS monitor kit
  - MB991806: SWS monitor cartridge
  - MB991812: SWS monitor harness (for column-ECU)
  - MB991922: Probe harness



**STEP 1. Verify the rear wiper.****Q: Does the rear wiper operate?****YES :** Go to Step 2.**NO :** Refer to Inspection Procedure H-1 "Rear wiper does not work at all [P.54B-247](#)."**STEP 2. Check the input signal by using "FUNCTION DIAG." menu of the SWS monitor.**

Set each switch to the following condition before checking input signals from the rear washer switch:



- Ignition switch: ACC
- Rear washer switch: ON

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958. Connect special tool MB991910 before connecting special tool MB991812. Be sure to connect special tool MB991806 after turning on special tool MB991824.

- (1) Connect the special tool. Refer to "How to connect SWS monitor [P.54B-13](#)."
- (2) Operate the scan tool MB991958 according to the procedure below to display "REAR WASHER."
  - a. Select "System select."
  - b. Select "SWS."
  - c. Select "SWS MONITOR."
  - d. Select "Function Diag."
  - e. Select "REAR WIPER."
  - f. Select "REAR WASHER."
- (3) Check that normal condition is displayed for the item described in the table below.

ITEM NO.	ITEM NAME	NORMAL CONDITION
ITEM 14	REAR WASH.SW	ON

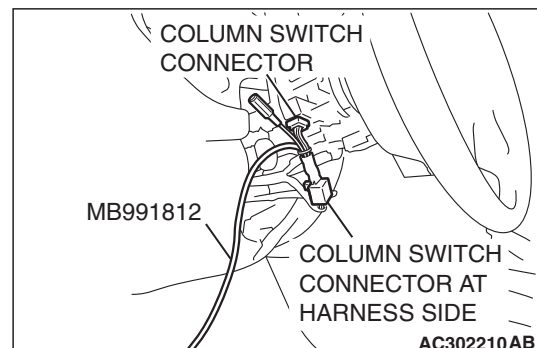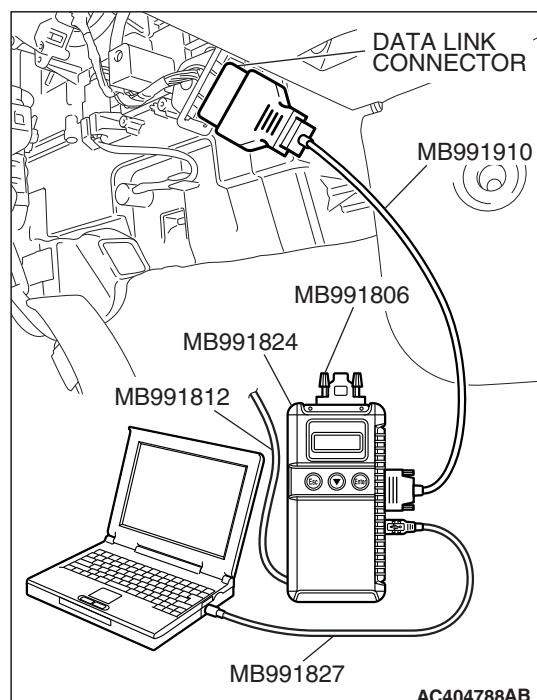**Q: Is normal condition displayed?****YES :** Go to Step 3.**NO :** Refer to Inspection Procedure M-7 "ETACS-ECU does not receive a signal from the rear washer switch [P.54B-525](#)."



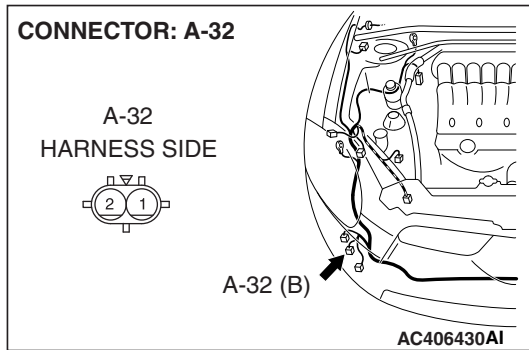


**STEP 3. Check the windshield and rear washer motor connector A-32 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is windshield and rear washer motor connector A-32 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection


**P.00E-2.** Verify that the rear washer works normally.

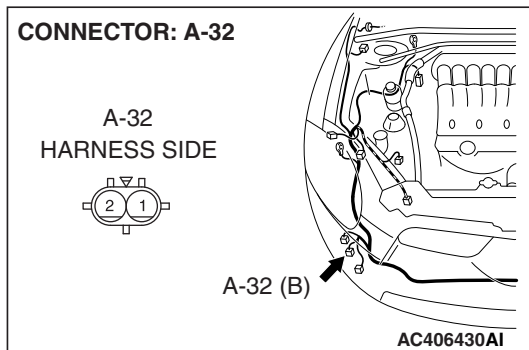

**STEP 4. Check the windshield and rear washer motor.**

(1) Disconnect windshield and rear washer motor connector A-32.

(2) Fill the washer tank with washer fluid.

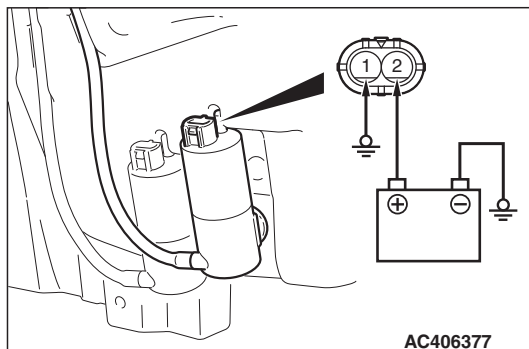


(3) When battery voltage is applied between terminals 1 and 2, washer fluid should spray out.

**Q: Does the windshield and rear washer motor operate normally?**

**YES :** Go to Step 5.

**NO :** Replace the windshield and rear washer motor. Verify that the rear washer works normally.

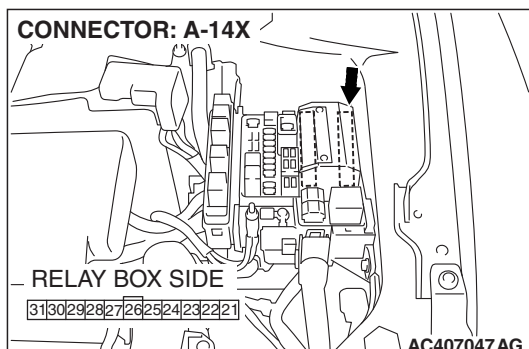

**STEP 5. Check the front-ECU connector A-14X.**

**Q: Is the check result normal?**

**YES :** Go to Step 6.

**NO :** Repair the connector.






**STEP 6. Check the wiring harness between front and rear washer motor connector A-32 (terminal 2) and front-ECU connector A-14X (terminal 31).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the check result normal?**

**YES :** Go to Step 7.

**NO :** Repair the wiring harness.

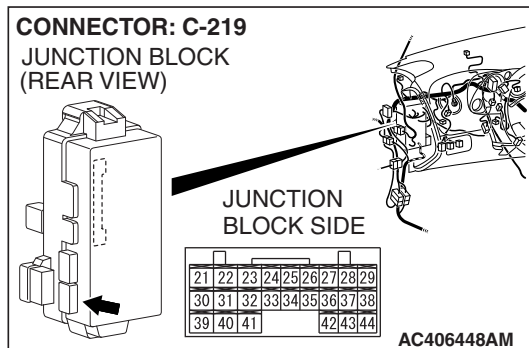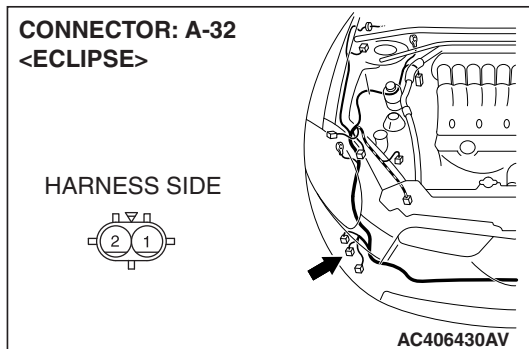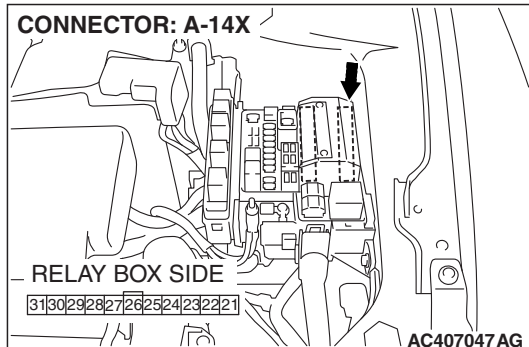

**STEP 7. Check the ETACS-ECU connector C-219.**

**Q: Is the check result normal?**




**YES :** Go to Step 8.

**NO :** Repair the connector.



**STEP 8. Check the wiring harness between front and rear washer motor connector A-32 (terminal 1) and ETACS-ECU connector C-219 (terminal 23).**

- Check the communication lines for open circuit and short circuit.

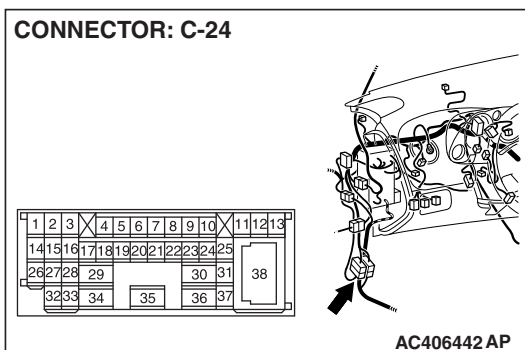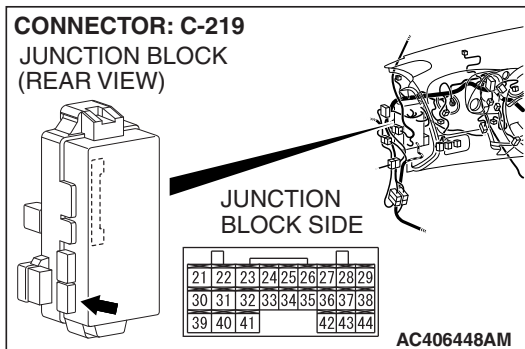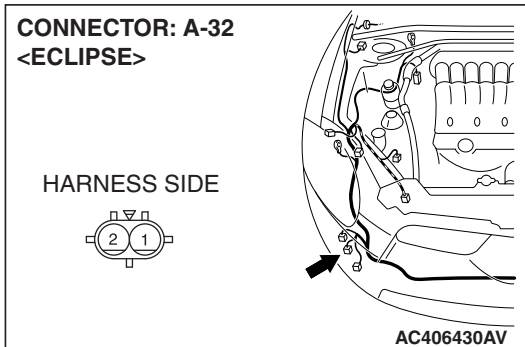

*NOTE: Also check intermediate connector C-24 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If junction block intermediate connector C-24 is damaged, repair or replace damaged component(s) as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the check result normal?**

**YES :** Go to Step 9.

**NO :** The wiring harness may be damaged or the connector may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. Verify that the rear washer works normally.



**STEP 9. Replace the ETACS-ECU, and then check its operation.**

Replace the ETACS-ECU, and then check that the rear washer works normally.

- (1) Replace the ETACS-ECU.
- (2) Ignition switch: ON
- (3) The rear washer should now work normally.

**Q: Is the check result satisfactory?**

**YES** : The trouble can be an intermittent malfunction (Refer to GROUP 00 – How to Cope with Intermittent Malfunction [P.00-14](#)).

**NO** : Replace the front-ECU.