

GROUP 17

ENGINE AND EMISSION CONTROL

CONTENTS

ENGINE CONTROL.....	17-3	CHECK CHART FOR DIAGNOSIS CODES.....	17-6
GENERAL INFORMATION	17-3	DIAGNOSTIC TROUBLE CODE PROCEDURES	17-7
ACCELERATOR PEDAL.....	17-3	CHECK CHART FOR TROUBLE SYMPTOMS.....	17-23
REMOVAL AND INSTALLATION	17-3	SYMPTOM PROCEDURES.....	17-24
AUTO-CRUISE CONTROL* ...	17-4	DATA LIST REFERENCE TABLE	17-28
GENERAL INFORMATION	17-4	CHECK AT ECU TERMINAL	17-29
SPECIAL TOOLS.....	17-5	ON-VEHICLE SERVICE.....	17-31
TROUBLESHOOTING.....	17-6	AUTO-CRUISE CONTROL SWITCH CHECK.....	17-31
DIAGNOSIS TROUBLESHOOTING FLOW.....	17-6	AUTO-CRUISE CONTROL SYSTEM COMPONENT CHECK.....	17-33
DIAGNOSIS FUNCTION	17-6	AUTO-CRUISE CONTROL.....	17-34
		REMOVAL AND INSTALLATION.....	17-34

Continued on next page

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING

- *Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).*
- *Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.*
- *MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.*

NOTE

The SRS includes the following components: SRS air bag control unit, SRS warning light, front impact sensors, air bag module, clock spring, and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

EMISSION CONTROL MPI	17-35	EVAPORATIVE EMISSION CONTROL SYSTEM	17-40
GENERAL INFORMATION	17-35	GENERAL INFORMATION (EVAPORATIVE EMISSION CONTROL SYSTEM)	17-40
EMISSION CONTROL DEVICE		COMPONENT LOCATION (EVAPORATIVE EMISSION CONTROL SYSTEM)	17-41
REFERENCE TABLE	17-35	PURGE CONTROL SYSTEM CHECK.	17-41
SERVICE SPECIFICATIONS.	17-35	PURGE PORT VACUUM CHECK	17-41
SPECIAL TOOLS.	17-36	PURGE CONTROL SOLENOID VALVE CHECK.	17-42
VACUUM HOSE.	17-36	CANISTER REMOVAL AND INSTALLATION	17-43
VACUUM HOSE PIPING DIAGRAM	17-36	EXHAUST GAS RECIRCULATION (EGR) SYSTEM	17-43
VACUUM CIRCUIT DIAGRAM	17-38	GENERAL INFORMATION (EGR SYSTEM)	17-43
VACUUM HOSE CHECK.	17-38	COMPONENT LOCATION (EGR SYSTEM)	17-44
VACUUM HOSE INSTALLATION	17-38	EGR VALVE (STEPPER MOTOR) CHECK.	17-44
CRANKCASE EMISSION CONTROL SYSTEM.	17-38	EXHAUST GAS RECIRCULATION (EGR) VALVE REMOVAL AND INSTALLATION	17-46
GENERAL INFORMATION (CRANKCASE EMISSION CONTROL SYSTEM)	17-38	CATALYTIC CONVERTER	17-47
COMPONENT LOCATION (CRANKCASE EMISSION CONTROL SYSTEM)	17-39	REMOVAL AND INSTALLATION <Vehicles for Hong Kong, Singapore, Brazil, Australia and New Zealand>	17-47
POSITIVE CRANKCASE VENTILATION SYSTEM CHECK.	17-39		
POSITIVE CRANKCASE VENTILATION (PCV) VALVE CHECK	17-40		

ENGINE CONTROL

GENERAL INFORMATION

M1171000100385

For the accelerator system, an electronic throttle actuator control system is utilized, eliminating the accelerator cable.

ACCELERATOR PEDAL


REMOVAL AND INSTALLATION

M1171003000053

CAUTION

- Never loosen the screw fixing the accelerator pedal assembly resin cover. If the screw is loosened, the sensor incorporated in the resin cover is misaligned and the accelerator pedal position sensor (APS) do not work normally.
- Do not remove the accelerator pedal pad. If the pad is removed and installed, excessive force may damage APS.


<L.H. drive vehicles>

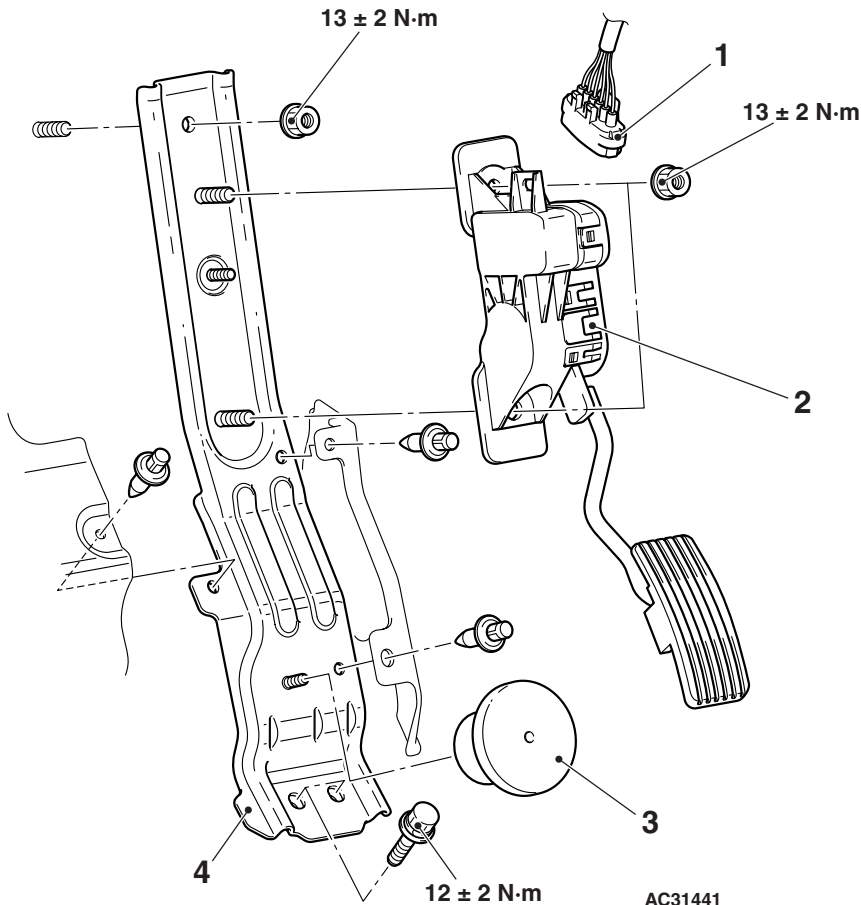

Removal steps

1. Accelerator pedal position sensor (APS) connector
2. Accelerator pedal assembly
3. Accelerator pedal arm stopper

<R.H. drive vehicles>

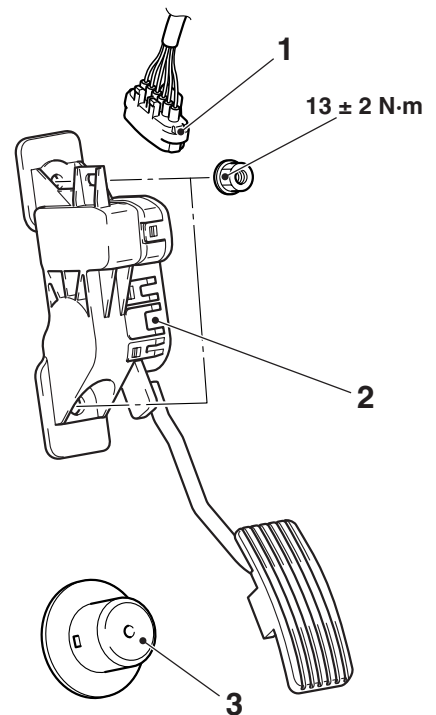

AC302205

AC310547AB

Removal steps (Continued)

- Turn up the floor mat <Driver's side>
- 4. Accelerator pedal bracket <L.H. drive vehicles>

AUTO-CRUISE CONTROL






GENERAL INFORMATION

M1172000100366

By using the auto-cruise control, the driver can drive at preferred speeds in a range of approximately 40 to 200 km/h without depressing the accelerator pedal.







For this auto-cruise control system, in conjunction with the electronic throttle valve control system, the engine-A/T-ECU electronically controls the throttle valve.

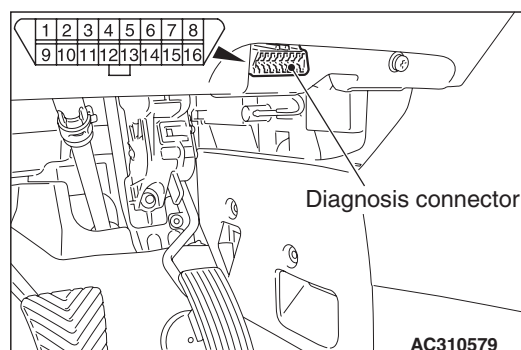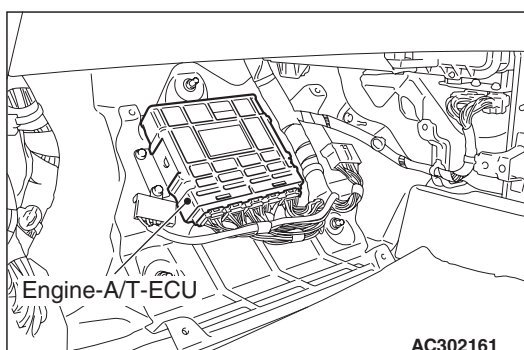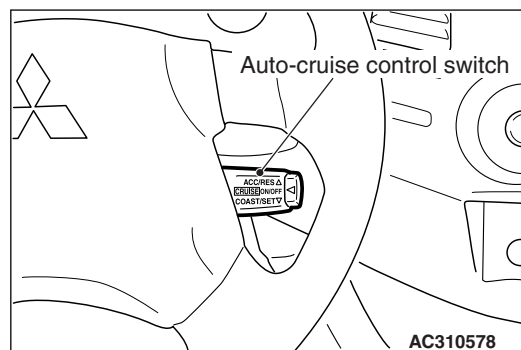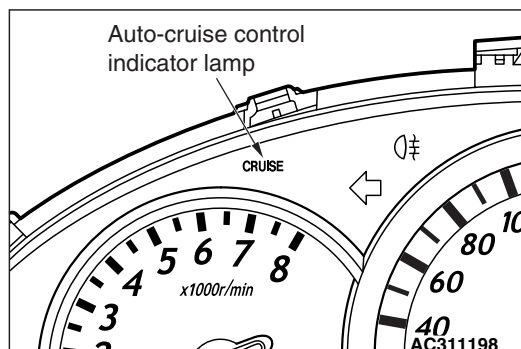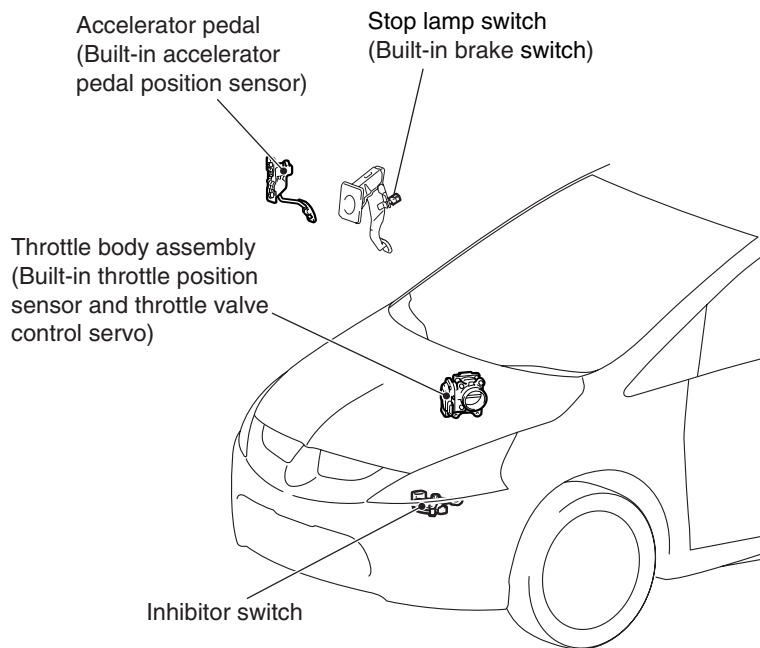



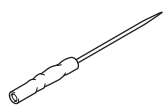
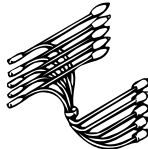
CONSTRUCTION DIAGRAM



SPECIAL TOOLS

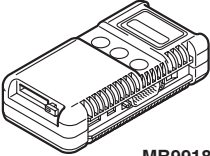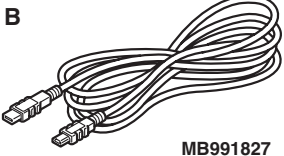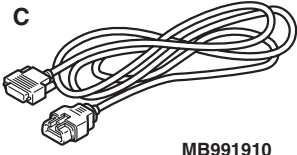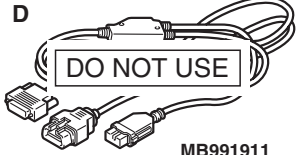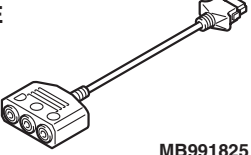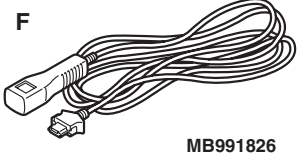M1172000600617

Tool	Number	Name	Use
<p>A</p>  <p>MB991824</p> <p>B</p>  <p>MB991827</p> <p>C</p>  <p>MB991910</p> <p>D</p>  <p>MB991911</p> <p>E</p>  <p>MB991825</p> <p>F</p>  <p>MB991826</p> <p>MB991955</p>	<p>MB991955</p> <p>A: MB991824</p> <p>B: MB991827</p> <p>C: MB991910</p> <p>D: MB991911</p> <p>E: MB991825</p> <p>F: MB991826</p>	<p>M.U.T.-III sub-assembly</p> <p>A: Vehicle Communication Interface (V.C.I.)</p> <p>B: M.U.T.-III USB cable</p> <p>C: M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>D: M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>E: M.U.T.-III measurement adapter</p> <p>F: M.U.T.-III trigger harness</p>	<p>Reading diagnosis code</p> <p>CAUTION</p> <p>M.U.T.-III main harness A should be used. M.U.T.-III main harness B should not be used for this vehicle. If you connect M.U.T.-III main harness B instead, the CAN communication does not function correctly.</p>

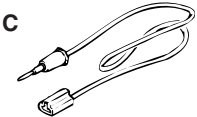Tool	Number	Name	Use
   	MB991223 A: MB991219 B: MB991220 C: MB991221 D: MB991222	Harness set A: Check harness B: LED harness C: LED harness adapter D: Probe	Making voltage and resistance measurement during troubleshooting A: Connector pin contact pressure inspection B: Power circuit inspection C: Power circuit inspection D: Commercial tester connection
 MB992006	MB992006	Extra fine probe	Making voltage and resistance measurement during troubleshooting
 MB991658	MB991658	Test harness	Inspection of data list

TROUBLESHOOTING

DIAGNOSIS TROUBLESHOOTING FLOW

M1172002000570

Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points - Diagnosis Function [P.00-5](#).

DIAGNOSIS FUNCTION

M1172002100436

METHOD OF READING THE DIAGNOSIS CODE

Use the M.U.T.-III to read the diagnosis code (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points - Diagnosis Function [P.00-5](#)).

METHOD OF ERASING THE DIAGNOSIS CODE

Use the M.U.T.-III to erase the diagnosis code (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points - Diagnosis Function [P.00-5](#)).

CHECK CHART FOR DIAGNOSIS CODES


M1172002200369

Code No.	Diagnosis item	Reference page
15	Auto-cruise control switch system	P.17-7
21	Cancel latch signal system	P.17-14
22	Stop lamp switch system	P.17-15
23	Engine-A/T-ECU and its related components	P.17-23

DIAGNOSTIC TROUBLE CODE PROCEDURES

Code No.15 Auto-cruise Control Switch System

Auto-cruise Control Switch System Circuit

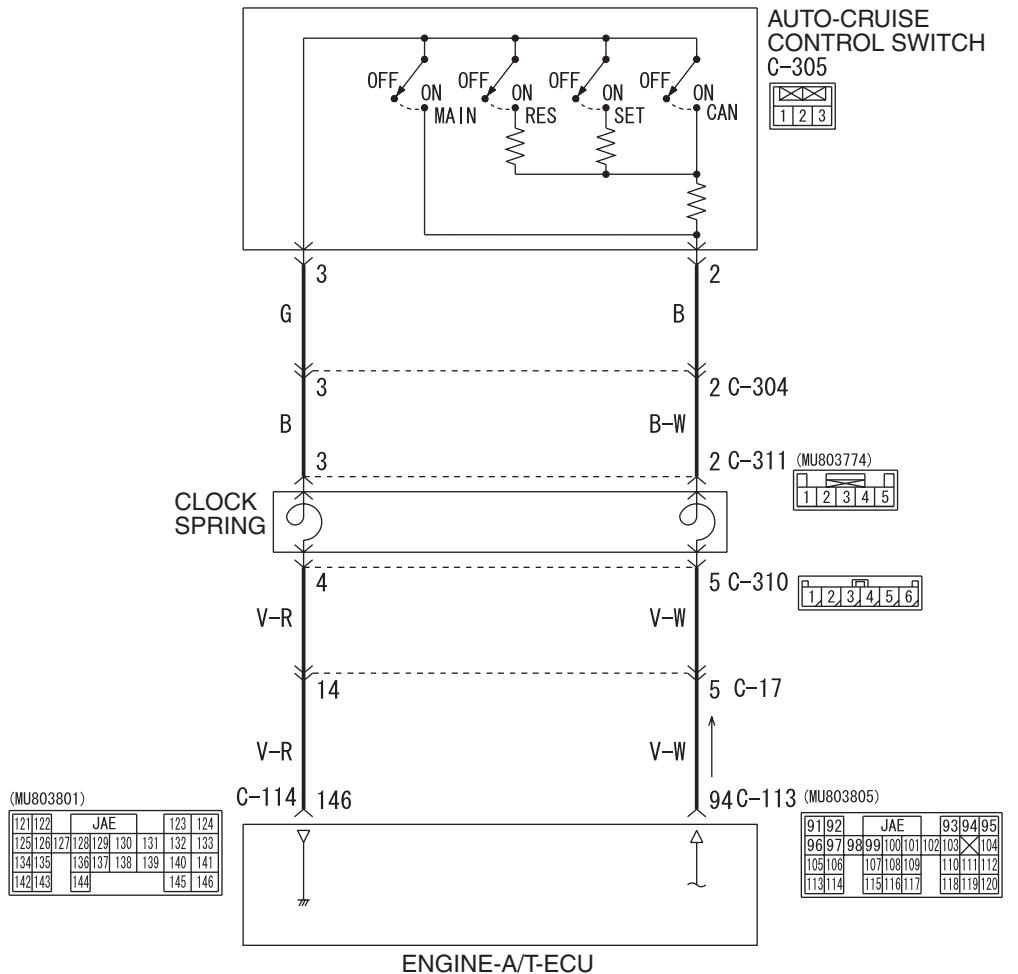

W6X17X001A

OPERATION

This circuit judges the signals of each switch (SET, RESUME and CANCEL) of the auto-cruise control switch. The engine-A/T-ECU detects the state of the auto-cruise control switch by sensing the voltages shown below.

- When all switches are OFF: 4.7 – 5.0 volts
- When the MAIN switch is ON: 0 – 0.3 volt
- When the SET switch is ON: 2.0 – 2.8 volts
- When the RESUME switch is ON: 3.3 – 4.1 volts
- When the CANCEL switch is ON: 0.8 – 1.5 volts

DIAGNOSIS CODE SET CONDITIONS

If the auto-cruise control switch is operated, this diagnosis code will be set when the engine-A/T-ECU terminal voltage is different from the standard value.

PROBABLE CAUSES

- Malfunction of the auto-cruise control switch.
- Malfunction of the clock spring.
- Damaged harness or connector.
- Malfunction of the engine-A/T-ECU.

DIAGNOSIS PROCEDURE

STEP 1. M.U.T.-III data list

- Item 01: Main switch (Refer to data list reference table [P.17-28](#)).
- Item 02: Set switch (Refer to data list reference table [P.17-28](#)).
- Item 03: Resume switch (Refer to data list reference table [P.17-28](#)).
- Item 04: Cancel switch (Refer to data list reference table [P.17-28](#)).



Q: Is the check result normal?

YES : Go to Step 17.

NO : Go to Step 2.

STEP 2. Measure the voltage at auto-cruise control switch connector C-305.

- (1) Remove the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)).
- (2) Connect the negative (–) battery cable.
- (3) Turn the ignition switch to the "ON" position and the MAIN switch to the "OFF" position.

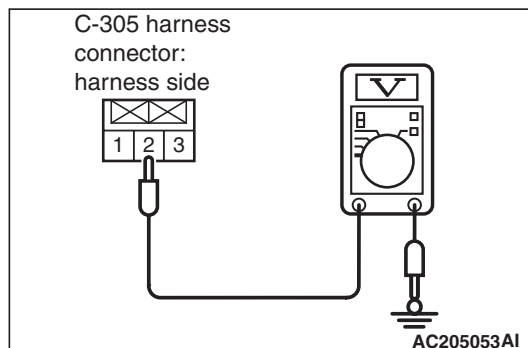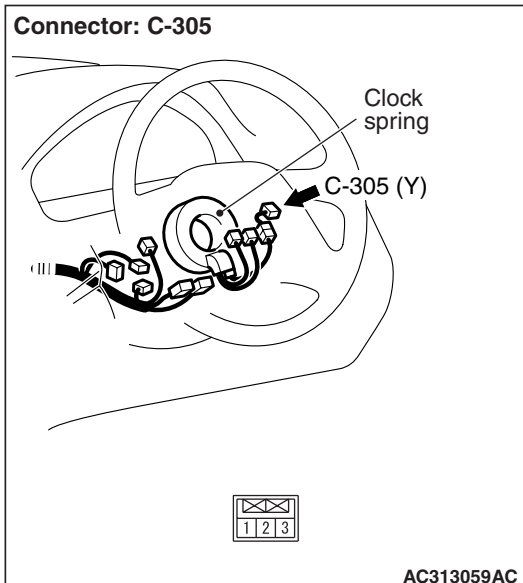

- (4) Measure the voltage between connector C-305

terminal No.2 and earth.

OK: 4.7-5.0 V

- (5) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the check result normal?

YES : Go to Step 9.

NO : Go to Step 3.

STEP 3. Measure the voltage at engine-A/T-ECU connector C-113.

- (1) Turn the ignition switch to the "ON" position and the MAIN switch to the "OFF" position.

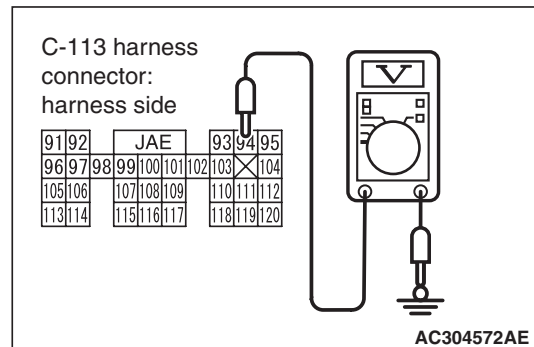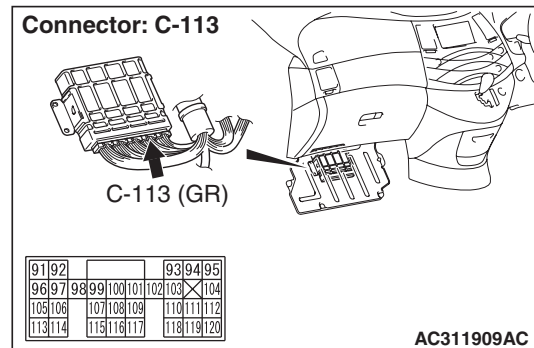

- (2) Measure the voltage between engine-A/T-ECU connector C-113 terminal No.94 and earth.

OK: 4.7 – 5.0 V


- (3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the check result normal?

YES : Go to Step 6.

NO : Go to Step 4.

STEP 4. Connector check: C-113 engine-A/T-ECU connector

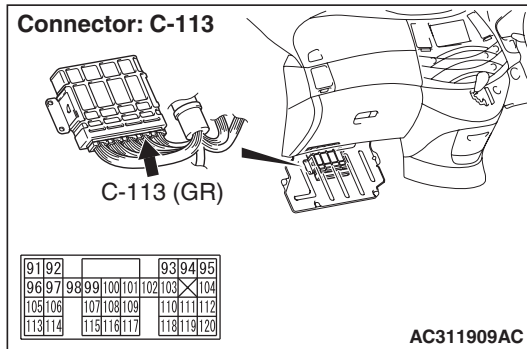


Q: Is the check result normal?


YES : Go to Step 5.

NO : Repair or replace the faulty connector, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

STEP 5. Check the harness between engine-A/T-ECU connector C-113 terminal No.94 and the auto-cruise control switch connector C-305 terminal No.2.

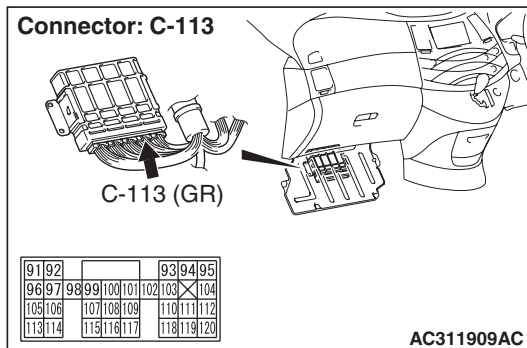

(1) Disconnect engine-A/T-ECU connector C-113 and measure at the harness connector side.

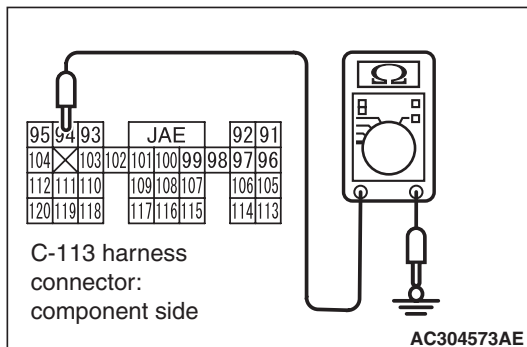

(2) Measure the continuity between engine-A/T-ECU connector C-113 terminal No.94 and earth.



(3) Connect engine-A/T-ECU connector C-113.

Q: Is the measured continuity open circuit?

YES : Install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 17.

NO : Go to Step 6.

STEP 6. Connectors check: C-305 auto-cruise control switch connector, C-17 and C-304 intermediate connectors, C-310 and C-311 clock spring connectors

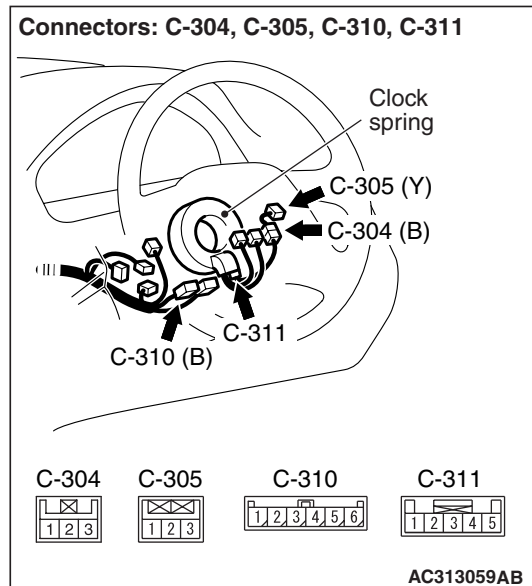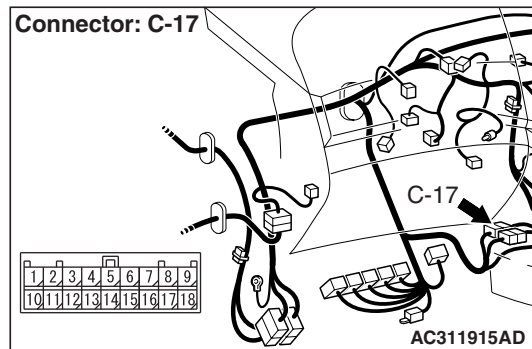

Q: Is the check result normal?

YES : Go to Step 7.

NO : Repair or replace the faulty connector, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.



STEP 7. Check the clock spring.

Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#).

Q: Is the check result normal?

YES : Go to Step 8.

NO : Replace the clock spring and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

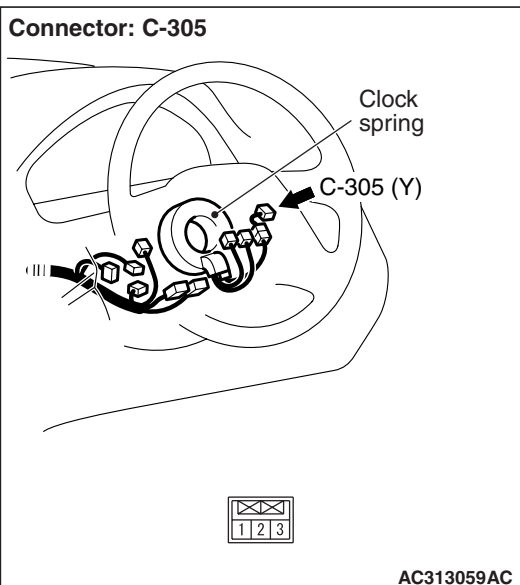
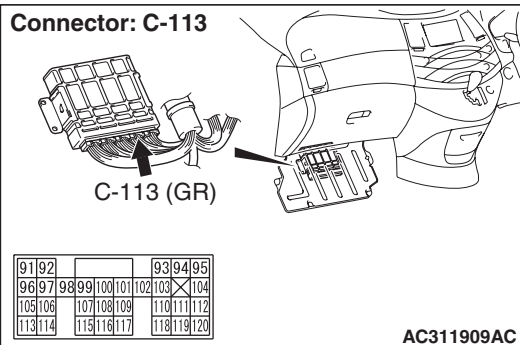
STEP 8. Check the harness between engine-A/T-ECU connector C-113 terminal No.94 and the auto-cruise control switch connector C-305 terminal No.2.**Q: Is the check result normal?**

YES : It can be assumed that this malfunction is intermittent, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

NO : Repair the damaged harness wire, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

STEP 9. Measure the voltage at auto-cruise control switch connector C-305.

(1) Turn the ignition switch to the "ON" position and the MAIN switch to the "ON" position.

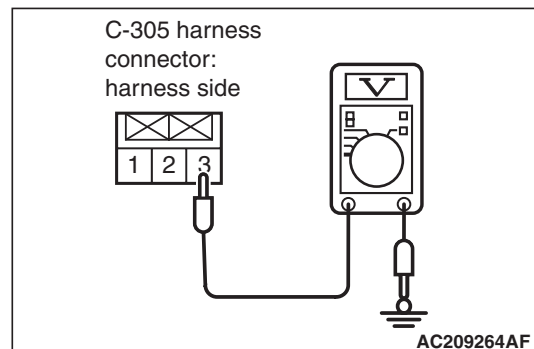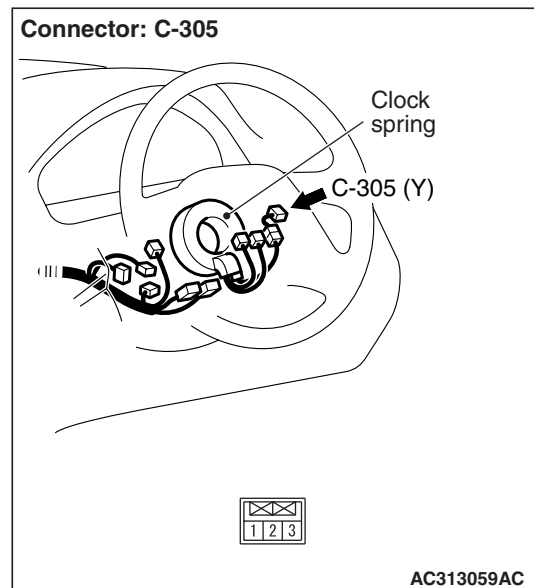

(2) Measure the voltage between connector C-305 terminal No.3 and earth.

OK: 0.3 V or less

(3) Turn the MAIN switch to the "OFF" position and the ignition switch to the "LOCK" (OFF) position.



Q: Is the check result normal?

YES : Go to Step 15.

NO : Go to Step 10.

STEP 10. Measure the voltage at engine-A/T-ECU connector C-114.

- (1) Turn the ignition switch to the "ON" position and the MAIN switch to the "ON" position.

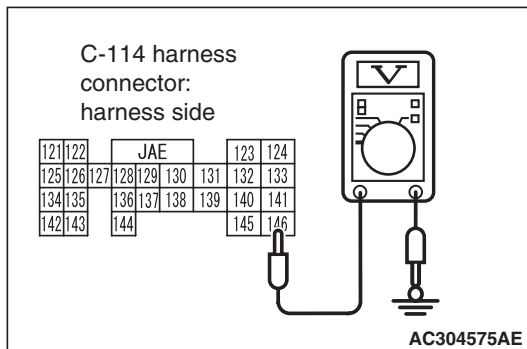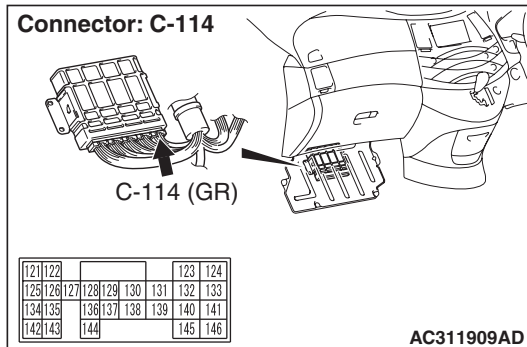

- (2) Measure the voltage between engine-A/T-ECU connector C-114 terminal No.146 and earth.

OK: 0.3 V or less


- (3) Turn the MAIN switch to the "OFF" position and the ignition switch to the "OFF" position.

Q: Is the check result normal?

YES : . Go to Step 12.

NO : . Go to Step 11.




STEP 11. Connector check: C-114 engine-A/T-ECU connector

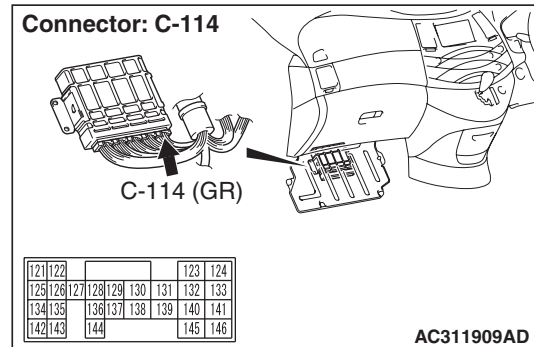

Q: Is the check result normal?

- YES :** Install the air bag module (driver's side)
(Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring P.52B-334). Then go to Step 17.
- NO :** Repair or replace the faulty connector, and install the air bag module (driver's side)
(Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring P.52B-334). Then go to Step 18.

STEP 12. Connectors check: C-114 engine-A/T-ECU connector, C-17 and C-304 intermediate connector, C-305 auto-cruise control switch connector, C-310 and C-311 clock spring connectors

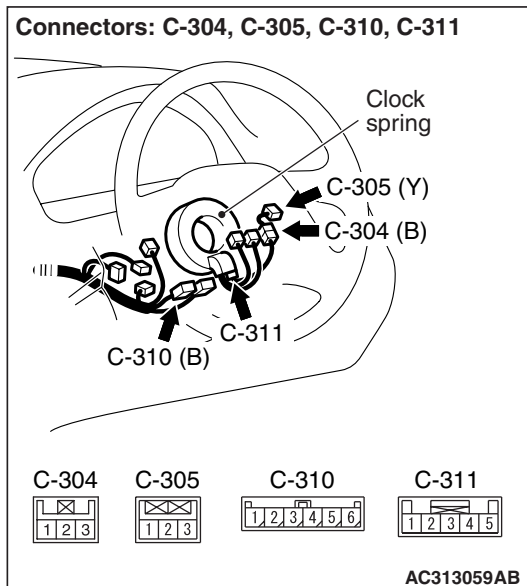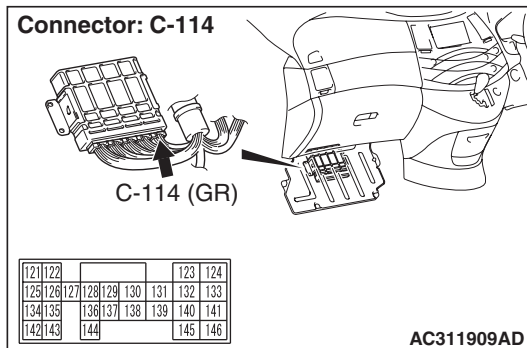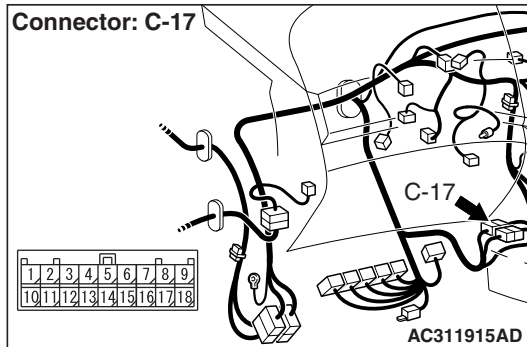

STEP 13. Check the clock spring.

Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#).

Q: Is the check result normal?

YES : Go to Step 14.



NO : Replace the clock spring and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

Q: Is the check result normal?

YES : Go to Step 13.

NO : Repair or replace the faulty connector, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

STEP 14. Check the harness between engine-A/T-ECU connector C-114 terminal No.146 and the auto-cruise control switch connector C-305 terminal No.3.

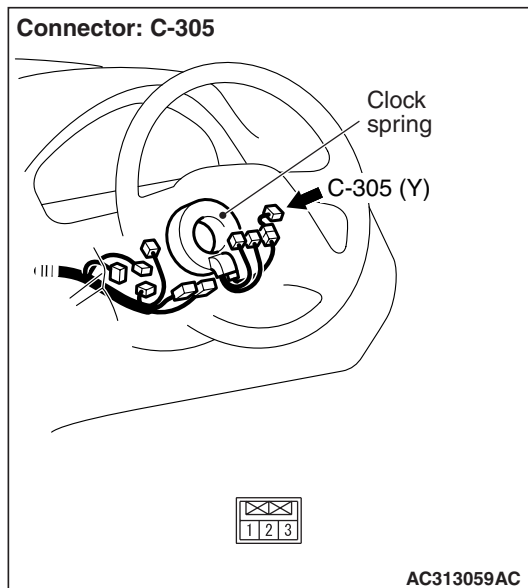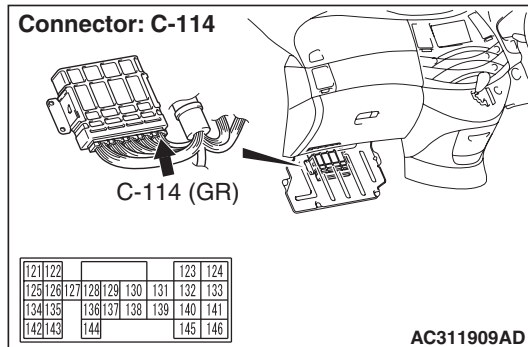


Q: Is the check result normal?

YES : It can be assumed that this malfunction is intermittent, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

NO : Repair the damaged harness wire, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

STEP 15. Connector check: C-305 auto-cruise control switch connector

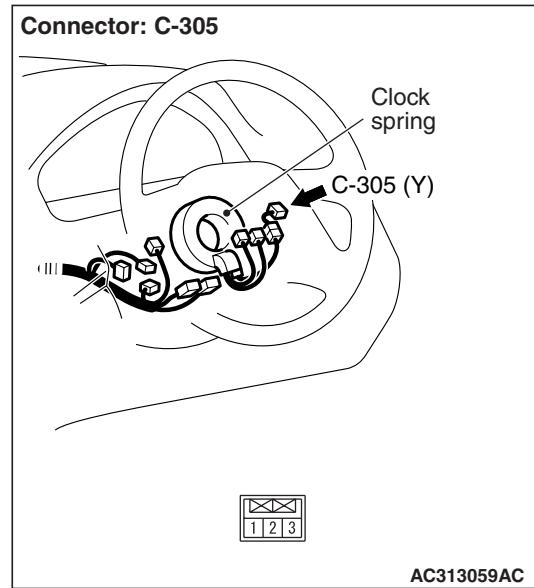

Q: Is the check result normal?

YES : Go to Step 16.

NO : Repair or replace the faulty connector, and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

STEP 16. Check the auto-cruise control switch.

Refer to [P.17-33](#).

Q: Is the check result normal?

YES : Install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 17.

NO : Replace the auto-cruise control switch (Refer to [P.17-34](#)), and install the air bag module (driver's side) (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#)). Then go to Step 18.

STEP 17. Check the M.U.T.-III diagnosis code No.15.

Q: Is the M.U.T.-III diagnosis code No.15 output?

YES : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 18.

NO : It can be assumed that this malfunction is intermittent.

STEP 18. Check the M.U.T.-III diagnosis code No.15.

Q: Is the M.U.T.-III diagnosis code No.15 output?

YES : Return to Step 1.

NO : The procedure is complete.

Code No.21 Cancel Latch Signal System

DIAGNOSIS CODE SET CONDITIONS

The engine-A/T-ECU communicates cancellation retention information between the two microprocessors. This diagnosis code is set when cancellation retention information contains inconsistency.

PROBABLE CAUSES


- Malfunction of the engine-A/T-ECU.

DIAGNOSIS PROCEDURE

Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then check that diagnosis code 21 is not set.

Code No.22 Stop Lamp Switch System

Stop Lamp Switch System Circuit

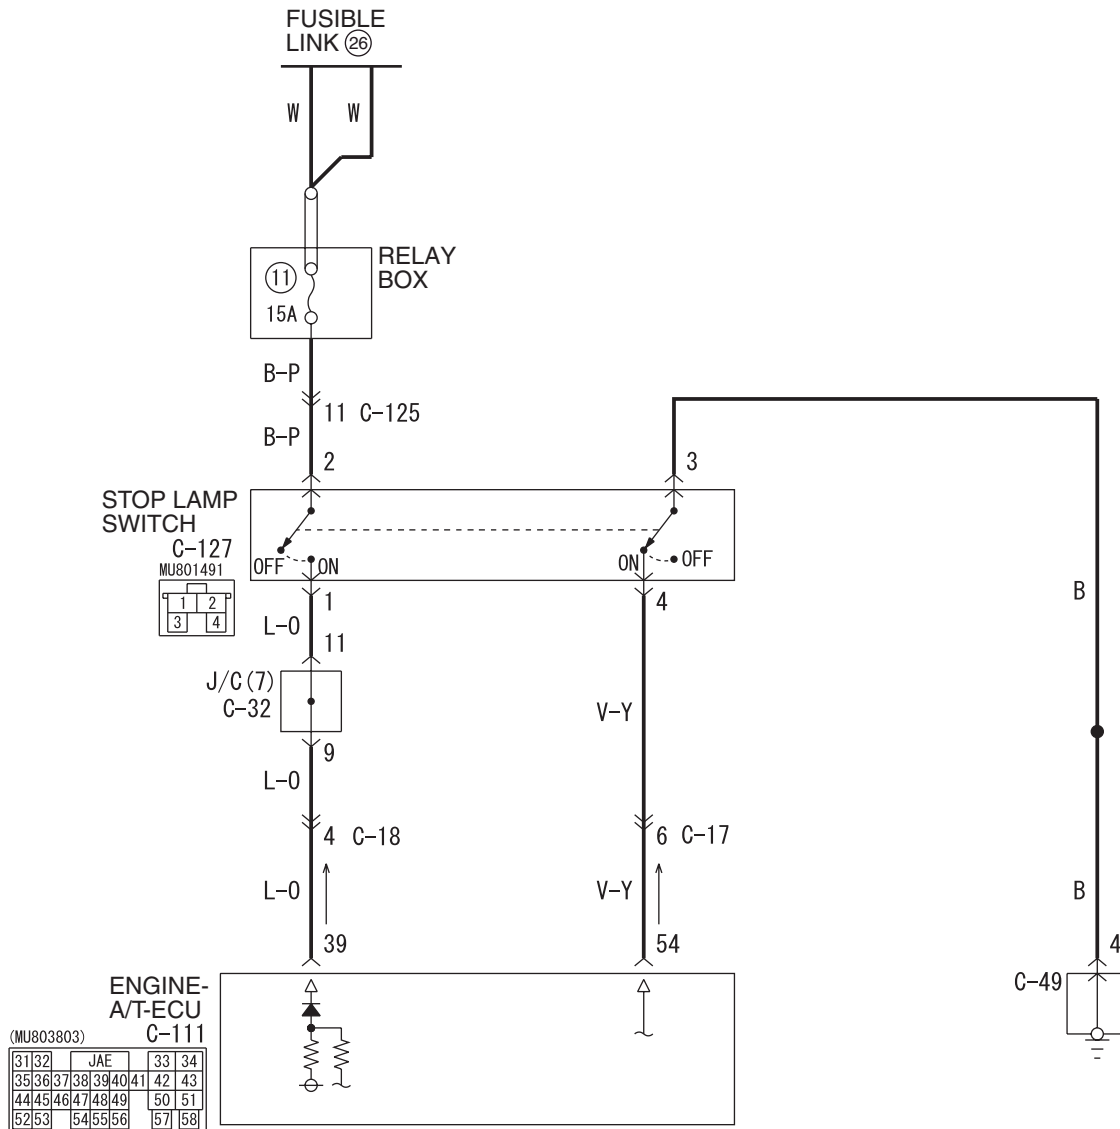

Wire colour code

B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple

W6X17X002A

OPERATION

- Battery positive voltage is supplied to the stop lamp switch (terminal 2 and 4).
- When the brake pedal is depressed, battery positive voltage is applied to the engine-A/T-ECU (terminal 39 and 54).

DIAGNOSIS CODE SET CONDITIONS

Check Condition

- The "CRUISE" indicator light illuminates.

Judgement Criteria

- Short in stop lamp switch circuit.
- Open circuit in the brake switch circuit (between engine-A/T-ECU terminal 54 and earth).

PROBABLE CAUSES

- Malfunction of the stop lamp switch.
- Damaged harness or connector.
- Malfunction of the engine-A/T-ECU.

DIAGNOSIS PROCEDURE**STEP 1. M.U.T.-III data list**

Item 05: Stop lamp switch (Refer to data list reference table [P.17-28](#)).

Q: Is the check result normal?

YES : Go to Step 14.

NO : Go to Step 2.

STEP 2. Check the stop lamp operation.

Check the stop lamp operation.

OK:

Brake pedal depressed: Stop lamp will illuminate

Brake pedal not depressed: Stop lamp does not illuminate



Q: Is the check result normal?

YES : Go to Step 3.

NO : Go to Step 6.

STEP 3. Measure the voltage at engine-A/T-ECU connector C-111.

(1) Turn the ignition switch to the "ON" position.

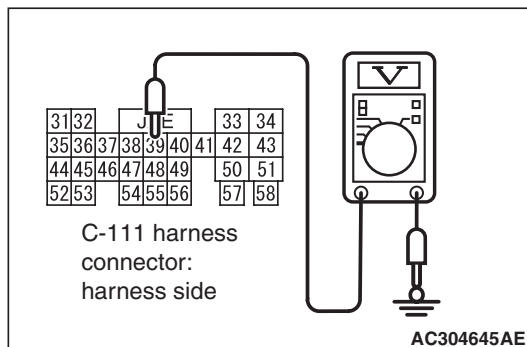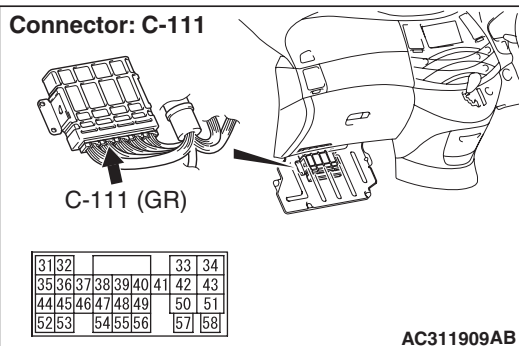

(2) Measure the voltage between engine-A/T-ECU connector C-111 terminal No.39 and earth.

OK:

Brake pedal depressed: System voltage



Brake pedal not depressed: 1 V or less

(3) Turn the ignition switch to the "LOCK" (OFF) position.

Q: Is the check result normal?

YES : Go to Step 13.

NO : Go to Step 4.

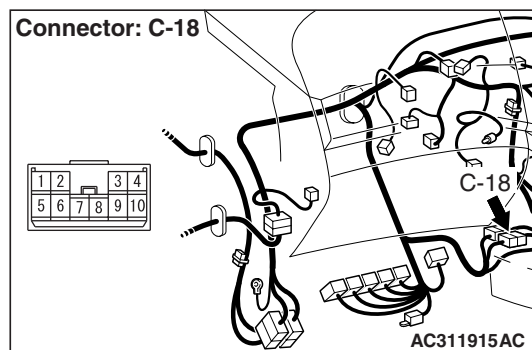
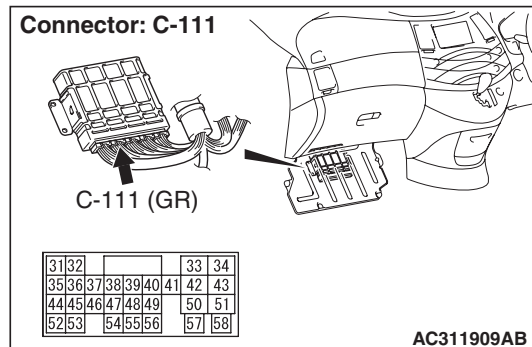
STEP 4. Connectors check: C-111 engine-A/T-ECU connector, C-18 intermediate connector

Q: Is the check result normal?

YES : Go to Step 5.

NO : Repair or replace the damaged components. Then go to Step 23.

STEP 5. Check the harness between engine-A/T-ECU connector C-111 terminal No.39 and stop lamp switch connector C-127 terminal No.1.

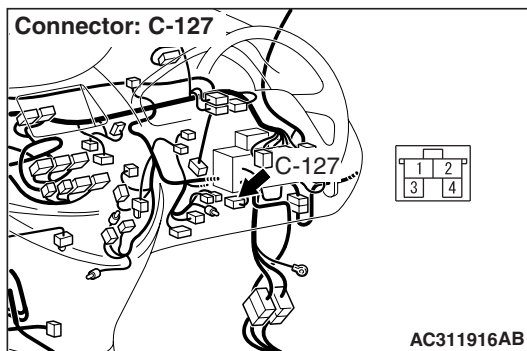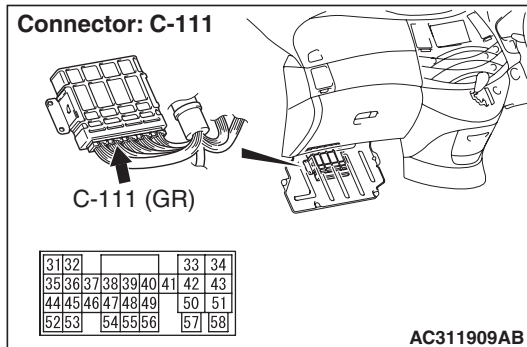


Q: Is the check result normal?


YES : Go to Step 13.

NO : Repair the damaged harness wire. Then go to Step 23.

STEP 6. Measure the voltage at stop lamp switch connector C-127.

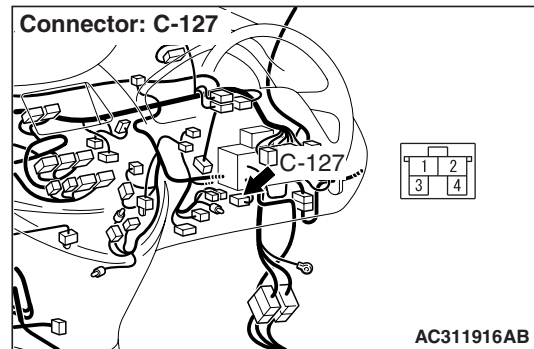

(1) Disconnect stop lamp switch connector C-127.

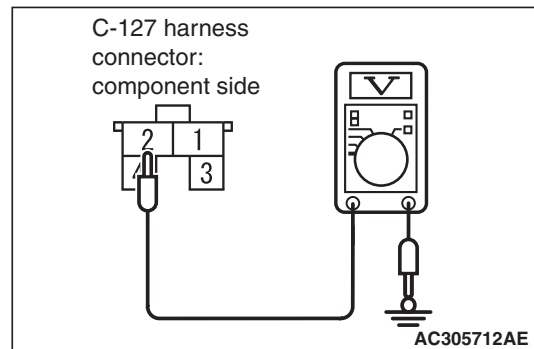

(2) Measure the voltage between stop lamp switch connector C-127 terminal No.2 and earth.






OK: System voltage

(3) Connect stop lamp switch connector C-127.

Q: Is the check result normal?



YES : Go to Step 10.

NO : Go to Step 7.

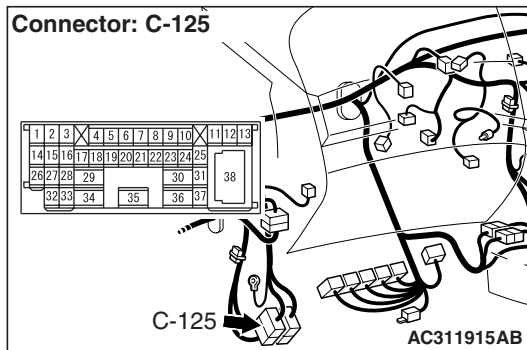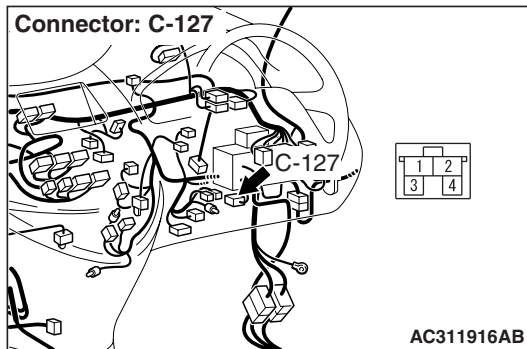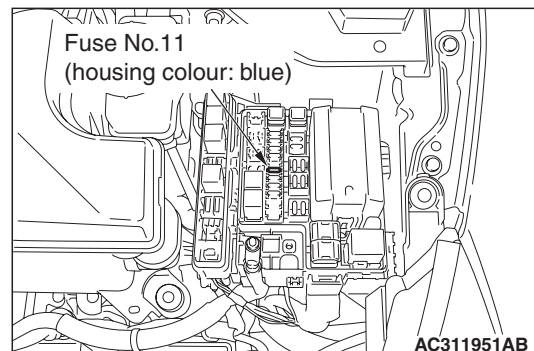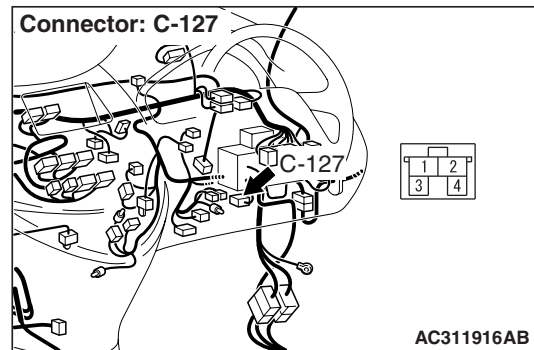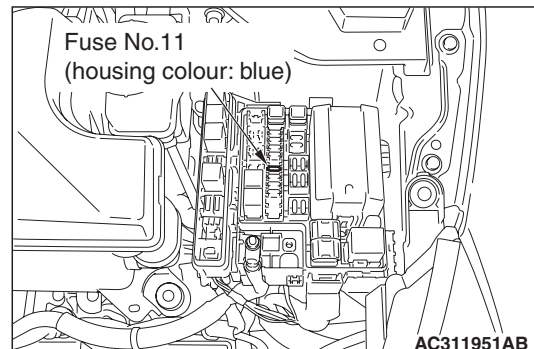STEP 7. Connectors check: C-127 stop lamp switch connector, C-125 intermediate connector**Q: Is the check result normal?****YES :** Go to Step 8.**NO :** Repair or replace the damaged components. Then go to Step 23.**STEP 8. Check the harness between stop lamp switch connector C-127 terminal No.2 and fuse No.11 at the relay box in engine compartment for damage.****Q: Is the check result normal?****YES :** Go to Step 9.**NO :** Repair the damaged harness wire. Then go to Step 23.**STEP 9. Check the fuse No.11 at the relay box in engine compartment.****Q: Is the check result normal?****YES :** Go to Step 10.**NO :** Check the stop lamp system harness and replace the fuse. Then go to Step 23.

STEP 10. Check the stop lamp switch.

- (1) Remove the stop lamp switch (Refer to GROUP 35A, Brake Pedal [P.35A-13](#)).

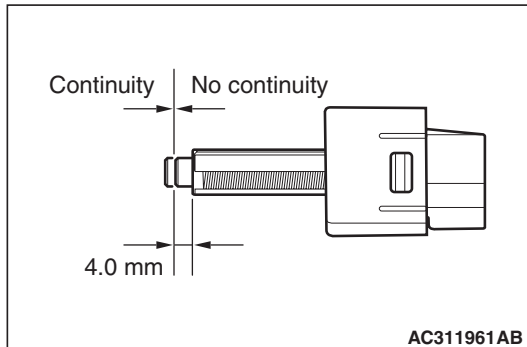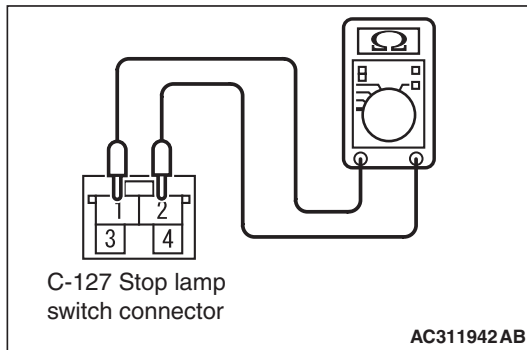

- (2) Connect an ohmmeter to the stop lamp switch between terminals 1 and 2.
- (3) Check for continuity between the terminals when the plunger of the stop lamp switch is pushed in and when it is released.



OK: The stop lamp switch is operating properly if the circuit is open between terminals 1 and 2 when the plunger is pushed in to a depth of within 4.0 mm from the outer case edge surface, and if the resistance value is less than 2 ohms between terminals 1 and 2 when it is released.

Q: Is the check result normal?

YES : Install the stop lamp switch (Refer to GROUP 35A, Brake Pedal [P.35A-13](#)). Then go to Step 11.

NO : Replace the stop lamp switch (Refer to GROUP 35A, Brake Pedal [P.35A-13](#)). Then go to Step 23.

STEP 11. Connectors check: C-127 stop lamp switch connector, C-18 intermediate connector, C-32 J/C (7)

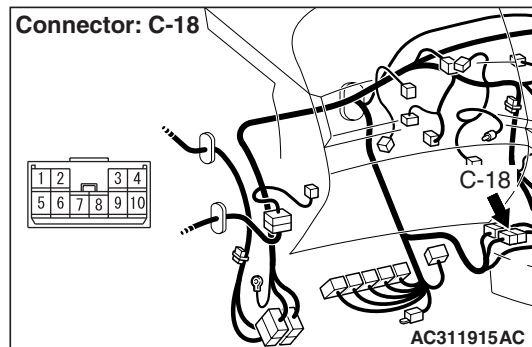
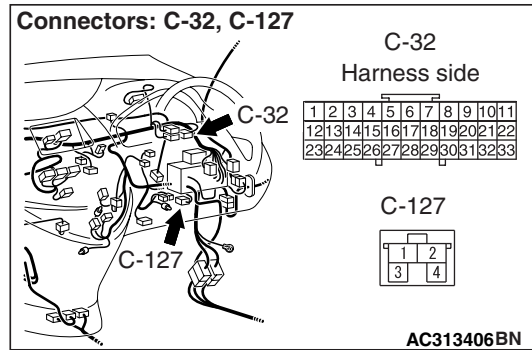


Q: Is the check result normal?

YES : Go to Step 12.

NO : Repair or replace the damaged components. Then go to Step 23.

STEP 12. Check the harness between stop lamp switch connector C-127 terminal No.1 and intermediate connector C-18 terminal No.4.

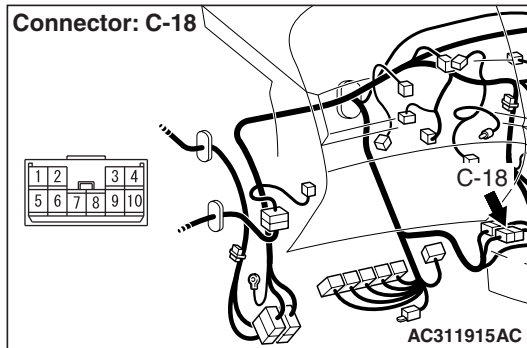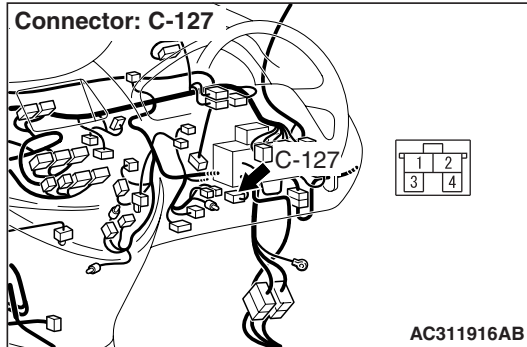

Q: Is the check result normal?

YES : Go to Step 13.

NO : Repair the damaged harness wire. Then go to Step 23.

STEP 13. M.U.T.-III data list

Item 05: Stop lamp switch (Refer to data list reference table [P.17-28](#)).

Q: Is the check result normal?

YES : Go to Step 22.

NO : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 23.

STEP 14. M.U.T.-III data list

Item 06: Brake switch (Refer to data list reference table [P.17-28](#)).



Q: Is the check result normal?

YES : Go to Step 22.

NO : Go to Step 15.

STEP 15. Measure the voltage at engine-A/T-ECU connector C-111.

(1) Turn the ignition switch to the "ON" position.

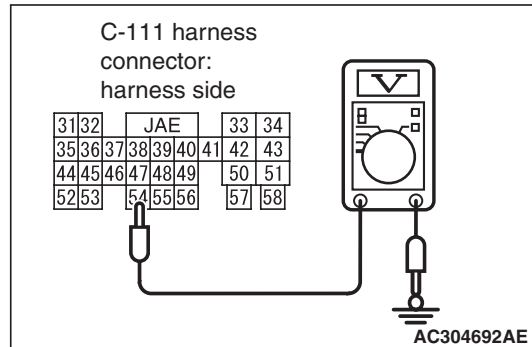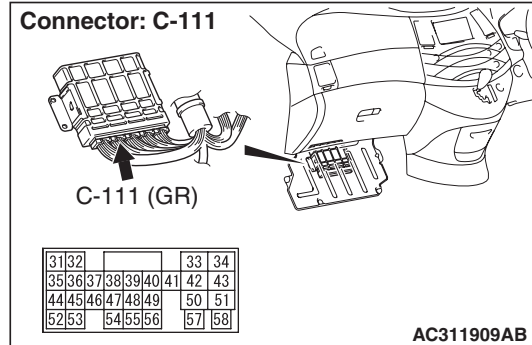

(2) Measure the voltage between engine-A/T-ECU connector C-111 terminal No.54 and earth.

OK:

Brake pedal depressed: System voltage

Brake pedal not depressed: 1 V or less

(3) Turn the ignition switch to the "LOCK" (OFF) position.



Q: Is the check result normal?

YES : Go to Step 21.

NO : Go to Step 16.

STEP 16. Check the stop lamp switch.

- (1) Remove the stop lamp switch (Refer to GROUP 35A, Brake Pedal [P.35A-13](#)).

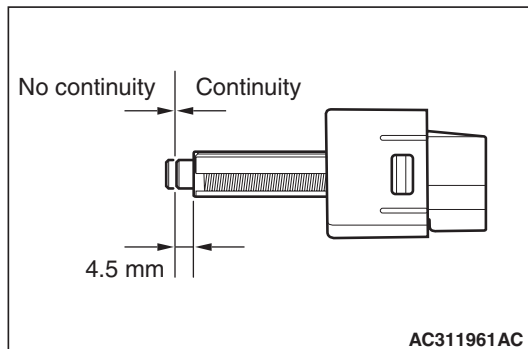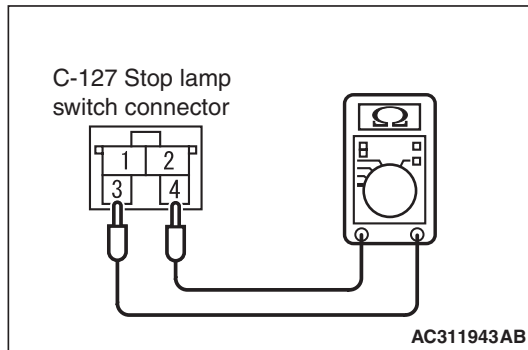

- (2) Connect an ohmmeter to the stop lamp switch between terminals 3 and 4.
(3) Check for continuity between the terminals when the plunger of the stop lamp switch is pushed in and when it is released.




OK: The stop lamp switch is operating properly if the circuit is open between terminals 3 and 4 when the plunger is released, and if resistance value is less than 2 ohms between terminals 3 and 4 when the plunger is pushed in to a depth of within 4.5 mm from the outer case edge surface.

Q: Is the check result normal?

YES : Install the stop lamp switch (Refer to GROUP 35A, Brake Pedal [P.35A-13](#)). Then go to Step 17.

NO : Replace the stop lamp switch (Refer to GROUP 35A, Brake Pedal [P.35A-13](#)). Then go to Step 23.

STEP 17. Connectors check: C-111 engine-A/T-ECU connector, C-17 intermediate connector, C-127 stop lamp switch connector

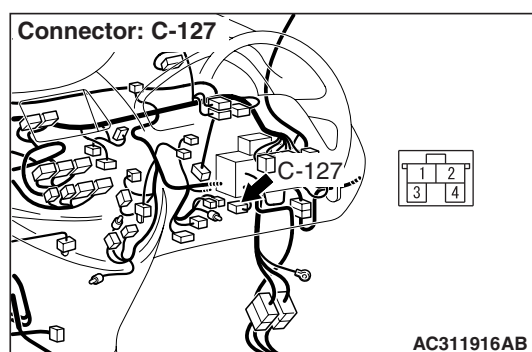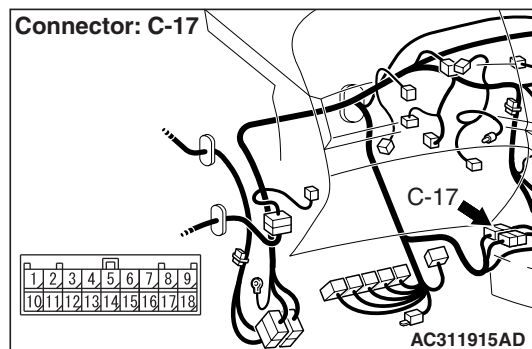
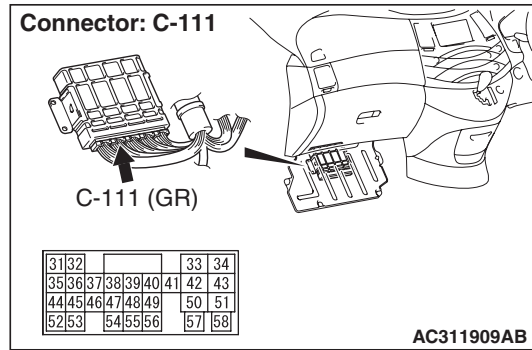


Q: Is the check result normal?

YES : Go to Step 18.

NO : Repair or replace the damaged components. Then go to Step 23.

STEP 18. Check the harness between engine-A/T-ECU connector C-111 terminal No.54 and stop lamp switch connector C-127 terminal No.4.

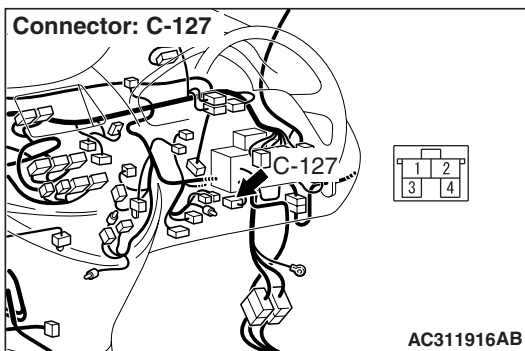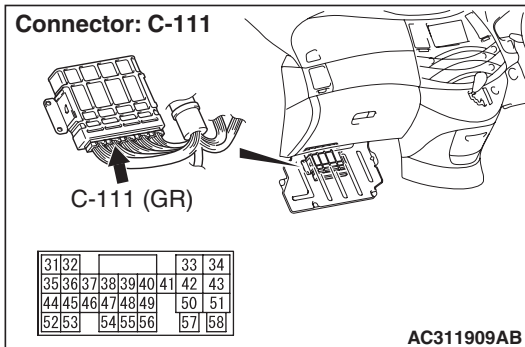


Q: Is the check result normal?

YES : Go to Step 19.

NO : Repair the damaged harness wire. Then go to Step 23.

STEP 19. Connectors check: C-127 stop lamp switch connector, C-49 earth connector


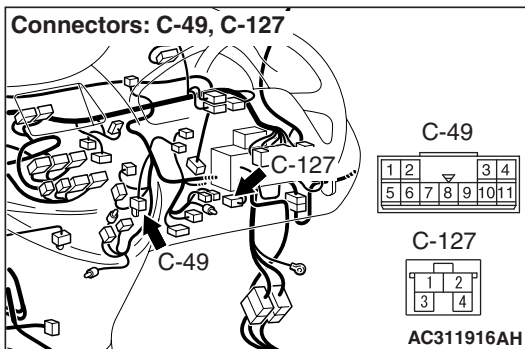


Q: Is the check result normal?

YES : Go to Step 20.

NO : Repair or replace the damaged components. Then go to Step 23.

STEP 20. Check the harness between stop lamp switch connector C-127 terminal No.3 and earth.

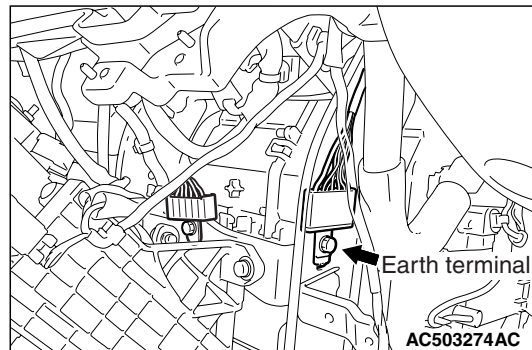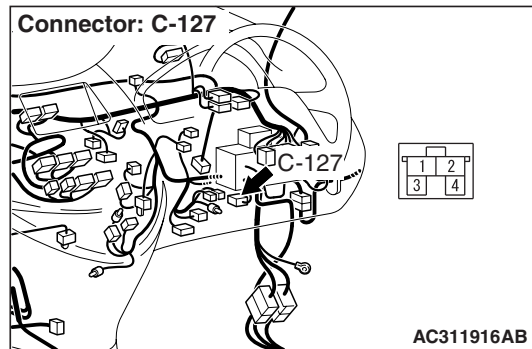

Q: Is the check result normal?

YES : Go to Step 21.

NO : Repair the damaged harness wire. Then go to Step 23.

STEP 21. M.U.T.-III data list

Item 06: Brake switch (Refer to data list reference table [P.17-28](#)).

Q: Is the check result normal?

YES : Go to Step 22.

NO : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 23.

STEP 22. Check the M.U.T.-III diagnosis code No. 22.

Q: Is the M.U.T.-III diagnosis code No. 22 output?

YES : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 23.

NO : It can be assumed that this malfunction is intermittent.

STEP 23. Check the M.U.T.-III diagnosis code No. 22.

Q: Is the M.U.T.-III diagnosis code No. 22 output?

YES : Return to Step 1.

NO : The procedure is complete.

Code No. 23 Engine-A/T-ECU and Its Related Components

DIAGNOSIS CODE SET CONDITIONS

This diagnosis code is set when there is an failure in the engine-A/T-ECU and its related components.

PROBABLE CAUSES

- Malfunction of the MPI system.
- Malfunction of the A/T system.
- Malfunction of the engine-A/T-ECU.

DIAGNOSIS PROCEDURE

STEP 1. Check the MPI system diagnosis code.

Q: Is any diagnosis code set?

YES : Repair the MPI control system. (Refer to GROUP 13C, Troubleshooting –Inspection chart for diagnosis code Trouble Code Chart [P.13C-21](#)). Then go to Step 4 .

NO : Go to Step 2.

STEP 2. Check the A/T system diagnosis code.

Q: Is any diagnosis code set?

YES : Repair the A/T system (Refer to GROUP 23A, Troubleshooting <A/T> –Check chart for diagnosis codes [P.23A-17](#)). Then go to Step 4.

NO : Go to Step 3.

STEP 3. Check the M.U.T.-III diagnosis code No. 23.

Q: Is the M.U.T.-III diagnosis code No. 23 output?

YES : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 4.

NO : This malfunction is intermittent. (Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points - How to Cope with Intermittent Malfunctions [P.00-5](#)).

STEP 4. Check the M.U.T.-III diagnosis code No. 23.

Q: Is the M.U.T.-III diagnosis code No. 23 output?

YES : Return to Step 1.

NO : This procedure is complete.

CHECK CHART FOR TROUBLE SYMPTOMS

M1172002300582

Trouble symptom		Inspection procedure No.	Reference page
Communication with M.U.T.-III is not possible.	Communication with the engine-A/T-ECU only is impossible	-	GROUP 13C, Symptom Procedures – Inspection Procedure 1 P.13C-246
Auto-cruise control is not cancelled.	Even if brake pedal is depressed	1	P.17-24
	Even if select lever is set to N range	2	P.17-24
	Even if auto-cruise control CANCEL switch in set to ON	3	P.17-24
Auto-cruise control cannot be set.		4	P.17-24
Hunting (repeated acceleration and deceleration) occurs at the set vehicle speed.		5	P.17-25
When the auto-cruise control MAIN switch is turned ON, the auto-cruise control indicator lamp does not illuminate. (However, the auto-cruise control system is normal).		6	P.17-26

SYMPTOM PROCEDURES

Inspection Procedure 1: When the Brake Pedal is Depressed, Auto-cruise Control is not Cancelled.

COMMENTS ON TROUBLE SYMPTOM

The stop lamp switch circuit is suspected.

- Malfunction of the stop lamp switch.
- Malfunction of the engine-A/T-ECU.

PROBABLE CAUSES

- Malfunction of the connector.
- Malfunction of the harness.

DIAGNOSIS PROCEDURE

Refer to [P.17-15](#), Diagnosis Trouble Code Procedures –Code No. 22: Stop lamp switch system.

Inspection Procedure 2: When the Selector Lever is Moved to "N" Range, Auto-cruise Control is not Cancelled.

COMMENTS ON TROUBLE SYMPTOM

The inhibitor switch circuit is suspected.

- Malfunction of the harness.
- Malfunction of the engine-A/T-ECU.

PROBABLE CAUSES

- Malfunction of the inhibitor switch.
- Malfunction of the connector.

DIAGNOSIS PROCEDURE

Refer to GROUP 23A, Symptom Procedures number 16: Inhibitor switch system [P.23A-105](#).

Inspection Procedure 3: When the Auto-cruise Control "CANCEL" Switch is Set to ON, Auto-cruise Control is not Cancelled.

COMMENTS ON TROUBLE SYMPTOM

The cause is probably an open-circuit in the circuit inside the auto-cruise control CANCEL switch.

DIAGNOSIS PROCEDURE

Replace the auto-cruise control switch (Refer to [P.17-34](#)). Then check the malfunction is eliminated.

PROBABLE CAUSE

Malfunction of the auto-cruise control switch.

Inspection Procedure 4: Auto-cruise Control cannot be Set.

COMMENTS ON TROUBLE SYMPTOM

The fail-safe function is probably canceling auto-cruise control. In this case, M.U.T.-III can be used to Retest each system by checking the diagnosis trouble codes. The M.U.T.-III can also be used to check if the circuits of each input switch are normal or not by checking the input switch codes.

- Malfunction of the inhibitor switch.
- Malfunction of the engine-A/T-ECU.

DIAGNOSIS PROCEDURE**STEP 1. Check the M.U.T.-III diagnosis code**

Q: Is any diagnosis code set?

YES : Refer to [P.17-6](#), Check Chart for Diagnosis Codes. Then go to Step 6.

NO : Go to Step 2.

PROBABLE CAUSES

- Malfunction of the auto-cruise control switch.
- Malfunction of the stop lamp switch.

STEP 2. M.U.T.-III data list

Item 04: Cancel switch (Refer to data list reference table [P.17-28](#)).

Q: Is the check result normal?

YES : Go to Step 3.

NO : Refer to [P.17-24](#), Symptom Procedures number 3. Then go to Step 6.

STEP 3. M.U.T.-III data list

- Item 05: Stop lamp switch (Refer to data list reference table [P.17-28](#)).
- Item 06: Brake switch (Refer to data list reference table [P.17-28](#)).

Q: Is the check result normal?

YES : Go to Step 4.

NO : Refer to [P.17-24](#), Symptom Procedures number 1. Then go to Step 6.

STEP 4. M.U.T.-III data list

Item 07, Inhibitor switch (Refer to data list reference table [P.17-28](#)).

Q: Is the check result normal?

YES : Go to Step 5.

NO : Refer to [P.17-24](#), Symptom Procedures number 2. Then go to Step 6.

STEP 5. Check the symptoms.

Q: Can auto-cruise control be set?

YES : It can be assumed that this malfunction is intermittent.

NO : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 6.

STEP 6. Check the symptoms.

Q: Can auto-cruise control be set?

YES : The procedure is complete.

NO : Return to Step 1.

Inspection Procedure 5: Hunting (Repeated Acceleration and Deceleration) Occurs at the Set Vehicle Speed.

COMMENTS ON TROUBLE SYMPTOM

The output shaft speed sensor signal or the throttle body is suspected.

PROBABLE CAUSES

- Malfunction of the output shaft speed sensor.
- Malfunction of the throttle body.
- Malfunction of the engine-A/T-ECU.

DIAGNOSIS PROCEDURE

STEP 1. Check the A/T system diagnosis code.

Q: Is any diagnosis code set?

YES : Repair the A/T system (Refer to GROUP 23A, Troubleshooting <A/T> –Check chart for diagnosis codes [P.23A-17](#)). Then go to Step 4.

NO : Go to Step 2.

STEP 2. Check the MPI system diagnosis code.

Q: Is any diagnosis code set?

YES : Repair the MPI control system (Refer to GROUP 13C, Troubleshooting –Inspection chart for diagnosis code Trouble Code Chart [P.13C-21](#)). Then go to Step 4.

NO : Go to Step 3.

STEP 3. Retest the system

Q: Does a hunting occur?

YES : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 4.

NO : It can be assumed that this malfunction is intermittent.

STEP 4. Retest the system


Q: Does a hunting occur?

YES : Return to Step 1.

NO : The procedure is complete.

Inspection Procedure 6: When MAIN Switch is Turned "ON", Auto-cruise Control Indicator Lamp Inside Combination Meter does not Illuminate. (However, Auto-cruise Control is Normal).

Auto-cruise Control Indicator Lamp Drive Circuit

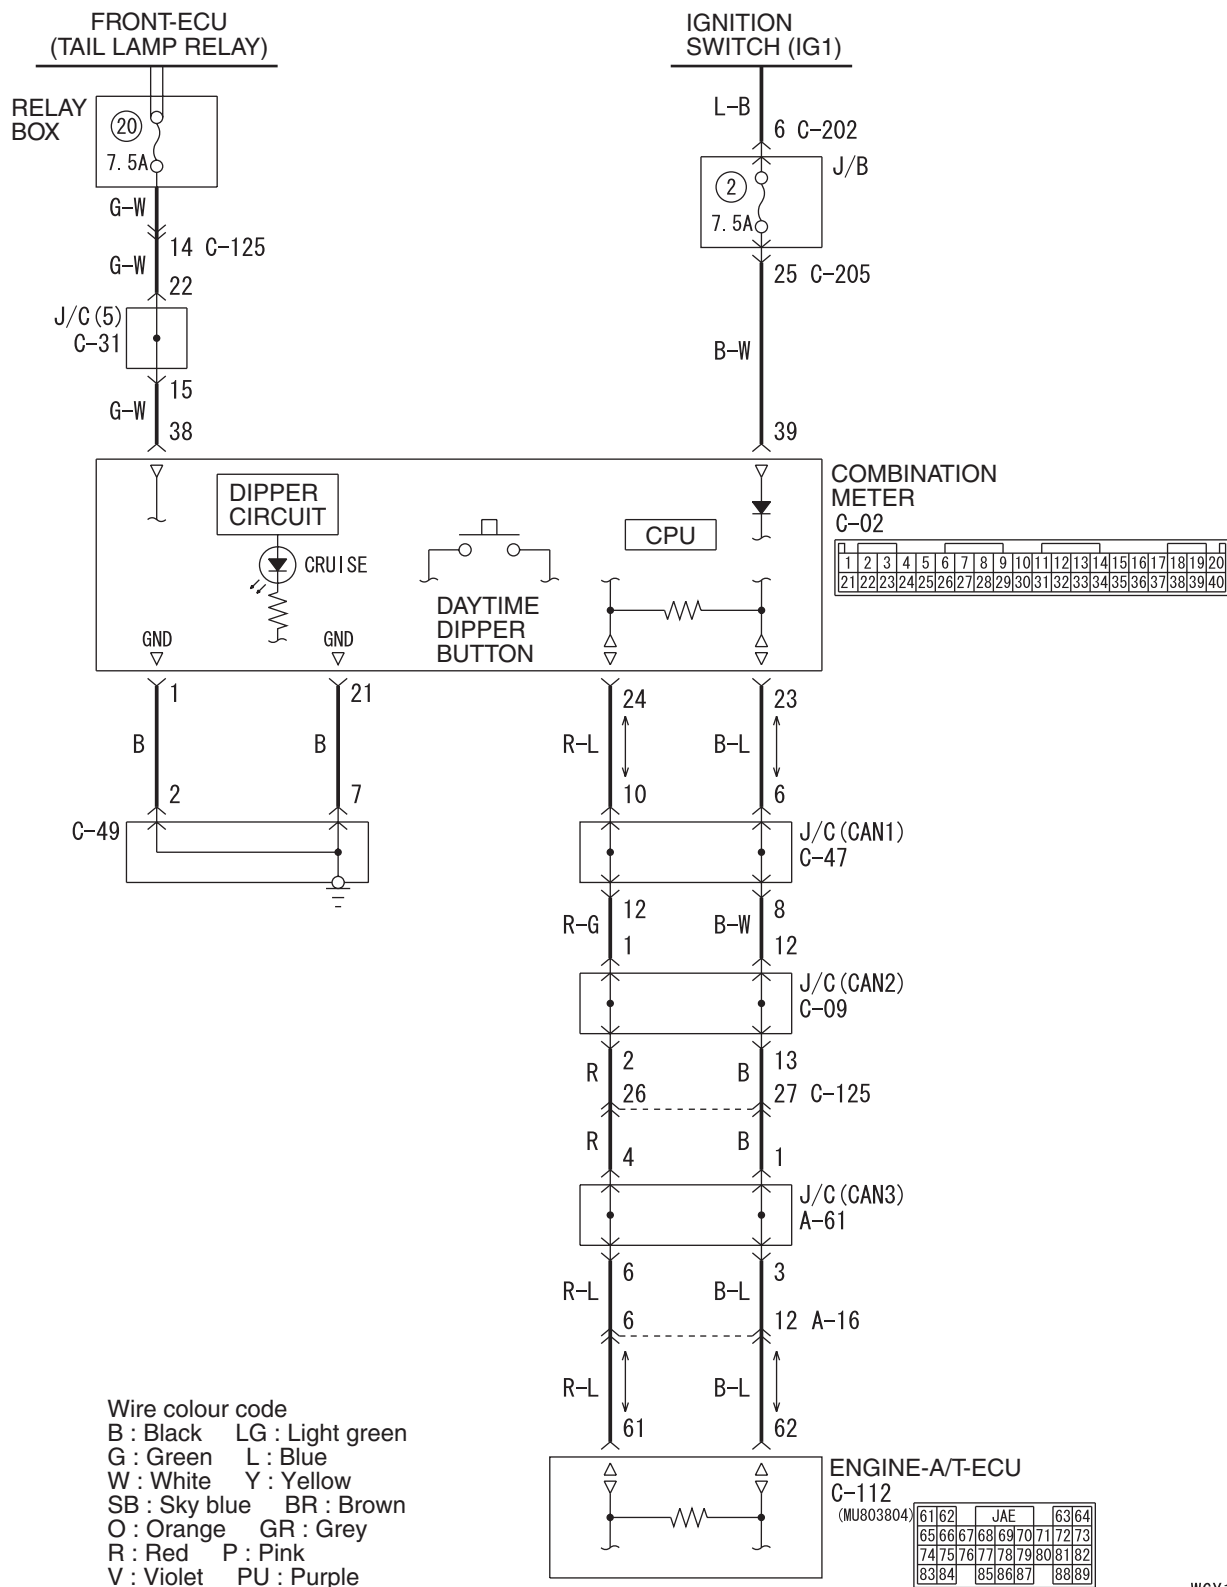

OPERATION

The engine-A/T-ECU detects MAIN switch "ON" signal to illuminate the auto-cruise control indicator lamp on the combination meter.

COMMENTS ON TROUBLE SYMPTOM

Connector(s), wiring harness in the CAN bus line between the engine-A/T-ECU and the combination meter, power supply to the engine-A/T-ECU, the combination meter, the engine-A/T-ECU may be defective.

PROBABLE CAUSES

- Malfunction of the combination meter
- Malfunction of the connector.
- Malfunction of the harness.
- Malfunction of the engine-A/T-ECU

DIAGNOSIS PROCEDURE

STEP 1. STEP 1. M.U.T.-III CAN bus diagnosis

- Using M.U.T.-III, perform CAN baseline diagnosis.

Q: Is the check result satisfactory?

YES : Go to Step 2 .

NO : Repair the CAN bus lines (Refer to GROUP 54F, Diagnosis-Can Bus Diagnostic Chart [P.54F-13](#)). Then go to Step 4 .

STEP 2. M.U.T.-III MPI diagnosis

- Using M.U.T.-III, perform MPI diagnosis.

Q: Is diagnosis code U1108 set?

YES : Refer to GROUP 13C, MPI Diagnosis - Code No U1108: Combination Meter Time-Out [P.13C-238](#). Then go to Step 4.

NO : Go to Step 3.

STEP 3. Retest the system.

Q: Does the auto-cruise control indicator lamp illuminate when the MAIN switch is turned "ON"?

YES : It can be assumed that this malfunction is intermittent.

NO : Replace the engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#)). Then go to Step 4.

STEP 4. Retest the system.

Q: Does the auto-cruise control indicator lamp illuminate when the MAIN switch is turned "ON"?

YES : The procedure is complete.

NO : Return to Step 1.

DATA LIST REFERENCE TABLE

M1172002400523

Item No.	Check item		Check condition	Normal condition
01	Auto-cruise control switch	MAIN	MAIN switch: ON	ON
			MAIN switch: OFF	OFF
02		SET/COAST	SET switch: ON	ON
			SET switch: OFF	OFF
03		RESUME/ACCELERATING	RESUME switch: ON	ON
			RESUME switch: OFF	OFF
04		CANCEL	CANCEL switch: ON	ON
			CANCEL switch: OFF	OFF
05	Stop lamp switch (for stop lamp circuit)	Brake pedal: Depressed	ON	
		Brake pedal: Released	OFF	
06	Brake switch (for auto-cruise control circuit)	Brake pedal: Depressed	ON	
		Brake pedal: Released	OFF	
07	Inhibitor switch	Selector lever: N or P position	ON	
		Selector lever: Other than N or P position	OFF	
08	Accelerator switch (Idle switch)	Accelerator pedal: Depressed	OFF	
		Accelerator pedal: Released	ON	
09	Auto-cruise control operation	Auto-cruise control: active	ON	
		Auto-cruise control: Inactive	OFF	
10	Vehicle speed signal	Road test the vehicle	The speedometer and M.U.T.-III display the same value.	
11	Throttle position sensor (main)	<ul style="list-style-type: none">Remove the intake air hose at the throttle bodyDisconnect the electronic-controlled throttle valve connector, and then connect terminal numbers No. 3, No. 4, No. 5 and No. 6 with the use of the special tool: MB991658.Ignition switch: ON	Fully close the throttle valve with your finger	300 –700 mV
			Fully open the throttle valve with your finger	4,000 mV or more
		No load		500 –700 mV
		A/C switch: OFF to ON		Voltage rises
		Selector lever: N to D		

Item No.	Check item	Check condition		Normal condition
12	Accelerator pedal position sensor (main)	Ignition switch: ON	Accelerator pedal: Released	800 – 1,200 mV
			Accelerator pedal: Depressed	Increases in response to the pedal depression stroke
			Accelerator pedal: Fully depressed	4,000 mV or more
13	Cancel code	Ignition switch: "ON"		The cancel code, which set when the auto-cruise control system was cancelled at the last time, is set again.

CHECK AT ECU TERMINAL

M1172002700427

C-110										C-111										C-112										C-113										C-114													
1	2							3	4	31	32					33	34	61	62					63	64	91	92					93	94	95	121	122					123	124											
5	6	7	8	9	10	11	12	13		35	36	37	38	39	40	41	42	43	65	66	67	68	69	70	71	72	73	96	97	98	99	100	101	102	103	104	125	126	127	128	129	130	131	132	133								
14	15		16	17	18		19	20		44	45	46	47	48	49		50	51	74	75	76	77	78	79	80	81	82	105	106		107	108	109		110	111	112	113	114	115	116	117	118	119	120	134	135	136	137	138	139	140	141
21	22		23	24	25		26	27		52	53		54	55	56		57	58	83	84		85	86	87		88	89	113	114		115	116	117		118	119	120									142	143	144				145	146

AC312498AB

Terminal No.	Check item	Check conditions		Normal condition
15	Throttle valve control servo relay	Ignition switch: "ON"		System voltage
		Running at 3,500 r/min while engine is warming up after having been started.		1 V or less
39	Stop lamp switch	Ignition switch: "ON"	Depress the brake pedal.	System voltage
			Release the brake pedal.	1 V or less
51	Inhibitor switch: "P" and "N"	Ignition switch: "ON"	Select lever: N or P range	System voltage
			Select lever: Other than N or P range	1 V or less
54	Brake switch	Ignition switch: "ON"	Depress the brake pedal.	System voltage
			Release the brake pedal.	1 V or less
57	Engine control relay	Ignition switch: "ON"		1 V or less
		Ignition switch: "LOCK" (OFF)		System voltage
58	Engine-A/T-ECU backup power supply	Ignition switch: "LOCK" (OFF)		System voltage
92	Accelerator pedal position sensor (main) power supply	Ignition switch: "ON"		4.5 – 5.5 V
94	Auto-cruise control switch	Ignition switch: "ON"	All switches: OFF	4.7 – 5.0 V
			"CRUISE" (MAIN) switch: "ON"	0 – 0.3 V
			"COAST/SET" switch: ON	2.0 – 2.8 V
			"ACC/RES" switch: ON	3.3 – 4.1 V
			"CANCEL" switch: ON	0.8 – 1.5 V

Terminal No.	Check item	Check conditions		Normal condition
97	Sensor impressed voltage	Ignition switch: "ON"		4.9 – 5.1 V
106	Throttle position sensor power supply	Ignition switch: "ON"		4.5 – 5.5 V
107	Accelerator pedal position sensor (sub)	Ignition switch: "ON"	Release the accelerator pedal	0.335 – 0.935 V
			Depress the accelerator pedal.	4.0 V or more
113	Throttle position sensor (sub)	<ul style="list-style-type: none"> Remove the intake air hose at the throttle body Disconnect the throttle position sensor, and then connect terminal numbers No. 3, No. 4, No. 5 and No. 6 with the use of the special tool (MB991658). Ignition switch: "ON" 	Fully close the throttle valve with your finger	2.2 – 2.8 V
			Fully open the throttle valve with your finger	4.6 V or more
114	Accelerator pedal position sensor (main)	Ignition switch: "ON"	Release the accelerator pedal	0.335 – 0.935 V
			Depress the accelerator pedal.	4.0 V or more
115	Throttle position sensor (main)	<ul style="list-style-type: none"> Remove the intake air hose at the throttle body Disconnect the throttle position sensor, and then connect terminal numbers No. 3, No. 4, No. 5 and No. 6 with the use of the special tool (MB991658). Ignition switch: "ON" 	Fully close the throttle valve with your finger	0.3 – 0.7 V
			Fully open the throttle valve with your finger	4.0 V or more
132	Engine-A/T-ECU power supply voltage applied to throttle valve control servo	Ignition switch: "ON"		System voltage


ON-VEHICLE SERVICE

AUTO-CRUISE CONTROL SWITCH CHECK

M1172001200106

AUTO-CRUISE CONTROL MAIN SWITCH CHECK


1. Turn the ignition switch to ON position.

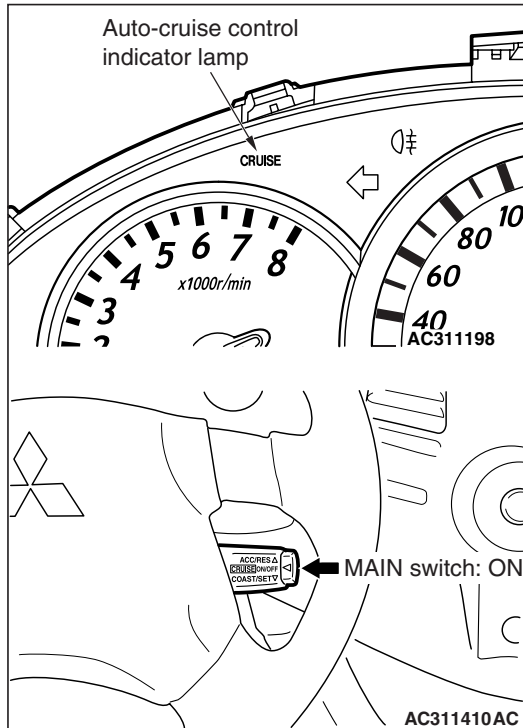

2. Check that the auto-cruise control indicator lamp within the combination meter illuminates when the MAIN switch is switched ON.

AUTO-CRUISE CONTROL SETTING

1. Switch ON the MAIN switch.
2. Drive at the desired speed within the range of approximately 40 –200 km/h.

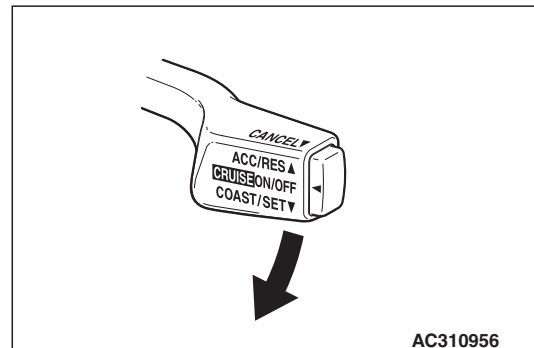


3. Push the auto-cruise control switch in the direction of arrow.
4. Check to be sure that when the switch is released the speed is the desired constant speed.

NOTE: . If the vehicles speed decreases to approximately 15 km/h below the set speed because of climbing a hill for example, the auto-cruise control will be cancelled.

SPEED-INCREASE SETTING

1. Set to the desired speed.

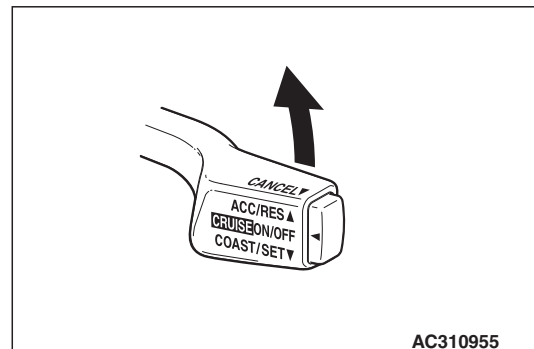


2. Push the auto-cruise control switch in the direction of arrow.
3. Check to be sure that acceleration continues while the switch is hold, and that when it is released the constant speed at the time when it was released becomes the driving speed.

NOTE: Acceleration can be continued even if the vehicle speed has passed the high-speed limit (approximately 200 km/h). But the speed when the auto-cruise control switch is released will be recorded as the high-speed limit.

SPEED-REDUCTION SETTING

1. Set to the desired speed.

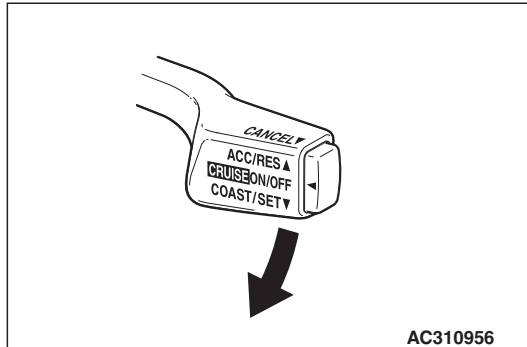


2. Push the auto-cruise control switch in the direction of arrow.
3. Check to be sure that deceleration continues while the switch is pressed, and that when it is released the constant speed at the time when it was released becomes the driving speed.


NOTE: When the vehicle speed reaches the low limit (approximately 40 km/h) during deceleration, the auto-cruise control will be cancelled.

RETURN TO THE SET SPEED BEFORE CANCELLATION AND AUTO-CRUISE CONTROL CANCELLATION

1. Set the auto-cruise speed control.
2. When any of the following operations are performed while at constant speed during auto-cruise control, check if normal driving is resumed and deceleration occurs.

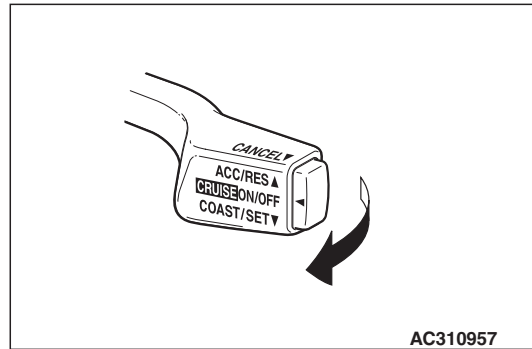

- (1) The auto-cruise control switch is pulled in the direction of arrow.
- (2) The brake pedal is depressed.
- (3) The selector lever is moved to the "N" range.

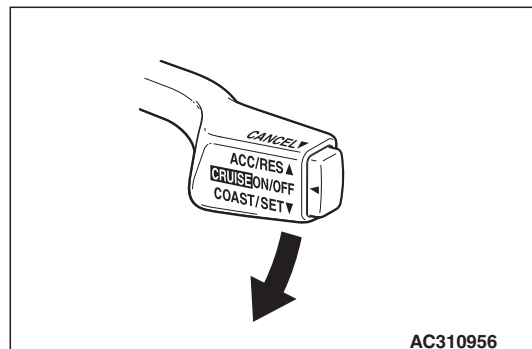


3. When the auto-cruise control switch is pushed in the direction of arrow at a vehicle speed of 40 km/h or higher, check if the vehicle speed returns to the speed before auto-cruise control driving was cancelled, and constant speed driving occurs.
4. When the MAIN switch is turned to OFF while driving at constant speed, check if normal driving is resumed and deceleration occurs.

**AUTO-CRUISE CONTROL SYSTEM
COMPONENT CHECK**

M1172001700565

**AUTO-CRUISE CONTROL SWITCH
CHECK**

1. Remove the auto-cruise control switch. (Refer to [P.17-34](#)).

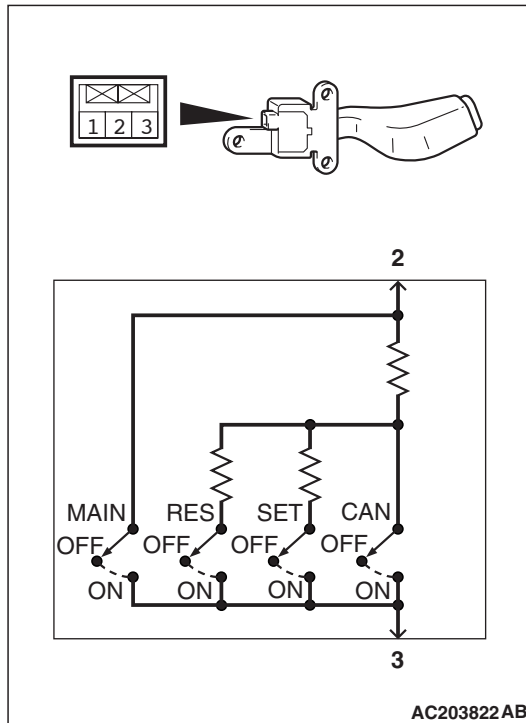


2. Measure the resistance between the terminals when each of the SET, RESUME, CANCEL and MAIN switches is pressed. If the values measured at the time correspond to those in the table below, then there is no problem.

Switch position	Specified condition
MAIN switch: OFF	Open circuit
MAIN switch: ON	Less than 2 Ω
CANCEL switch: ON	Approximately 100 Ω
RESUME switch: ON	Approximately 887 Ω
SET switch: ON	Approximately 300 Ω

STOP LAMP SWITCH

1. Disconnect the connector.

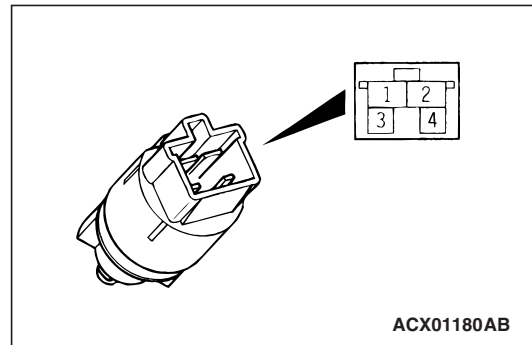

2. Check for continuity between the terminals of the switch.

Measurement conditions	Terminal connector of tester	Specified condition
When brake pedal is depressed. (for stop lamp circuit)	1 - 2	Less than 2 Ω
	3 - 4	Open circuit
When brake pedal is not depressed. (for auto-cruise control circuit)	1 - 2	Open circuit
	3 - 4	Less than 2 Ω

INHIBITOR SWITCH ("N" POSITION)

Refer to GROUP 23A, On-vehicle Service –A/T Control Component Check [P.23A-149](#).

THROTTLE POSITION SENSOR

Refer to GROUP 13C, On-vehicle Service –Throttle Valve Control Servo Check [P.13C-345](#).


AUTO-CRUISE CONTROL

REMOVAL AND INSTALLATION

M1172001400520

⚠ WARNING

- Before removal of the air bag module, refer to GROUP 52B, Service Precautions ([P.52B-5](#)) and Driver's, Front Passenger's Air Bag Module(s) and Clock Spring ([P.52B-334](#)).
- When removing and installing the steering wheel and air bag module assembly, do not let it bump against the air bag module.

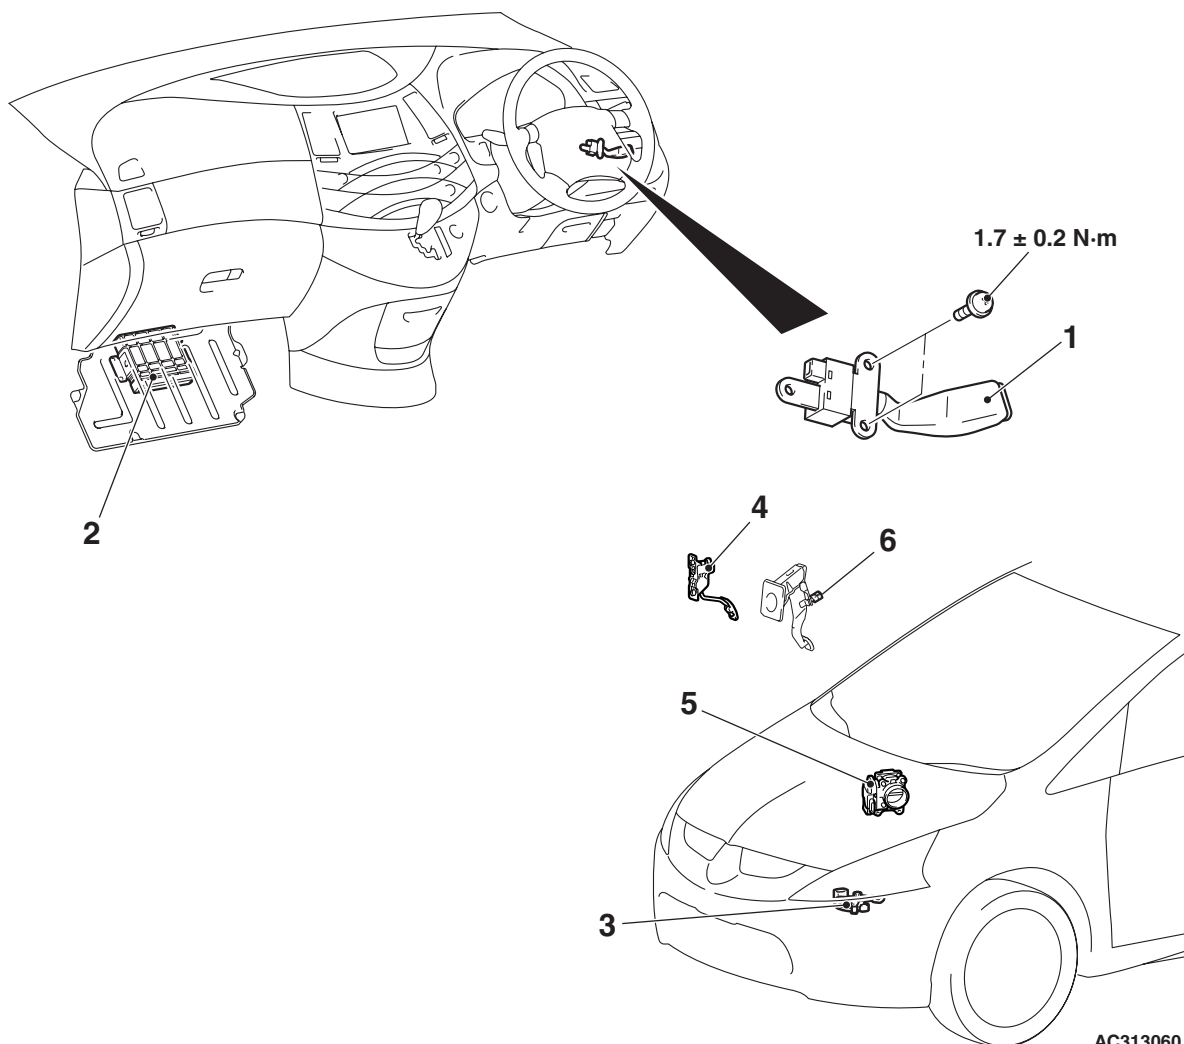

AC313060AB

Auto-cruise control switch removal steps

- Air bag module (Refer to GROUP 52B, Driver's, Front Passenger's Air Bag Module(s) and Clock Spring [P.52B-334](#))

1. Auto-cruise control switch

Control unit removal

2. Engine-A/T-ECU (Refer to GROUP 13C, Engine-A/T-ECU [P.13C-350](#))

Sensor removal

3. Inhibitor switch
4. Accelerator pedal (Refer to [P.17-3](#))
5. Throttle body assembly (Refer to GROUP 13C, Throttle body assembly [P.13C-348](#))
6. Stop lamp switch (Refer to GROUP 35A, Brake pedal [P.35A-13](#))

EMISSION CONTROL <MPI>**GENERAL INFORMATION**

M1173000100552

The emission control system consists of the following subsystems:

- Crankcase emission control system
- Evaporative emission control system
- Exhaust emission control system

Items	Name	Specification
Crankcase emission control system	Positive crankcase ventilation (PCV) valve	Variable flow type (Purpose: HC reduction)
Evaporative emission control system	Canister Purge control solenoid valve	Equipped Duty cycle type solenoid valve (Purpose: HC reduction)
Exhaust emission control system	Air-fuel ratio control device - MPI system	Oxygen sensor feedback type (Purpose: CO, HC, NOx reduction)
	Exhaust gas recirculation system <ul style="list-style-type: none">• EGR valve	Equipped Steeper motor type (Purpose: NOx reduction)
	Catalytic converter	Monolith type (Purpose: CO, HC, NOx reduction)

**EMISSION CONTROL DEVICE
REFERENCE TABLE**

M1173006600191

Related parts	Crankcase emission control system	Evaporative emission control system	Air/fuel ratio control system	Catalytic converter	Exhaust gas recirculation system
PCV valve	×				
Purge control solenoid valve		×			
MPI system component		×	×		
Catalytic converter				×	
EGR valve (Steeper motor)					×



SERVICE SPECIFICATIONS

M1173000300459

Items	Standard value
Purge control solenoid valve coil resistance (at 20° C) Ω	30 –34
EGR valve coil resistance (at 20° C) Ω	20 –24

SPECIAL TOOLS

M1173000600416

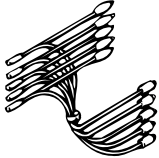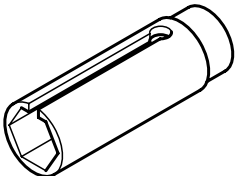
Tool	Number	Name	Use
 MB991658	MD991658	Test harness	EGR valve (Steeper moter) check
	MD998770	Oxygen sensor wrench	Removal and installation of oxygen sensor

VACUUM HOSE


VACUUM HOSE PIPING DIAGRAM

M1173000900774

<Except for Hong Kong, Singapore, Australia and New Zealand>

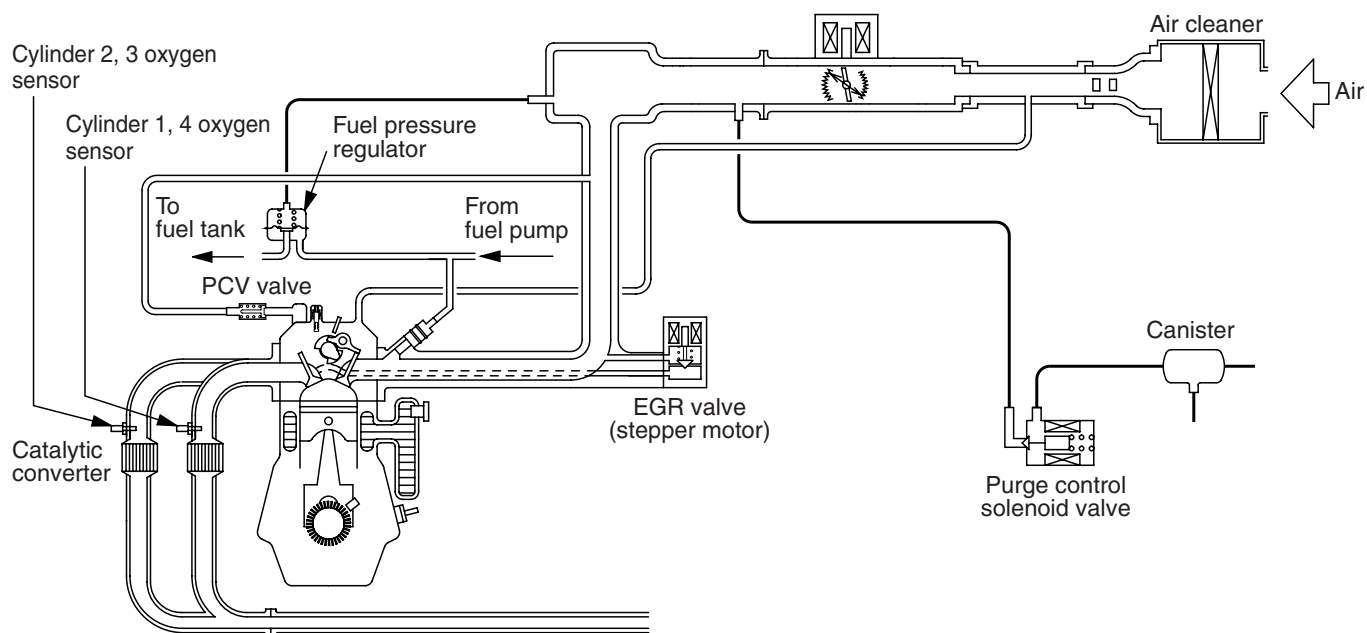


<Vehicles for Hong kong and Singapore>

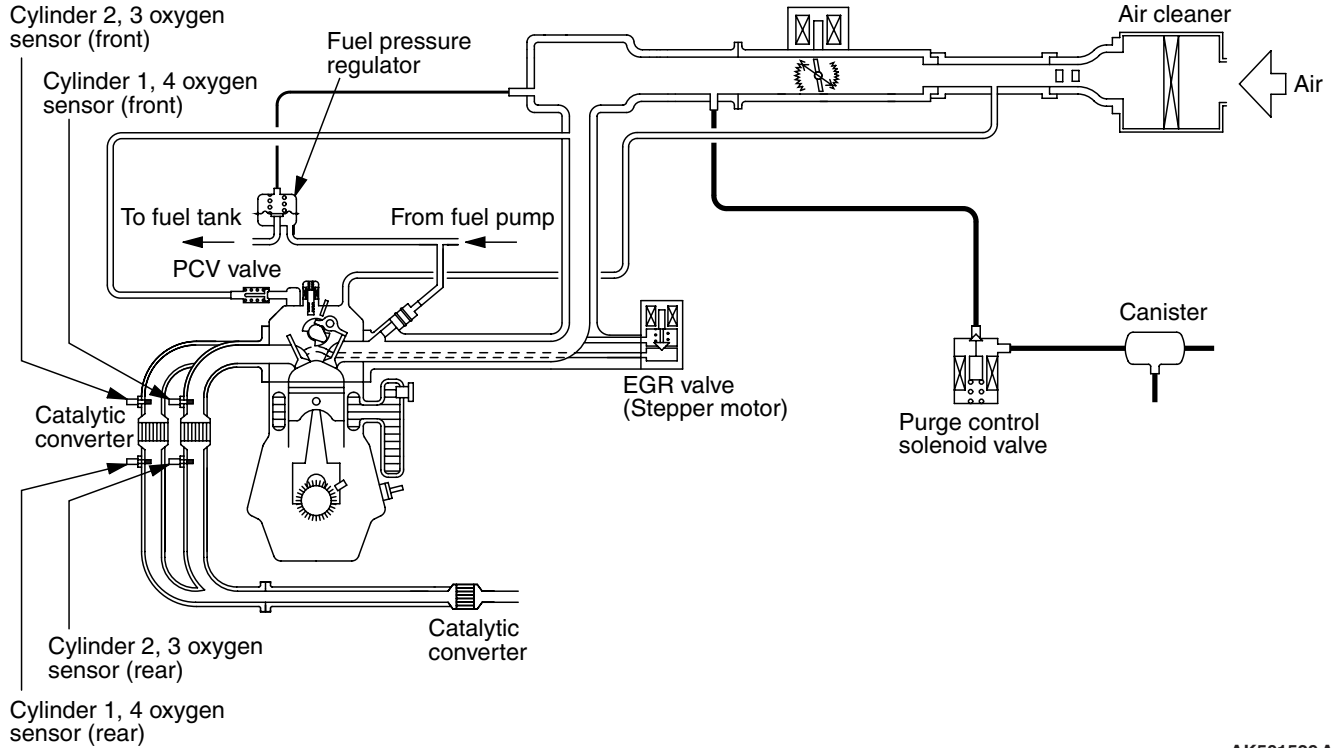

AK501529AB


<Vehicles for Australia and New Zealand>

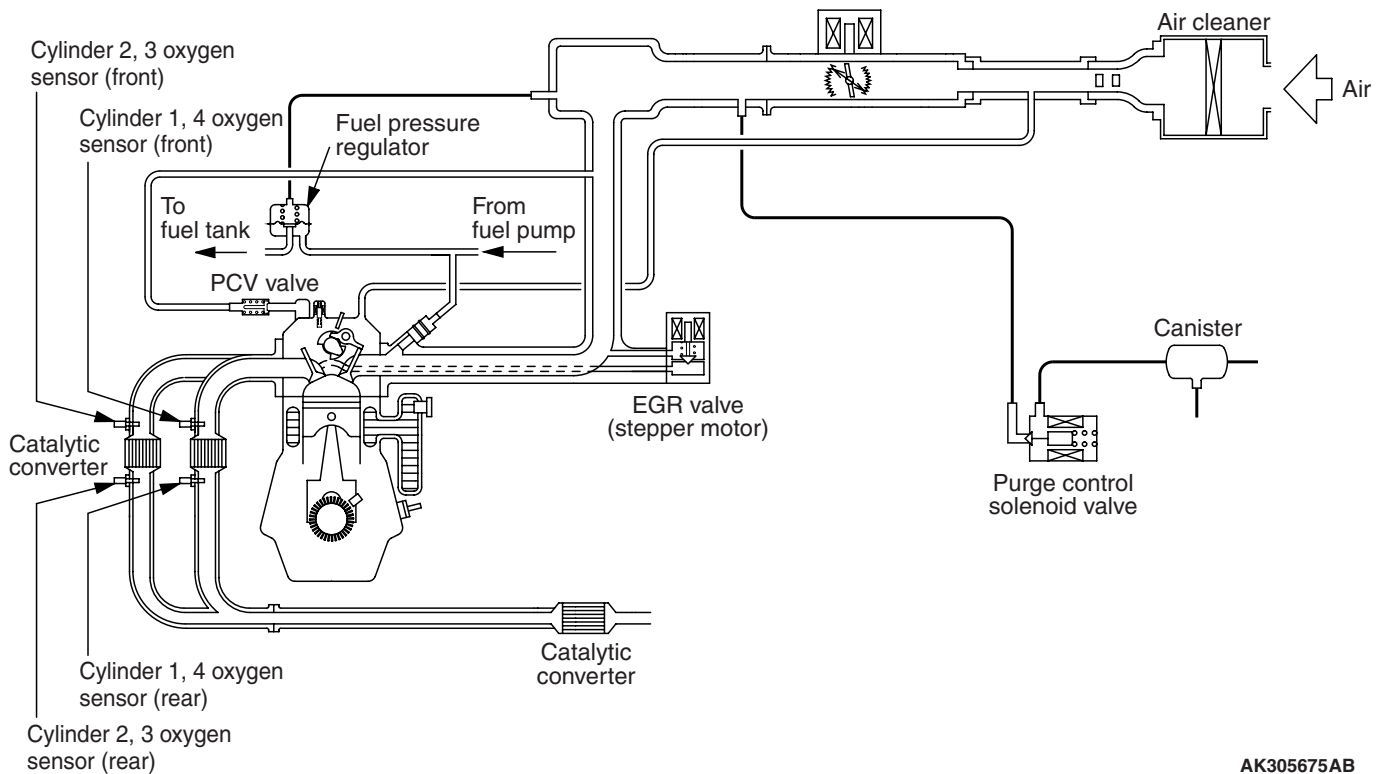

AK305675AB

VACUUM CIRCUIT DIAGRAM

M1173007100382

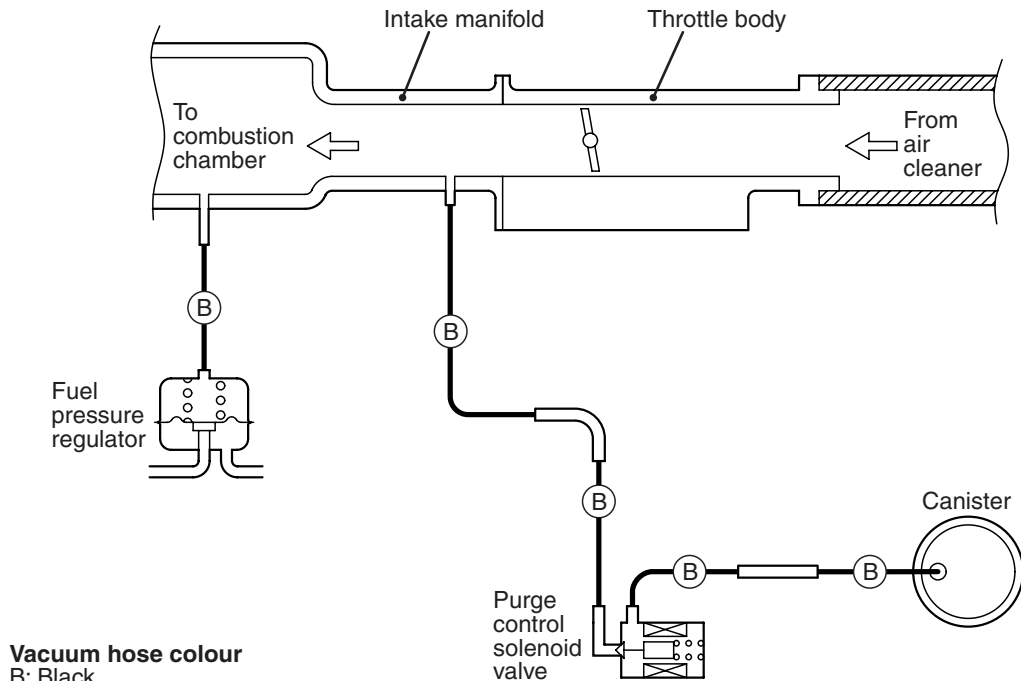

AK305676 AB

VACUUM HOSE CHECK

M1173007300160

1. Using the piping diagram as a guide, check to be sure that the vacuum hoses are correctly connected.
2. Check the connection condition of the vacuum hoses, (removed, loose, etc.) and check to be sure that there are no bends or damage.

VACUUM HOSE INSTALLATION

M1173007200118

1. When connecting the vacuum hoses, they should be securely inserted onto the nipples.
2. Connect the hoses correctly, using the vacuum hose piping diagram as a guide.

CRANKCASE EMISSION CONTROL SYSTEM

GENERAL INFORMATION (CRANKCASE EMISSION CONTROL SYSTEM)

M1173005000475

The crankcase emission control system prevents blow-by gases from escaping inside the crankcase into the atmosphere.

Fresh air is sent from the air cleaner into the crankcase through the breather hose.


The air becomes mixed with the blow-by gases inside the crankcase.

The blow-by gas inside the crankcase is drawn into the intake manifold through the positive crankcase ventilation (PCV) valve.

The PCV valve lifts the plunger according to the intake manifold vacuum so as to regulate the flow of blow-by gas properly.

In other words, the blow-by gas flow is regulated during low load engine operation to maintain engine stability, while the flow is increased during high load operation to improve the ventilation performance.


SYSTEM DIAGRAM

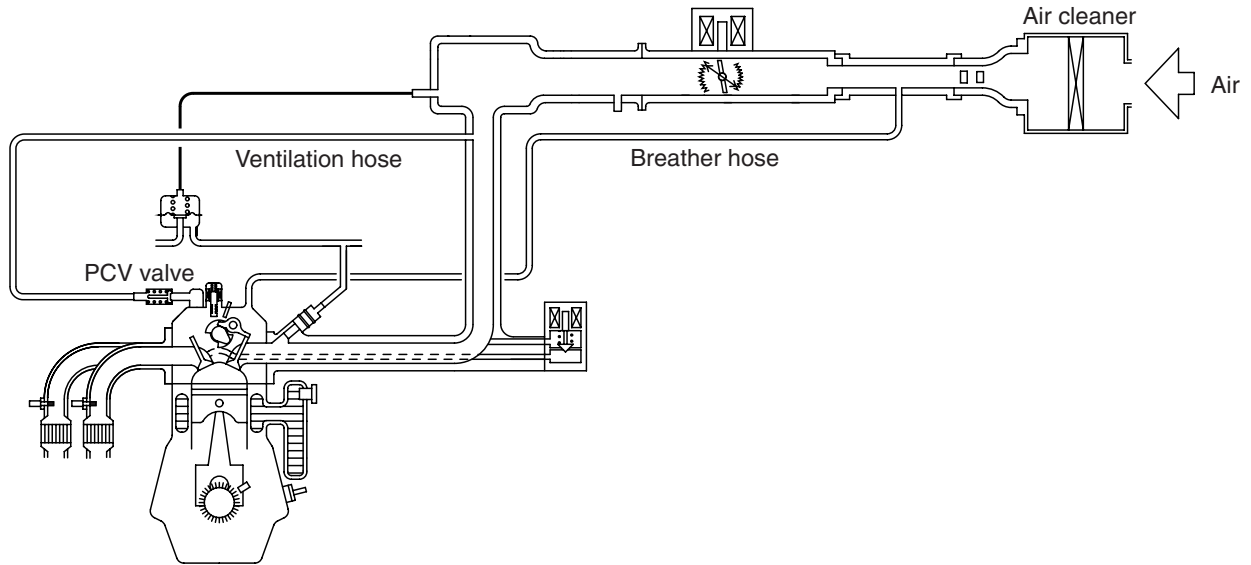

AK305788 AB

COMPONENT LOCATION (CRANKCASE EMISSION CONTROL SYSTEM)

M1173007400305

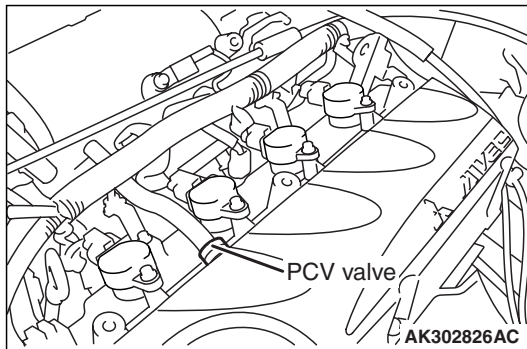


AK302826 AC

POSITIVE CRANKCASE VENTILATION SYSTEM CHECK

M1173001100221

1. Remove the ventilation hose from the PCV valve.
2. Remove the PCV valve from the rocker cover.
3. Reinstall the PCV valve at the ventilation hose.

4. Start the engine and run at idle.

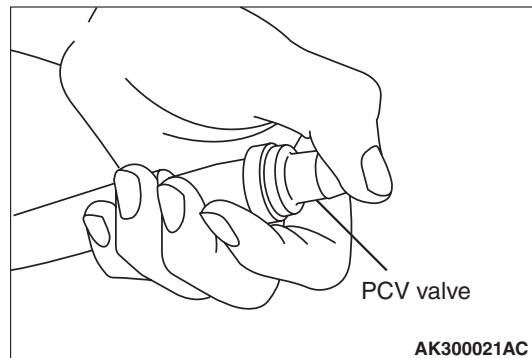

AK300021 AC


5. Place a finger at the opening of the PCV valve and check that vacuum of the intake manifold is felt.

NOTE: At this moment, the plunger in the PCV valve moves back and forth.

6. If vacuum is not felt, clean the PCV valve or replace it.

**POSITIVE CRANKCASE VENTILATION
(PCV) VALVE CHECK**

M1173001200217

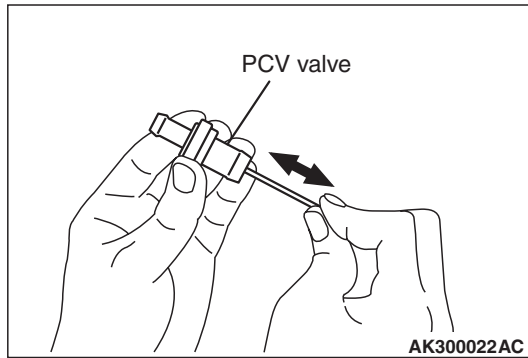

1. Insert a thin rod into the PCV valve from the side shown in the illustration (rocker cover installation side), and move the rod back and forth to check that the plunger moves.
2. If the plunger does not move, there is a clogging in the PCV valve. In this case, clean or replace the PCV valve.

**EVAPORATIVE EMISSION CONTROL
SYSTEM****GENERAL INFORMATION (EVAPORATIVE
EMISSION CONTROL SYSTEM)**

M1173005100524


The evaporative emission control system prevents fuel vapours generated in the fuel tank from escaping into the atmosphere.

Fuel vapours from the fuel tank flow through the fuel tank pressure control valve and vapour pipe/hose to be stored temporarily in the canister.

When driving the vehicle, fuel vapours stored in the canister flow through the purge control solenoid valve and purge port and go into the intake manifold to be sent to the combustion chamber.

When the engine coolant temperature is low or when the intake air quantity is small (when the engine is at idle, for example), the engine control unit turns the purge solenoid off to shut off the fuel vapour flow to the intake manifold.


This does not only insure the driveability when the engine is cold or running under low load but also stabilize the emission level.

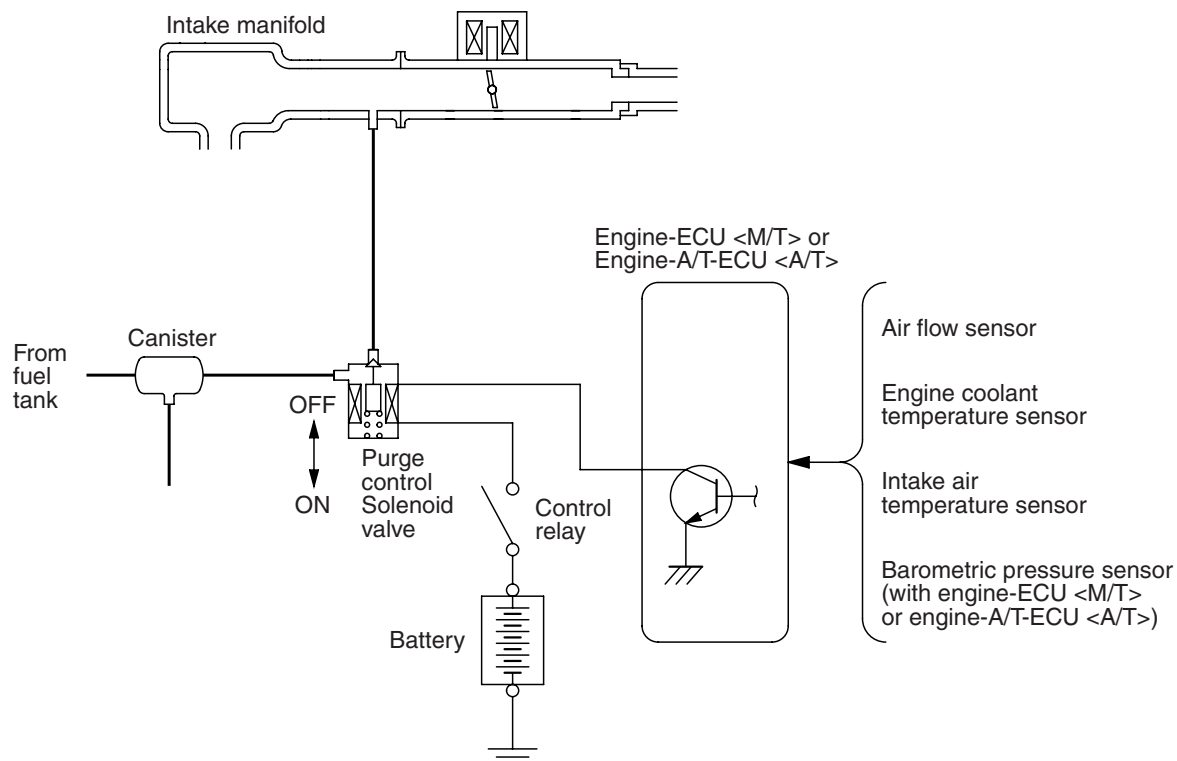SYSTEM DIAGRAM

AK302829AB


COMPONENT LOCATION (EVAPORATIVE EMISSION CONTROL SYSTEM)

M1173007500313

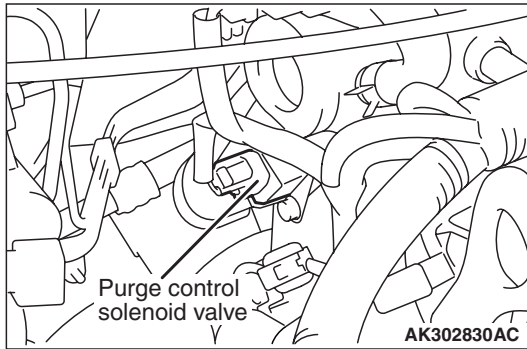

PURGE CONTROL SYSTEM CHECK

M1173001400437

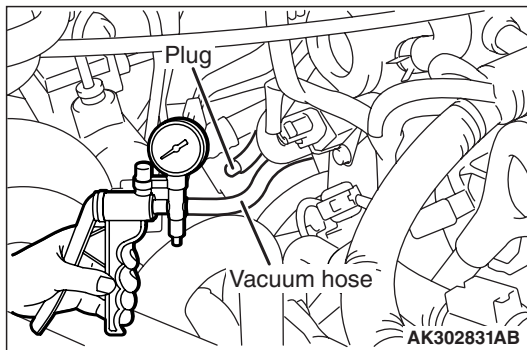

1. Disconnect the vacuum hose (between purge control solenoid valve and intake manifold) from purge control solenoid valve and connect a hand vacuum pump to the nipple.
2. Plug the vacuum hose.
3. When the engine is cold or hot, apply a vacuum of 53 kPa, and check the condition of the vacuum.

WHEN ENGINE IS COLD (ENGINE COOLANT TEMPERATURE: 40° C OR LESS)


Engine condition	Normal condition
At idle	Vacuum is maintained.
3,000 r/min	

WHEN ENGINE IS HOT (ENGINE COOLANT TEMPERATURE: 80° C OR HIGHER)


Engine condition	Normal condition
At idle	Vacuum is maintained.
3,000 r/min (within 3 minutes after engine starts)	Vacuum will leak.

PURGE PORT VACUUM CHECK

M1173001500263

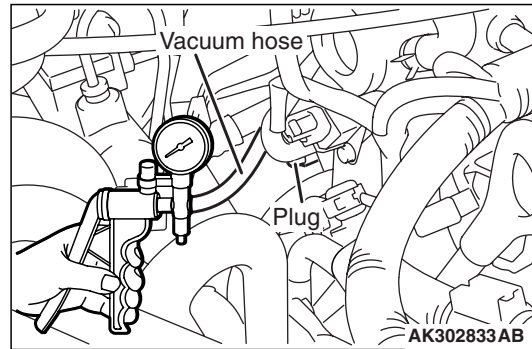

1. Disconnect the vacuum hose (between purge control solenoid valve and intake manifold) from the purge control solenoid valve and connect it to a hand vacuum pump.
2. Plug the nipple from which the vacuum hose was removed.


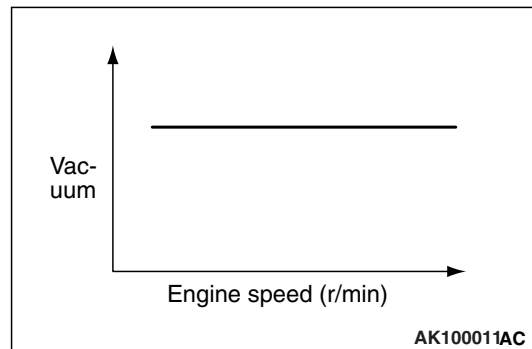


3. Start the engine.
4. Check that a fairly constant negative pressure is generated regardless of the engine speed.
5. If no negative pressure is generated, the port is probably blocked and should be cleaned.

**PURGE CONTROL SOLENOID VALVE
CHECK**

M1173001700234

NOTE: When disconnecting the vacuum hose, always make a mark so that it can be reconnected at original position.

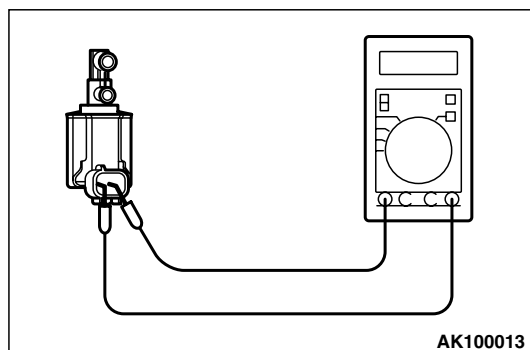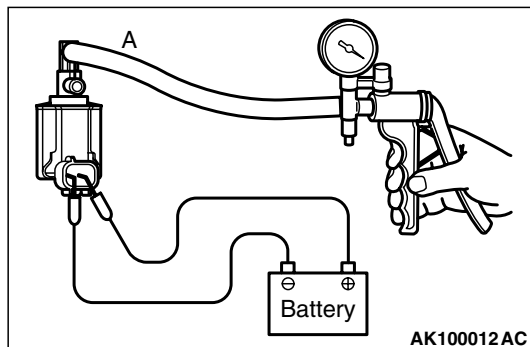

1. Disconnect the vacuum hose from the solenoid valve.

2. Disconnect the harness connector.
3. Connect a hand vacuum pump to nipple (A) of the solenoid valve (refer to the illustration at left).
4. Check airtightness by applying a vacuum with voltage applied directly from the battery to the purge control solenoid valve and without applying voltage.

Battery voltage	Normal condition
Applied	Vacuum leaks
Not applied	Vacuum maintained

5. Measure the resistance between the terminals of the solenoid valve.


Standard value: 30 –34 Ω (at 20° C)

CANISTER REMOVAL AND INSTALLATION

M1173004200216

Pre-removal and Post-installation Operation

Air Cleaner assembly Removal and Installation (Refer to GROUP 15, Air Cleaner P.15-3).

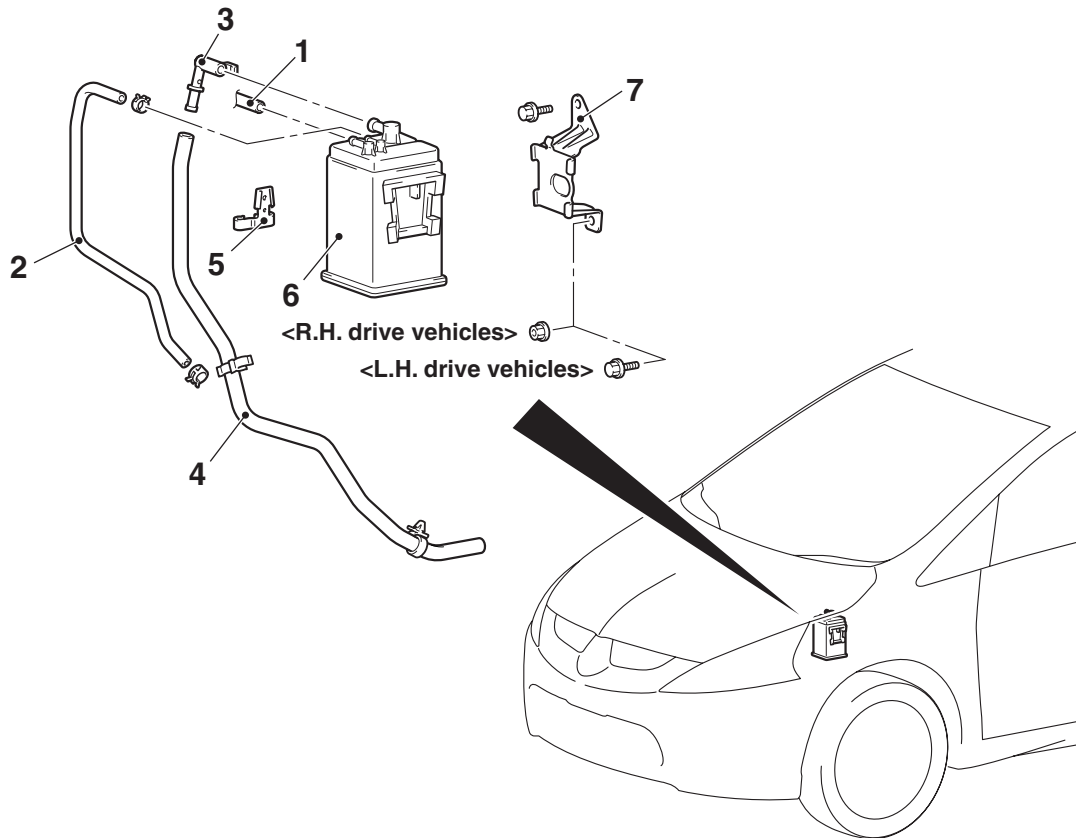

AC310442AB

Removal steps

1. Purge hose connection
2. Vapour hose
3. Vent connector
4. Vapour hose

Removal steps (Continued)

5. Hose clamp
6. Canister
7. Canister bracket

EXHAUST GAS RECIRCULATION (EGR) SYSTEM

GENERAL INFORMATION (EGR SYSTEM)

M1173005200479

The exhaust gas recirculation (EGR) system lowers the nitrogen oxide (NOx) emission level.

When the air/fuel mixture combustion temperature is high, a large quantity of nitrogen oxides (NOx) is generated in the combustion chamber.

Therefore, this system recirculates part of emission gas from the exhaust port of the cylinder head to the combustion chamber through the intake manifold to decrease the air/fuel mixture combustion temperature, resulting in reduction of NOx.

The EGR flow rate is controlled by the EGR valve so as not to decrease the driveability.


OPERATION

The EGR valve is being closed and does not recirculate exhaust gases under one of the following conditions.

Otherwise, the EGR valve is opened and recirculates exhaust gases.


- The engine coolant temperature is low.
- The engine is at idle.
- The throttle valve is widely opened.

SYSTEM DIAGRAM

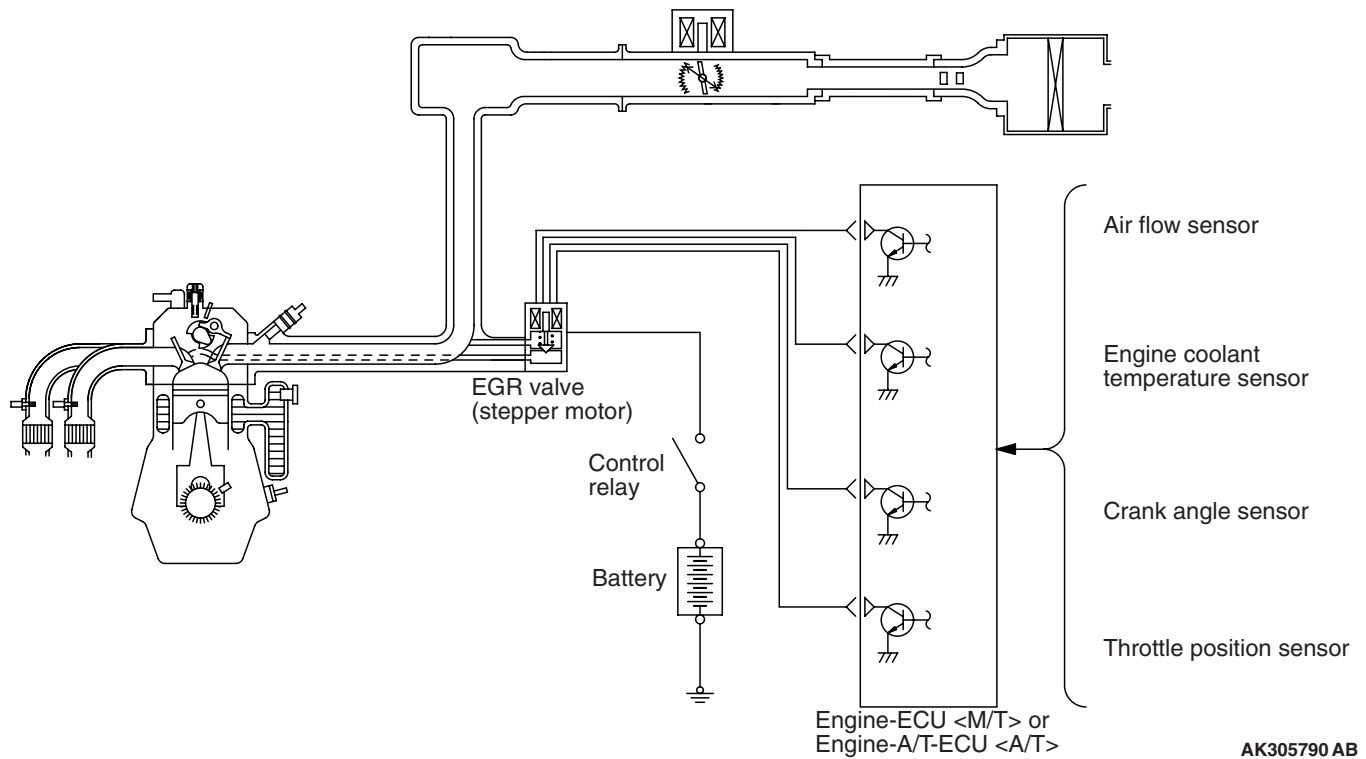

COMPONENT LOCATION (EGR SYSTEM)


M1173007600310

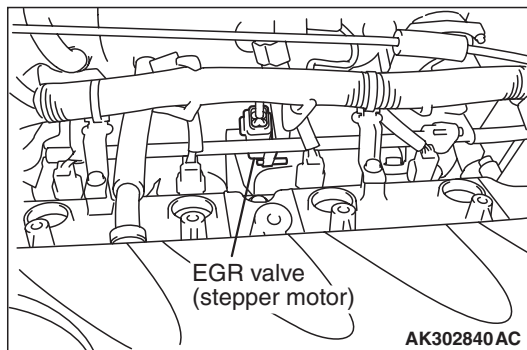

EGR VALVE (STEPPER MOTOR) CHECK

M1173050200145


CHECKING THE OPERATION SOUND

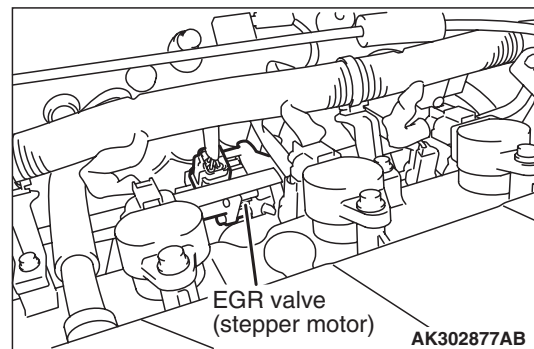

1. Check that the operation sound of the stepper motor can be heard from the EGR valve when the ignition switch is turned ON (without starting the engine).
2. If the operation sound cannot be heard, inspect the drive circuit of the stepper motor.

NOTE: If the circuit is normal, either the stepper motor or the engine-ECU <M/T> or engine-A/T-ECU <A/T> may have failed.

CHECKING THE COIL RESISTANCE

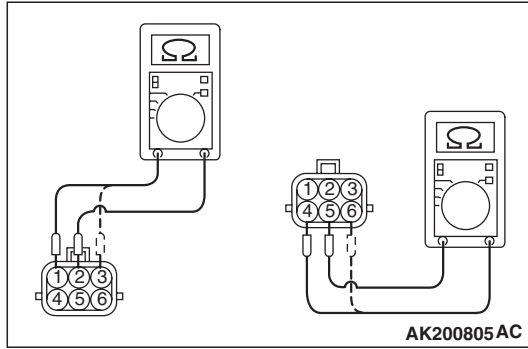

1. Remove the EGR valve.
2. Measure the resistance between terminal No. 2 and either terminal No. 1 or terminal No. 3 of the connector at the EGR valve.

Standard value: 20 –24 Ω (at 20° C)


3. Measure the resistance between terminal No. 5 and either terminal No. 6 or terminal No. 4 of the connector at the EGR valve.

Standard value: 20 –24 Ω (at 20° C)


4. Using a new gasket, install the EGR valve by tightening its mounting bolts to the specified torque.

Tightening Torque: 24 \pm 4 N· m

OPERATION CHECK

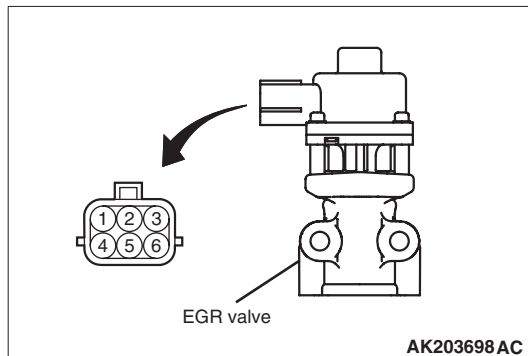

1. Remove the EGR valve.
2. Attach a test wiring harness (special tool MB991658) to the connector at the EGR valve.

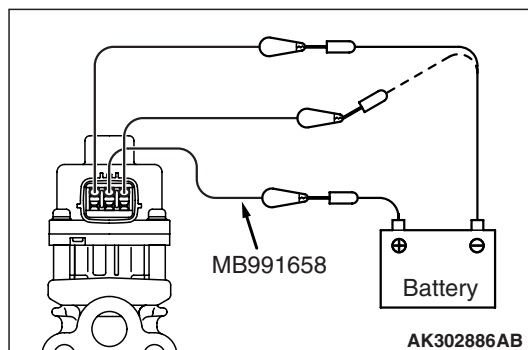


CAUTION

Connecting battery voltage to the EGR valve for a long term could damage the coil.

3. Connect the positive (+) terminal of the battery to terminal No. 2.
4. Connect terminals No. 1 and No. 3 to the negative (-) terminal of the battery, in order to test whether the stepper motor vibrates (with a slight shudder), indicating that the stepper motor is operating.

CAUTION

Connecting battery voltage to the EGR valve for a long term could damage the coil.

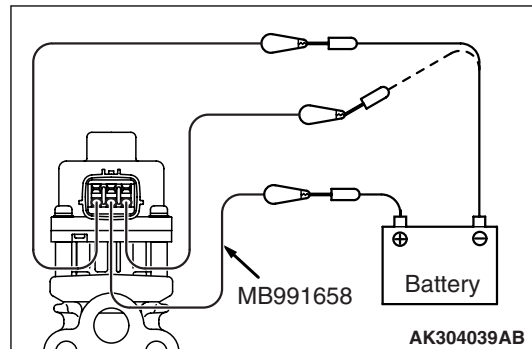

5. Connect the positive (+) terminal of the battery to terminal No. 5.
6. Connect terminals No. 4 and No. 6 to the negative (-) terminal of the battery, in order to test whether the stepper motor vibrates (with a slight shudder), indicating that the stepper motor is operating.
7. If a vibration can be felt during the test, the stepper motor is normal.
8. Using a new gasket, install the EGR valve by tightening its mounting bolts to the specified torque.

Tightening torque: 24 \pm 3 N· m

CLEANING THE EGR VALVE

CAUTION

Do not use a solvent or detergent, which could enter the motor and cause it to malfunction.

1. Remove the EGR valve and check that the EGR valve is not stuck or clogged with carbon deposits. Use a wire brush to clean the valve if necessary.
2. Using a new gasket, install the EGR valve by tightening its mounting bolts to the specified torque.


Tightening torque: 24 \pm 3 N· m

EXHAUST GAS RECIRCULATION (EGR) VALVE REMOVAL AND INSTALLATION

M1173010500528

Pre-removal and Post-installation Operation


- Engine Cover and Engine Cover Bracket Removal and Installation (Refer to GROUP 11A, Camshaft and Valve Stem Seal [P.11A-17](#)).
- Cowl Top Panel Front Removal and Installation (Refer to GROUP 42, Loose Panel [P.42-80](#)).

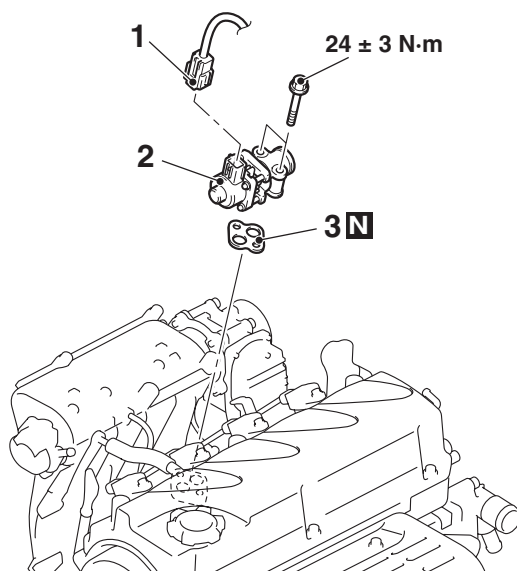

AC502077AB

Removal steps

1. EGR valve connector
 2. EGR valve
- >>A<< 3. EGR valve gasket

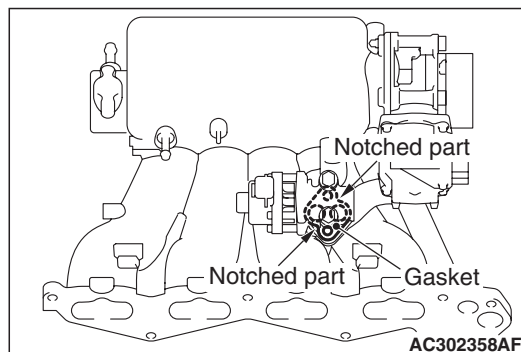
INSTALLATION SERVICE POINT**>>A<< EGR VALVE GASKET INSTALLATION**

Install the EGR valve gasket as shown in the illustration.

CATALYTIC CONVERTER

REMOVAL AND INSTALLATION <Vehicles for Hong Kong, Singapore, Brazil, Australia and New Zealand>

M1173006900017

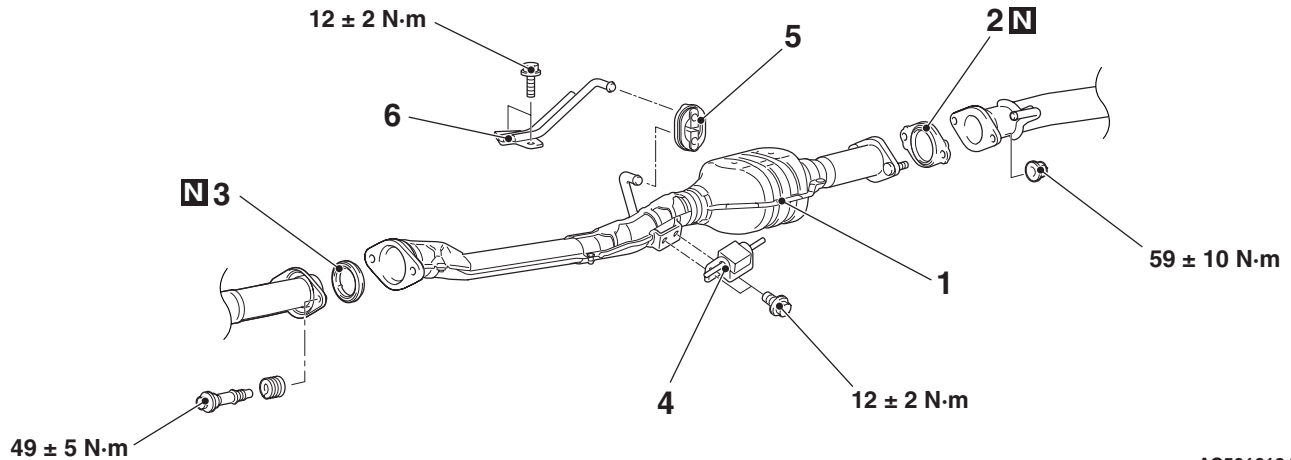

AC501618AB

Removal steps

1. Catalytic converter
2. Exhaust pipe gasket
3. Seal ring

Removal steps (Continued)

4. Exhaust pipe damper
5. Exhaust muffler hanger
6. Exhaust pipe hanger bracket