

## GENERAL INFORMATION

ABS has been adopted as standard or optional equipment in vehicles with MPI engine to maintain directional stability and steering performance during sudden braking.

The ABS control method used is a 4-sensor, 4-channel method which provides independent control for all wheels. The system has the following features.

- EBD (Electronic Brake-force Distribution system) control has been added to provide the ideal braking force for the rear wheels.
- Fail-safe function which ensures that safety is maintained
- Diagnosis function which provides improved serviceability

### EBD CONTROL

In ABS, electronic control method is used whereby the rear wheel brake hydraulic pressure during braking is regulated by rear wheel control solenoid valves in accordance with the vehicle's rate of deceleration and the front and rear wheel slippage which are calculated from the signals received from the various wheel sensors. EBD control is a control system which provides a high level of control for both vehicle braking force and vehicle stability. The system has the following features:

- Because the system provides the optimum rear wheel braking force regardless of the vehicle

laden condition and the condition of the road surface, the system reduces the required pedal depression force, particularly when the vehicle is heavily laden or driving on road surfaces with high frictional coefficients.

- Because the duty placed on the front brakes has been reduced, the increases in pad temperature can be controlled during front brakes applying to improve the wear resistance characteristics of the pad.
- Control valves such as the proportioning valve are no longer required.

## SPECIFICATIONS



Item		Specifications
ABS control method		4-sensor, 4-channel
No. of ABS rotor teeth	Front	43
	Rear	43
ABS speed sensor	Type	Magnet coil type
	Gap between sensor and rotor mm	0.85 <front>/ 0.89 <rear> (non-adjustable type)

## CONSTRUCTION DIAGRAM

MAIN

Group  
35



35B

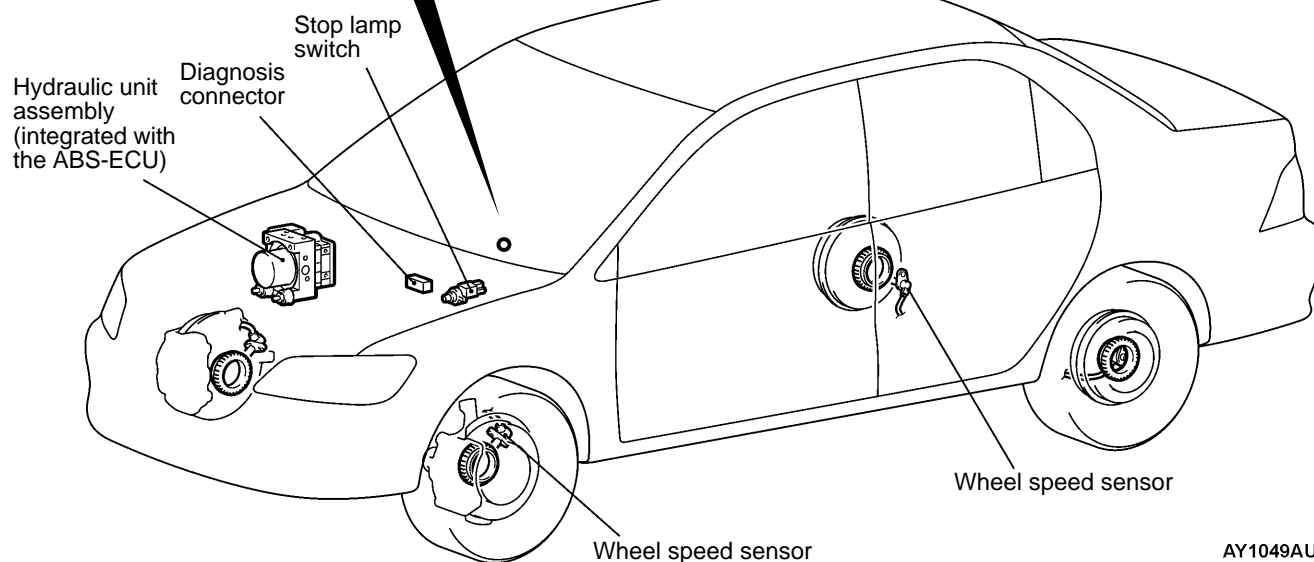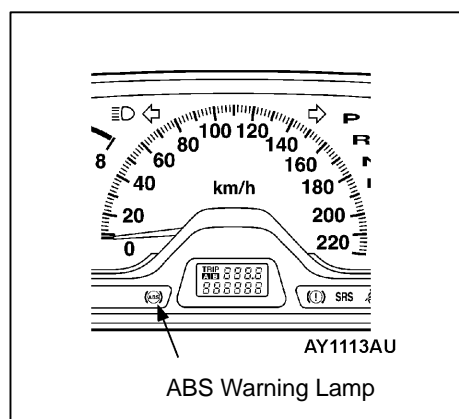

## SERVICE SPECIFICATIONS

Items	Standard value
Wheel speed sensor internal resistance $k\Omega$	1.24 – 1.64
Wheel speed sensor insulation resistance $k\Omega$	100 or more

## SPECIAL TOOLS

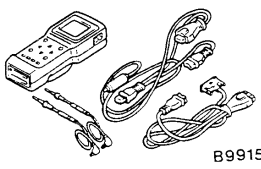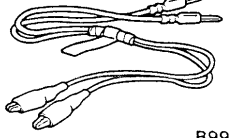Tool	Number	Name	Use
 B991502	MB991502	MUT-II sub assembly	For checking of ABS (Diagnosis code display when using the MUT-II)
 B991529	MB991529	Diagnosis code check harness	For checking of ABS (Diagnosis code display when using the ABS warning lamp)

## TROUBLESHOOTING

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING


Refer to [How to Use Troubleshooting/Inspection Service Points](#).

### NOTES WITH REGARD TO DIAGNOSIS


1. The phenomena listed in the following table are not abnormal.

Phenomenon	Explanation of phenomenon
System check sound	When starting the engine, a thudding sound can sometimes be heard coming from inside the engine compartment, but this is because the system operation check is being performed, and is not an abnormality.
ABS operation sound	<ol style="list-style-type: none"> <li>1. Sound of the motor inside the ABS hydraulic unit operation. (whine)</li> <li>2. Sound is the generated along with vibration of the brake pedal. (scraping)</li> <li>3. When ABS operates, sound is generated from the vehicle chassis due to repeated brake application and release. (Thump: suspension; squeak: tyres)</li> </ol>
System check sound	When depressing the brake pedal during driving, a shock is sometime felt.

2. For road surfaces such as snow-covered roads and gravel roads, the braking distance for vehicles with ABS can sometimes be longer than that for other vehicles. Accordingly, advise the customer to drive safely on such roads by lowering the vehicle speed and not being too overconfident.
3. Diagnosis detection condition can vary depending on the diagnosis code.  
Make sure that checking requirements listed in the “Comment” are satisfied when checking the trouble symptom again.

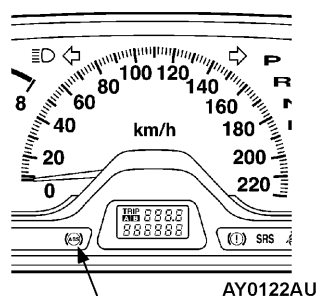

ABS warning lamp

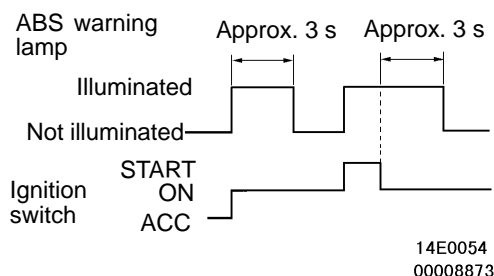

## ABS WARNING LAMP INSPECTION

Check that the ABS warning lamp illuminates as follows.

1. When the ignition key is turned to "ON", the ABS warning lamp illuminates for approximately 3 seconds and then switches off.
2. When the ignition key is turned to "START", the ABS warning lamp remains illuminated.
3. When the ignition key is turned from "START" back to "ON", the ABS warning lamp illuminates for approximately 3 seconds and then switches off.

### NOTE

The ABS warning lamp may remain on until the vehicle reaches a speed of several km/h. This is limited to cases where diagnosis code Nos.21 to 24, 41 to 44, 53 or 55 have been recorded because of a previous problem occurring. In this case, the ABS-ECU keeps the warning lamp illuminated until the problem corresponding to that diagnosis code can be detected.

4. If the illumination is other than the above, check the diagnosis codes.

## DIAGNOSIS FUNCTION

### READING DIAGNOSIS CODES

Read a diagnosis code by the MUT-II or ABS warning lamp. (Refer to [How to Use Troubleshooting/Inspection Service Points.](#))

### NOTE

Connect the MUT-II to the diagnosis connector (16-pin).


### ERASING DIAGNOSIS CODES

#### When using the MUT-II

Connect the MUT-II to the diagnosis connector (16-pin) and erase the diagnosis code.

### Caution

Turn the ignition key to the "LOCK" (OFF) position before connecting or disconnecting the MUT-II.

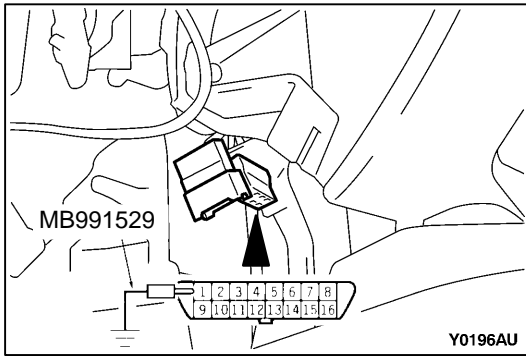


## When not using the MUT-II

### NOTE

If the ABS-ECU function has been stopped because of fail-safe operation, it will not be possible to erase the diagnosis codes.

1. Stop the engine.
2. Use the special tool to earth terminal (1) (diagnosis control terminal) of the diagnosis connector.
3. Turn on the stop lamp switch. (Depress the brake pedal.)
4. After carrying out steps 1. to 3., turn the ignition switch to "ON". Within 3 seconds after turning the ignition switch to "ON", turn off the stop lamp switch (release the brake pedal). Then, turn the stop lamp switch on and off a total of 10 times.

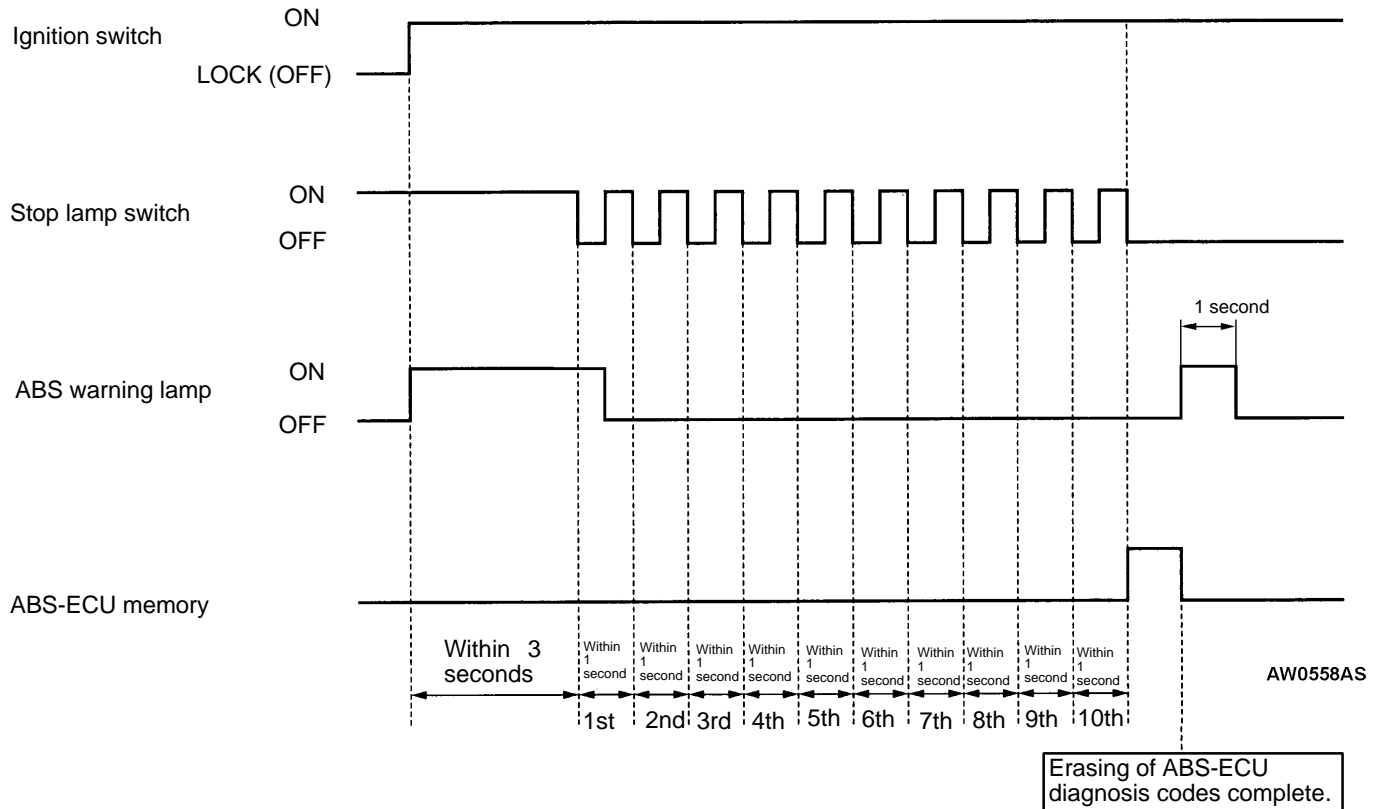

## INSPECTION CHART FOR DIAGNOSIS CODES


Diagnosis code No.	Inspection item		Reference page
11	Front right wheel speed sensor (Open circuit or short circuit)		35B-7
12	Front left wheel speed sensor (Open circuit or short circuit)		35B-7
13	Rear right wheel speed sensor (Open circuit or short circuit)		35B-7
14	Rear left wheel speed sensor (Open circuit or short circuit)		35B-7
16*	ABS-ECU power supply system (Abnormal voltage drop or rise)		35B-8
21	Front right wheel speed sensor		35B-7
22	Front left wheel speed sensor		35B-7
23	Rear right wheel speed sensor		35B-7
24	Rear left wheel speed sensor		35B-7
33	Stop lamp switch system		35B-8
41	Front right solenoid valve	The diagnosis codes are output when there is no response to the drive signals for respective solenoid valves or the ABS-ECU power supply system is defective.	35B-9
42	Front left solenoid valve		
43	Rear right solenoid valve		
44	Rear left solenoid valve		
51	Valve relay problem (stays on)		35B-23, 24 (Replace the hydraulic unit and ABS-ECU.)
52	Valve relay problem (stays off) or ABS-ECU power supply system problem		35B-9
53	Motor relay problem (stays off) or ABS-ECU power supply system problem		
54	Motor relay problem (stays on)		35B-23, 24 (Replace the hydraulic unit and ABS-ECU.)
55	Motor system (seized pump motor) or ABS-ECU power supply system problem		35B-9
63	ABS-ECU		35B-23, 24 (Replace the hydraulic unit and ABS-ECU.)

NOTE: diagnosis code No.16, 52, 63

- Code No. 16 is cleared from the memory by turning the ignition switch to ACC position. When the system is properly reset, this code is also cleared from the memory.
- Code No. 52 and 63 are cleared from the memory by turning the ignition switch to ACC position.

## INSPECTION PROCEDURE FOR DIAGNOSIS CODES

<b>Code Nos.11, 12, 13 and 14 Wheel speed sensor (open circuit or short circuit)</b>	<b>Probable cause</b>
<b>Code Nos.21, 22, 23 and 24 Wheel speed sensor</b>	
Code Nos. 11, 12, 13 and 14 are output if the ABS-ECU detects an open circuit or short-circuit in the (+) wire or (–) wire in any one of the four wheel speed sensors.	<ul style="list-style-type: none"> <li>• Malfunction of wheel speed sensor</li> <li>• Malfunction of wiring harness or connector</li> <li>• Malfunction of hydraulic unit and ABS-ECU</li> </ul>
Code Nos. 21, 22, 23 and 24 are output in the following cases. <ul style="list-style-type: none"> <li>• When there is no input from any one of the four wheel speed sensors when travelling at several km/h or more, even though open circuit can not be verified.</li> <li>• When a chipped or blocked-up ABS rotor is detected and if the anti-lock system operates continuously because a malfunctioning sensor or a warped ABS rotor is causing sensor output to drop.</li> </ul>	<ul style="list-style-type: none"> <li>• Malfunction of wheel speed sensor</li> <li>• Malfunction of wiring harness or connector</li> <li>• Malfunction of ABS rotor</li> <li>• Too much gap between the sensor and the ABS rotor</li> <li>• Malfunction of hydraulic unit and ABS-ECU</li> <li>• Malfunction of wheel bearing</li> </ul>

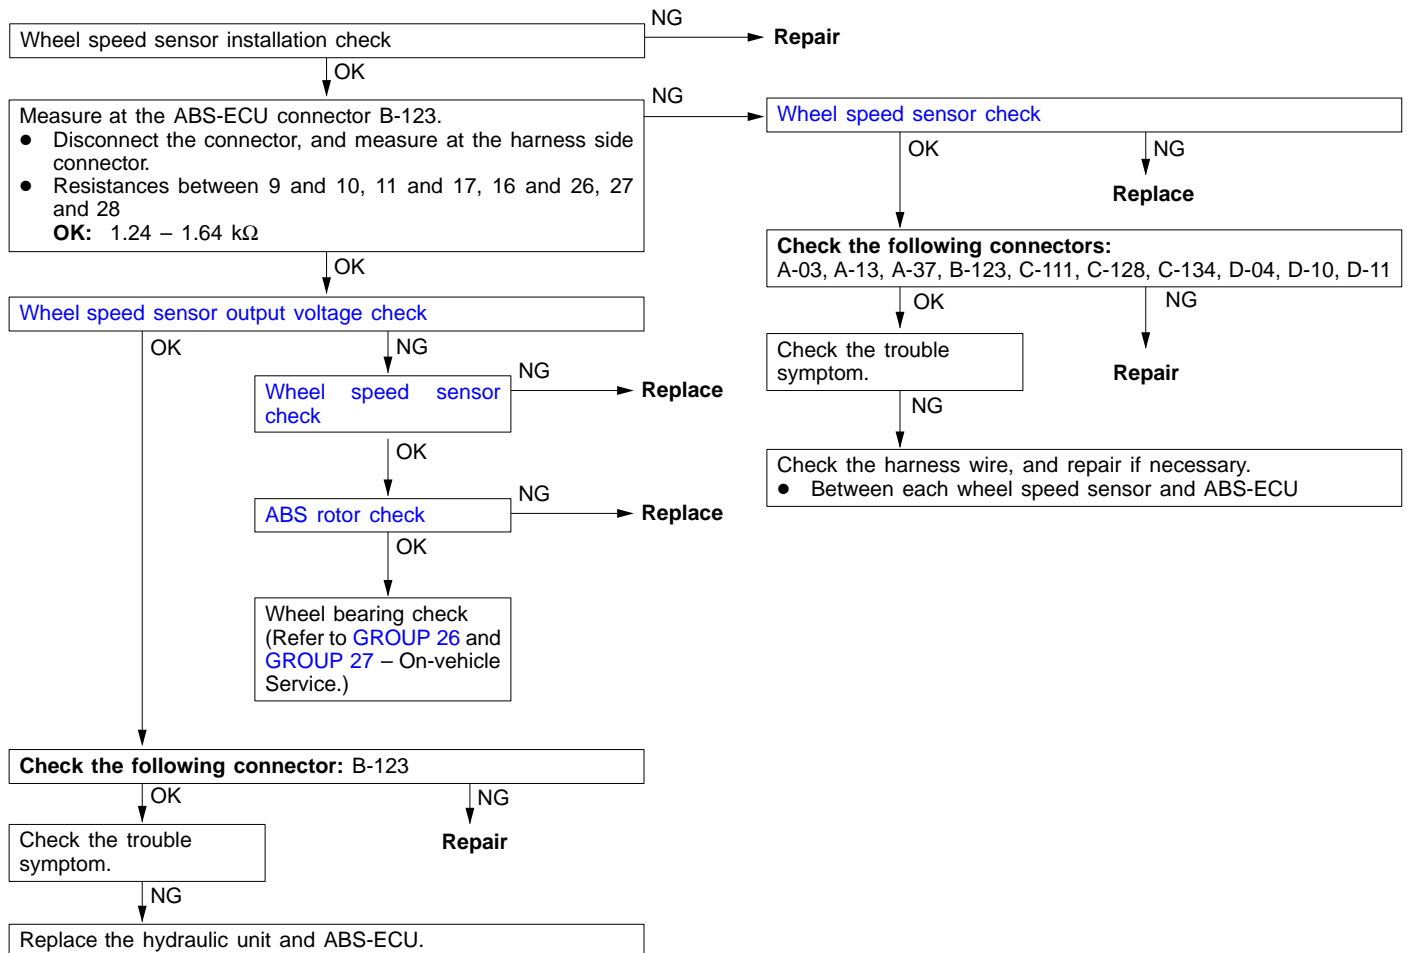

## Code No.16 ABS-ECU power supply system (abnormal voltage drop or rise)

## Probable cause


This code is output if the ABS-ECU power supply voltage drops below or rises above the rated values.  
Furthermore, turning the ignition switch to ACC will erase this code.

- Malfunction of battery
- Malfunction of wiring harness or connector
- Malfunction of hydraulic unit and ABS-ECU

### Caution

If battery voltage drops or rises during inspection, this code will be output as well. If the voltage returns to standard value, this code is no longer output.

Before carrying out the following inspection, check the battery level, and refill it if necessary.

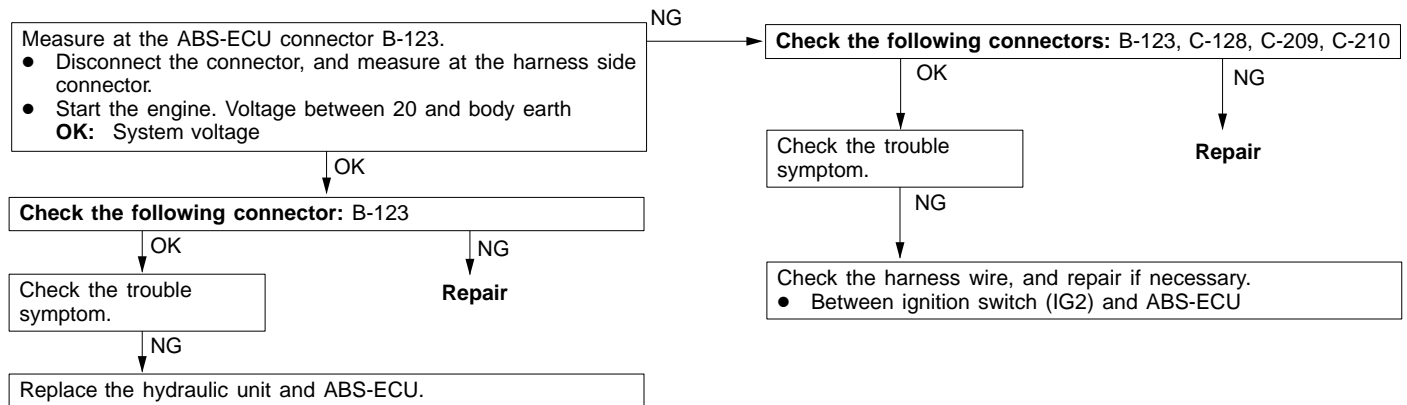


## Code No.33 Stop lamp switch system

## Probable cause

This code is output in the following cases.


- If the stop lamp switch is continuously on for 15 minutes or more even though the ABS system is not operating.
- If there is an open circuit in the stop lamp switch input circuit harness.

- Malfunction of stop lamp switch
- Malfunction of wiring harness or connector
- Malfunction of hydraulic unit and ABS-ECU

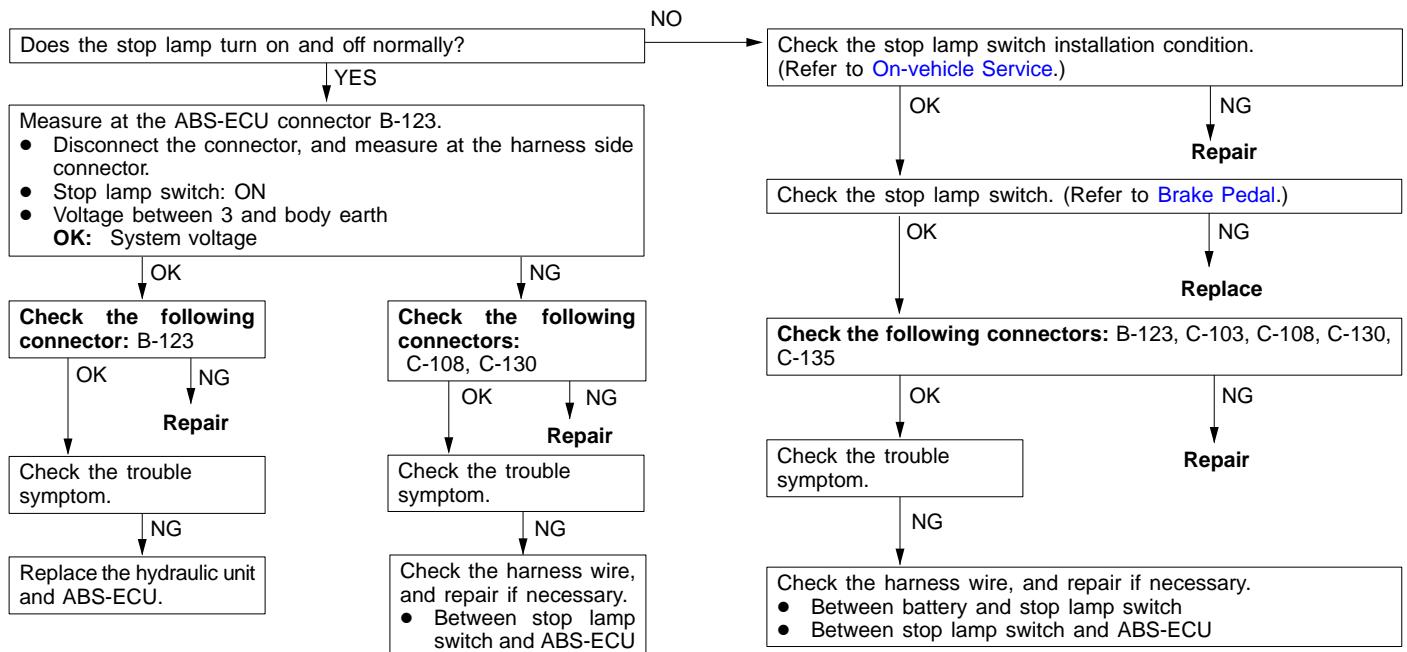



<b>Code Nos.41, 42, 43 and 44 Solenoid valve</b>	<b>Probable cause</b>
<b>Code No.52 Valve relay problem (stays off)</b>	
<b>Code No.53 Motor relay problem (stays off)</b>	
<b>Code No.55 Motor system (seized pump motor)</b>	
These codes are output if there is an open circuit or short-circuit in the ABS-ECU power supply circuit (power supply circuit for solenoid valve and motor), or the internal circuit in the hydraulic unit and ABS-ECU is defective.	<ul style="list-style-type: none"> <li>• Malfunction of wiring harness or connector</li> <li>• Malfunction of hydraulic unit and ABS-ECU</li> </ul>

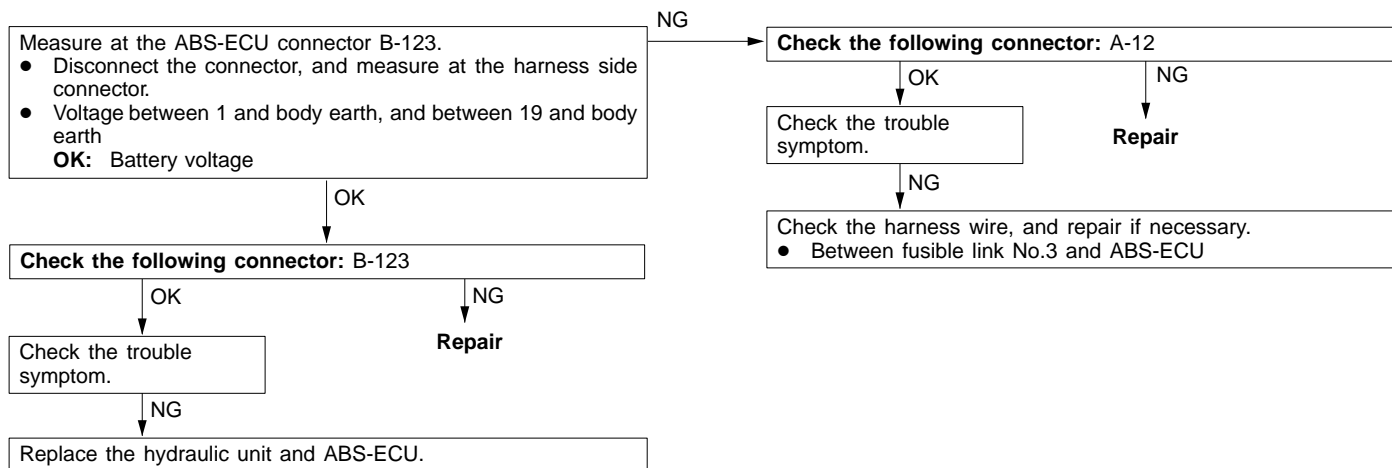

## INSPECTION CHART FOR TROUBLE SYMPTOMS

Trouble symptoms	Inspection procedure No.
Communication between the MUT-II and the whole system is not possible.	1
Communication between the MUT-II and the ABS-ECU is not possible.	2
When the ignition key is turned to "ON" (engine stopped), the ABS warning lamp does not illuminate.	3
Even after the engine is started, the ABS warning lamp remains illuminated.	4
Faulty ABS operation	5


### Caution

1. If steering movements are made when driving at high speed, or when driving on road surfaces with low frictional resistance, or when passing over bumps, the ABS may operate even though sudden braking is not being applied. Because of this, when getting information from the customer, check if the problem occurred while driving under such conditions as these.
2. During ABS operation, the brake pedal may vibrate or may not be able to be depressed. Such phenomena are due to intermittent changes in hydraulic pressure inside the brake line to prevent the wheels from locking and is not an abnormality.

# INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS


## Inspection Procedure 1

Communication between the MUT-II and the whole system is not possible.	Probable cause
The cause may be a malfunction of the power supply circuit or the earth circuit of the diagnosis connector.	<ul style="list-style-type: none"> <li>Malfunction of diagnosis connector</li> <li>Malfunction of wiring harness or connector</li> </ul>

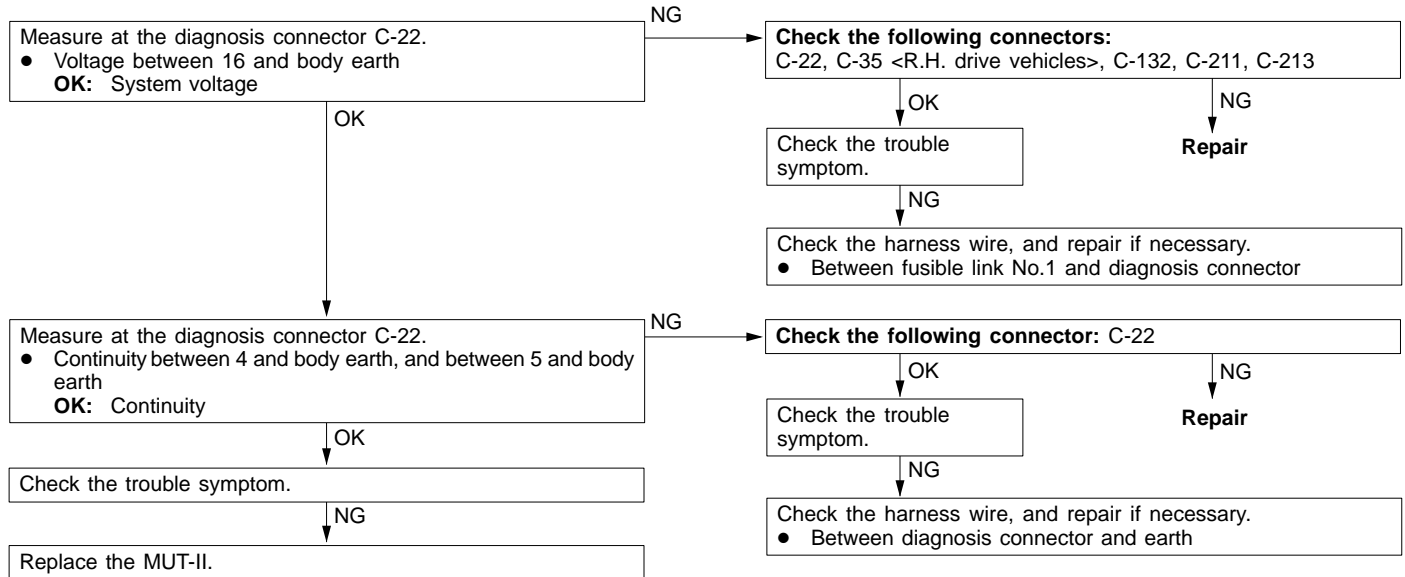


## Inspection Procedure 2

Communication between MUT-II and the ABS-ECU is not possible.	Probable cause
The cause may be an open circuit in the ABS-ECU power supply circuit or an open circuit in the diagnosis output circuit.	<ul style="list-style-type: none"> <li>Blown fuse</li> <li>Malfunction of wiring harness or connector</li> <li>Malfunction of hydraulic unit and ABS-ECU</li> </ul>

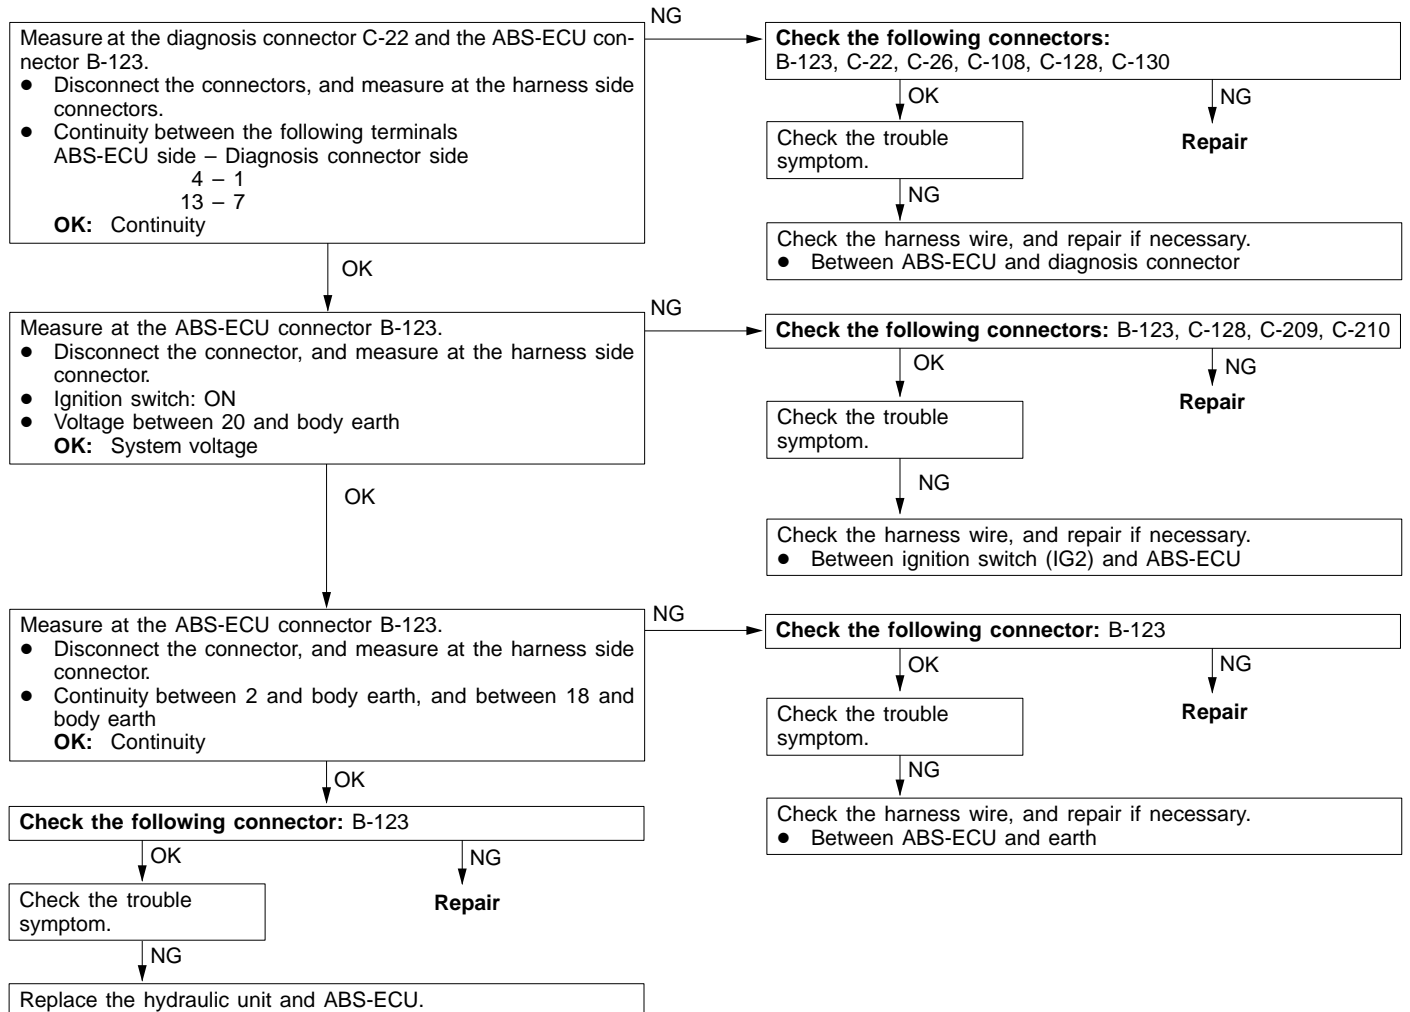

## Inspection Procedure 3

When the ignition key is turned to “ON” (engine stopped), the ABS warning lamp does not illuminate.	Probable cause
The cause may be an open circuit in the lamp power supply circuit, a blown lamp, a malfunction of the ABS warning lamp relay or an open circuit between the ABS warning lamp and the earth.	<ul style="list-style-type: none"> <li>Blown fuse</li> <li>Burn out ABS warning lamp bulb</li> <li>Malfunction of combination meter</li> <li>Malfunction of ABS warning lamp relay &lt;MPI, 1500GDI&gt;</li> <li>Malfunction of wiring harness or connector</li> <li>Malfunction of hydraulic unit and ABS-ECU</li> </ul>

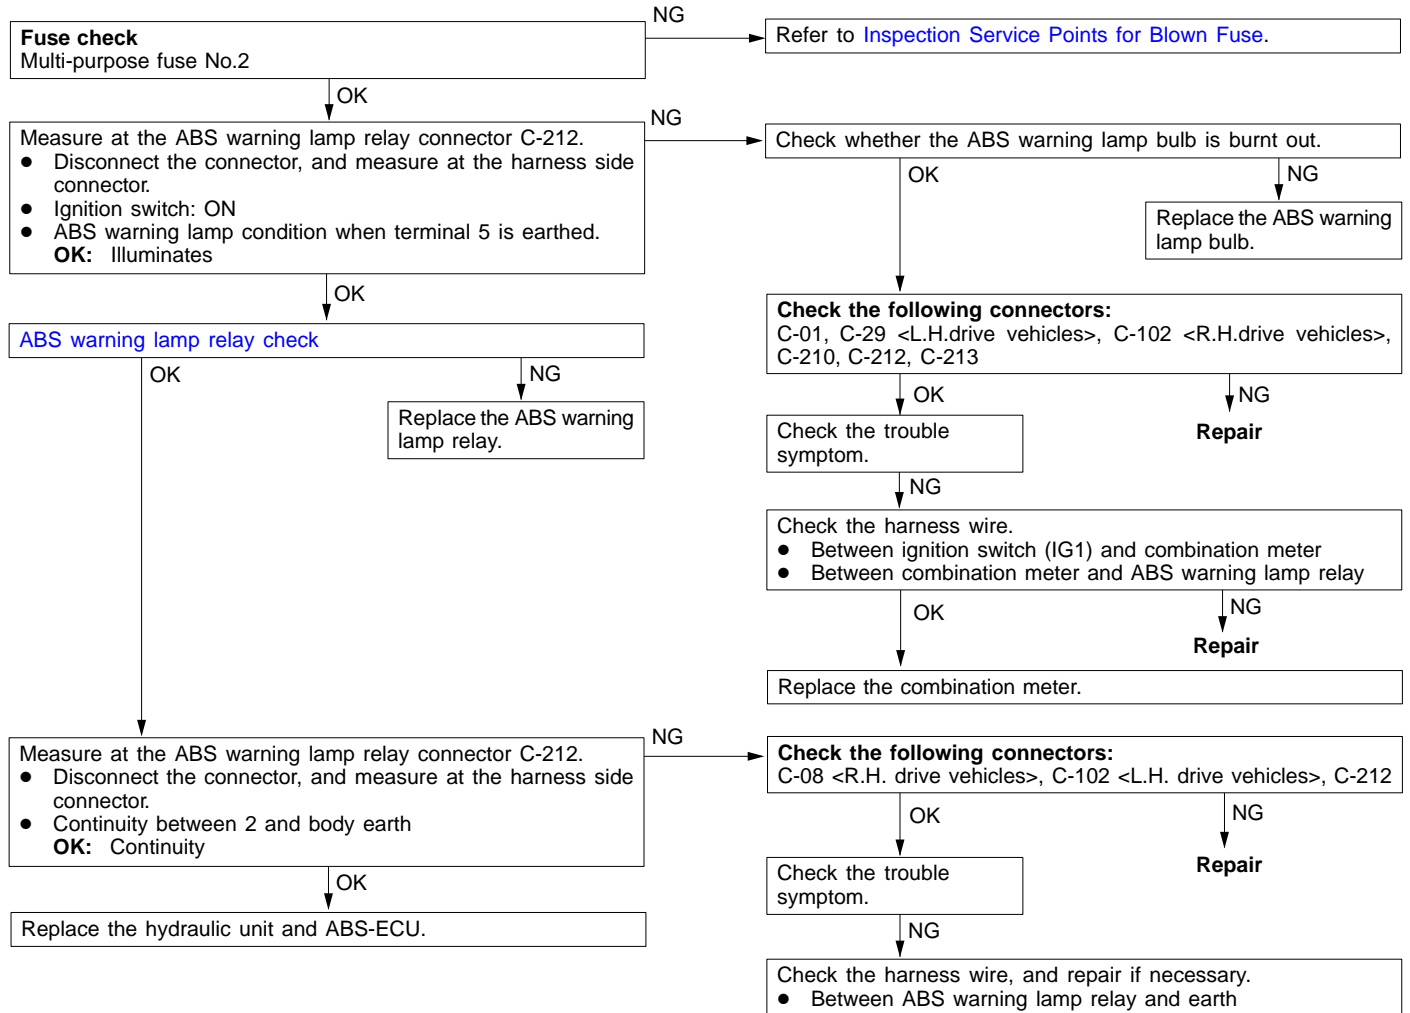


## Inspection Procedure 4

Even after the engine is started, the ABS warning lamp remains illuminated.	Probable cause
The cause is probably a short-circuit in the ABS warning lamp illumination circuit.	<ul style="list-style-type: none"> <li>Malfunction of combination meter</li> <li>Malfunction of ABS warning lamp relay</li> <li>Malfunction of wiring harness (short circuit)</li> <li>Malfunction of hydraulic unit and ABS-ECU</li> </ul>


### NOTE

This trouble symptom is limited to cases where communication with the MUT-II is possible (ABS-ECU power supply is normal) and the diagnosis code is a normal diagnosis code.

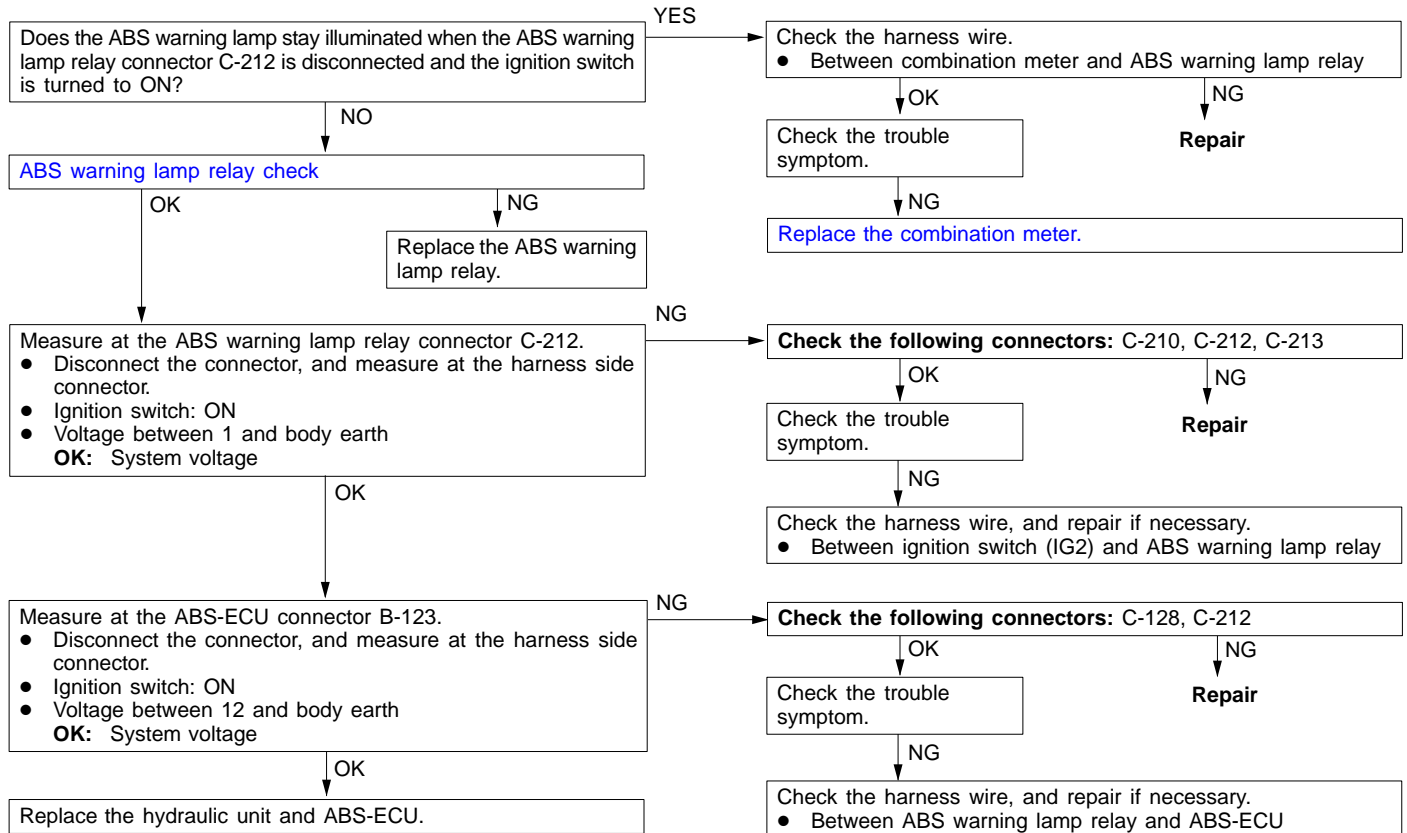

## Inspection Procedure 5

Faulty ABS operation	Probable cause
This varies depending on the driving conditions and the road surface conditions, so problem diagnosis is difficult. However, if a normal diagnosis code is displayed, carry out the following inspection.	<ul style="list-style-type: none"> <li>Improper installation of wheel speed sensor</li> <li>Malfunction of wiring harness or connector</li> <li>Malfunction of wheel speed sensor</li> <li>Malfunction of ABS rotor</li> <li>Foreign material adhering to wheel speed sensor</li> <li>Malfunction of wheel bearing</li> <li>Malfunction of hydraulic unit and ABS-ECU</li> </ul>

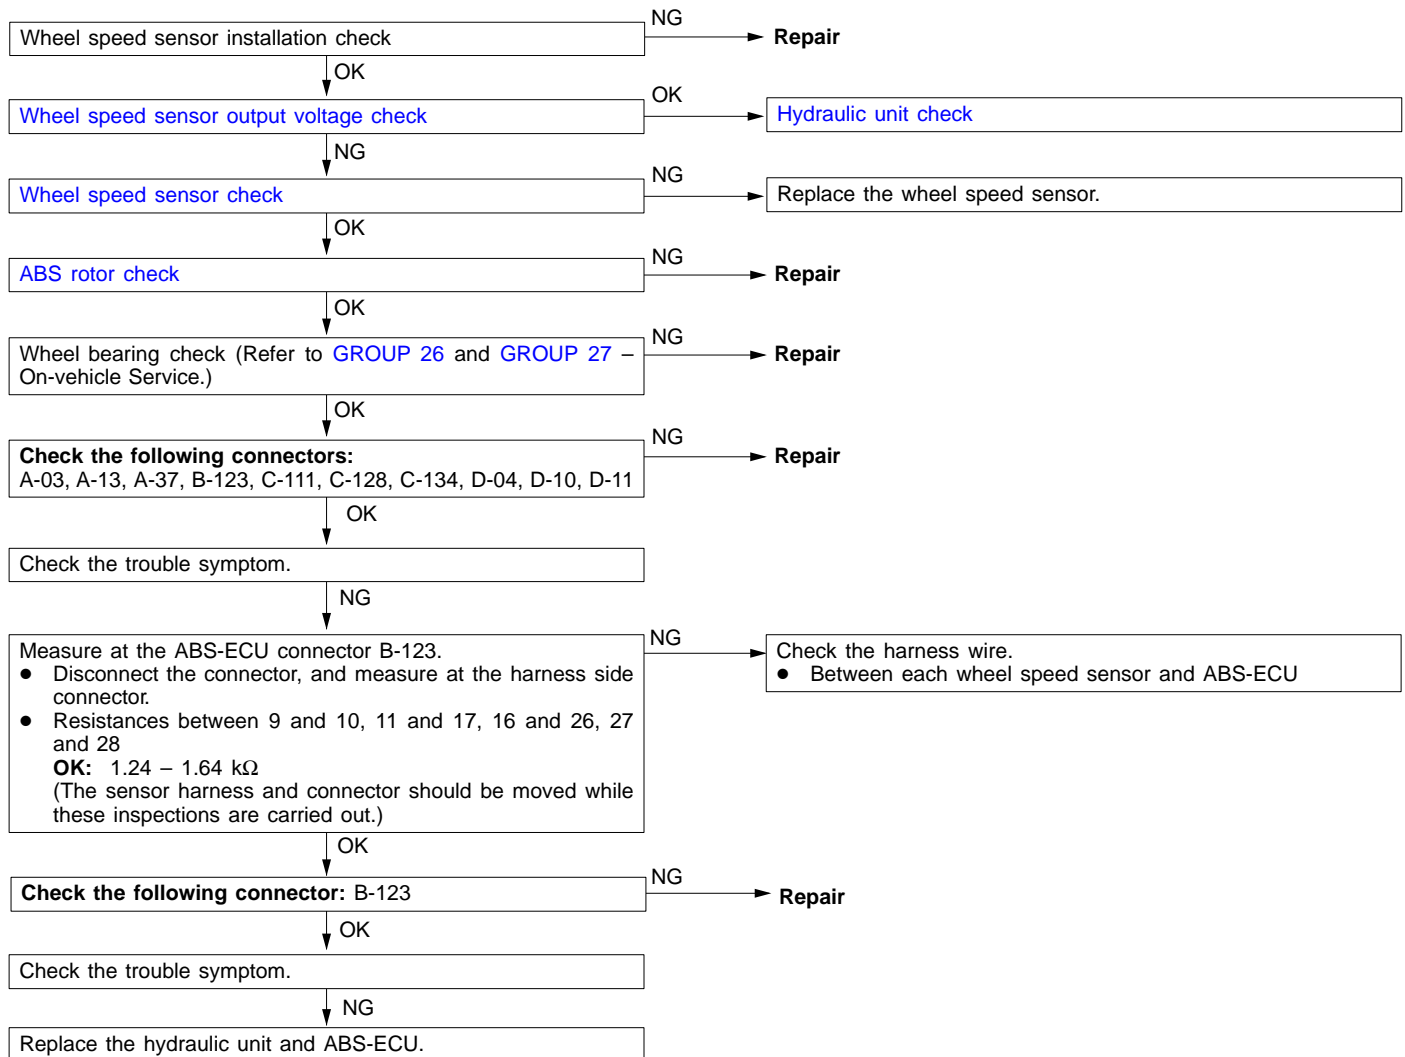

**DATA LIST REFERENCE TABLE**

The following items can be read by the MUT-II from the ABS-ECU input data.

**1. When the system is normal**

Item No.	Check item	Checking requirements	Normal value
11	Front-right wheel speed sensor	Perform a test run	Vehicle speeds displayed on the speedometer and MUT-II are identical.
12	Front-left wheel speed sensor		
13	Rear-right wheel speed sensor		
14	Rear-left wheel speed sensor		
21	Power supply voltage	Ignition switch: ON	10 – 16 V
36	Stop lamp switch	Depress the brake pedal.	ON
		Release the brake pedal.	OFF

**2. When the ABS-ECU shut off ABS operation.**

When the diagnosis system stops the ABS-ECU, the MUT-II display data will be unreliable.

**ACTUATOR TEST REFERENCE TABLE**


The MUT-II activates the following actuators for testing.



**NOTE**

1. If the ABS-ECU runs down, actuator testing cannot be carried out.
2. Actuator testing is only possible when the vehicle is stationary.

**ACTUATOR TEST SPECIFICATIONS**

No.	Item	
01	Solenoid valve for front-right wheel	Solenoid valves and pump motors in the hydraulic unit (simple inspection mode)
02	Solenoid valve for front-left wheel	
03	Solenoid valve for rear-right wheel	
04	Solenoid valve for rear-left wheel	

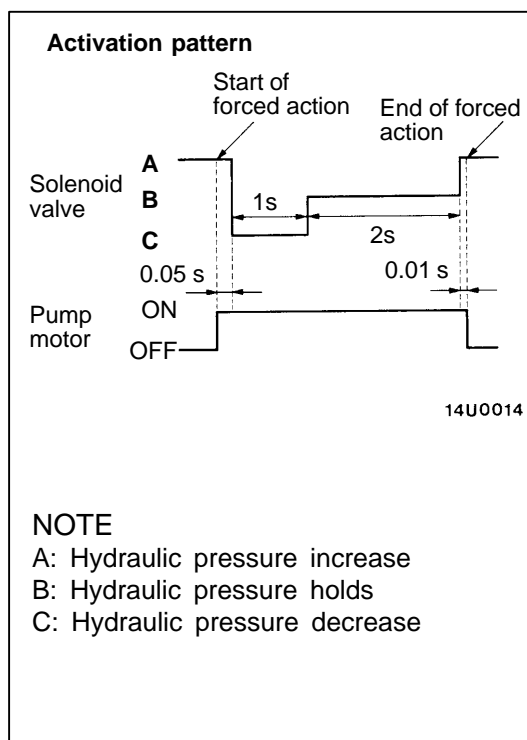

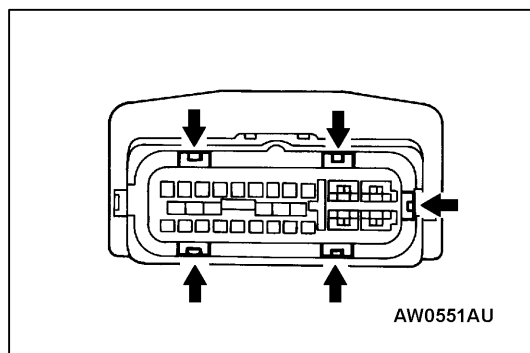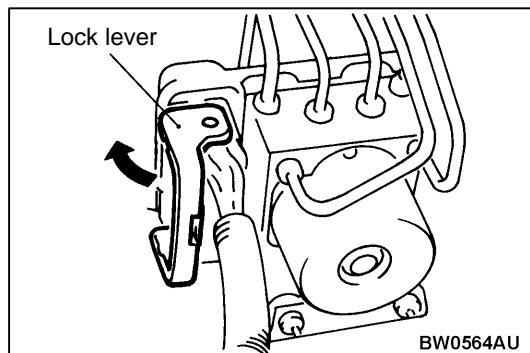


## CHECK AT ABS-ECU

Use the following steps to remove the connector cover and measure the terminal voltage.

1. Move the lock lever of the ABS-ECU connector as shown in the illustration, and then disconnect the ABS-ECU connector.
2. Push the pawls (arrows in the figure) of ABS-ECU connector internally to release the locks, and then remove the connector cover.



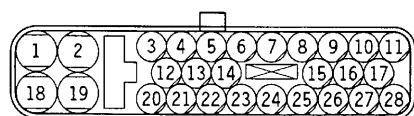


W0568AU

## TERMINAL VOLTAGE CHECK CHART

1. Measure the voltage between each terminal and earth (terminal No.2).
2. The terminal layout is shown in the illustration.


Terminal No.	Check item	Checking requirements		Normal condition
1	Solenoid valve power supply	Always		System voltage
3	Stop lamp switch input	Ignition switch: ON	Stop lamp switch: ON	System voltage
			Stop lamp switch: OFF	1 V or less
4	Diagnosis changeover input	When the MUT-II is connected		0 V
		When the MUT-II is not connected		Approx. 12 V
12	ABS warning lamp transistor output	Ignition switch: ON	When the lamp is switched off	1 V or less
			When the lamp is illuminated	System voltage
13	MUT-II	When the MUT-II is connected		Serial communication with MUT-II
		When the MUT-II is not connected		1 V or less
19	Motor power supply	Always		System voltage
20	ABS-ECU power supply	Ignition switch: ON		System voltage
		Ignition switch: START		0 V
21	ABS ON output to CVT	With ABS active (reference)		(1V or less)
		With ABS not active		System voltage

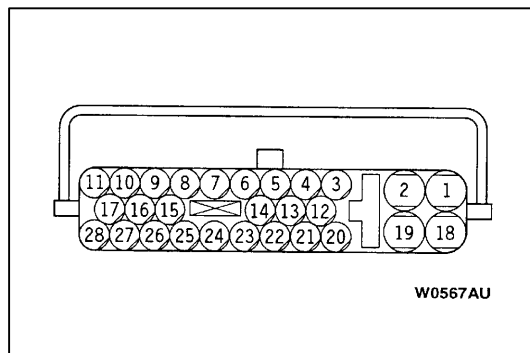

### RESISTANCE AND CONTINUITY BETWEEN HARNESS-SIDE CONNECTOR TERMINALS

1. Turn the ignition key to the “LOCK” (OFF) position.
2. Disconnect the [ABS-ECU connector](#).
3. Check the resistance and continuity between the terminals indicated in the table below.
4. The terminal layout is shown in the illustration.


ABS-ECU terminal No.	Signal	Normal condition
9 – 10	Wheel speed sensor (front right)	1.24 – 1.64 k $\Omega$
11 – 17	Wheel speed sensor (rear right)	
16 – 26	Wheel speed sensor (front left)	
27 – 28	Wheel speed sensor (rear left)	
2 – Body earth	Earth	Continuity
18 – Body earth	Earth	

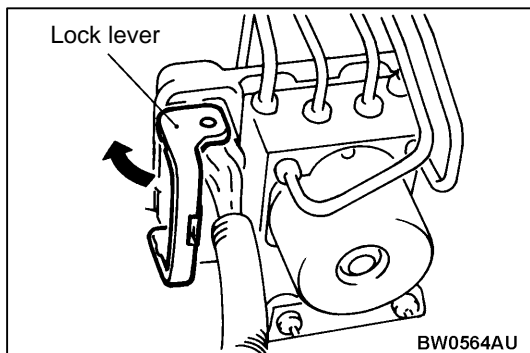


## ON-VEHICLE SERVICE

### WHEEL SPEED SENSOR OUTPUT VOLTAGE CHECK

1. Lift up the vehicle and release the parking brake.
2. Move the lock lever of the ABS-ECU connector as shown in the illustration, and then disconnect the ABS-ECU connector.

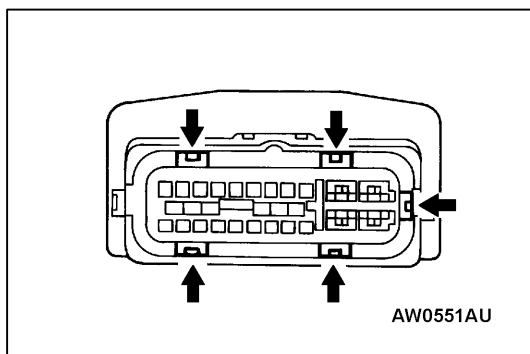

3. Push the pawls (arrows in the figure) of ABS-ECU connector internally to release the locks, and then remove the connector cover.

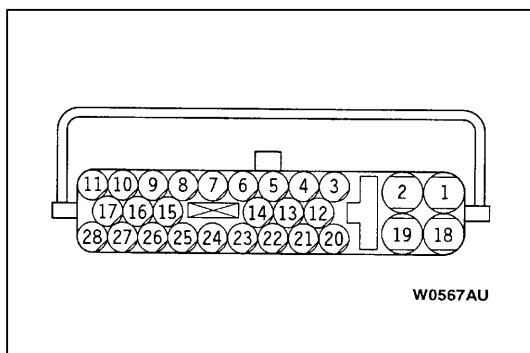

4. Rotate the wheel to be measured at approximately 1/2–1 rotation per second, and check the output voltage using a circuit tester or an oscilloscope.

Wheel speed sensor	Front left	Front right	Rear left	Rear right
Terminal No.	16	9	27	11
	26	10	28	17


#### Output voltage

**When measuring with a circuit tester:**  
**42 mV or more**


**When measuring with an oscilloscope:**  
**120 mV p-p or more**

5. The followings are suspected if the output voltage is lower than the value described above. Check the wheel speed sensor, and replace if necessary.
  - Too large clearance between the pole piece of the wheel speed sensor and ABS rotor
  - Faulty wheel speed sensor

When turning by hand

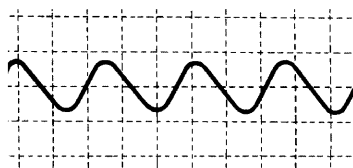

When idling (5–6 km/h),  
1st gear <M/T> or D range <A/T>

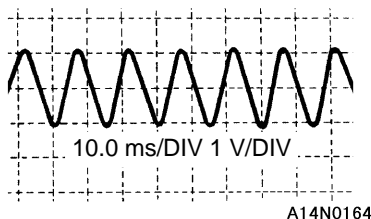

### Inspecting Waveforms With An Oscilloscope

Use the following method to observe the output voltage waveform from each wheel speed sensor with an oscilloscope.

- Start the engine, and rotate the front wheels by engaging 1st gear <M/T> or D range <CVT, A/T>. Turn the rear wheels manually so that they rotate at a constant speed.

#### NOTE

- The waveform measurements can also be taken while the vehicle is actually moving.
- The output voltage will be small when the wheel speed is low, and similarly it will be large when the wheel speed is high.

### Points In Waveform Measurement


Symptom	Probable causes	Remedy
Too small or zero waveform amplitude	Faulty wheel speed sensor	Replace sensor
Waveform amplitude fluctuates excessively (this is no problem if the minimum amplitude is 100 mV or more)	Axle hub eccentric or with large runout	Replace hub
	Faulty ABS-ECU earth	Repair
Noisy or disturbed waveform	Open circuit in sensor	Replace sensor
	Open circuit in harness	Correct harness
	Incorrectly mounted wheel speed sensor	Mount correctly
	ABS rotor with missing or damaged teeth	Replace ABS rotor

### Caution


Because the wheel speed sensor cables move together with the front and rear suspension, they vibrate greatly when driving over poor road surfaces. As a result, the sensor harnesses should also be shaken when monitoring of output waveforms of the wheel speed sensors in order to simulate conditions such as driving over poor road surfaces.

**ABS WARNING LAMP RELAY CONTINUITY CHECK****NOTE**


The ABS warning lamp relay is located at the junction block inside the driver's side instrument panel under cover.

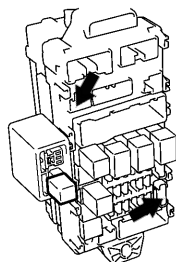

Y1053AU

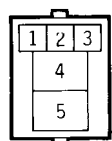

04Z0001

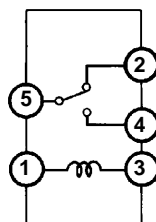

20Z0004

Battery voltage	Terminal No.				
	1	2	3	4	5
Power is not supplied	○	○	○		○
Power is supplied	⊕		⊖	○	○

**HYDRAULIC UNIT CHECK**

- Jack up the vehicle and support the vehicle with rigid racks placed at the specified jack-up points or place the wheels which are checked on the rollers of the braking force tester.

**Caution**

- (1) The roller of the braking force tester and the tyre should be dry during testing.
- (2) When testing the front brakes, apply the parking brake, and when testing the rear brakes, stop the front wheels by chocking them.

- Turn the ignition key to the "LOCK" (OFF) position and set the MUT-II.

**Caution**

Turn the ignition key to the "LOCK" (OFF) position before connecting or disconnecting the MUT-II.


- After checking that the shift lever <M/T> or the selector lever <A/T> is in neutral, start the engine.
- Use the MUT-II to force-drive the actuator.

**NOTE**

- (1) During the actuator test, the ABS warning lamp will illuminate and the anti-skid control will be cancelled.
  - (2) When the ABS has been interrupted by the fail-safe function, the MUT-II actuator testing cannot be carried out.
- Turn the wheel by hand and check the change in braking force when the brake pedal is depressed. When using the braking force tester, depress the brake pedal until the braking force is at the following values, and check that the braking force decreases when the actuator is force-driven.

Front wheel	785 – 981 N
Rear wheel	588 – 784 N

The result should be as shown in the following diagram.

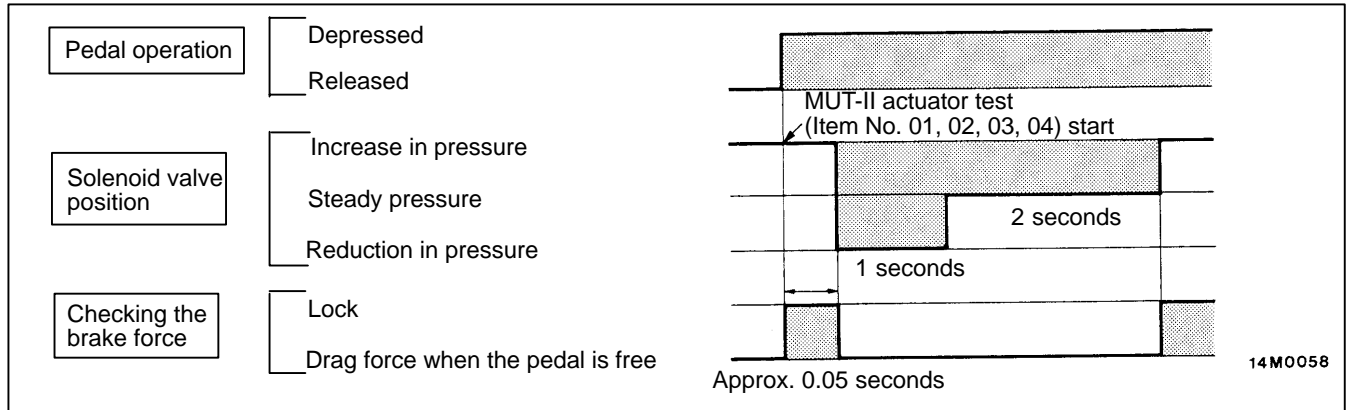

6. If the result of inspection is abnormal, correct according to the following “Diagnosis Table.”

**Diagnosis Table**

No.	MUT-II display	Operation	Judgment		Probable cause	Remedy
			Normal	Abnormal		
01	FR VALVE	(1) Depress the brake pedal to lock wheel. (2) Using the MUT-II, select the wheel to be checked and force the actuator to operate. (3) Check the brake force for the selected wheel using a brake force tester or by rotating the wheel by hand.	Brake force released for 3 seconds after locking.	Wheel does not lock when brake pedal is depressed.	Clogged brake line other than hydraulic unit	Check and clean brake line.
02	FL VALVE				Clogged hydraulic circuit in hydraulic unit	Replace hydraulic unit assembly.
03	RR VALVE			Brake force is not released.	Incorrect hydraulic unit brake tube connection	Connect correctly.
04	RL VALVE				Hydraulic unit solenoid valve not functioning correctly	Replace hydraulic unit assembly.

7. After checking, turn the ignition switch to the “LOCK” (OFF) position and then disconnect the MUT-II.

## REMEDY FOR A FLAT BATTERY

When booster cables are used to start the engine when the battery is completely flat and then the vehicle is immediately driven without waiting for the battery to recharge itself to some extent, the engine may misfire, and driving might not be possible. This happens because ABS consumes a great amount of current for its self-check function. If this happens, recharge the battery fully.

### Caution

**The vehicle posture will be unstable during braking, so do not drive the vehicle with the ABS-ECU connector disconnected or with the ABS not operating for any other reason.**

# HYDRAULIC UNIT AND ABS-ECU


## REMOVAL AND INSTALLATION

### Pre-removal Operation

- Brake Fluid Draining
- Air Intake Hose and Air Cleaner Removal

### Post-installation Operation

- Brake Fluid Supplying and Brake Line Bleeding (Refer to [On-vehicle Service.](#))
- [Hydraulic Unit Check](#)
- Air Intake Hose and Air Cleaner Installation

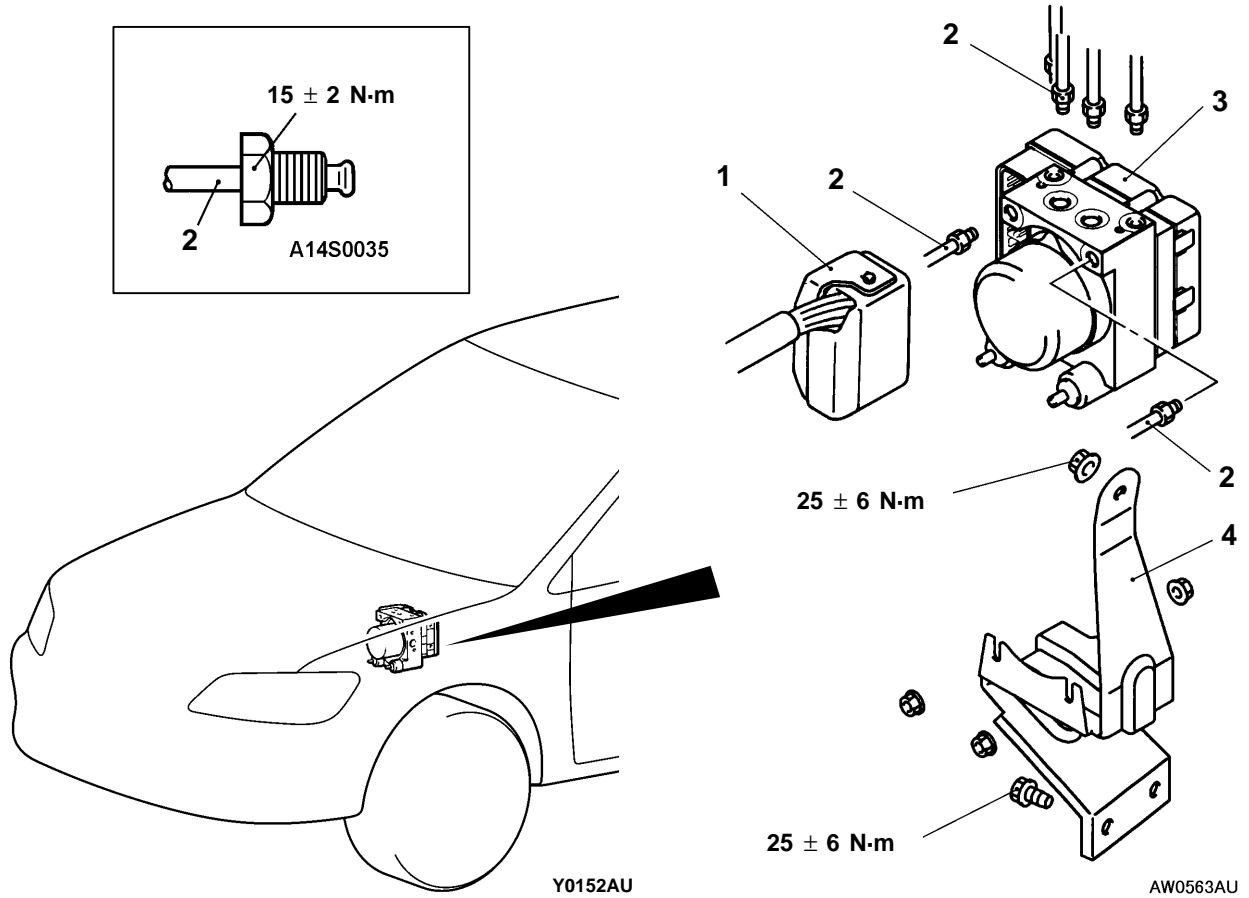


### Removal steps



1. Harness connector
2. Brake pipe connection



3. Hydraulic unit and ABS-ECU
4. Hydraulic unit bracket assembly

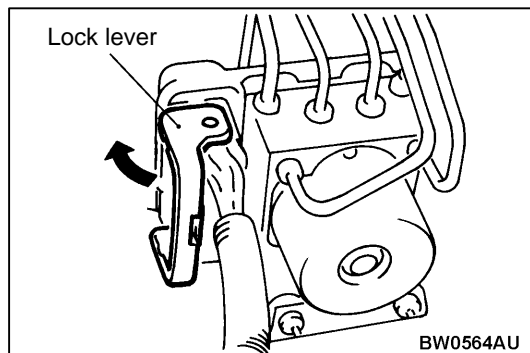

## REMOVAL SERVICE POINTS

### ◀A▶ HARNESS CONNECTOR DISCONNECTION

Move the lock lever of the ABS-ECU connector as shown in the illustration, and then disconnect the harness connector.

### ◀B▶ HYDRAULIC UNIT AND ABS-ECU REMOVAL

#### Caution


1. The hydraulic unit assembly is heavy, and so care should be taken when removing it.
2. The hydraulic unit assembly is not to be disassembled; its nuts and bolts should absolutely not be loosened.
3. The hydraulic unit assembly must not be dropped or otherwise subjected to impact shocks.
4. The hydraulic unit assembly must not be turned upside down or laid on its side.

## INSTALLATION SERVICE POINT

### ▶A◀ BRAKE PIPE CONNECTION

Connect the pipes to the hydraulic unit assembly as shown in the illustration.

1. From the master cylinder (Secondary)
2. To the front brake (LH)
3. To the rear brake (RH)
4. To the rear brake (LH)
5. To the front brake (RH)
6. From the master cylinder (Primary)

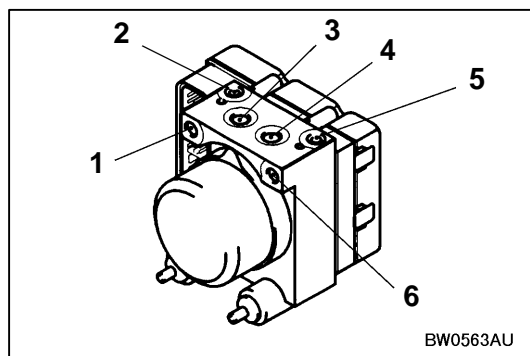




# WHEEL SPEED SENSOR

## REMOVAL AND INSTALLATION

Post-installation Operation  
Wheel Speed Sensor Output Voltage Check

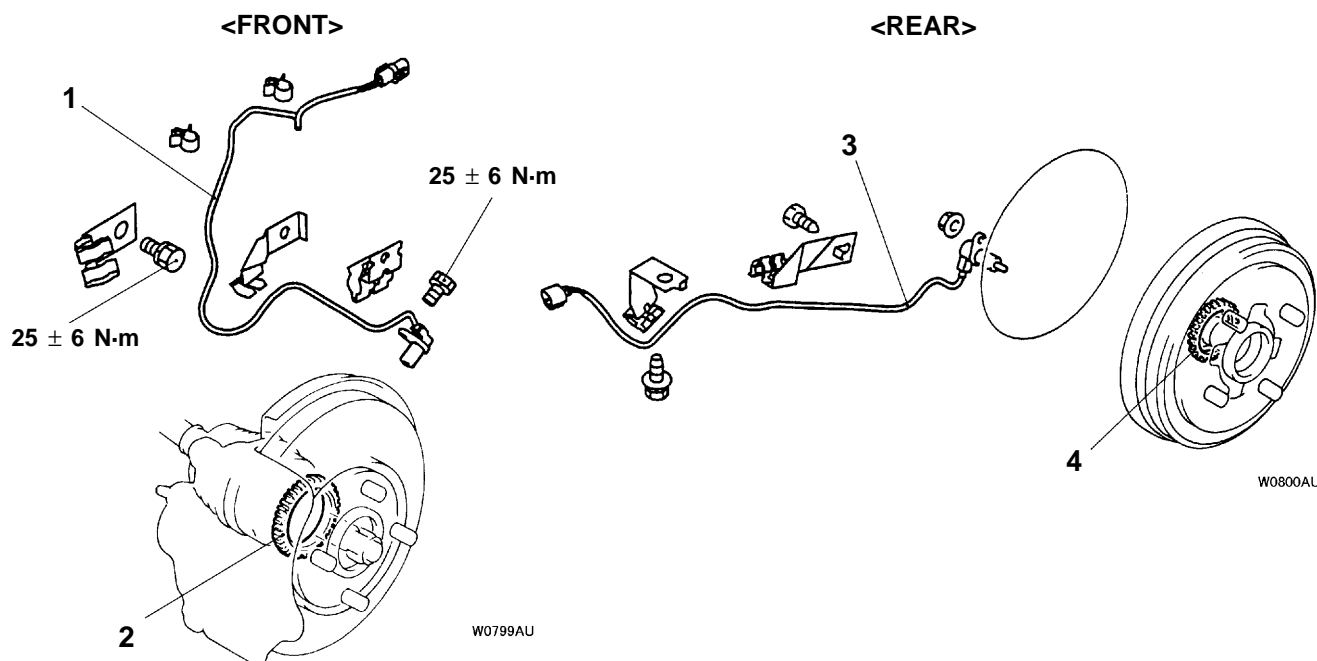

### Front wheel speed sensor removal steps


1. Front wheel speed sensor
2. Front ABS rotor (Refer to [Drive Shaft](#).)

### Rear wheel speed sensor removal steps

3. Rear wheel speed sensor
4. Rear ABS rotor (Refer to [Rear Hub Assembly](#).)

### NOTE

The front ABS rotors are integrated with the drive shaft and cannot be disassembled.

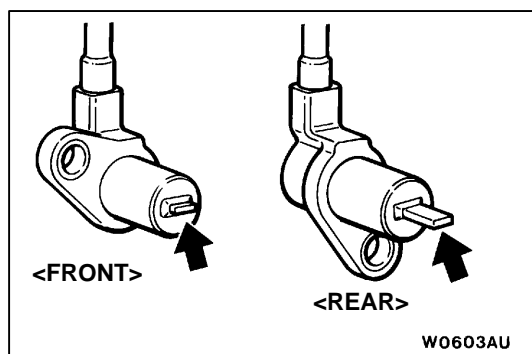

## REMOVAL SERVICE POINT


### ◀A▶ FRONT WHEEL SPEED SENSOR/REAR WHEEL SPEED SENSOR REMOVAL

#### Caution

Do not strike the pole piece at the tip of the wheel speed sensor against the ABS rotor tooth surface or other parts when removing the wheel speed sensor.

**INSPECTION****CHECK OF RESISTANCE BETWEEN WHEEL SPEED SENSOR TERMINALS****Caution**

The pole piece can become magnetized because of the magnet built into the wheel speed sensor, with the result that metallic foreign material easily adheres to it. Moreover, the pole piece may not be able to function to correctly sense the wheel rotation speed if it is damaged.

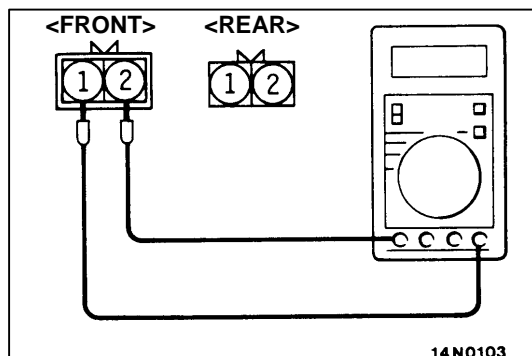

1. Measure the resistance between the wheel speed sensor terminals.


**Standard value: 1.24 – 1.64 k $\Omega$**

If the internal resistance of the wheel speed sensor is not within the standard value, replace with a new wheel speed sensor.

2. Check the wheel speed sensor cable for breakage, damage or disconnection; replace with a new one if a problem is found.

**NOTE**

When checking for cable damage, remove the cable clamp part from the body and then bend and pull the cable near the clamp to check whether or not temporary disconnection occurs. Also check the connection of the connector and that the terminals are inserted correctly.

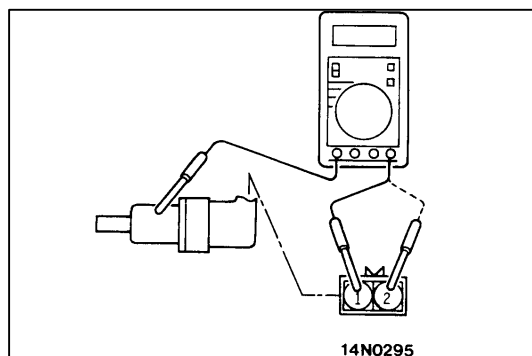**WHEEL SPEED SENSOR INSULATION INSPECTION**

1. Remove all connections from the wheel speed sensor, and then measure the resistance between terminal 1 and the body of the wheel speed sensor, and terminal 2 and the body of the wheel speed sensor.

**Standard value: 100 k $\Omega$  or more**

2. If the speed sensor insulation resistance is outside the standard value range, replace with a new speed sensor.

**ABS ROTOR CHECK**

Check whether ABS rotor teeth are broken or deformed, and, if so, replace the ABS rotor.