

## HIGH-MOUNTED STOPLIGHT

### REMOVAL AND INSTALLATION


Refer to GROUP 51 –Liftgate spoiler [P.51-24](#).

M1541700200201

## LICENSE PLATE LIGHT

### REMOVAL AND INSTALLATION

M1541900200238

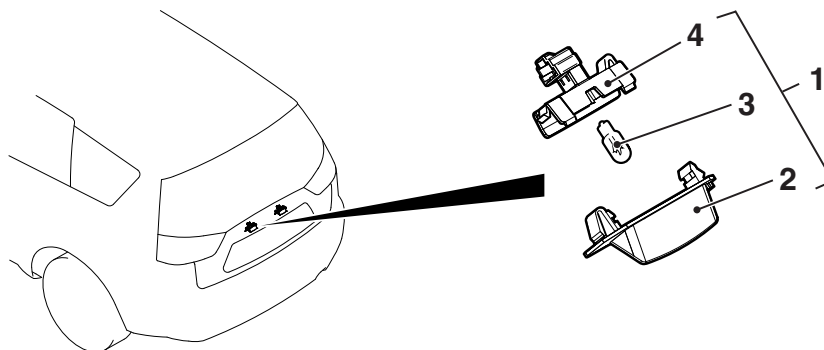

AC506864AC

<<A>>

#### Removal Steps

1. License plate light assembly
2. Lens


#### Removal Steps (Continued)

3. Bulb
4. Socket

### REMOVAL SERVICE POINT

#### <<A>> LICENSE PLATE LIGHT REMOVAL








Push the license plate light to the left to bend the hook, and then remove by disengaging the tab from the liftgate.

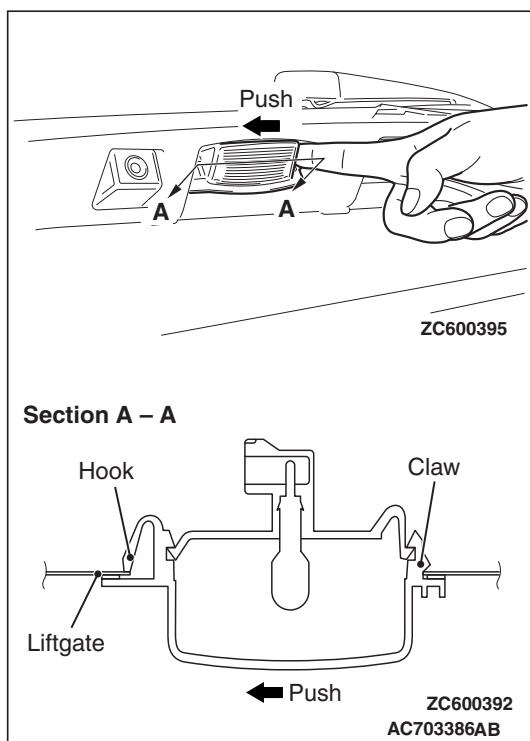
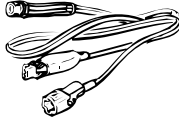
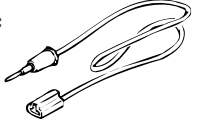

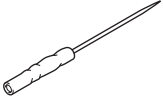


## HAZARD WARNING LIGHT SWITCH

## SPECIAL TOOLS

M1541500100288

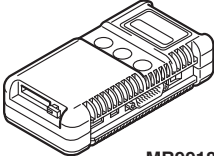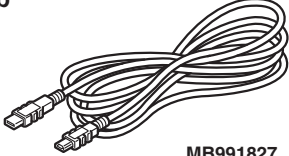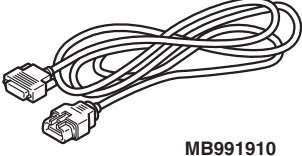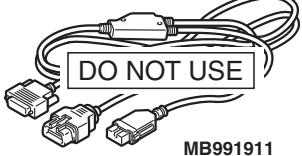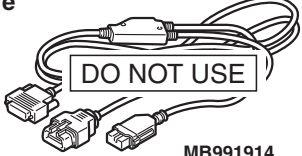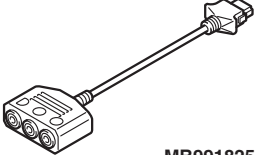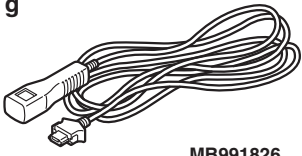Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub-assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler models only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</p>	<p><b>CAUTION</b></p> <p>M.U.T.-III main harness B (MB991911) should be used. M.U.T.-III main harness A and C should not be used for this vehicle.</p> <p>Diagnostic code, service data and actuator test check.</p>

Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>b</p>  <p>c</p>  <p>d</p> 	<p>MB991223</p> <p>a. MB991219</p> <p>b. MB991220</p> <p>c. MB991221</p> <p>d. MB991222</p> <p>Harness set</p> <p>a. Check harness</p> <p>b. LED harness</p> <p>c. LED harness adapter</p> <p>d. Probe</p>	<p>General service tool (jumper)</p>	<p>Continuity check and voltage measurement at harness wire or connector</p> <p>a. Connector pin contact pressure inspection</p> <p>b. Power circuit inspection</p> <p>c. Power circuit inspection</p> <p>d. Commercial tester connection</p>
 <p style="text-align: center;">MB992006</p>	<p>MB992006</p> <p>Extra fine probe</p>	<p>—</p>	<p>Continuity check and voltage measurement at harness wire or connector</p>

## DIAGNOSIS

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00 –Contents of troubleshooting

[P.00-7.](#)

M1541501400152


## DIAGNOSTIC FUNCTION

### HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

M1541500600108

#### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

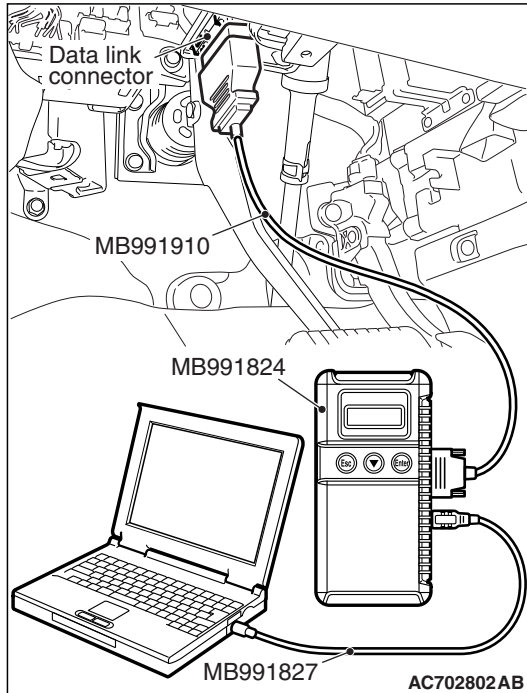**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

7. Start the M.U.T.-III system on the personal computer.

*NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.*

## HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

*NOTE: If the battery voltage is low, diagnostic trouble codes will not be set. Check the battery if scan tool MB991958 does not display.*

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "System select" from the start-up screen.
4. Select "From 2006 MY" of "Model Year." When the "Vehicle Information" is displayed, check the contents.
5. Select "ETACS" from "System List", and press the "OK" button.

*NOTE: When the "Loading Option Setup" list is displayed, check the applicable item.*

6. Select "Diagnostic Trouble Code" to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.

## DIAGNOSTIC TROUBLE CODE CHART

M1541500200092

 **CAUTION**

On troubleshooting, if the ignition switch is turned ON while disconnecting connector(s), diagnostic trouble code(s) associated with other system may be set. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

Diagnostic trouble code No.	Diagnostic item	Reference page
B16A6	Turn-signal fuse blown	P.54A-313

## DIAGNOSTIC TROUBLE CODE PROCEDURES

## DTC B16A6: Turn-signal fuse blown

## TROUBLE JUDGMENT

When the hazard warning light fuse is blown, the ETACS-ECU sets the DTC B16A6.

## TECHNICAL DESCRIPTION (COMMENT)

With the ADC DTC not set, when the blown fuse of hazard warning light is detected three times consecutively, the ETACS-ECU sets the DTC B16A3.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- Malfunction of the ETACS-ECU

## DIAGNOSIS

## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Fuse check**

Check if the turn-signal light fuse is normal.

**Q: Is the check result normal?**

**YES** : Go to Step 2.

**NO** : Replace the turn-signal light fuse.

**STEP 2.** Using scan tool MB991958, Check whether the diagnostic trouble code is reset.

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect scan tool [P.54A-311](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Erase the DTC.
- (4) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (5) Check if DTC is set.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU.

**NO :** The procedure is complete.

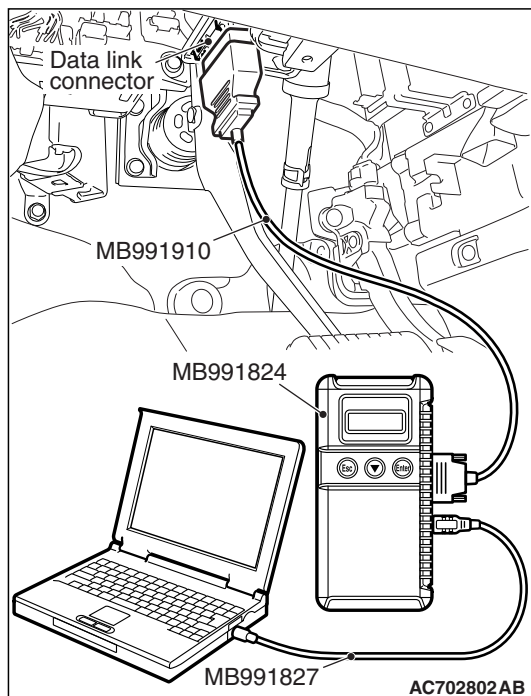

## TROUBLE SYMPTOM CHART

M1541500700161

Trouble symptom	Inspection Procedure No.	Reference page
The hazard warning lights do not illuminate.	1	<a href="#">P.54A-314</a>

## SYMPTOM PROCEDURES

### Inspection Procedure 1: The hazard warning lights do not illuminate.

**⚠ CAUTION**

Before replacing the ECU, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

### TECHNICAL DESCRIPTION (COMMENT)

If the hazard warning light does not illuminate, the hazard warning light switch input circuit in center panel unit or the ETACS-ECU may have a problem.

### TROUBLESHOOTING HINTS

- Malfunction of center panel unit
- Malfunction of the ETACS-ECU
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Check that the turn-signal light operate.

Check that the turn-signal lights illuminate normally.

#### Q: Does turn-signal light work normally?

**YES** : Go to Step 2.

**NO** : Diagnose the headlights. Refer to Inspection Procedure 12 "The turn-signal lights do not illuminate"  
[P.54A-203.](#)

### STEP 2. Using scan tool MB991958, check data list.

Using the ETACS-ECU service data, check the hazard warning light signal.

#### **CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.


- Connect scan tool MB991958. Refer to "How to connect scan tool (M.U.T.-III)" [P.54A-311.](#)
- Turn the ignition switch to the "ACC" position.
- Turn "ON" the hazard light switch.

Item No.	Item name	Normal conditions
Item 265	Hazard switch	ON

#### Q: Does scan tool MB991958 display the items "Hazard switch" as normal condition?

**YES** <Normal condition is displayed for item.> : Go to Step 3.

**NO** <Normal condition is not displayed for item No. 265.> : Troubleshoot the ETACS-ECU. Refer to Inspection Procedure 11 "ETACS-ECU does not receive any signal from the hazard warning light switch"  
[P.54A-832.](#)

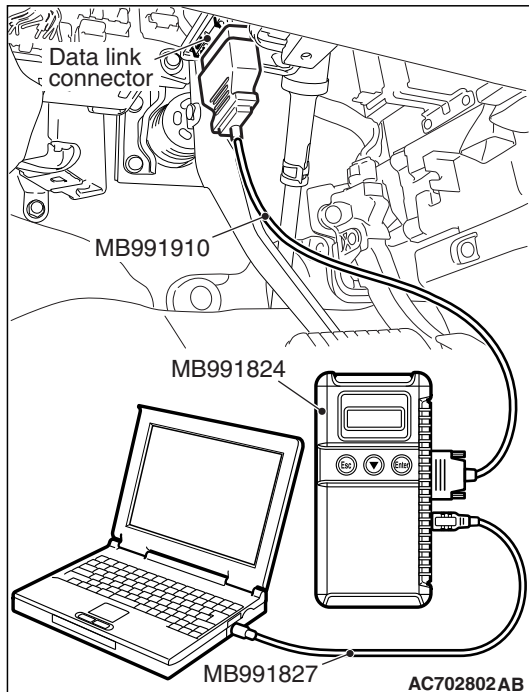

**STEP 3. Retest the system**

Check that the hazard warning light illuminate normally.


**Q: Does the taillight work normally?**

**YES** : The trouble can be an intermittent malfunction (Refer to GROUP 00 –How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO** : Replace the ETACS-ECU.

**REMOVAL AND INSTALLATION**

M1541501000206

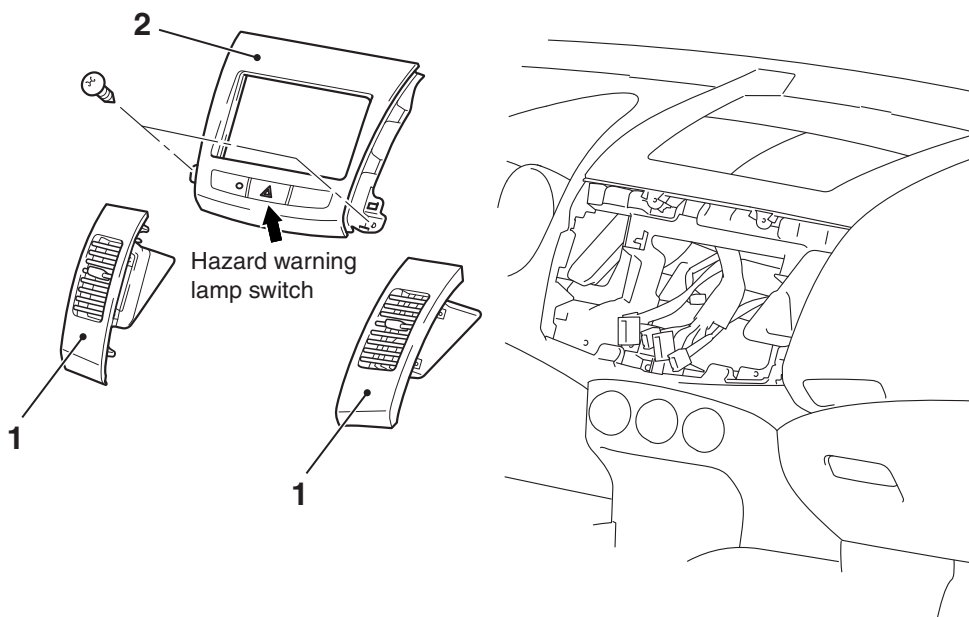

AC606574AC

**Removal Steps**

1. Center air outlet (Refer to GROUP 52A –Instrument Panel Assembly [P.52A-2.](#))
2. Center panel assembly (Refer to GROUP 52A –Instrument Panel Assembly [P.52A-2.](#))

**INSPECTION****CONTINUITY CHECK FOR HAZARD WARNING LIGHT SWITCH**


M1541501100173

Check the ETACS service data list using the scan tool MB991958. With the item No. 265 (Hazard switch), it is judged normal if the display shows ON when the hazard warning light switch is pressed, and OFF when not pressed.

## HORN

## REMOVAL AND INSTALLATION

M1542100200893

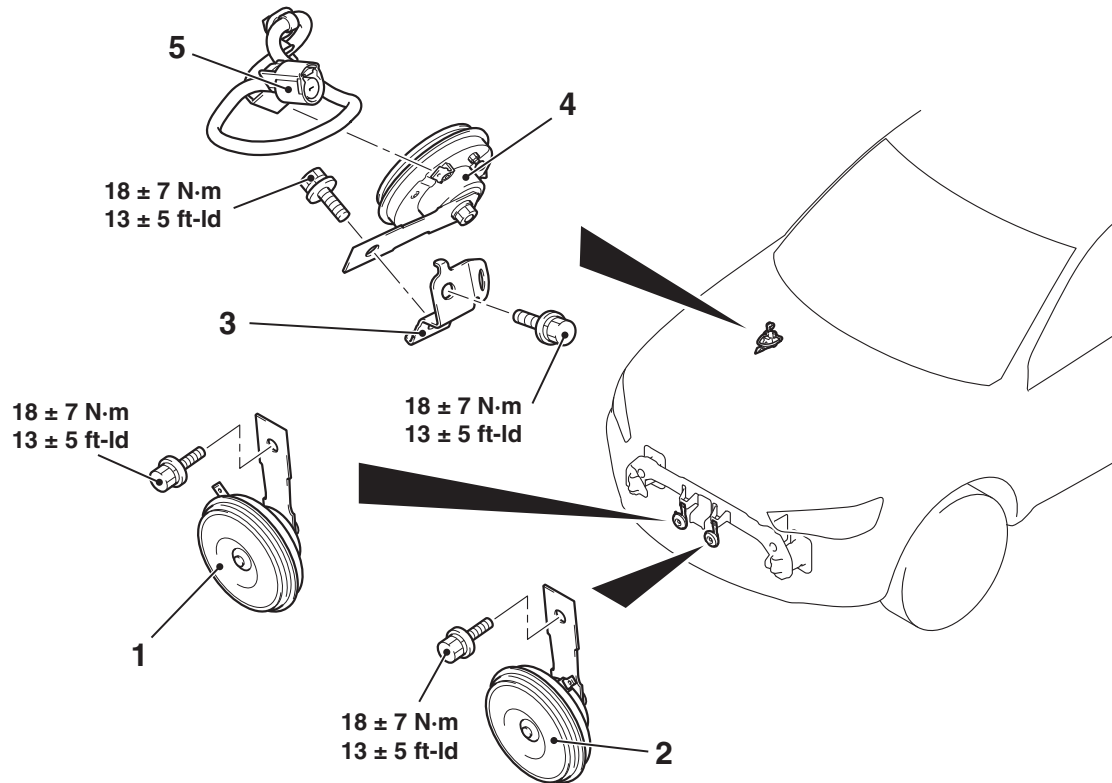

AC900246AC

**Removal Steps**

- Front bumper assembly (Refer to GROUP 51 –Front Bumper Assembly [P.51-4.](#))
- >>A<< 1. Horn (HI)
- >>A<< 2. Horn (LO)
- ABS-ECU or ASC-ECU harness connector (Refer to GROUP 35B – Hydraulic Unit [P.35B-189](#) or GROUP 35C- Hydraulic Unit [P.35C-290](#))


**Removal Steps (Continued)**

- >>A<< 3. Horn bracket <vehicles without theft-alarm siren>
- >>A<< 4. Horn (for theft-alarm) <vehicles without theft-alarm siren>
5. Horn harness <vehicles without theft-alarm siren>

## INSTALLATION SERVICE POINT

>>A<< HORN (FOR THEFT-ALARM)/HORN  
BRACKET/HORN (LO)/HORN (HI) INSTALLATION


Use the earth bolts as the mounting bolts for horn (for theft-alarm), horn bracket, horn (LO) and horn (HI). The earth bolts have "E" mark on the bolt heads.

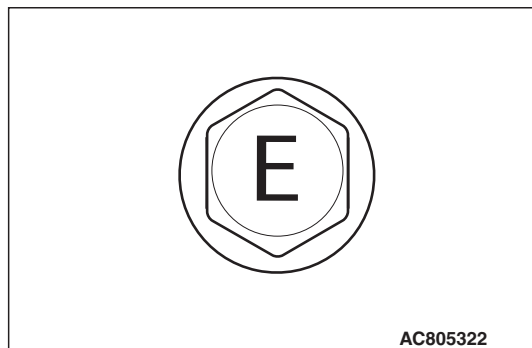

## INSPECTION

## HORN RELAY CHECK

M1542100400325

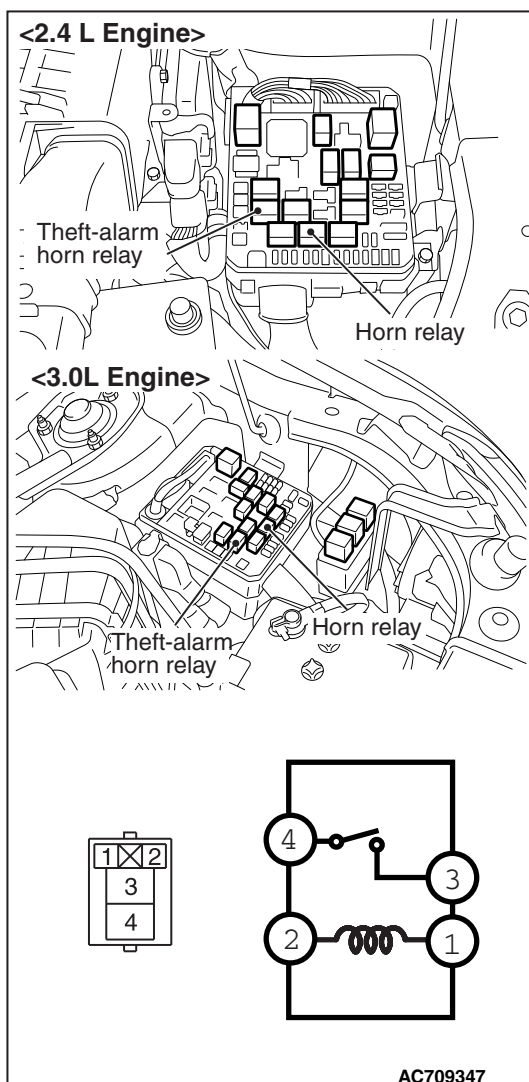


Battery voltage	Tester connection	Specified condition
Not energized	3 -4	No continuity
With current supply [terminal 2 (+), terminal 1 (-)]		Continuity exists (2 ohms or less)

## ACCESSORY SOCKET

### GENERAL INFORMATION

M1542300500229

The plug-in type accessory socket has been installed for the convenient use of accessories.

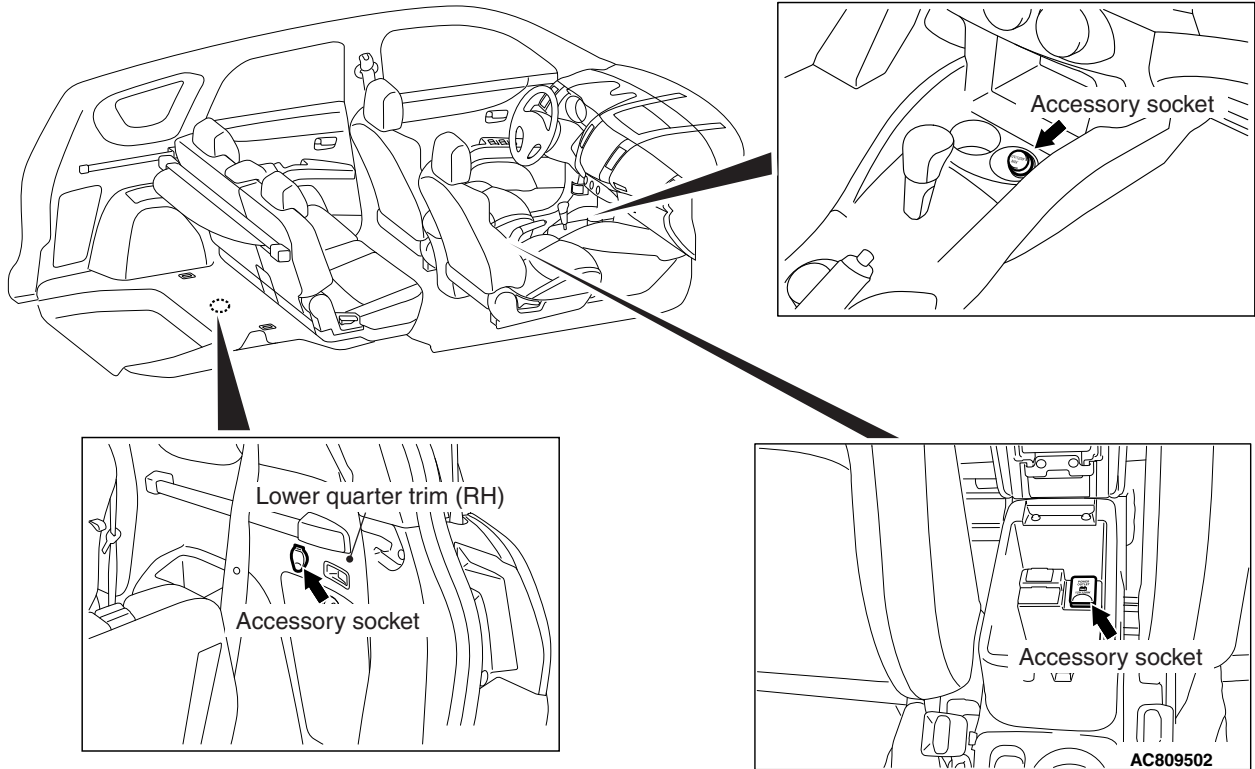


AC900187AF

- Accessory sockets have been added to the front floor console. if so equipped rear floor console <standard: 3.0L engine-High, Option: except 3.0L engine-High> and lower quarter trim (RH).
- The maximum load is 120 W when a single accessory socket is used. When three accessory sockets are used simultaneously, the combined maximum load for three sockets is 120 W.

## REMOVAL AND INSTALLATION

M1542300200262

## &lt;REAR FLOOR CONSOLE&gt;

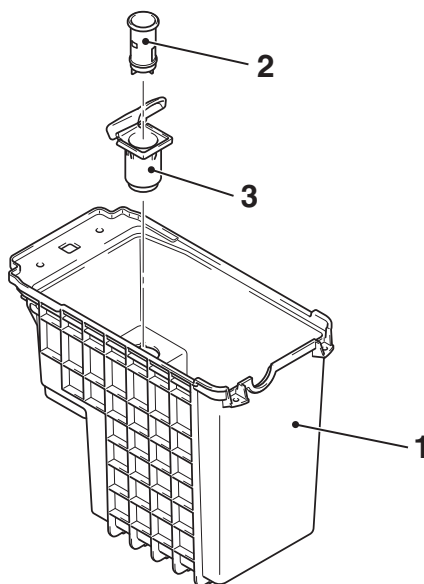**Removal Steps**

1. Rear floor console box (Refer to GROUP 52A, Rear Floor Console Assembly [P.52A-8.](#))


&lt;&lt;A &gt;&gt;

**Removal Steps (Continued)**

2. Accessory socket
3. Accessory socket cover

AC506901AC

## &lt;FRONT FLOOR CONSOLE&gt;

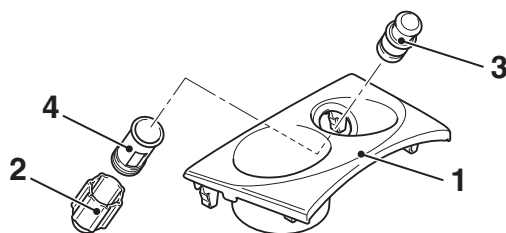**Removal Steps**


1. Front floor console panel (Refer to GROUP 52A, Front Floor Console Assembly [P.52A-7.](#))
2. Accessory socket case

**Removal Steps (Continued)**

3. Accessory socket cap
4. Accessory socket

AC605509AH

<LOWER QUARTER TRIM (RH)>

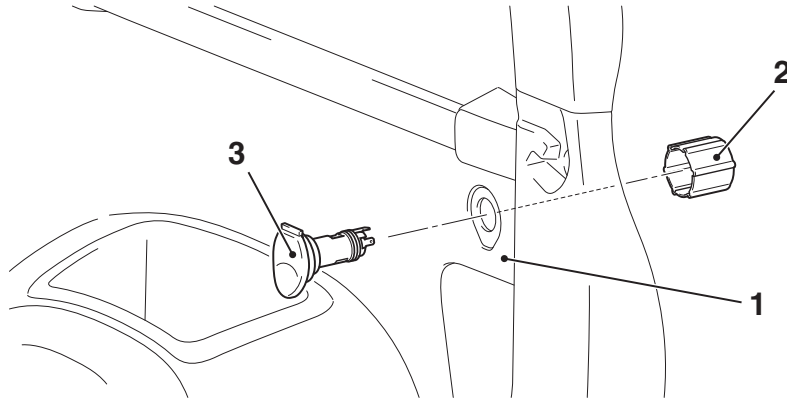

AC506903AC

**Removal Steps**

1. Lower quarter trim (RH) (Refer to GROUP 52A, Interior Trim P.52A-9.)


**Removal Steps (Continued)**

2. Accessory socket case
3. Accessory socket

**REMOVAL SERVICE POINT**

**<<A>> ACCESSORY SOCKET REMOVAL**

Lift the accessory socket cover tab, then remove by pressing down the accessory socket.

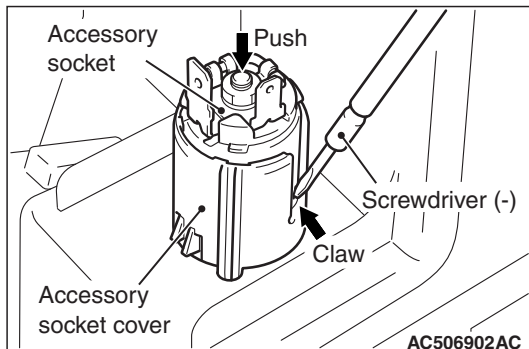

AC506902AC


## COLUMN SWITCH

### GENERAL INFORMATION

M1543101800028

The column switch has a built in feature to ensure the driver's safety during frontal collision of vehicle.








### Function


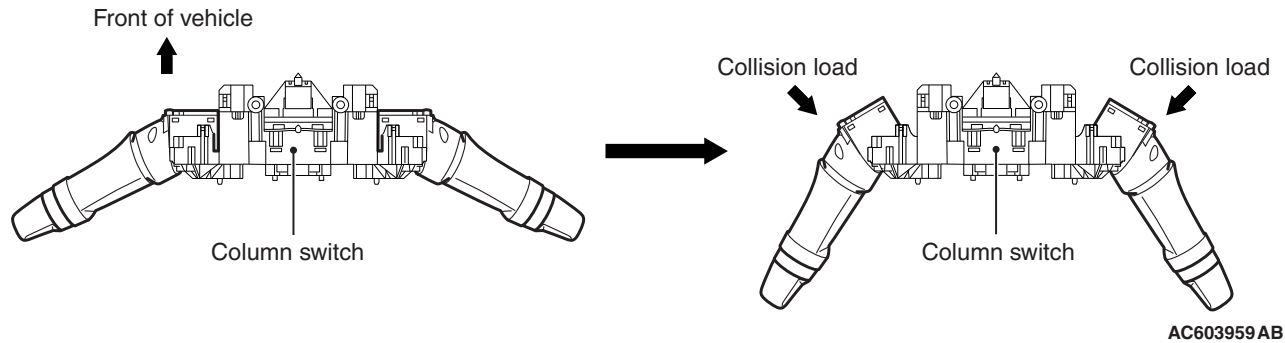


If the column switch is moved toward the front of the vehicle and hit on the instrument panel or meter bezel during a frontal collision, the steering wheel is moved to the front of the vehicle because the right and left levers fall down, ensuring the driver's safety. In addition, the column switch secures the rigidity that the levers do not fall down by the normal operation. The column switch cannot be reused after the deformation.

## SPECIAL TOOLS

M1543100200205

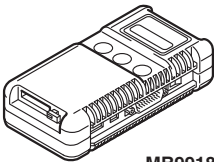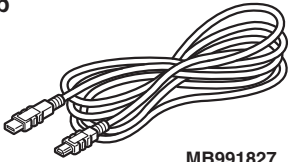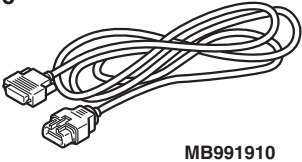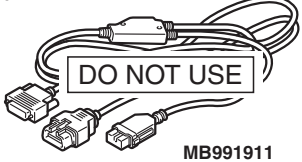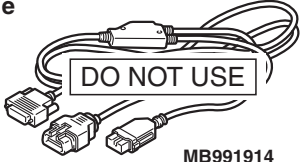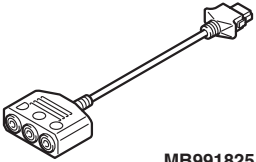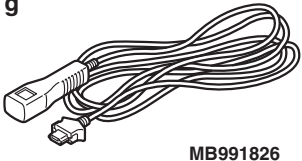Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler models only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b></p> <p><b>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</b></p> <p>Diagnostic code check.</p>

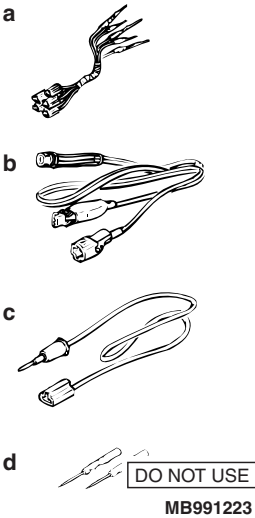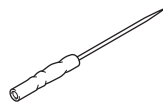Tool	Tool number and name	Supersession	Application
 <p>DO NOT USE MB991223</p>	MB991223 a. MB991219 b. MB991220 c. MB991221 d. MB991222 Harness set a. Test harness b. LED harness c. LED harness adaptor d. Probe	General service tools	Continuity check and voltage measurement at harness wire or connector a. Connector pin contact pressure inspection b. Power circuit inspection c. Power circuit inspection d. Commercial tester connection
 <p>MB992006</p>	MB992006 Extra fine probe	–	Continuity check and voltage measurement at harness wire or connector.

## TROUBLESHOOTING

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00 –Contents of troubleshooting

[P.00-7.](#)

M1543101200167


## DIAGNOSTIC FUNCTION

### HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

M1543101300142

#### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

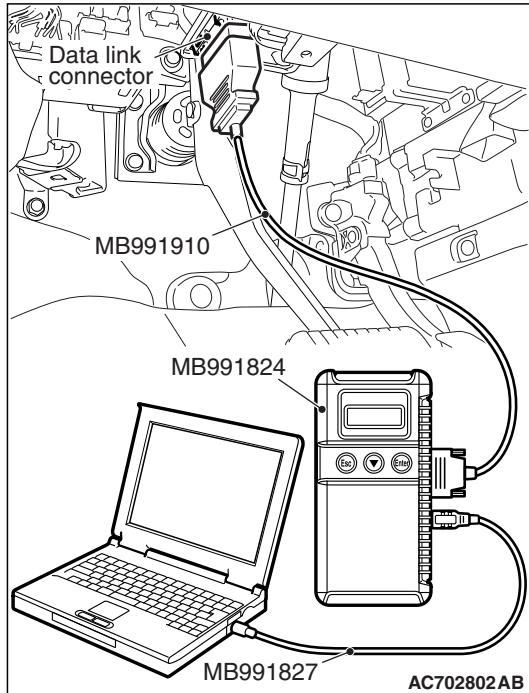**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

7. Start the M.U.T.-III system on the personal computer.

*NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.*

## HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

*NOTE: If the battery voltage is low, diagnostic trouble codes will not be set. Check the battery if scan tool MB991958 does not display.*

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "System select" from the start-up screen.
4. Select "From 2006 MY" of "Model Year." When the "Vehicle Information" is displayed, check the contents.
5. Select "ETACS" from "System List", and press the "OK" button.

*NOTE: When the "Loading Option Setup" list is displayed, check the applicable item.*

6. Select "Diagnostic Trouble Code" to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.

## DIAGNOSTIC TROUBLE CODE TABLE

M1543100300161

NOTE: The ETACS-ECU sets a diagnostic trouble code.

Diagnostic trouble code No.	Diagnostic item	Reference page
B2350	Malfunction of lighting switch	P.54A-326
B2351	Malfunction of the wiper/washer switch	

## DIAGNOSTIC TROUBLE CODE PROCEDURES

DTC B2350: Malfunction of lighting switch,  
DTC B2351: Malfunction of wiper/washer switch

## TROUBLE JUDGMENT

The ETACS-ECU receives the signals related to lighting and wiper/washer from the column switch. If the fail information data is included in the signal from column switch, DTC B2350 (malfunction of lighting switch) or B2351 (malfunction of wiper/washer switch) is stored.

## TECHNICAL DESCRIPTION (COMMENT)

The lighting switch, wiper/washer switch or the ETACS-ECU may have a problem.


## TROUBLESHOOTING HINTS

- Malfunction of lighting switch (with built-in column-ECU)
- Malfunction of wiper/washer switch
- The ETACS-ECU may be defective

## DIAGNOSIS

## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

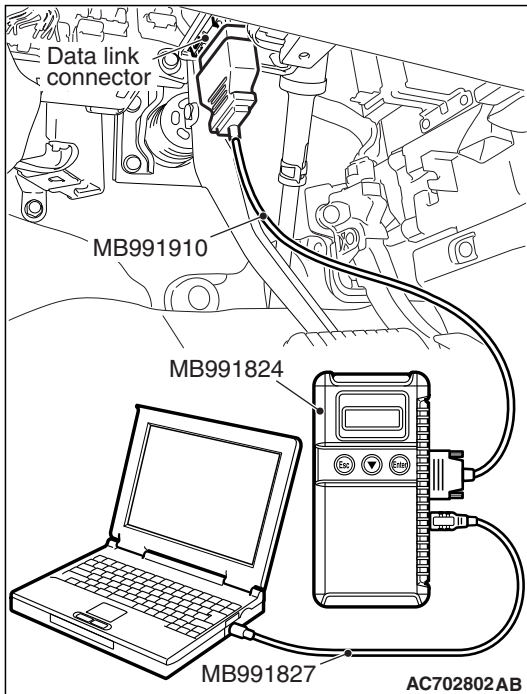**STEP 1. Using scan tool MB991958, Check whether the diagnostic trouble code is reset.**

Check again if the DTC is set to the ETACS-ECU.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect scan tool [P.54A-324](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Erase the DTC.
- (4) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (5) Check if the DTC B2350 or B2351 is set.
- (6) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**DTC B2351 is set.** : Go to Step 2.

**DTC B2350 is set.** : Go to Step 3.

**No DTC is set.** : The trouble can be an intermittent malfunction (GROUP 00 –How to Cope with Intermittent Malfunction [P.00-15](#)).

**STEP 2. Using scan tool MB991958, Check whether the diagnostic trouble code is reset.**

Check again if the DTC is set to the ETACS-ECU.

- (1) Replace the wiper/washer switch.
- (2) Turn the ignition switch to the "ON" position.
- (3) Erase the DTC.
- (4) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (5) Check if DTC is set.
- (6) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Go to Step 3.

**NO** : The procedure is complete.

**STEP 3. Using scan tool MB991958, Check whether the diagnostic trouble code is reset.**

Check again if the DTC is set to the ETACS-ECU.

- (1) Replace the lighting switch (with built-in column-ECU).
- (2) Turn the ignition switch to the "ON" position.
- (3) Erase the DTC.
- (4) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (5) Check if DTC is set.
- (6) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Replace the ETACS-ECU.


**NO** : The procedure is complete.

**REMOVAL AND INSTALLATION**

M1543100700426

**⚠ CAUTION**

- To remove the driver air bag module, refer to GROUP 52B –Service Precautions [P.52B-24](#) and Air Bag Module(s) and Clock Spring [P.52B-443](#).
- When the steering wheel sensor is replaced, always carry out calibration to make ASC-ECU learn the neutral point. (Refer to GROUP 35C –On-vehicle Service-Steering Wheel Sensor Calibration [P.35C-286](#).) <Vehicles with ASC>

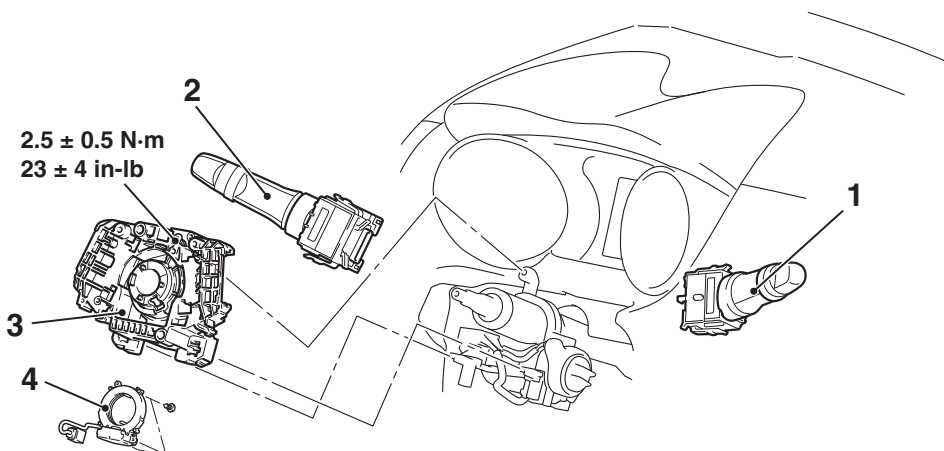

AC609141AC

**Removal Steps**

- Steering column cover (Refer to GROUP 52A –Instrument Panel Assembly [P.52A-2](#).)
- 1. Wiper/washer switch
- 2. Lighting switch (with built-in column-ECU)
- Steering wheel assembly (Refer to GROUP 52B –Air Bag Module(s) and Clock Spring [P.52B-443](#).)


**Removal Steps (Continued)**

- Clock spring (Refer to GROUP 52B –Air Bag Module(s) and Clock Spring [P.52B-443](#).)
- 3. Column switch body
- 4. Steering wheel sensor (Refer to GROUP 35C –Steering wheel sensor [P.35C-296](#).) <Vehicles with ASC>


## INSPECTION

## WIPER/WASHER SWITCH CONTINUITY CHECK

M1543101700098
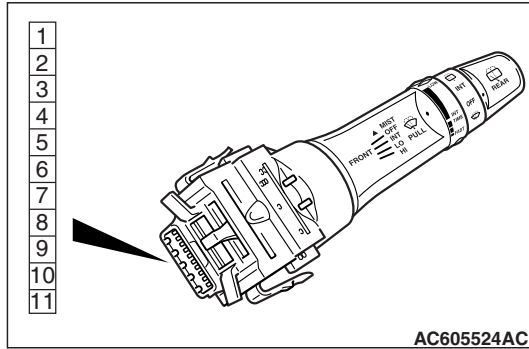
<VEHICLES WITHOUT LIGHTING CONTROL  
SENSOR>

Switch position		Tester connection	Specified condition
OFF		–	Open circuit
Windshield intermittent wiper interval adjusting knob		6 –3	Operating the adjusting knob changes the resistance.
Rear wiper switch		6 –4	Continuity exists (2 Ω or less)
Rear washer switch		6 –5	Continuity exists (2 Ω or less)
Windshield washer switch		6 –7	Continuity exists (2 Ω or less)
Windshield wiper switch	Hi	6 –8	Continuity exists (2 Ω or less)
	Lo	6 –9	Continuity exists (2 Ω or less)
	Int	6 –10	Continuity exists (2 Ω or less)
	Mist	6 –11	Continuity exists (2 Ω or less)
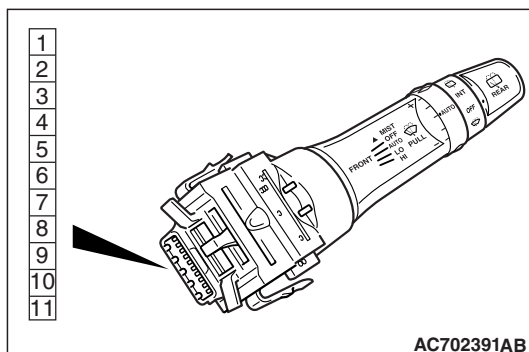
<VEHICLES WITH LIGHTING CONTROL  
SENSOR>


Switch position		Tester connection	Specified condition
OFF		–	Open circuit
Windshield rain sensitive wiper function adjusting knob		6 –3	Operating the adjusting knob changes the resistance.
Rear wiper switch		6 –4	Continuity exists (2 Ω or less)
Rear washer switch		6 –5	Continuity exists (2 Ω or less)
Windshield washer switch		6 –7	Continuity exists (2 Ω or less)

Switch position		Tester connection	Specified condition
Windshield wiper switch	Hi	6 –8	Continuity exists (2 $\Omega$ or less)
	Lo	6 –9	Continuity exists (2 $\Omega$ or less)
	Auto	6 –10	Continuity exists (2 $\Omega$ or less)
	Mist	6 –11	Continuity exists (2 $\Omega$ or less)

### COLUMN SWITCH (SWITCH BODY PART) CONTINUITY CHECK

M1543100800069

1. Remove the lighting switch and the wiper/washer switch.
2. Check that the continuity is present for the same terminal numbers (No. 2-11) of the column switch body connectors that remain on the steering column.

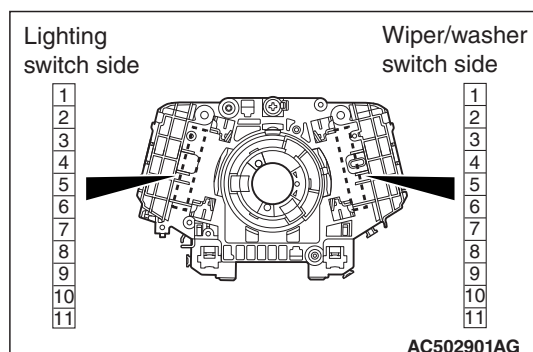


Column switch body	Tester connection	Specified condition
<ul style="list-style-type: none"> <li>• Lighting switch side connector</li> <li>• Wiper/washer switch side connector</li> </ul>	2 –2	Continuity exists (2 $\Omega$ or less)
	3 –3	
	4 –4	
	5 –5	
	6 –6	
	7 –7	
	8 –8	
	9 –9	
	10 –10	
	11 –11	


## RADIO AND CD PLAYER

### GENERAL INFORMATION

M1544000100817

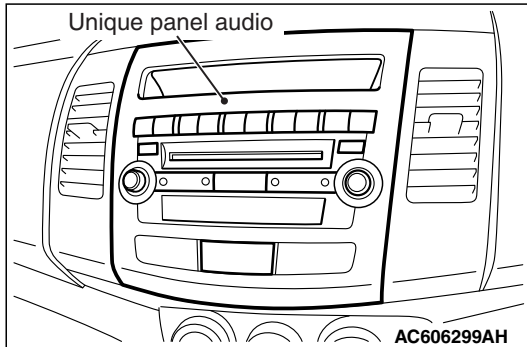

The unique panel audio (radio and CD player, CD changer built-in type radio and CD player) gives a sense of unity with the instrument panel. Also, a new function automatically corrects the sound quality and volume during driving.

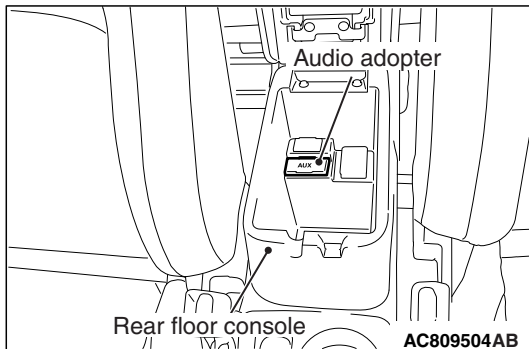

With the exception of some models, the vehicles with audio amplifier have the external connection jack (audio adapter). <Vehicles without rear display>. Therefore, portable music player and so on can be connected.









Item	radio and CD player	CD changer built-in type radio and CD player
Electronic tuning radio	Equipped	Equipped
SIRIUS satellite radio	–	Equipped (Only the vehicles with the satellite radio tuner)
Hands free cellular phone system	–	Equipped (Only the vehicles with the hands free module)
CD player <sup>*1</sup> (compatible with MP3 <sup>*2</sup> )	Equipped	Equipped
6-disk CD autochanger <sup>*1</sup> (compatible with MP3 <sup>*2</sup> )	–	Equipped
Audio integrated 4-ch power amplifier and digital signal processor (DSP)	General 140 W	General 140 W
Audio amplifier-integrated 8-ch power amplifier and digital signal processor (DSP) <Rockford Fosgate® premium sound system>	–	General 710 W (maximum)


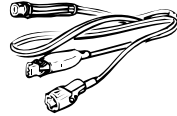
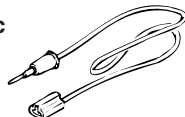

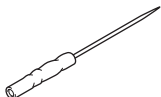
**NOTE:**

- <sup>\*1</sup>: CD-R/CD-RW may not be played.
- <sup>\*2</sup>: Some may not be played.

## SPECIAL TOOLS

M1542000602555

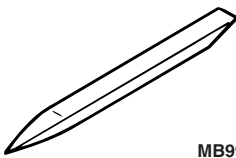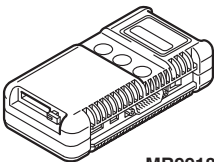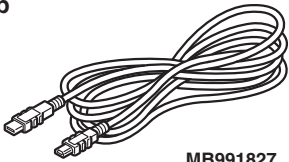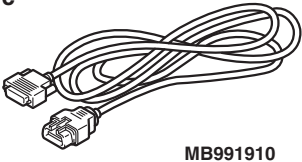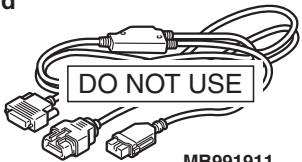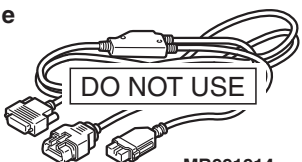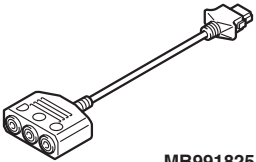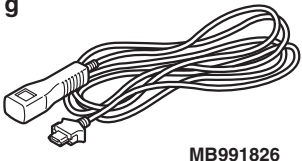Tool	Tool number and name	Supersession	Application
 MB990784	MB990784 Ornament remover	General service tool	Removal of center outlet, center panel or cover.
<p>a  MB991824</p> <p>b  MB991827</p> <p>c  MB991910</p> <p>d  MB991911 <b>DO NOT USE</b></p> <p>e  MB991914 <b>DO NOT USE</b></p> <p>f  MB991825</p> <p>g  MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824 b. MB991827 c. MB991910 d. MB991911 e. MB991914 f. MB991825 g. MB991826 M.U.T.-III sub assembly</p> <p>a. Vehicle communication interface (V.C.I.) b. M.U.T.-III USB cable c. M.U.T.-III main harness A (Vehicles with CAN communication system) d. M.U.T.-III main harness B (Vehicles without CAN communication system) e. M.U.T.-III main harness C (for Chrysler models only) f. M.U.T.-III measurement adapter g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b> <b>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</b> Diagnostic trouble code or service data check.</p>

Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>b</p>  <p>c</p>  <p>d</p>  <p>MB991223</p>	<p>MB991223</p> <p>a. MB991219</p> <p>b. MB991220</p> <p>c. MB991221</p> <p>d. MB991222</p> <p>Harness set</p> <p>a. Test harness</p> <p>b. LED harness</p> <p>c. LED harness adaptor</p> <p>d. Probe</p>	<p>General service tools</p>	<p>Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector.</p> <p>a. Connector pin contact pressure inspection</p> <p>b. Power circuit inspection</p> <p>c. Power circuit inspection</p> <p>d. Commercial tester connection</p>
 <p>MB992006</p>	<p>MB992006</p> <p>Extra fine probe</p>	<p>–</p>	<p>Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector.</p>

**DIAGNOSIS****INTRODUCTION TO AUDIO SYSTEM DIAGNOSIS**

M1544004700617

**RADIO AND CD PLAYER ERROR CODES**

If the radio and CD player detects any malfunction in itself or the inserted CD, the error codes below will be shown on the display.

Error code	Cause	Cause of trouble and its solution
ERROR	Power supply error	This error code will be shown if there is any problem in the power supply system of the radio and CD player. Check the connectors and wiring harness of the power supply system, and check that the battery voltage is normal. Check that the same error does not appear.
ERROR 01	Focus error	These error codes will be shown if there is any problem with the CD or there is excessive vibration on the vehicle. If the error codes are not displayed when the vehicle is stopped and another CD is inserted, there is a problem with the CD. Check if there is any of the following problems with the CD. <ul style="list-style-type: none"> <li>• Contamination, scratch, or deformation</li> <li>• Formation of moisture or grease</li> </ul> Repair the CD and insert it again. Then, check that no error appears.
ERROR 02	Abnormal disc	
ERROR 03	Mechanical error	This error codes will be shown if there is any internal mechanical or electrical problem in the radio and CD player. Replace the radio and CD player check that no error codes are shown.
ERROR HOT	Protection against high temperature	If the internal temperature is extremely high, this error code will be shown. Turn off the radio and CD player and wait until they cool down. Wait for a while, and then turn on the unit again. Check that the same error does not appear.
ERROR DC	Detection abnormal output to the speaker	This error code will be shown if the radio and CD player or the audio amplifier has an internal error or is contaminated with the foreign material, and there is a problem with output to the speaker. If it is contaminated with the foreign material, turn OFF the power. Dry the foreign material if it is liquid, and remove it if it is solid. Then, check if the error code is displayed. If the error code is displayed, replace the radio and CD player or the audio amplifier.
LSI ERROR	USB box internal error	This error code is set when the USB box has an internal error. Replace the USB box.

**SATELLITE RADIO ERROR CODES <Vehicles with satellite radio tuner>**

The display displays the error codes below if an abnormality related to the satellite radio is detected.

Error code	Cause	Cause of trouble and its solution
ANTENNA ERROR	Antenna error	This code is displayed when there is a failure, improper connection, or open circuit in the satellite antenna base and the satellite radio tuner cannot receive normal voltage value or current value. Check the satellite radio tuner, the satellite antenna base and the antenna feeder cable, and replace if necessary.
ACQUIRING SIGNAL	Cannot pick up signal	This code is displayed when the signal is too weak and it cannot be received. Move to a place where the signal can be received easily, or check if there is foreign material that interferes with signal reception on the satellite antenna base, and remove if necessary.
CALL 888-539-SIRIUS	Unauthorized channel	This code is displayed when the channel to be received is not included in the contract with SIRIUS™ satellite radio. Contact SIRIUS™ satellite radio and make a contract for the channel.
NO CHANNEL	There is no selectable channel	There is no channel that can be selected. Cancel the SKIP settings so that the channels can be selected.
INVALID CHANNEL	Channel is invalid	No program is broadcast on this channel now, or this channel cannot be received. Ask SIRIUS™ satellite radio.
SAT ERROR	Mechanical fault or bad connection	This code is displayed when the satellite radio tuner has a mechanical problem or when an error occurs in the communication with radio and CD player. Check the radio and CD player, the satellite radio tuner, and each harness and connector, and replace if necessary. (Refer to <a href="#">P.54A-674</a> .)
OFF AIR	OFF AIR	This code is displayed when this channel is not broadcast at this moment, or broadcast of the satellite radio is interrupted. Check the airtime and the broadcast conditions of SIRIUS™ satellite radio.
NOT ACTIVATED	ID not registered	This code is displayed when the SIRIUS ID is not written to the satellite radio tuner. Replace the satellite radio tuner.
READING	Data reading in progress	This code is displayed when the data received is being read. Wait until reading of the data received is completed.
UPDATING	Channel data updating in progress	This code is displayed when SIRIUS™ satellite radio is updating the channel data. Wait until update is completed.
SUB UPDATING PRESS ANY KEY	Contract status updating complete	This code is displayed when the contract status is updated. This code disappears when any of the audio switch is pressed.

## STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00 –Troubleshooting contents

P.00-7.

M1544004800636

## DIAGNOSIS FUNCTION

M1544013200320

## HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

7. Start the M.U.T.-III system on the personal computer.

*NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.*

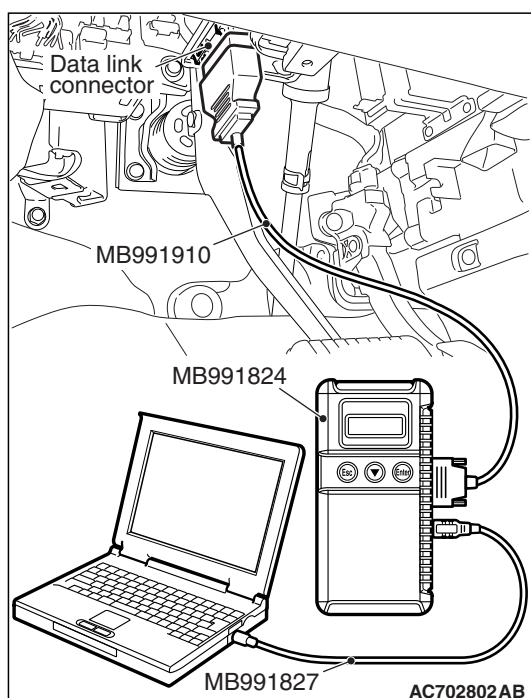

## HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

*NOTE: If the battery voltage is low, diagnostic trouble codes will not be set. Check the battery if scan tool MB991958 does not display.*

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "System select" from the start-up screen.

4. Select "From 2006 MY" of "Model Year." When the "Vehicle Information" is displayed, check the contents.
5. Select "Meter" from "System List," and press the "OK" button.

*NOTE: When the "Loading Option Setup" list is displayed, check the applicable item.*

6. Select "Diagnostic Trouble Code." to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.

## HOW TO DIAGNOSE THE CAN BUS LINES

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "CAN bus diagnosis" from the start-up screen.
4. When the vehicle information is displayed, confirm that it matches the vehicle being diagnosed.
  - If they match, go to Step 8.
  - If not, go to Step 5.
5. Select the "view vehicle information" button.
6. Enter the vehicle information and select the "OK" button.
7. When the vehicle information is displayed, confirm again that it matches the vehicle being diagnosed.
  - If they match, go to Step 8.
  - If not, go to Step 5.
8. Select the "OK" button.
9. When the optional equipment screen is displayed, choose the one which the vehicle is fitted with, and then select the "OK" button.

**CHECK OF FREEZE FRAME DATA**

The freeze frame data can be checked by using scan tool.

When detecting fault and storing the diagnostic trouble code, the ECU connected to CAN bus line obtains the data before the determination of the diagnostic trouble code and the data when the diagnostic trouble code is determined, and then stores the ECU status of that time. By analyzing each data from scan tool, the troubleshooting can be performed more efficiently. The displayed items are as the table below.

**Display item list**

Item No.	Item name	Content	Unit
1	Odometer	Total driving distance after the diagnostic trouble code is generated	mile
2	Ignition cycle	Number of times the ignition switch is turned "ON" or "LOCK (OFF)" after the past failure transition	Number of counts is displayed.
4	Accumulated minute	Cumulative time for current malfunction of diagnostic trouble code	min

**DIAGNOSTIC TROUBLE CODE CHART**

M1544012900348

**⚠ CAUTION**

On troubleshooting, if the ignition switch is turned ON while disconnecting connector(s), diagnostic trouble code(s) associated with other system may be set. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

DTC No.	Description	Reference page
U0019	Bus off (CAN-B)	<a href="#">P.54A-339</a>
U0141	ETACS CAN timeout	<a href="#">P.54A-340</a>
U0151	SRS-ABG CAN timeout	<a href="#">P.54A-342</a>
U0154	OCM (occupant classification-ECU) CAN timeout	<a href="#">P.54A-344</a>
U0155	Meter CAN timeout	<a href="#">P.54A-346</a>
U0164	A/C CAN timeout	<a href="#">P.54A-348</a>
U0168	WCM CAN timeout	<a href="#">P.54A-350</a>
U0195	Satellite radio CAN timeout	<a href="#">P.54A-352</a>
U0197	Hands free module CAN timeout	<a href="#">P.54A-354</a>
U1415	Coding not completed/Data fail	<a href="#">P.54A-356</a>
B2420	Power integrated circuit	<a href="#">P.54A-358</a>
B2421	Radio tuner	<a href="#">P.54A-360</a>
B2423	6 CD player error	<a href="#">P.54A-361</a>
B2424	CD player error	<a href="#">P.54A-363</a>
B2450	Switch panel communication	<a href="#">P.54A-365</a>
B2451	Audio panel type error	<a href="#">P.54A-370</a>

## DIAGNOSTIC TROUBLE CODE PROCEDURES

### DTC U0019: Bus off (CAN-B)

#### **⚠ CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

#### **⚠ CAUTION**

Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

### TROUBLE JUDGMENT

When the radio and CD player is returned from the bus off state, or when the bus error is indicated to the radio and CD player state, the DTC U0019 (CAN-B) is set.

### COMMENTS ON TROUBLE SYMPTOM

The radio and CD player, power supply for the radio and CD player, ground circuit, or CAN bus line may have a problem.

### PROBABLE CAUSES

- Malfunctions of radio and CD player
- Malfunction of CAN bus line wiring harness and connector

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### **⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

### Q: Is the CAN bus line found to be normal?

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

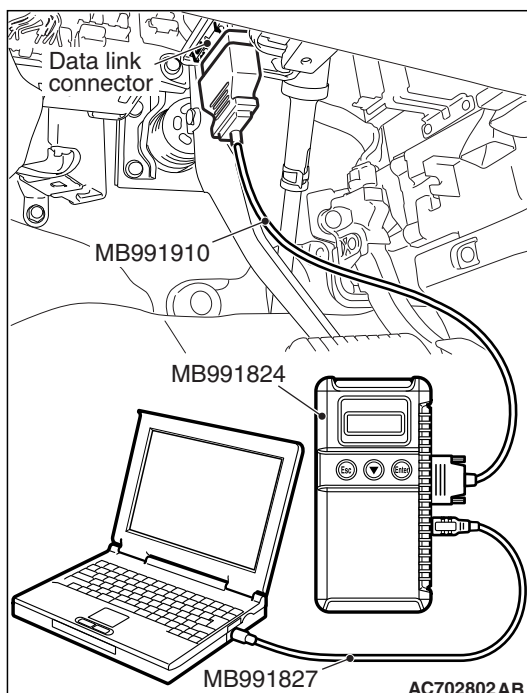

---

**STEP 2. Check whether the scan tool MB991958 can communicate with the radio and CD player.**

**Q: Is the check result normal?**

**YES :** Erase the diagnostic trouble code. This diagnosis is complete.

**NO :** Check the power supply circuit of the radio and CD player, and repair if necessary.

---

**DTC U0141: ETACS CAN timeout**

---

 **CAUTION**

If DTC U0141 is set, be sure to diagnose the CAN bus line.

 **CAUTION**

When replacing the radio and CD player, always check that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

If the signal from ETACS-ECU cannot be received, the radio and CD player sets the DTC U0141.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(10D fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with ETACS-ECU cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.


**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The radio and CD player may be defective
- The ETACS-ECU may be defective

**DIAGNOSIS**

**Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

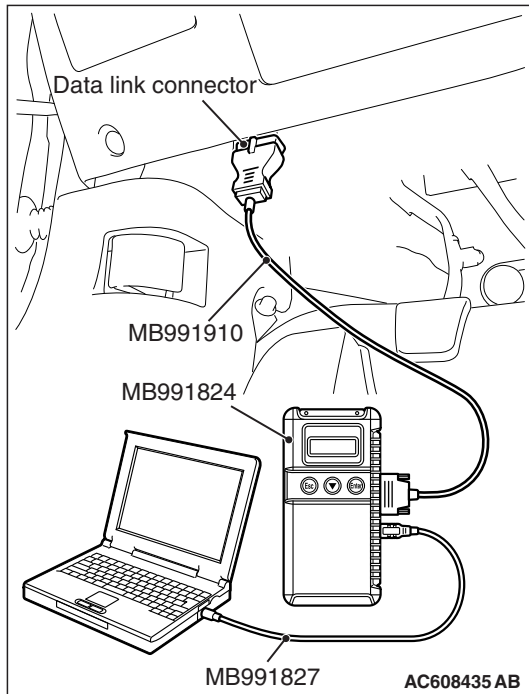

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Using scan tool MB991958, read the ETACS diagnostic trouble code.**

Check if DTC is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Diagnose the ETACS-ECU (Refer to [P.54A-742](#)).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the A/C diagnostic trouble code.**

Check if DTC U0141 is set to the A/C-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the ETACS-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the ETACS-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0151: SRS-ECU CAN timeout**

---

**⚠ CAUTION**

- If DTC U0151 is set, be sure to diagnose the CAN bus line.
- When replacing the radio and CD player, always check that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

If the signal from SRS-ECU cannot be received, the radio and CD player sets DTC U0151.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10-16 volts (data from ETACS-ECU), power supply fuse(10D fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with SRS-ECU cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The radio and CD player may be defective
- The SRS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line

#### **⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### **Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

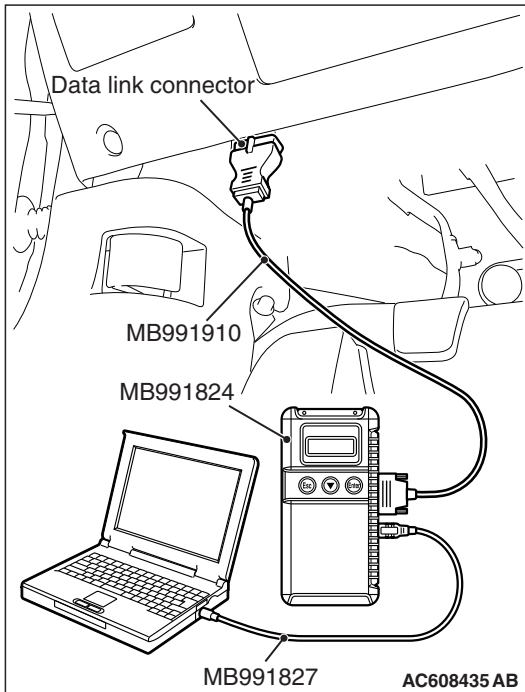

### STEP 2. Using scan tool MB991958, read the SRS-ECU diagnostic trouble code

Check again if the DTC is set to the SRS-ECU.

#### **Q: Is the DTC set?**

**YES :** Troubleshoot the SRS (Refer to GROUP 52B, Troubleshooting [P.52B-32](#)).

**NO :** Go to Step 3.

### STEP 3. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.

Check if the DTC U0151 is set to the A/C-ECU.

#### **Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the SRS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the SRS-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the SRS-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0154: OCM (occupant classification-ECU) CAN timeout**

---

 **CAUTION**

If DTC U0154 is set, be sure to diagnose the CAN bus line.

 **CAUTION**

When replacing the radio and CD player, always check that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

When the signals from occupant classification-ECU cannot be received, the radio and CD player sets DTC U0154.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with occupant classification-ECU cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The radio and CD player may be defective.
- The occupant classification-ECU may be defective.

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### **CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### **Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

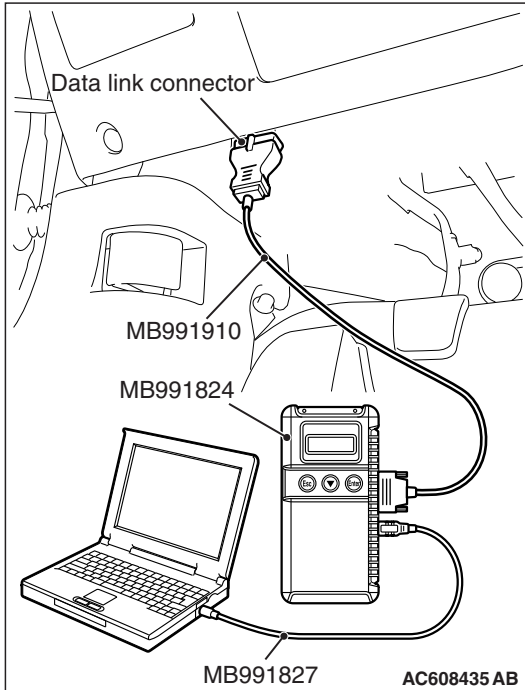

### STEP 2. Using scan tool MB991958, read the occupant classification-ECU diagnostic trouble code.

Check if DTC is set to the occupant classification-ECU.

#### **Q: Is the DTC set?**

**YES :** Troubleshoot the SRS (Refer to GROUP 52B, Diagnosis [P.52B-346](#)).

**NO :** Go to Step 3.

### STEP 3. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.

Check if the DTC U0154 is set to the A/C-ECU.

#### **Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the occupant classification-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the occupant classification-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the occupant classification-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0155: Meter CAN timeout**

---

 **CAUTION**

If DTC U0155 is set in the radio and CD player, diagnose the CAN main bus line.

 **CAUTION**

Whenever the radio and CD player is replaced, ensure that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

When the signals from combination meter cannot be received, the radio and CD player sets DTC U0155.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with combination meter cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The radio and CD player may be defective.
- The combination meter may be defective.



**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the combination meter.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the combination meter and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the combination meter and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0164: A/C CAN timeout**

---

**⚠ CAUTION**

- If DTC U0164 is set, be sure to diagnose the CAN bus line.
- When replacing the ECU, always check that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

If the signal from A/C-ECU cannot be received, the radio and CD player sets DTC U0164.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10-16 volts (data from ETACS-ECU), power supply fuse(10D fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with A/C-ECU cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The A/C-ECU may be defective.
- The radio and CD player may be defective.

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### **⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### **Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

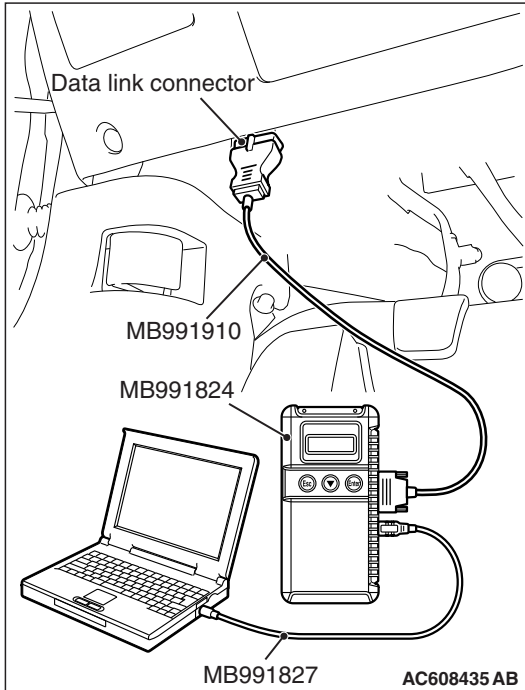

### STEP 2. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.

Check if DTC is set to the A/C-ECU.

#### **Q: Is the DTC set?**

**YES :** Troubleshoot the A/C. (Refer to GROUP 55A, Manual A/C Diagnosis [P.55A-11](#) GROUP 55B, Auto A/C Diagnosis [P.55B-8](#).)

**NO :** Go to Step 3.

### STEP 3. Using scan tool MB991958, read the ETACS diagnostic trouble code.

Check if the DTC U0164 is set to the ETACS-ECU.

#### **Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the A/C-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the A/C-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the A/C-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0168: WCM/KOS CAN timeout**

---

**⚠ CAUTION**

- If DTC U0168 is set, be sure to diagnose the CAN bus line.
- When replacing the radio and CD player, always check that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

If the signal from KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM> cannot be received, the radio and CD player sets DTC U0168.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 V (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM> cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- Malfunction of CAN bus line may be defective.
- Malfunction of the KOS-ECU may be defective. <vehicles with KOS>
- Malfunction of the WCM may be defective. <vehicles with WCM>
- Malfunction of radio and CD player may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

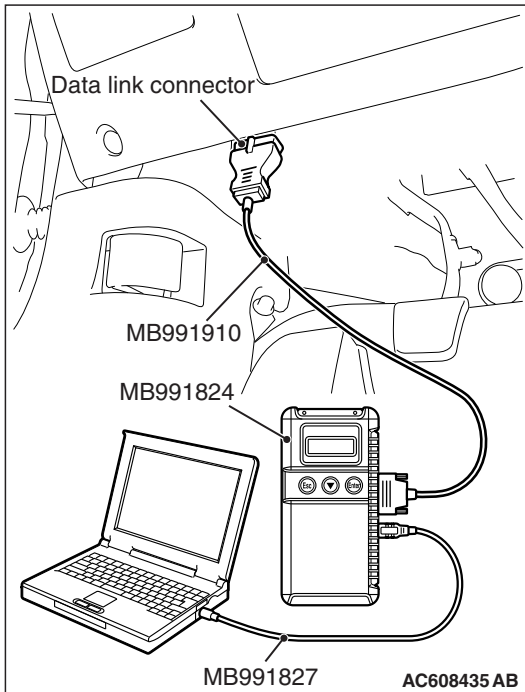**STEP 2. Using scan tool MB991958, read the KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM> diagnostic trouble code.**

Check again if the DTC is set to the KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM>.

**Q: Is the DTC set?**

**YES :** Troubleshoot the KOS or WCM (Refer to GROUP 42B, Diagnosis [P.42B-31](#) <KOS> or GROUP 42C, Diagnosis [P.42C-18](#) <WCM>).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the diagnostic trouble code.**

Check if the DTC U0168 is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the WCM or KOS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the WCM or KOS-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the WCM or KOS-ECU and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0195: Satellite radio CAN timeout**

---

 **CAUTION**

If DTC U0195 is set in the radio and CD player, diagnose the CAN main bus line.

 **CAUTION**

Whenever the ECU is replaced, ensure that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

When the signals from satellite radio tuner cannot be received, the radio and CD player sets DTC U0195.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with satellite radio tuner cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The radio and CD player may be defective.
- The satellite radio tuner may be defective.

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line

#### CAUTION


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### Q: Is the CAN bus line found to be normal?

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

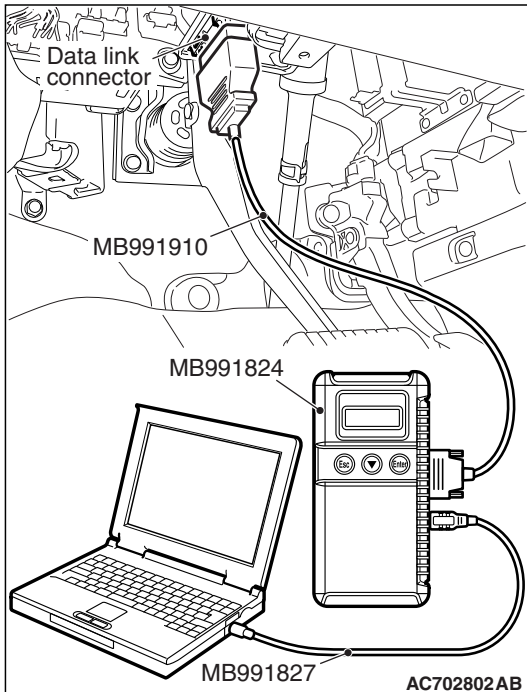

### STEP 2. Using scan tool MB991958 read the satellite radio tuner diagnostic trouble code.

Check whether a satellite radio tuner DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for satellite radio tuner DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

#### Q: Is the DTC set?

**YES** : Diagnose the satellite radio tuner. (Refer to [P.54A-655](#).)

**NO** : Go to Step 3.

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0197: Hands free module CAN timeout**

---

**⚠ CAUTION**

- If DTC U0197 is set, be sure to diagnose the CAN bus line.
- When replacing the radio and CD player, always check that the communication circuit is normal.

**DIAGNOSTIC FUNCTION**

When the signals from hands free module cannot be received, the radio and CD player sets DTC U0197.

**JUDGMENT CRITERIA**


With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with hands free module cannot be established for 2,500 ms or more, the radio and CD player determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The radio and CD player may be defective.
- The hands free module may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

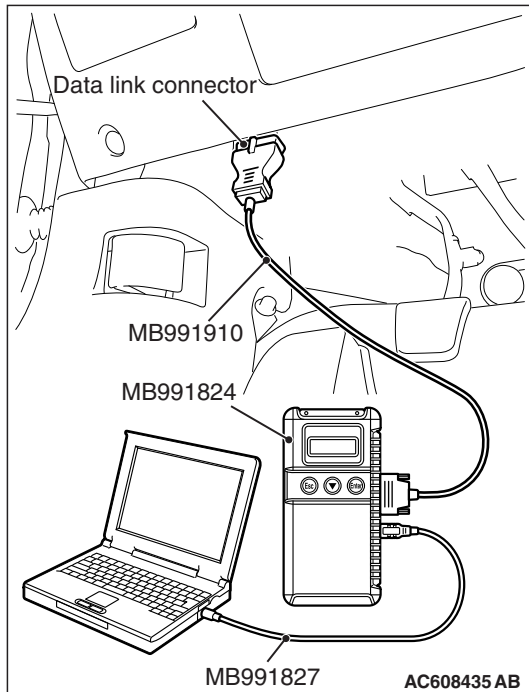

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Using scan tool MB991958, read the hands free module diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for hands free module DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Troubleshoot the hands-free cellular phone system.  
(Refer to [P.54A-592](#).)

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the DTC U0197 is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the hands free module.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the hands free module and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the hands free module and the radio and CD player (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U1415: Coding not completed/Data fail**

---

** CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

** CAUTION**

Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

**TROUBLE JUDGMENT**

When the vehicle information data is not registered to the audio unit, the radio and CD player sets the DTC No.U1415.

**COMMENTS ON TROUBLE SYMPTOM**

The audio unit, ETACS-ECU, or CAN bus line may have a problem.

**PROBABLE CAUSES**

- Malfunctions of audio unit
- Malfunction of the ETACS-ECU
- Malfunction of CAN bus line wiring harness and connector

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

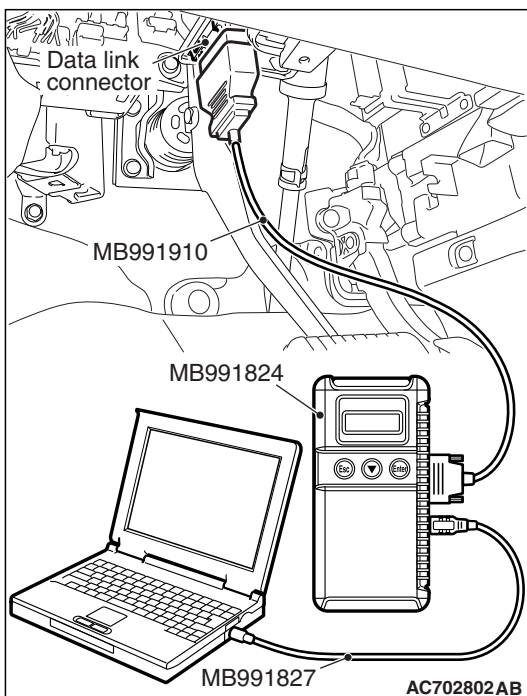**STEP 2. Using scan tool MB991958, read the other system DTC.**

Check if the diagnostic trouble code relating to the coding error is set to the ETACS-ECU.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the ETACS-ECU (Refer to GROUP 54A, ETACS-ECU, Diagnosis [P.54A-742](#)), and then go to Step 3.

**NO :** Go to Step 3.

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC B2420: Power integrated circuit**

---

 **CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

 **CAUTION**

Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

**TROUBLE JUDGMENT**

If the radio and CD player continuously apply the voltage of two volts or more to the speakers for one minute or more, it is determined that the offset voltage is exceeded, and then the diagnostic trouble code is set.

**COMMENTS ON TROUBLE SYMPTOM**


The radio and CD player or CAN bus line may have a problem.

**PROBABLE CAUSES**

- Malfunctions of radio and CD player
- Malfunction of CAN bus line wiring harness and connector

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

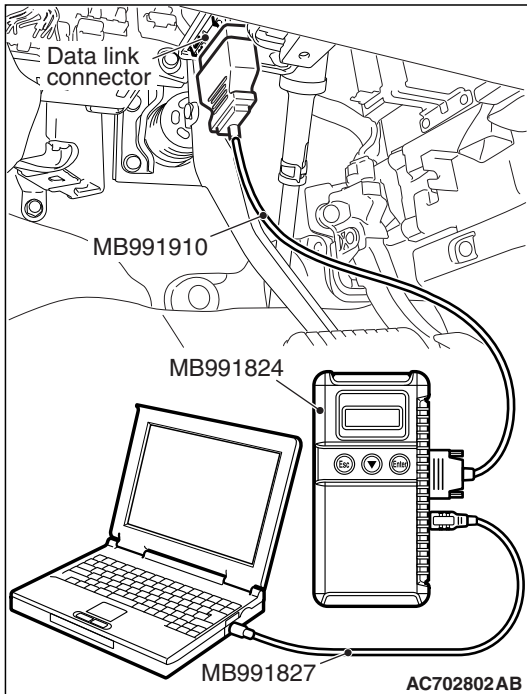

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the diagnostic trouble code set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

## DTC B2421: Radio tuner

**⚠ CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

**⚠ CAUTION**

Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

**TROUBLE JUDGMENT**

If the communication cannot be established consecutively for 10 times between the incorporated tuner of radio and CD player and the microcomputer, the diagnostic trouble code is set.

**COMMENTS ON TROUBLE SYMPTOM**

The radio and CD player or CAN bus line may have a problem.

**PROBABLE CAUSES**

- Malfunctions of radio and CD player
- Malfunction of CAN bus line wiring harness and connector

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

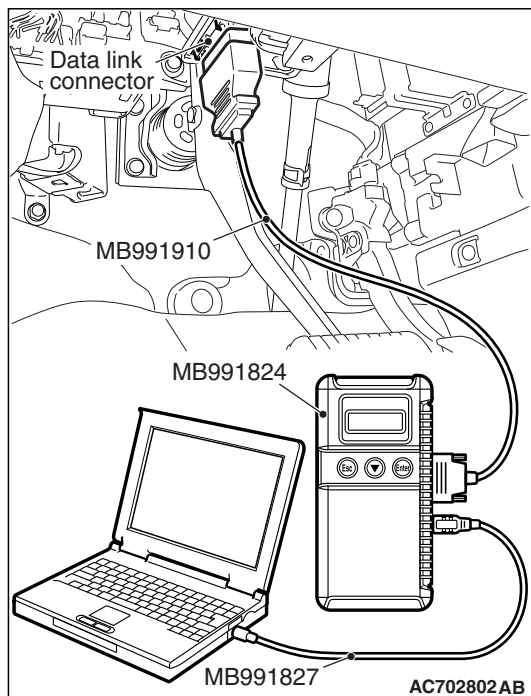

---

**STEP 2. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC B2423: 6 CD player error**

---

** CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

** CAUTION**

Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

**TROUBLE JUDGMENT**

During the use of the CD changer of radio and CD player, if any of the ERROR, ERROR01, ERROR02, ERROR03, ERROR DC or ERROR HOT continues for 1 minute, the diagnostic trouble code is set.

**COMMENTS ON TROUBLE SYMPTOM**


The radio and CD player or CAN bus line may have a problem.

**PROBABLE CAUSES**

- Malfunctions of radio and CD player
- Malfunction of CAN bus line wiring harness and connector

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

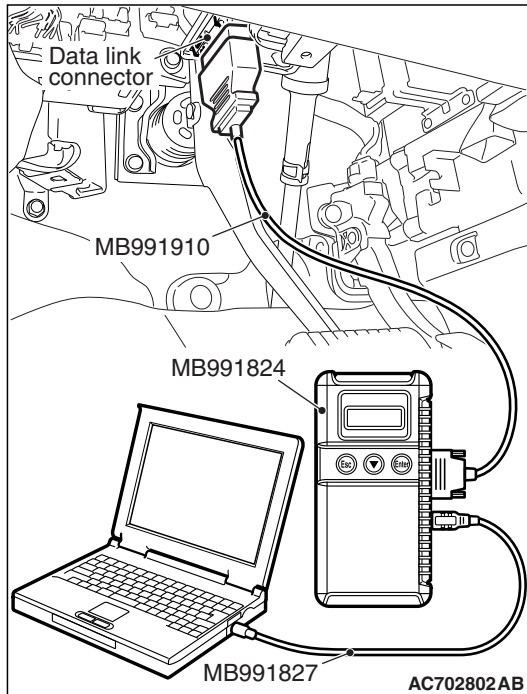**STEP 1. Using scan tool MB991958, diagnose the CAN bus line****⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. CD check**

Playback a clean and unscratched CD for one minute, and recheck if the diagnostic trouble code is set to the radio and CD player.

- (1) Erase the diagnostic trouble code.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Playback the clean, unscratched CD for one minute.
- (4) Check if diagnostic trouble code is set.

**Q: Is the DTC set?**

**YES** : Go to Step 3.

**NO** : Clean the CD, use a CD without scratches and burrs, or remove the CD burrs, and then reinsert the CD.

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES** : Replace the radio and CD player.

**NO** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

**DTC B2424: CD player error****⚠ CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

**⚠ CAUTION**

Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

**TROUBLE JUDGMENT**

During the use of the CD player of radio and CD player, if any of the ERROR, ERROR01, ERROR02, ERROR03, ERROR DC or ERROR HOT continues for 1 minute, the diagnostic trouble code is set.

**COMMENTS ON TROUBLE SYMPTOM**

The radio and CD player or CAN bus line may have a problem.

**PROBABLE CAUSES**

- Malfunctions of radio and CD player
- Malfunction of CAN bus line wiring harness and connector

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

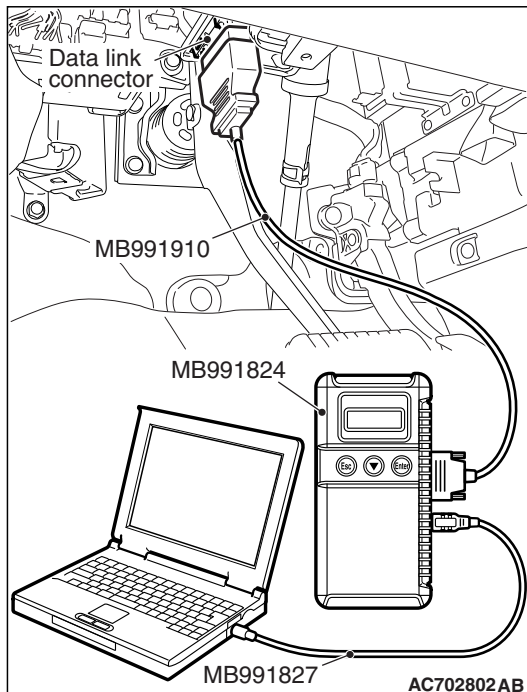

**STEP 2. CD check**

Playback a clean and unscratched CD for one minute, and recheck if the diagnostic trouble code is set to the radio and CD player.

- (1) Erase the diagnostic trouble code.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Playback the clean, unscratched CD for one minute.
- (4) Check if diagnostic trouble code is set.

**Q: Is the diagnostic trouble code set?**

**YES** : Go to Step 3.

**NO** : Clean the CD, use a CD without scratches and burrs, or remove the CD burrs, and then reinsert the CD.

---

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES** : Replace the radio and CD player.

**NO** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

## Code No.B2450 Switch panel communication


**⚠ CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set.  
Prior to this diagnosis, always diagnose the CAN bus lines.

**⚠ CAUTION**


Before replacing the radio and CD player, be sure to check that the power supply circuit, ground circuit, and communication circuit are normal.

## Center Panel Unit Power Supply Circuit

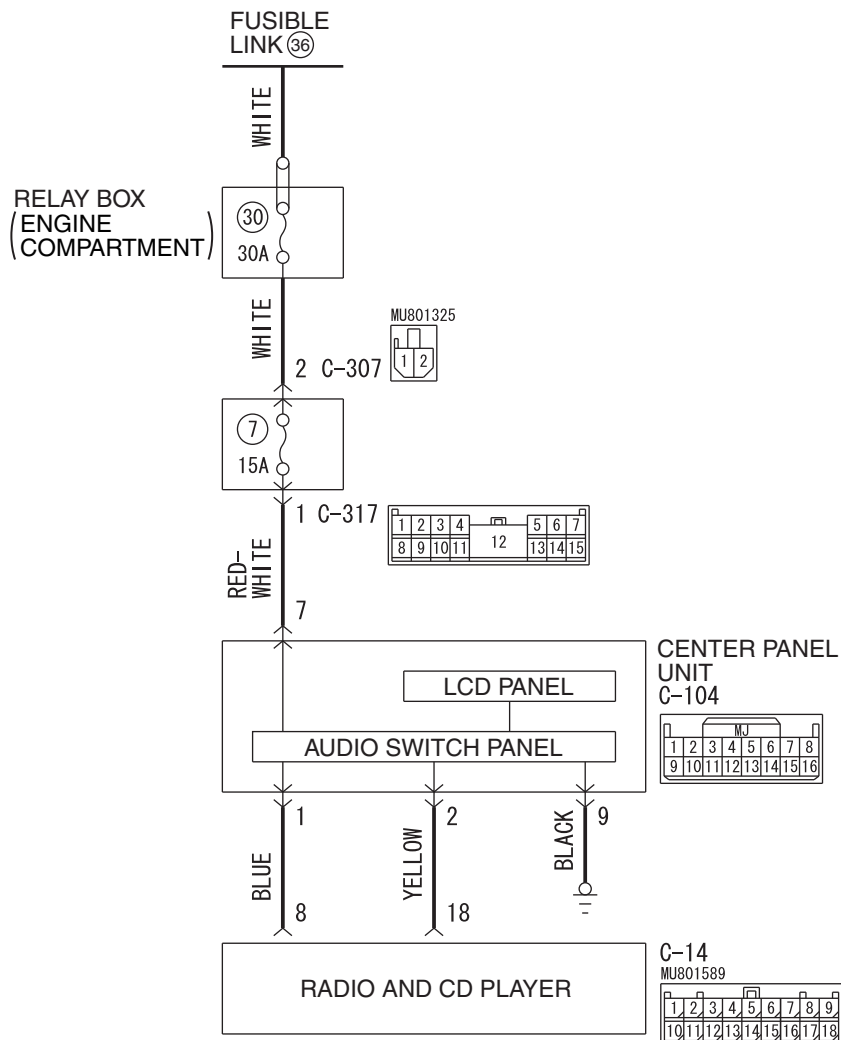


W9G54M007A

Connector: C-307, C-317

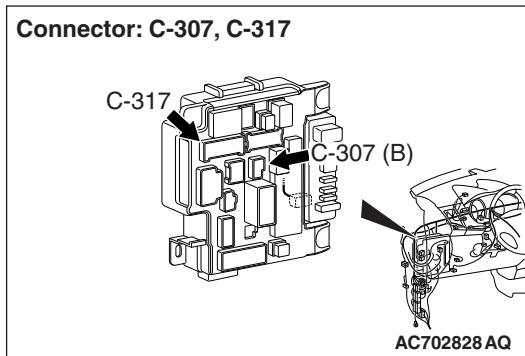

Connectors: C-14, C-104

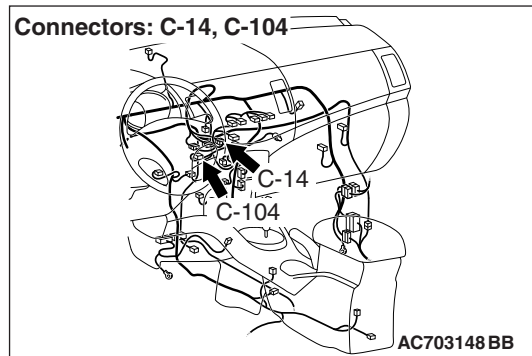

## TROUBLE JUDGMENT

If the radio and CD player cannot establish the communication with center panel assembly for 1 minute or more, the diagnostic trouble code is set.

## COMMENTS ON TROUBLE SYMPTOM

The radio and CD player, center panel assembly, or CAN bus line may have a problem.


## PROBABLE CAUSES

- Malfunctions of radio and CD player
- Malfunction of center panel assembly
- Malfunction of CAN bus line wiring harness and connector

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

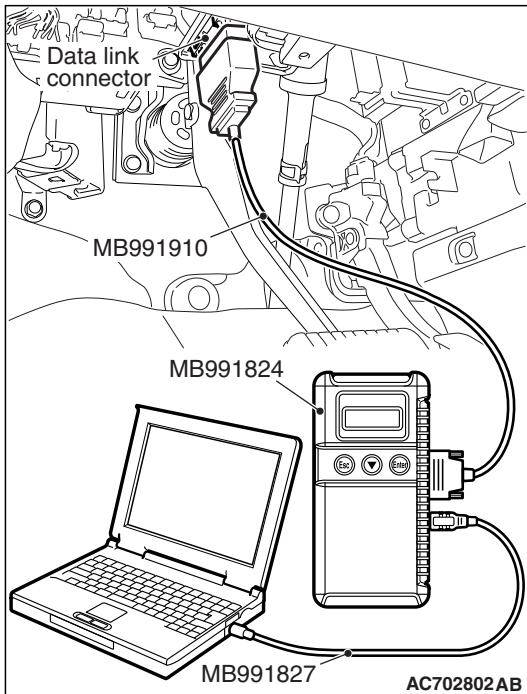

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#).) On completion, go to Step 2.

**STEP 2. Check center panel unit connector C-104 and radio and CD player connector C-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are center panel unit connector C-104 and radio and CD player connector C-14 in good condition?**

**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s) (Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#)).


**STEP 3. Check the wiring harness between center panel unit connector C-104 (terminal 1, 2) and radio and CD player connector C-14 (terminal 8, 18).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 1, 2) and radio and CD player connector C-14 (terminal 8, 18) in good condition?**

**YES :** Go to Step 4.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

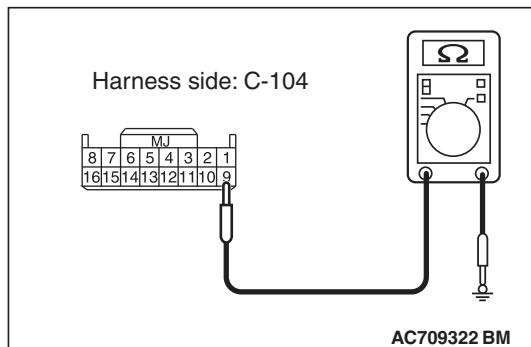

**STEP 4. Check the ground circuit to the center panel unit. Measure the resistance at center panel unit connector C-104.**

- (1) Disconnect the connector, and measure at the wiring harness side.
- (2) Measure resistance between terminal 9 and ground.

**OK: The resistance should be 2 ohm or less.**

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 6.

**NO :** Go to Step 5.


**STEP 5. Check the wiring harness between center panel unit connector C-104 (terminal 9) and ground.**

- Check the ground wires for open circuit.

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 9) and ground in good condition?**

**YES :** Go to Step 8.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

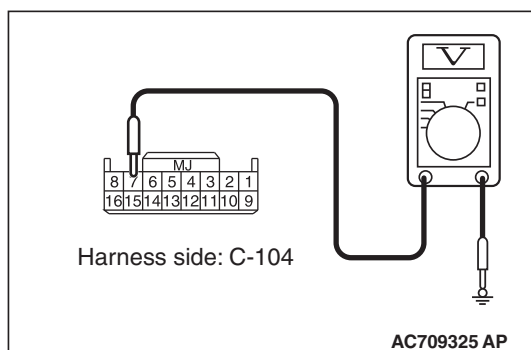

**STEP 6. Check the power supply circuit to the center panel unit. Measure the voltage at center panel unit connector C-104.**

- (1) Disconnect the connector, and measure at the harness side connector.
- (2) Measure voltage between terminal 7 and ground.

**OK: Battery positive voltage**

**Q: Is the measured voltage battery voltage?**

**YES :** Go to Step 8.

**NO :** Go to Step 7.

---

**STEP 7. Check the wiring harness between center panel unit connector C-104 (terminal 7) and fusible link (36).**

- Check the power supply line for open circuit and short circuit.

*NOTE: Also ETACS-ECU connector C-307, C-317 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector ETACS-ECU connector C-307, C-317 are damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the wiring harness between center panel unit connector C-124 (terminal 7) and fusible link (36) in good condition?**

**YES :** Go to Step 8.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 8. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES :** Go to Step 9.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction P.00-15).

---

**STEP 9. Recheck for diagnostic trouble code.**

Temporarily replace the center panel unit, and recheck whether the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** Replace the center panel unit.

**DTC B2451: Audio panel type error****⚠ CAUTION**

If there is any problem in the CAN bus lines, an incorrect diagnostic trouble code may be set. Prior to this diagnosis, always diagnose the CAN bus lines.

**TROUBLE JUDGMENT**

If the radio and CD player consecutively receive the display trouble signal from the center panel assembly for 1 minute, the diagnostic trouble code is set.

**COMMENTS ON TROUBLE SYMPTOM**

The center panel assembly or CAN bus line may have a problem.

**PROBABLE CAUSES**

- Malfunction of center panel assembly
- Malfunction of CAN bus line wiring harness and connector

**DIAGNOSIS**

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

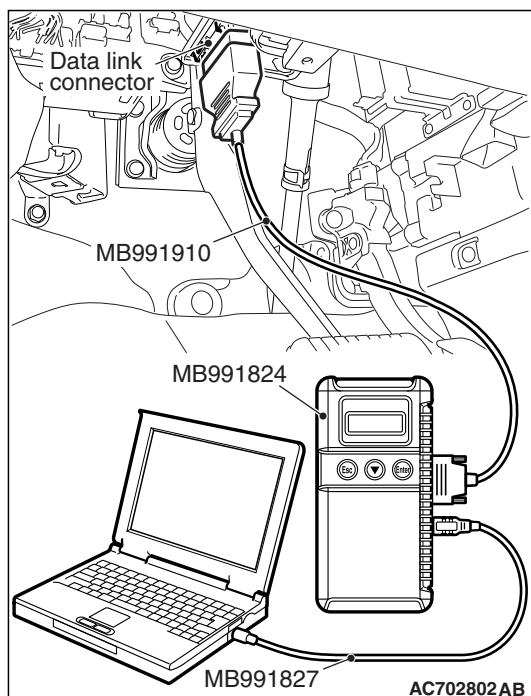

**STEP 2. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the radio and CD player.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if the DTC is set.

**Q: Is the DTC set?**

**YES :** Replace the radio and CD player.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

## TROUBLE SYMPTOM CHART

M1544004901670

Trouble symptom	Inspection procedure No.	Reference page
Power is not turned ON when the power switch is turned ON.	1	<a href="#">P.54A-372</a>
No sound is heard. <vehicles with audio amplifier>	2	<a href="#">P.54A-376</a>
No sound is heard from one of the speakers. <vehicles without audio amplifier>	3	<a href="#">P.54A-383</a>
No sound is heard from one of the speakers. <vehicles with audio amplifier>		<a href="#">P.54A-394</a>
The audio does not operate normally by operating the radio and CD player of the center panel unit.	4	<a href="#">P.54A-407</a>
Audio illuminations does not work normally.	5	<a href="#">P.54A-411</a>
The sound of external input are not played. <Vehicles with audio adapter>	6	<a href="#">P.54A-416</a>
Noise appears at certain places when traveling (AM).	7	<a href="#">P.54A-418</a>
Noise is present while moving (FM).	8	<a href="#">P.54A-419</a>
Sound mixed with noise, only at night (AM).	9	<a href="#">P.54A-420</a>
Broadcasts can be heard, but both AM and FM have a lot of noise.	10	<a href="#">P.54A-420</a>
There is more noise on either AM or FM.	11	<a href="#">P.54A-421</a>
Noise sometimes appears on FM during traveling.	12	<a href="#">P.54A-422</a>
Noise is detected with engine running.	13	<a href="#">P.54A-423</a>
Noise appears during vibration or shocks.	14	<a href="#">P.54A-424</a>
Ever-present noise.	15	<a href="#">P.54A-425</a>
Noise comes out, but neither AM nor FM sounds.	16	<a href="#">P.54A-425</a>
Poor reception.	17	<a href="#">P.54A-426</a>
Distortion on AM or on both AM and FM.	18	<a href="#">P.54A-427</a>
Distortion on FM only.	19	<a href="#">P.54A-427</a>
Using the auto select function, too few automatic stations are selected.	20	<a href="#">P.54A-427</a>
Preset stations are erased.	21	<a href="#">P.54A-428</a>
CD cannot be inserted.	22	<a href="#">P.54A-428</a>
No sound (CD only).	23	<a href="#">P.54A-429</a>
CD sound skips.	24	<a href="#">P.54A-429</a>
Sound quality is poor.	25	<a href="#">P.54A-430</a>
CD cannot be ejected.	26	<a href="#">P.54A-430</a>


## SYMPTOM PROCEDURES

**INSPECTION PROCEDURE 1: Power is not turned ON when the power switch is turned ON.**

**⚠ CAUTION**


Before replacing the radio and CD player, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

Radio and CD Player Power Supply Circuit

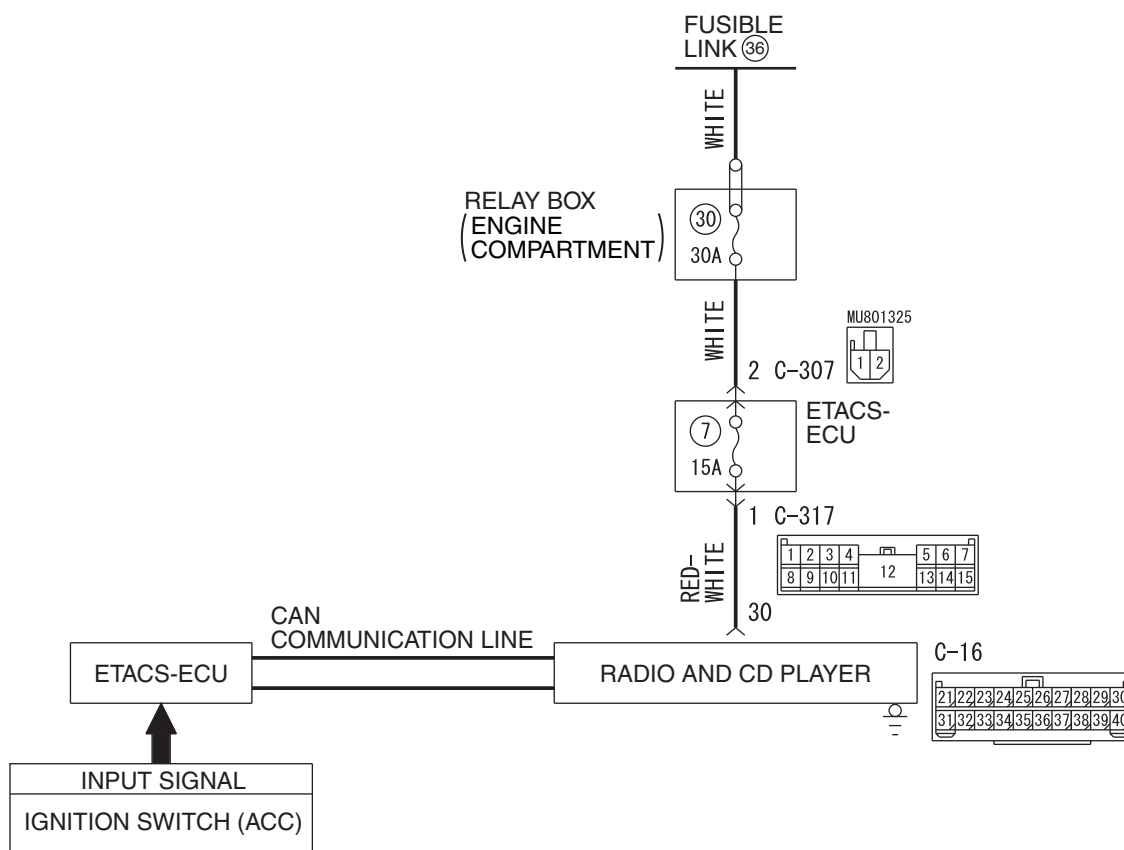


W9G54M008A

Connector: C-16

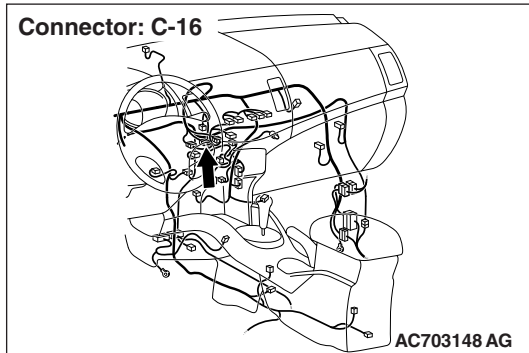

Connectors: C-317, C-307

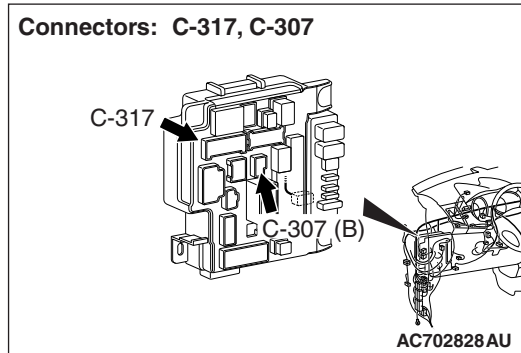

**OPERATION**

When the ignition switch is in the ON or ACC position, the radio and CD player power can be turned ON. With the radio and CD player power ON, when the ignition switch is turned to the OFF position, the power for radio and CD player is also turned OFF.

**COMMENTS ON TROUBLE SYMPTOM**


Provided that the audio diagnostic trouble code is not set, if the power for radio and CD player cannot be turned ON, the radio and CD player, or power supply circuit for radio and CD player may have a problem, or the option coding information may be inconsistent.

**PROBABLE CAUSES**

- Malfunctions of radio and CD player
- Malfunction of the ETACS-ECU
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

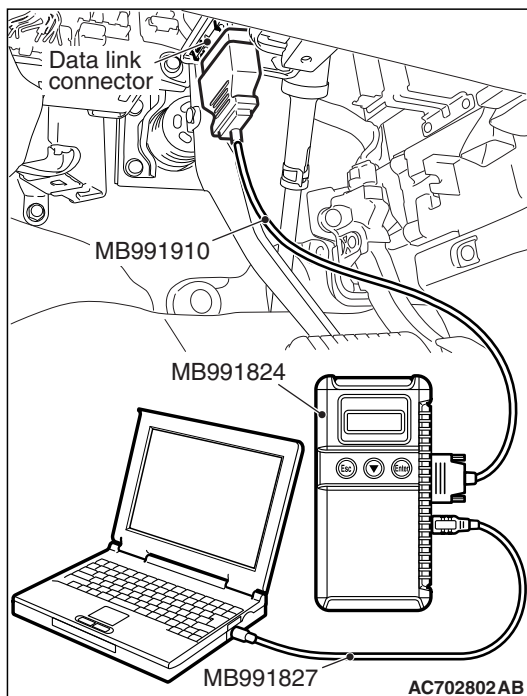**STEP 1. ETACS-ECU coding data check.**

- (1) Operate scan tool MB991958 to read the ETACS-ECU option coding information. (Refer to GROUP 00, Coding List [P.00-35.](#))
- (2) Check that the "AUDIO" is set to "Present."

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Operate scan tool MB991958 to set the option coding "AUDIO" to "Present," and check the trouble symptom.

**STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Troubleshoot the ETACS-ECU (Refer to GROUP 54A, ETACS, Diagnosis [P.54A-742](#)), and then go to Step 3.

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, check data list.**

Check if ETACS-ECU related signal is set.

- Turn the ignition switch to the ON position.
- selector lever is "R" (Reverse) position

Item No.	Item name	Normal conditions
289	shift reverses SW	ON

**OK:** Normal condition is displayed.

**Q:** Is the check result normal?

**YES :** Go to step 8.

**NO :** Go to step 4.

**STEP 4. Check ETACS-ECU connector C-313 and inhibitor switch connector B-110 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q:** Are ETACS-ECU connector C-313 and inhibitor switch connector B-110 in good condition?

**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection

[P.00E-2.](#)

**STEP 5. Check the power supply circuit to the radio and CD player. Measure the voltage at radio and CD player connector C-16.**

(1) Disconnect the connector, and measure at the wiring harness-side connector.


(2) Measure the voltage between terminal 30 and ground.

**OK:** The voltage should measure approximately 12 volts (battery positive voltage).

**Q:** Is the measured voltage battery voltage?

**YES :** Go to Step 7.

**NO :** Go to Step 6.

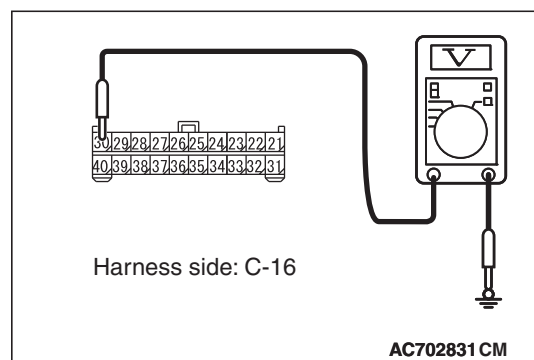

---

**STEP 6. Check the wiring harness between fusible link (36) and radio and CD player connector C-16 (terminal 30).**

- Check the power supply lines (battery power supply) for open circuit and short circuit.

**Q: Is the wiring harness between fusible link (36) and radio and CD player connector C-16 (terminal 30) in good condition?**

**YES :** Go to Step 7.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Check that the radio and CD player is correctly grounded**

The radio and CD player should be connected to the ground with an assembling screw.

**Q: Is the radio and CD player correctly grounded?**

**YES :** Go to Step 8.

**NO :** Securely install and ground the radio and CD player.

---

**STEP 8. Retest the system**

Check if the radio and CD player power is turned ON.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the radio and CD player.

### CAUTION


## Audio System Circuit




Connectors: C-14, C-22

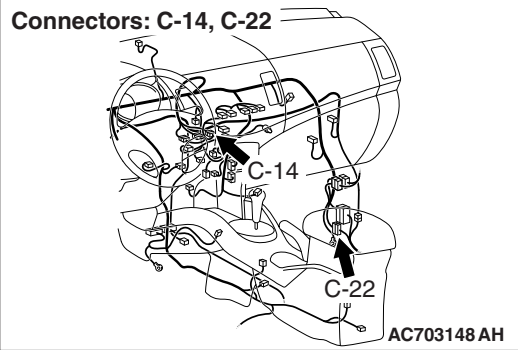

Connectors: D-126, D-127

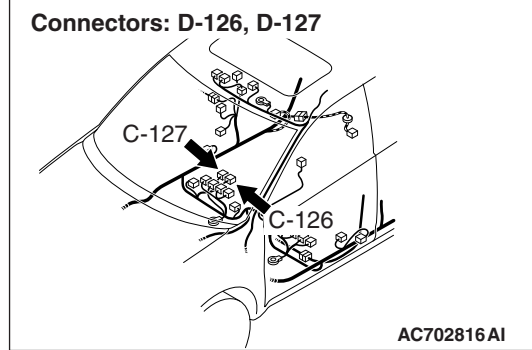

Connector: C-129

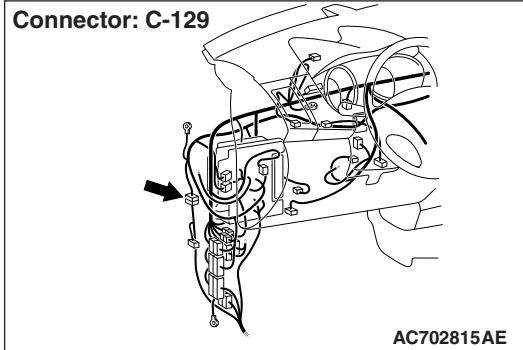

### COMMENTS ON TROUBLE SYMPTOM


If the audio sound is not output, the radio and CD player, audio amplifier, or power supply circuit of audio amplifier may have a problem, or the option coding information may be inconsistent.

### PROBABLE CAUSES

- Malfunctions of radio and CD player
- Malfunction of audio amplifier
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

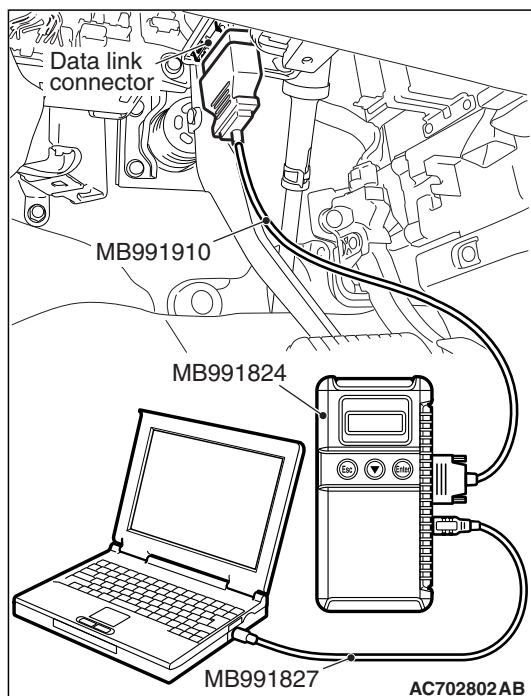**STEP 1. Check the ETACS-ECU coding data.**

- (1) Operate the scan tool MB991958 to read the ETACS-ECU option coding information. (Refer to GROUP 00, Coding List [P.00-35.](#))
- (2) Check that the "Number of speaker" is set to "Premium."

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Operate scan tool MB991958 to set the option coding "Speaker" to "Number of speaker," and check the trouble symptom.

**STEP 2. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is audio amplifier connector D-126 in good condition?**




**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2.](#)

**STEP 3. Check the ground circuit to the rear monitor.  
Measure the resistance at audio amplifier connector D-126.**

- (1) Disconnect audio amplifier connector D-126, and measure the resistance available at the wiring harness side of the connector.
- (2) Measure the resistance between terminal 24 and ground.

**OK: The resistance should be 2 ohms or less.**

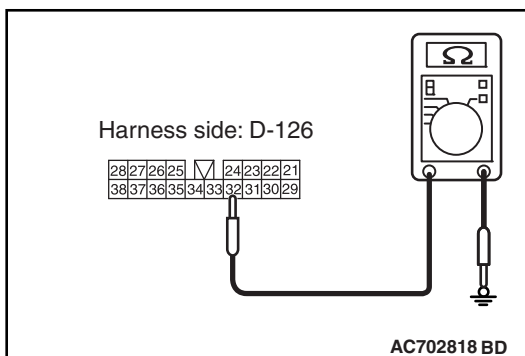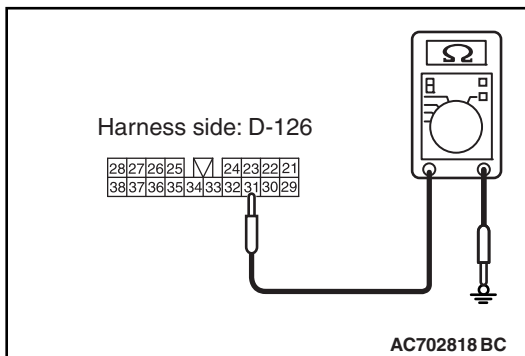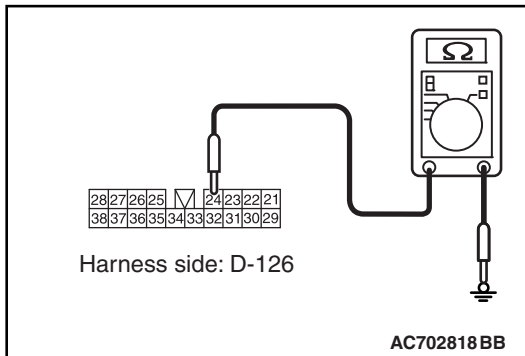

- (3) Measure the resistance between terminal 31 and ground.

**OK: The resistance should be 2 ohms or less.**

- (4) Measure the resistance between terminal 32 and ground.

**OK: The resistance should be 2 ohms or less.**

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 5.

**NO :** Go to Step 4.




**STEP 4. Check the wiring harness between audio amplifier connector D-126 (terminal 24, 31, 32) and ground.**

- Check the ground wires for open circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 24, 31, 32) and ground in good condition?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

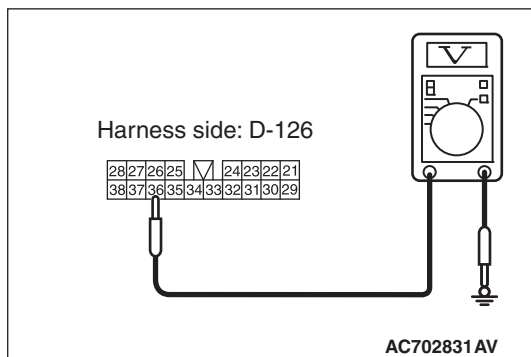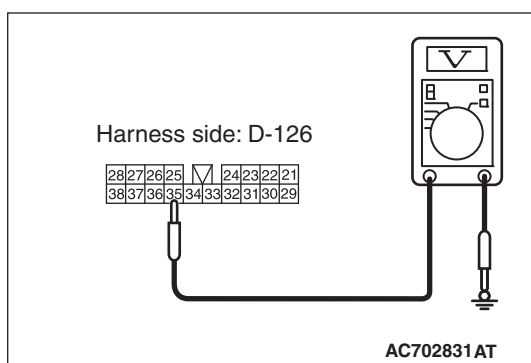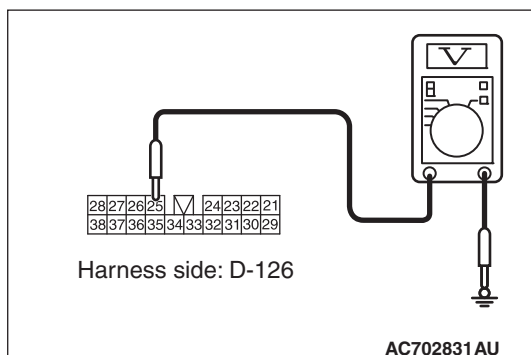

**STEP 5. Check the power supply circuit to the ETACS-ECU.  
Measure the voltage at audio amplifier connector D-126.**

- (1) Disconnect audio amplifier connector D-126, and measure the voltage available at the wiring harness-side connector.
- (2) Measure the voltage between terminal 25 and ground.

**OK: The voltage should measure approximately 12 volts (battery positive voltage).**

- (3) Measure the voltage between terminal 35 and ground.

**OK: The voltage should measure approximately 12 volts (battery positive voltage).**

- (4) Measure the voltage between terminal 36 and ground.

**OK: The voltage should measure approximately 12 volts (battery positive voltage).**

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 7.

**NO :** Go to Step 6.

**STEP 6. Check the wiring harness between audio amplifier connector D-126 (terminal 25, 35, 36) and fusible link (36).**

- Check the power supply lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 25, 35, 36) and fusible link (36) in good condition?**

**YES :** Go to Step 7.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Check radio and CD player connector C-14 and audio amplifier connector C-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are radio and CD player connector C-14 and audio amplifier C-127 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 8. Check the wiring harness between radio and CD player connector C-14 (terminal 17) and audio amplifier connector D-127 (terminal 3)**

- Check the communication line for open circuit and short circuit.

*NOTE: Also check intermediate connector C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between radio and CD player connector C-14 (terminal 17) and audio amplifier connector D-127 (terminal 3) in good condition?**

**YES :** Go to Step 9.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 9. Check the wiring harness between radio and CD player connector C-14 (terminal 7) and audio amplifier connector D-126 (terminal 34)**

- Check the communication line for open circuit and short circuit.

*NOTE: Also check intermediate connector C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between radio and CD player connector C-14 (terminal 7) and audio amplifier connector D-126 (terminal 34) in good condition?**

**YES :** Go to Step 10.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 10. Retest the system**

Replace the audio amplifier, then check that the audio sound is output.


**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the radio and CD player.

**INSPECTION PROCEDURE 3: No sound is heard from one of the speakers. <Vehicles without audio amplifier>****CAUTION**


Before replacing the radio and CD player, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

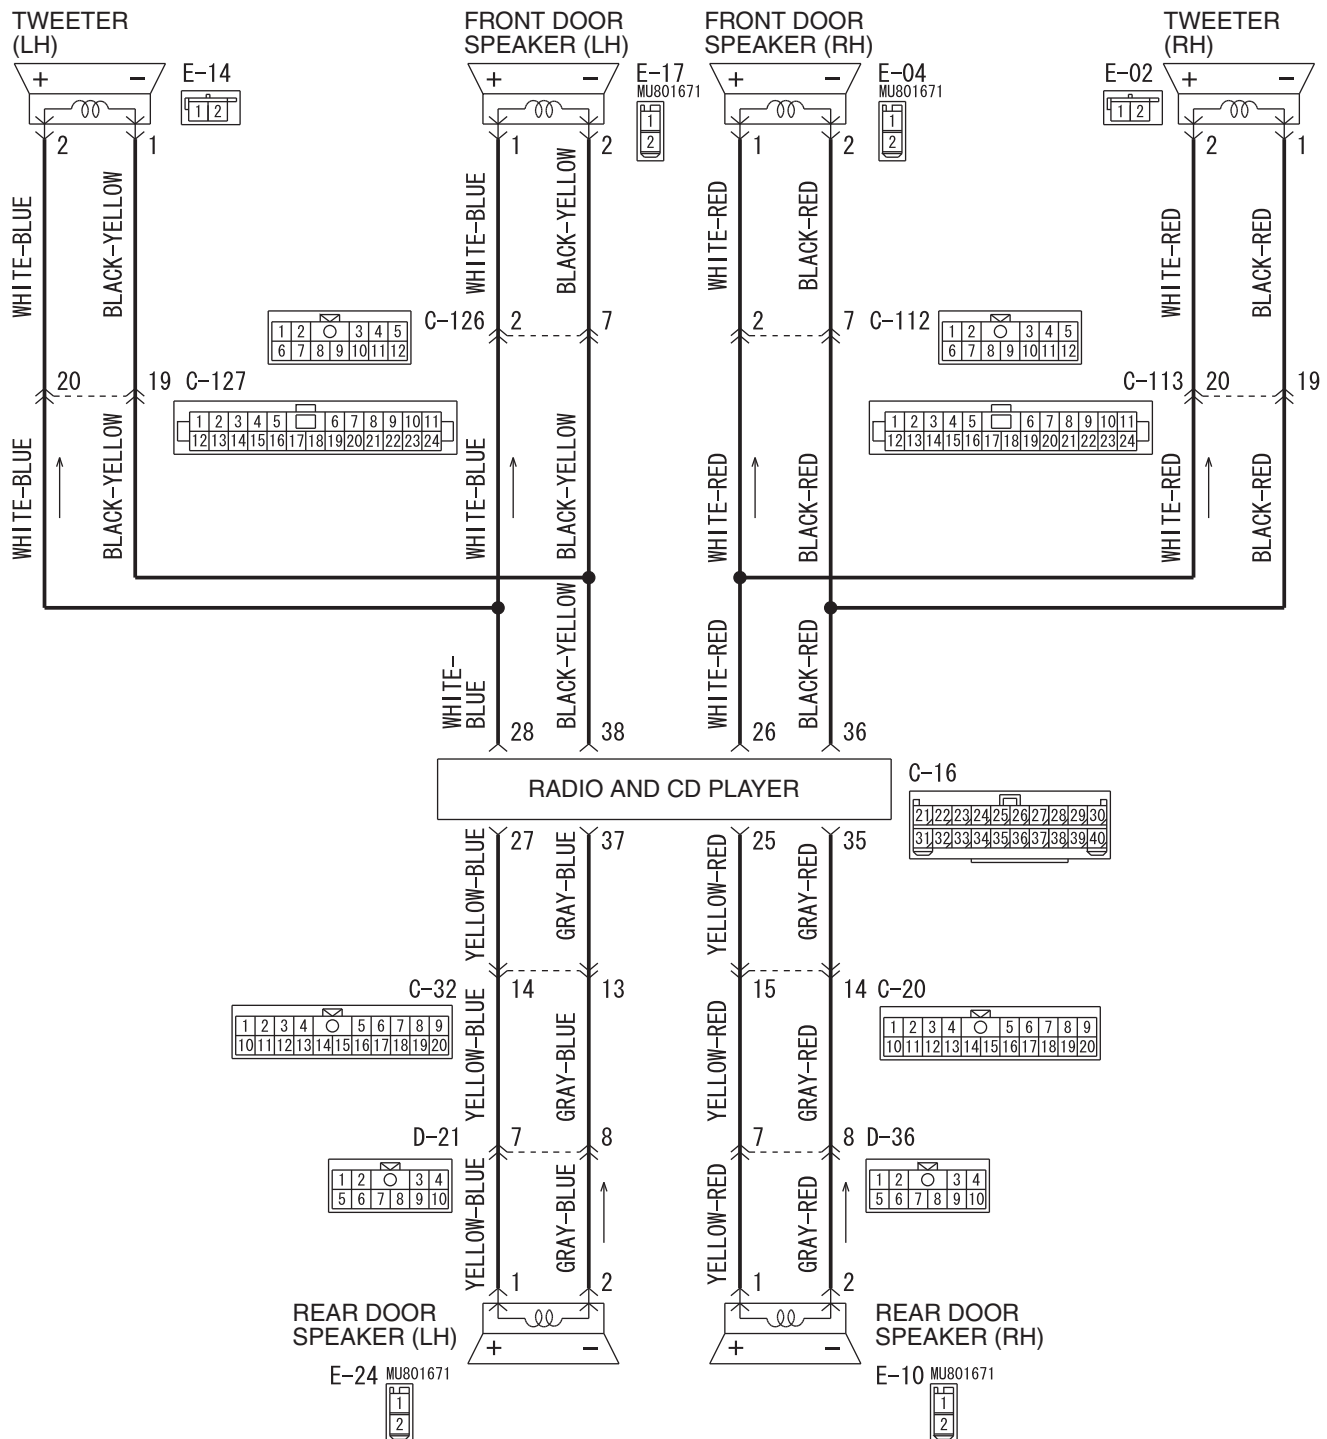**Speaker System Circuit**


Connectors: C-16, C-20, C-112, C-113

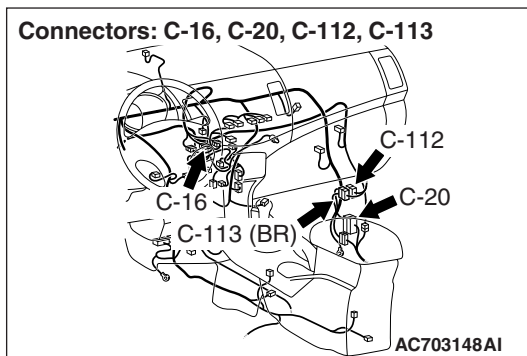


Connector: D-36

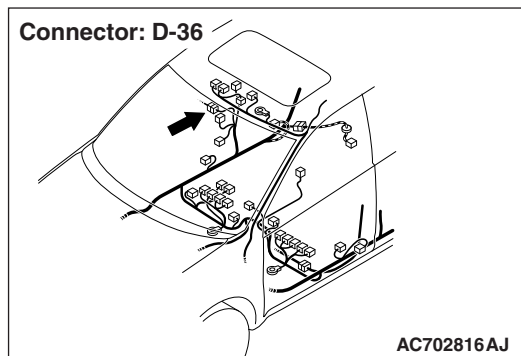


Connectors: C-32, C-126, C-127

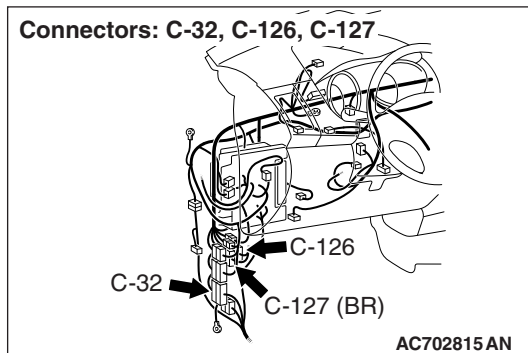

Connectors: E-02, E-04, E-10, E-14, E-17, E-24

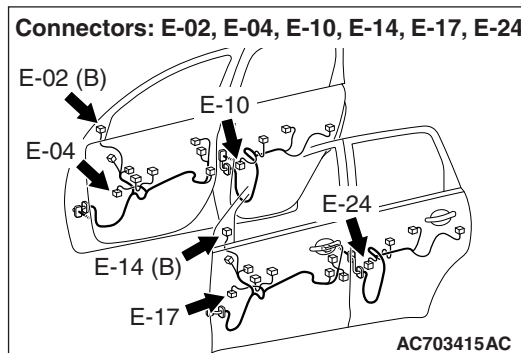

Connector: D-21

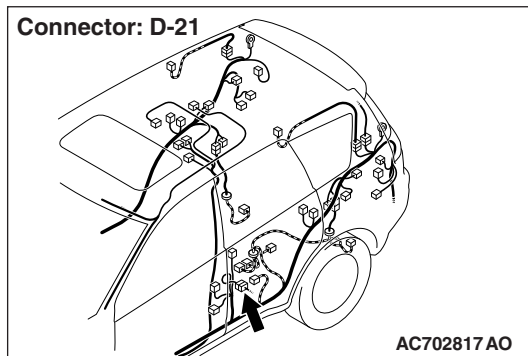**COMMENTS ON TROUBLE SYMPTOM**


If the sound is not output from one of the speakers, the speaker, radio and CD player, communication line from the radio and CD player to the speakers may have a problem.

**PROBABLE CAUSES**

- Malfunction of speaker
- Malfunctions of radio and CD player
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

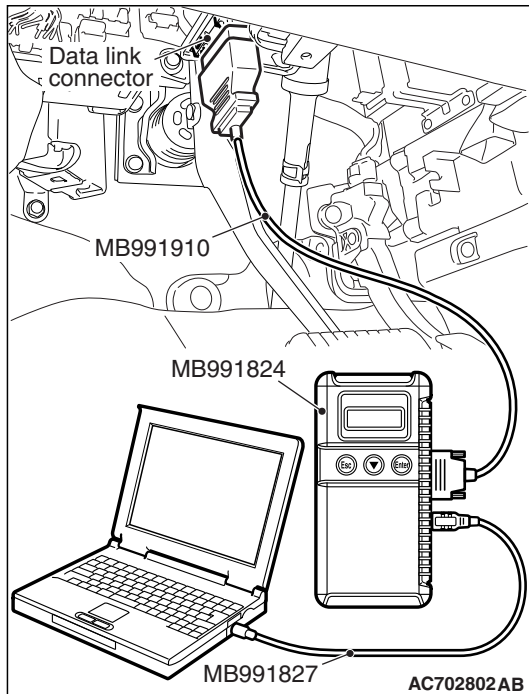**STEP 1. ETACS-ECU coding data check.**

- (1) Operate the scan tool to read the ETACS-ECU option coding information. (Refer to GROUP 00, Coding List [P.00-35](#).)
- (2) Check that the "Number of speaker" is set to "6 speakers" or "4 speakers."

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Operate the scan tool to set the option coding "Number of speaker" to "6 speakers" or "4 speakers," and check the trouble symptom.

**STEP 2. Checking with speaker test.**

Perform the speaker test, and check which speaker does not output the sound. Refer to [P.54A-698](#).

**Q: Is the check result normal?**

**YES <normal for all> :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO <abnormal for all> :** Go to Step 27.

**NO <only front door speaker (RH) is abnormal> :** Go to Step 3.

**NO <only front door speaker (LH) is abnormal> :** Go to Step 7.

**NO <only rear door speaker (RH) is abnormal> :** Go to Step 11.

**NO <only rear door speaker (LH) is abnormal> :** Go to Step 15.

**NO <only tweeter (RH) vehicles with 6 speakers is abnormal> :** Go to Step 19.


**NO <only tweeter (LH) vehicles with 6 speakers is abnormal> :** Go to Step 23.

**STEP 3. Check front door speaker (RH) connector E-04 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front door speaker (RH) connector E-04 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

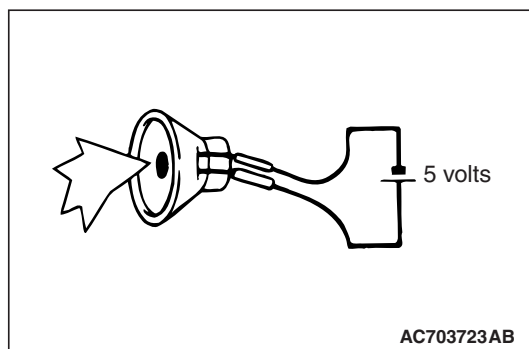

**STEP 4. Front door speaker (RH) check.**

- (1) Remove the front door speaker (RH). Refer to [P.54A-700](#).
- (2) Check that the front door speaker (RH) outputs the noise when the voltage of five volts is applied to the front door speaker (RH) connector terminal.

**Q: Does the front door speaker (RH) output the noise?**

**YES :** Go to Step 5.

**NO :** Replace the front door speaker (RH).

**STEP 5. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 6.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 6. Check the wiring harness between radio and CD player connector C-16 (terminal 26, 36) and front door speaker (RH) connector E-04 (terminal 1, 2).**

*NOTE: Also check intermediate connector C-112 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-112 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 26, 36) and front door speaker (RH) connector E-04 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom. Go to Step 27.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 7. Check front door speaker (LH) connector E-17 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front door speaker (LH) connector E-17 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**STEP 8. Front door speaker (LH) check.**

- (1) Remove the front door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the front door speaker (LH) outputs the noise when the voltage of five volts is applied to the front door speaker (LH) connector terminal.

**Q: Does the front door speaker (LH) output the noise?**

**YES :** Go to Step 9.

**NO :** Replace the front door speaker (LH).

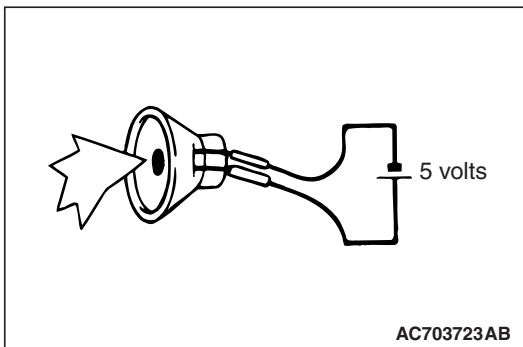

---

**STEP 9. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 10.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 10. Check the wiring harness between radio and CD player connector C-16 (terminal 28, 38) and front door speaker (LH) connector E-17 (terminal 1, 2).**

*NOTE: Also check intermediate connector C-126 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-126 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 28, 38) and front door speaker (LH) connector E-17 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom. Go to Step 27.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.


---

**STEP 11. Check rear door speaker (RH) connector E-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (RH) connector E-10 in good condition?**

**YES :** Go to Step 12.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

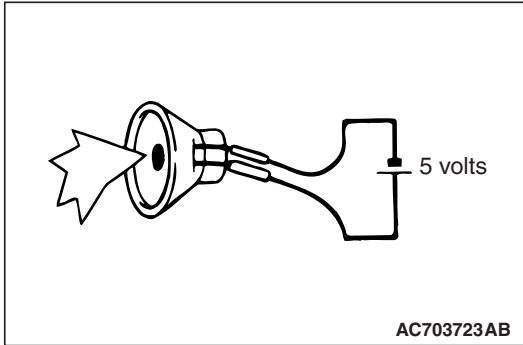

**STEP 12. Rear door speaker (RH) check**

- (1) Remove the rear door speaker (RH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (RH) outputs the noise when the voltage of five volts is applied to the rear door speaker (RH) connector terminal.

**Q: Does the rear door speaker (RH) output the noise?**

**YES :** Go to Step 13.

**NO :** Replace the rear door speaker (RH).

**STEP 13. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 14.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 14. Check the wiring harness between radio and CD player connector C-16 (terminal 25, 35) and rear door speaker (RH) connector E-10 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-20 and D-36 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-20 or D-36 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 25, 35) and rear door speaker (RH) connector E-10 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom. Go to Step 27.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 15. Check rear door speaker (LH) connector E-24 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (LH) connector E-24 in good condition?**

**YES :** Go to Step 16.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

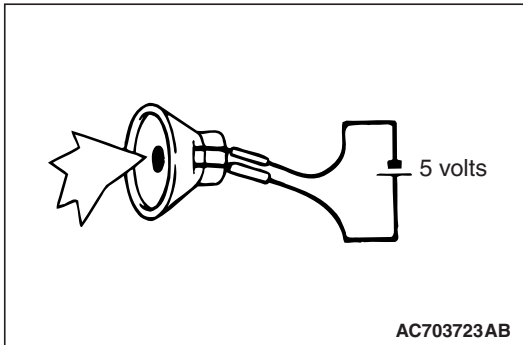

**STEP 16. Rear door speaker (LH) check.**

- (1) Remove the rear door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (LH) outputs the noise when the voltage of five volts is applied to the rear door speaker (LH) connector terminal.

**Q: Does the rear door speaker (LH) output the noise?**

**YES :** Go to Step 17.

**NO :** Replace the rear door speaker (LH).

**STEP 17. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 18.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 18. Check the wiring harness between radio and CD player connector C-16 (terminal 27, 37) and rear door speaker (LH) connector E-24 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-32 and D-21 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-32 or D-21 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 27, 37) and rear door speaker (LH) connector E-24 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom. Go to Step 27.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 19. Check tweeter (RH) connector E-02 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (RH) connector E-02 in good condition?**

**YES :** Go to Step 20.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**STEP 20. Tweeter (RH) check.**

- (1) Remove the tweeter (RH). Refer to [P.54A-700](#).
- (2) Check that the tweeter (RH) outputs the noise when the voltage of five volts is applied to the tweeter (RH) connector terminal.

**Q: Does the tweeter (RH) output the noise?**

**YES :** Go to Step 21.

**NO :** Replace the tweeter (RH).

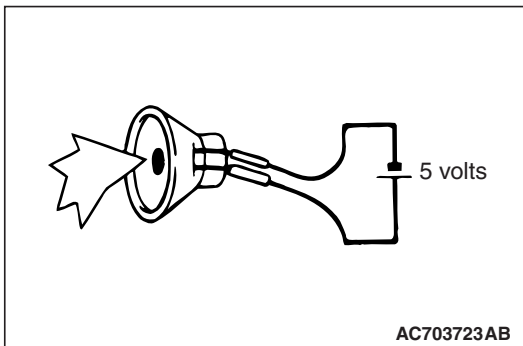

**STEP 21. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 22.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 22. Check the wiring harness between radio and CD player connector C-16 (terminal 26, 36) and tweeter (RH) connector E-02 (terminal 2, 1).**

*NOTE: Also check intermediate connector C-113 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-113 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 26, 36) and tweeter (RH) connector E-02 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom. Go to Step 27.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 23. Check tweeter (LH) connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (LH) connector E-14 in good condition?**

**YES :** Go to Step 24.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**STEP 24. Tweeter (LH) check.**

- (1) Remove the tweeter (LH). Refer to [P.54A-700](#).
- (2) Check that the tweeter (LH) outputs the noise when the voltage of five volts is applied to the tweeter (LH) connector terminal.

**Q: Does the tweeter (LH) output the noise?**

**YES :** Go to Step 25.

**NO :** Replace the tweeter (LH).

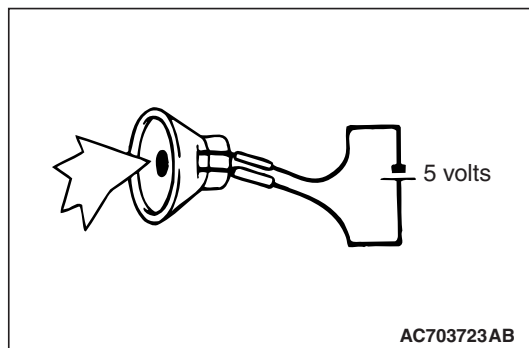

**STEP 25. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 26.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 26. Check the wiring harness between radio and CD player connector C-16 (terminal 28, 38) and tweeter (LH) connector E-14 (terminal 2, 1).**

*NOTE: Also check intermediate connector C-127 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-127 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player or CD changer connector C-16 (terminal 28, 38) and tweeter (LH) connector E-14 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom. Go to Step 27.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 27. Retest the system**

Check if the sound is output from the speakers.


**Q: Is the check result normal?**


**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** Replace the radio and CD player.

**INSPECTION PROCEDURE 3: No sound is heard from one of the speakers. <Vehicles with audio amplifier>****CAUTION**


Before replacing the radio and CD player, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

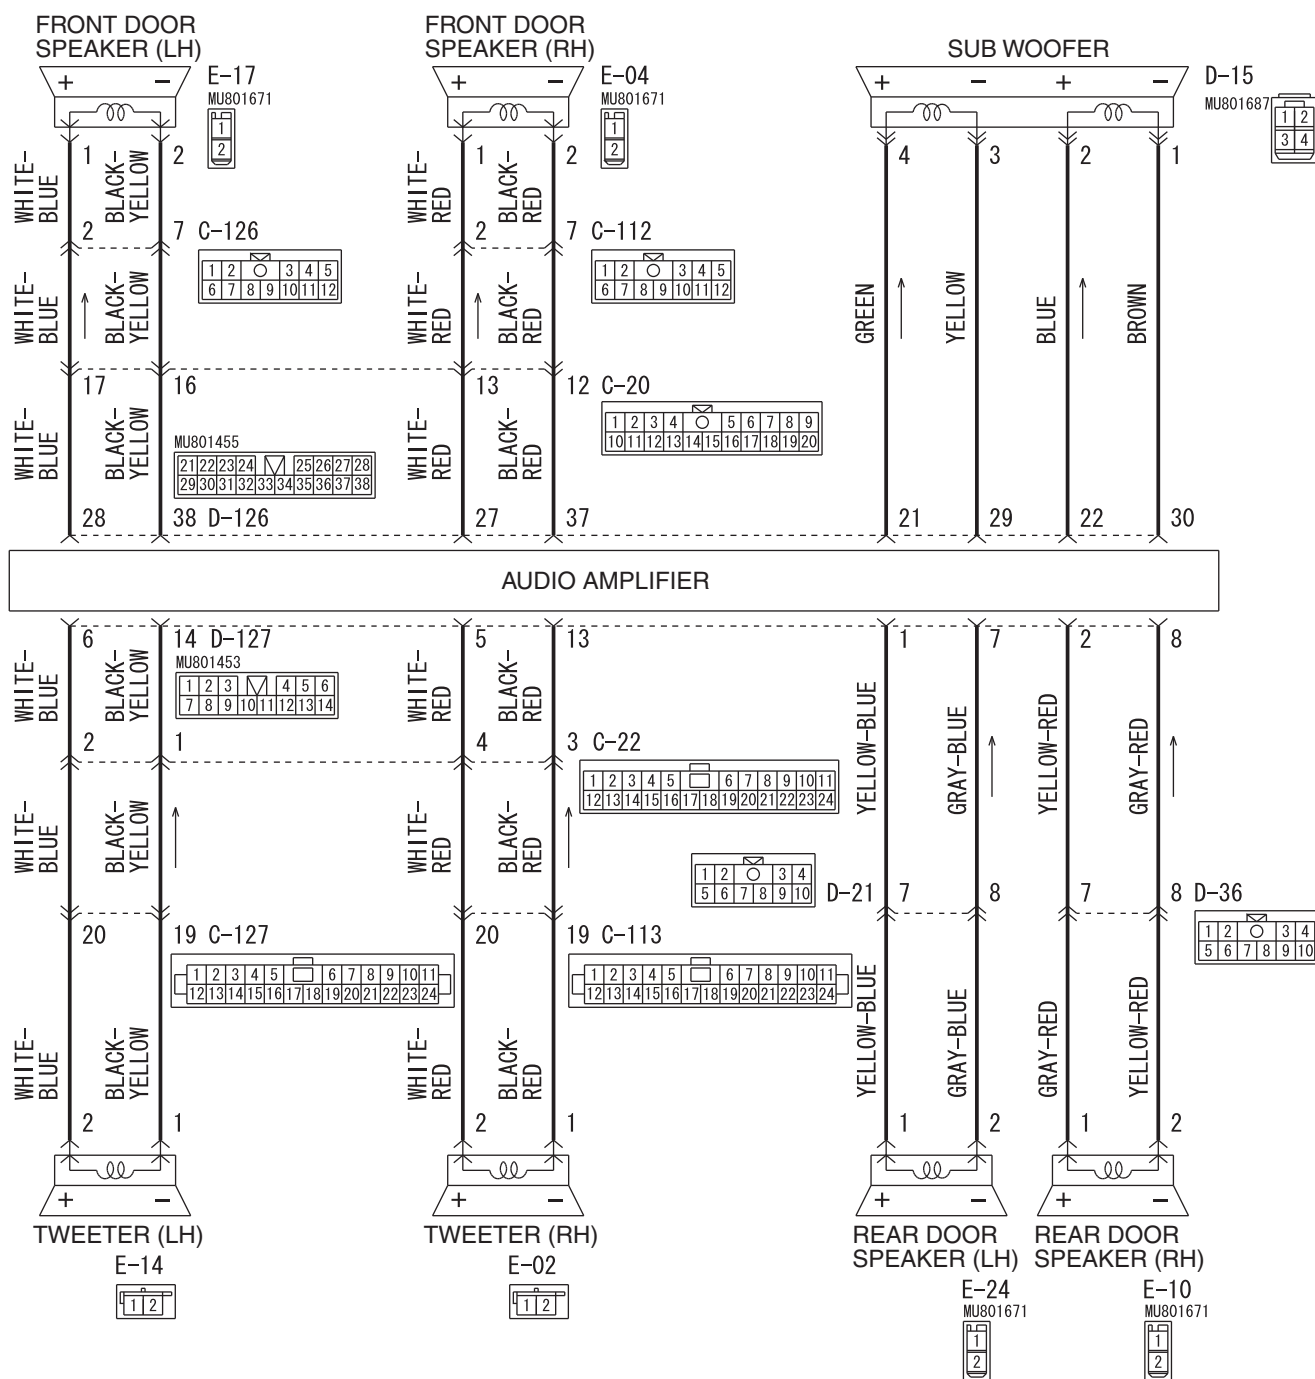**Speaker System Circuit**

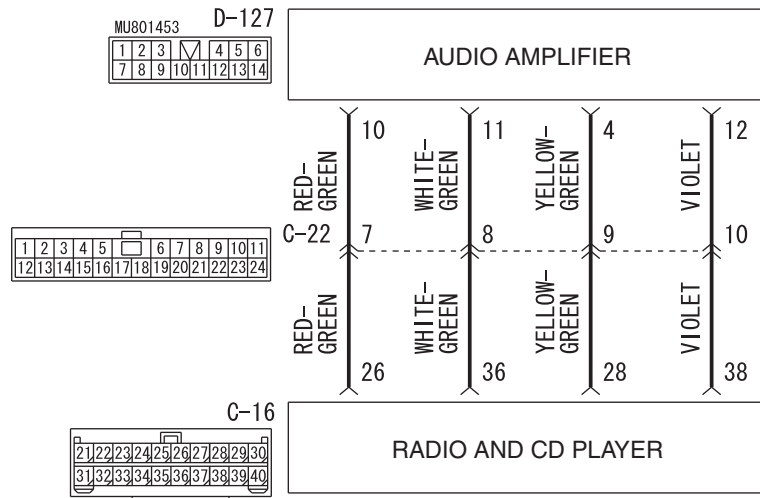


WAG54M027A


Connectors: C-16, C-20, C-112, C-113

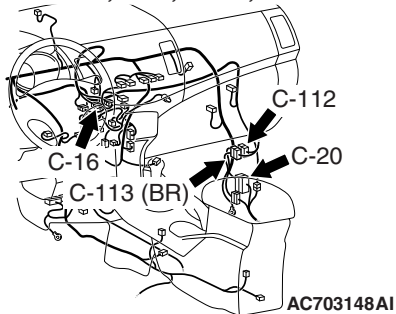


Connectors: D-15, D-21

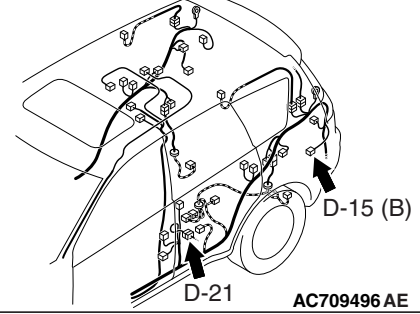


Connectors: C-126, C-127

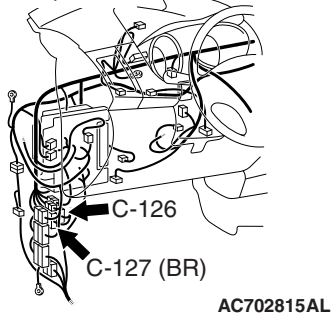

Connectors: D-36, D-126, D-127

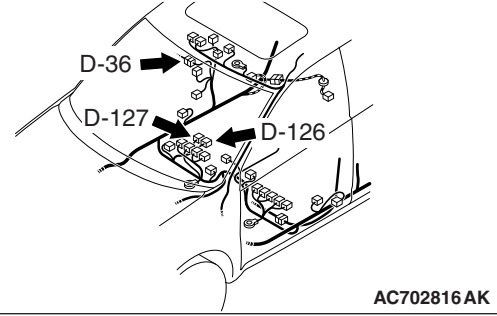

Connectors: E-02, E-04, E-10, E-14, E-17, E-24

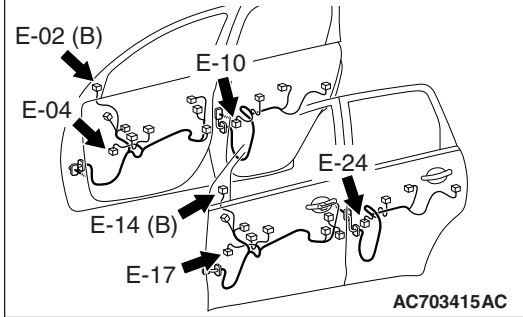**COMMENTS ON TROUBLE SYMPTOM**

If the sound is not heard from one of the speakers, the speaker, radio and CD player, audio amplifier, communication line from the radio and CD player to the audio amplifier, or communication line from the audio amplifier to the speaker may have a problem. Also, the option coding information may be inconsistent.

**PROBABLE CAUSES**

- Malfunction of speaker
- Malfunctions of radio and CD player
- Malfunction of audio amplifier
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. ETACS-ECU coding data check.**


(1) Operate scan tool MB991958 to read the ETACS-ECU option coding information. (Refer to GROUP 00, Coding List [P.00-35.](#))

(2) Check that the "Number of speaker" is set to "Premium."

**Q: Is the check result normal?**

**YES** : Go to Step 2.

**NO** : Operate scan tool MB991958 to set the option coding "Number of speaker" to "Premium," and check the trouble symptom.

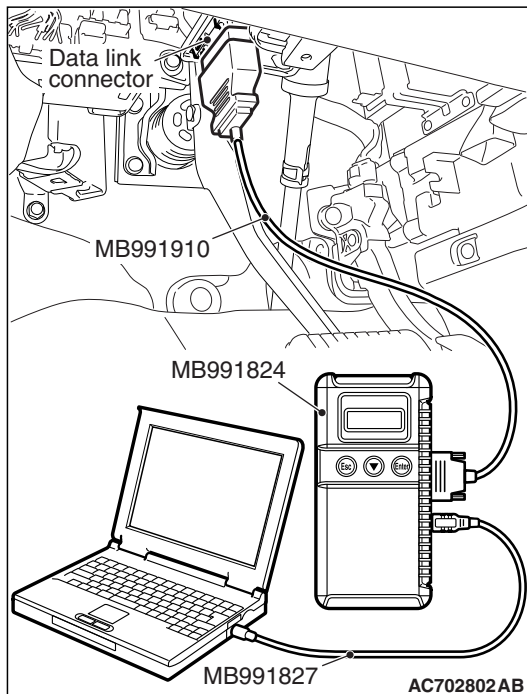

---

**STEP 2. Checking with audio speaker check.**

Perform the audio speaker check, and check which speaker does not output the sound. Refer to [P.00E-2](#).

**Q: Is the check result normal?**

**YES <normal for all>** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO <abnormal for all>** : Refer to Inspection Procedure 2 "No sound is heard" [P.00E-2](#).

**NO <only front door speaker (RH) is abnormal>** : Go to Step 3.

**NO <only front door speaker (LH) is abnormal>** : Go to Step 9.

**NO <only rear door speaker (RH) is abnormal>** : Go to Step 15.

**NO <only rear door speaker (LH) is abnormal>** : Go to Step 19.

**NO <only tweeter (RH) is abnormal>** : Go to Step 23.

**NO <only tweeter (LH) is abnormal>** : Go to Step 27.

**NO <only subwoofer is abnormal>** : Go to Step 31.

---

**STEP 3. Check front door speaker (RH) connector E-04 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is front door speaker (RH) connector E-04 in good condition?**

**YES** : Go to Step 4.

**NO** : Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---


**STEP 4. Check the front door speaker (RH).**

- (1) Remove the front door speaker (RH). Refer to [P.00-15](#).
- (2) Check that the front door speaker (RH) outputs the noise when the voltage of five volts is applied to the front door speaker (RH) connector terminal.

**Q: Does the front door speaker (RH) output the noise?**

**YES** : Go to Step 5.

**NO** : Replace the front door speaker (RH).

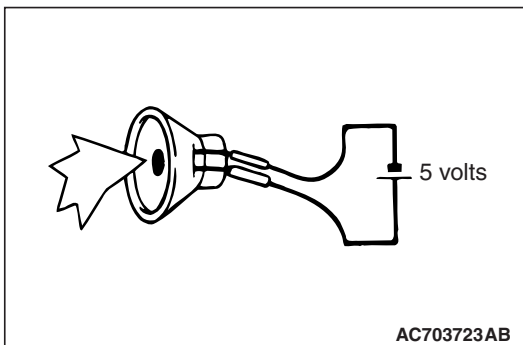

---

**STEP 5. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 6.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 6. Check the wiring harness between audio amplifier connector D-126 (terminal 27, 37) and front door speaker (RH) connector E-04 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-20 and C-112 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-20 or C-112 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 27, 37) and front door speaker (RH) connector E-04 (terminal 1, 2) in good condition?**

**YES :** Go to Step 7.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Check radio and CD player connector C-104 and audio amplifier connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are radio and CD player connector C-104 and audio amplifier connector C-16 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 8. Check the wiring harness between radio and CD player connector C-16 (terminal 26, 36) and audio amplifier connector D-127 (terminal 10, 11).**

*NOTE: Also check intermediate connector C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 26, 36) and audio amplifier connector D-127 (terminal 10, 11) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 9. Check front door speaker (LH) connector E-17 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front door speaker (LH) connector E-17 in good condition?**

**YES :** Go to Step 10.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**STEP 10. Check the front door speaker (LH).**

- (1) Remove the front door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the front door speaker (LH) outputs the noise when the voltage of five volts is applied to the front door speaker (LH) connector terminal.

**Q: Does the front door speaker (LH) output the noise?**

**YES :** Go to Step 11.

**NO :** Replace the front door speaker (LH).

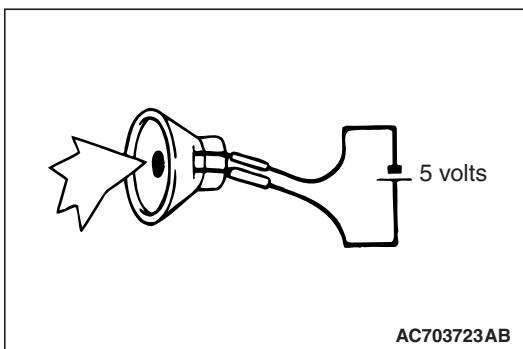

**STEP 11. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 12.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 12. Check the wiring harness between audio amplifier connector D-126 (terminal 28, 38) and front door speaker (LH) connector E-17 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-20 and C-126 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connectors C-20 and C-126 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 28, 38) and front door speaker (LH) connector E-17 (terminal 1, 2) in good condition?**

**YES :** Go to Step 13.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 13. Check radio and CD player connector C-16 and audio amplifier connector C-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 and audio amplifier connector C-127 in good condition?**

**YES :** Go to Step 14.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 14. Check the wiring harness between radio and CD player connector C-16 (terminal 28, 38) and audio amplifier connector D-127 (terminal 4, 12)**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connector C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 28, 38) and audio amplifier connector D-127 (terminal 4, 12) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 15. Check rear door speaker (RH) connector E-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (RH) connector E-10 in good condition?**

**YES :** Go to Step 16.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

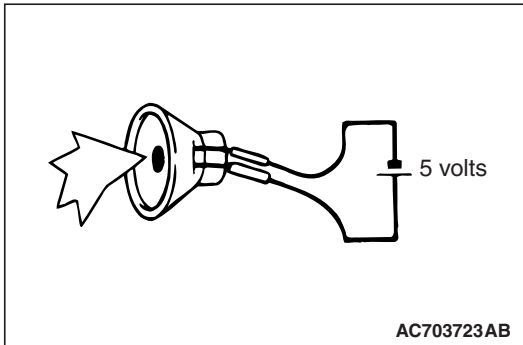

**STEP 16. Check the rear door speaker (RH).**

(1) Remove the rear door speaker (RH). Refer to [P.54A-700](#).

(2) Check that the rear door speaker (RH) outputs the noise when the voltage of five volts is applied to the rear door speaker (RH) connector terminal.

**Q: Does the rear door speaker (RH) output the noise?**

**YES :** Go to Step 17.

**NO :** Replace the rear door speaker (RH).

**STEP 17. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 18.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 18. Check the wiring harness between audio amplifier connector D-127 (terminal 2, 8) and rear door speaker (RH) connector E-10 (terminal 1, 2).**

*NOTE: Also check intermediate connector D-36 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector D-36 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 2, 8) and rear door speaker (RH) connector E-10 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 19. Check rear door speaker (LH) connector E-24 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (LH) connector E-24 in good condition?**

**YES :** Go to Step 20.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

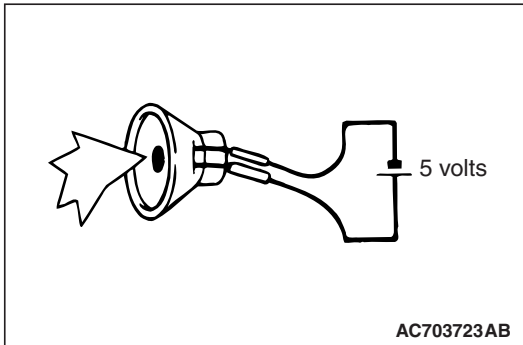

**STEP 20. Check the rear door speaker (LH).**

- (1) Remove the rear door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (LH) outputs the noise when the voltage of five volts is applied to the rear door speaker (LH) connector terminal.

**Q: Does the rear door speaker (LH) output the noise?**

**YES :** Go to Step 21.

**NO :** Replace the rear door speaker (LH).

**STEP 21. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 22.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 22. Check the wiring harness between audio amplifier connector D-127 (terminal 1, 7) and rear door speaker (LH) connector E-24 (terminal 1, 2).**

*NOTE: Also check intermediate connector D-21 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector D-21 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 1, 7) and rear door speaker (LH) connector E-24 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 23. Check tweeter (RH) connector E-02 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (RH) connector E-02 in good condition?**

**YES :** Go to Step 24.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 24. Check the tweeter (RH).**


(1) Remove the tweeter (RH). Refer to [P.54A-700](#).

(2) Check that the tweeter (RH) outputs the noise when the voltage of five volts is applied to the tweeter (RH) connector terminal.

**Q: Does the tweeter (RH) output the noise?**

**YES :** Go to Step 25.

**NO :** Replace the tweeter (RH).

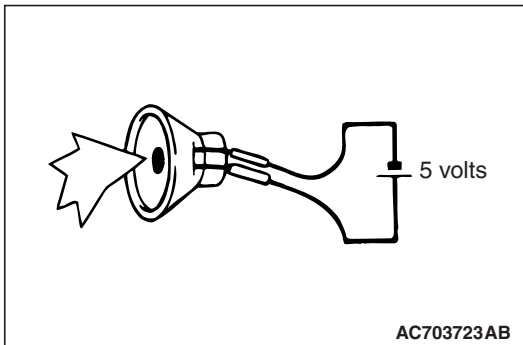

**STEP 25. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 26.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 26. Check the wiring harness between audio amplifier connector D-127 (terminal 5, 13) and tweeter (RH) connector E-02 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-22 and C-113 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 or C-113 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 5, 13) and tweeter (RH) connector E-02 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 27. Check tweeter (LH) connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (LH) connector E-14 in good condition?**

**YES :** Go to Step 28.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

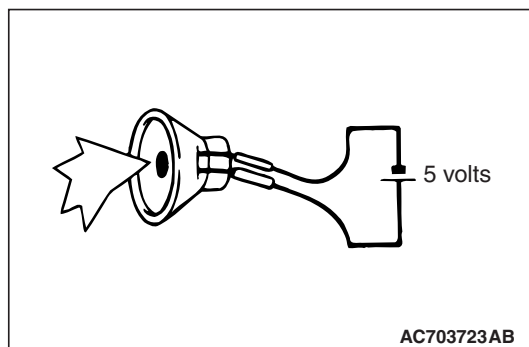

**STEP 28. Check the tweeter (LH).**

(1) Remove the tweeter (LH). Refer to [P.54A-700](#).

(2) Check that the tweeter (LH) outputs the noise when five volts are applied to the tweeter (LH) connector terminal.

**Q: Does the tweeter (LH) output the noise?**

**YES :** Go to Step 29.

**NO :** Replace the tweeter (LH).

**STEP 29. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 30.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 30. Check the wiring harness between audio amplifier connector D-127 (terminal 6, 14) and tweeter (LH) connector E-14 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-22 and C-127 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 or C-127 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 6, 14) and tweeter (LH) connector E-14 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 31. Check subwoofer connector D-15 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is subwoofer connector D-15 in good condition?**

**YES :** Go to Step 32.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 32. Check the Subwoofer.**


(1) Remove the subwoofer. Refer to [P.54A-700](#).

(2) Check that the subwoofer outputs the noise when five volts are applied to the subwoofer connector terminal.

**Q: Does the subwoofer output the noise?**

**YES :** Go to Step 33.

**NO :** Replace the subwoofer.

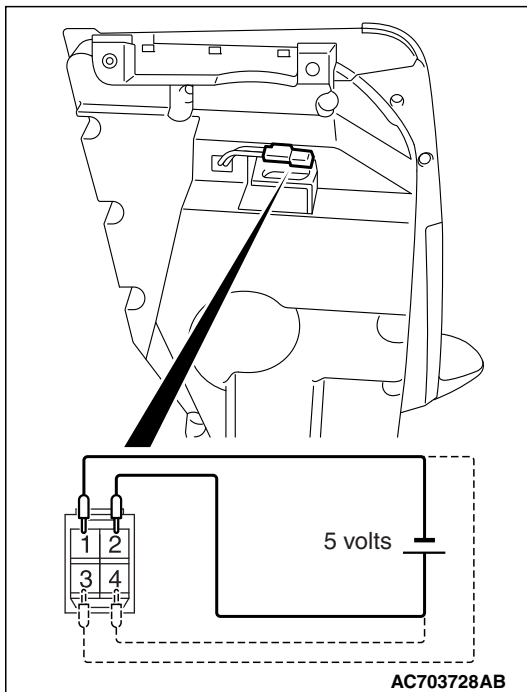

**STEP 33. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 34.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 34. Check the wiring harness between audio amplifier connector D-126 (terminal 21, 22, 29, 30) and subwoofer connector D-15 (terminal 4, 2, 3, 1).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 21, 22, 29, 30) and subwoofer connector D-15 (terminal 4, 2, 3, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 35.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 35. Replace the audio amplifier temporarily, and check the trouble symptom.**

Replace the audio amplifier temporarily, and check that the sound is output from the speaker.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the radio and CD player or CD player.

**INSPECTION PROCEDURE 4:** The audio does not operate normally by operating the radio and CD player of the center panel unit.



**CAUTION**

Before replacing the radio and CD player, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

Center Panel Unit Power Supply Circuit

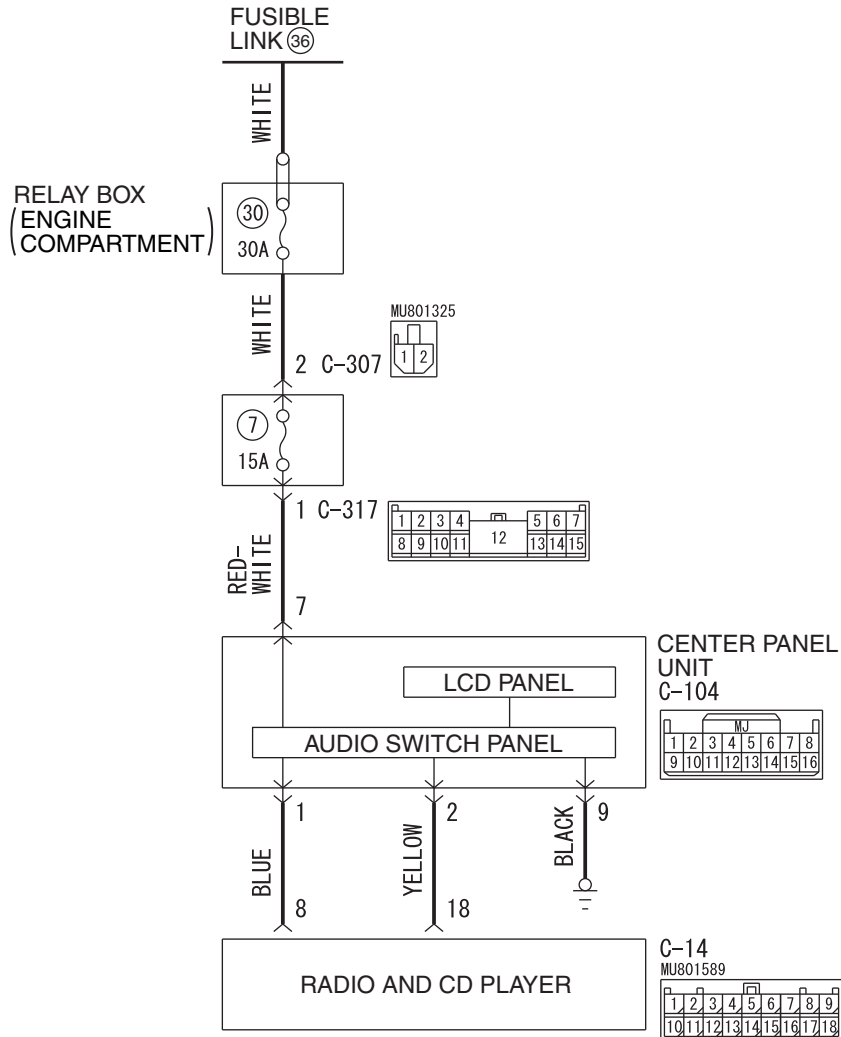

W9G54M007A

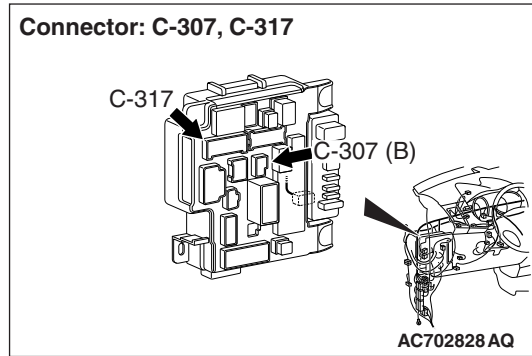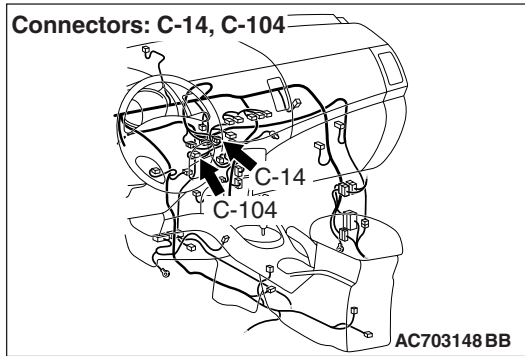

## COMMENTS ON TROUBLE SYMPTOM

When the audio does not operate normally by operating the audio control unit of the center panel unit, the radio and CD player, center panel unit, or the power supply circuit system of center panel unit may be faulty.

## PROBABLE CAUSES

- The radio and CD player may be defective.
- The center panel unit may be defective.
- Damaged harness wires and connectors

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Check center panel unit connector C-104 and radio and CD player connector C-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are center panel unit connector C-104 and radio and CD player connector C-14 in good condition?**

**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s) (Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#)).


**STEP 2. Check the wiring harness between center panel unit connector C-104 (terminal 1, 2) and radio and CD player connector C-14 (terminal 8, 18).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 1, 2) and radio and CD player connector C-14 (terminal 8, 18) in good condition?**

**YES :** Go to Step 3.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

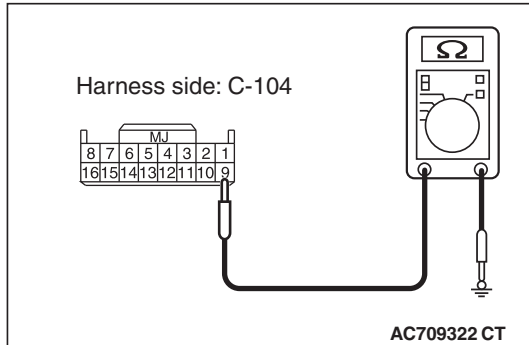

**STEP 3. Check the ground circuit to the center panel unit. Measure the resistance at center panel unit connector C-104.**

- (1) Disconnect the connector, and measure at the wiring harness side.
- (2) Measure resistance between terminal 9 and ground.

**OK: The resistance should be 2 ohm or less.**

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 5.

**NO :** Go to Step 4.


**STEP 4. Check the wiring harness between center panel unit connector C-104 (terminal 9) and ground.**

- Check the ground wire for open circuit.

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 9) and ground in good condition?**

**YES :** Check the trouble symptom.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

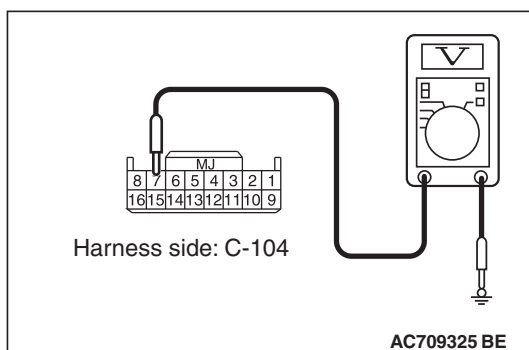

**STEP 5. Check the power supply circuit to the center panel unit. Measure the voltage at center panel unit connector C-104.**

- (1) Disconnect the connector, and measure at the harness side connector.
- (2) Measure voltage between terminal 7 and ground.

**OK: Battery positive voltage**

**Q: Is the measured voltage battery positive voltage?**

**YES :** Go to Step 7.

**NO :** Go to Step 6.

**STEP 6. Check the wiring harness between center panel unit connector C-104 (terminal 7) and fusible link (36).**

- Check the power supply line for open circuit and short circuit.

*NOTE: Also ETACS-ECU connector C-307, C-317 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If joint connector ETACS-ECU connector C-307, C-317 are damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 7) and fusible link (36) in good condition?**

**YES :** Check the trouble symptom.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Replace the center panel unit temporarily, and check the trouble symptom.**

Replace the center panel unit temporarily, and check that the audio works normally.

**Q: Is the check result normal?**

**YES :** Replace the center panel unit.


**NO :** Replace the radio and CD player.

INSPECTION PROCEDURE 5: Audio illuminations does not work normally.

**CAUTION**


Before replacing the radio and CD player, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

Center Panel Unit Communication Circuit

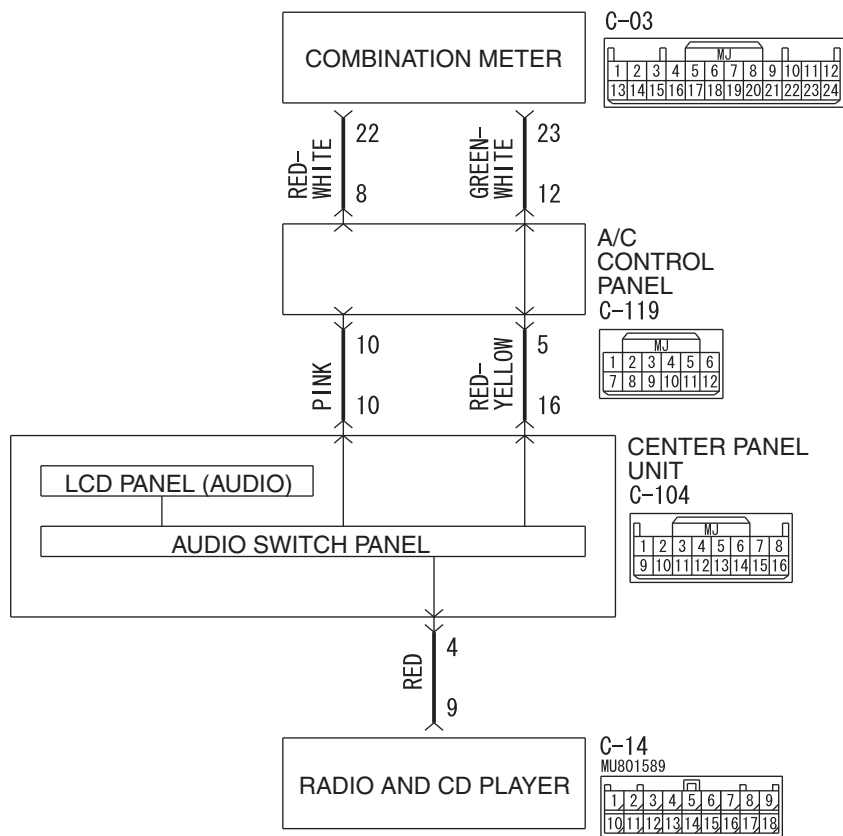


W9G54M012A

Connector: C-03

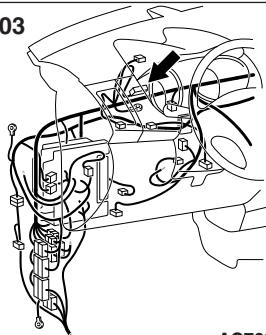

AC702815 AD

Connectors: C-14, C-104, C-119

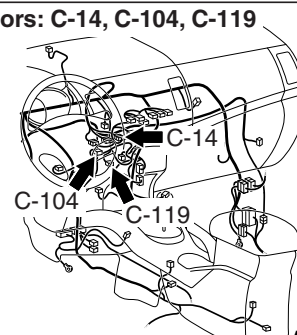

AC709494 AP

**OPERATION**

- When the position light is illuminated, the audio illumination is switched to the nighttime illumination.
- When the brightness is adjusted using the combination meter rheostat switch, the audio illumination brightness is also adjusted.

**COMMENTS ON TROUBLE SYMPTOM**

The center panel unit, radio and CD player, combination meter, or communication line from the radio and CD player to the combination meter may have a problem.

**PROBABLE CAUSES**

- The combination meter may be defective.
- The radio and CD player may be defective.
- The center panel unit may be defective.
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

---

**STEP 1. Operation check of the center panel unit**

Operate the audio control switch of the center panel unit, and check if the audio operates normally.

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Refer to Inspection Procedure 4 "The audio does not operate normally by operating the radio and CD player of the center panel unit." [P.54A-407](#).

---

**STEP 2. Check the combination meter.**

Check whether the combination meter works normally.

**Q: Is the check result normal?**

**YES :** Go to Step 3.

**NO :** Diagnose the combination meter (Refer to [P.54A-32](#)).

**STEP 3. Using scan tool MB991958, read the combination meter diagnostic trouble code.**

Check again if the DTC is set to the combination meter.

**⚠ CAUTION**


**To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.**

- (1) Connect scan tool MB991958. Refer to "How to connect scan tool [P.54A-336](#)".
- (2) Turn the ignition switch to the "ON" position.
- (3) Check for combination meter DTCs.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the combination meter (Refer to [P.54A-32](#)).

**NO :** Go to Step 4.

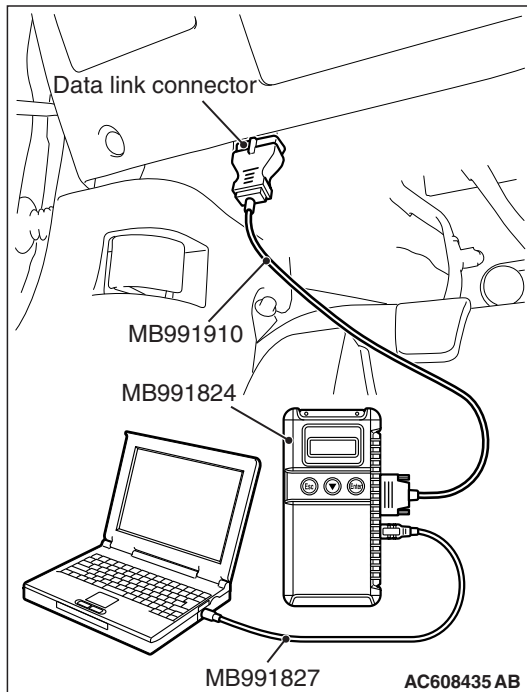

**STEP 4. Check center panel unit connector C-104 and combination meter connector C-03 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are center panel unit connector C-104 and combination meter connector C-03 in good condition?**

**YES :** Go to Step 5.

**NO :** Repair the connector concerned.

---

**STEP 5. Check the wiring harness between center panel unit connector C-104 (terminal 16) and combination meter connector C-03 (terminal 23).**

- Check the communication line for open circuit and short circuit.

*NOTE: Also check A/C control panel connector C-119 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If A/C control panel connector C-119 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 16) and combination meter connector C-03 (terminal 23) in good condition?**

**YES :** Go to Step 6.

**NO :** Repair the wiring harness.

---

**STEP 6. Check A/C control panel C-119 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is A/C control panel C-119 in good condition?**

**YES :** Go to Step 7.

**NO :** Repair the connector concerned.

---

**STEP 7. Check the wiring harness between A/C control panel C-119 (terminal 8) and combination meter connector C-03 (terminal 22).**

- Check the wiring harness for open circuit and short circuit.

**Q: Is the wiring harness between A/C control panel C-119 (terminal 8) and combination meter connector C-03 (terminal 22) in good condition?**

**YES :** Go to Step 8.

**NO :** Repair the wiring harness.

---

**STEP 8. Check the wiring harness between A/C control panel C-119 (terminal 10) and center panel unit connector C-104 (terminal 10).**

- Check the wiring harness for open circuit and short circuit.

**Q: Is the wiring harness between A/C control panel C-119 (terminal 10) and center panel unit connector C-104 (terminal 10) in good condition?**

**YES :** Go to Step 9.

**NO :** Repair the wiring harness.

---

**STEP 9. Check radio and CD player connector C-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-14 in good condition?**

**YES :** Go to Step 10.

**NO :** Repair the connector concerned.

---

**STEP 10. Check the wiring harness between center panel unit connector C-104 (terminal 4) and radio and CD player connector C-14 (terminal 9).**

- Check the communication line for open circuit and short circuit.

**Q: Is the wiring harness between center panel unit connector C-104 (terminal 4) and radio and CD player connector C-14 (terminal 9) in good condition?**

**YES :** Go to Step 11.

**NO :** Repair the wiring harness.

---

**STEP 11. Replace the A/C control panel temporarily, and check the trouble symptom.**

Replace the A/C control panel temporarily, and check that the audio illumination works normally.

**Q: Is the check result normal?**

**YES :** Replace the A/C control panel.

**NO :** Go to Step 12.

---

**STEP 12. Replace the center panel unit temporarily, and check the trouble symptom.**

Replace the center panel unit temporarily, and check that the audio illumination works normally.

**Q: Is the check result normal?**

**YES :** Replace the center panel unit.


**NO :** Replace the radio and CD player.

**INSPECTION PROCEDURE 6:** The sound of external input are not played. <Vehicles with audio adapter>



**CAUTION**

Before replacing the radio and CD player, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

**Audio Adapter Communication Circuit**

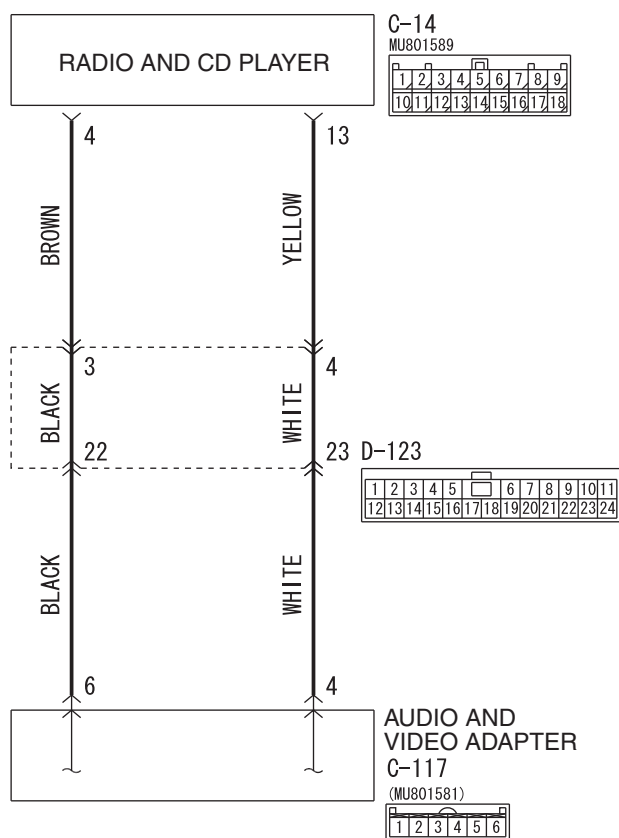

WAG54M028A

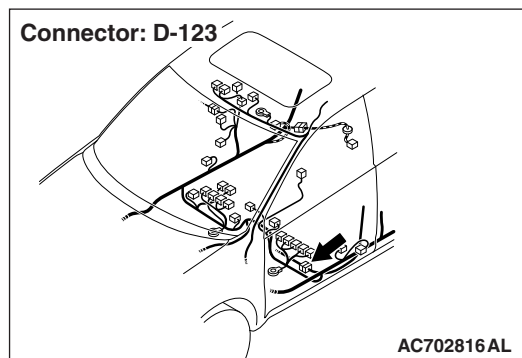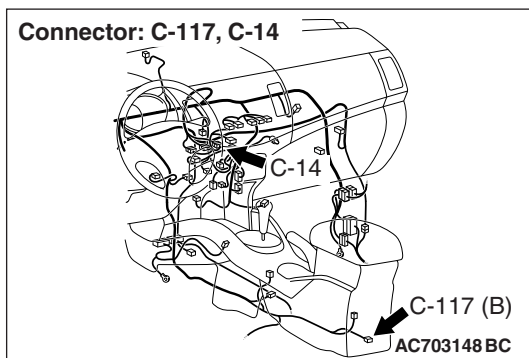

**COMMENTS ON TROUBLE SYMPTOM**

If the external input sound is not output, the radio and CD player, audio communication line of radio and CD player, or audio adapter may have a problem.

**PROBABLE CAUSES**

- The audio adapter may be defective.
- The radio and CD player may be defective.
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

---

**STEP 1. Operation check of the radio and CD player**

Check if the radio and CD player operates normally and outputs sound.

**Q: Is the check result normal?**

**YES** : Go to Step 2.

**NO** : Troubleshoot the radio and CD player (Refer to [P.54A-371](#)).

---

**STEP 2. Check the external sound input mode.**

Check if the external sound input mode of the radio and CD player is set.

**Q: Is the check result normal?**

**YES** : Go to Step 3.

**NO** : Set the external sound input mode.

---

**STEP 3. Check the audio adapter.**

Check if the audio adapter is normal.(Refer to [P.54A-433](#))

**Q: Is the check result normal?**

**YES** : Go to step 4.

**NO** : Replace the Audio adapter.

---

**STEP 4. Check audio adapter connector C-117 and radio and CD player connector C-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Are audio adapter connector C-117 and radio and CD player connector C-14 in good condition?**

**YES** : Go to step 5.

**NO** : Repair or replace the damaged component(s) (Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#)).

**STEP 5. Check the wiring harness between audio adapter connector C-117 (terminal 4, 6) and radio and CD player connector C-14 (terminal 13, 4).**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connectors D-123 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector D-123 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between audio adapter connector C-117 (terminal 4, 6) and radio and CD player connector C-14 (terminal 13, 4) in good condition?**

**YES :** Replace the audio adapter, and go to Step 6.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 6. Retest the system.**

Check that the external input is normal.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00 –How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** Replace the radio and CD player.

---

## INSPECTION PROCEDURE 7: Noise Appears at Certain Places When Traveling (AM).

---

### DIAGNOSIS

---

**STEP 1. Check the noise occur when entering or near a particular structure (building, tunnel, mountain, etc.)**

**Q: Does the noise occur when entering or near a particular structure (building, tunnel, mountain, etc.)?**

**YES :** Go to Step 3.

**NO :** Go to Step 2.

---

**STEP 2. After taking the following measures to prevent the noise, check that no noise appears.**

- (1) Change to a different station with a stronger wave to boost resistance to interference.
- (2) Suppress high tones to reduce noise.

**Q: Do the following measures eliminate the noise?**

**YES :** The procedure is complete.

**NO :** Go to Step 4.

---

**STEP 3. Ask the owner about the state of the noise.**

Find out the following information from the owner.

- Place where the noise occurs.
- Locality conditions (valley, mountain, etc.)
- Name and frequency of stations affected by noise

**Q: Which is the noise, vehicle noise or external noise?**



**Vehicle noise :** It may not be possible to prevent noise if the signal is weak. The procedure is complete.

**External noise :** In almost all cases, prevention on the receiver side is impossible. Weak signals especially are susceptible to interference. Go to Step 4.

**STEP 4. Check that there is no noise.****Q: Does noise still exist?**

**YES :** If there is more noise than on radios in other vehicles, find out the noise condition and the name and frequency of the receiving stations from the owner, and consult with the radio manufacturer's service center.

**NO :** Normal.

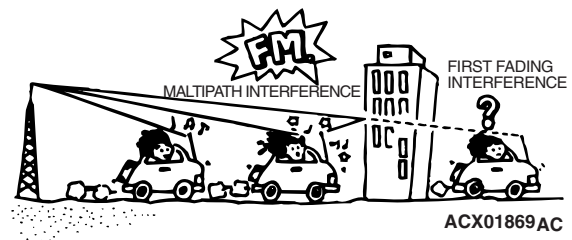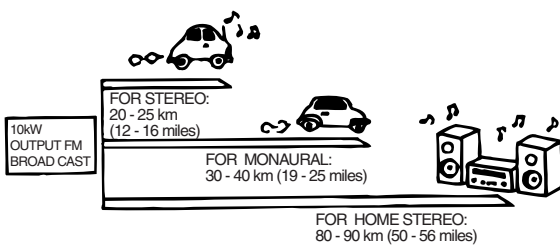**INSPECTION PROCEDURE 8: Noise is Present while Moving (FM).****DIAGNOSIS**

*NOTE: FM waves have the same properties as light, and can be deflected and blocked. FM signal reception is severely degraded in the shadow of obstructions such as buildings or mountains. An FM receiver will then only receive a reflected signal.*

1. The signal becomes weak as the distance from the station's transmission antenna increases. The signal strength received depends on the signal strength of the transmitting station and intervening obstructions such as buildings and hills. Generally speaking, the area of good reception is approximately 20 - 25 km for stereo reception, and 30 - 40 km for monaural reception.
2. The signal will become weak when an area of shadow from the transmitting antenna (places where there are obstructions such as mountains or buildings between the station transmitter and the vehicle), and noise will appear. <This is called first fading, and gives a steady buzzing noise.>

3. If a direct signal hits the antenna at the same time as a signal reflected by obstructions such as mountains or buildings, interference of the two signals will generate noise. When moving, noise will appear each time the vehicle's antenna passes through this kind of obstructed area. The strength and interval of the noise varies according to the signal strength and the conditions of deflection. <This is called multipath noise, and is a repetitive buzzing.>
4. Since FM stereo transmission and reception has a weaker field than monaural, it is often accompanied by a hissing noise.

**After taking measures to prevent the noise, check that no noise occurs.**

- Change to a different station with a stronger wave to boost resistance to interference.
- Suppress high tones to reduce noise.

**If there is noise, the following causes can be considered.**

- If due to vehicle noise: It may not be possible to prevent noise if the signal is weak.
- If due to external noise: In almost all cases, prevention on the receiver side is not possible. Weak signals especially are susceptible to interference.

If there is more noise than on radios in other vehicles, find out the noise condition and the name and frequency of the receiving stations from the owner, and consult with the radio manufacturer's service center.

---

**INSPECTION PROCEDURE 9: Sound mixed with Noise, Only at Night (AM).**

---

The following factors can be considered as possible causes of noise appearing at night.

1. Factors due to signal conditions: Due to the fact that long-distance signals are more easily received at night, even stations that are received without problem during the day may experience interference in a general worsening of reception conditions. The weaker a station is the more susceptible it is to interference, and a change to different station or the appearance of a beating sound\* may occur.

*NOTE: Beat sound\*: Two signals close in frequency interfere with each other, creating a repetitious high-pitched sound. This sound is generated not only by sound signals but electrical waves as well.*

2. Factors due to vehicles noise: Generator noise may be a cause.

**DIAGNOSIS**

---

**STEP 1. Check that the noise still obvious even when the lights are off.**

**Q: Is the noise still obvious even when the lights are off?**

**YES :** Go to Step 2.

**NO :** Go to Step 3.

---

**STEP 2. Check that the noise fades away by the following action.**

Tune to a station with a stronger wave.

**Q: Does noise still exist?**

**YES :** Consult the radio manufacturer's service center.

**NO :** The procedure is complete.

---

**STEP 3. Check that the noise fades away when the vehicle harness is moved away from the radio (if the harness is not in the proper position).**

**Q: Does the noise fade away when the vehicle harness is moved any from the radio (If the harness is not in the proper position)?**

**YES :** Repair the wiring harness.

**NO :** If there is more noise than other radios, consult the radio manufacturer's service center.

---

**INSPECTION PROCEDURE 10: Broadcasts can be Heard, but Both AM and FM have a lot of Noise.**

---

**DIAGNOSIS**

---

**STEP 1. Check the state of the antenna.**

Check that there is no damage or crack in the roof antenna.

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Repair or replace the roof antenna.

---

**STEP 2. Check that the noise occur when the engine is stopped or the engine is running.**

**Q: Does noise occur when the engine is stopped or the engine is running?**

**When the engine is stopped :** Go to Step 3.

**When the engine is running :** Check the vehicle's noise suppressor (Refer to Inspection Procedure 12 [P.54A-423](#)).

---

**STEP 3. Check that the noise fades away by the following actions.**

- (1) Tune to a station with a stronger wave.
- (2) Adjust the sound quality to suppress high tones.

**Q: Is the noise eliminated?**

- YES :** This diagnosis is complete.
- NO :** Go to Step 4.

---

**STEP 4. Check that the radio and CD player is correctly grounded**

The radio is connected to the ground with an assembling screw.

**Q: Is the radio correctly grounded?**

- YES :** Go to Step 5.
- NO :** Assemble the radio and CD player into the vehicle.

---

**STEP 5. Check the antenna plug is connected to the radio and CD player.****Q: Is the antenna plug thoroughly connected to the radio and CD player?**

- YES :** Go to Step 7.
- NO :** Go to Step 6.

---

**STEP 6. Check that the noise is eliminated when the antenna plug is properly attached.****Q: Is the noise eliminated?**

- YES :** This diagnosis is complete.
- NO :** Go to Step 7.

---

**STEP 7. Check that the antenna is in good condition and is it properly mounted.****Q: Is the antenna in good condition and is it properly mounted?**

- YES :** Consult the radio manufacturer's service center.
- NO :** Repair or replace the roof antenna.

---

**INSPECTION PROCEDURE 11: There is More Noise on either AM or FM.**

---

**DIAGNOSIS**

- More noise comes out from AM only.
  - AM is easily interfered by the engine, power line, and thunder.
- More noise comes out from FM only.
  - Due to the property of FM waves, reflection and interference occur. Thus, noise are easily caused by interference of buildings and mountains.

---

**STEP 1. Check which comes out more noise, AM or FM.****Q: Which comes out more noise, AM or FM?**

- AM :** Go to Step 2.
- FM :** Refer to (Refer to Inspection Procedure 12 [P.54A-422](#))

---

**STEP 2. Check that there is noise under the following state(s).**

- A motorcycle was passing.
- The levin was flashing.
- A vehicle passed close by, but it appeared to be a vehicle generating a particularly large amount of noise radiation.
- Passed beneath a power line.
- Passed beneath a telephone line.
- Passed close by a signal generator.
- Passed close by some other sources of electrical noise.
- Passed under a bridge.

**Q: Is there noise in the above states?**

- YES :** Go to Step 4.
- NO :** Go to Step 3.

---

**STEP 3. Continue to check for static; when static is detected, check for the conditions listed above.****Q: Is there noise in the state described in Step 2?**

- YES :** Noise prevention on the radio side is difficult. If the problem is particularly worse than other radios, consult a service center.
- NO :** Go to Step 4.

---

**STEP 4. Compare it with the other radios.**

**Q: Is the noise level worse than other radios?**

**YES :** Consult a service center.

**NO :** If the noise level is roughly the same as other radios, there is no action to be taken.

---

**INSPECTION PROCEDURE 12: Noise Sometimes Appears on FM During Traveling.**

---

**DIAGNOSIS**

---

**STEP 1. Check the state of the antenna.**

Check that there is no damage or crack in the roof antenna.

**Q: Is the mast antenna assembled?**

**YES :** Go to Step 2.

**NO :** Repair or replace the roof antenna.

---

**STEP 2. The check after adjusting the radio.**

**Q: Readjust the radio. Is the noise eliminated?**

**YES :** The procedure is complete.

**NO :** Go to Step 3.

---

**STEP 3. Check with several broadcasting stations.**

*NOTE: Multipath noise and fading noise: Because of the frequency of FM waves in extremely high, it is highly susceptible to effects from geological formations and buildings. These effects disrupt the broadcast signal and obstruct reception in several ways.*

**Multipath noise**

- *This describes the echo that occurs when the broadcast signal is reflected by a large obstruction and enters the receiver with a slight time delay relative to the direct signal (repetitious buzzing).*

**Fading noise**

- *This is a buzzing noise that occurs when the broadcast beam is disrupted by obstructing objects and the signal strength fluctuates intricately within a narrow range.*

**Q: Is the abnormality in reception generated only within a certain range?**

**YES :** The effect of an electrical field condition (multipath noise, fading noise) could be the cause. The procedure is complete.

**NO :** Go to Step 4.

---

**STEP 4. Check that noise appears when the radio switch is turned on while the vehicle is stopped.**

*NOTE: Static electricity noise: Body static electric from the shock absorber rubber bushings used to prevent vibration, tires, etc. occurs because of separation from the ground, causing a buzzing noise. There is no measures to discharge the static electricity of the vehicle body. Check that there is no noise.*

**Q: Does noise appear when the radio switch is turned on while the vehicle is stopped and the radio is tapped while tuned away from a station?**

**YES :** Go to Step 5.

**NO :** It may be static electricity noise. The procedure is complete.

---

**STEP 5. Check that the radio is correctly grounded.**

The radio is connected to the ground with an assembling screw.

**Q: Is the radio correctly grounded?**

**YES :** Go to Step 6.

**NO :** Tighten the screw securely.

---

**STEP 6. Check by replacing the radio and CD player.**

**Q: Are operations normal when using another radio and CD player?**

**YES :** Either repair or replace the radio and CD player.

**NO :** Repair or replace the roof antenna.

**Inspection Procedure 13: Noise is detected with engine running.****DIAGNOSIS****⚠ CAUTION**

Never connect a noise filter to the high tension cable (spark plug wire). Spark plug wires incorporate resistors which have the effect of suppressing noise. If a spark plug wire is found to be causing noise, it must be replaced.



**⚠ CAUTION**

Confirm that the noise is not from an external source.

**⚠ CAUTION**

Noise prevention should be performed by suppressing strong sources of noise first.

Description of noise	Condition	Cause	Solution
AM, FM: ignition noise (popping, snapping, cracking, buzzing)	<ul style="list-style-type: none"><li>Increasing the engine speed causes the generator whine to speed up and the volume to decrease.</li><li>Disappears when the ignition switch turned to "ACC", and engine is off.</li></ul>	<ul style="list-style-type: none"><li>Electrical interference from the spark plugs.</li><li>Engine noise.</li></ul>	<ul style="list-style-type: none"><li>Check or replace the ground cable.</li><li>Check or replace spark plug wires.</li></ul>
Other electrical components	-	Noise may intensify due to aging electrical components.	Repair or replace the electrical components.
Static electricity (cracking, crinkling)	Noise disappears when the vehicle is completely stopped.	Noise occurs when parts or wiring move and contact vehicle body.	Return parts or wiring to their proper position.
Static electricity (cracking, crinkling)	Various noises are produced depending on the body part of the vehicle.	This may be due to the recent removal of the front hood, bumpers, exhaust pipe and muffler, suspension, etc.	<ul style="list-style-type: none"><li>Properly ground parts.</li><li>Properly ground all body parts.</li></ul>

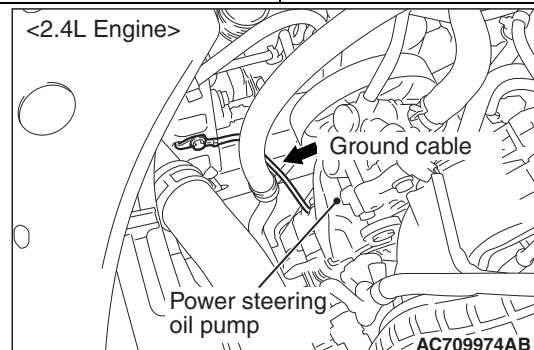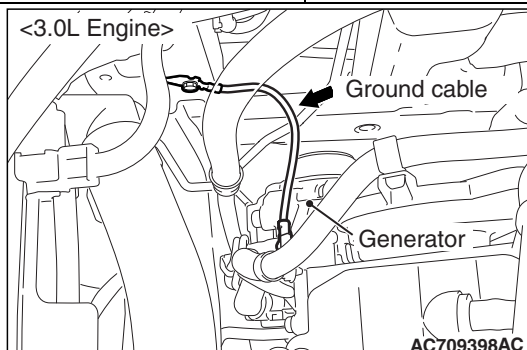

---

INSPECTION PROCEDURE 14: Noise appears during vibration or shocks.

---

---

**DIAGNOSIS**

---

---

**STEP 1. Check the fit of the antenna.****Q: Is the antenna base fitted securely?****YES :** Go to Step 2.**NO :** Install the antenna, and tighten the mounting nut (Refer to [P.54A-704](#)). Check that there is no noise.

---

**STEP 2. Check the fit of antenna feeder cable.****Q: Is the antenna feeder cable fitted securely?****YES :** Go to Step 3.**NO :** Ensure that the antenna base and the radio and CD player are fitted securely. Check that there is no noise.

---

**STEP 3. Check that noise appears when the radio switch is turned on while the vehicle is stopped and the radio is tapped while tuned away from a station.**

*NOTE: Body static electricity from the shock absorber rubber bushings used to prevent vibration, tires, etc. occurs because of separation from the ground, causing a buzzing noise. Since no measures can be taken to discharge the static electricity of the vehicle body. Check that there is no noise.*

**Q: Does noise appear when the radio switch is turned on while the vehicle is stopped and the radio is tapped while tuned away from a station?****YES :** Go to Step 4.**NO :** It may be static electricity noise.

---

**STEP 4. Verify that the radio is correctly grounded.**

The radio is connected to the ground with an assembling screw.

**Q: Is the radio correctly grounded?****YES :** Go to Step 5.**NO :** Tighten the screw securely. Check that there is no noise.

---

**STEP 5. Check by replacing radio and CD player.****Q: Do the other radio and CD player work normally?****YES :** Either repair or replace the original radio and CD player. Check that there is no noise.**NO :** Either repair or replace the antenna assembly. Check that there is no noise.

---

**INSPECTION PROCEDURE 15: Ever-present Noise.**

---

**DIAGNOSIS**

Use the Symptom Chart to diagnose the possible cause(s) of the noise. Noise is often created by the following factors:

- Traveling conditions of the vehicle
- Terrain of area traveled through
- Surrounding buildings
- Signal conditions

- Time period

If there are still problems with noise, even after performing inspection procedures 7 to 14, obtain information on the factors listed above. Determine whether the problem occurs on AM or FM, the station names, frequencies, etc. and contact the radio manufacturer's service center.

---

**INSPECTION PROCEDURE 16: Noise Comes Out, but neither AM nor FM Sounds.**

---

**DIAGNOSIS**

---

**STEP 1. Check the state of the antenna.**

Check that there is no damage or crack in the roof antenna.

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Repair or replace the roof antenna.

---

**STEP 2. Check to see if inspections are taking place in an area exposed to special electric fields.**

**Q: Are inspections taking place under special electric field conditions (underground garage, inside a building, etc).?**

**YES :** Go to Step 3.

**NO :** Go to Step 4.

---

**STEP 3. Relocate and check.**

Automatically receive in a good reception area that is not exposed to special electric fields.

**Q: Is reception of the strongest radio frequency possible within the area?**

**YES :** The procedure is complete.

**NO :** Go to Step 4.

---

**STEP 4. Tune then check.**

**Q: Did the sensitivity improve after tuning?**

**YES :** The procedure is complete.

**NO :** Go to Step 5.

---

**STEP 5. Check the antenna plug is connected to the radio and CD player.**

**Q: Is the antenna plug thoroughly connected to the radio and CD player?**

**YES :** Go to Step 6.

**NO :** Thoroughly the antenna plug connect to the radio and CD player.

---

**STEP 6. Check by temporarily replacing the radio and CD player.**

**Q: Are operations normal when using another radio and CD player?**

**YES :** Either repair or replace the new radio and CD player.

**NO :** Repair or replace the roof antenna.

---

INSPECTION PROCEDURE 17: Poor Reception.

---

**DIAGNOSIS**

---

**STEP 1. Check the state of the antenna.**

Check that there is no damage or crack in the roof antenna.

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Repair or replace the roof antenna.

---

**STEP 2. Check to see if inspections are taking place in an area exposed to special electric fields.**

**Q: Are inspections taking place under special electric field conditions (underneath garage, inside a building, etc).?**

**YES :** Go to Step 3.

**NO :** Go to Step 4.

---

**STEP 3. Relocate and check.**

Automatically receive in a good reception area that is not exposed to special electric fields.

**Q: Is reception of the strongest radio frequency possible within the area?**

**YES :** Move the vehicle to check the trouble symptom.

**NO :** Go to Step 4.

---

**STEP 4. Tune then check.**

**Q: Did the sensitivity improve after tuning?**

**YES :** The procedure is complete.

**NO :** Go to Step 5.

---

**STEP 5. Check with several broadcasting stations.**

*NOTE: Multipath noise and fading noise: Because the frequency of FM waves is extremely high, it is highly susceptible to effects from geological formations and buildings. These effects disrupt the broadcast signal and obstruct reception in several ways.*

**Multipath noise**

- *This describes the echo that occurs when the broadcast signal is reflected by a large obstruction and enters the receiver with a slight time delay relative to the direct signal (repetitious buzzing).*

**Fading noise**

- *This is a buzzing noise that occurs when the broadcast beam is disrupted by obstructing objects and the signal strength fluctuates intricately within a narrow range.*

**Q: Is the abnormality in reception generated only within a certain range?**

**YES :** Check that a poor reception is resolved.

**NO :** Go to Step 6.

---

**STEP 6. Check the antenna plug connection to the radio and tape player or radio and CD player.**

**Q: Is the antenna plug thoroughly connected to the radio and tape player or radio and CD player?**

**YES :** Go to Step 7.

**NO :** Thoroughly connect the antenna plug and the radio and tape player or radio and CD player.

---

**STEP 7. Check by temporarily replacing the radio and CD player.**

**Q: Does the other radio and CD player work normally?**

**YES :** Either repair or replace the radio and CD player.

**NO :** Repair or replace the roof antenna.

---

**INSPECTION PROCEDURE 18: Distortion on AM or on Both AM and FM.**

---

**DIAGNOSIS**

---

**STEP 1. Check the degree in which distortion is generated.**

**Q: How much distortion is generated?**  
**Occasional distortion :** Go to Step 2.  
**Constant distortion :** Go to Step 3.

---

**STEP 2. Check by the transmission antenna.**

**Q: Is there distortion by the transmission antenna?**  
**YES :** The input from the antenna is too big.  
**NO :** Go to Step 3.

---

**STEP 3. Check how the speakers are setup.**

**Q: Are any cords coming in contact with the paper cones of the speakers?**  
**YES :** Move the cords so that they do not come in contact with the paper cones of the speaker.  
Check that a distortion is resolved.  
**NO :** Go to Step 4.

---

**STEP 4. Check the speakers.**

1. Remove the speakers.
2. Check to see if there is any ripping of the paper cones or any foreign obstacles in the paper cone.

**Q: Are the speakers normal?**  
**YES :** Go to Step 5.  
**NO :** Repair or replace the speakers.

---

**STEP 5. Check how the speakers are setup.**

**Q: Check to see if the speakers are setup in a deformed manner.**  
**YES :** Correct the way the speakers are setup so they are securely setup.  
**NO :** Repair or replace the radio and CD player.

---

**INSPECTION PROCEDURE 19: Distortion on FM Only.**

---

**DIAGNOSIS**

---

**STEP 1. Check with another broadcasting station.**

**Q: Is there distortion when turning to another broadcasting station?**  
**YES :** Go to Step 2.  
**NO :** The signal from that station is too weak.

---

**STEP 2. Relocate the reception area and check.**

**Q: When relocating the reception area does the distortion increase or decrease?**  
**YES :** The cause may be multipath noise.  
**NO :** Repair or replace the radio and CD player.

---

**INSPECTION PROCEDURE 20: Using the Auto Select Function, too Few Automatic Stations are Selected.**

---

**DIAGNOSIS**

---

**STEP 1. Check the state of the antenna.**

Check that there is no damage or crack in the roof antenna.

**Q: Is the check result normal?**  
**YES :** Go to Step 2.  
**NO :** Repair or replace the roof antenna.

---

**STEP 2. Check the number of radio stations.**

**Q: Are there sufficient numbers of radio stations within the area?**  
**YES :** Go to Step 3.  
**NO :** Go to Step 4.

---

**STEP 3. Check the distance from the transmission antenna.**

**Q:** Is there a transmission antenna within a range of 2 miles?

**YES :** Go to Step 5.

**NO :** Go to Step 4.

---

**STEP 4. The check if there are not that many radio stations and when there is no transmission antenna in the vicinity.**

Execute automatic selection and check to see that the strongest radio frequency is receivable within the area.

**Q:** Is reception of the strongest radio frequency possible within the area?

**YES :** There is no action to be taken.

**NO :** Go to Step 5.

---

**STEP 5. Check that there is no vehicle under special electric field condition.**

**Q:** Is the check result normal?

**YES :** Go to Step 7.

**NO :** Go to Step 6.

---

**STEP 6. Relocate and check.**

Automatically receive in a good reception area that is not exposed to special electric fields.

**Q:** Is reception of the strongest radio frequency possible within the area?

**YES :** There is no action to be taken.

**NO :** Go to Step 7.

---

**STEP 7. Check the antenna plug is connected to the radio and CD player.**

**Q:** Is the antenna plug thoroughly connected to the radio and CD player?

**YES :** Repair or replace the radio and CD player.

**NO :** Thoroughly connect the antenna plug and the radio and CD player.

---

**INSPECTION PROCEDURE 21: Preset Stations are Erased.**

---

**CIRCUIT OPERATION**

Power is continuously supplied to the radio and CD player.

**TECHNICAL DESCRIPTION (COMMENT)**

The cause is probably a faulty radio and CD player memory backup power supply system circuit.

**TROUBLESHOOTING HINTS**

- Damaged wiring harness or connector
- Malfunction of the radio and CD player

**DIAGNOSIS**

Refer to Inspection Procedure 1 [P.54A-372](#).

---

**INSPECTION PROCEDURE 22: CD can not be Inserted.**

---

**DIAGNOSIS**

---

**STEP 1. Check that a CD has been already loaded.**

**Q:** Has a CD been already loaded?

**NO :** Go to Step 2.

**YES :** Take out the CD (If the CD cannot be ejected, refer to Inspection Procedure 26 [P.54A-430](#)). Check that a CD can be inserted.

---

**STEP 2. Check how a CD is inserted.**

- Ensure that the ignition switch is at "ACC" or "ON".

*NOTE: If you try to load a CD when the ignition switch is at the positions other than "ACC" or "ON", the CD will not be inserted completely and then rejected.*

**Q:** If you try to load the CD, does the CD stops halfway and then rejected?

**YES :** Refer to Inspection Procedure 26

[P.54A-430](#).

**NO :** Go to Step 3.

---

**STEP 3. Check after the CD is loaded.**

*NOTE: Even though the CD is loaded, "ERROR" (error) is sometimes displayed with the CD rejected because of vibration/shock or dew on the CD face or optical lens.*

**Q: Though the CD is inserted completely, is "ERROR" (error) displayed and the CD ejected?**

**YES :** Go to Step 4.

**NO :** The procedure is complete.

---

**STEP 4. Check the CD.**

Check the CD for the conditions below:

- Is the CD loaded with its label facing down?
- Is the recorded face dirty or scratched?
- Is there dew on the recorded face?

**Q: Is the CD in good condition?**

**YES :** Go to Step 5.

**NO :** The original CD is defective.

---

**STEP 5. Check again using a normal CD, which is not dirty or scratched.**

- Load another normal CD.
- Check that the CD player recognizes and play the CD.

**Q: When you substitute another normal CD, is the CD loaded correctly?**

**YES :** The original CD is defective. Check that a CD can be inserted.

**NO :** Replace the radio and CD player. The procedure is complete.

---

**INSPECTION PROCEDURE 23: No Sound. (CD Only)**

---

**DIAGNOSIS**

---

**STEP 1. Check again using another CD, which is not dirty or scratched.**

**Q: When you substitute another normal CD, is the CD played normally?**

**YES :** The original CD is defective. The CD player should sound normally.

**NO :** Go to Step 2.

---

**STEP 2. Check power supply to the CD player when the ignition switch is at "ACC" or "ON" position.**

**Q: Is the radio and CD player energized when the ignition switch is turned to the "ACC" or "ON" position?**

**YES :** Replace the radio and CD player. The procedure is complete.

**NO :** Check the memory backup power supply circuit. Refer to Inspection Procedure 1 [P.54A-372](#).

---

**INSPECTION PROCEDURE 24: CD Sound Skips.**

---

**DIAGNOSIS**

---

**STEP 1. Check the state in which the sound on the CD jumps.**

**Q: Does the sound jump when the car is parked?**

**YES :** Go to Step 2.

**NO :** Go to Step 4.

---

**STEP 2. Check the surface of the CD.**

**Q: Are there any scratches or soiling on the CD?**

**YES :** The CD is defective if there are any scratches. Clean the CD surface if it is dirty. Check that a CD sound skip is resolved.

**NO :** Go to Step 3.

**STEP 3. Check when replacing with a CD that can be played normally without any scratches or soiling.**

**Q: Does the CD play normally when replaced with a CD that is not scratched or dirty and can play normally?**

**YES :** Defective CD used. Check that a CD sound skip is resolved.

**NO :** Go to Step 4.

---

**STEP 4. Check by tapping the radio and CD player.**

*NOTE: Check by using a known-good CD which is free from scratches, dirt or any other abnormality.*

**Q: Does the sound jump when tapping the radio and CD player?**

**YES :** Securely mount the audio. Check that a CD sound skip is resolved.

**NO :** Either replace the audio system or take the following measures if a servicing shop is nearby.

1. Investigate in detail the conditions when the sound jumps while driving the car.
2. Describe these conditions to the service shop for consultation.
3. Either replace the audio according to the instructions of the service shop.

Check that a CD sound skip is resolved.

---

## INSPECTION PROCEDURE 25: Sound Quality is Poor.

---

### DIAGNOSIS

---

**Check to see that the CD can be played normally and that it is free of any scratches or soiling.**

Replace with better sound quality CD.

**Q: Is the sound quality better replacing the CD with a clean CD without any scratches that can be played?**

**YES :** The CD is defective. The sound quality should return to normal.

**NO :** Either repair or replace the radio and CD player.

---

## INSPECTION PROCEDURE 26: CD can not be Ejected.

---

### DIAGNOSIS

---

**Check the power of ignition switch "ACC" or "ON" position.**

**Q: Does the radio and CD player power turn ON when the ignition switch is in the "ACC" or "ON" position?**

**YES :** Either replace the radio and CD player.

**NO :** Check the memory backup power supply circuit. Refer to Inspection Procedure 1

[P.54A-372.](#)


## ON-VEHICLE SERVICE

ADJUSTMENT OF VOLUME AND SOUND  
QUALITY AUTOMATIC CORRECTION FUNCTION

M1544014200107

When the following operations are performed with the audio power ON, the sound volume during driving and the ON/OFF of sound quality automatic correction function are switched.

1. Press and hold (approximately 2 seconds) the sound adjustment switch.
2. Press the sound adjustment switch (approximately 1.5 seconds or less) to switch to the SCV setting screen.
3. SCV ON (when the automatic correction function is ON) or SCV OFF (when the automatic correction function is OFF) is displayed.
4. Turn the sound adjustment switch knob to switch between SCV ON and OFF.
5. Press the sound adjustment switch or leave as it is for 10 seconds or more.
6. Go back to the audio normal screen.

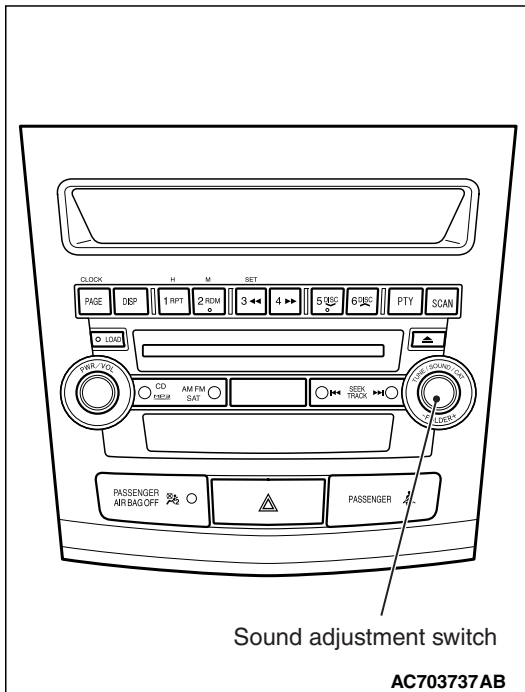


## SERVICE DATA

M1544014100218

Item No.	Scan tool display	Check condition	Normal condition
1	RADIO remoto SW (SEEK-)	When the "CH down" switch is pushed	ON
2	RADIO remoto SW (SEEK+)	When the "CH up" switch is pushed	ON
3	RADIO remoto SW (MODE)	When the "Mode" switch is pushed	ON
4	RADIO remoto SW (VOL-)	When the "VOL down" switch is pushed	ON
5	RADIO remoto SW (VOL+)	When the "VOL up" switch is pushed	ON
10	On hook switch	When the "Hang-up" switch is pushed	ON
11	Off hook switch	When the "Pick-up" switch is pushed	ON
13	VR switch	When the "Speech" switch is pushed	ON

REMOVAL AND INSTALLATION  
RADIO AND CD PLAYER

M1544010900502

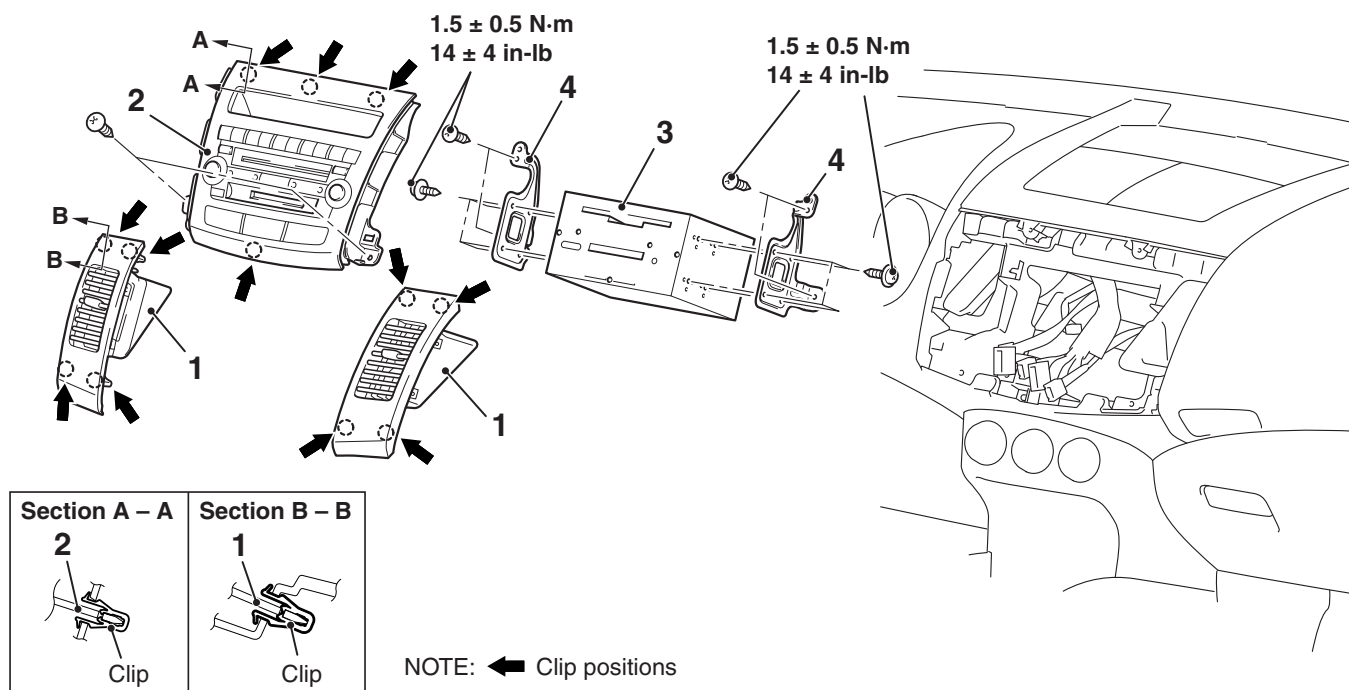

AC703738AB



**Removal Steps**

1. Center outlet
2. Center panel assembly

**Removal Steps (Continued)**

3. Radio and CD player
4. Radio and CD player bracket

## AUDIO ADAPTER

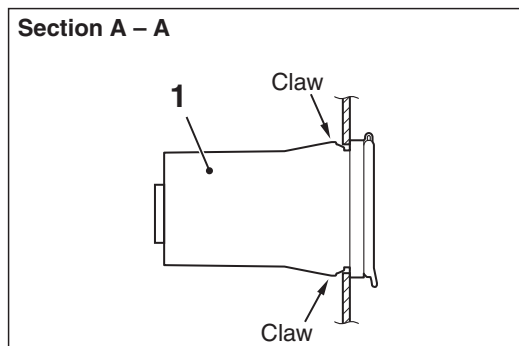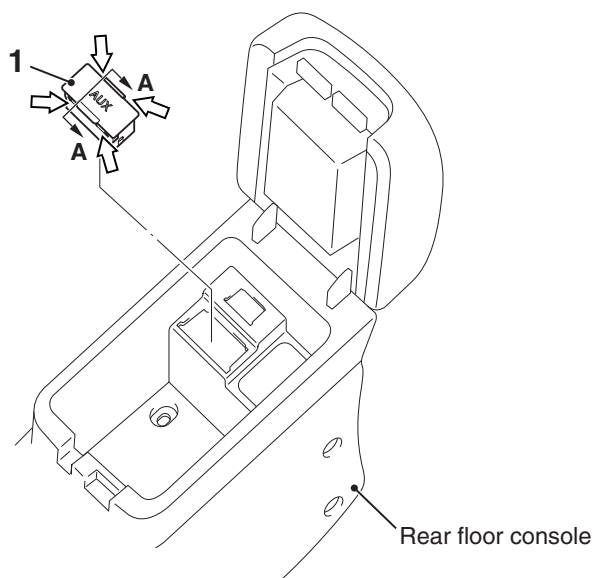NOTE  
← :Claw positions

AC900460AC

**Removal Steps**

- Rear floor console assembly (Refer to GROUP 52A –Rear Floor Console assembly P.52A-8.)
1. Audio adapter

## AUDIO ADAPTER INSPECTION

1. Remove the audio adapter.(Refer to [P.54A-432](#))
2. Check the continuity between terminals of audio adapter and pin jack.




Continuity exists. ( $2 \Omega$  or less)

## REAR VIEW CAMERA


### GENERAL INFORMATION

M1540905600164

A rear view camera has been established to the liftgate garnish. The rear view camera displays the rear view image of the vehicle on the multivision display for easy confirmation of safety when driving backward.

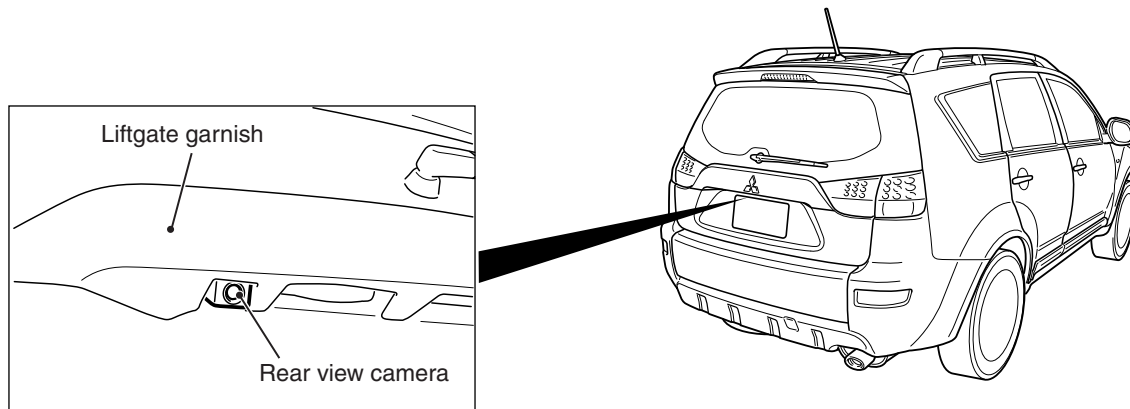

AC803219AB

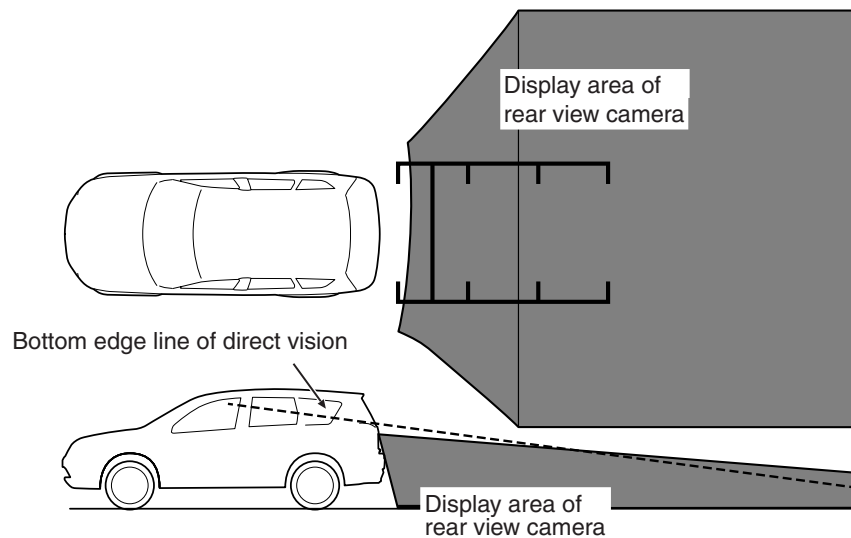


AC612214AC

## OPERATION

When the selector lever is moved to the R (reverse) position with the ignition switch ON, the image of the rear view camera is displayed on the multivision display screen.

## Screen display








Displays rear view camera.

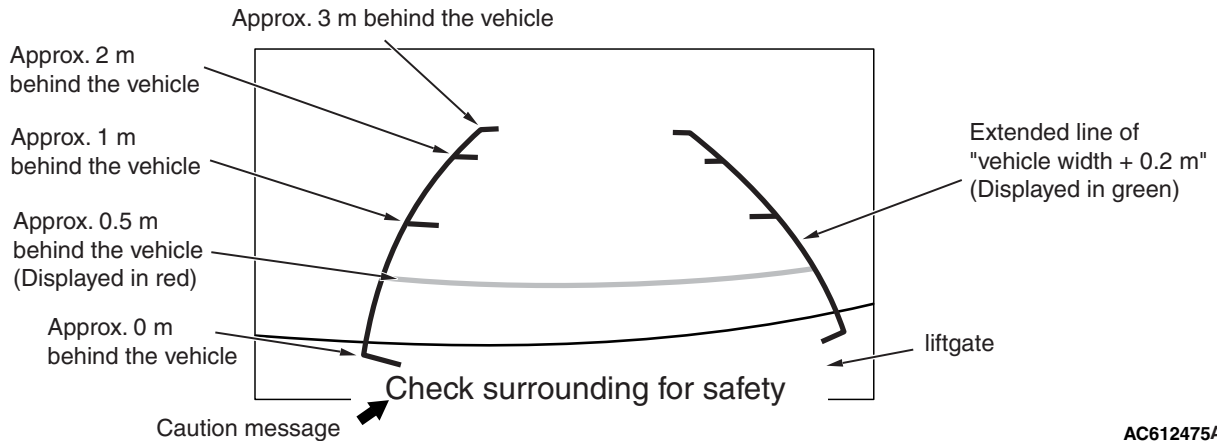
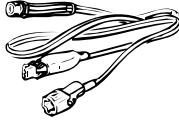
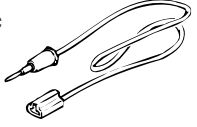

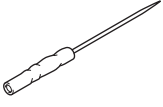


AC612475AC

## SPECIAL TOOLS

M1540902100041

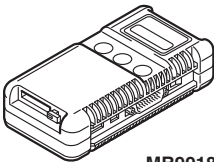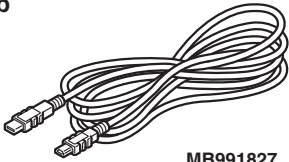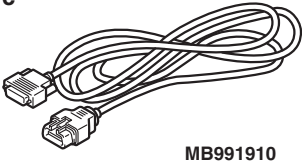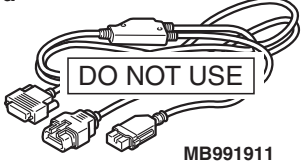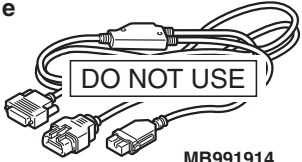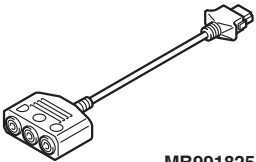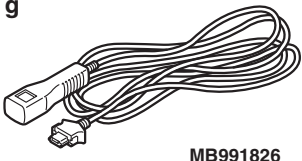Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler models only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b></p> <p><b>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</b></p> <p>Diagnostic trouble code or service data check.</p>

Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>b</p>  <p>c</p>  <p>d</p> 	<p>MB991223</p> <p>a. MB991219</p> <p>b. MB991220</p> <p>c. MB991221</p> <p>d. MB991222</p> <p>Harness set</p> <p>a. Test harness</p> <p>b. LED harness</p> <p>c. LED harness adaptor</p> <p>d. Probe</p>	General service tools	<p>Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector.</p> <p>a. Connector pin contact pressure inspection</p> <p>b. Power circuit inspection</p> <p>c. Power circuit inspection</p> <p>d. Commercial tester connection</p>
 <p>MB992006</p>	<p>MB992006</p> <p>Extra fine probe</p>	–	<p>Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector.</p>

## TROUBLESHOOTING

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

M1540902300067

Refer to GROUP 00 –Contents of troubleshooting [P.00-7](#).

### TROUBLE SYMPTOM CHART

M1540900300072

Trouble symptom	Reference page
Rear view camera image is not correctly displayed	<a href="#">P.54A-438</a>


## SYMPTOM PROCEDURES

Rear view camera image is not correctly displayed.

**CAUTION**


Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal.  
(Check that the voltage is 10 V or more.)

Rear View Camera Circuit

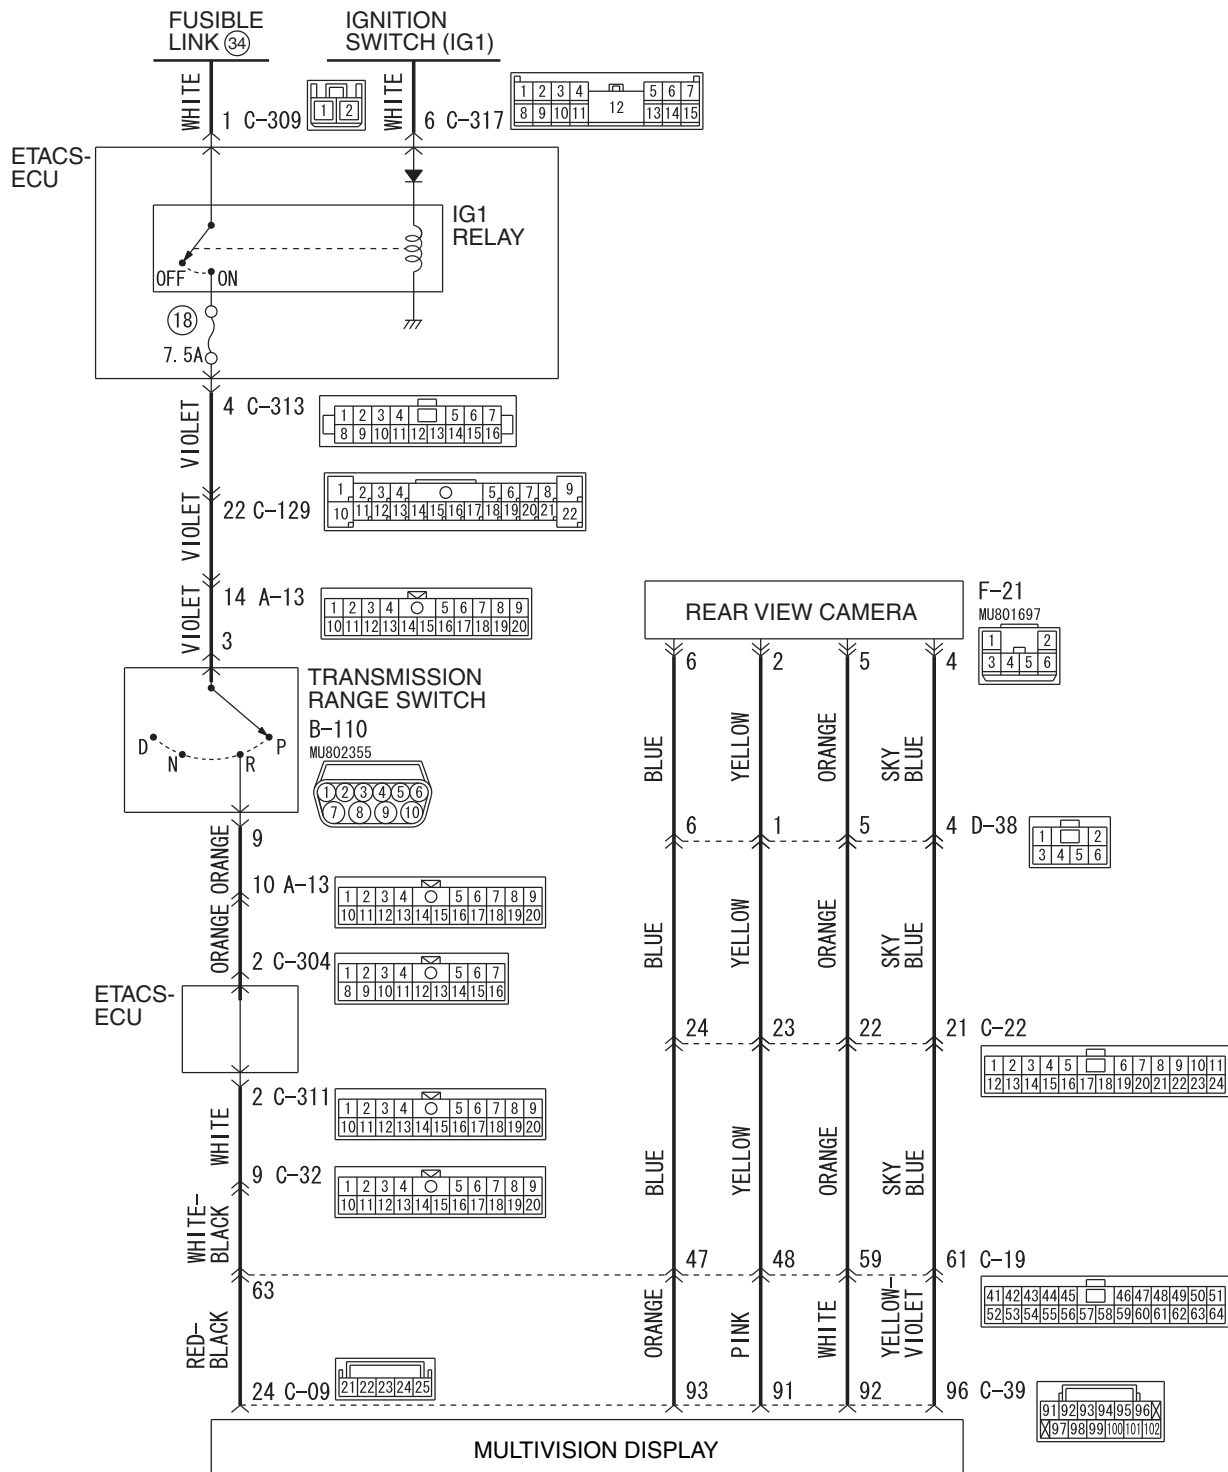


WAG54M029A


Connector: A-13

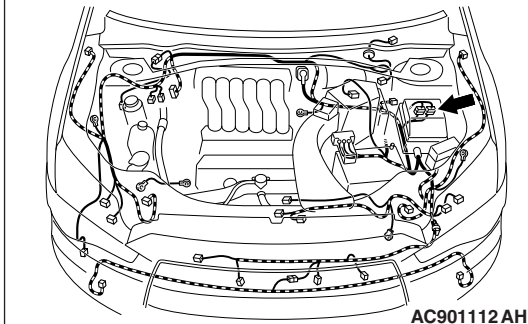


Connectors: C-32, C-129

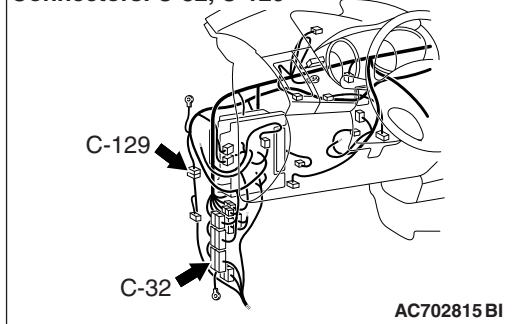


Connector: B-110 <2.4L ENGINE>

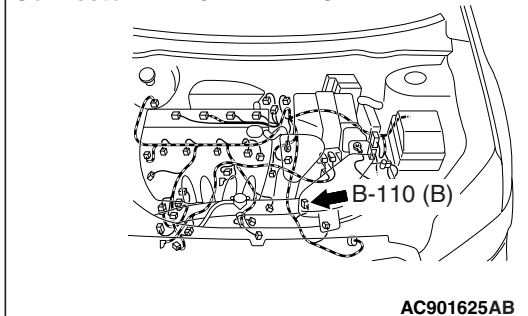


Connectors: C-304, C-311, C-313

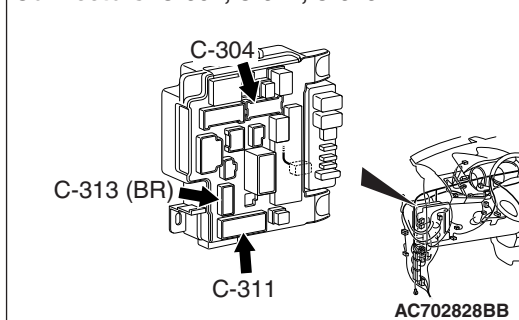


Connector: B-110 <3.0L ENGINE>

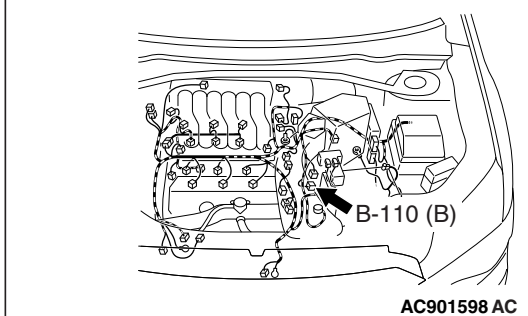


Connector: D-38

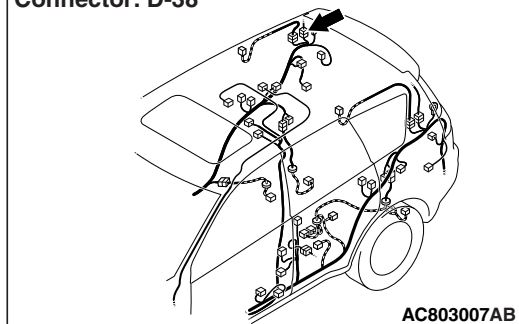

Connectors: C-09, C-19, C-22

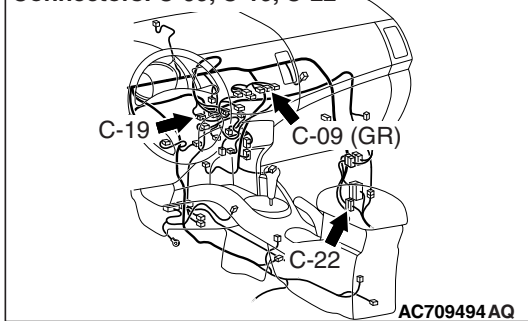

Connector: F-21

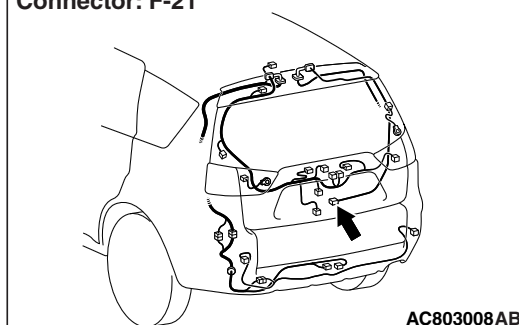

**COMMENTS ON TROUBLE SYMPTOM**

When the screen of rear view camera is not shown even if the selector lever is "R" (Reverse) position, the rear view camera, the wiring harness, connectors, transmission range switch or multivision display may be defective.

**PROBABLE CAUSES**

- Damaged harness wires and connectors
- Malfunction of the transmission range switch
- Malfunction of the rear view camera
- Malfunction of the multivision display

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A


**STEP 1. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

- (1) Operate scan tool MB991958 to read the ETACS-ECU option coding information. (Refer to GROUP 00, Coding List [P.00-35.](#))
- (2) Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES** : Troubleshoot the ETACS-ECU (Refer to GROUP 54A, ETACS, Diagnosis [P.54A-742](#)), and then go to Step 2.

**NO** : Go to Step 2.

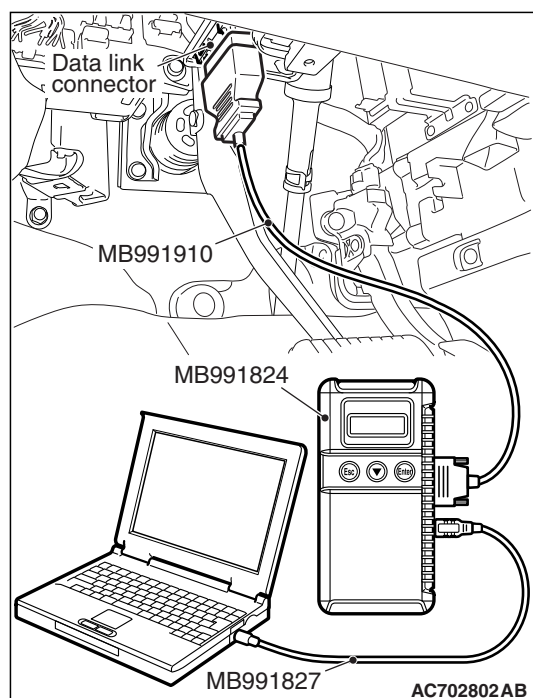

**STEP 2. Using scan tool MB991958, check data list.**

Check if ETACS-ECU related signal is set.

- Turn the ignition switch to the ON position.

Item No.	Item name	Normal conditions
254	IG voltage	System positive voltage

**OK: Normal condition is displayed.**

**Q: Is the check result normal?**

**YES :** Go to Step 3.

**NO :** Refer to Troubleshooting –Inspection Procedure 1  
"The ignition switch (IG1) signal is not received"  
[P.54A-800.](#)

**STEP 3. Using scan tool MB991958, check data list**

Check if ETACS-ECU related signal is set.

- Turn the ignition switch to the ON position.
- selector lever is "R" (Reverse) position

Item No.	Item name	Normal condition
289	shift reverses SW	ON

**OK: Normal condition is displayed.**

**Q: Is the check result normal?**

**YES :** Go to step 10.

**NO :** Go to step 4.

**STEP 4. Check ETACS-ECU connector C-313 and transmission range switch connector B-110 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are ETACS-ECU connector C-313 and transmission range switch connector B-110 in good condition?**

**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection  
[P.00E-2.](#)

---

**STEP 5. Check the wiring harness between ETACS-ECU connector C-313 (terminal 4) and transmission range switch connector B-110 (terminal 3).**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connector C-129, A-13 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-129, A-13 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-313 (terminal 4) and transmission range switch connector B-110 (terminal 3) in good condition?**

**YES :** Go to Step 6.

**NO :** Repair the wiring harness.

---

**STEP 6. Check ETACS-ECU connector C-304 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-304 in good condition?**

**YES :** Go to Step 7.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 7. Check the wiring harness between ETACS-ECU connector C-304 (terminal 2) and transmission range switch connector B-110 (terminal 9).**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connector A-13 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector A-13 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-304 (terminal 2) and transmission range switch connector B-110 (terminal 9) in good condition?**

**YES :** Go to Step 8.

**NO :** Repair the wiring harness.

---

**STEP 8. Check the transmission range switch and the control cable.**

Check that the transmission range switch and the control cable are adjusted correctly.(GROUP 23A–On-vehicle Service, transmission range switch and control cable adjustment [P.23A-139](#) <CVT> or GROUP 23C –On-vehicle Service, transmission range switch and control cable adjustment [P.23C-269](#) <A/T>)

**Q: Is the check result normal?**

**YES** : Go to Step 9.

**NO** : Adjust the transmission range switch and the control cable.

---

**STEP 9. Check the transmission range switch.**

- Check for continuity of the transmission range switch.  
(Refer to GROUP 23A –On-vehicle service, Transmission range check [P.23A-138](#) <CVT> or GROUP 23C –On-vehicle service, Transmission range check [P.23C-269](#) <A/T>)

**Q: Is the check result normal?**

**YES** : The trouble can be an intermittent malfunction (Refer to GROUP 00 –How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO** : Replace the transmission range switch.

---

**STEP 10. Check ETACS-ECU connector C-311 and multivision display connector C-09 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are ETACS-ECU connector C-311 and multivision display connector C-09 in good condition?**

**YES** : Go to Step 11.

**NO** : Repair the defective connector.

---

**STEP 11. Check the wiring harness between ETACS-ECU C-311 connector (terminal 2) and C-09 multivision display connector (terminal 24).**

- Check the communication lines for open circuit or short circuit.

*NOTE: Before the wiring harness inspection, inspect the C-19 and C-32 intermediate connector, and repair if necessary.*

**Q: Is the wiring harness between ETACS-ECU C-311 connector (terminal 2) and C-09 multivision display connector (terminal 24) in good condition?**

**YES** : Go to step 12.

**NO** : Repair the wiring harness.

**STEP 12. Confirmation in MMCS service mode**

Perform "Network/Connect Line Check" in the MMCS service mode to check that the communication and wire connection with the rear view camera are OK (Refer to [P.54A-452](#)).

*NOTE: The rear view camera is shown as "rear camera" on the "Network/Connect Line Check" in the service mode of MMCS.*

**Q: Is the check result normal?**

**YES :** Go to Step 14.

**NO :** Go to Step 13.

---

**STEP 13. Check rear view camera connector F-21 and multivision display connector C-39 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are rear view camera connector F-21 and multivision display connector C-39 in good condition?**

**YES :** Go to Step 14.

**NO :** Repair the defective connector.

---

**STEP 14. Check the wiring harness between rear view camera connector F-21 connector (terminal 6, 2, 5, 4) and multivision display C-39 connector (terminal 93, 91, 92, 96)**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connector C-19, C-22, D-38 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-19, C-22, D-38 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the check result normal?**

**YES :** Go to Step 15.

**NO :** Repair the wiring harness.

---

**STEP 15. Confirmation in MMCS service mode.**

(1) Display the VEHICLE SIGNAL CHECK screen. (Refer to [P.54A-452](#).)

(2) Move the selector lever to the R position and check whether "ON" is displayed.

**Q: Is the check result normal?**

**YES :** Go to Step 16.

**NO :** Replace the multivision display.

#### STEP 16. Trouble symptom recheck

Check that the display of rear view camera is shown normally.

##### Q: Is the check result normal?

**YES** : The trouble can be an intermittent malfunction (Refer to GROUP 00 –How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO** : Replace the rear view camera temporarily and go to Step 17.

#### STEP 17. Trouble symptom recheck

Check that the display of rear view camera is shown normally.

##### Q: Is the check result normal?

**YES** : Replace the rear view camera.

**NO** : Replace the multivision display.

## ON-VEHICLE SERVICE


### CAMERA SETTING

Refer to MMCS –service mode [P.54A-452](#).

M1540905700019

### REMOVAL AND INSTALLATION

M1540905500059

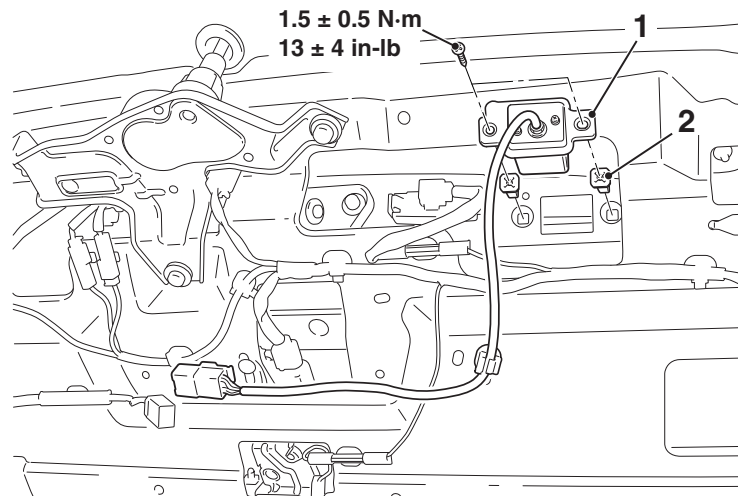

AC612375AB

#### Removal Steps

- Liftgate trim (Refer to GROUP 52A – Liftgate Trim [P.52A-14](#))

#### Removal Steps (Continued)


1. Rear view camera
2. Screw grommet

# MMCS


## GENERAL INFORMATION

M1546000100307

For Mitsubishi multi-communication system (MMCS), the multivision display (7-inch liquid crystal display of wide 2 DIN size) with hard disk drive (40 GB) and the CD/DVD drive is established.

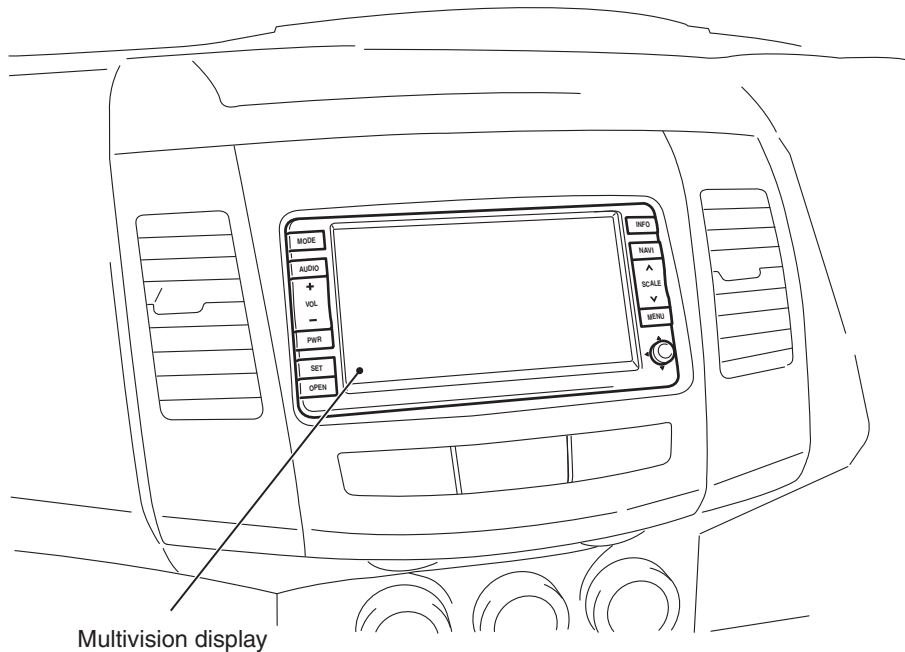

AC606294AC

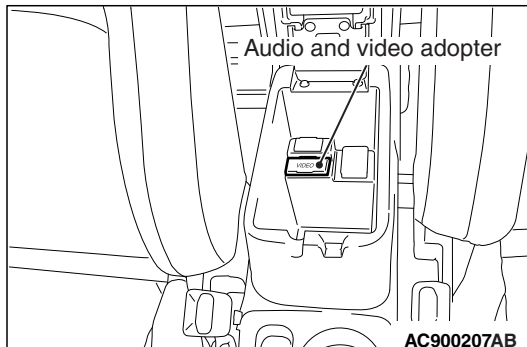

AC900207AB

The audio and video adapter has been established to the center tray in order to connect visual equipment such as game machine and video player.

Display (function)	Content
Navigation	Displays the navigation functions including the map display, search, guidance, information search, Carpool/HOV lane..
Vehicle position information	Displays the position information of current location. (Longitude and latitude, altitude, GPS reception status)
CD/DVD	Plays the CD or DVD inserted to the drive (for MP3/WMA)
Music server	Plays back the music data on hard disk drive, and records the music CD.
Rear display screen	Displays image via a rear display unit (DVD drive-incorporated rear seat 9-inch wide LCD display).
Radio	Displays the receiving station information. Also, the operation of receiving channel can be performed.
Sound control	Adjusts the high/middle/low tone and balance. Function to set music type, sound field, and others when adopting the Rockford Fosgate ® premium sound system
AUX	Plays the image and sound input through the audio and video adapter. (Image cannot be seen during driving because of the driving restriction.)
Drive information	Displays the average fuel consumption, instantaneous fuel consumption, possible cruising distance, driving time, and lap time.
Environmental data	Displays the atmospheric pressure* and ambient temperature.
Maintenance information	Displays the maintenance information for engine oil, oil filter, tire rotation, clean air filter, and brake system.
A/C information	Displays the A/C information.
ETACS function customization	Function for ETACS-ECU customization
Mobile Phone	Function to operate the cellular phone (calling, receiving, etc.) using the multivision display <Vehicles with hands free modul>
Calendar	Displays the calendar.

**NOTE:** \*: May not be displayed depending on the engine model.








- The storage of very large map data is now possible, and the following contents have been adopted.
  - Map type navigation
  - NAVTEQ map database
  - Map data stored in hard disk drive
- Most sophisticated LSI has been used as one for car navigation system.



**NOTE:** \*LSI stands for Large Scale Integration, and is a large-scale integrated circuit (IC) containing between 1,000 and 100,000 circuit elements.

- U.S. English, French, and Spanish are available to select.
- By attaching the hands free module, the hands free cellular phone system becomes available.
- By attaching the satellite radio tuner, the SIR-IUS™ satellite radio broadcasting becomes available.

## SPECIAL TOOLS

M1540200300211

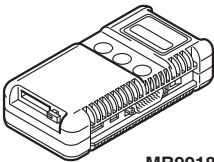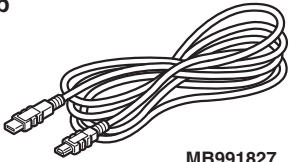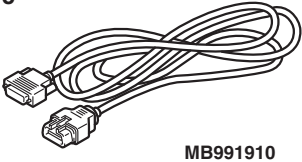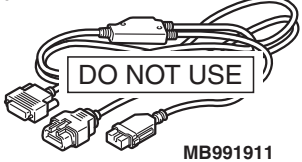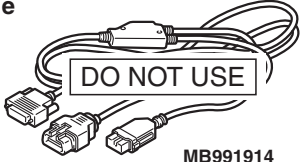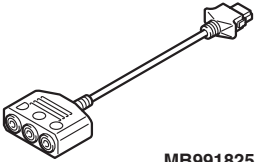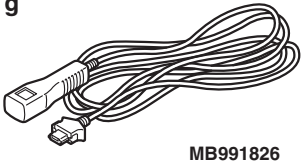Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler models only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b></p> <p><b>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</b></p> <p>CAN bus diagnostics, diagnostic trouble code or data list check.</p>

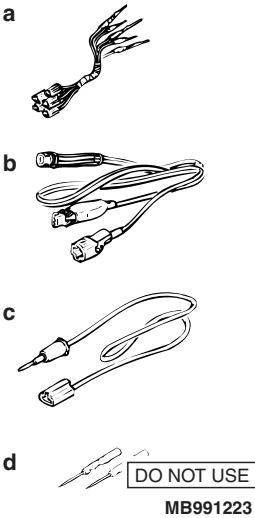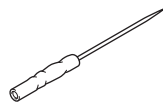Tool	Tool number and name	Supersession	Application
	MB991223 a. MB991219 b. MB991220 c. MB991221 d. MB991222 Harness set a. Test harness b. LED harness c. LED harness adaptor d. Probe	General service tools	Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector. a. Connector pin contact pressure inspection b. Power circuit inspection c. Power circuit inspection d. Commercial tester connection
	MB992006 Extra fine probe	–	Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector.

## DIAGNOSIS

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00 –Troubleshooting contents

M1546001500115

[P.00-7.](#)

### PRECAUTIONS ON SERVICING MMCS

M1546003000224

#### PRIOR TO DISCONNECTING THE VEHICLE BATTERY

The MMCS stores a lot of information which your customer registers in its memory. All of this information will be cleared when the battery terminals are disconnected. Therefore, the preset channels must be stored before the vehicle battery is disconnected. Vehicle's current position and destinations must be stored if the vehicle battery remains disconnected for long periods.

- If an error is displayed, check that relevant wiring harness connectors are engaged correctly. If a failure is found, repair the connectors and check the trouble symptom again.
- If the wiring harness connectors are engaged correctly, check the wiring harness. If the wiring harness is in good condition, replace relevant component(s). Now the error code and the service mode data must be stored.

**NOTE:** If a system communication related failure is suspected, diagnose the system.

#### DIAGNOSIS TIPS CONCERNING THE ENTIRE SYSTEM

- If at least two system functions are defective at the same time, it is possible that communication between the system components is abnormal. Check the system using the communication and wire connection check in the service mode.

#### DIAGNOSIS TIPS CONCERNING THE NAVIGATION FUNCTION

- The precision of the GPS positioning is limited due to its operation principles. So, some of customer reports do not mean that the system is defective.

Prior to troubleshooting, interrogate your customer about how the navigation system is used and where he/she drives. If you determine that the system is OK, explain to your customer about how the system works and how the customer should operate it.

2. If the system is not OK, diagnose the system according to the trouble symptom chart.

## ERROR MESSAGE

M1546023500221

When the multivision display detects its own unintentional operation or malfunction in the loaded disc, it displays the following error messages.

Error messages	Error contents	Cause	Action
The unit is too hot. Please wait...	Malfunction of HDD by high temperature	The temperature of HDD inside the multivision display is 201° F (94° C) or more.	Wait until the temperature drops to the operable temperature. After the temperature drops, the error message display is terminated, and then returns to the screen before the error message display.
The unit is too cold. Please wait...	Malfunction of HDD by low temperature	The temperature of HDD inside the multivision display is -4° F ( -20° C) or less.	Wait until the temperature rises to the operable temperature by working the air conditioning. After the temperature rises, the error message display is terminated, and the screen returns to the status before displaying the error message.
It is difficult to read the hard disc. Wait for a while until the hard disk is restored.	Malfunction of HDD by vibration	Severe vibration is applied to the multivision display, and the reading of the HDD data is prohibited.	When the multivision display confirms the HDD data reading availability, it restarts automatically. Check if the multivision display is securely installed to the vehicle body.
	HDD Partition Error	System malfunction occurs to the HDD inside the multivision display.	The multivision display checks HDD automatically. "Restart" is displayed after the completion of the check. Select "Restart" to restart the multivision display. If it does not restart, turn the ignition switch to the OFF position to turn off the power supply, and then turn the ignition switch to the ON position to restart. After the restart, check that the OK is displayed for the HDD Drive in the "Network/Connect Line Check" of the MMCS service mode. If not, replace the multivision display.

Error messages	Error contents	Cause	Action
Please check the disc.	Disk type error	The specification of the disk used has a problem.	The disk used may have a problem. Check the disk for scratches or dirt. Also, perform the Inspection procedure 8 "CD/DVD cannot be Played" of the troubleshooting. (Refer to <a href="#">P.54A-547.</a> )
Play is impossible due to a focus error. Please eject the disc.	Focus error	The disk used has scratches and dirt, and the data cannot be read.	
Play is impossible. Please eject the disc.	Disk error	The data of the disk used has a malfunction, and the data cannot be read.	
	Seek error		
	Servo startup error		
	TOC read error		
	DVD-Video Disk info error (Disk information cannot be read.)		
Play is impossible due to a Mechanism error.	Power-on error	The DVD drive inside the multivision display has a malfunction.	Perform the Inspection procedure 8 "CD/DVD cannot be Played" of the troubleshooting. (Refer to <a href="#">P.54A-547.</a> )
	Pickup operation error		
	Mecha stack error		
	Loading/eject error		
The region code is incorrect. Please eject the disc.	DVD-Video region code error	The region code of the DVD does not match the specification of the multivision display.	Replace with the DVD that matches the specification of the multivision display.
Please eject the disc. The monitor panel is too hot. Screen display has stopped to protect the liquid crystal panel. Wait until the monitor panel has cooled down.	Monitor high temperature error	The temperature of the monitor is 203° F (95° C) or more for 60 seconds or more.	The monitor turns OFF 5 seconds after the error message appears. Wait until the temperature of the monitor drops. The temperature drops, and then the multivision display returns automatically.

**NOTE:** "Environment" is not displayed on the "INFO" screen. Ambient temperature is not displayed on the environment screen. If atmospheric pressure or altitude is not displayed on the environment display, the CAN box unit may have a problem in the CAN communication with A/C-ECU or engine-ECU. Check if a diagnosis code is set in the CAN box unit.

## SERVICE MODE

M1546016600419

## HOW TO INITIATE THE SERVICE MODE

1. With the navigation system active, press and hold both the "NAVI" and "SET" buttons for 3.5 seconds.
2. The service mode will be initiated. Then "Service" screen will be displayed.

## HOW TO TERMINATE THE SERVICE MODE

If the operations below are done, the service mode will be terminated.




- If "Back" button is selected on "Service" screen, the service mode will terminate and then return to the previous screen.
- If "NAVI" button is pressed with the service mode active, the service mode will terminate and change to the navigation screen.


*NOTE: If "NAVI" button is pressed, the following functions of the service mode will terminate.*

- Vehicle Signal Check
- Monitor Check
- Camera Setting
- Network/Connect Line Check
- Speaker Check
- Versions Indication
- Sensor Check
- Touch Switch Confirmation
- CAN communication Confirmation
- Memory Initialization
- Versions Log Information

## VEHICLE SIGNAL CHECK

1. Select "Vehicle Signal Check" on "Service" screen.

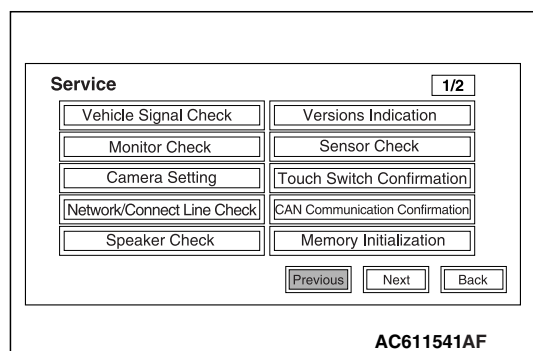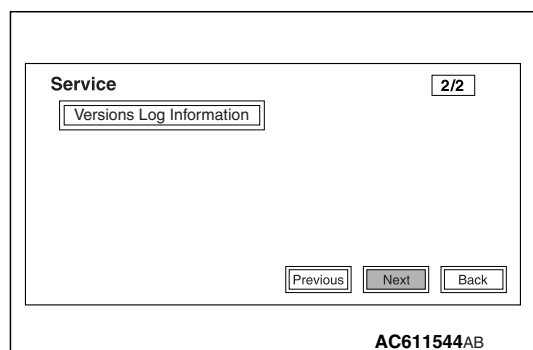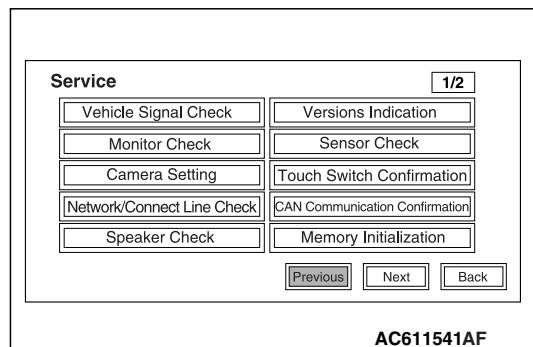


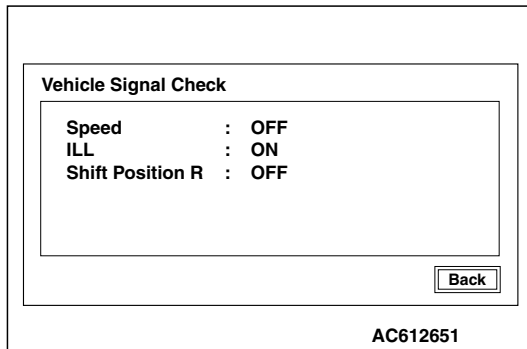


- The check results will be displayed for the items below.
  - "Speed": "ON" when the vehicle speed is 3.7 mph (6 km/h) or more, and "OFF" when the vehicle speed is 2.5 mph (4 km/h) or less.
  - "ILL": "ON" when the lighting switch is on (headlight position), and "OFF" when they are off (except headlight position).
  - "Shift Position R": "ON" when the selector lever is at R position, and "OFF" when it is at the other position.

## MONITOR CHECK


- Select "Monitor Check" on "Service" screen.

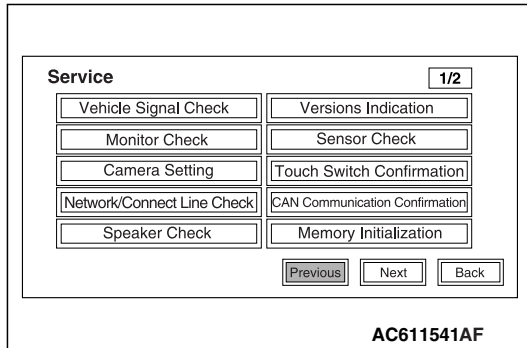


- Eight color bars will be displayed.

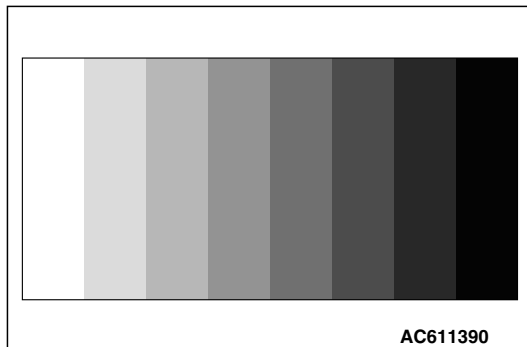


- When "Enter" is pressed on the navigation unit joystick while the eight color bars are shown, gray scale will be displayed with a 16-step gradation.

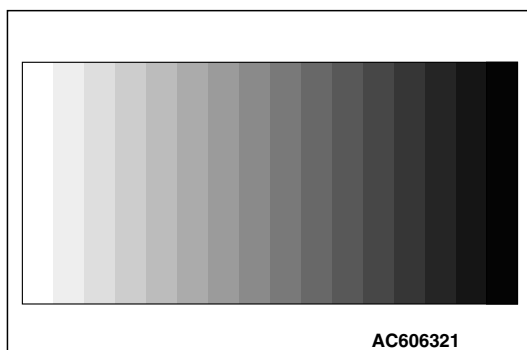

- When "Enter" is pressed while the gray scale is shown with a 16-step gradation, a crosshatch pattern will be displayed (Each cell should be square).

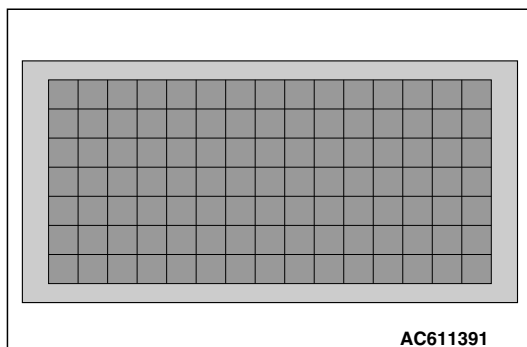

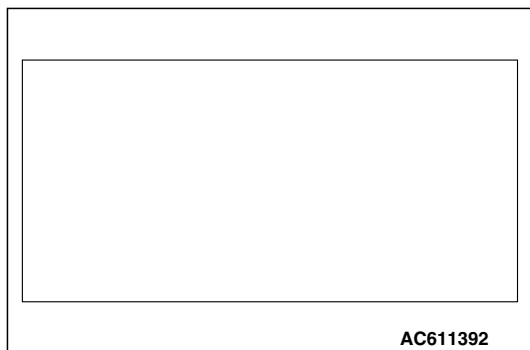

5. When "Enter" is pressed on the navigation unit joystick while the crosshatch pattern is shown, the screen will turn white.



6. When "Enter" is pressed on the navigation unit joystick while the screen is white, it will turn black.



7. When "Enter" is pressed on the navigation unit joystick while the screen is black, the screen will turn red.




8. When "Enter" is pressed on the navigation unit joystick while the screen is red, it will turn green.





9. When "Enter" is pressed on the navigation unit joystick while the screen is green, it will turn blue.
10. When "Enter" is pressed on the navigation unit joystick while the screen is blue, it will return to the "Service" screen.

**CAMERA SETTING**


1. Select "Camera Stetting" on "Service" screen.

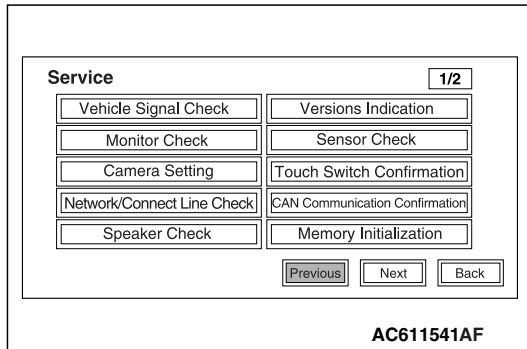

2. Draw base lines 1.64 ft (0.5 m) behind the vehicle and width +1.31 ft (0.4 m) [+0.66 ft (0.2 m) each for right and left] and align the guideline over the base lines.

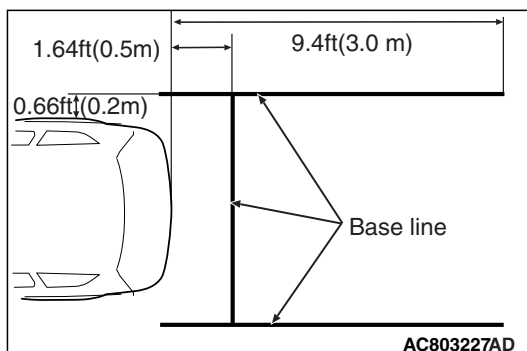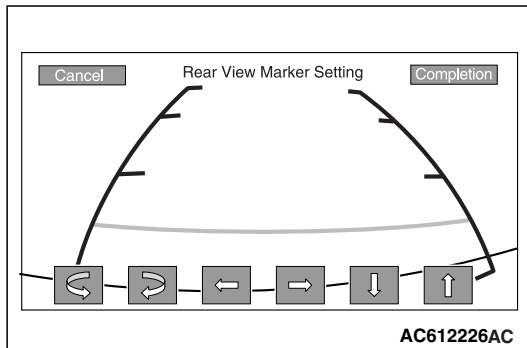
**NETWORK AND CONNECT LINE CHECK**

1. Select "Network/Connect Line Check" on "Service" screen.

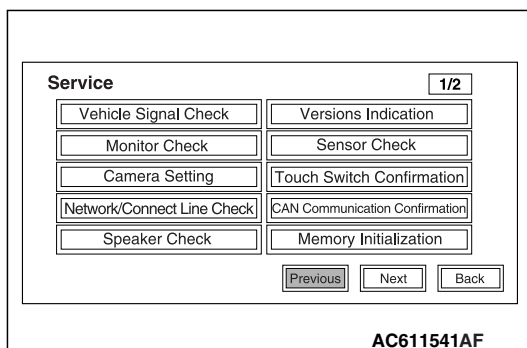

**Network/Connect Line Check**

Now checking the connection of the line.  
Please wait.



AC606325

2. A network and connect line check will be initiated. The "Network/Connect Line Check" screen will display how the check is in progress.

**Network/Connect Line Result**

DVD Drive	NG	Premium Audio	N/A
HDD Drive	OK	Rear Seat Display	N/A
SDRAM	OK	CAN BOX	OK
Rear Camera	N/A	Video Input	N/A
GPS Receiver	OK		

NG Code Back

AC608174

3. When the network and connect line check is finished, the screen will change to "Network/Connect Line Result" to show the check results.

**NOTE:**

*If there is "NG" or "N/A" as the check results, select "NG Code" on the "Network/Connect Line Result" screen. Then "NG code Indication" screen will show the NG code.*

4. If "Back" is selected on "Network/Connect Line Result", the screen will return to "Service" screen.

**NG Code Indication**

DVD Driver	0103

Back

AC606327

## SPEAKER CHECK


1. Select "Speaker Check" on "Service" screen.

**Service** 1/2

Vehicle Signal Check	Versions Indication
Monitor Check	Sensor Check
Camera Setting	Touch Switch Confirmation
Network/Connect Line Check	CAN Communication Confirmation
Speaker Check	Memory Initialization

Previous Next Back

AC611541AF

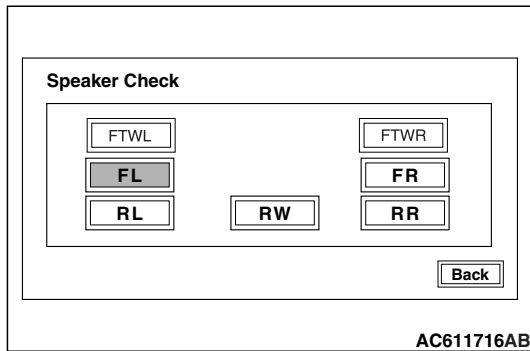

2. Select a speaker to be checked, and play test tone through the speaker.


**NOTE:**

- "FTWL", "FTWR", "RW" are displayed for vehicles with audio amplifier only.
- Volume can be adjusted while test tone is being played.
- During the test, only the selected speaker sounds. If "Back" is selected during the test, the test tone will disappear.


**VERSIONS INDICATION**

Displays versions indication (Loader, Application, Audio Microcomputer, Navi Sub Microcomputer, Map Data, Monitor, and CAN BOX).

1. Select "Versions Indication" on "Service" screen.

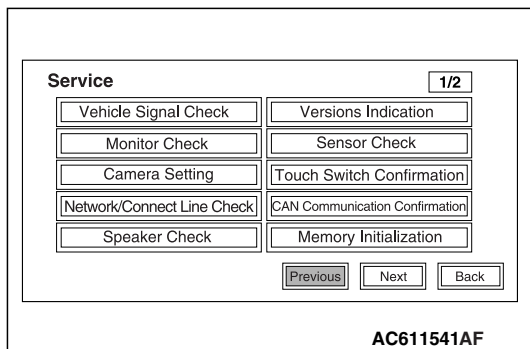


2. Versions indication is displayed.

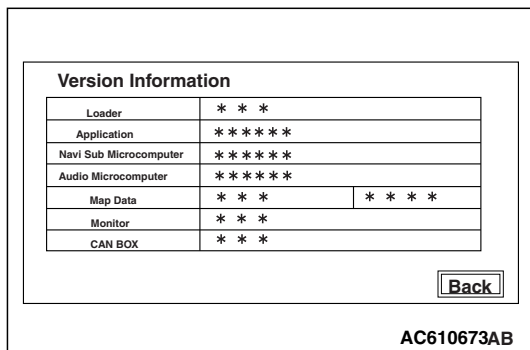**SENSOR CHECK**

The speed sensor and gyro sensor will be checked, depending on the vehicle conditions such as driving condition, stationary condition and travel direction change.

1. Select "Sensor Check" on "Service" screen.

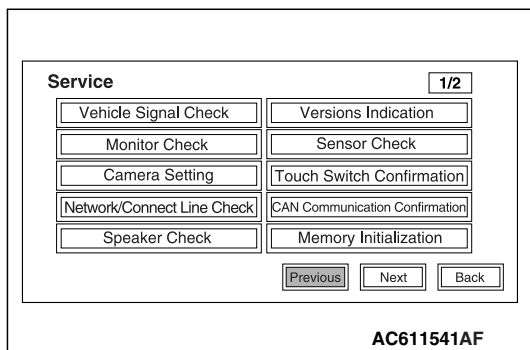

**Sensor Check**

You can check the sensors.  
Please don't move your car until after 5 seconds. After this you  
can move your car by changing the directions. If you are ready,  
please push Start

AC606311

**Sensor Check**

Please don't move your car.

AC606332

**Sensor Check**

Please move more than 10m  
while changing direction of the car.

AC606334

**Sensor Check**

Speed Sensor	OK
Gyro Sensor	NG

AC606335

**NG Code Indication**

Gyro Sensor	5

AC606336

2. The sensor check with the vehicle stationary will be executed in accordance with the screen.

3. The sensor check with the vehicle in motion will be executed in accordance with the screen.

4. When the sensor checks are complete, the screen will display the check results.

**NOTE:**


*If there is "NG" or "N/A" as the check results, select "NG Code" on the "Sensor Check" screen. Then "NG code Indication" screen will show the NG code.*

**NG CODE REFERENCE TABLE FOR SENSOR CHECK**



Sensor classification	NG code No.	Error items
Gyro sensor	1	Offset error while the vehicle is stationary (lower limit error)
	2	Offset error while the vehicle is stationary (upper limit error)
	5	Output error during driving
Speed sensor	6	Output error while the vehicle is stationary

**TOUCH SWITCH CONFIRMATION**

1. Select "Touch Switch Confirmation" on "Service" screen.

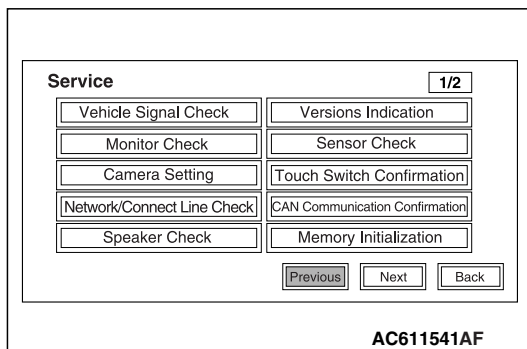

2. If you touch the screen, the color of the dotted coordinate at the touched area will be changed.

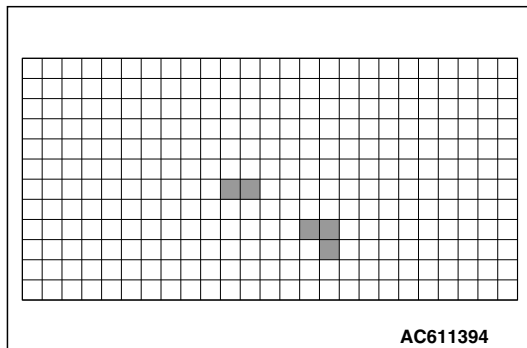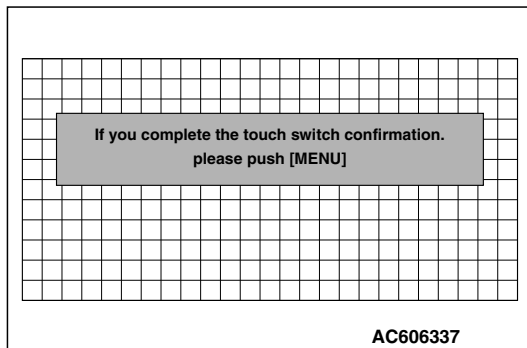

**MEMORY INITIALIZATION**

1. Select "Memory Initialization" on "Service" screen.

**Service** 1/2

Vehicle Signal Check	Versions Indication
Monitor Check	Sensor Check
Camera Setting	Touch Switch Confirmation
Network/Connect Line Check	CAN Communication Confirmation
Speaker Check	<b>Memory Initialization</b>

**AC611541AF**

2. If you select "Start" on "Memory Initialization" screen, the settings such as registered locations and music server will be erased (initialized) from the memory.

*NOTE: If the ignition switch is turned to "LOCK" (OFF) position during the initialization, the initialization will be suspended. If the ignition switch is turned to "ACC" or "ON" position, the initialization will be resumed.*

3. After the memory initialization is complete, the navigation system will restart automatically.

**Memory Initialization**

You can erase all of the back up data.  
 After erasing the data, the system will reboot.  
 If you push Start, the data will be deleted.

**AC606338**

**In Early Period Of Memory**

Please do not switch off until rebooting is completed.

**AC606339**

**CAN COMMUNICATION CONFIRMATION**

1. Select "CAN Communication Confirmation" on "Service" screen.

**Service** 1/2

Vehicle Signal Check	Versions Indication
Monitor Check	Sensor Check
Camera Setting	Touch Switch Confirmation
Network/Connect Line Check	<b>CAN Communication Confirmation</b>
Speaker Check	Memory Initialization

**AC611541AF**

**CAN Communication Confirmation**

List Of Connection Equipment

Version Indication

CAN BOX Memory Data Indication

Back

AC606340

**CAN List Of Connection Equipment**

HVAC	OCM
SATR	CCN
HFM	WCM
FCM	
ORC	

Back

AC608176

**Version Indication**

Hardware : 1.2	Software : 01.02.03
CAN MATRIX : 05.25	CAN DRIVER : 73.00
NM : 43.24	KWP2000 : 49.10
TPMC : 33.11	DBKOM : 49.17
DIAG : 00h	

Back

AC606342

**CAN BOX Memory Data Indication**

Various Data

Coding Data

VIN

Tell-Tale Stack

Chrono Stack

Back

AC606343

**Various Data**

Origin : 04h    Supplier : 85h  
System ID : 08h    Variation ID : 10h  
Serial ID : 0000h

Back

AC611722AB

2. If "List Of Connection Equipment" is selected on "CAN Communication Confirmation" screen, the system will determine which equipment is installed according to the connected equipment reference table. Then the equipment which are connected to the CAN box unit will be displayed.

**CAN BOX UNIT-CONNECTED EQUIPMENT REFERENCE TABLE**

Screen indication	Equipment
HVAC	A/C-ECU
SATR	Satellite radio tuner
HFM	Hands free module
FCM	ETACS-ECU
ORC	SRS-ECU
OCM	Occupant classification-ECU
CCN	Combination meter
WCM	Wireless control module

3. If "Version Indication" is selected on "CAN Communication Confirmation" screen, the version for each item is displayed.

4. If "CAN BOX Memory Data Indication" is selected on "CAN Communication Confirmation" screen, "CAN BOX Memory Data Indication" will be displayed.

5. If any item is selected on "CAN BOX Memory Data Indication" screen, its relevant information is displayed.

- Various Data

**Coding Data**

LHD_RHD_B	:
NUM_SP	:
SEAT_MAT	:
WCM_S_PRSNT	:
VEH_LINE_B	:

**AC611723AB**

- Coding Data

**VIN**

**current VIN**  
0123456 0123456 012

**Original VIN**  
0123456 0123456 012

**AC606346**

- VIN

**Tell-Tale Stack** 2/8

**Historical**  
DTC : C197h  
Odometer : 0132h

**Interrogation**  
DTC Read Counter : 04h  
Odometer : 01a5h

**AC606347**

- Tell-Tale Stack

**Chrono Stack** 2/8

DTC Value : 0197h  
DTC Status : A0h  
Odometer Mileage : 1B27h  
Accumulation Timer : 06C4h  
IG Counter : 15h

**AC606348**

- Chrono Stack

**VERSIONS LOG INFORMATION**

Displays logs for drive and HDD.

**Service Data Log**

1. Select "Versions Log Information" on "Service" screen.

The screenshot shows a screen titled "Service" with a page indicator "2/2" in the top right corner. Below the title, there is a button labeled "Versions Log Information". At the bottom of the screen, there are three buttons: "Previous", "Next", and "Back". The model number "AC611544AB" is displayed at the bottom right of the screen.

2. Select "Service Data Log" on the "Versions Log Information" screen.

The screenshot shows a screen titled "Versions Log Information". It contains two buttons: "Service Data Log" and "Time Adjustment Log". A "Back" button is located at the bottom right. The model number "AC611719AB" is displayed at the bottom right of the screen.

3. The logs are displayed from the latest one.
4. The log data is erased by pressing "Delete."

The screenshot shows a screen titled "Service Data Log". It contains a table with the following data:

	Time	Item	Factor
1	'05/12/02 12:00	Drive	20
2	'05/12/02 11:45	Drive	24
3	'05/11/10 10:00	HDD	1
4	'05/10/05 14:00	Drive	22
5	'05/11/30 04:00	HDD	2
6	'05/09/23 21:07	Drive	25

Below the table are "Delete" and "Back" buttons. A vertical scroll bar is on the left side of the table. The model number "AC707631" is displayed at the bottom right of the screen.

**EACH LOG INFORMATION: FACTOR CODE TABLE**

Item	Factor number	Produced log
Drive	20	Log concerning focus
	21	Log concerning disk type
	22	Log concerning disc
	25	Log concerning SEEK
	26	Log concerning servo start-up
	27	Log concerning power-On
	28	Log concerning loading / eject operation
	29	Log concerning pick-up operation
	30	Log concerning state of mechanism
	52	Log concerning TOC reading

Item	Factor number	Produced log
HDD	1	Log concerning high temperature
	2	Log concerning low temperature
Monitor	1	Log concerning high temperature
AMP	0	Log concerning connection
	15	Log concerning communication
SP*1	1,2,4,8	Log concerning number of speakers unexpected
CAR*2	0 -12, 128 -131, 133,160, 192,255	Log concerning vehicle model unexpected

Versions Log Information

Service Data Log

Time Adjustment Log

Back

AC611719AB

1. Select "Time Adjustment Log" on the "Versions Log Information" screen.

Time Adjustment Information

	After	Factor	Before
1	'05/12/02 12:00	CT	'05/12/02 12:00
2	'05/12/02 11:45	CT	'05/12/02 11:00
3	'05/11/10 10:00	CT	'05/11/10 11:00
4	'05/10/05 14:00	CT	'05/10/05 14:10
5	'05/11/30 04:00	CT	'05/11/30 04:00
6	'05/09/23 21:07	CT	'05/09/23 21:07

Back

AC611720AB

2. The time adjustment logs are displayed.  
As for Factor, the following two types are displayed.  
CT: Automatic adjustment  
MAN: Manual adjustment

## DIAGNOSTIC FUNCTION

M1546001600402

## HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

7. Start the M.U.T.-III system on the personal computer.

*NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.*

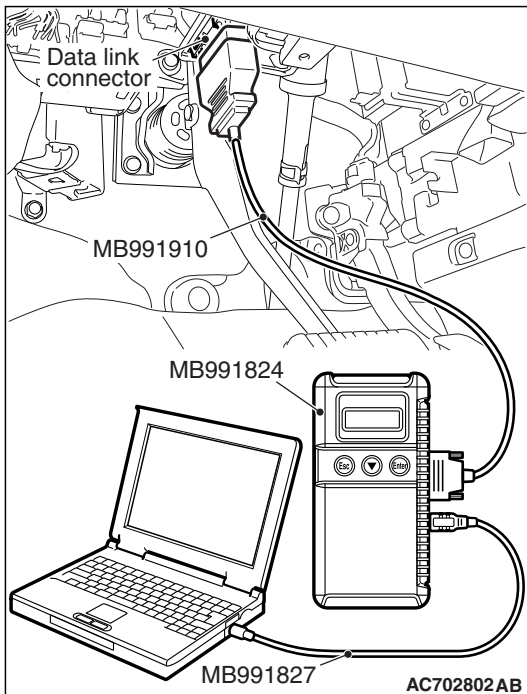

## HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

## Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

*NOTE: If the battery voltage is low, diagnostic trouble codes will not be set. Check the battery if scan tool MB991958 does not display.*

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "System select" from the start-up screen.
4. Select "From 2006 MY" of "Model Year." When the "Vehicle Information" is displayed, check the contents.
5. Select "Meter" from "System List," and press the "OK" button.

*NOTE: When the "Loading Option Setup" list is displayed, check the applicable item.*

6. Select "Diagnostic Trouble Code." to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.

## HOW TO DIAGNOSE THE CAN BUS LINES

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "CAN bus diagnosis" from the start-up screen.
4. When the vehicle information is displayed, confirm that it matches the vehicle being diagnosed.
  - If they match, go to Step 8.
  - If not, go to Step 5.
5. Select the "view vehicle information" button.
6. Enter the vehicle information and select the "OK" button.
7. When the vehicle information is displayed, confirm again that it matches the vehicle being diagnosed.
  - If they match, go to Step 8.
  - If not, go to Step 5.
8. Select the "OK" button.
9. When the optional equipment screen is displayed, choose the one which the vehicle is fitted with, and then select the "OK" button.

## CHECK OF FREEZE FRAME DATA

The freeze frame data can be checked by using scan tool.

When detecting fault and storing the diagnostic trouble code, the ECU connected to CAN bus line obtains the data before the determination of the diagnostic trouble code and the data when the diagnostic trouble code is determined, and then stores the ECU status of that time. By analyzing each data from scan tool, the troubleshooting can be performed more efficiently. The displayed items are as the table below.

### Display item list

Item No.	Item name	Content	Unit
1	Odometer	Total driving distance after the diagnostic trouble code is generated	mile
2	Ignition cycle	Number of times the ignition switch is turned "ON" or "LOCK (OFF)" after the past failure transition	Number of counts is displayed.
4	Accumulated minute	Cumulative time for current malfunction of diagnostic trouble code	min

## DIAGNOSTIC TROUBLE CODE CHART

M1546001700302

**⚠ CAUTION**

On troubleshooting, if the ignition switch is turned ON while disconnecting connector(s), diagnostic trouble code(s) associated with other system may be set. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

DTC No.	Description	Reference page
B2226	AND [Audio visual Navigation (HDD) unit] error	<a href="#">P.54A-467</a>
B2240	Communication error with CAN Box	<a href="#">P.54A-469</a>
B2477	VIN not programmed	<a href="#">P.54A-472</a>
U0019	Bus off (CAN-B)	<a href="#">P.54A-473</a>
U0141	ETACS CAN timeout	<a href="#">P.54A-474</a>
U0151	SRS-ABG CAN timeout	<a href="#">P.54A-476</a>
U0154	OCM (occupant classification) CAN timeout	<a href="#">P.54A-478</a>
U0155	Meter CAN timeout	<a href="#">P.54A-480</a>
U0164	A/C CAN timeout	<a href="#">P.54A-482</a>
U0168	WCM CAN timeout	<a href="#">P.54A-484</a>
U0195	Satellite radio CAN timeout	<a href="#">P.54A-486</a>
U0197	Hands free module CAN timeout	<a href="#">P.54A-488</a>
U1415	Coding not completed/Data fail	<a href="#">P.54A-490</a>
U1417	Implausible coding data	<a href="#">P.54A-492</a>

## DIAGNOSTIC TROUBLE CODE PROCEDURES

**DTC B2226: AND [Audio visual Navigation (HDD) unit] error****⚠ CAUTION**

- If DTC B2226 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit or multivision display, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**TROUBLE JUDGMENT**


When the CAN box unit receives the signal from the multivision display to indicate an abnormality occurred in the multivision display, the CAN box unit sets DTC B2226.

**TROUBLESHOOTING HINT**

- The CAN box unit may be defective
- The multivision display may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

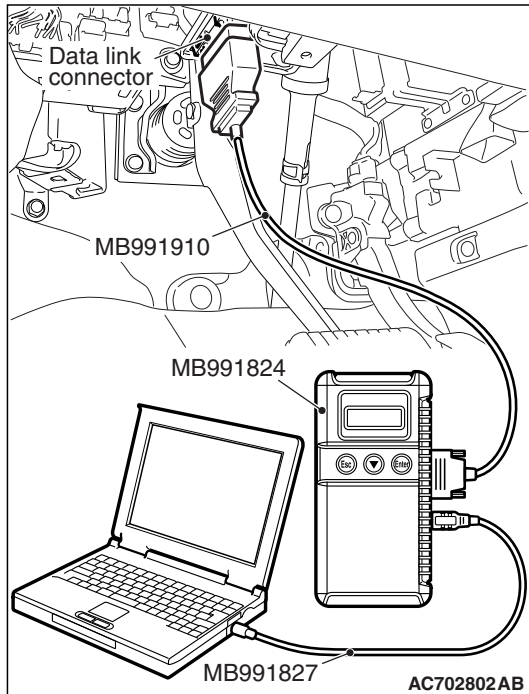

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Check that the multivision display operate.**

Check that the FACTOR CODE is set to the service data log in the MMCS service mode "Versions Log Information." (Refer to [P.54A-452](#).)

**Q: Is multivision display work normally?**

**YES :** Go to Step 3.

**NO :** Diagnose the multivision display (Refer to Trouble symptom chart [P.54A-493](#)).

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**STEP 4. Recheck for diagnostic trouble code.**

Temporarily replace the multivision display, and check if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.


**Q: Is the DTC set?**

**YES** : Replace the CAN box unit.


**NO** : Replace the multivision display.

**DTC B2240: Communication error with CAN Box****CAUTION**

- If DTC B2240 is set, be sure to diagnose the CAN bus line.
- When replacing the multivision display, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

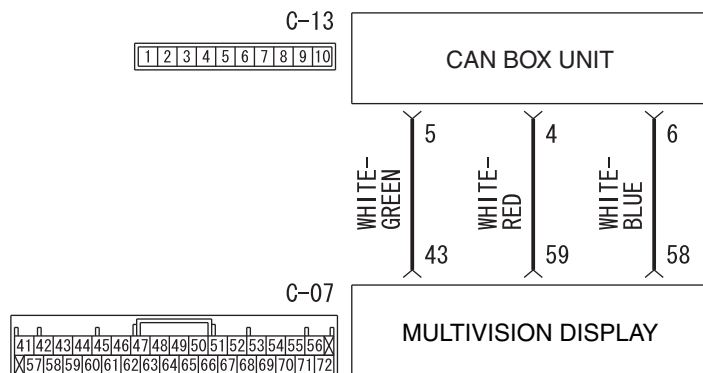**CAN Box Unit Communication Circuit**

W9G54M015A

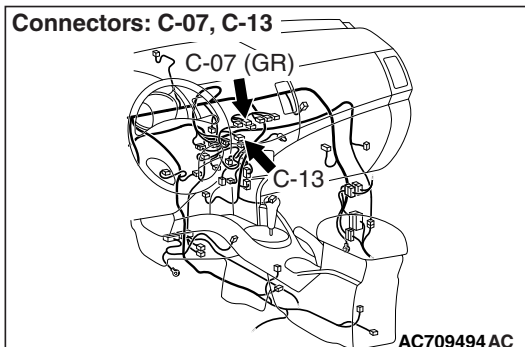**TROUBLE JUDGMENT**

When the abnormality occurs in the transmission/reception data between the CAN box unit and multivision display, the CAN box unit sets DTC B2240.

**PROBABLE CAUSES**

- Multivision display may be malfunction
- CAN box unit may be malfunction
- Damaged wiring harness and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
- MB991223: Harness Set
- MB992006: Extra Fine Probe
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Perform "Network/Connect Line Check" of the MMCS service mode.**

Perform "Network/Connect Line Check" of the MMCS service mode, and check that the communication between the CAN box unit and the multivision display is normal. (Refer to [P.54A-452.](#))

*NOTE: The communication is not possible, "CAN BOX" is not displayed.*

**Q: Is "CAN BOX OK" displayed?**

- YES :** Go to Step 2.  
**NO :** Go to Step 3.


**STEP 2. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465.](#)"
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

- YES :** Intermittent malfunction is suspected. Refer to GROUP 00, How to Use Troubleshooting/Inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15.](#)
- NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17.](#))

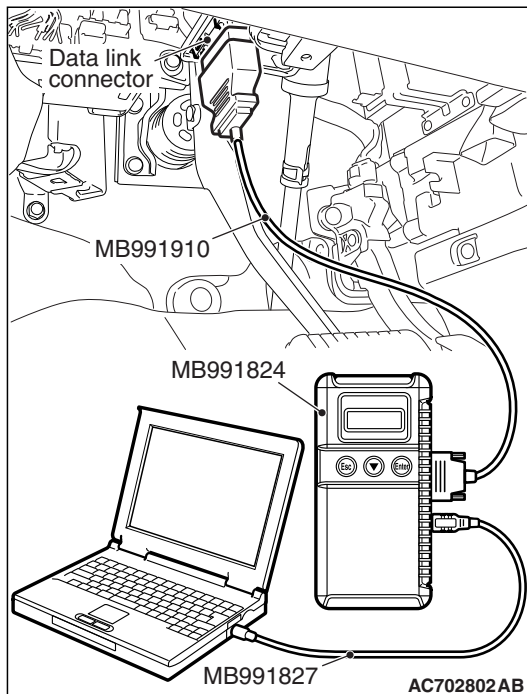

---

**STEP 3. Check CAN box unit connector C-13 and multivision display connector C-07 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are CAN box unit connector C-13 and multivision display connector C-07 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering remote control switch should work normally.

---

**STEP 4. Check the wiring harness between CAN box unit connector C-13 (terminal 5, 4, 6) and multivision display connector C-07 (terminal 43, 59, 58).**

**Q: Is the wiring harness between CAN box unit connector C-13 (terminal 5, 4, 6) and multivision display connector C-07 (terminal 43, 59, 58) in good condition?**

**YES :** Go to Step 5.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 5. Recheck for diagnostic trouble code.**

Temporarily replace the multivision display, and check if the DTC is set to the CAN box unit.

(1) Erase the DTC.

(2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.

(3) Check if DTC is set.

(4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** Replace the multivision display.

**DTC B2477: VIN not programmed****⚠ CAUTION**

- If DTC B2477 is set, be sure to diagnose the CAN bus line.
- When replacing the multivision display, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**TROUBLE JUDGMENT**

With the ignition switch at the ON position, if the VIN code is not written to the CAN box unit, DTC B2477 is stored.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The ETACS-ECU may be defective.
- The CAN box unit may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

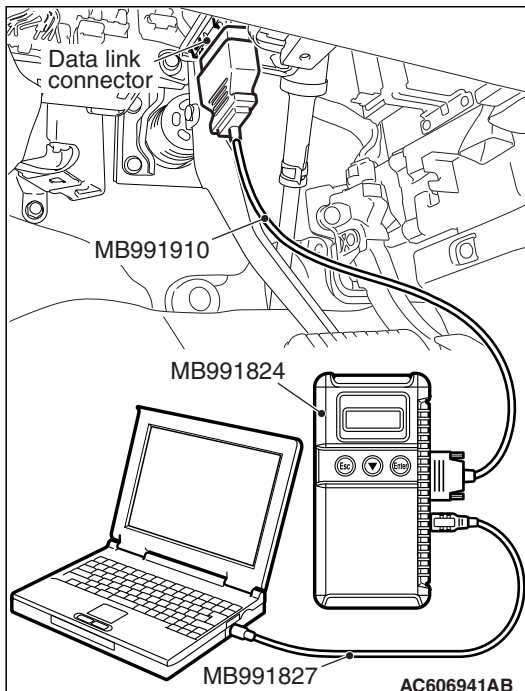

---

**STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code**

Check if the diagnostic trouble code relating to the coding error is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES** : Troubleshoot the ETACS-ECU (Refer to [P.54A-742](#)), and then go to Step 3.

**NO** : Go to Step 3.

---

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

(1) Erase the DTC.

(2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.

(3) Check if DTC is set.

(4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Replace the CAN box unit.

**NO** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0019: Bus off (CAN-B)**

---

 **CAUTION**

- If DTC U0019 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

If the CAN-B circuit malfunction occurs, the CAN box unit sets DTC U0019.

**JUDGMENT CRITERIA**


With the ignition switch at the ON position and the system voltage at 10 –16 volts (data from ETACS-ECU), if the CAN box unit becomes unable to transmit data normally due to the CAN-B bus circuit malfunction, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

The CAN bus line may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

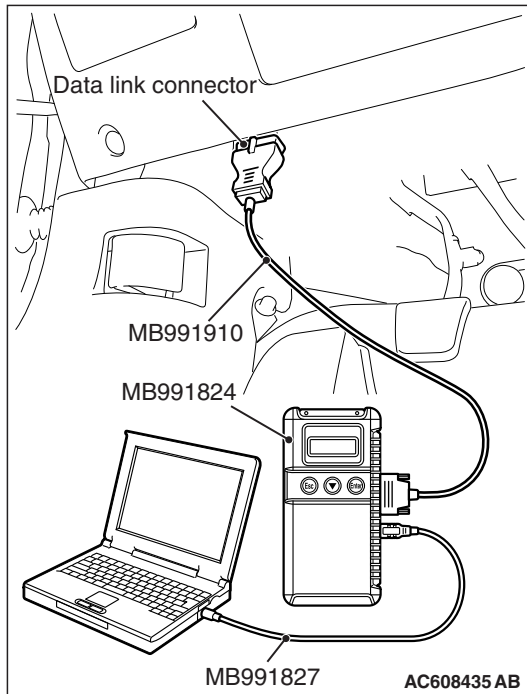

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-336](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Check whether the scan tool MB991958 can communicate with the CAN box unit.**

**Q: Is the check result normal?**

**YES :** Erase the diagnostic trouble code. This diagnosis is complete.

**NO :** Check the power supply circuit of the CAN box unit, and repair if necessary.

**DTC U0141: ETACS CAN timeout**

**⚠ CAUTION**

If DTC U0141 is set, be sure to diagnose the CAN bus line.

**⚠ CAUTION**

When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

If the signal from ETACS-ECU cannot be received, the CAN box unit sets the DTC U0141.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(10D fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with ETACS-ECU cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The CAN box unit may be defective
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

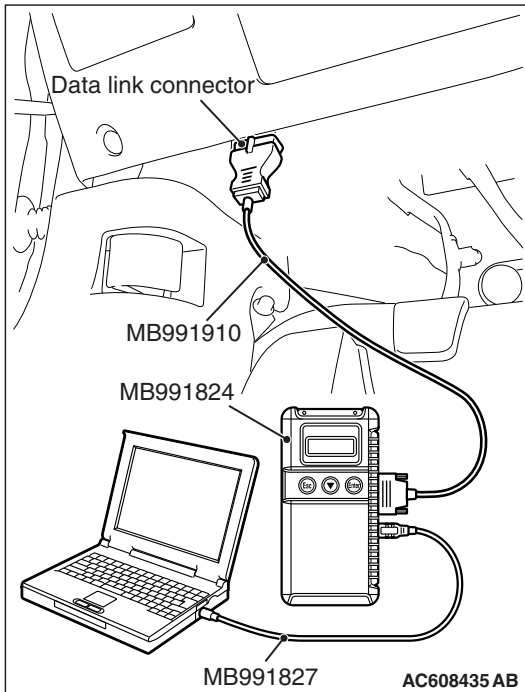**STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check again if the DTC is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Diagnose the ETACS-ECU (Refer to [P.54A-742](#)).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the A/C diagnostic trouble code.**

Check if DTC U0141 is set to the A/C-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

---

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the ETACS-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the ETACS-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0151: SRS-ECU CAN timeout**

---

**⚠ CAUTION**

- If DTC U0151 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

If the signal from SRS-ECU cannot be received, the CAN box unit sets DTC U0151.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10-16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with SRS-ECU cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The SRS-ECU may be defective
- The CAN box unit may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

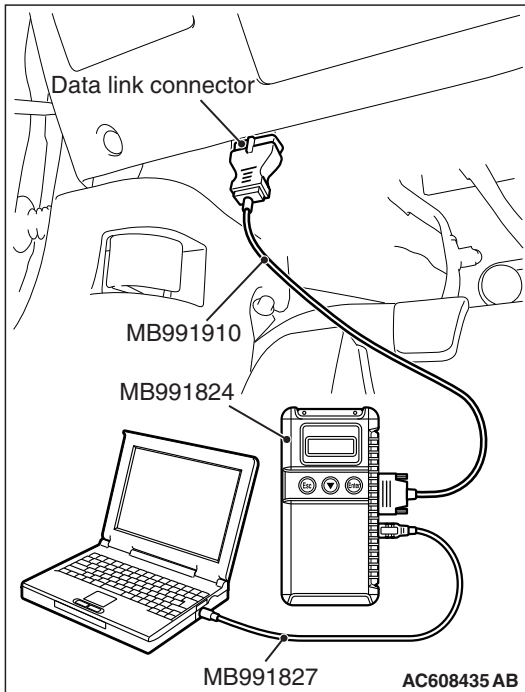**STEP 2. Using scan tool MB991958, read the SRS-ECU diagnostic trouble code**

Check again if the DTC is set to the SRS-ECU.

**Q: Is the DTC set?**

**YES :** Troubleshoot the SRS (Refer to GROUP 52B, Troubleshooting [P.52B-32](#)).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.**

Check if the DTC U0151 is set to the A/C-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the SRS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the SRS-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the SRS-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0154: OCM (occupant classification-ECU) CAN timeout**

---

 **CAUTION**

If DTC U0154 is set, be sure to diagnose the CAN bus line.

 **CAUTION**

When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

When the signals from occupant classification-ECU cannot be received, the CAN box unit sets DTC U0154.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with occupant classification-ECU cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The CAN box unit may be defective.
- The occupant classification-ECU may be defective.

## DIAGNOSIS

### Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### **CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### **Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

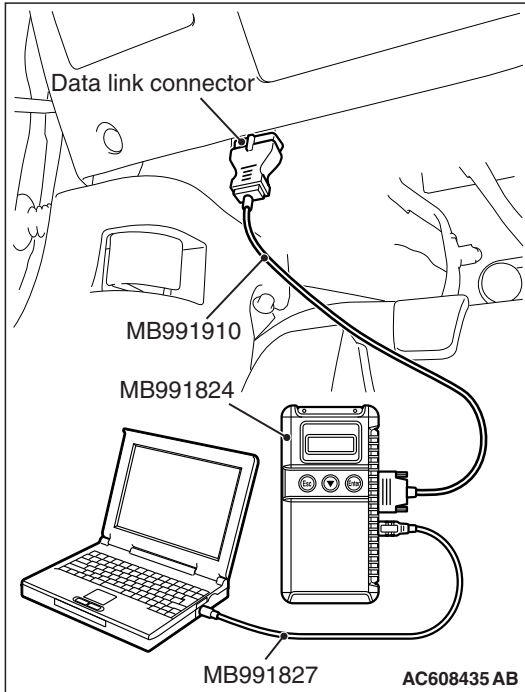

### STEP 2. Using scan tool MB991958, read the occupant classification-ECU diagnostic trouble code.

Check if DTC is set to the occupant classification-ECU.

#### **Q: Is the DTC set?**

**YES :** Troubleshoot the SRS (Refer to GROUP 52B, Diagnosis [P.52B-346](#)).

**NO :** Go to Step 3.

### STEP 3. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.

Check if the DTC U0154 is set to the A/C-ECU.

#### **Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the occupant classification-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the occupant classification-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the occupant classification-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0155: Meter CAN timeout**

---

**⚠ CAUTION**

- If DTC U0155 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

When the signals from combination meter cannot be received, the CAN box unit sets DTC U0155.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with combination meter cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The CAN box unit may be defective.
- The combination meter may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

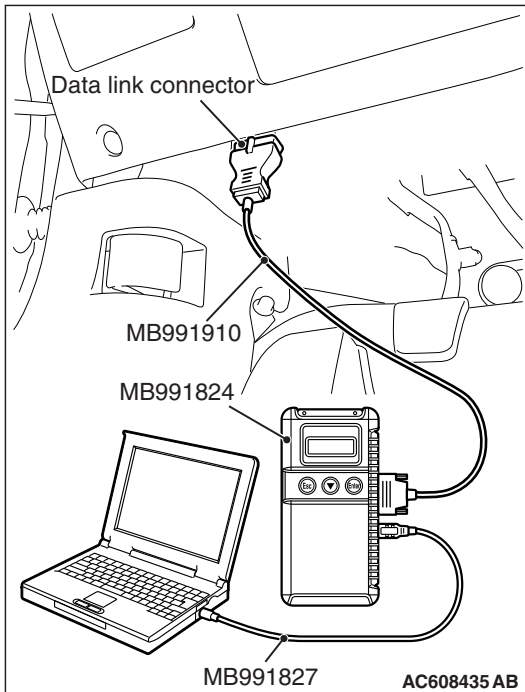**STEP 2. Using scan tool MB991958 read the combination meter diagnostic trouble code.**

Check whether a combination meter DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for combination meter DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the combination meter (Refer to combination meter, Diagnosis [P.54A-32](#)).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.**

Check if the DTC U0155 is set to the A/C-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the combination meter.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the combination meter and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the combination meter and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0164: A/C CAN timeout**

---

**⚠ CAUTION**

- If DTC U0164 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

If the signal from A/C-ECU cannot be received, the CAN box unit sets DTC U0164.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10-16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with A/C-ECU cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The A/C-ECU may be defective.
- The CAN box unit may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-467](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

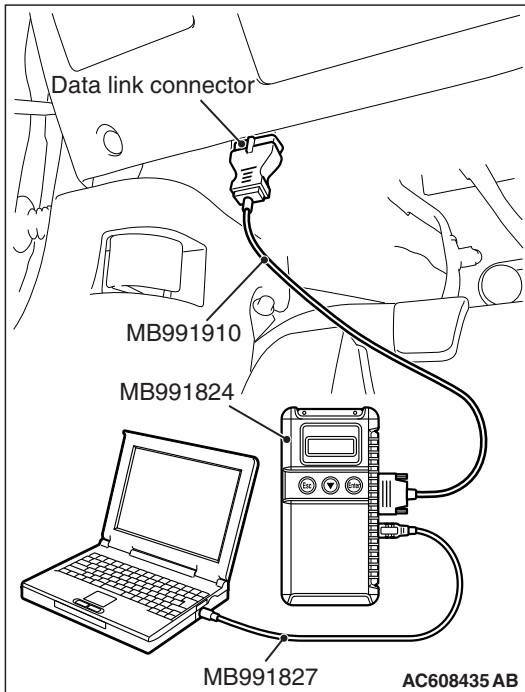**STEP 2. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.**

Check if DTC is set to the A/C-ECU.

**Q: Is the DTC set?**

**YES :** Troubleshoot the A/C. (Refer to GROUP 55A, Manual A/C Diagnosis [P.55A-11](#) GROUP 55B, Auto A/C Diagnosis [P.55B-8](#).)

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the ETACS diagnostic trouble code.**

Check if the DTC U0164 is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

---

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the A/C-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the A/C-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the A/C-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0168: WCM/KOS CAN timeout**

---

**⚠ CAUTION**

- If DTC U0168 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

If the signal from KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM> cannot be received, the CAN box unit sets DTC U0168.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 V (data from ETACS-ECU), power supply fuse(10D fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communication with KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM> cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- Malfunction of CAN bus line may be defective.
- Malfunction of the KOS-ECU may be defective. <vehicles with KOS>
- Malfunction of the WCM may be defective. <vehicles with WCM>
- Malfunction of CAN box unit may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-29](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

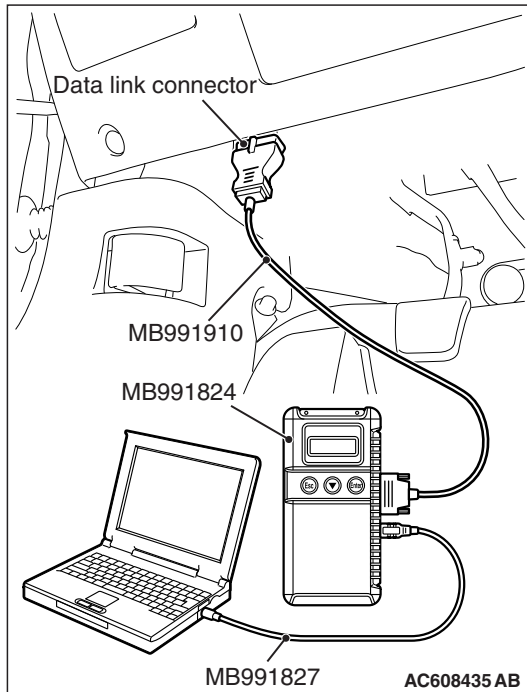**STEP 2. Using scan tool MB991958, read the KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM> diagnostic trouble code.**

Check again if the DTC is set to the KOS-ECU <vehicles with KOS> or WCM <vehicles with WCM>.

**Q: Is the DTC set?**

**YES :** Troubleshoot the KOS or WCM (Refer to GROUP 42B, Diagnosis [P.42B-31](#) <KOS> or GROUP 42C, Diagnosis [P.42C-18](#) <WCM>).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the diagnostic trouble code.**

Check if the DTC U0168 is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the WCM or KOS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the WCM or KOS-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the WCM or KOS-ECU and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0195: Satellite radio CAN timeout**

---

 **CAUTION**

If DTC U0195 is set in the CAN box unit, diagnose the CAN main bus line.

 **CAUTION**

Whenever the CAN box unit is replaced, ensure that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

When the signals from satellite radio tuner cannot be received, the CAN box unit sets DTC U0195.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with satellite radio tuner cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The CAN box unit may be defective.
- The satellite radio tuner may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: V.C.I.
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

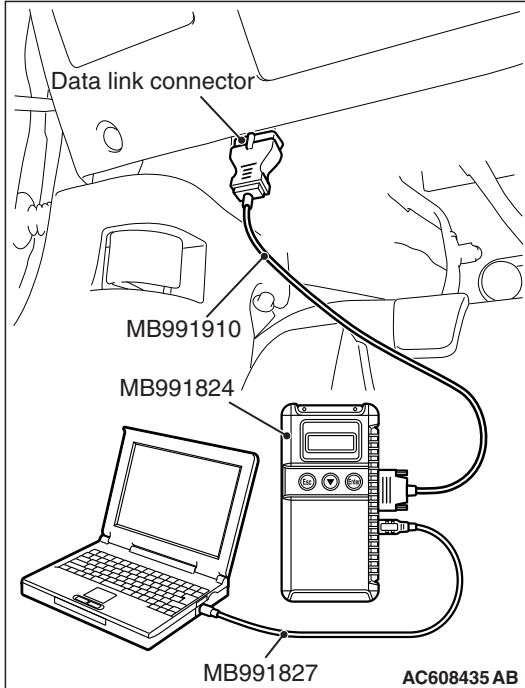**STEP 2. Using scan tool MB991958 read the satellite radio tuner diagnostic trouble code.**

Check whether a satellite radio tuner DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for satellite radio tuner DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the satellite radio tuner. (Refer to [P.54A-655](#).)

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the SRS-ECU diagnostic trouble code.**

Check if the DTC U0195 is set to the SRS-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the satellite radio tuner.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the satellite radio tuner and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the satellite radio tuner and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0197: Hands free module CAN timeout**

---

** CAUTION**

- If DTC U0197 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

When the signals from hands free module cannot be received, the CAN box unit sets DTC U0197.

**JUDGMENT CRITERIA**

With the ignition switch in the ON position, system voltage between 10 –16 volts (data from ETACS-ECU), power supply fuse(IOD fuse) is OK, or odometer value is 80.5 km (50 miles) or more, and the communications with hands free module cannot be established for 2,500 ms or more, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The CAN box unit may be defective.
- The hands free module may be defective.

## DIAGNOSIS

### Required Special Tools:

- MB991958 Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827 M.U.T.-III USB Cable
  - MB991910 M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### **CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### **Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

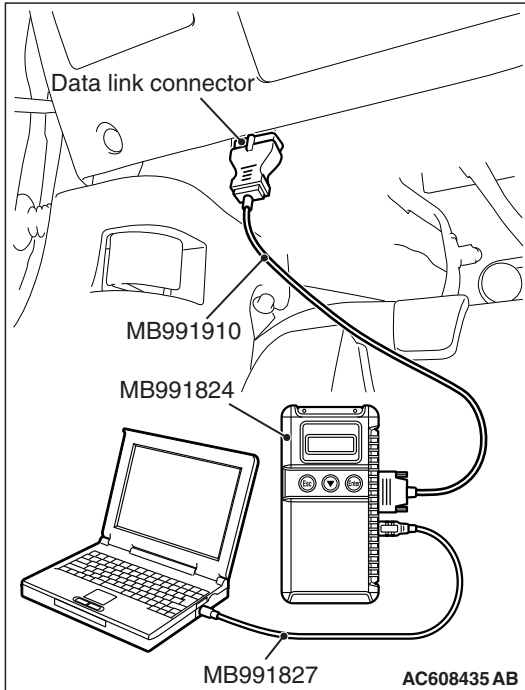

### STEP 2. Using scan tool MB991958, read the hands free module diagnostic trouble code.

Check again if the DTC is set to the hands free module.

#### **Q: Is the DTC set?**

**YES :** Troubleshoot the hands free cellular phone system.  
(Refer to [P.54A-592](#).)

**NO :** Go to Step 3.

### STEP 3. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.

Check if the DTC U0197 is set to the ETACS-ECU.

#### **Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the hands free module.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the hands free module and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the hands free module and the CAN box unit (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U1415: Coding not completed/Data fail**

---

**⚠ CAUTION**

- If DTC U1415 is set, be sure to diagnose the CAN bus line.
- When replacing the CAN box unit, always check that the communication circuit is normal. (Check that the voltage is 10 V or more.)

**DIAGNOSTIC FUNCTION**

If the vehicle information data is not registered to the CAN box unit, the CAN box unit sets DTC U1415.

**JUDGMENT CRITERIA**


With the global coding counter value "0," if all the global coding data (vehicle information) are not stored, the CAN box unit determines that a problem has occurred.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective.
- The CAN box unit may be defective.
- The ETACS-ECU may be defective.

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

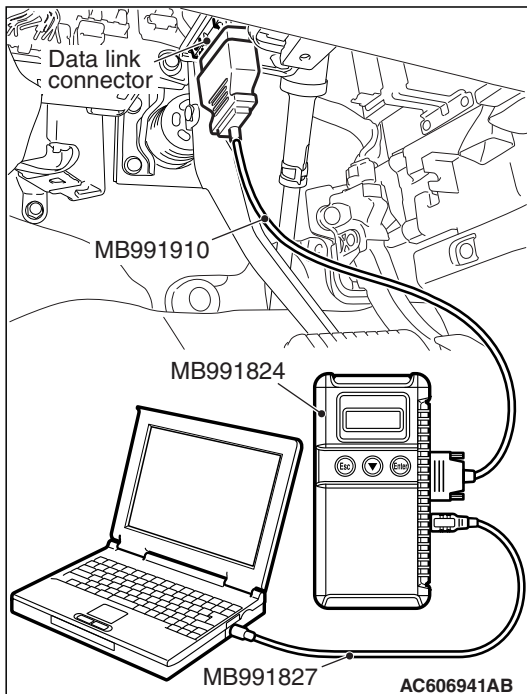

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code relating to the coding error is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Troubleshoot the ETACS-ECU (Refer to [P.54A-742](#)), and then go to Step 3.

**NO :** Go to Step 3.

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the CAN box unit.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**DTC U1417: Implausible coding data****⚠ CAUTION**

- If diagnostic trouble code U1417 is set in CAN box unit, always diagnose the CAN bus lines. If there is any fault in the CAN bus lines, an incorrect diagnostic trouble code may be set. In this case, the set diagnostic trouble code is not highly reliable.
- Before replacing the CAN box unit, ensure that the communication circuit is normal. (Check that the voltage is 10 V or more.)
- When the diagnostic trouble code U1417 is set in CAN box unit, the diagnostic trouble code may also be set in ETACS-ECU. When the diagnostic trouble code is set in ETACS-ECU, carry out the diagnosis of the diagnostic trouble code for ETACS-ECU first.

**CIRCUIT OPERATION**

CAN box unit receives the vehicle information stored in the ETACS-ECU via CAN bus lines.

**DTC SET CONDITIONS**

CAN box unit communicates with ETACS-ECU via CAN bus lines. This diagnostic trouble code is set when the vehicle information received from the ETACS-ECU is invalid.

**PROBABLE CAUSES**

- Malfunction of ETACS-ECU
- ETACS-ECUs have been interchanged between two vehicles.
- CAN box unit malfunction
- External noise interference

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.****⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

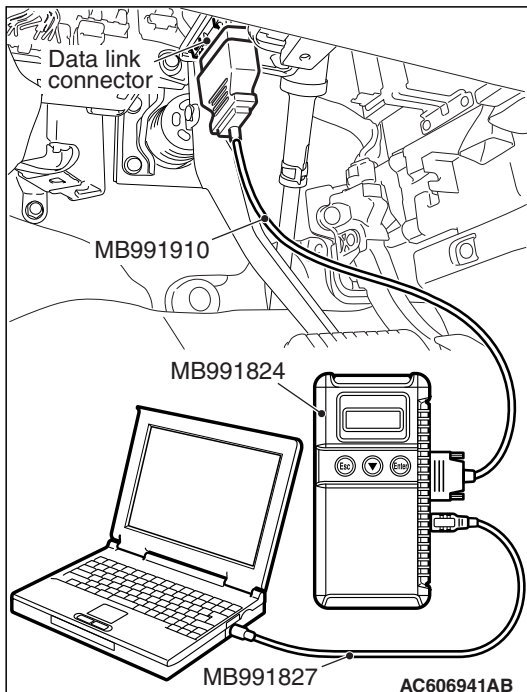

**STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code relating to the coding error is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES** : Troubleshoot the ETACS-ECU (Refer to [P.54A-742](#)), and then go to Step 3.

**NO** : Go to Step 3.

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

(1) Erase the DTC.

(2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.

(3) Check if DTC is set.

(4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES** : Replace the CAN box unit.

**NO** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**TROUBLE SYMPTOM CHART**

M1546001800859

Trouble symptom		Inspection Procedure No.	Reference page
No navigation screen is displayed.		1	<a href="#">P.54A-494</a>
No sound is heard.	<Vehicles without audio amplifier>	2	<a href="#">P.54A-501</a>
	<Vehicles with audio amplifier>		<a href="#">P.54A-505</a>
No sound is heard from one of the speakers.	<Vehicles without audio amplifier>	3	<a href="#">P.54A-513</a>
	<Vehicles with audio amplifier>		<a href="#">P.54A-525</a>
The navigation system can be operated while the vehicle is driven.		4	<a href="#">P.54A-538</a>
The screen is not normal in the navigation mode. (The displayed position of the vehicle mark deviates.)		5	<a href="#">P.54A-541</a>
The AM/FM radio broadcasting cannot be received.		6	<a href="#">P.54A-544</a>
GPS signal cannot be received.		7	<a href="#">P.54A-546</a>
CD/DVD cannot be played.		8	<a href="#">P.54A-547</a>
Image of a DVD is played, but no sound is played.		9	<a href="#">P.54A-548</a>
Sound of a DVD can be played, but no image is played.		10	<a href="#">P.54A-549</a>
The picture and sound of external input are not played.		11	<a href="#">P.54A-550</a>
Check the CAN box unit power supply circuit.		12	<a href="#">P.54A-553</a>


## SYMPTOM PROCEDURES

## Inspection Procedure 1: No navigation screen is displayed.

**CAUTION**




Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

Multivision Display Power Supply Circuit

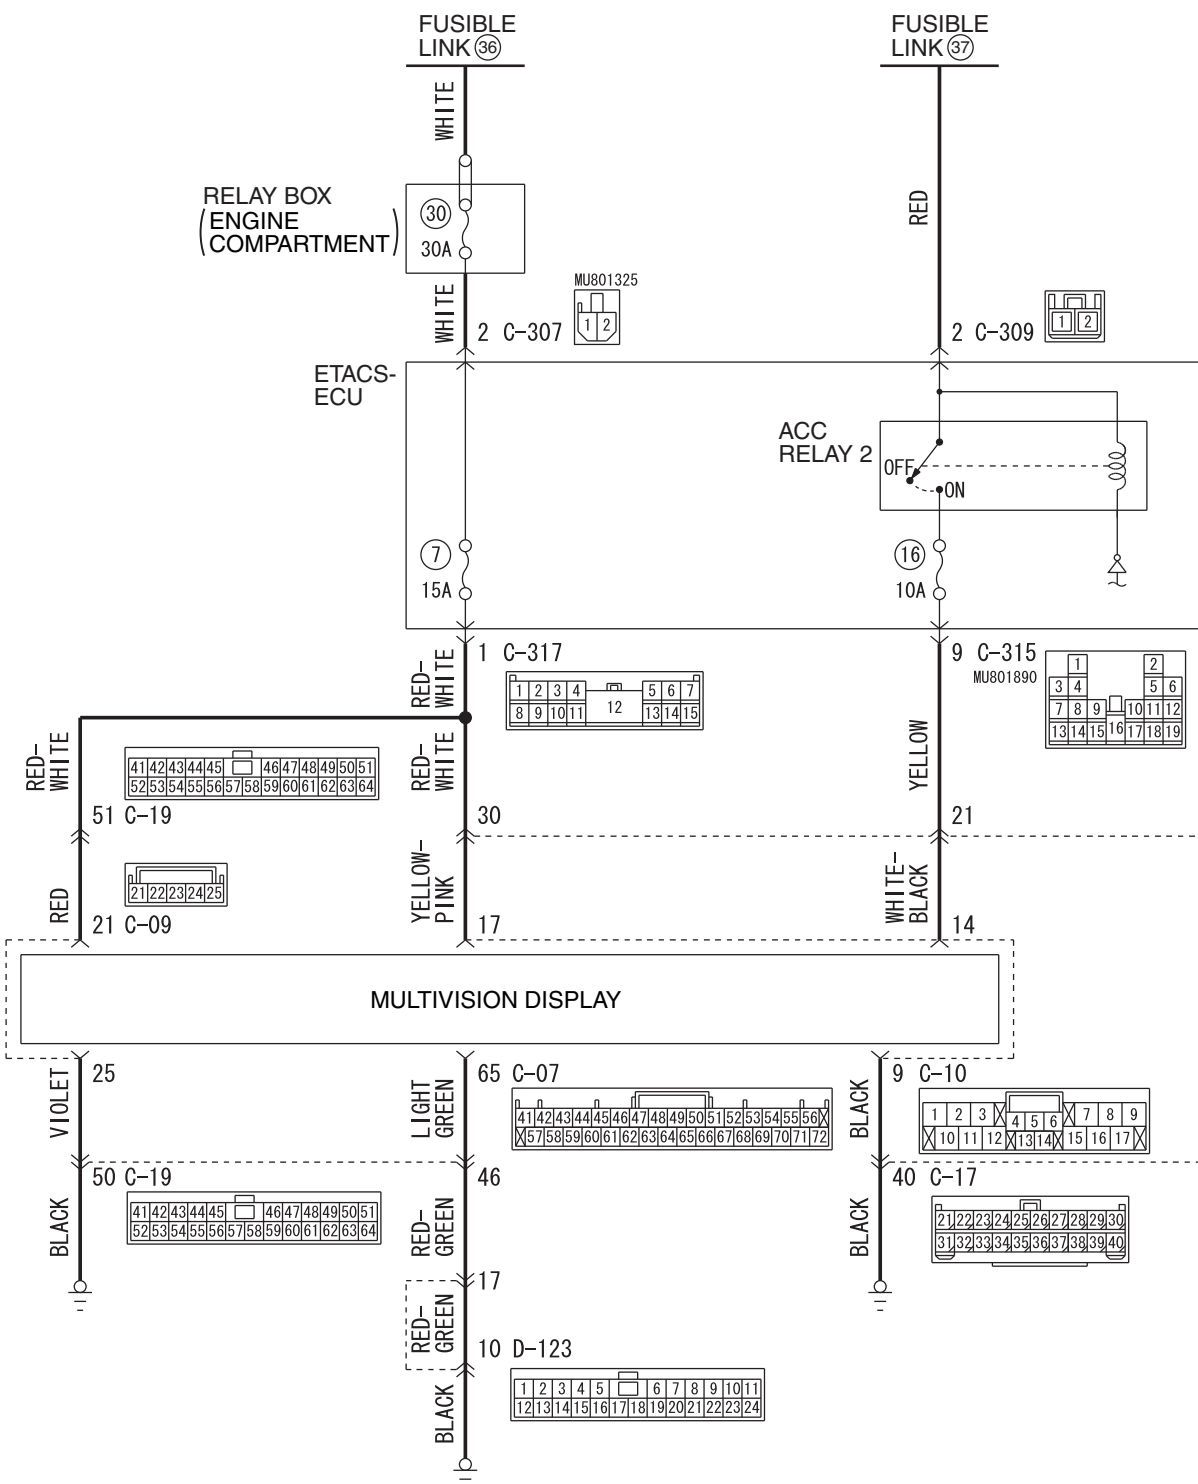

&lt;VEHICLES WITHOUT REAR DISPLAY UNIT&gt;

WAG54M030A

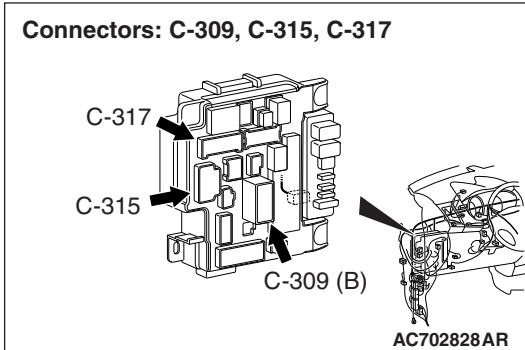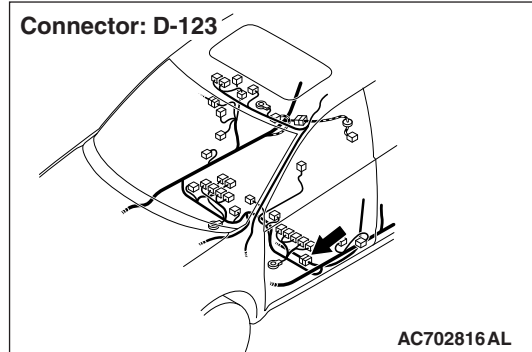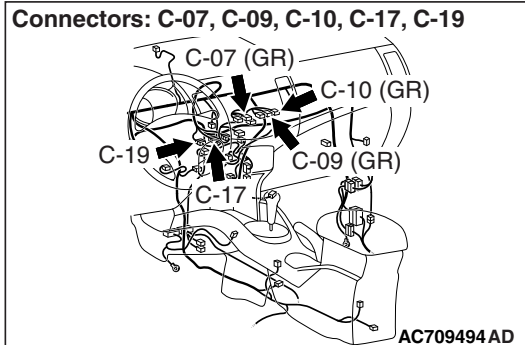

## TECHNICAL DESCRIPTION (COMMENT)

When the ignition switch is turned to the ACC or ON position, if the screen is not displayed at all, the power supply circuit or multivision display may have a problem.

## TROUBLESHOOTING HINTS

- Power supply circuit may be defective
- Multivision display may be defective
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Check multivision display connector C-10, C-07 and C-09 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10, C-07 and C-09 in good condition?**


**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 2. Check the ground circuit to the multivision display connector. Measure the resistance at multivision display connector C-10, C-07 and C-09 <vehicles with rear display unit>.**


- (1) Disconnect multivision display connector C-10, C-07 and C-09 <vehicles with rear display unit>, and measure the resistance available at the wiring harness side of the connector.
- (2) Measure the resistance between multivision display connector C-10 terminal 9 and ground.

**OK: The resistance should be 2 ohms or less**

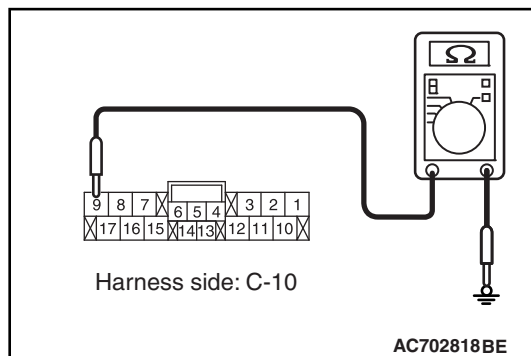

- (3) Measure the resistance between multivision display connector C-07 terminal 65 and ground.

**OK: The resistance should be 2 ohms or less**

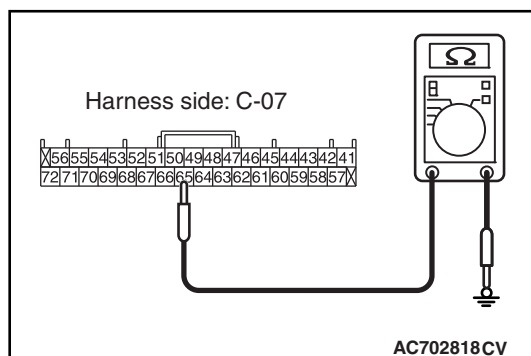


- (4) Measure the resistance between multivision display connector C-09 <vehicles with rear display unit> terminal 25 and ground.

**OK: The resistance should be 2 ohms or less**

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 4.

**NO :** Go to Step 3.

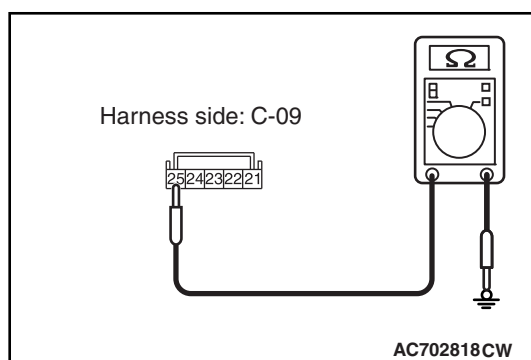

---

**STEP 3. Check the wiring harness between multivision display connector C-10 (terminal 9), C-07 (terminal 65) and C-09 <vehicles with rear display unit> (terminal 25) and ground.**

- Check the ground wire for open circuit.

*NOTE: Also check intermediate connector C-17, C-19 and D-123 <vehicles without rear display unit> for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17, C-19 and D-123 <vehicles without rear display unit> is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between multivision display connector C-10 (terminal 9) and ground in good condition?**

- YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).
- NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 4. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the check result normal?**

- YES :** Troubleshoot the ETACS-ECU. Refer to Diagnosis [P.54A-742](#).
- NO :** Go to Step 5.

---

**STEP 5. Check ETACS-ECU connector C-317 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-317 in good condition?**

- YES :** Go to Step 6.
- NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 6. Check the wiring harness between ETACS-ECU connector C-317 (terminal 1) and multivision display connector C-10 (terminal 17).**

- Check the power supply line (battery supply) for open circuit and short circuit.

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-317 (terminal 1) and multivision display connector C-10 (terminal 17) in good condition?**

**YES :** Go to Step 7.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Check multivision display connector C-09 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-09 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 8. Check the wiring harness between ETACS-ECU connector C-317 (terminal 1) and multivision display connector C-09 (terminal 21).**

- Check the power supply line (battery supply) for open circuit and short circuit.

*NOTE: Also check intermediate connector C-19 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-19 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between ETACS-ECU connector C-317 (terminal 1) and multivision display connector C-09 (terminal 21) in good condition?**

**YES :** Go to Step 9.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 9. Using scan tool MB991958, check data list.**

Check the input signal of ACC relay.

- Turn the ignition switch to the ACC position.

Item No.	Item name	Normal conditions
Item 288	ACC switch	ON

**OK: Normal condition is displayed.**

**Q: Is the check result normal?**

**YES :** Go to Step 10.

**NO :** Refer to Inspection Procedure 1 "The ignition switch (ACC) signal is not received [P.54A-797](#)."

**STEP 10. Check ETACS-ECU connector C-309 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-309 in good condition?**

**YES :** Go to Step 11.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering remote control switch should work normally.

**STEP 11. Check the power supply circuit to the ETACS-ECU. Measure the voltage at ETACS-ECU connector C-309.**


- (1) Disconnect the connector, and measure at the wiring harness-side connector.
- (2) Turn the ignition switch to the "ACC" position.
- (3) Measure the voltage between terminal 2 and ground.

**OK: Battery positive voltage**

**Q: Is the measured voltage battery positive voltage?**

**YES :** Go to Step 13.

**NO :** Go to Step 12.

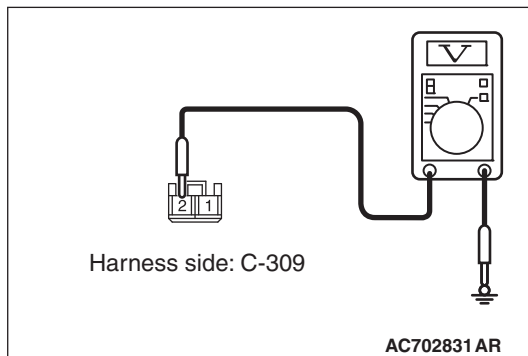

**STEP 12. Check the wiring harness between ETACS-ECU connector C-309 (terminal 2) and fusible link (37)**

- Check the power supply line for open circuit and short circuit.

**Q: Is the wiring harness between ETACS-ECU connector C-309 (terminal 2) and fusible link (37) in good condition?****YES :** Go to Step 13.**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 13. Check ETACS-ECU connector C-315 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is ETACS-ECU connector C-315 in good condition?****YES :** Go to Step 14.**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering remote control switch should work normally.

---

**STEP 14. Check the wiring harness between multivision display connector C-10 (terminal 14) and ETACS-ECU connector C-315 (terminal 9).**

- Check the power supply line for open circuit and short circuit.

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between multivision display connector C-10 (terminal 14) and ETACS-ECU connector C-315 (terminal 9) in good condition?****YES :** Go to Step 15.**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 15. Retest the system**

Check if the multivision display power is turned ON.

**Q: Is the check result normal?****YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).**NO :** Replace the multivision display.

---

**Inspection Procedure 2: No sound is heard. <Vehicles without audio amplifier>**

---

**⚠ CAUTION**

Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

**COMMENTS ON TROUBLE SYMPTOM**

If the audio sound is not output, the multivision display, audio amplifier, or power supply circuit of audio amplifier may have a problem, or the option coding information may be inconsistent.

**PROBABLE CAUSES**

- The multivision display may be defective
- The audio amplifier may be defective
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

---

**STEP 1. Check the multivision display operation.****Q: Check the sources from which the sound is not output.**


**No sound only from radio :** Perform Inspection Procedure 6 "The AM/FM radio broadcasting cannot be received." (Refer to [P.54A-544.](#))

**No sound only when the CD is played :** Perform Inspection Procedure 8 "CD/DVD cannot be Played." (Refer to [P.54A-547.](#))

**No sound only when the DVD is played :** Perform Inspection Procedure 8 "CD/DVD cannot be Played." (Refer to [P.54A-547.](#)) or Inspection Procedure 9 "Image of a DVD is Played, but no Sound is Played." (Refer to [P.54A-548.](#))

**No sound only when the music server is used :** Go to Step 8.

**No sound from any of the sources :** Go to Step 2.

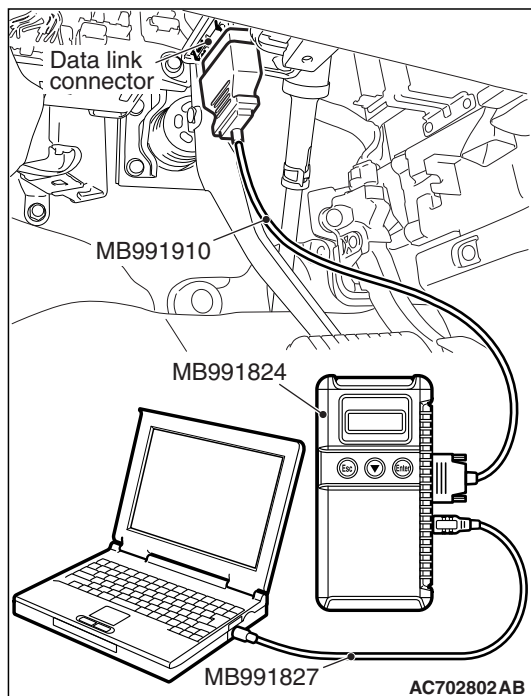**STEP 2. Check the ETACS-ECU coding data.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Operate the scan tool MB991958 to read the ETACS-ECU option coding information (Refer to GROUP 00, Coding Table [P.00-35](#)).
- (4) Check that the "Number of speaker" is set to "6 speakers".

**Q: Is the check result normal?**

**YES** : Go to Step 3.

**NO** : Operate scan tool MB991958 to set the option coding "Number of speaker" to "6 speakers," and check the trouble symptom.

**STEP 3. Check the MMCS service mode, CAN communication confirmation, and coding data.**

- (1) Display the CAN Communication Confirmation and Coding Data of the MMCS service mode. (Refer to [P.54A-452](#))
- (2) Check if "6 SPEAKER (2 TWEETER)" is displayed as the number of installed speakers.

**Q: Is the check result normal?**

**YES** : Go to step 4.

**NO** : Go to step 5.

**STEP 4. Check the service data log for the MMCS service mode.**

With the service data log of MMCS service mode displayed, check if the service data log for SP (speaker) is displayed. (Refer to [P.54A-452](#))

**Q: Is the service data log for SP (speaker) displayed?**

**YES** : Go to step 5.

**NO** : Go to step 8.

---

**STEP 5. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Turn the ignition switch to "ON" position.
- (2) Diagnose the CAN bus line.

**Q: Is the check result normal?**

**YES :** Go to Step 6.

**NO :** Repair the CAN bus line.

---

**STEP 6. Using scan tool MB991958, read the CAN box unit diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

**Q: Is the DTC set?**

**YES :** Troubleshoot the MMCS (Refer to [P.54A-467](#)).

**NO :** Go to Step 7.

---

**STEP 7. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Diagnose the ETACS-ECU (Refer to GROUP 54A – ETACS-ECU –Troubleshooting [P.54A-742](#)).

**NO :** Go to Step 8.

---

**STEP 8. Check the service data log for the MMCS service mode.**

- (1) Display the service data log for the MMCS service mode.  
(Refer to [P.54A-452](#))
- (2) Check if the service data log for drive and HDD is displayed.

**Q: Is the service data log displayed?**

**YES (The service data log for drive is displayed.) :**

Perform Inspection Procedure 8 "CD/DVD cannot be Played." (Refer to [P.54A-547](#).) or Inspection Procedure 9 "Image of a DVD is Played, but no Sound is Played." (Refer to [P.54A-548](#).) Go to Step 9.

**YES (The service data log for HDD is displayed.) :**

Abnormalities relating to high or low temperature may be present. Check if the multivision display can output the sound at the operable temperature. If it cannot output the sound, go to Step 9.

**NO :** Go to Step 9.

---

**STEP 9. Perform "Network/Connect Line Check" in the MMCS service mode.**

- (1) Display "Network/Connect Line Check" in the MMCS service mode. (Refer to [P.54A-452](#))
- (2) Check if "DVD Drive OK" is displayed.
- (3) Check if "HDD Drive OK" is displayed.

**Q: Is the check result normal?****YES** : Go to Step 11.**NO** : Go to Step 10.

---

**STEP 10. Retest the system**

Check that the audio sound is output.

**Q: Is the check result normal?****YES** : The trouble can be an intermittent malfunction (Refer to GROUP 00 –How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).**NO** : Go to step 11.

---

**STEP 11. Retest the system**

Temporarily replace the multivision display and check if the sound is output.


**Q: Is the check result normal?****YES** : Replace the multivision display.**NO** : Perform Inspection Procedure 3 "No sound is heard from one of the speakers. <Vehicles without audio amplifier>" (Refer to [P.54A-513](#).)

## Inspection Procedure 2: No sound is heard. &lt;Vehicles with audio amplifier&gt;


**CAUTION**

Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)


Multivision Display System Circuit

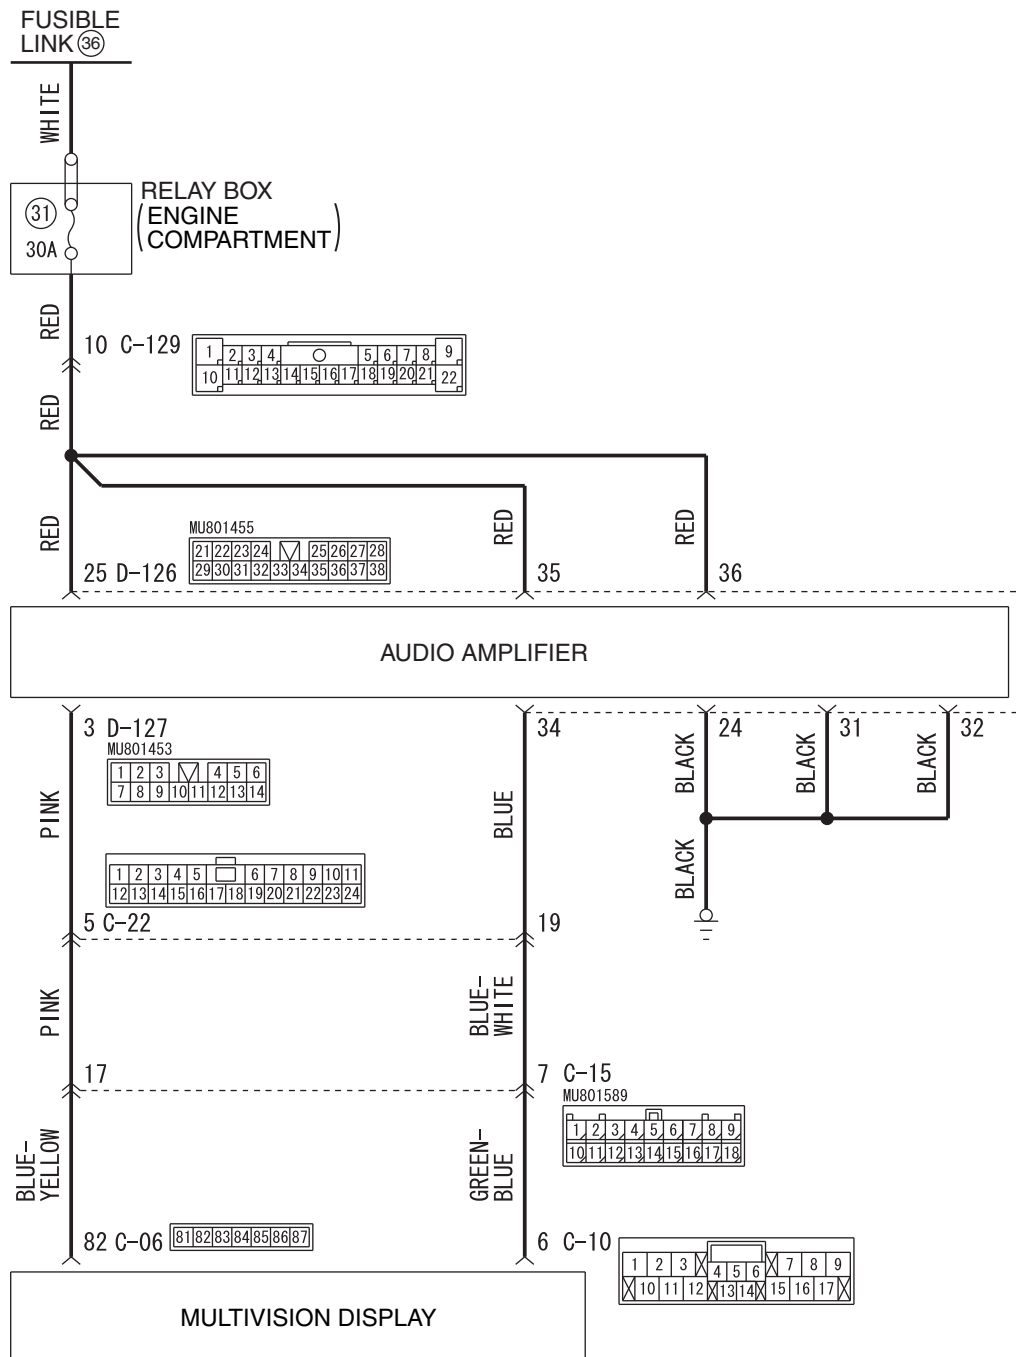


Connectors: C-06, C-10, C-15, C-22

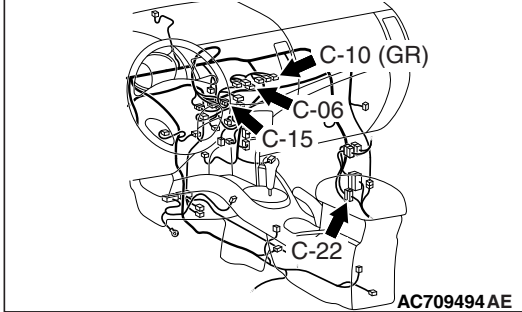

Connectors: D-126, D-127

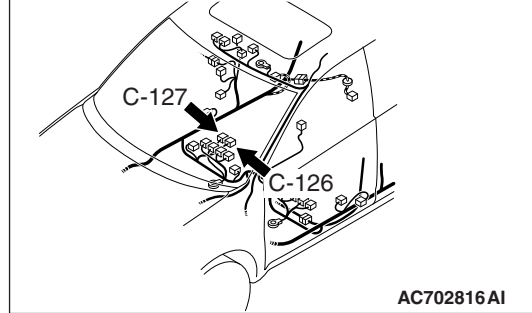

Connector: C-129

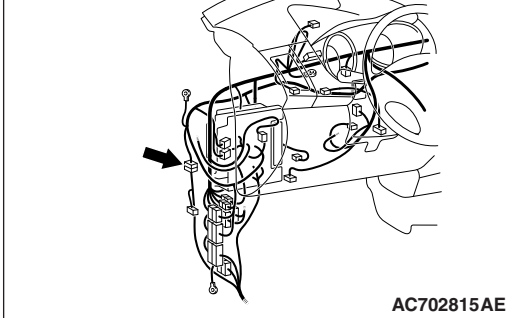**COMMENTS ON TROUBLE SYMPTOM**

If the audio sound is not output, the multivision display, audio amplifier, or power supply circuit of audio amplifier may have a problem, or the option coding information may be inconsistent.

**PROBABLE CAUSES**

- Malfunctions of multivision display
- Malfunction of audio amplifier
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Check the multivision display operation.****Q: Check the sources from which the sound is not output.**


**No sound only from radio :** Perform Inspection Procedure 6 "The AM/FM radio broadcasting cannot be received." (Refer to [P.54A-544.](#))

**No sound only when the CD is played :** Perform Inspection Procedure 8 "CD/DVD cannot be Played." (Refer to [P.54A-547.](#))

**No sound only when the DVD is played :** Perform Inspection Procedure 8 "CD/DVD cannot be Played." (Refer to [P.54A-547.](#)) or Inspection Procedure 9 "Image of a DVD is Played, but no Sound is Played." (Refer to [P.54A-548.](#))

**No sound only when the music server is used :** Go to Step 8.

**No sound from any of the sources :** Go to Step 2.

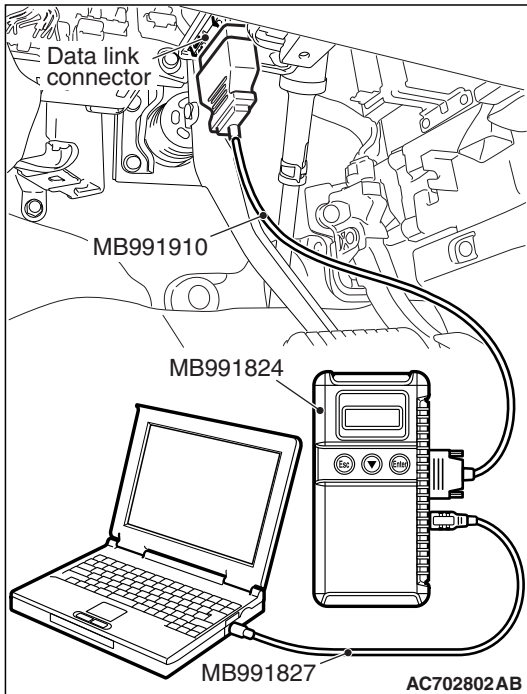**STEP 2. Check the ETACS-ECU coding data.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Operate the scan tool MB991958 to read the ETACS-ECU option coding information (Refer to GROUP 00, Coding Table [P.00-35](#)).
- (4) Check that the "Speaker" is set to "Premium."

**Q: Is the check result normal?**

**YES** : Go to Step 3.

**NO** : Operate scan tool MB991958 to set the option coding "Speaker" to "Premium," and check the trouble symptom.

**STEP 3. Check the MMCS service mode, CAN communication confirmation, and coding data.**

- (1) Display the CAN Communication Confirmation and Coding Data of the MMCS service mode. (Refer to [P.54A-452](#))
- (2) Check if PREMIUM is displayed.

**Q: Is the check result normal?**

**YES** : Go to step 4.

**NO** : Go to step 5.

**STEP 4. Check the service data log for the MMCS service mode.**

With the service data log of MMCS service mode displayed, check if the service data log for SP (speaker) is displayed. (Refer to [P.54A-452](#))

**Q: Is the service data log for SP (speaker) displayed?**

**YES** : Go to step 5.

**NO** : Go to step 8.

**STEP 5. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Turn the ignition switch to "ON" position.
- (2) Diagnose the CAN bus line.

**Q: Is the check result normal?**

**YES** : Go to Step 6.

**NO** : Repair the CAN bus line.

---

**STEP 6. Using scan tool MB991958, read the CAN box unit diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

**Q: Is the DTC set?**

**YES** : Troubleshoot the MMCS (Refer to [P.54A-467](#)).

**NO** : Go to Step 7.

---

**STEP 7. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES** : Diagnose the ETACS-ECU (Refer to GROUP 54A – ETACS-ECU –Troubleshooting [P.54A-742](#)).

**NO** : Go to Step 8.

---

**STEP 8. Check the service data log for the MMCS service mode.**

(1) Display the service data log for the MMCS service mode.  
(Refer to [P.54A-452](#))

(2) Check if the service data log for drive and HDD is displayed.

**Q: Is the service data log displayed?**

**YES (The service data log for drive is displayed.) :**

Perform Inspection Procedure 8 "CD/DVD cannot be Played." (Refer to [P.54A-547](#).) or Inspection Procedure 9 "Image of a DVD is Played, but no Sound is Played." (Refer to [P.54A-548](#).) Go to Step 9.

**YES (The service data log for HDD is displayed.) :**

Abnormalities relating to high or low temperature may be present. Check if the multivision display can output the sound at the operable temperature. If it cannot output the sound, go to Step 9.

**YES (The service data log for AMP is displayed.) :** Go to Step 9.

**NO** : Go to Step 9.

---

**STEP 9. Perform "Network/Connect Line Check" in the MMCS service mode.**

(1) Display "Network/Connect Line Check" in the MMCS service mode. (Refer to [P.54A-452](#))

(2) Check if "DVD Drive OK" is displayed.

(3) Check if "HDD Drive OK" is displayed.

(4) Check if "Premium Audio OK" is displayed.

**Q: Is the check result normal?**

**YES** : Go to Step 18.

**NO** : Go to Step 10.

**STEP 10. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 11.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection



[P.00E-2.](#)

**STEP 11. Check the ground circuit to the rear monitor.**  
**Measure the resistance at audio amplifier connector D-126.**

(1) Disconnect audio amplifier connector D-126, and measure the resistance available at the wiring harness side of the connector.


(2) Measure the resistance between terminal 24 and ground.

**OK: The resistance should be 2 ohms or less**

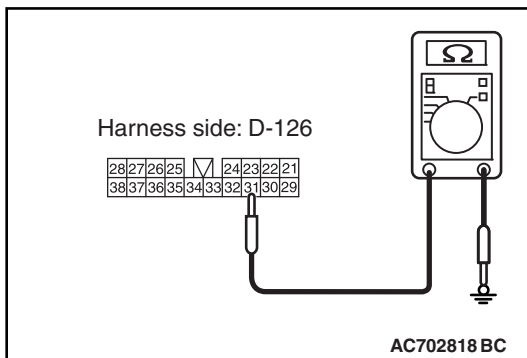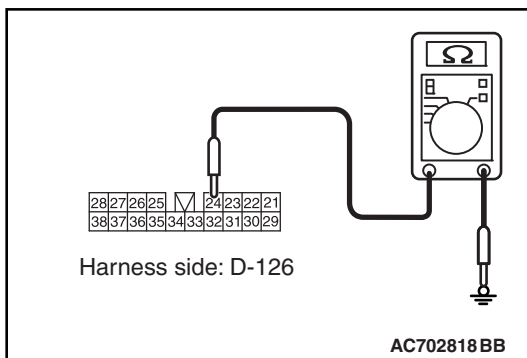

(3) Measure the resistance between terminal 32 and ground.

**OK: The resistance should be 2 ohms or less**

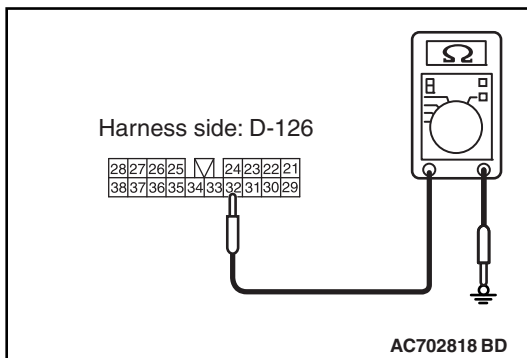

(4) Measure the resistance between terminal 32 and ground.

**OK: The resistance should be 2 ohms or less**

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 13.

**NO :** Go to Step 12.

**STEP 12. Check the wiring harness between audio amplifier connector D-126 (terminal 24, 31, 32) and ground.**

- Check the ground wire for open circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 24, 31, 32) and ground in good condition?**


**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 13. Check the power supply circuit to the ETACS-ECU. Measure the voltage at audio amplifier connector D-126.**


- (1) Disconnect audio amplifier connector D-126, and measure the voltage available at the wiring harness-side connector.
- (2) Measure the voltage between terminal 25 and ground.

**OK: The voltage should measure approximately 12 volts (battery positive voltage).**

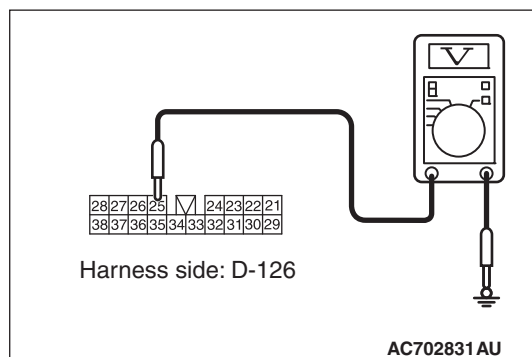

- (3) Measure the voltage between terminal 35 and ground.

**OK: The voltage should measure approximately 12 volts (battery positive voltage).**

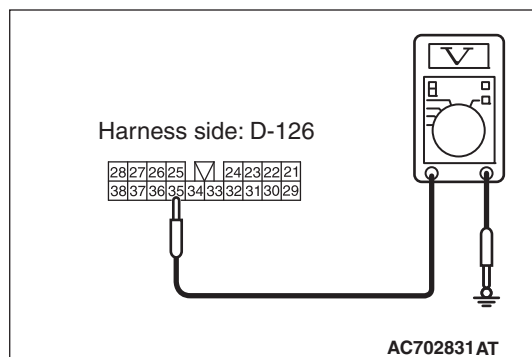


- (4) Measure the voltage between terminal 36 and ground.

**OK: The voltage should measure approximately 12 volts (battery positive voltage).**

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 15.

**NO :** Go to Step 14.

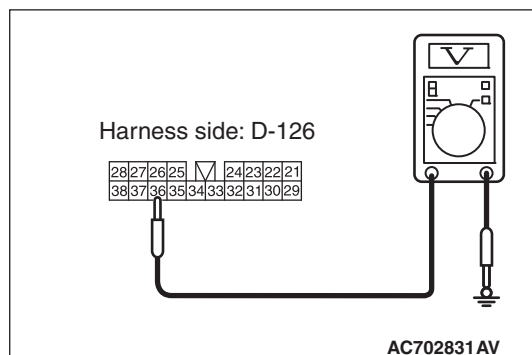

---

**STEP 14. Check the wiring harness between audio amplifier connector D-126 (terminal 25, 35, 36) and fusible link (36).**

*NOTE: Also check intermediate connector C-129 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-129 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the power supply line for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 25, 35, 36) and fusible link (36) in good condition?**

**YES :** Go to Step 15.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 15. Check multivision display connector C-06, C-10 and audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-06 and audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 16.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 16. Check the wiring harness between multivision display connector C-06 (terminal 82) and audio amplifier connector D-127 (terminal 3)**

*NOTE: Also check intermediate connectors C-15 and C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-15 or C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication line for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-06 (terminal 82) and audio amplifier connector D-127 (terminal 3) in good condition?**

**YES :** Go to Step 17.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 17. Check the wiring harness between multivision display connector C-10 (terminal 6) and audio amplifier connector D-126 (terminal 34)**

*NOTE: Also check intermediate connectors C-15 and C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-15 or C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication line for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 6) and audio amplifier connector D-126 (terminal 34) in good condition?**

**YES :** Go to Step 18.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 18. Retest the system**

Check that the audio sound is output.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00 –How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** Go to step 19.

---

**STEP 19. Retest the system**

Temporarily replace the multivision display and check if the sound is output.

**Q: Is the check result normal?**

**YES :** Replace the multivision display.


**NO :** Replace the audio amplifier.

**Inspection Procedure 3: No sound is heard from one of the speakers. <Vehicles without audio amplifier>**


**CAUTION**

Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

Speaker System Circuit

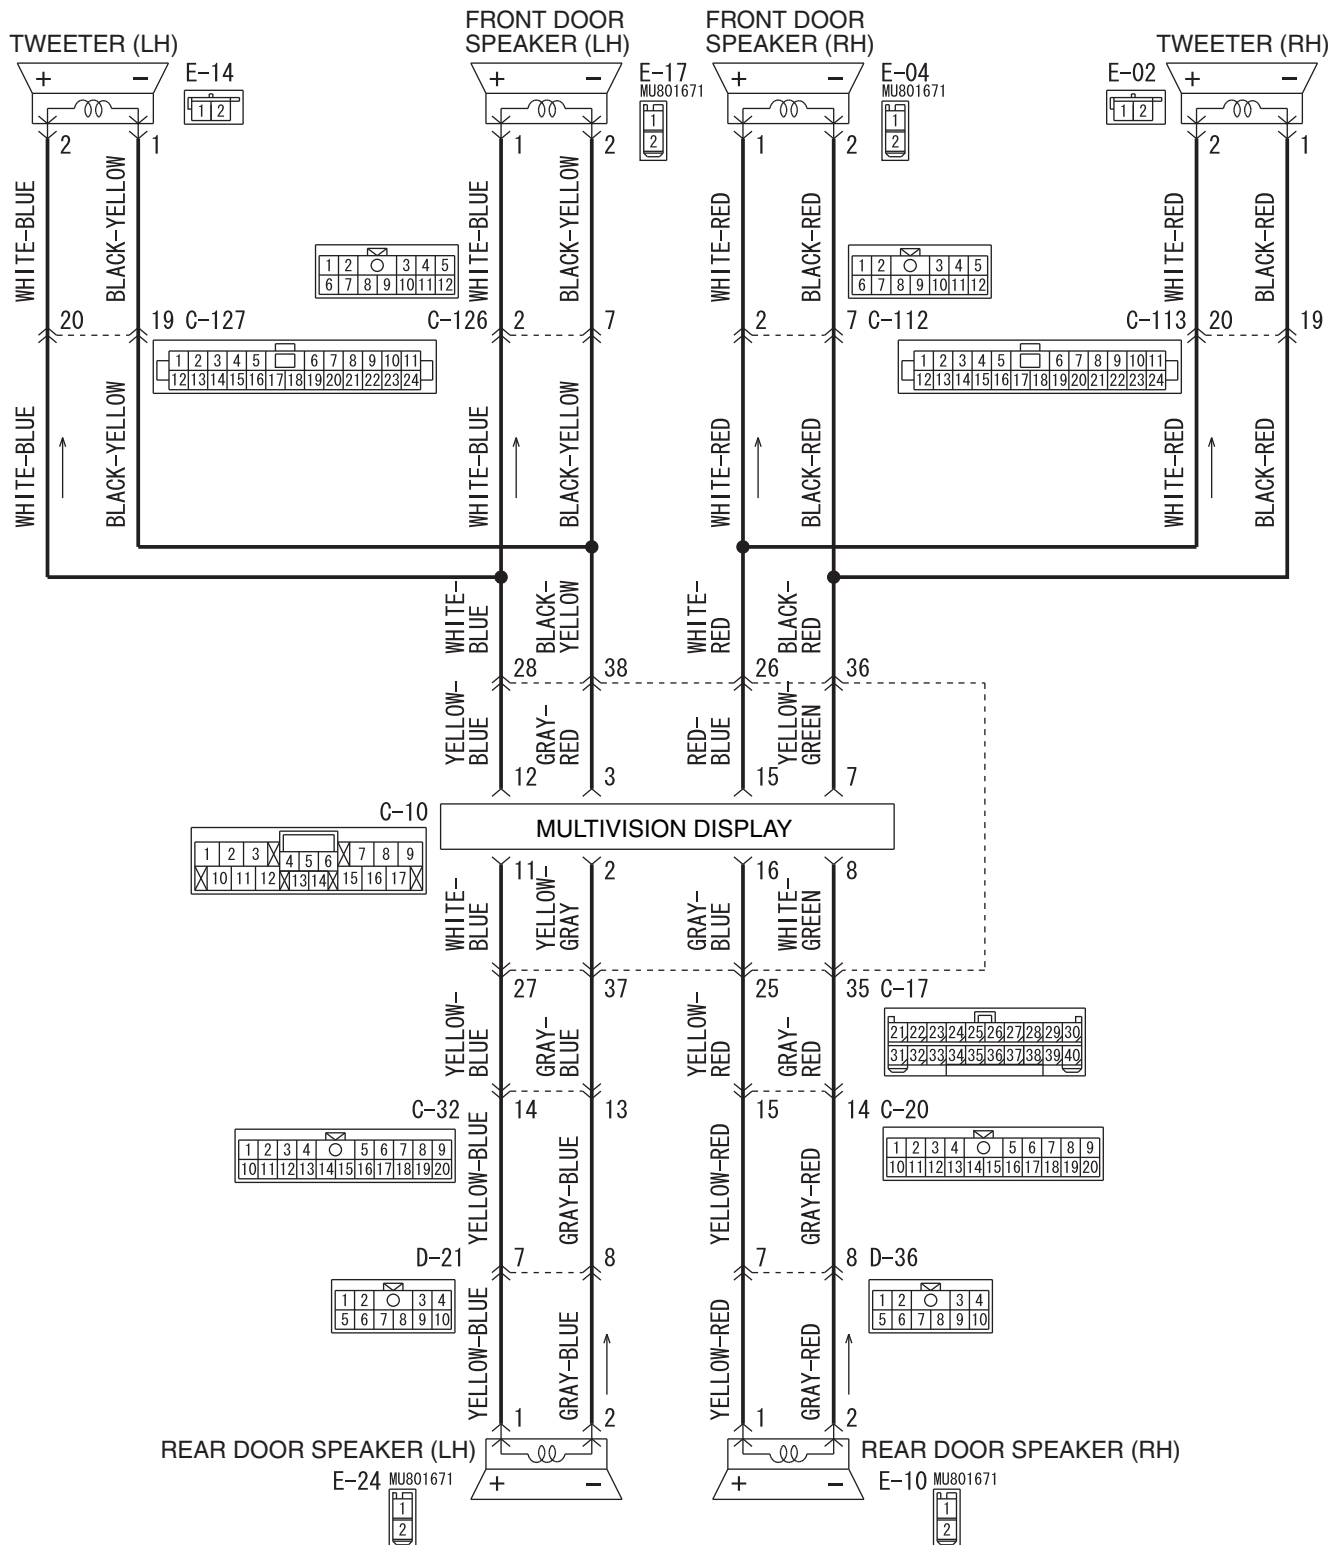


Connectors: C-10, C-17, C-20, C-112, C-113

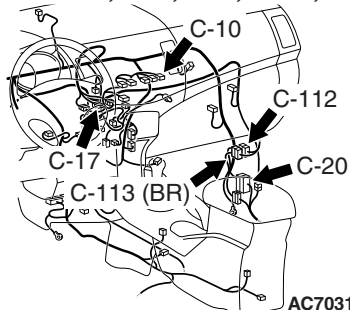


AC703148 AL

Connector: D-36

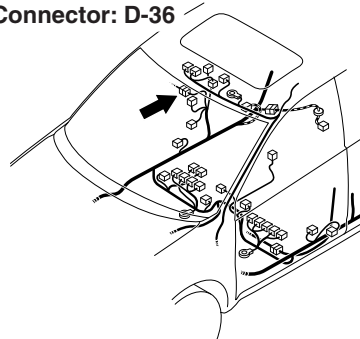


AC702816 AJ

Connectors: C-32, C-126, C-127

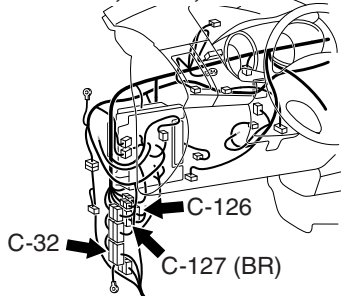


AC702815 AN

Connectors: E-02, E-04, E-10, E-14, E-17, E-24

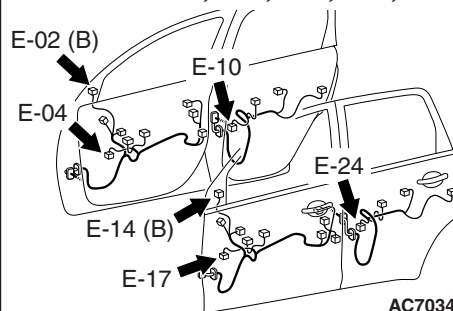

AC703415 AC

Connector: D-21

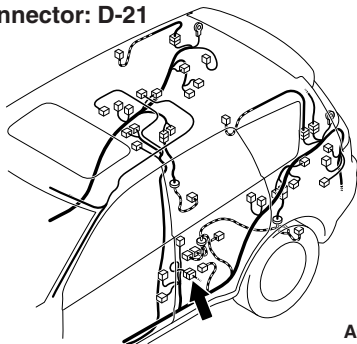

AC702817 AO

**COMMENTS ON TROUBLE SYMPTOM**


If the sound is not heard from one of the speakers, the speaker, multivision display, communication line from the multivision display to the speaker may have a problem. Also, the option coding information may be inconsistent.

**PROBABLE CAUSES**

- Malfunction of speaker
- Malfunctions of multivision display
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

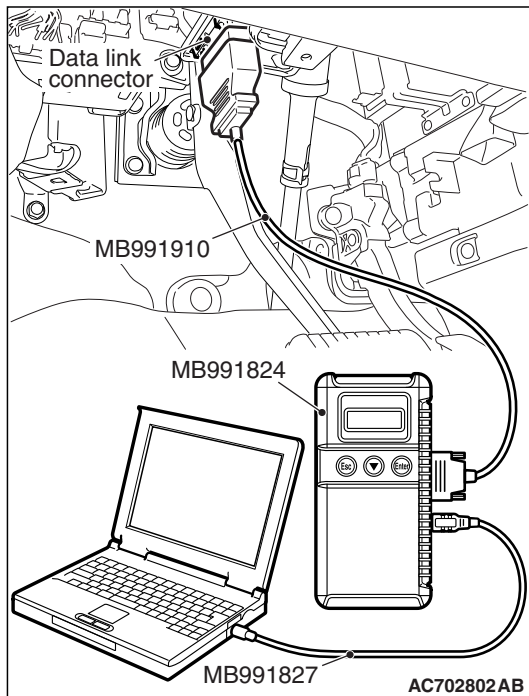**STEP 1. Check the ETACS-ECU coding data.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Operate the scan tool MB991958 to read the ETACS-ECU option coding information (Refer to GROUP 00, Coding Table [P.00-35](#)).
- (4) Check that the "Number of speaker" is set to "6 speakers".

**Q: Is the check result normal?**

**YES** : Go to Step 2.

**NO** : Operate scan tool MB991958 to set the option coding "Number of speaker" to "6 speakers" and check the trouble symptom.

**STEP 2. Check the MMCS service mode, CAN communication confirmation, and coding data.**

- (1) Display the CAN Communication Confirmation and Coding Data of the MMCS service mode. (Refer to [P.54A-452](#))
- (2) Check if "6 SPEAKER (2 TWEETER)" is displayed as the number of installed speakers.

**Q: Is the check result normal?**

**YES** : Go to Step 3.

**NO** : Go to Step 4.

**STEP 3. Check the service data log for the MMCS service mode.**

With the service data log of MMCS service mode displayed, check if the service data log for SP (speaker) is displayed. (Refer to [P.54A-452](#).)

**Q: Is the service data log for SP (speaker) displayed?**

**YES** : Go to step 4.

**NO** : Go to step 7.

**STEP 4. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Turn the ignition switch to "ON" position.
- (2) Diagnose the CAN bus line.

**Q: Is the check result normal?**

**YES** : Go to step 5.

**NO** : Repair the CAN bus line.

---

**STEP 5. Using scan tool MB991958, read the CAN box unit diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

**Q: Is the DTC set?**

**YES** : Troubleshoot the MMCS (Refer to [P.54A-467](#)).

**NO** : Go to Step 6.

---

**STEP 6. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES** : Diagnose the ETACS-ECU (Refer to GROUP 54A – ETACS-ECU –Troubleshooting [P.54A-742](#)).

**NO** : Go to Step 7.

---

**STEP 7. Checking with speaker test.**

Perform the speaker test, and check which speaker does not output the sound. Refer to [P.54A-452](#).

**Q: Is the check result normal?**

**YES <normal for all>** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO <abnormal for all>** : Refer to Inspection Procedure 2 "No sound is heard" [P.54A-501](#).

**NO <only front door speaker (RH) is abnormal>** : Go to Step 8.

**NO <only front door speaker (LH) is abnormal>** : Go to Step 12.

**NO <only rear door speaker (RH) is abnormal>** : Go to Step 16.

**NO <only rear door speaker (LH) is abnormal>** : Go to Step 20.

**NO <only tweeter (RH) is abnormal>** : Go to Step 24.

**NO <only tweeter (LH) is abnormal>** : Go to Step 28.


---

**STEP 8. Check front door speaker (RH) connector E-04 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front door speaker (RH) connector E-04 in good condition?**

**YES** : Go to Step 9.

**NO** : Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

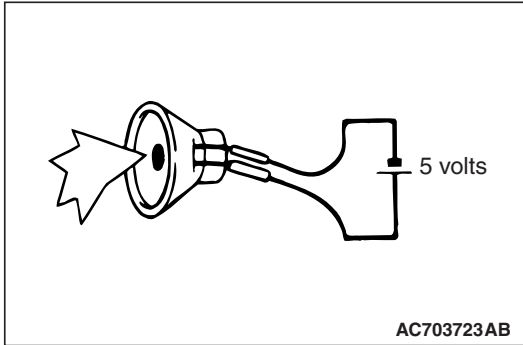

**STEP 9. Check the front door speaker (RH).**

- (1) Remove the front door speaker (RH). Refer to [P.54A-700](#).
- (2) Check that the front door speaker (RH) outputs the noise when the voltage of five volts is applied to the front door speaker (RH) connector terminal.

**Q: Does the front door speaker (RH) output the noise?**

**YES :** Go to Step 10.

**NO :** Replace the front door speaker (RH).

**STEP 10. Check multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10 in good condition?**

**YES :** Go to Step 11.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 11. Check the wiring harness between multivision display connector C-10 (terminal 7, 15) and front door speaker (RH) connector E-04 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-17 and C-112 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 or C-112 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 7, 15) and front door speaker (RH) connector E-04 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 32.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 12. Check front door speaker (LH) connector E-17 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front door speaker (LH) connector E-17 in good condition?**

**YES :** Go to Step 13.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

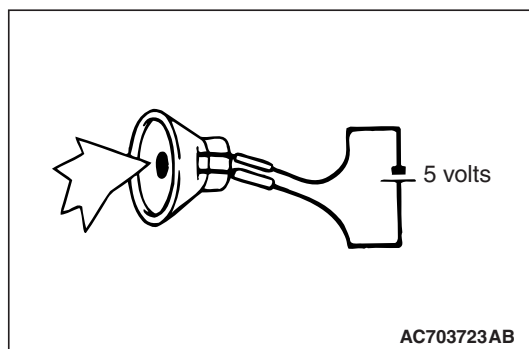

**STEP 13. Check the front door speaker (LH).**

- (1) Remove the front door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the front door speaker (LH) outputs the noise when the voltage of five volts is applied to the front door speaker (LH) connector terminal.

**Q: Does the front door speaker (LH) output the noise?**

**YES :** Go to Step 14.

**NO :** Replace the front door speaker (LH).

**STEP 14. Check multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10 in good condition?**

**YES :** Go to Step 15.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 15. Check the wiring harness between multivision display connector C-10 (terminal 3, 12) and front door speaker (LH) connector E-17 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-20 and C-126 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-20 or C-126 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 3, 12) and front door speaker (LH) connector E-17 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 32.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 16. Check rear door speaker (RH) connector E-24 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (RH) connector E-24 in good condition?**

**YES :** Go to Step 17.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---


**STEP 17. Check the rear door speaker (RH).**

- (1) Remove the rear door speaker (RH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (RH) outputs the noise when the voltage of five volts is applied to the rear door speaker (RH) connector terminal.

**Q: Does the rear door speaker (RH) output the noise?**

**YES :** Go to Step 18.

**NO :** Replace the rear door speaker (RH).

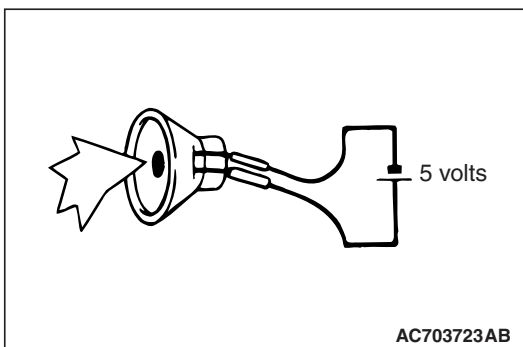

**STEP 18. Check multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10 in good condition?**

**YES :** Go to Step 19.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 19. Check the wiring harness between multivision display connector C-10 (terminal 8, 16) and rear door speaker (RH) connector E-10 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-17, C-20 and D-36 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17, C-20 or D-36 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 8, 16) and rear door speaker (RH) connector E-10 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 32.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.


---

**STEP 20. Check rear door speaker (LH) connector E-24 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (LH) connector E-24 in good condition?**

**YES :** Go to Step 21.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

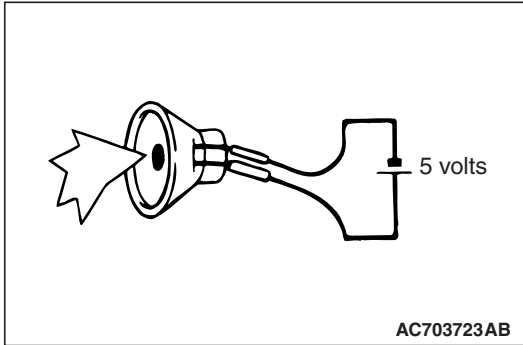

---

**STEP 21. Check the rear door speaker (LH).**

- (1) Remove the rear door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (LH) outputs the noise when the voltage of five volts is applied to the rear door speaker (LH) connector terminal.

**Q: Does the rear door speaker (LH) output the noise?**

**YES :** Go to Step 22.

**NO :** Replace the rear door speaker (LH).

---

**STEP 22. Check multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10 in good condition?**

**YES :** Go to Step 23.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 23. Check the wiring harness between multivision display connector C-10 (terminal 2, 11) and rear door speaker (LH) connector E-24 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-17, C-32 and D-21 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17, C-32 or D-21 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 2, 11) and rear door speaker (LH) connector E-24 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 32.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 24. Check tweeter (RH) connector E-02 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (RH) connector E-02 in good condition?**

**YES :** Go to Step 25.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 25. Check the tweeter (RH).**


(1) Remove the tweeter (RH). Refer to [P.54A-700](#).

(2) Check that the tweeter (RH) outputs the noise when the voltage of five volts is applied to the tweeter (RH) connector terminal.

**Q: Does the tweeter (RH) output the noise?**

**YES :** Go to Step 26.

**NO :** Replace the tweeter (RH).

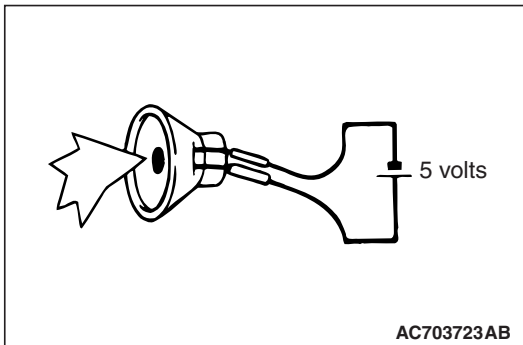

---

**STEP 26. Check multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10 in good condition?**

**YES :** Go to Step 27.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 27. Check the wiring harness between multivision display connector C-10 (terminal 7, 15) and tweeter (RH) connector E-02 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-17 and C-113 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 or C-113 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 7, 15) and tweeter (RH) connector E-02 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom, and go to Step 32.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 28. Check tweeter (LH) connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (LH) connector E-14 in good condition?**

**YES :** Go to Step 29.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 29. Check the tweeter (LH).**


(1) Remove the tweeter (LH). Refer to [P.54A-700](#).

(2) Check that the tweeter (LH) outputs the noise when the voltage of five volts is applied to the tweeter (LH) connector terminal.

**Q: Does the tweeter (LH) output the noise?**

**YES :** Go to Step 30.

**NO :** Replace the tweeter (LH).

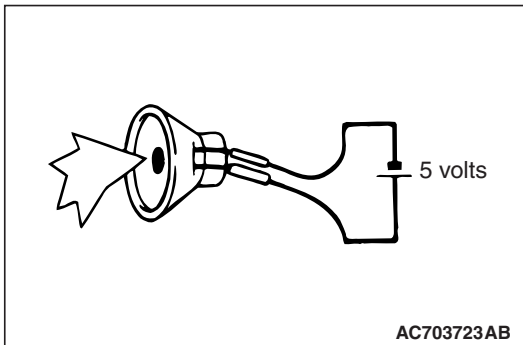

---

**STEP 30. Check multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-10 in good condition?**

**YES :** Go to Step 31.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 31. Check the wiring harness between multivision display connector C-10 (terminal 3, 12) and tweeter (LH) connector E-14 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-17 and C-127 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 or C-127 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 3, 12) and tweeter (LH) connector E-14 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom, and go to Step 32.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 32. Replace the multivision display temporarily, and check the trouble symptom.**

Replace the multivision display temporarily, and check that the sound is output from the speaker.


**Q: Is the check result normal?**


**YES :** Replace the multivision display.

**NO :** Replace the speaker or tweeter of output not sound.





**Inspection Procedure 3: No sound is heard from one of the speakers. <Vehicles with audio amplifier>****⚠ CAUTION**

Before replacing the multivision display, or audio amplifier, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

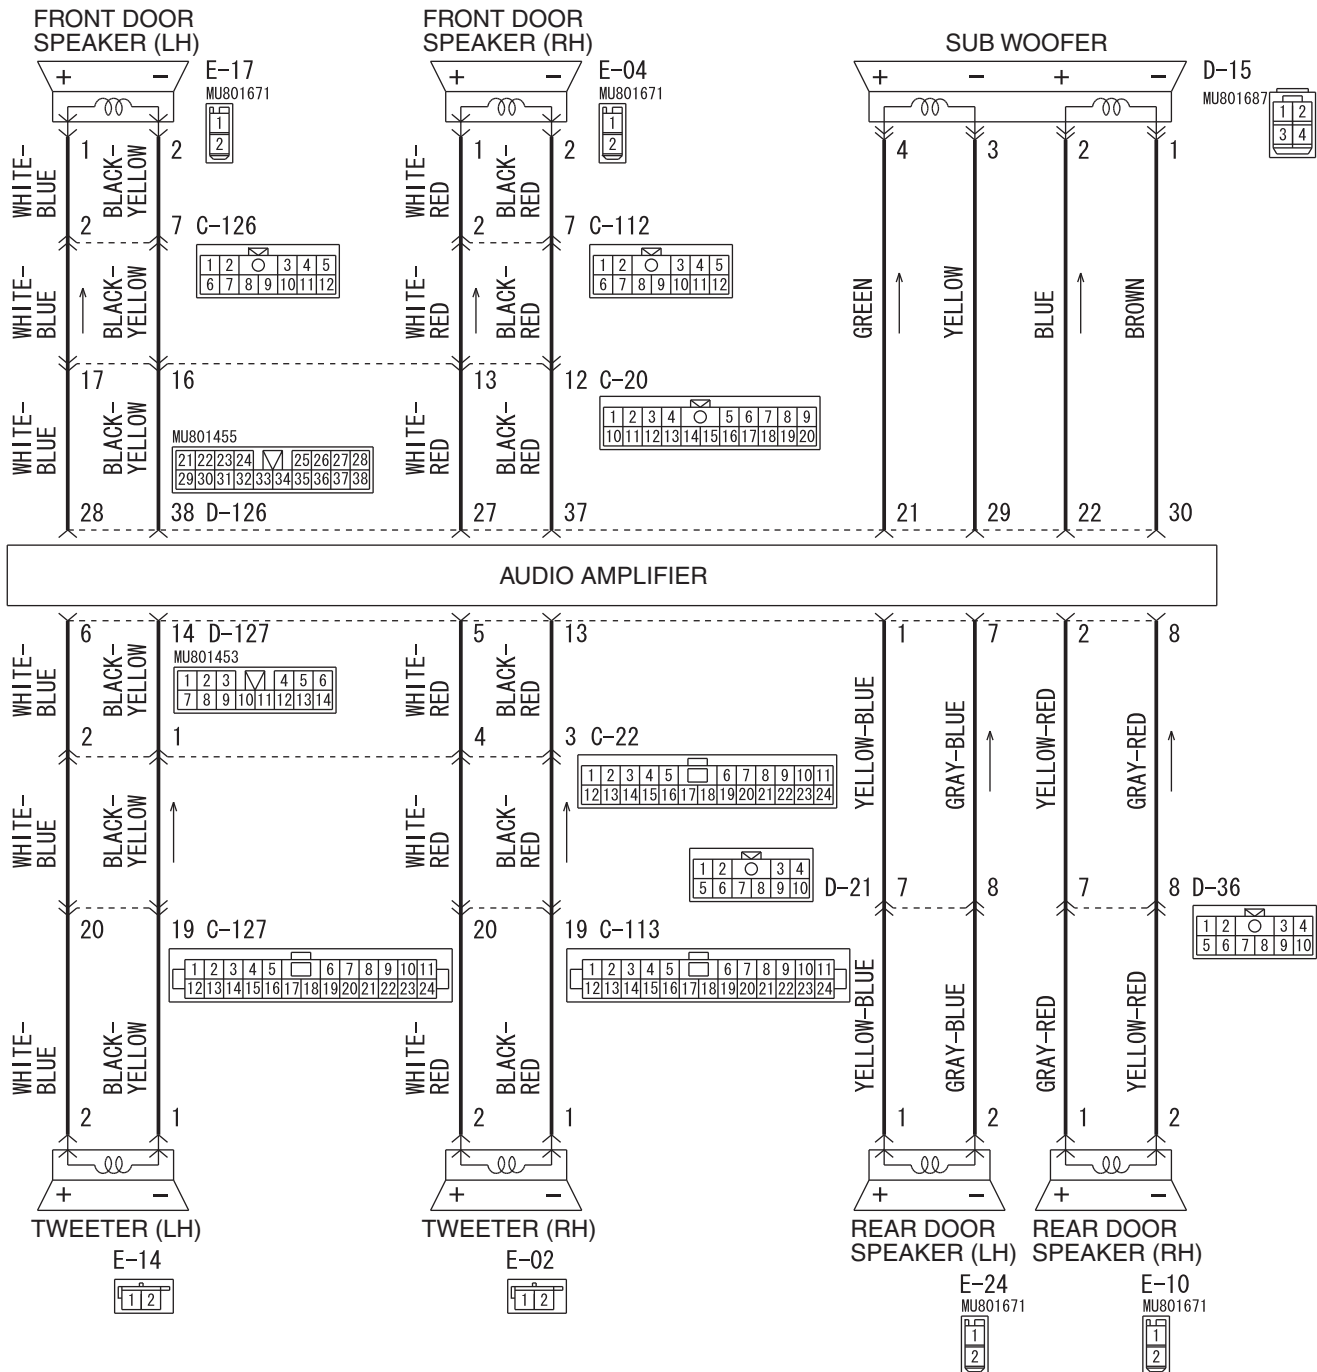
**Speaker System Circuit**

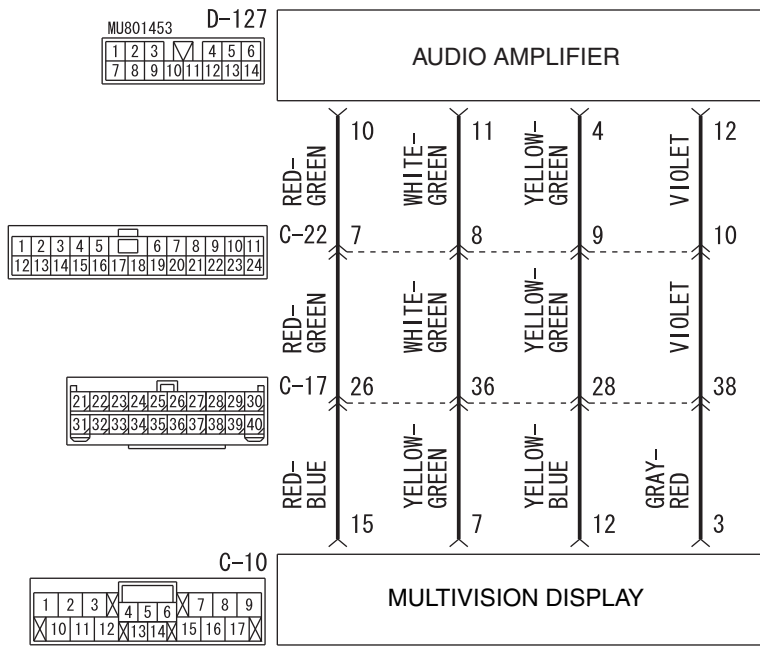

WAG54M032A

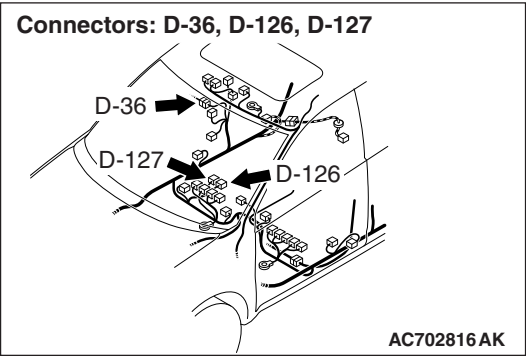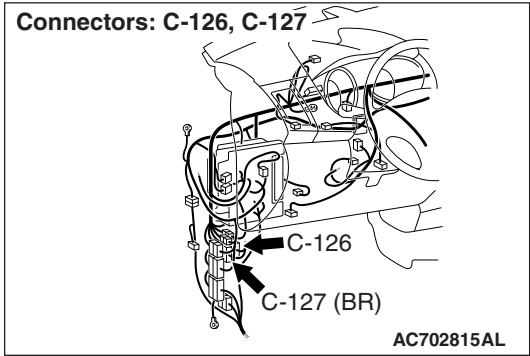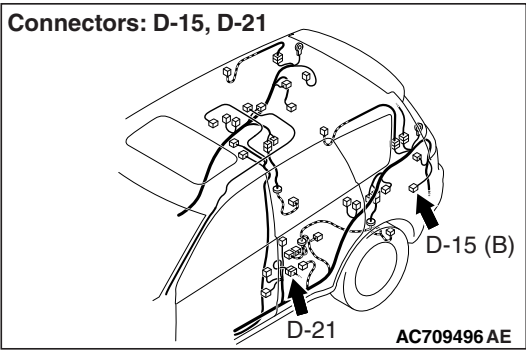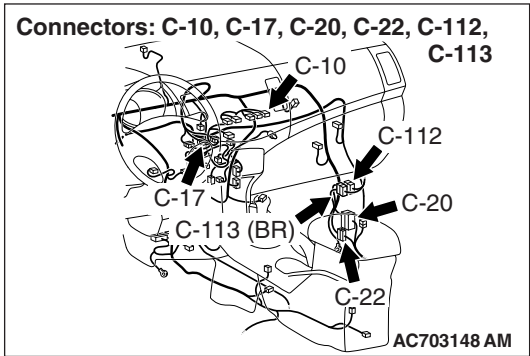

Connectors: E-02, E-04, E-10, E-14, E-17, E-24

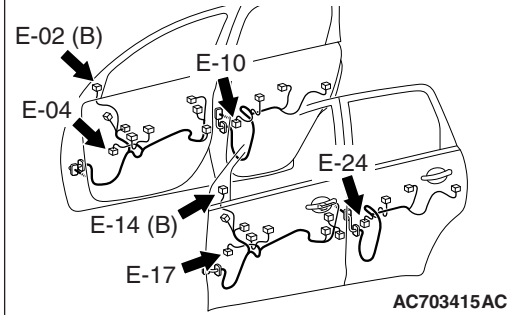**COMMENTS ON TROUBLE SYMPTOM**

If the sound is not heard from one of the speakers, the speaker, multivision display, audio amplifier, communication line from the multivision display to the audio amplifier, or communication line from the audio amplifier to the speaker may have a problem. Also, the option coding information may be inconsistent.

**PROBABLE CAUSES**

- Malfunction of speaker
- Malfunctions of multivision display
- Malfunction of audio amplifier
- Option coding information inconsistency
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Check the ETACS-ECU coding data.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-465](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Operate the scan tool MB991958 to read the ETACS-ECU option coding information (Refer to GROUP 00, Coding Table [P.00-35](#)).
- (4) Check that the "Number of speaker" is set to "Premium."

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Operate scan tool MB991958 to set the option coding "Number of speaker" to "Premium," and check the trouble symptom.

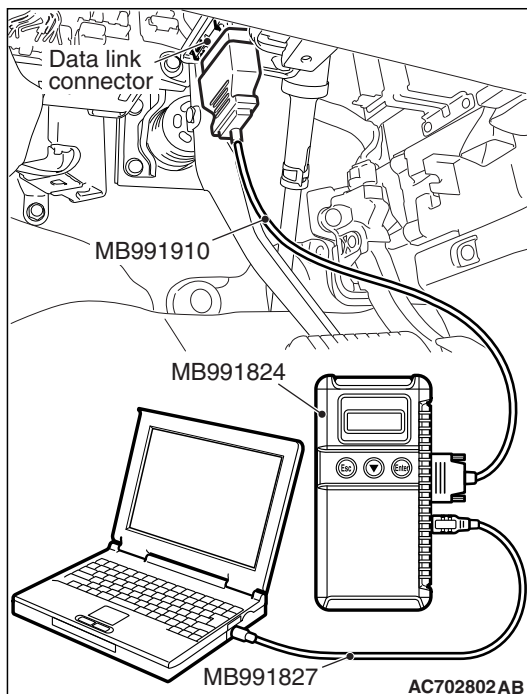

---

**STEP 2. Check the MMCS service mode, CAN communication confirmation, and coding data.**

- (1) Display the CAN Communication Confirmation and Coding Data of the MMCS service mode. (Refer to [P.54A-452](#))
- (2) Check if PREMIUM is displayed.

**Q: Is the check result normal?****YES** : Go to Step 3.**NO** : Go to Step 4.

---

**STEP 3. Check the service data log for the MMCS service mode.**

With the service data log of MMCS service mode displayed, check if the service data log for SP (speaker) is displayed. (Refer to [P.54A-452](#).)

**Q: Is the service data log for SP (speaker) displayed?****YES** : Go to step 4.**NO** : Go to step 7.

---

**STEP 4. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

- (1) Turn the ignition switch to "ON" position.
- (2) Diagnose the CAN bus line.

**Q: Is the check result normal?****YES** : Go to step 5.**NO** : Repair the CAN bus line.

---

**STEP 5. Using scan tool MB991958, read the CAN box unit diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

**Q: Is the DTC set?****YES** : Troubleshoot the MMCS (Refer to [P.54A-467](#)).**NO** : Go to Step 6.

---

**STEP 6. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code is set to the ETACS-ECU.

**Q: Is the DTC set?****YES** : Diagnose the ETACS-ECU (Refer to GROUP 54A – ETACS-ECU –Troubleshooting [P.54A-742](#)).**NO** : Go to Step 7.

**STEP 7. Checking with speaker test.**

Perform the speaker test, and check which speaker does not output the sound. Refer to [P.54A-452](#).

**Q: Is the check result normal?**

**YES <normal for all>** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO <abnormal for all>** : Refer to Inspection Procedure 2 "No sound is heard" [P.54A-505](#).

**NO <only front door speaker (RH) is abnormal>** : Go to Step 8.

**NO <only front door speaker (LH) is abnormal>** : Go to Step 14.

**NO <only rear door speaker (RH) is abnormal>** : Go to Step 20.

**NO <only rear door speaker (LH) is abnormal>** : Go to Step 24.

**NO <only tweeter (RH) is abnormal>** : Go to Step 28.

**NO <only tweeter (LH) is abnormal>** : Go to Step 32.

**NO <only subwoofer is abnormal>** : Go to Step 36.

**STEP 8. Check front door speaker (RH) connector E-04 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is front door speaker (RH) connector E-04 in good condition?**

**YES** : Go to Step 9.

**NO** : Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 9. Check the front door speaker (RH).**


(1) Remove the front door speaker (RH). Refer to [P.54A-700](#).

(2) Check that the front door speaker (RH) outputs the noise when five volts are applied to the front door speaker (RH) connector terminal.

**Q: Does the front door speaker (RH) output the noise?**

**YES** : Go to Step 10.

**NO** : Replace the front door speaker (RH).

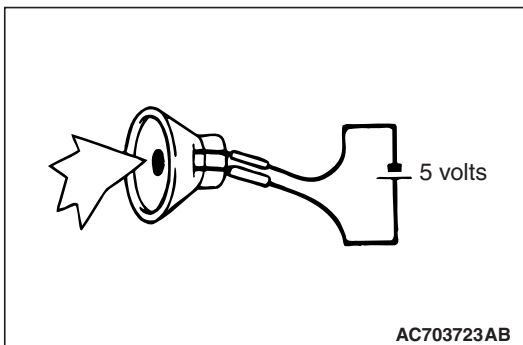

---

**STEP 10. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 11.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 11. Check the wiring harness between audio amplifier connector D-126 (terminal 27, 37) and front door speaker (RH) connector E-04 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-20 and C-112 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-20 or C-112 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 27, 37) and front door speaker (RH) connector E-04 (terminal 1, 2) in good condition?**

**YES :** Go to Step 12.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 12. Check multivision display connector C-10 and audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are multivision display connector C-10 and audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 13.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 13. Check the wiring harness between multivision display connector C-10 (terminal 7, 15) and audio amplifier connector D-127 (terminal 11, 10).**

*NOTE: Also check intermediate connectors C-17 and C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 or C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between multivision display connector C-10 (terminal 7, 15) and audio amplifier connector D-127 (terminal 11, 10) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 14. Check front door speaker (LH) connector E-17 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is front door speaker (LH) connector E-17 in good condition?**

**YES :** Go to Step 15.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).


**STEP 15. Check the front door speaker (LH).**

- (1) Remove the front door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the front door speaker (LH) outputs the noise when five volts are applied to the front door speaker (LH) connector terminal.

**Q: Does the front door speaker (LH) output the noise?**

**YES :** Go to Step 16.

**NO :** Replace the front door speaker (LH).

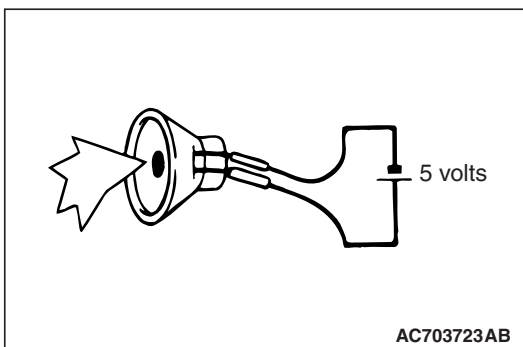

**STEP 16. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 17.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 17. Check the wiring harness between audio amplifier connector D-126 (terminal 28, 38) and front door speaker (LH) connector E-17 (terminal 1, 2).**

*NOTE: Also check intermediate connectors C-20 and C-126 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-20 or C-126 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 28, 38) and front door speaker (LH) connector E-17 (terminal 1, 2) in good condition?**

**YES :** Go to Step 18.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 18. Check multivision display connector C-10 and audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are multivision display connector C-10 and audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 19.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 19. Check the wiring harness between multivision display connector C-10 (terminal 3, 12) and audio amplifier connector D-127 (terminal 12, 4)**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connectors C-17 and C-22 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 or C-22 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between multivision display connector C-10 (terminal 3, 12) and audio amplifier connector D-127 (terminal 12, 4) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.


**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 20. Check rear door speaker (RH) connector E-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (RH) connector E-10 in good condition?**

**YES :** Go to Step 21.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

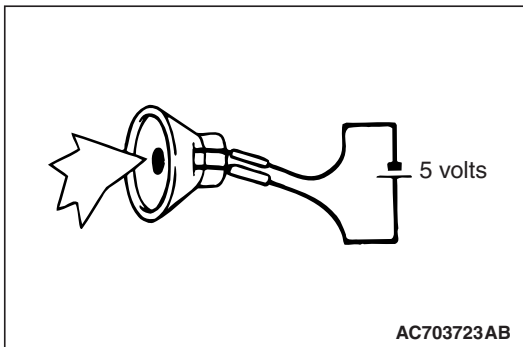

**STEP 21. Check the rear door speaker (RH).**

- (1) Remove the rear door speaker (RH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (RH) outputs the noise when five volts are applied to the rear door speaker (RH) connector terminal.

**Q: Does the rear door speaker (RH) output the noise?**

**YES :** Go to Step 22.

**NO :** Replace the rear door speaker (RH).

**STEP 22. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 23.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 23. Check the wiring harness between audio amplifier connector D-127 (terminal 2, 8) and rear door speaker (RH) connector E-10 (terminal 1, 2).**


*NOTE: Also check intermediate connector D-36 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector D-36 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 2, 8) and rear door speaker (RH) connector E-10 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

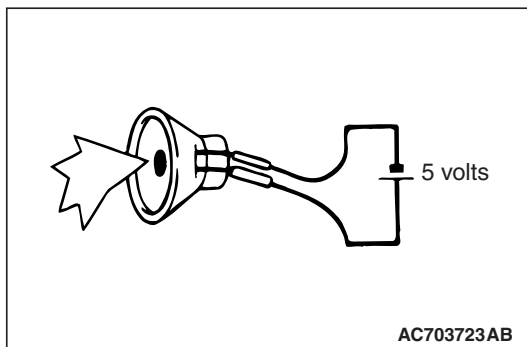

**STEP 24. Check rear door speaker (LH) connector E-24 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is rear door speaker (LH) connector E-24 in good condition?**

**YES :** Go to Step 25.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 25. Check the rear door speaker (LH).**

- (1) Remove the rear door speaker (LH). Refer to [P.54A-700](#).
- (2) Check that the rear door speaker (LH) outputs the noise when five volts are applied to the rear door speaker (LH) connector terminal.

**Q: Does the rear door speaker (LH) output the noise?**

**YES :** Go to Step 26.

**NO :** Replace the rear door speaker (LH).

**STEP 26. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 27.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 27. Check the wiring harness between audio amplifier connector D-127 (terminal 1, 7) and rear door speaker (LH) connector E-24 (terminal 1, 2).**

*NOTE: Also check intermediate connector D-21 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector D-21 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 1, 7) and rear door speaker (LH) connector E-24 (terminal 1, 2) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 28. Check tweeter (RH) connector E-02 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (RH) connector E-02 in good condition?**

**YES :** Go to Step 29.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 29. Check the tweeter (RH).**


(1) Remove the tweeter (RH). Refer to [P.54A-700](#).

(2) Check that the tweeter (RH) outputs the noise when five volts are applied to the tweeter (RH) connector terminal.

**Q: Does the tweeter (RH) output the noise?**

**YES :** Go to Step 30.

**NO :** Replace the tweeter (RH).

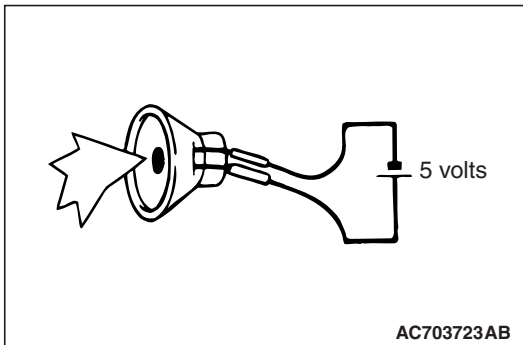

---

**STEP 30. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 31.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 31. Check the wiring harness between audio amplifier connector D-127 (terminal 5, 13) and tweeter (RH) connector E-02 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-22 and C-113 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 or C-113 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 5, 13) and tweeter (RH) connector E-02 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 32. Check tweeter (LH) connector E-14 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is tweeter (LH) connector E-14 in good condition?**

**YES :** Go to Step 33.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 33. Check the tweeter (LH).**


(1) Remove the tweeter (LH). Refer to [P.54A-700](#).

(2) Check that the tweeter (LH) outputs the noise when five volts are applied to the tweeter (LH) connector terminal.

**Q: Does the tweeter (LH) output the noise?**

**YES :** Go to Step 34.

**NO :** Replace the tweeter (LH).

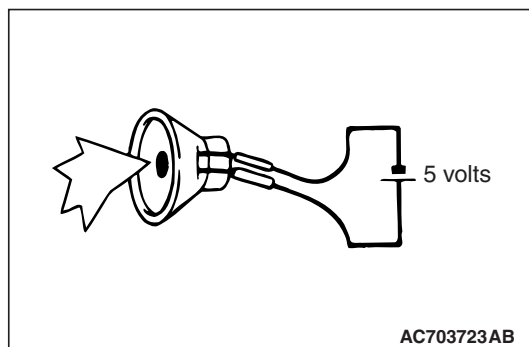

---

**STEP 34. Check audio amplifier connector D-127 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-127 in good condition?**

**YES :** Go to Step 35.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 35. Check the wiring harness between audio amplifier connector D-127 (terminal 6, 14) and tweeter (LH) connector E-14 (terminal 2, 1).**

*NOTE: Also check intermediate connectors C-22 and C-127 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-22 or C-127 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-127 (terminal 6, 14) and tweeter (LH) connector E-14 (terminal 2, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 36. Check subwoofer connector D-15 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is subwoofer connector D-15 in good condition?**

**YES :** Go to Step 37.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 37. Check the Subwoofer.**


(1) Remove the subwoofer. Refer to [P.54A-700](#).

(2) Check that the subwoofer outputs the noise when five volts are applied to the subwoofer connector terminal.

**Q: Does the subwoofer output the noise?**

**YES :** Go to Step 38.

**NO :** Replace the subwoofer.

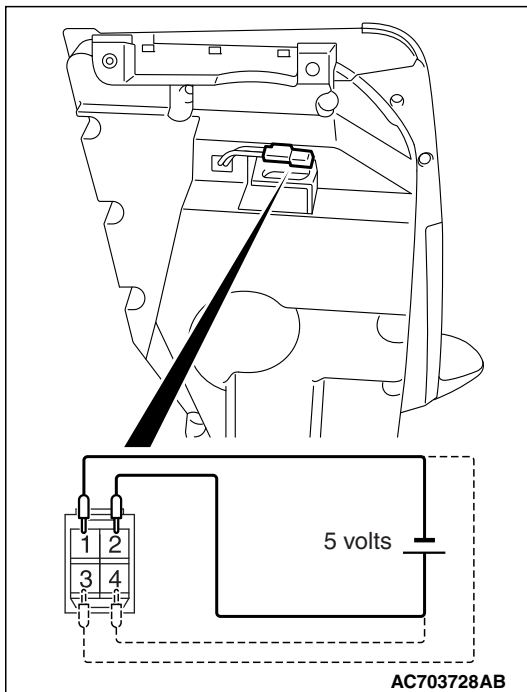

**STEP 38. Check audio amplifier connector D-126 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is audio amplifier connector D-126 in good condition?**

**YES :** Go to Step 39.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 39. Check the wiring harness between audio amplifier connector D-126 (terminal 21, 22, 29, 30) and subwoofer connector D-15 (terminal 4, 2, 3, 1).**

- Check the communication lines for open circuit and short circuit.

**Q: Is the wiring harness between audio amplifier connector D-126 (terminal 21, 22, 29, 30) and subwoofer connector D-15 (terminal 4, 2, 3, 1) in good condition?**

**YES :** Check the trouble symptom, and go to Step 40.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 40. Replace the audio amplifier temporarily, and check the trouble symptom.**

Replace the audio amplifier temporarily, and check that the sound is output from the speaker.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the multivision display.

**Inspection Procedure 4: The navigation system can be operated while the vehicle is driven.**


**⚠ CAUTION**

Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)


**Multivision Display Communication Circuit**

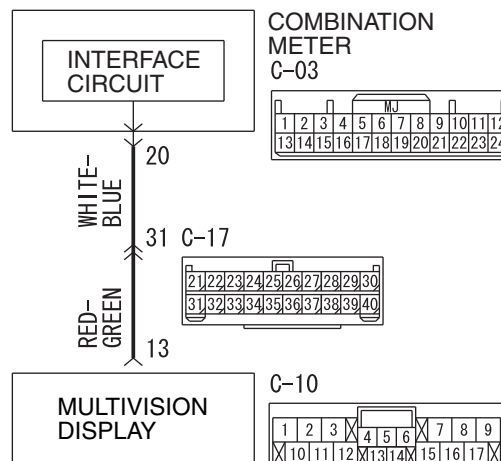

Connector: C-03

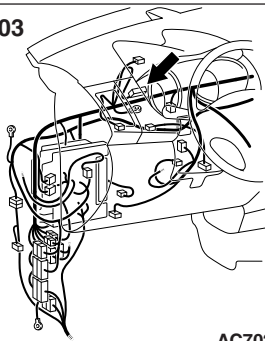

Connectors: C-10, C-17

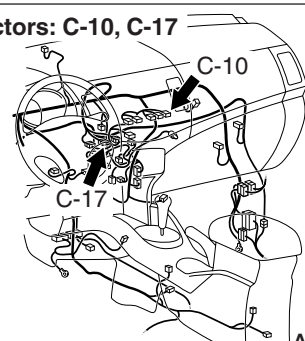**COMMENTS ON TROUBLE SYMPTOM**

There is a failure in the wiring harness between the combination meter and the multivision display, the respective connector(s), the combination meter or the multivision display.

**PROBABLE CAUSES**

- Malfunctions of combination meter
- Malfunctions of multivision display
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Perform "Vehicle Signal Check" in the MMCS service mode.**

Perform "Vehicle Signal Check" in the MMCS service mode to check whether vehicle speed signal is normal. (Refer to [P.54A-452](#).)

**Q: Is the vehicle speed signal transmitted normally?**

**YES** : Replace the multivision display.

**NO** : Go to Step 2.

**STEP 2. Check the speed meter.**

Check whether the speedometer works normally.

**Q: Does the speed meter work normally?**

**YES** : Go to Step 3.

**NO** : Diagnose the combination meter. Refer to [P.54A-32](#).

**STEP 3. Check combination meter connector C-03 and multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is combination meter connector C-03 or multivision display connector C-10 in good condition?**

**YES** : Go to Step 4.

**NO** : Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 4. Check the wiring harness between combination meter connector C-03 (terminal 20) and multivision display connector C-10 (terminal 13).**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between combination meter connector C-03 (terminal 20) and multivision display connector C-10 (terminal 13) in good condition?**

**YES :** Go to Step 5.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 5. Substitute a known good multivision display, and check the trouble symptom.**

Check that no menus are active during driving.

**Q: Is the check result normal?**

**YES :** Replace the multivision display.


**NO :** Replace the combination meter.

**Inspection Procedure 5: The screen is not normal in the navigation mode. (The displayed position of the vehicle mark deviates.)**

**⚠ CAUTION**


Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

**Multivision Display Communication Circuit**

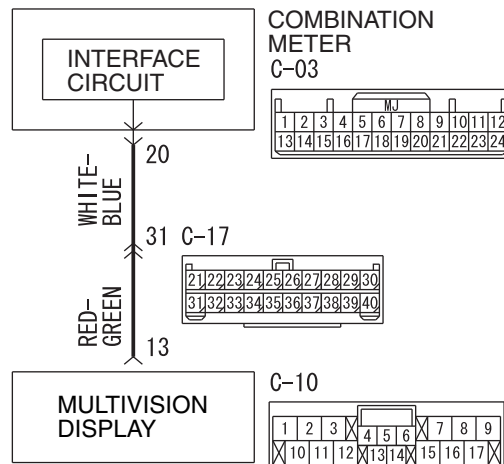


W9G54M021A

**Connector: C-03**

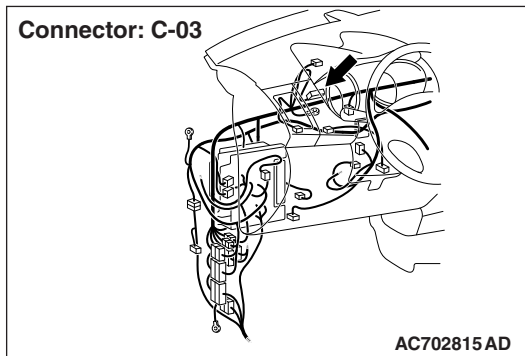

**Connectors: C-10, C-17**

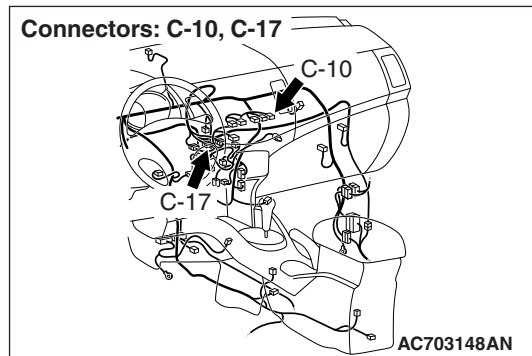

**COMMENTS ON TROUBLE SYMPTOM**

There is a failure in the wiring harness between the combination meter and the multivision display, the GPS antenna, the respective connector(s), the combination meter or the multivision display.

**PROBABLE CAUSES**

- Malfunctions of GPS antenna
- Malfunctions of combination meter
- Malfunctions of multivision display
- Damaged harness wires and connectors

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Confirmation in MMCS service mode**

Check the items below in the MMCS service mode. (Refer to [P.54A-452](#).)

- Perform "Network/Connect Line Check" in the MMCS service mode to check that the communication and wire connection with the GPS are in good condition.
- Perform "Vehicle Signal Check", and then check the status of the vehicle speed signal.
- Perform "Sensor Check", and then check the status of the vehicle speed sensor and the gyro sensor.

**Q: Is the check result normal?**

**YES (OK for all)** : Go to Step 6.

**NO <GPS is not OK>** : Go to Step 2.

**NO <The vehicle speed sensor is not OK, or vehicle speed pulse does not increase after starting from a standstill>** : Go to Step 3.

**NO <Gyro sensor is not OK>** : Go to Step 6.

---

**STEP 2. GPS reception check**

- (1) Start the multivision display.
- (2) Press the [INFO] button.
- (3) Select [Vehicle Position].
- (4) Check if the GPS signals are received.

**Q: Is the check result normal?**

**YES** : Go to Step 6.

**NO** : Perform Inspection procedure 7 "GPS signal cannot be received." (Refer to [P.54A-546](#).) Then, go to Step 6.

---

**STEP 3. Check the speedometer.**

Check whether the speedometer works normally.

**Q: Does the speedometer work normally?**

**YES** : Go to Step 4.

**NO** : Diagnose the combination meter (Refer to Combination meter –Diagnosis [P.54A-70](#)).

---

**STEP 4. Check combination meter connector C-03 and multivision display connector C-10 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is combination meter connector C-03 or multivision display connector C-10 in good condition?**

**YES** : Go to Step 5.

**NO** : Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 5. Check the wiring harness between combination meter connector C-03 (terminal 20) and multivision display connector C-10 (terminal 13).**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between combination meter connector C-03 (terminal 20) and multivision display connector C-10 (terminal 13) in good condition?**

**YES :** Go to Step 6.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 6. Substitute a known good multivision display, and check the trouble symptom.**

Check whether the navigation screen is normal.

**Q: Is the navigation screen normal?**


**YES :** Replace the multivision display.

**NO :** Replace the combination meter.


## Inspection Procedure 6: The AM/FM Radio Broadcasting Cannot be Received.

**CAUTION**

Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

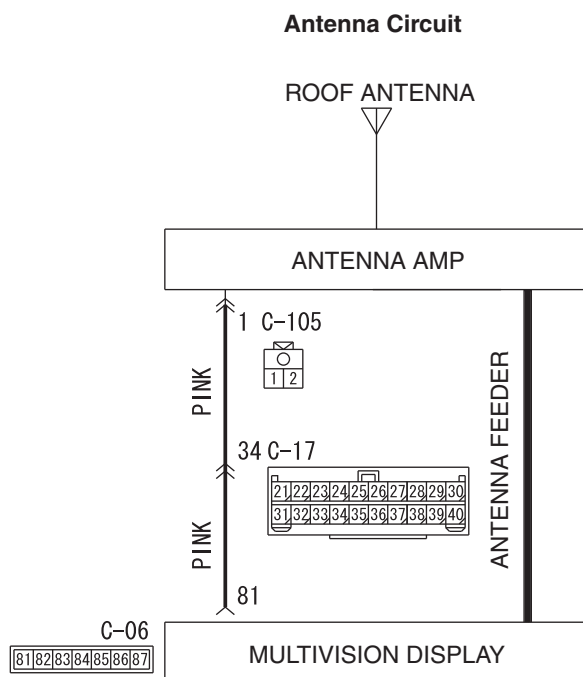

WAG54M033A

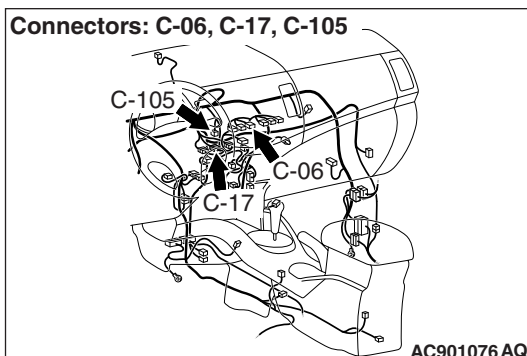

**NOTE:** The radio wave may not be received if the vehicle is placed in the area which is exposed to a special electric field. Thus, check that the radio broadcasting can be received using the radio of another vehicle before carrying out diagnosis.

**TROUBLESHOOTING HINTS**

- Malfunction of roof antenna (antenna rod, antenna base)
- Antenna feeder malfunction
- Malfunctions of multivision display
- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector

**TECHNICAL DESCRIPTION (COMMENT)**

In case of AM/FM radio broadcasting cannot be received., the roof antenna (antenna rod, antenna base), antenna fender or multivision display may have a problem.

## DIAGNOSIS

---

**STEP 1. Check the state of the antenna rod and antenna base.**

**Q: Is the roof antenna assembled?**

**YES :** Go to Step 2.

**NO :** Assemble antenna rod and antenna base.

---

**STEP 2. Check to see if inspections are taking place in an area exposed to special electric fields.**

**Q: Is the reception area exposed to special electric fields?**

**YES :** Go to Step 3.

**NO :** Go to Step 4.

---

**STEP 3. Move the vehicle and check the radio.**

Move the vehicle to a good reception area that is not exposed to special electric fields.

**Q: Is the check result normal?**

**YES :** Diagnosis complete.

**NO :** Go to Step 4.

---

**STEP 4. Check damage in the roof antenna (the antenna rod, the antenna base).**

**Q: Is the check result normal?**

**YES :** Go to Step 5.

**NO :** Replace antenna rod or antenna base.

---

**STEP 5. Check the connection of the antenna plug and multivision display.**

**Q: Is the check result normal?**

**YES :** Go to Step 6.

**NO :** Replace the antenna rod, antenna base and antenna fender.

---

**STEP 6. Check multivision display connector C-06 and radio antenna connector C-105 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are multivision display connector C-06 and radio antenna connector C-105 in good condition?**

**YES :** Go to Step 7.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 7. Check the wiring harness between multivision display connector C-06 (terminal 81) and radio antenna connector C-105 (terminal 1).**

- Check the communication line for open circuit and short circuit.

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between multivision display connector C-06 (terminal 81) and radio antenna connector C-105 (terminal 1) in good condition?**

**YES :** Go to Step 8.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 8. Substitute a known good multivision display, and check the trouble symptom.**

**Q: Is the check result normal?**

**YES :** Replace the multivision display.

**NO :** Either repair or replace the antenna rod and antenna base.

---

Inspection Procedure 7: GPS signal can not be received.

---

**⚠ CAUTION**

Whenever the multivision display is replaced, ensure that the power supply circuit and the grounding circuit are normal. (Check that the voltage is 10 V or more.)

**COMMENTS ON TROUBLE SYMPTOM**

The GPS antenna or the multivision display may be defective.

**PROBABLE CAUSES**

- The GPS antenna may be defective
- The multivision display may be defective

**DIAGNOSIS**

---

**STEP 1. Confirmation in MMCS service mode**

Perform "Network/Connect Line Check" in the MMCS service mode to check that the communication and wire connection with the GPS antenna are OK. (Refer to [P.54A-452.](#))

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Check that the GPS antenna is correctly connected to the multivision display, and go to Step 2.

---

**STEP 2. Check for the vehicle's current position.**

Check that the vehicle is parked on a well-ventilated place.

**Q: Is the vehicle parked on a well-ventilated place?**

**YES :** Go to Step 3.

**NO :** Move the vehicle to a well-ventilated area.

---

**STEP 3. Confirming GPS signal reception**

- (1) Activate the multivision display.
- (2) Press the [INFO] button.
- (3) Select [Vehicle Position].
- (4) Wait for 5 minutes, and then check whether GPS signal can be received.

**Q: Can GPS signal be received?**

**YES :** The diagnosis is complete. (There is no failure)

**NO :** Go to Step 4.

---

**STEP 4. Substitute a known good multivision display, and check the trouble symptom.**

- (1) Temporarily replace the multivision display.
- (2) Activate the multivision display.
- (3) Press the [INFO] button.
- (4) Select [Vehicle Position].
- (5) Check if the GPS signals are being received after 5 minutes have elapsed.

**Q: Is the check result normal?**

**YES :** Replace the multivision display.

**NO :** Replace the GPS antenna.

---

**Inspection Procedure 8: CD/DVD cannot be played.**

---

**⚠ CAUTION**

Before replacing the multivision display, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

**COMMENTS ON TROUBLE SYMPTOM**

The CD/DVD or the multivision display may be defective.

**PROBABLE CAUSES**

- Defective DVD (video disk)
- The multivision display may be defective

**DIAGNOSIS**

---

**STEP 1. Check the CD/DVD insertion surface.**

Check if the CD/DVD is inserted with its correct surface facing upward.

**Q: Is the check result normal?**

**YES :** Go to step 2.

**NO :** Confirm the disk face, and insert it again. (If the disk is single-sided, its label should face up)

---

**STEP 2. Check the CD/DVD.**

- Check that the DVD has the correct region code.
- Check if the CD corresponds with the multivision display.

**Q: Is the check result normal?**

**YES :** Go to step 3.

**NO :** Use the DVD with a correct region code. Or use the CD which corresponds with the multivision display.

---

**STEP 3. Check the CD/DVD.**

Check that the CD/DVD is free of dirt or scratch.

**Q: Is the check result normal?**

**YES :** Go to step 4.

**NO :** Clean the disk, use a disk without scratches and burrs, or remove the burrs from the disk. Then, reinsert the disk.

---

**STEP 4. Temporarily replace the CD/DVD with another one, and check the trouble symptom.**

Check if another CD/DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES :** Replace the used CD/DVD.

**NO :** Go to step 5.

---

**STEP 5. Check the service data log for the MMCS service mode.**

- (1) Display the service data log for the MMCS service mode. (Refer to [P.54A-452.](#))
- (2) Check if the service data log for drive and HDD is displayed.

**Q: Is the service data log displayed?**

**YES (The service data log for drive is displayed.) :**  
Check for foreign materials or condensation. Repair if there is an abnormality, and then go to Step 6.

**YES (The service data log for HDD is displayed.) :**  
Abnormalities relating to high or low temperature may be present. Check if the multivision display can be played at the operable temperature. If it cannot be played, go to Step 6.

**NO :** Go to step 6.

---

**STEP 6. Perform "Network/Connect Line Check" in the MMCS service mode.**

- (1) Display "Network/Connect Line Check" in the MMCS service mode. (Refer to [P.54A-452.](#))
- (2) Check if "DVD Drive OK" is displayed.
- (3) Check if "HDD Drive OK" is displayed.

**Q: Is the check result normal?**

**YES :** Go to step 7.

**NO :** Replace the multivision display.

---

**STEP 7. Retest the system.**

Check if the CD/DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES :** The diagnosis is complete.

**NO :** Go to step 8.

---

**STEP 8. Temporarily replace the multivision display, and check the trouble symptom.**

After temporary replacement of the multivision display, check that the CD/DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES :** Replace the multivision display.

**NO :** Replace the CD/DVD.

**Inspection Procedure 9: Image of a DVD is played, but no sound is played.****⚠ CAUTION**

Before replacing the ECU, ensure that the power supply circuit, the ground circuit, and the communication circuit are normal. (Check that the voltage is 10 V or more.)

**COMMENTS ON TROUBLE SYMPTOM**

The DVD or the multivision display may be defective.

**PROBABLE CAUSES**

- Defective DVD
- The multivision display may be defective

**DIAGNOSIS****STEP 1. Check whether other sounds are emitted.**

Check whether sound other than DVD is emitted.

- (1) Check if the sound is output when the music server is used.
- (2) Check if the sound is output when the radio is used.
- (3) Check if the sound is output when a CD is used.

**Q: Is sound other than DVD emitted?**

**YES** : Go to Step 2.

**NO** : Diagnose the MMCS. (Refer to [P.54A-493.](#))

**STEP 2. Check a DVD to be inserted.**

Check if the sound is recorded in the DVD, using other DVD players.

**Q: Is sound data recorded in the DVD?**

**YES** : Go to Step 3.

**NO** : Use a DVD containing sound data.

**STEP 3. Check the DVD.**

Check that the DVD is free of dirt or scratch.

**Q: Is the check result normal?**

**YES** : Go to step 4.

**NO** : Clean the disk, use a disk without scratches and burrs, or remove the burrs from the disk. Then, reinsert the disk.

**STEP 4. Temporarily replace the DVD with another DVD, and check the trouble symptom.**

Check if the DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES** : Replace the used DVD.

**NO** : Go to step 5.

**STEP 5. Check the service data log for the MMCS service mode.**

- (1) Display the service data log for the MMCS service mode. (Refer to [P.54A-452.](#))
- (2) Check if the service data log for drive and HDD is displayed.

**Q: Is the service data log displayed?**

**YES (The service data log for drive is displayed.)** :  
Check for foreign materials or condensation. Repair if there is an abnormality, and then go to Step 6.

**YES (The service data log for HDD is displayed.)** :  
Abnormalities relating to high or low temperature may be present. Check if the multivision display can be played at the operable temperature. If it cannot be played, go to Step 6.

**NO** : Go to step 6.

**STEP 6. Perform "Network/Connect Line Check" in the MMCS service mode.**

- (1) Display "Network/Connect Line Check" in the MMCS service mode. (Refer to [P.54A-452.](#))
- (2) Check if "DVD Drive OK" is displayed.
- (3) Check if "HDD Drive OK" is displayed.

**Q: Is the check result normal?**

**YES** : Go to step 7.

**NO** : Go to step 8.

**STEP 7. Check the playing method.**

Check whether the disk was played normally and not with special playback (fast rewind, fast forward, slow, pause). Also, check whether the mute mode was selected. After that, check if the DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES** : The procedure is complete.

**NO** : Go to step 8.

---

**STEP 8. Temporarily replace the multivision display, and check the trouble symptom.**

After temporary replacement of the multivision display, check that the DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES :** Replace the multivision display.

**NO :** Replace the DVD.

---

**Inspection Procedure 10: Sound of a DVD can be played, but no image is played.**

---

**⚠ CAUTION**

Whenever the multivision display is replaced, ensure that the power supply circuit and the grounding circuit are normal. (Check that the voltage is 10 V or more.)

**COMMENTS ON TROUBLE SYMPTOM**

The DVD or the multivision display may be defective.

**PROBABLE CAUSES**

- Defective DVD
- The multivision display may be defective

**DIAGNOSIS**

---

**STEP 1. Check the DVD.**

Check that the DVD is free of dirt or scratch.

**Q: Is the check result normal?**

**YES :** Go to step 2.

**NO :** Clean the disk, use a disk without scratches and burrs, or remove the burrs from the disk. Then, reinsert the disk.

---

**STEP 2. Temporarily replace the DVD with another DVD, and check the trouble symptom.**

Check if the new DVD is played normally when it is inserted.

**Q: Is the check result normal?**

**YES :** Replace the used DVD.

**NO :** Go to step 3.

---

**STEP 3. Check the service data log for the MMCS service mode.**

- (1) Display the service data log for the MMCS service mode. (Refer to [P.54A-452.](#))
- (2) Check that the service data log for drive is displayed.
- (3) Check that the service data log for monitor is displayed.
- (4) Check that the service data log for HDD is displayed.

**Q: Is the service data log displayed?**

**YES (The service data log for drive is displayed.) :**  
Check for foreign materials or condensation. Repair if there is an abnormality, and then go to Step 4.

**YES (The service data log for monitor or HDD is displayed.) :** Abnormalities relating to high or low temperature may be present. Check if the DVD image is displayed on the monitor within the temperature range where the navigation and menu screens can be displayed. If the image is not displayed, go to Step 4.

**NO :** Go to step 4.

---

**STEP 4. Perform "Network/Connect Line Check" in the MMCS service mode.**

- (1) Display "Network/Connect Line Check" in the MMCS service mode. (Refer to [P.54A-452.](#))
- (2) Check if "DVD Drive OK" is displayed.
- (3) Check if "HDD Drive OK" is displayed.

**Q: Is the check result normal?**

**YES :** Go to step 5.

**NO :** Replace the multivision display.

**STEP 5. Temporarily replace the multivision display, and check the trouble symptom.**

After temporary replacement of the multivision display, check if the DVD image is displayed.

**Q: Is the check result normal?**


**YES :** Replace the multivision display.

**NO :** Replace the DVD.


**Inspection Procedure 11: The picture and sound of external input are not played.****⚠ CAUTION**

Whenever the multivision display is replaced, ensure that the power supply circuit and the grounding circuit are normal. (Check that the voltage is 10 V or more.)


Audio Adapter Communication Circuit

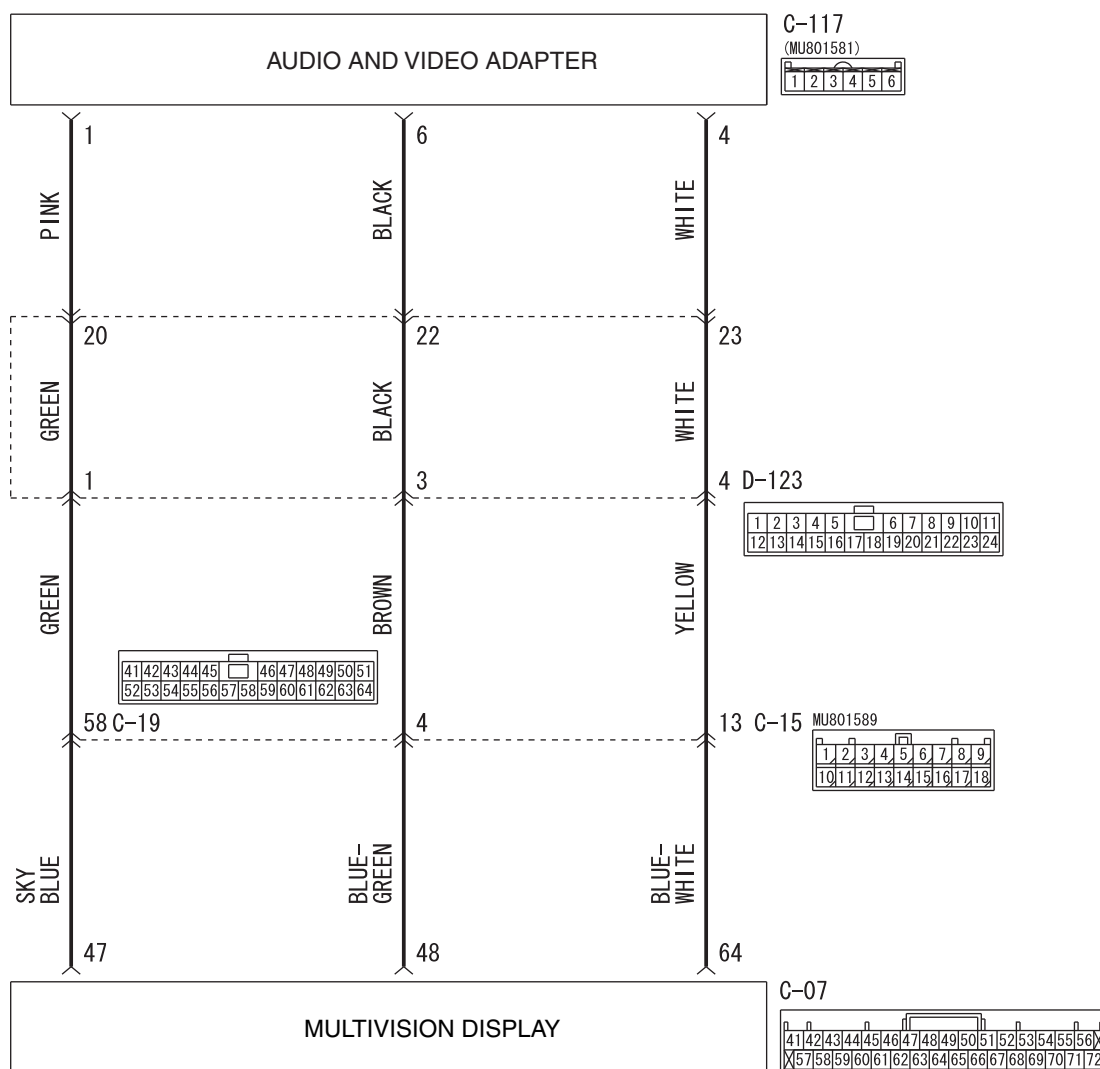

Connectors: C-07, C-15, C-117

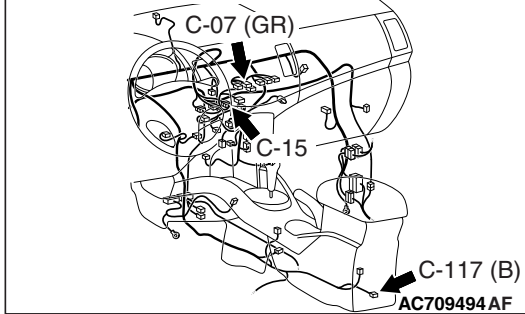

Connector: D-123

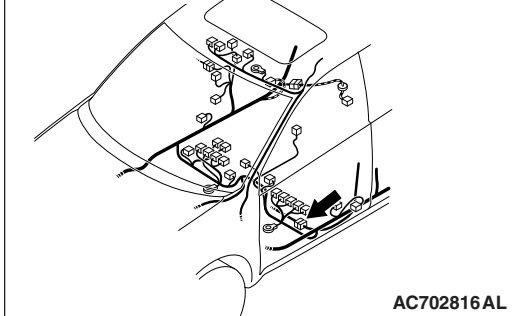**COMMENTS ON TROUBLE SYMPTOM**

The wiring harness between audio and video adapter and multivision display, audio and video adapter, or multivision display may have a problem.

*NOTE: Problem of the device to be connected and the connection problem between the audio and video adapter and the device is suspected. Thus, check the operation condition and connecting method of the devices to be connected to the multivision display and audio and video adapter before diagnosis.*

**PROBABLE CAUSES**

- The multivision display may be defective
- The audio and video adaptor may be defective
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Check of DVD picture**

Check that the DVD picture is displayed normally.

**Q: Is the check result normal?**

**YES :** Go to Step 2.

**NO :** Perform the troubleshooting related to the MMCS (Refer to [P.54A-493](#)).

**STEP 2. Check the audio and video adapter.**

Inspect the audio and video adapter.(Refer to [P.54A-569](#))

**Q: Is the check result normal?**

**YES :** Go to Step 3.

**NO :** Replace the audio and video adapter.

**STEP 3. Check multivision display connector C-07 and audio and video adaptor connector C-117 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are multivision display connector C-07 and audio and video adaptor connector C-117 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair the connector concerned.

**STEP 4. Check the wiring harness between multivision display connector C-07 (terminal 47, 48, 64) and audio and video adaptor connector C-117 (terminal 1, 6, 4).**

- Check the communication lines for open circuit and short circuit.

*NOTE: Also check intermediate connectors D-123 and C-15 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector D-123 or C-15 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between multivision display connector C-07 (terminal 47, 48, 64) and audio and video adaptor connector C-117 (terminal 1, 6, 4) in good condition?**

**YES :** Go to Step 5.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 5. Retest the system**

Check that the external input is normal.


**Q: Is the check result normal?**



**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** Replace the audio and video adaptor.

**Inspection Procedure 12: Check the CAN box unit power supply circuit.****⚠ CAUTION**

Whenever the CAN box unit is replaced, ensure that the power supply circuit and the grounding circuit are normal. (Check that the voltage is 10 V or more.)

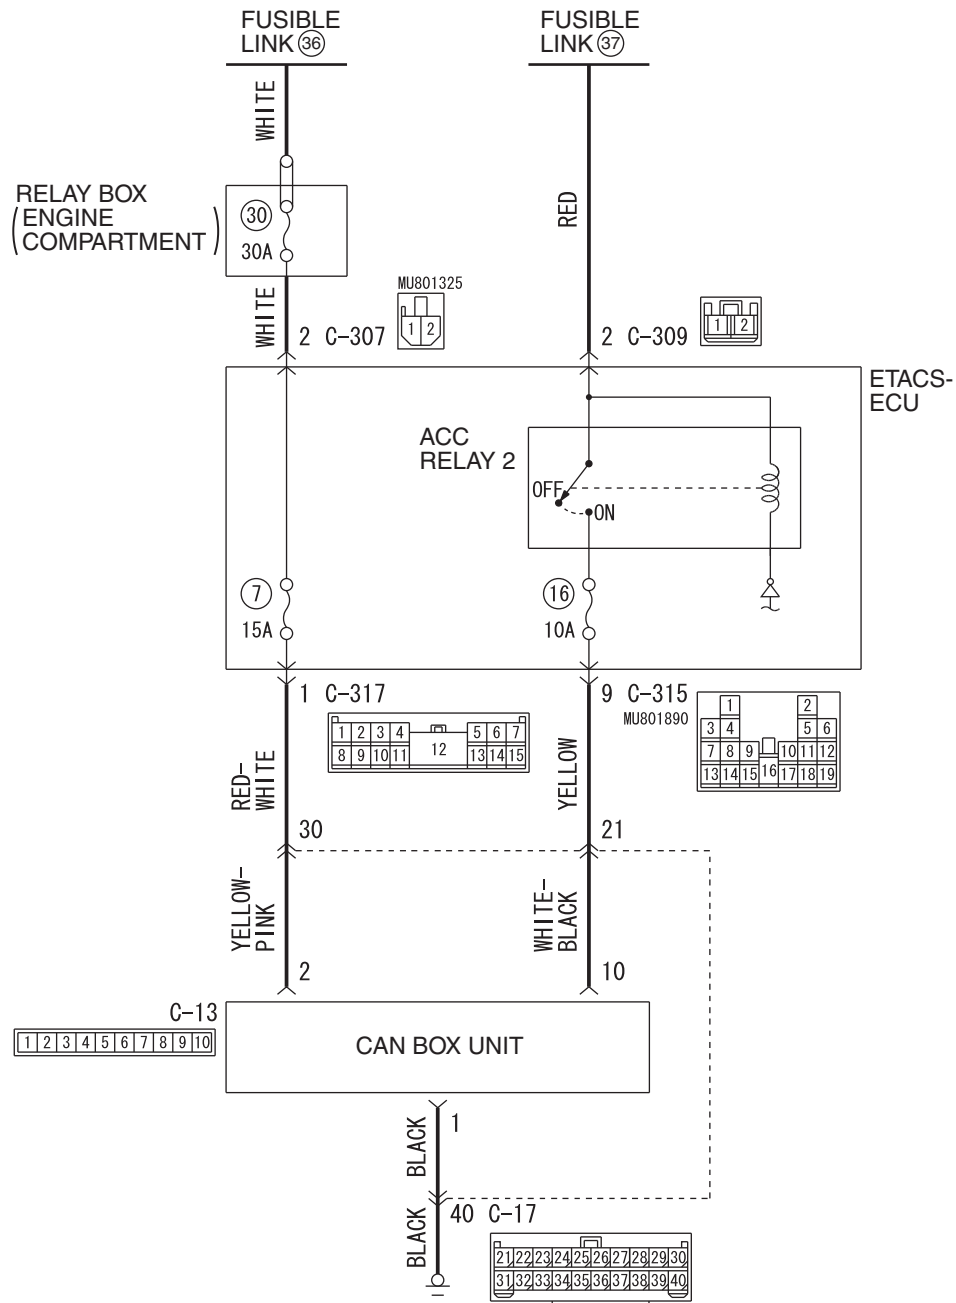**CAN Box Unit Power Supply Circuit**

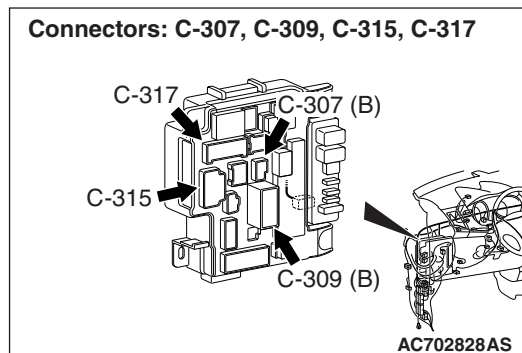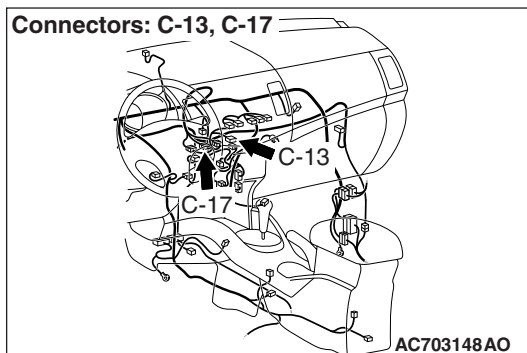

## TECHNICAL DESCRIPTION (COMMENT)

If the CAN box unit functions do not work at all, the CAN box unit power supply system, ground system, or CAN box unit may have a problem.

## TROUBLESHOOTING HINTS

- The wiring harness or connectors may have loose, corroded, or damaged terminals, or terminals pushed back in the connector
- The CAN box unit may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Check CAN box unit connectors C-13 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is CAN box unit connectors C-13 in good condition?**

**YES :** Go to Step 2.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 2. Check the ground circuit to the CAN box unit.**


**Measure the resistance at CAN box unit connectors C-13.**

- (1) Disconnect CAN box unit connector C-13 and measure the resistance available at the wiring harness side of the connector.
- (2) Measure the resistance value between CAN box unit connector C-13 terminal 1 and ground.
  - The resistance should be 2 ohms or less.

**Q: Is the measured resistance 2 ohms or less?**

**YES :** Go to Step 4.

**NO :** Go to Step 3.

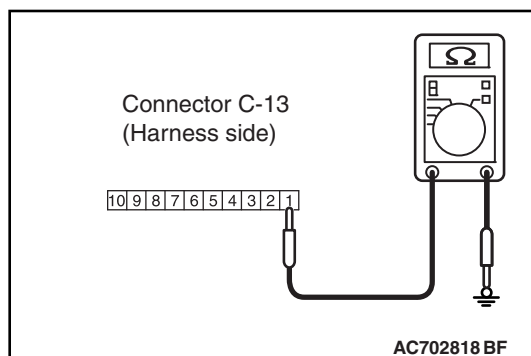

**STEP 3. Check the wiring harness between CAN box unit connector C-13 (terminal 1) and the ground.**

- Check the ground wires for open circuit.

**Q: Is the wiring harness between CAN box unit connector C-13 (terminal 1) and the ground in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.


**STEP 4. Check the battery power supply circuit to the CAN box unit. Measure the voltage at CAN box unit connectors C-13.**

- (1) Disconnect CAN box unit connectors C-13 measure the voltage available at the wiring harness side of the connector.
- (2) Measure the voltage between CAN box unit connector C-13 terminal 2 and ground.
  - The voltage should measure approximately 12 volts (battery positive voltage).

**Q: Is the measured voltage approximately 12 volts (battery positive voltage)?**

**YES :** Go to Step 6.

**NO :** Go to Step 5.

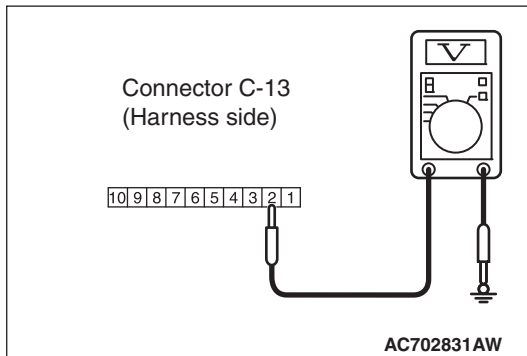**STEP 5. Check the wiring harness between CAN box unit connector C-13 (terminal 2) and fusible link (36).**

- Check the power supply line for open circuit and short circuit.

*NOTE: Also check intermediate connector C-17 and ETACS-ECU connectors C-307 and C-317 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 and ETACS-ECU connector C-307 or C-317 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection P.00E-2.*

**Q: Is the wiring harness between CAN box unit connector C-13 (terminal 2) and fusible link (36) in good condition?**

**YES :** No action is necessary and testing is complete.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary. The system should communicate with the CAN box unit normally.

**STEP 6. Using scan tool MB991958, check data list.**

Check the input signal of ACC relay.

- Turn the ignition switch to the ACC position.

Item No.	Item name	Normal conditions
Item 288	ACC switch	ON

**OK: Normal condition is displayed.**

**Q: Is the check result normal?**

**YES :** Go to Step 7.

**NO :** Refer to GROUP 54A, ETACS, Diagnosis –Inspection Procedure 1 "The ignition switch (ACC) signal is not received [P.54A-797](#)."

**STEP 7. Check the battery power supply circuit to the CAN box unit. Measure the voltage at CAN box unit connector C-13.**


- (1) Disconnect CAN box unit connectors C-13 measure the voltage available at the wiring harness side of the connector.
- (2) Measure the voltage between CAN box unit connector C-13 terminal 10 and ground.

**OK: Battery positive voltage.**

**Q: Is the measured voltage battery positive voltage?**

**YES :** Replace the CAN box unit.

**NO :** Go to Step 8.

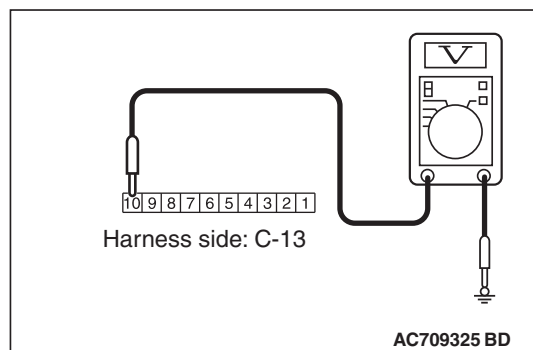**STEP 8. Voltage measurement at C-309 ETACS-ECU connector. Check the battery power supply circuit to the ETACS-ECU. Measure the voltage at ETACS-ECU connector C-309.**

- (1) Disconnect the connector, and measure at the wiring harness-side connector.
- (2) Measure the voltage between C-309 ETACS-ECU connector terminal 2 and ground.

**OK: Battery positive voltage.**

**Q: Is the measured voltage battery positive voltage?**

**YES :** Go to Step 9.

**NO :** Go to Step 11.

---

**STEP 9. Check ETACS-ECU connector C-315 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-315 in good condition?**

**YES :** Go to Step 10.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 10. Check the wiring harness between CAN box unit connectors C-13 (terminal 10) and ETACS-ECU connector C-315 (terminal 9).**

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the power supply lines (battery power supply) for open circuit and short circuit.

**Q: Is the wiring harness between CAN box unit connectors C-13 (terminal 10) and ETACS-ECU connector C-315 (terminal 9) in good condition?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 11. Check ETACS-ECU connector C-309 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is ETACS-ECU connector C-309 in good condition?**

**YES :** Go to Step 12.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 12. Check the wiring harness between ETACS-ECU connector C-309 (terminal 2) and fusible link (37).**

- Check the power supply lines (battery power supply) for open circuit and short circuit.

**Q: Is the check result normal?**

**YES :** Replace the ETACS-ECU.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**ETACS CUSTOMIZATION FUNCTION**

M1546023000497

The following ETACS functions can be customized by selecting "Equipment" on the "Settings" screen of the multivision display.

Group name	Setting item	Setting value
Keyless Entry System	Turn Signal Lights Answerback	Lock:Once Unlock:Twice (initial condition)
		Lock:Once Unlock:Off
		Lock:Off Unlock:Twice
		Lock:Twice Unlock:Once
		Lock:Off Unlock:Once
		Lock:Twice Unlock:Off
		Lock:Off Unlock:Off
	Horn Answerback Sounds at Keyless Entry Lock <vehicles without auto light>	Off
		One Button Push
		Two Button Pushes (initial condition)
	Horn Answerback Sounds at Keyless Entry Lock <vehicles with auto light>	Off
		One Button Push
		One Button Push at Daytime
		Two Button Pushes (initial condition)
	Duration of Horn Answerback Sounds	Short (initial condition)
		Long

Group name	Setting item	Setting value
Keyless Operation System	Turn Signal Lights Answerback	Lock:Once Unlock:Twice (initial condition)
		Lock:Once Unlock:Off
		Lock:Off Unlock:Twice
		Lock:Twice Unlock:Once
		Lock:Off Unlock:Once
		Lock:Twice Unlock:Off
		Lock:Off Unlock:Off
	Horn Answerback Sounds at Keyless Entry Lock <vehicles without auto light>	Off
		One Button Push
		Two Button Pushes (initial condition)
	Horn Answerback Sounds at Keyless Entry Lock <vehicles with auto light>	Off
		One Button Push
		One Button Push at Daytime
		Two Button Pushes (initial condition)
	Duration of Horn Answerback Sounds	Short (initial condition)
		Long
	Door Entry and Engine Start Function	Both Function On (initial condition)
		Door Entry Function On
		Engine Start Function On
		Both Function Off
	Keyless Operation Answerback Beep Sounds	Off
		Sound at Keyless Operation (initial condition)
		Sound at Keyless Entry
		Sound at both Keyless Entry and Keyless Operation
	Keyless Operation Auto Lock when Leaving	On
		Off (initial condition)
	Time for Remote Unlock Inactivation after Locking	Off
		3 seconds (initial condition)
		5 seconds

Group name	Setting item	Setting value
Keyless Operation System	Turn Signal Lights Answerback	Lock:Once Unlock:Twice (initial condition)
		Lock:Once Unlock:Off
		Lock:Off Unlock:Twice
		Lock:Twice Unlock:Once
		Lock:Off Unlock:Once
		Lock:Twice Unlock:Off
		Lock:Off Unlock:Off
	Horn Answerback Sounds at Keyless Entry Lock <vehicles without auto light>	Off
		One Button Push
		Two Button Pushes (initial condition)
	Horn Answerback Sounds at Keyless Entry Lock <vehicles with auto light>	Off
		One Button Push
		One Button Push at Daytime
		Two Button Pushes (initial condition)
	Duration of Horn Answerback Sounds	Short (initial condition)
		Long
	Door Entry and Engine Start Function	Both Function On (initial condition)
		Door Entry Function On
		Engine Start Function On
		Both Function Off
	Keyless Operation Answerback Beep Sounds	Off
		Sound at Keyless Operation (initial condition)
		Sound at Keyless Entry
		Sound at both Keyless Entry and Keyless Operation
	Keyless Operation Auto Lock when Leaving	On
		Off (initial condition)
	Time for Remote Unlock Inactivation after Locking	Off
		3 seconds (initial condition)
		5 seconds

Group name	Setting item	Setting value
Wipers	Windshield Wipers Intermittent Operation <Vehicles without auto light >	4 seconds
		Variable
		Variable & Speed Sensitive (initial condition)
	Windshield Wipers Intermittent Operation <Vehicles with auto light >	4 seconds
		Variable
		Variable & Speed Sensitive
		Variable & Rain Sensitive (initial condition)
	Wipers Linked to Washer	Off
		On (initial condition)
	Rear Wiper Intermittent Interval	0 seconds
		4 seconds
		8 seconds (initial condition)
		16 seconds
	Rear Wiper Continuous Operation	Off (initial condition)
		On
Exterior Lights/Interior Lights	Headlight Auto-cutout Function	Off
		On (initial condition)
	Interior Light Auto-cutout Time	Off
		3 minutes
		30 minutes (initial condition)
		60 minutes
	Duration Dome Light Remains In after Door is Closed	0 seconds
		7.5 seconds
		15 seconds
		30 seconds (initial condition)
		60 seconds
		120 seconds
		180 seconds
	Sensitivity for Auto Light <Vehicles with theft-alarm sensor>	Early
		Somewhat Early
		Normal (initial condition)
		Somewhat Late
		Late
Theft Alarm	Panic Alarm	Off
		On (initial condition)
Turn Signal	Operation in Key Position	Ignition Switch On or Accessory
		Ignition Switch On (initial condition)
	Lane-change Signals (Flash Three Times with 1 Touch)	Off
		On (initial condition)

Group name	Setting item	Setting value
Keyless Operation System	Turn Signal Lights Answerback	Lock:Once Unlock:Twice (initial condition)
		Lock:Once Unlock:Off
		Lock:Off Unlock:Twice
		Lock:Twice Unlock:Once
		Lock:Off Unlock:Once
		Lock:Twice Unlock:Off
		Lock:Off Unlock:Off
	Horn Answerback Sounds at Keyless Entry Lock <vehicles without auto light>	Off
		One Button Push
		Two Button Pushes (initial condition)
	Horn Answerback Sounds at Keyless Entry Lock <vehicles with auto light>	Off
		One Button Push
		One Button Push at Daytime
		Two Button Pushes (initial condition)
	Duration of Horn Answerback Sounds	Short (initial condition)
		Long
	Door Entry and Engine Start Function	Both Function On (initial condition)
		Door Entry Function On
		Engine Start Function On
		Both Function Off
	Keyless Operation Answerback Beep Sounds	Off
		Sound at Keyless Operation (initial condition)
		Sound at Keyless Entry
		Sound at both Keyless Entry and Keyless Operation
	Keyless Operation Auto Lock when Leaving	On
		Off (initial condition)
	Time for Remote Unlock Inactivation after Locking	Off
		3 seconds (initial condition)
		5 seconds

Group name	Setting item	Setting value
Wipers	Windshield Wipers Intermittent Operation <Vehicles without auto light >	4 seconds
		Variable
		Variable & Speed Sensitive (initial condition)
	Windshield Wipers Intermittent Operation <Vehicles with auto light >	4 seconds
		Variable
		Variable & Speed Sensitive
		Variable & Rain Sensitive (initial condition)
	Wipers Linked to Washer	Off
		On (initial condition)
	Rear Wiper Intermittent Interval	0 seconds
		4 seconds
		8 seconds (initial condition)
		16 seconds
	Rear Wiper Continuous Operation	Off (initial condition)
		On
Exterior Lights/Interior Lights	Headlight Auto-cutout Function	Off
		On (initial condition)
	Interior Light Auto-cutout Time	Off
		3 minutes
		30 minutes (initial condition)
		60 minutes
	Duration Dome Light Remains In after Door is Closed	0 seconds
		7.5 seconds
		15 seconds
		30 seconds (initial condition)
		60 seconds
		120 seconds
		180 seconds
	Sensitivity for Auto Light <Vehicles with theft-alarm sensor>	Early
		Somewhat Early
		Normal (initial condition)
		Somewhat Late
		Late
Theft Alarm	Panic Alarm	Off
		On (initial condition)
Turn Signal	Operation in Key Position	Ignition Switch On or Accessory
		Ignition Switch On (initial condition)
	Lane-change Signals (Flash Three Times with 1 Touch)	Off
		On (initial condition)

Group name	Setting item	Setting value
Keyless Operation System	Turn Signal Lights Answerback	Lock:Once Unlock:Twice (initial condition)
		Lock:Once Unlock:Off
		Lock:Off Unlock:Twice
		Lock:Twice Unlock:Once
		Lock:Off Unlock:Once
		Lock:Twice Unlock:Off
		Lock:Off Unlock:Off
	Horn Answerback Sounds at Keyless Entry Lock <vehicles without auto light>	Off
		One Button Push
		Two Button Pushes (initial condition)
	Horn Answerback Sounds at Keyless Entry Lock <vehicles with auto light>	Off
		One Button Push
		One Button Push at Daytime
		Two Button Pushes (initial condition)
	Duration of Horn Answerback Sounds	Short (initial condition)
		Long
	Door Entry and Engine Start Function	Both Function On (initial condition)
		Door Entry Function On
		Engine Start Function On
		Both Function Off
	Keyless Operation Answerback Beep Sounds	Off
		Sound at Keyless Operation (initial condition)
		Sound at Keyless Entry
		Sound at both Keyless Entry and Keyless Operation
	Keyless Operation Auto Lock when Leaving	On
		Off (initial condition)
	Time for Remote Unlock Inactivation after Locking	Off
		3 seconds (initial condition)
		5 seconds

Group name	Setting item	Setting value
Wipers	Windshield Wipers Intermittent Operation <Vehicles without auto light >	4 seconds
		Variable
		Variable & Speed Sensitive (initial condition)
	Windshield Wipers Intermittent Operation <Vehicles with auto light >	4 seconds
		Variable
		Variable & Speed Sensitive
		Variable & Rain Sensitive (initial condition)
	Wipers Linked to Washer	Off
		On (initial condition)
	Rear Wiper Intermittent Interval	0 seconds
		4 seconds
		8 seconds (initial condition)
		16 seconds
	Rear Wiper Continuous Operation	Off (initial condition)
		On
Exterior Lights/Interior Lights	Headlight Auto-cutout Function	Off
		On (initial condition)
	Interior Light Auto-cutout Time	Off
		3 minutes
		30 minutes (initial condition)
		60 minutes
	Duration Dome Light Remains In after Door is Closed	0 seconds
		7.5 seconds
		15 seconds
		30 seconds (initial condition)
		60 seconds
		120 seconds
		180 seconds
	Sensitivity for Auto Light <Vehicles with theft-alarm sensor>	Early
		Somewhat Early
		Normal (initial condition)
		Somewhat Late
		Late
Theft Alarm	Panic Alarm	Off
		On (initial condition)
Turn Signal	Operation in Key Position	Ignition Switch On or Accessory
		Ignition Switch On (initial condition)
	Lane-change Signals (Flash Three Times with 1 Touch)	Off
		On (initial condition)

Group name	Setting item	Setting value
Keyless Operation System	Turn Signal Lights Answerback	Lock:Once Unlock:Twice (initial condition)
		Lock:Once Unlock:Off
		Lock:Off Unlock:Twice
		Lock:Twice Unlock:Once
		Lock:Off Unlock:Once
		Lock:Twice Unlock:Off
		Lock:Off Unlock:Off
	Horn Answerback Sounds at Keyless Entry Lock <vehicles without auto light>	Off
		One Button Push
		Two Button Pushes (initial condition)
	Horn Answerback Sounds at Keyless Entry Lock <vehicles with auto light>	Off
		One Button Push
		One Button Push at Daytime
		Two Button Pushes (initial condition)
	Duration of Horn Answerback Sounds	Short (initial condition)
		Long
	Door Entry and Engine Start Function	Both Function On (initial condition)
		Door Entry Function On
		Engine Start Function On
		Both Function Off
	Keyless Operation Answerback Beep Sounds	Off
		Sound at Keyless Operation (initial condition)
		Sound at Keyless Entry
		Sound at both Keyless Entry and Keyless Operation
	Keyless Operation Auto Lock when Leaving	On
		Off (initial condition)
	Time for Remote Unlock Inactivation after Locking	Off
		3 seconds (initial condition)
		5 seconds

Group name	Setting item	Setting value
Wipers	Windshield Wipers Intermittent Operation <Vehicles without auto light >	4 seconds
		Variable
		Variable & Speed Sensitive (initial condition)
	Windshield Wipers Intermittent Operation <Vehicles with auto light >	4 seconds
		Variable
		Variable & Speed Sensitive
		Variable & Rain Sensitive (initial condition)
	Wipers Linked to Washer	Off
		On (initial condition)
	Rear Wiper Intermittent Interval	0 seconds
		4 seconds
		8 seconds (initial condition)
		16 seconds
	Rear Wiper Continuous Operation	Off (initial condition)
		On
Exterior Lights/Interior Lights	Headlight Auto-cutout Function	Off
		On (initial condition)
	Interior Light Auto-cutout Time	Off
		3 minutes
		30 minutes (initial condition)
		60 minutes
	Duration Dome Light Remains In after Door is Closed	0 seconds
		7.5 seconds
		15 seconds
		30 seconds (initial condition)
		60 seconds
		120 seconds
		180 seconds
	Sensitivity for Auto Light <Vehicles with theft-alarm sensor>	Early
		Somewhat Early
		Normal (initial condition)
		Somewhat Late
		Late
Theft Alarm	Panic Alarm	Off
		On (initial condition)
Turn Signal	Operation in Key Position	Ignition Switch On or Accessory
		Ignition Switch On (initial condition)
	Lane-change Signals (Flash Three Times with 1 Touch)	Off
		On (initial condition)

Group name	Setting item	Setting value
Power Door Locks	Automatic Relocking after Unlocked by Remote	30 seconds (initial condition)
		60 seconds
		120 seconds
		180 seconds
	Unlock Operation	All Doors
		Only Driver Door (initial condition)
Others	Automatic Unlock when Transmission Shifted to Park	Off (initial condition)
		On
		Auto Cut of ACC Power
		No Auto Cut
		Auto Cut after 30 minutes (initial condition)
		Auto Cut after 60 minutes


**NOTE:**

- If the setting of "Wipers Linked to Washer" is changed, it cannot be reset to the initial value by the multivision display.



- Some items (e.g. "Coming home light", "Welcome light") cannot be set by the multivision display. (Refer to [P.54A-836.](#))

**REMOVAL AND INSTALLATION**

M1546001000596

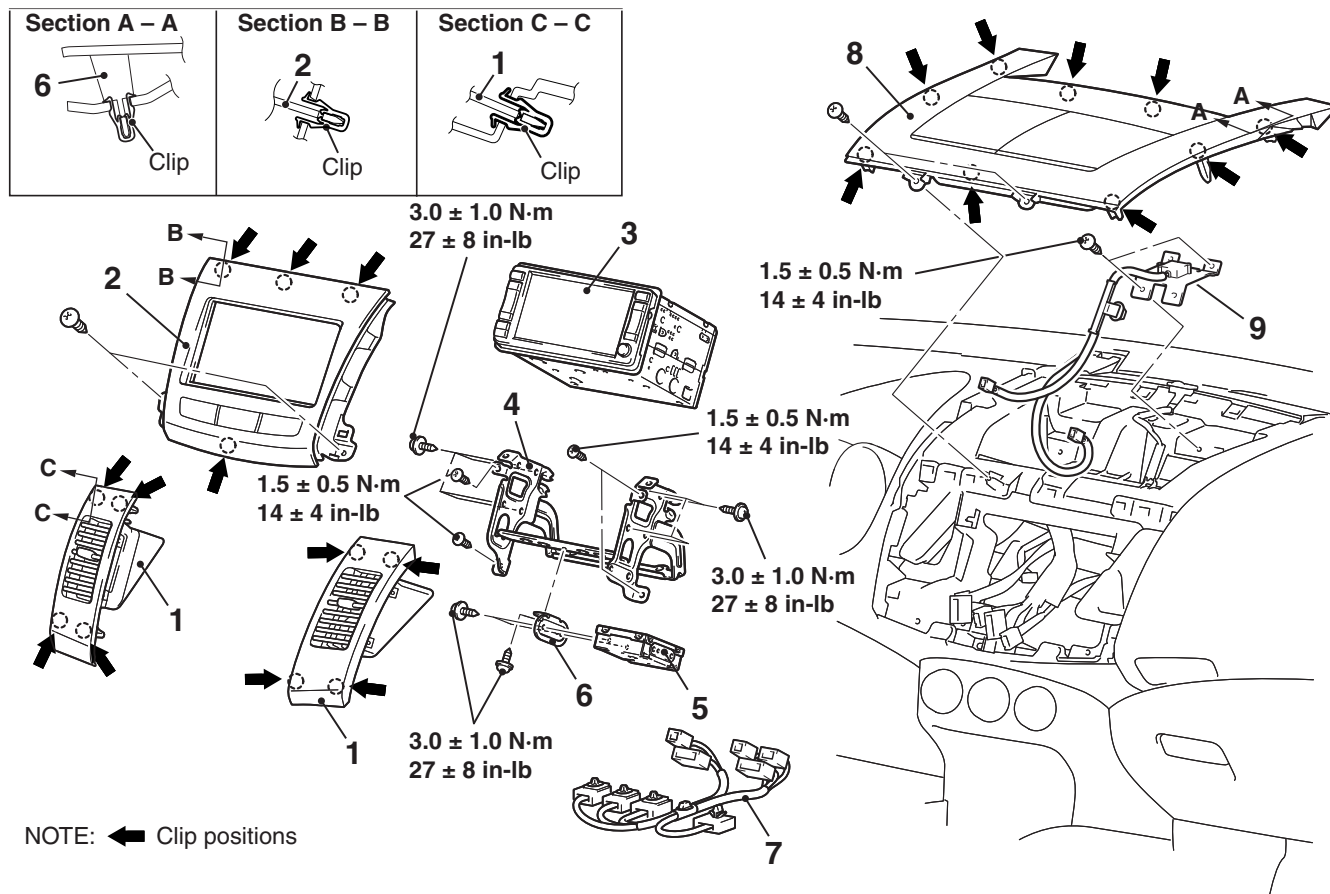

AC703775AB

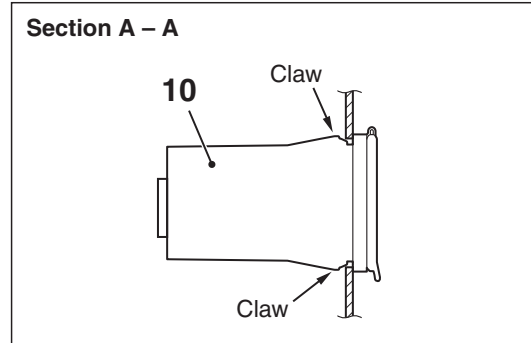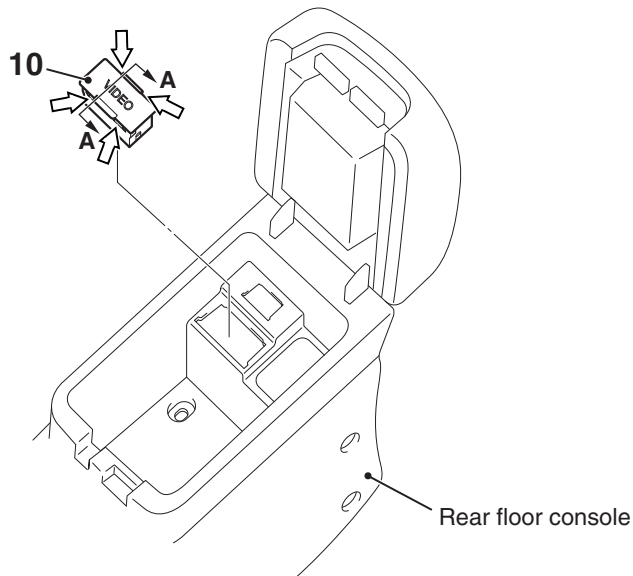

NOTE  
← :Claw positions  
AC900455AF

#### Multivision Display Removal Steps

1. Center outlet
2. Center panel assembly
3. Multivision display
4. Multivision display bracket
5. CAN box unit
6. CAN box unit bracket
7. Navigation harness

#### GPS Antenna Removal Steps

1. Center outlet
2. Center panel assembly
8. Center upper box
9. GPS antenna

#### Audio And Video Adaptor Removal Steps


- Rear floor console assembly (Refer to GROUP 52A –Rear Floor Console Assembly [P.52A-8.](#))
- 10. Audio and video adaptor

## INSPECTION

### AUDIO AND VIDEO ADAPTER CHECK

M1546023200048


1. Remove the audio and video adapter.(Refer to [P.54A-568.](#))
2. Check that continuity exists between the terminal and the pin jack of audio and video adapter.

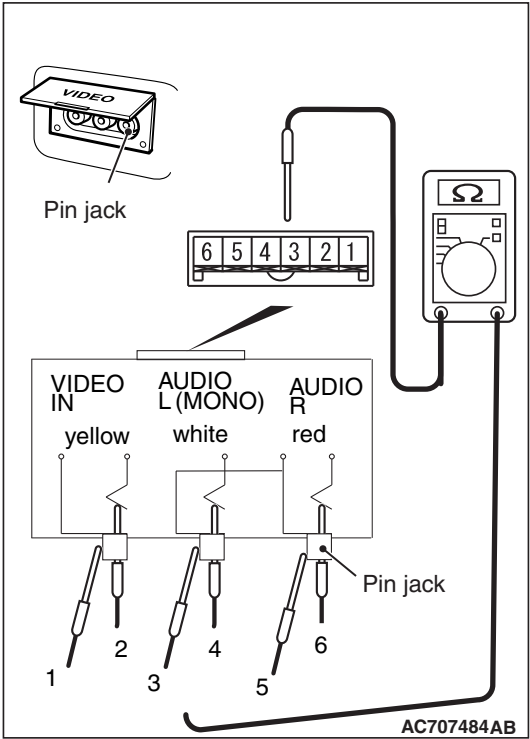

The connecting position of pin jack side circuit tester	Terminal number	Measurement value
1	2	Continuity exists. (2 $\Omega$ or less)
2	1	
3	5	
4	4	
5	5	
6	6	

## STEERING WHEEL AUDIO REMOTE CONTROL SWITCH








### GENERAL INFORMATION

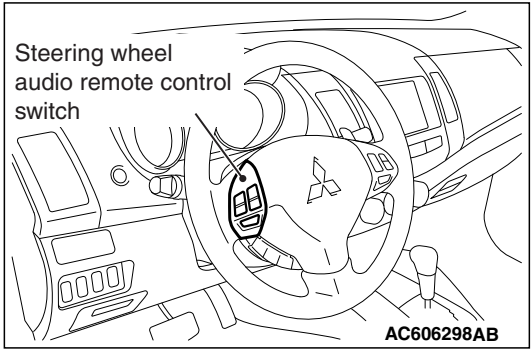
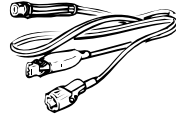
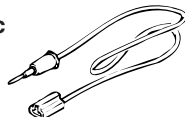



M1544000100657  
The concentrated switch has been established onto the steering wheel spoke for allowing the remote control of audio.

**SPECIAL TOOLS**

M1544000600715

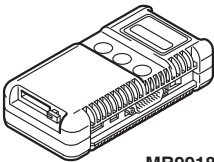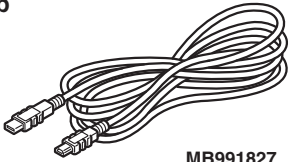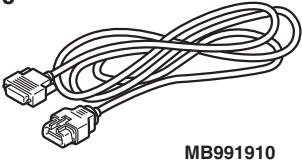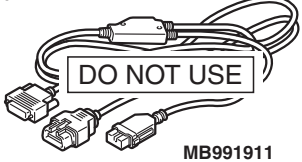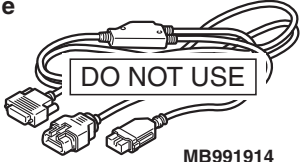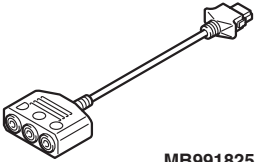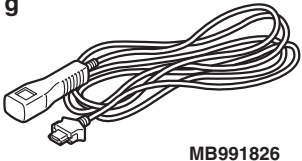Tool	Tool number and name	Supersession	Application
<p>a</p>  <p style="text-align: center;">MB991824</p> <p>b</p>  <p style="text-align: center;">MB991827</p> <p>c</p>  <p style="text-align: center;">MB991910</p> <p>d</p>  <p style="text-align: center;">MB991911</p> <p>e</p>  <p style="text-align: center;">MB991914</p> <p>f</p>  <p style="text-align: center;">MB991825</p> <p>g</p>  <p style="text-align: center;">MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler models only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b></p> <p><b>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</b></p> <p>CAN bus diagnostics or service data check.</p>

Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>b</p>  <p>c</p>  <p>d</p> 	<p>MB991223</p> <p>a. MB991219</p> <p>b. MB991220</p> <p>c. MB991221</p> <p>d. MB991222</p> <p>Harness set</p> <p>a. Test harness</p> <p>b. LED harness</p> <p>c. LED harness adaptor</p> <p>d. Probe</p>	General service tools	<p>Continuity check and voltage measurement at harness wire or connector for loose, corroded or damaged terminals, or terminals pushed back in the connector.</p> <p>a. Connector pin contact pressure inspection</p> <p>b. Power circuit inspection</p> <p>c. Power circuit inspection</p> <p>d. Commercial tester connection</p>

## DIAGNOSIS

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00 –Troubleshooting contents [P.00-7](#). M1544004800647

### TROUBLE SYMPTOM CHART

M1544004901078

Trouble symptom		Inspection Procedure No.	Reference page
Steering remote control switch does not function.	<Vehicles with radio and CD changer>	1	<a href="#">P.54A-573</a>
	<Vehicles with MMCS>	2	<a href="#">P.54A-577</a>
The illumination of the steering remote control switch does not come on.		3	<a href="#">P.54A-581</a>


## SYMPTOM PROCEDURES

Inspection Procedure 1: steering wheel audio remote control switch does not function. <vehicles without MMCS>

### CAUTION


Before replacing the radio and CD player or steering wheel audio remote control switch , ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

Steering Audio Switch Circuit

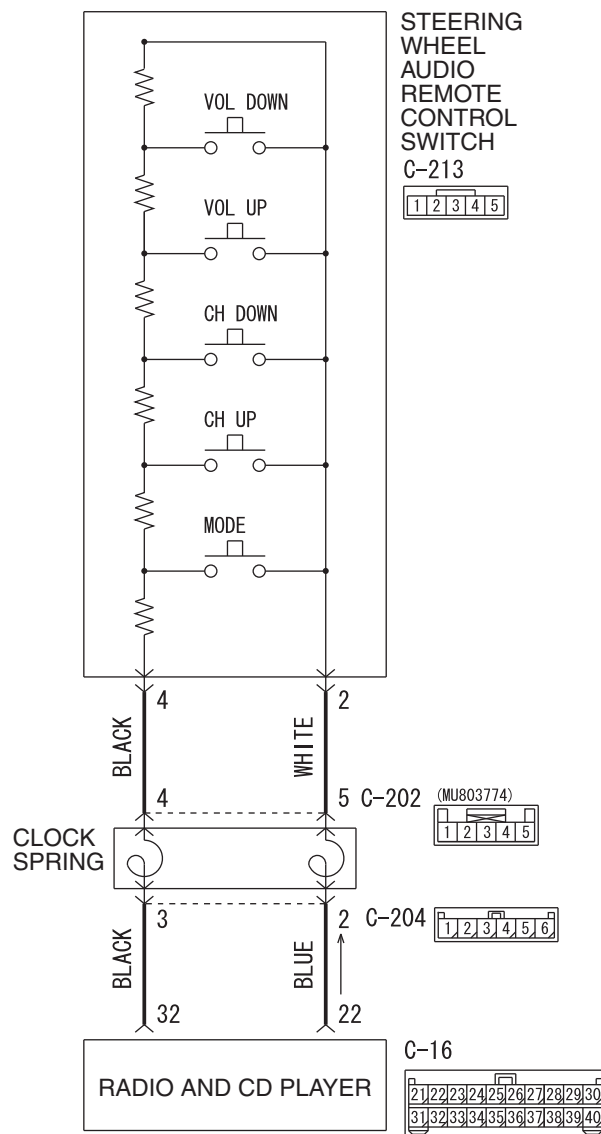


W9G54M023A

Connector: C-16

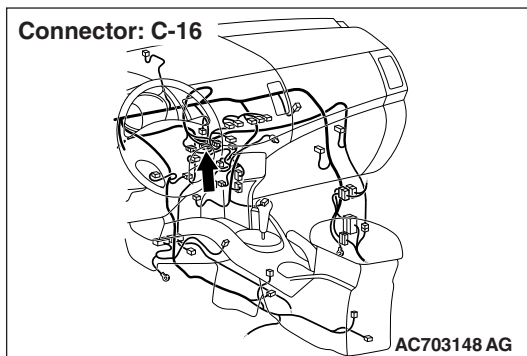

Connectors: C-202, C-204, C-213

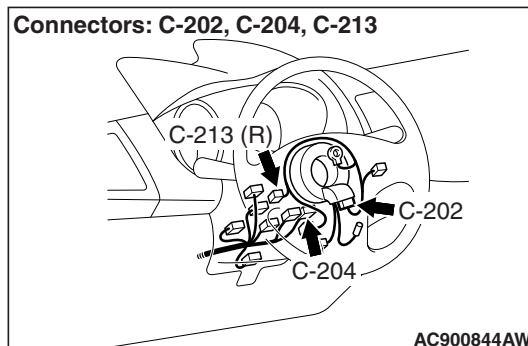**TECHNICAL DESCRIPTION (COMMENT)**

The power supply circuit to the steering wheel audio remote control switch, the steering wheel audio remote control switch, the radio and CD player, or the clock spring may be defective.

**TROUBLESHOOTING HINTS**

- Malfunction of steering wheel audio remote control switch
- Malfunctions of radio and CD player
- Malfunction of the clock spring
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicle Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A

**STEP 1. Using scan tool MB991958, check data list.**

Check whether the service data below are normal.

- (1) Turn the ignition switch to "ON" position.
- (2) Operate each switch of the steering wheel audio remote control. Check whether the normal conditions listed below are displayed. (Refer to [P.54A-431.](#))



Item No.	Item name	Normal condition
Item 1	RADIO remote SW (SEEK-)	ON
Item 2	RADIO remote SW (SEEK+)	ON
Item 3	RADIO remote SW (MODE)	ON
Item 4	RADIO remote SW (VOL-)	ON
Item 5	RADIO remote SW (VOL+)	ON

**OK: Normal condition is displayed.**

**Q: Is the check result normal?**

**YES :** Replace the radio and CD player.

**NO :** Go to Step 2.

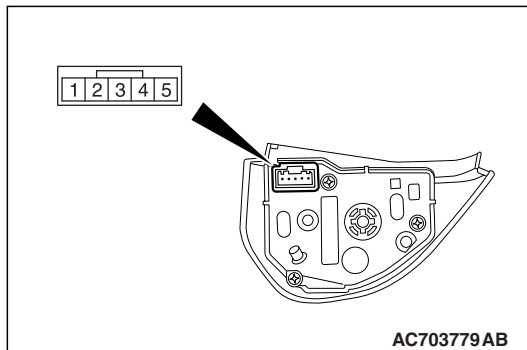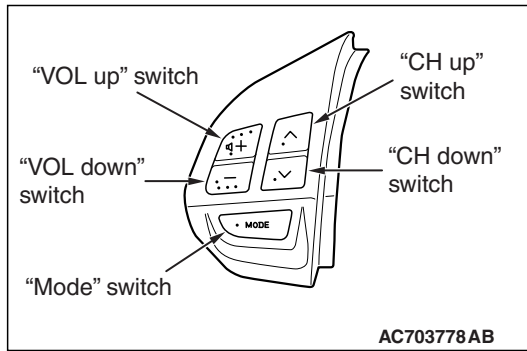

**STEP 2. Check the remote controlled radio switch.**

Remove the remote controlled radio switch. Then check continuity between the steering wheel audio remote control switch terminals.

Switch Position	Tester Connection	Measurement Value
No push	2 -4	Approximately 71 kΩ
Mode		Approximately 270 Ω
CH up		Approximately 740 Ω
CH down		Approximately 1.3 kΩ
VOL up		Approximately 2.1 kΩ
VOL down		Approximately 3.1 kΩ

**Q: Is the remote controlled radio switch in good condition?**

**YES :** Go to Step 3.

**NO :** Replace the steering wheel audio remote control switch.

**STEP 3. Check clock spring connector C-202 and C-204 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are clock spring connector C-202 and C-204 in good condition?**

**YES :** Go to Step 4.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

**STEP 4. Check the clock spring.**

Check whether the clock spring is in good condition. Refer to GROUP 52B, Air bag module and clock spring [P.52B-451](#).

**Q: Is the check result normal?**

**YES :** Go to Step 5.

**NO :** Replace the clock spring.

**STEP 5. Check radio and CD player connector C-16 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is radio and CD player connector C-16 in good condition?**

**YES :** Go to Step 6.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 6. Check the wiring harness between radio and CD player connector C-16 (terminal 22, 32) and clock spring connector C-204 (terminal 2, 3).**

- Check the communication lines for open and short circuit.

**Q: Is the wiring harness between radio and CD player connector C-16 (terminal 22, 32) and clock spring connector C-204 (terminal 2, 3) in good condition?**

**YES :** Go to Step 7.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Check steering wheel audio remote control switch connector C-213 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is steering wheel audio remote control switch connector C-213 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering wheel audio remote control switch should work normally.

---

**STEP 8. Check the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 2, 4) and clock spring connector C-202 (terminal 5, 4).**

- Check the communication lines for open and short circuit.

**Q: Is the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 2, 4) and clock spring connector C-202 (terminal 5, 4) in good condition?**

**YES :** Go to Step 9.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 9. Retest the system**

Check whether you can operate the radio and CD player by using the steering wheel audio remote control switch.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the radio and CD player.



Inspection Procedure 2: steering wheel audio remote control switch does not function. <vehicles with MMCS>

**CAUTION**

Before replacing the multivision display or steering wheel audio remote control switch, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

Steering Audio Switch Circuit

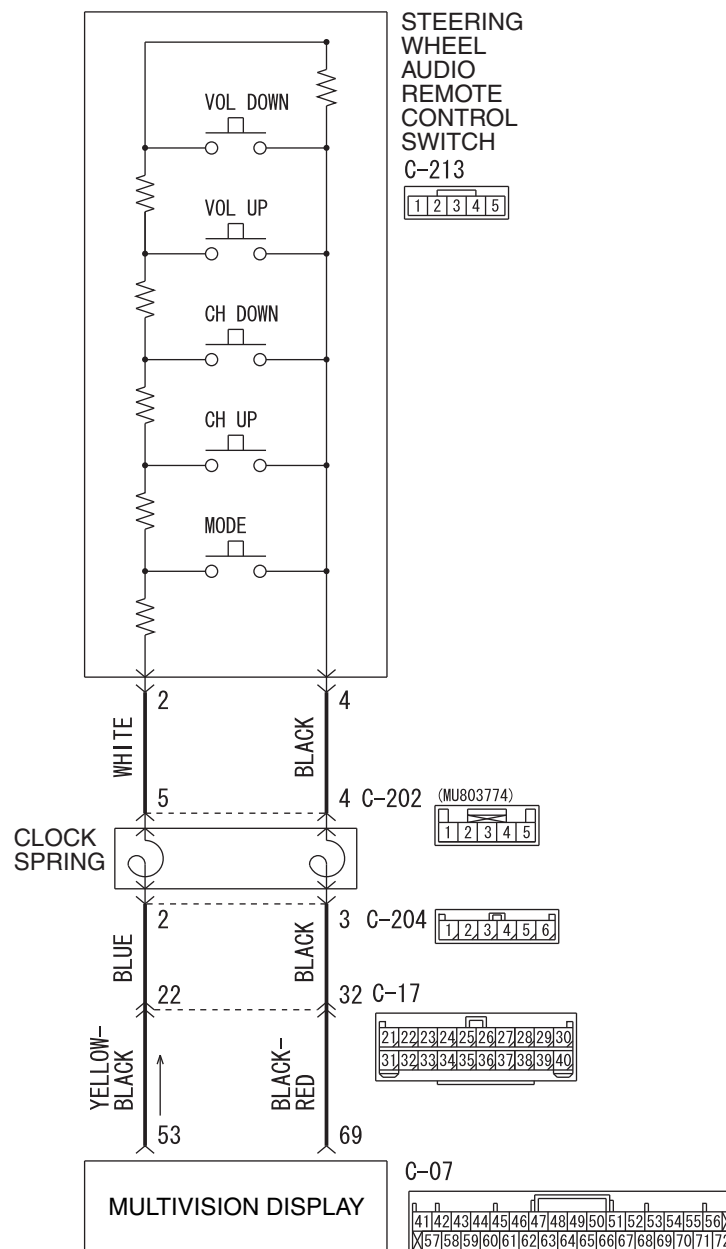

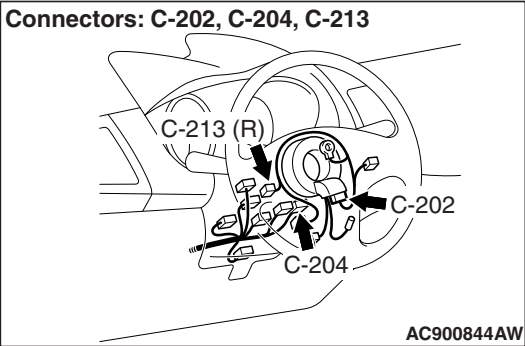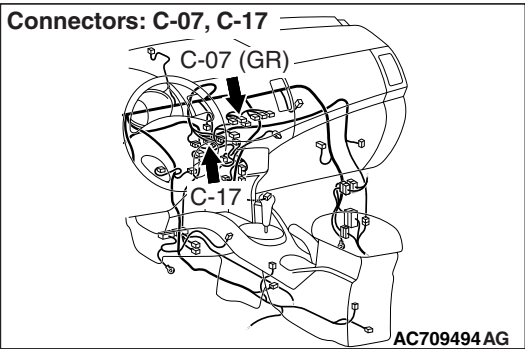

**TECHNICAL DESCRIPTION (COMMENT)**

The power supply circuit to the steering wheel audio remote control switch, the multivision display, or the clock spring may be defective.

**TROUBLESHOOTING HINTS**

- Malfunction of steering wheel audio remote control switch
- Malfunctions of multivision display
- Malfunction of the clock spring
- Damaged harness wires and connectors

**DIAGNOSIS**

**Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

**STEP 1. Check the remote controlled radio switch.**



Remove the remote controlled radio switch. Then check continuity between the switch terminals.

Switch Position	Tester Connection	Measurement Value
No push	2 -4	Approximately 71 kΩ
Mode		Approximately 270 Ω
CH up		Approximately 740 Ω
CH down		Approximately 1.3 kΩ
VOL up		Approximately 2.1 kΩ
VOL down		Approximately 3.1 kΩ

**Q: Is the remote controlled radio switch in good condition?**

**YES :** Go to Step 2.

**NO :** Replace the steering wheel audio remote control switch.

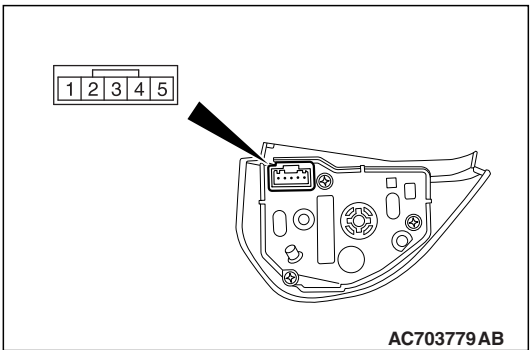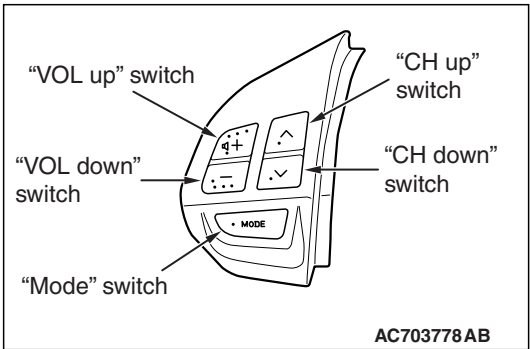

---

**STEP 2. Check clock spring connector C-202 and C-204 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are clock spring connector C-202 and C-204 in good condition?**

**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering wheel audio remote control switch should work normally.

---

**STEP 3. Check the clock spring.**

Check whether the clock spring is in good condition. Refer to GROUP 52B, Air bag module and clock spring [P.52B-451](#).

**Q: Is the check result normal?**

**YES :** Go to Step 4.

**NO :** Replace the clock spring.

---

**STEP 4. Check multivision display connector C-07 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is multivision display connector C-07 in good condition?**

**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering wheel audio remote control switch should work normally.

---

**STEP 5. Check the wiring harness between multivision display connector C-07 (terminal 53, 69) and clock spring connector C-204 (terminal 2, 3).**

*NOTE: Also check intermediate connector C-17 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-17 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

- Check the communication lines for open and short circuit.

**Q: Is the wiring harness between multivision display connector C-07 (terminal 53, 69) and clock spring connector C-204 (terminal 2, 3) in good condition?**

**YES :** Go to Step 6.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 6. Check steering wheel audio remote control switch connector C-213 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is steering wheel audio remote control switch connector C-213 in good condition?**

**YES :** Go to Step 7.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#). The steering wheel audio remote control switch should work normally.

---

**STEP 7. Check the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 2, 4) and clock spring connector C-202 (terminal 5, 4).**

- Check the communication lines for open and short circuit.

**Q: Is the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 2, 4) and clock spring connector C-202 (terminal 5, 4) in good condition?**

**YES :** Go to Step 8.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 8. Retest the system**

Check whether you can operate the multivision display by using the steering wheel audio remote control switch.

**Q: Is the check result normal?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the multivision display.

**Inspection Procedure 3:** The illumination of the steering wheel audio remote control switch does not come on.

**CAUTION**


Before replacing the radio and CD player or steering wheel audio remote control switch, ensure that the power supply circuit, the ground circuit and the communication circuit are normal.

Steering Audio Switch Illumination Circuit

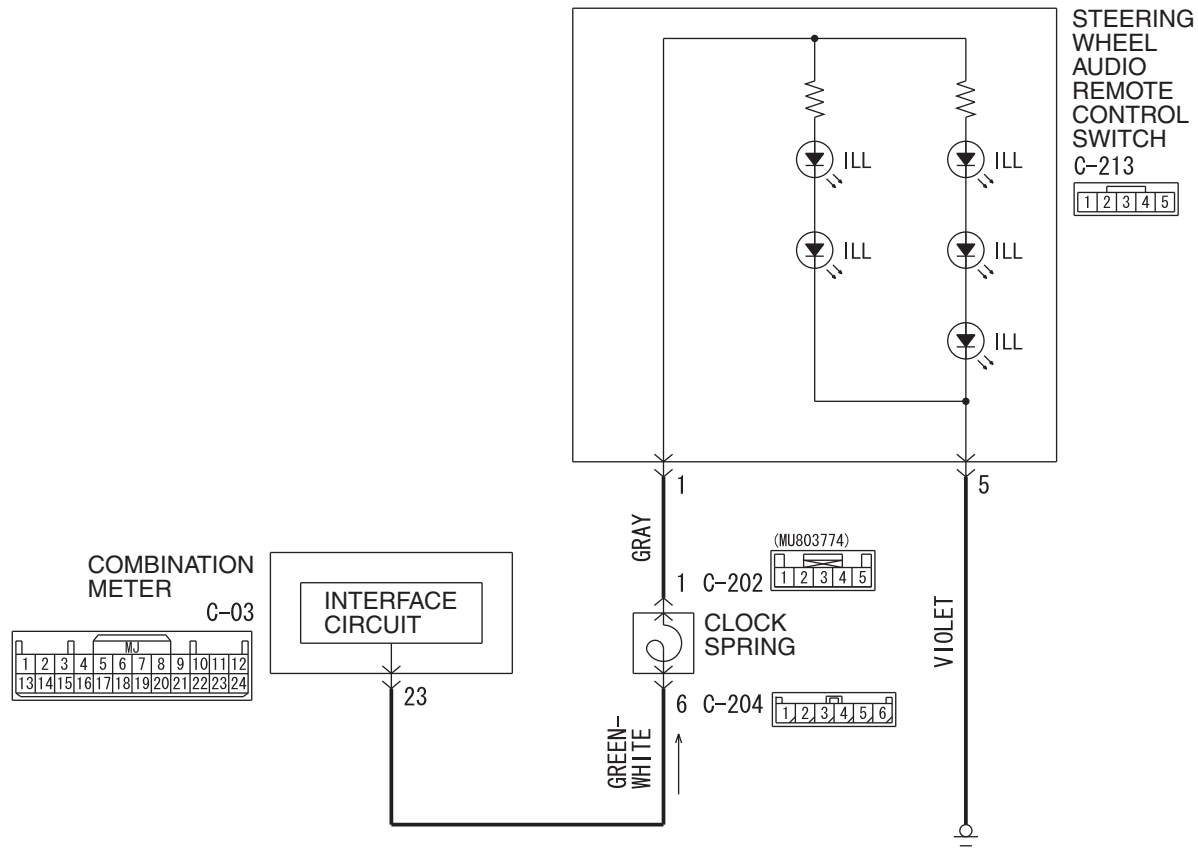


W9G54M025A

Connector: C-03

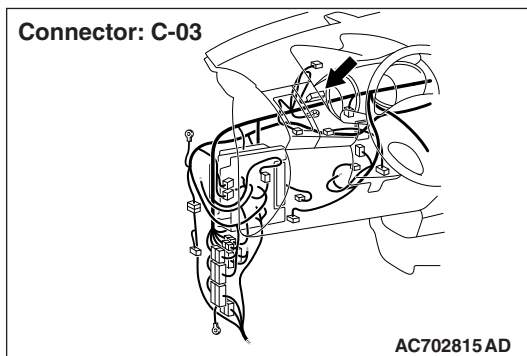

Connectors: C-202, C-204, C-213

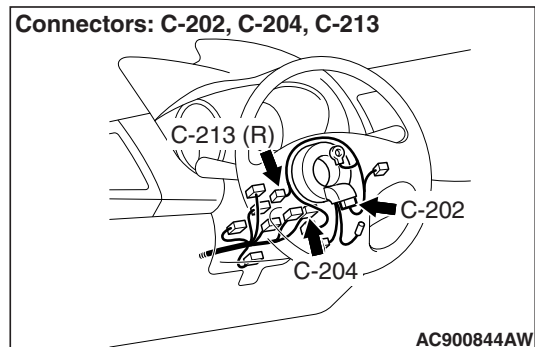

**TECHNICAL DESCRIPTION (COMMENT)**

The power supply circuit to the steering wheel audio remote control switch, the steering wheel audio remote control switch, the combination meter, or the clock spring may be defective.

**TROUBLESHOOTING HINTS**

- Malfunction of steering wheel audio remote control switch
- Malfunctions of combination meter
- Malfunction of the clock spring
- Damaged harness wires and connectors

**DIAGNOSIS****Required Special Tools:**

- MB991223: Harness Set
- MB992006: Extra Fine Probe

---

**STEP 1. Check the combination meter.**

Check whether the combination meter works normally.

**Q: Does the combination meter operate normally?**

**YES :** Go to Step 2.

**NO :** Diagnose the combination meter. (Refer to [P.54A-32.](#))

---

**STEP 2. Check steering wheel audio remote control switch connector C-213 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Is steering wheel audio remote control switch connector C-213 in good condition?**

**YES :** Go to Step 3.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2.](#)

---

**STEP 3. Check the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 5) and ground.**

- Check the ground wire for open circuit .

**Q: Is the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 5) and ground in good condition?**

**YES :** Go to Step 4.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 4. Check clock spring connectors C-202 and C-204 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Are clock spring connectors C-202 and C-204 in good condition?**

**YES :** Go to Step 5.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2.](#)

---

**STEP 5. Check the clock spring.**

Check whether the clock spring is in good condition (Refer to GROUP 52B, Air bag module and clock spring [P.52B-451](#)).

**Q: Is the check result normal?**

**YES :** Go to Step 6.

**NO :** Replace the clock spring.

---

**STEP 6. Check the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 1) and clock spring connector C-202 (terminal 1).**

- Check the power supply lines for open and short circuit.

**Q: Is the wiring harness between steering wheel audio remote control switch connector C-213 (terminal 1) and clock spring connector C-202 (terminal 1) in good condition?**

**YES :** Go to Step 7.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 7. Check combination meter connector C-03 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Is combination meter connector C-03 in good condition?**

**YES :** Go to Step 8.

**NO :** Repair or replace the damaged component(s). Refer to GROUP 00E, Harness Connector Inspection [P.00E-2](#).

---

**STEP 8. Check the wiring harness between combination meter connector C-03 (terminal 23) and clock spring connector C-204 (terminal 6).**

- Check the power supply lines for open and short circuit.

**Q: Is the wiring harness between combination meter connector C-03 (terminal 23) and clock spring connector C-204 (terminal 6) in good condition?**

**YES :** Go to Step 9.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

**STEP 9. Retest the system**

Check whether the illumination of the steering wheel audio remote control switch comes on normally.

**Q: Does the illumination of the steering wheel audio remote control switch come on normally?**

**YES :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).


**NO :** Replace the steering wheel audio remote control switch.

**REMOVAL AND INSTALLATION**

M1544015600238

**⚠ WARNING**

- Before removing the air bag module, refer to GROUP 52B, Service Precautions ([P.52B-24](#)) and Air Bag Module and Clock Spring ([P.52B-443](#)).
- When removing and installing the steering wheel, do not let it bump against the air bag module.

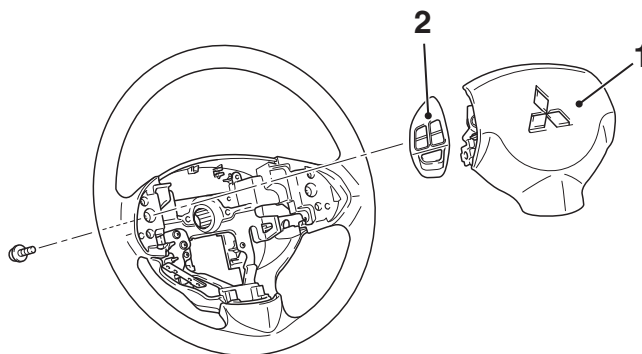

AC605239AC

**Removal Steps**



1. Air bag module (Refer to GROUP 52B, Air Bag Module and Clock Spring [P.52B-443](#).)
2. Steering wheel audio remote control switch

M1544015700332

STEERING WHEEL AUDIO REMOTE CONTROL  
SWITCH INSPECTION

STEERING WHEEL AUDIO REMOTE CONTROL  
SWITCH CHECK

Use an ohmmeter to measure the resistance value between the terminal.

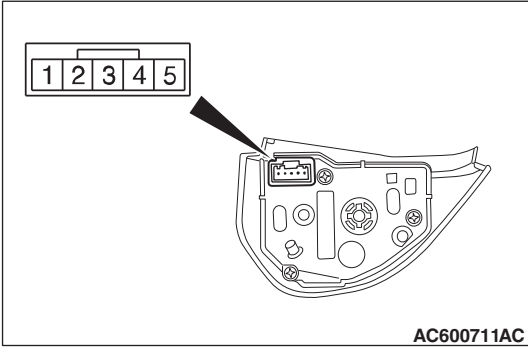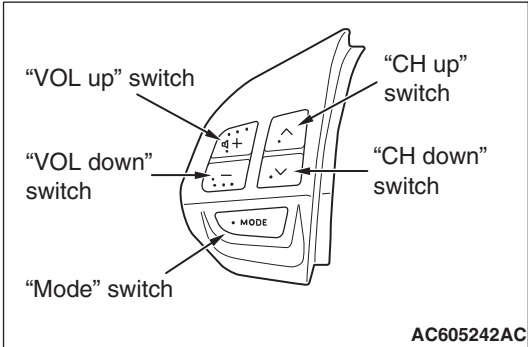


Switch Position	Tester Connection	Measurement Value
No push	2 - 3	Approximately 3.1 kΩ
	2 - 4	Approximately 71 kΩ
"Mode" switch		Approximately 270 Ω
"CH up" switch		Approximately 740 Ω
"CH down" switch		Approximately 1.3 kΩ
"VOL up" switch		Approximately 2.1 kΩ
"VOL down" switch		Approximately 3.1 kΩ

ILLUMINATION CHECK

Apply the battery voltage of steering wheel audio remote control switch connector terminal No. 1 and 5, and check if the steering wheel audio remote control switch illuminates.

*NOTE: Make sure that the polarity is correct.*

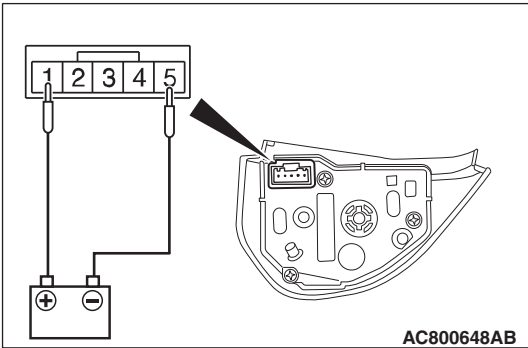

# HANDS FREE CELLULAR PHONE SYSTEM


## GENERAL INFORMATION

M1544401200086

With the hands-free cellular phone system <standard: 3.0L engine-High> by registering a cellular phone for Bluetooth®\* with voice recognition to the hands free module, the telephone function becomes available without operating the cellular phone directly. The hands-free cellular phone system can be used without connecting the cellular phone to the vehicle via wiring cable.

**NOTE:** \*: Bluetooth® is the short-distance digital wireless communication technology using 2.45 GHz frequency band. The communication effective area is within 10 m, and the feature is that the communication can be achieved even when an obstacle is present between the communicating devices.

## Construction diagram

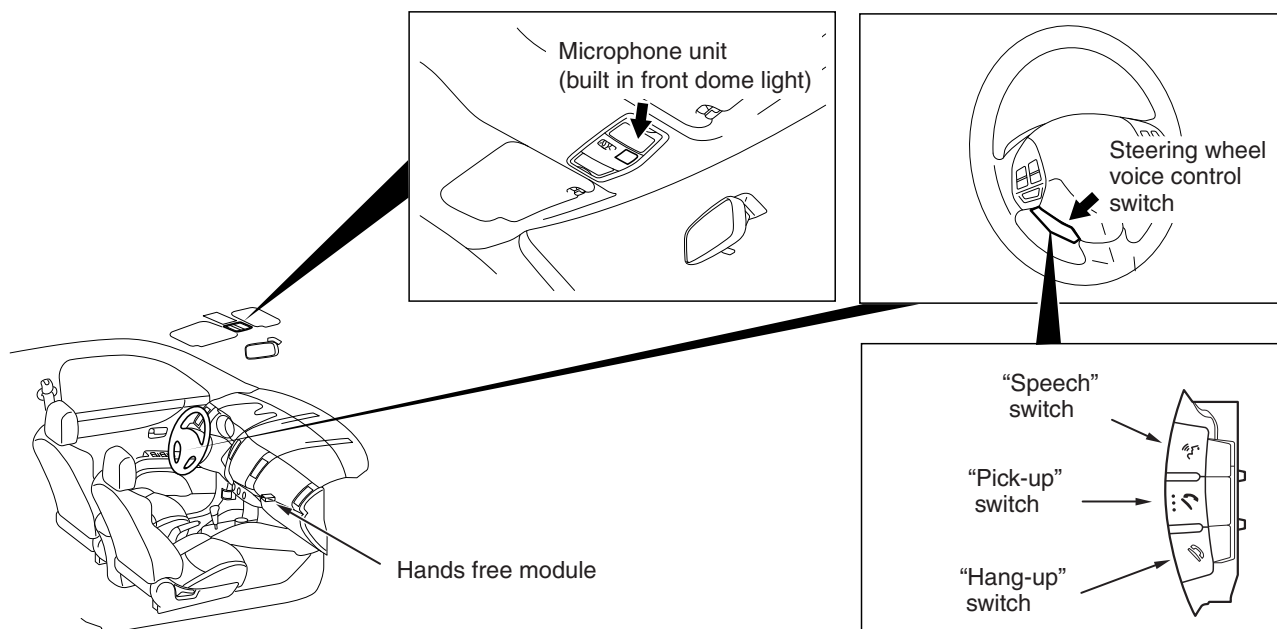

AC612040AE


When the registered cellular phone is inside the vehicle, the hands free cellular phone system operates as follows.

**NOTE:** The owner's manual contains details on pairing a cellular phone with the Bluetooth® system, speaker enrollment, and other functions.

- When the cellular phone receives a call, the occupant can start conversation by pressing "Pick-up" in the steering wheel voice control switches on the steering wheel. When the conversation ends, the occupant can finish the call by pressing "Hang-up" in the steering voice-control switches.
- To make a call, press "Speech" in the steering wheel voice control switches on the steering wheel, call up the registered receiver's information in the voice input mode, press "Pick-up". Then, the transmission starts to call the receiver. Also, when the conversation ends, the occupant can finish the call by pressing "Hang-up" in the steering wheel voice control switches.
- The communication directly via a cellular phone can be switched to the communication via a handsfree device. Also, the communication via a handsfree device can be switched to the communication directly via a cellular phone.
- The voice input mode corresponds to the following languages: English, American Spanish, Canadian French.

- The voice of occupant is picked up by the microphone unit incorporated in the front dome light, and then transmitted to the cellular phone via hands free module. Also, the receiver's voice is transmitted from the cellular phone to radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS> via hands free module, and then output from the vehicle-mounted speaker.
- Using the steering audio remote control switch, the volume can be adjusted.
- The reception state of the cellular phone is indicated on the display section of radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS>.








## System block diagram

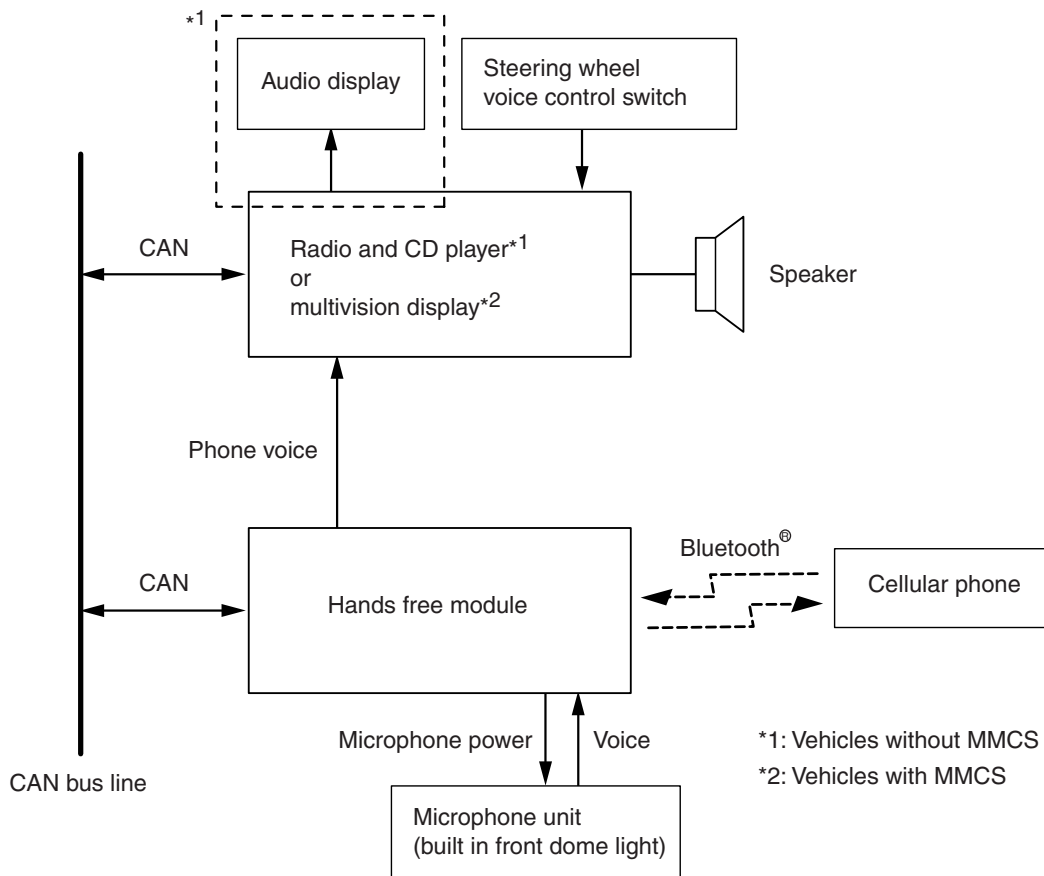
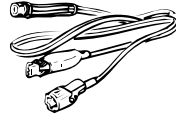
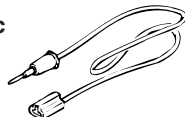

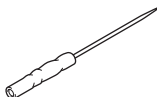


AC613221AS

## SPECIAL TOOLS

M1544403500102

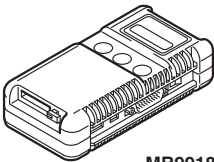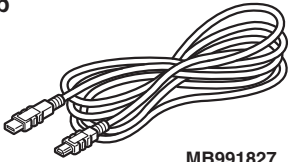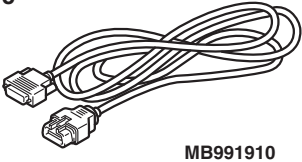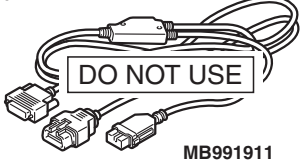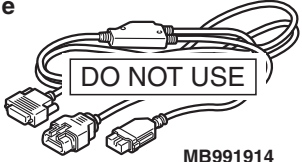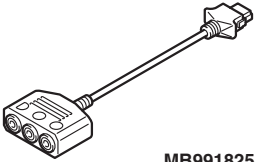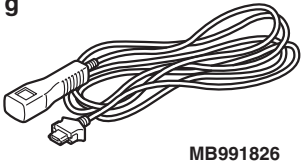Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>MB991824</p> <p>b</p>  <p>MB991827</p> <p>c</p>  <p>MB991910</p> <p>d</p>  <p>MB991911</p> <p>e</p>  <p>MB991914</p> <p>f</p>  <p>MB991825</p> <p>g</p>  <p>MB991826 MB991958</p>	<p>MB991958</p> <p>a. MB991824</p> <p>b. MB991827</p> <p>c. MB991910</p> <p>d. MB991911</p> <p>e. MB991914</p> <p>f. MB991825</p> <p>g. MB991826</p> <p>M.U.T.-III sub-assembly</p> <p>a. Vehicle communication interface (V.C.I.)</p> <p>b. M.U.T.-III USB cable</p> <p>c. M.U.T.-III main harness A (Vehicles with CAN communication system)</p> <p>d. M.U.T.-III main harness B (Vehicles without CAN communication system)</p> <p>e. M.U.T.-III main harness C (for Chrysler models only)</p> <p>f. M.U.T.-III measurement adapter</p> <p>g. M.U.T.-III trigger harness</p>	<p>MB991824-KIT</p> <p><i>NOTE: G: MB991826 M.U.T.-III Trigger Harness is not necessary when pushing V.C.I. ENTER key.</i></p>	<p><b>⚠ CAUTION</b></p> <p><b>M.U.T.-III main harness A (MB991910) should be used. M.U.T.-III main harness B and C should not be used for this vehicle.</b></p> <p>CAN bus diagnostics, diagnostic trouble code or data list check.</p>

Tool	Tool number and name	Supersession	Application
<p>a</p>  <p>b</p>  <p>c</p>  <p>d</p> 	<p>MB991223</p> <p>a. MB991219</p> <p>b. MB991220</p> <p>c. MB991221</p> <p>d. MB991222</p> <p>Harness set</p> <p>a. Check harness</p> <p>b. LED harness</p> <p>c. LED harness adapter</p> <p>d. Probe</p>	<p>General service tool (jumper)</p>	<p>Continuity check and voltage measurement at harness wire or connector</p> <p>a. For checking connector pin contact pressure</p> <p>b. For checking power supply circuit</p> <p>c. For checking power supply circuit</p> <p>d. For connecting a locally sourced tester</p>
 <p style="text-align: center;">MB992006</p>	<p>MB992006</p> <p>Extra fine probe</p>	<p>—</p>	<p>Continuity check and voltage measurement at harness wire or connector</p>

## DIAGNOSIS

### STANDARD FLOW OF DIAGNOSTIC TROUBLESHOOTING

Refer to GROUP 00, Troubleshooting contents

[P.00-7.](#)

M1540203800226


## DIAGNOSIS FUNCTION

M1544403100137

### HOW TO CONNECT THE SCAN TOOL (M.U.T.-III)

#### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

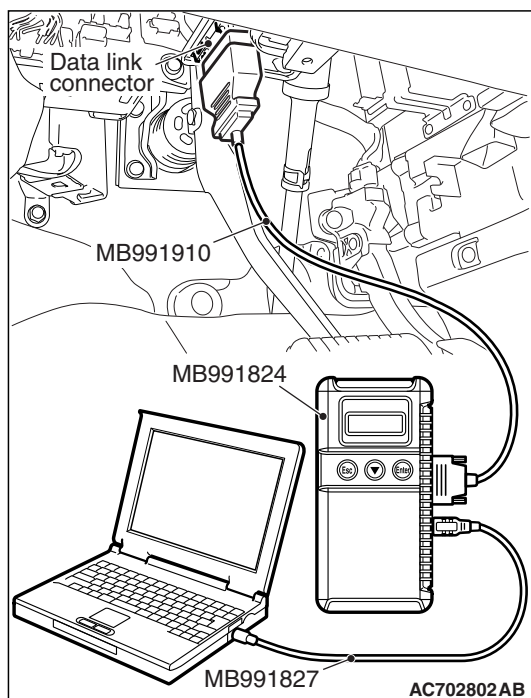**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

1. Ensure that the ignition switch is at the "LOCK" (OFF) position.
2. Start up the personal computer.
3. Connect special tool MB991827 to special tool MB991824 and the personal computer.
4. Connect special tool MB991910 to special tool MB991824.
5. Connect special tool MB991910 to the data link connector.
6. Turn the power switch of special tool MB991824 to the "ON" position.

*NOTE: When special tool MB991824 is energized, special tool MB991824 indicator light will be illuminated in a green color.*

7. Start the M.U.T.-III system on the personal computer.

*NOTE: Disconnecting scan tool MB991958 is the reverse of the connecting sequence, making sure that the ignition switch is at the "LOCK" (OFF) position.*

## HOW TO READ AND ERASE DIAGNOSTIC TROUBLE CODES

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

*NOTE: If the battery voltage is low, diagnostic trouble codes will not be set. Check the battery if scan tool MB991958 does not display.*

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "System select" from the start-up screen.
4. Select "From 2006 MY" of "Model Year." When the "Vehicle Information" is displayed, check the contents.
5. Select "Meter" from "System List," and press the "OK" button.

*NOTE: When the "Loading Option Setup" list is displayed, check the applicable item.*

6. Select "Diagnostic Trouble Code." to read the DTC.
7. If a DTC is set, it is shown.
8. Choose "Erase DTCs" to erase the DTC.

## HOW TO DIAGNOSE THE CAN BUS LINES

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

1. Connect scan tool MB991958 to the data link connector.
2. Turn the ignition switch to the "ON" position.
3. Select "CAN bus diagnosis" from the start-up screen.
4. When the vehicle information is displayed, confirm that it matches the vehicle being diagnosed.
  - If they match, go to Step 8.
  - If not, go to Step 5.
5. Select the "view vehicle information" button.
6. Enter the vehicle information and select the "OK" button.
7. When the vehicle information is displayed, confirm again that it matches the vehicle being diagnosed.
  - If they match, go to Step 8.
  - If not, go to Step 5.
8. Select the "OK" button.
9. When the optional equipment screen is displayed, choose the one which the vehicle is fitted with, and then select the "OK" button.

### CHECK OF FREEZE FRAME DATA

The freeze frame data can be checked by using scan tool.

When detecting fault and storing the diagnostic trouble code, the ECU connected to CAN bus line obtains the data before the determination of the diagnostic trouble code and the data when the diagnostic trouble code is determined, and then stores the ECU status of that time. By analyzing each data from scan tool, the troubleshooting can be performed more efficiently. The displayed items are as the table below.

#### Display item list

Item No.	Item name	Content	Unit
1	Odometer	Total driving distance after the diagnostic trouble code is generated	mile
2	Ignition cycle	Number of times the ignition switch is turned "ON" or "LOCK (OFF)" after the past failure transition	Number of counts is displayed.
4	Accumulated minute	Cumulative time for current malfunction of diagnostic trouble code	min

## DIAGNOSTIC TROUBLE CODE CHART

**⚠ CAUTION**

On troubleshooting, if the ignition switch is turned ON while disconnecting connector(s), diagnostic trouble code(s) associated with other system may be set. On completion, confirm all systems for diagnostic trouble code(s). If diagnostic trouble code(s) are set, erase them all.

DTC No.	Description	Reference page
B2468	Microphone input short to BATT	<a href="#">P.54A-593</a>
B2470	Microphone input short to ground	
B2471	On hook button stuck	<a href="#">P.54A-596</a>
B2472	Off hook button stuck	
B2473	VR button stuck	
B2475	VIN not programmed	<a href="#">P.54A-601</a>
U0019	Bus off (CAN-B)	<a href="#">P.54A-603</a>
U0141	ETACS CAN timeout	<a href="#">P.54A-604</a>
U0151	SRS-ABG CAN timeout	<a href="#">P.54A-606</a>
U0154	OCM (occupant classification-ECU) CAN timeout	<a href="#">P.54A-609</a>
U0155	Meter CAN timeout	<a href="#">P.54A-611</a>
U0164	A/C CAN timeout	<a href="#">P.54A-612</a>
U0168	WCM CAN timeout	<a href="#">P.54A-614</a>
U0184	AUDIO CAN timeout	<a href="#">P.54A-616</a>
U0195	Satellite radio CAN timeout	<a href="#">P.54A-618</a>
U0245	AND [Audio visual Navigation (HDD) unit] CAN timeout	<a href="#">P.54A-620</a>

## DIAGNOSTIC TROUBLE CODE PROCEDURES


DTC B2468: Microphone input short to BATT

DTC B2470: Microphone input short to ground

**CAUTION**


Before replacing the module, ensure that the communication circuit is normal.

Hands Free Cellular Phone System Circuit

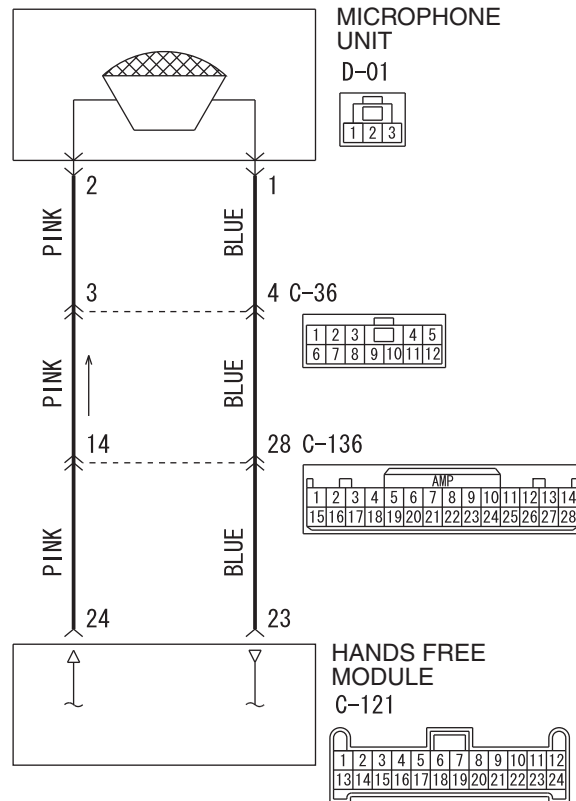


WAG54M035A

Connector: C-36

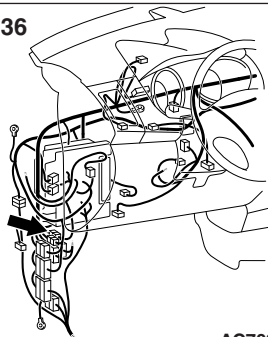


AC702815AM

Connectors: C-121, C-136

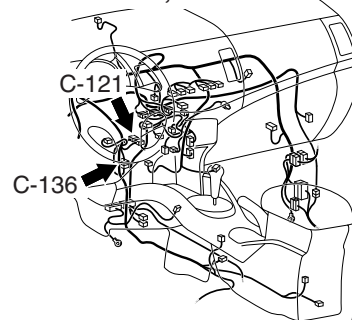

AC901076AP

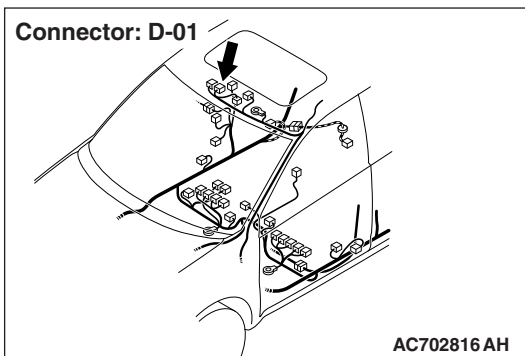

## PROBABLE CAUSES

- The hands free module may be defective.
- The microphone unit may be defective.
- Damaged harness wires and connectors

## JUDGMENT CRITERIA

When the hands free module judges that the connection with microphone unit is abnormal for 5 seconds or more, it stores diagnostic trouble code B2468 or B2470.

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

Use scan tool MB991958 to diagnose the CAN bus lines.

#### **CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-589](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

### Q: Is the check result normal?

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

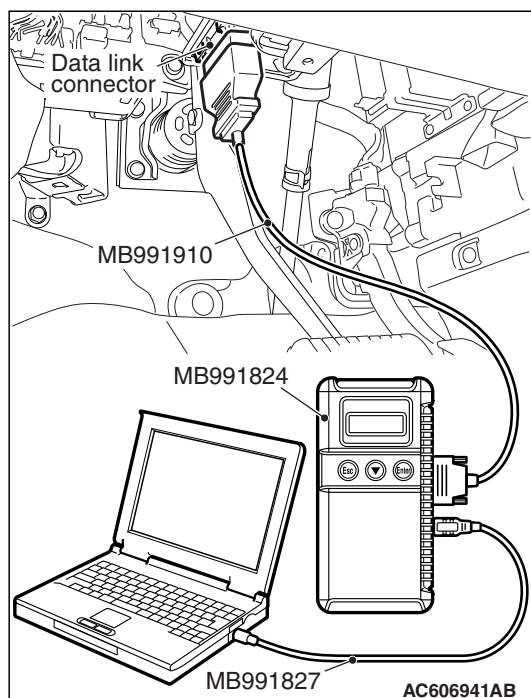

---

**STEP 2. Check microphone unit connector D-01 and hands free module connector C-121 for loose, corroded or damaged terminals, or terminals pushed back in the connector.**

**Q: Are microphone unit connector D-01 and hands free module connector C-121 in good condition?**

**YES :** Go to Step 3.

**NO :** Repair the defective connector.

---

**STEP 3. Check the wiring harness between microphone unit connector D-01 (terminal 1, 2) and hands free module connector C-121 (terminal 23, 24).**

- Check the communication line for open circuit and short circuit.

*NOTE: Also check intermediate connector C-36, C-136 for loose, corroded, or damaged terminals, or terminals pushed back in the connector. If intermediate connector C-36, C-136 is damaged, repair or replace the connector as described in GROUP 00E, Harness Connector Inspection [P.00E-2](#).*

**Q: Is the wiring harness between microphone unit connector D-01 (terminal 1, 2) and hands free module connector C-121 (terminal 23, 24) in good condition?**

**YES :** Go to Step 4.

**NO :** The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.

**Q: Is the DTC set?**

**YES :** Go to Step 5.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Temporarily replace the microphone unit, and check whether the diagnostic trouble code.**

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC.

**Q: Is the DTC set?**

**YES :** Replace the hands free module.

**NO :** Replace the microphone unit.

DTC B2471: On hook button stuck


DTC B2472: Off hook button stuck

DTC B2473: VR button stuck


**CAUTION**

Before replacing the module, ensure that the communication circuit is normal.


## Steering Wheel Voice Control Switch Circuit &lt;Vehicles without MMCS&gt;

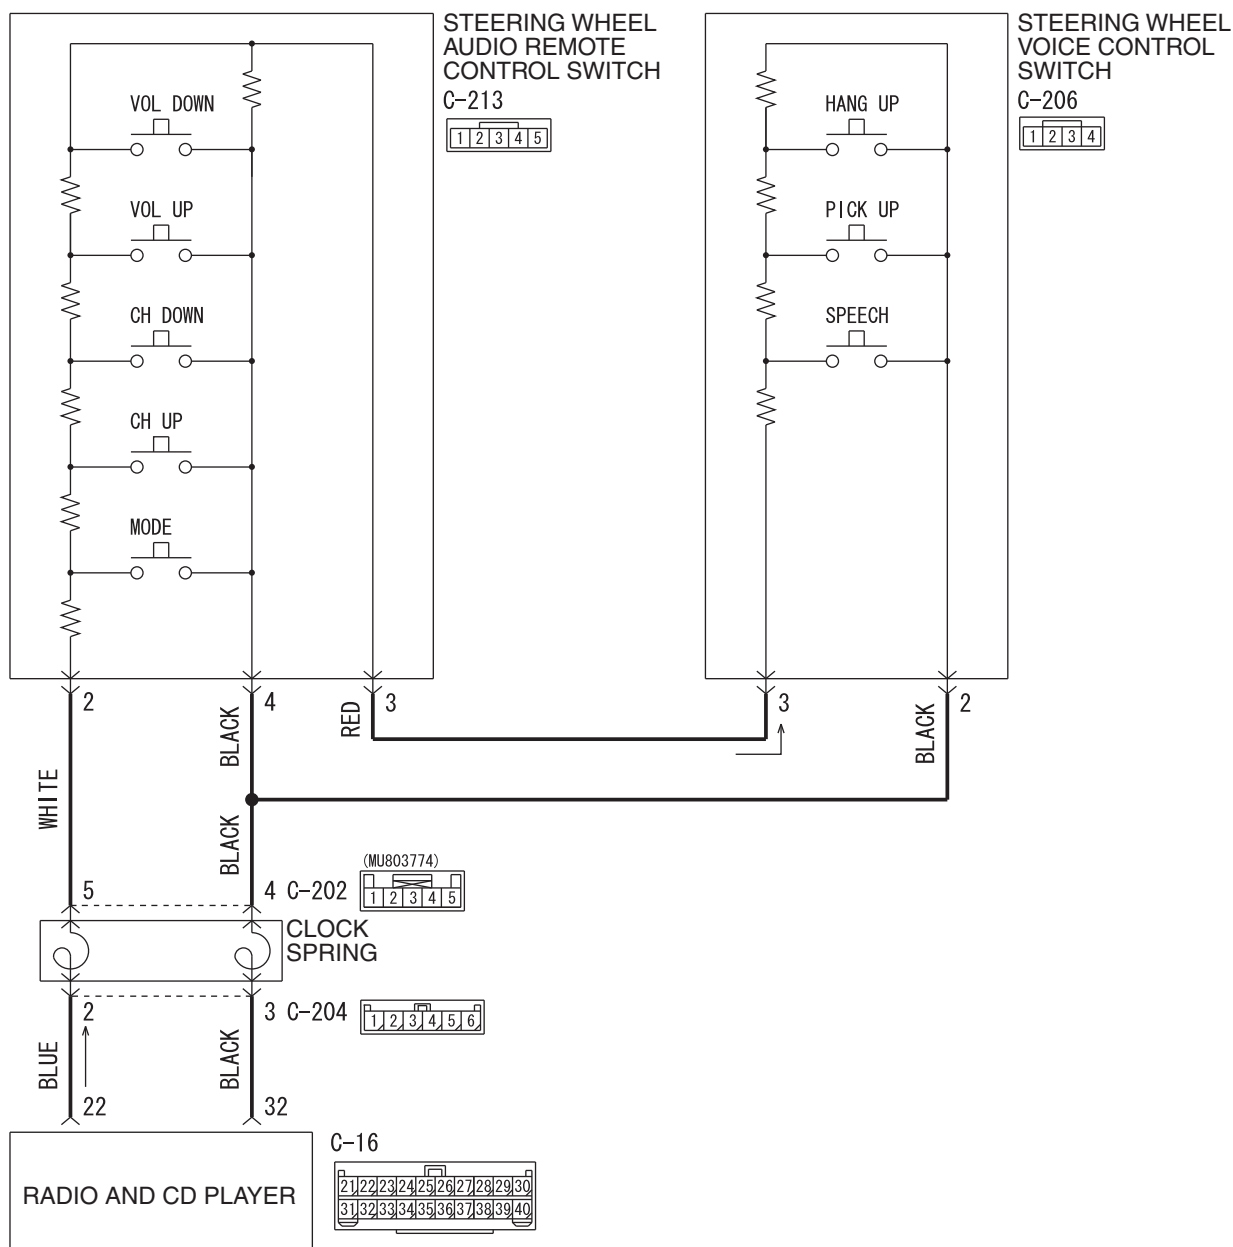

Steering Wheel Voice Control Switch Circuit <Vehicles without MMCS>

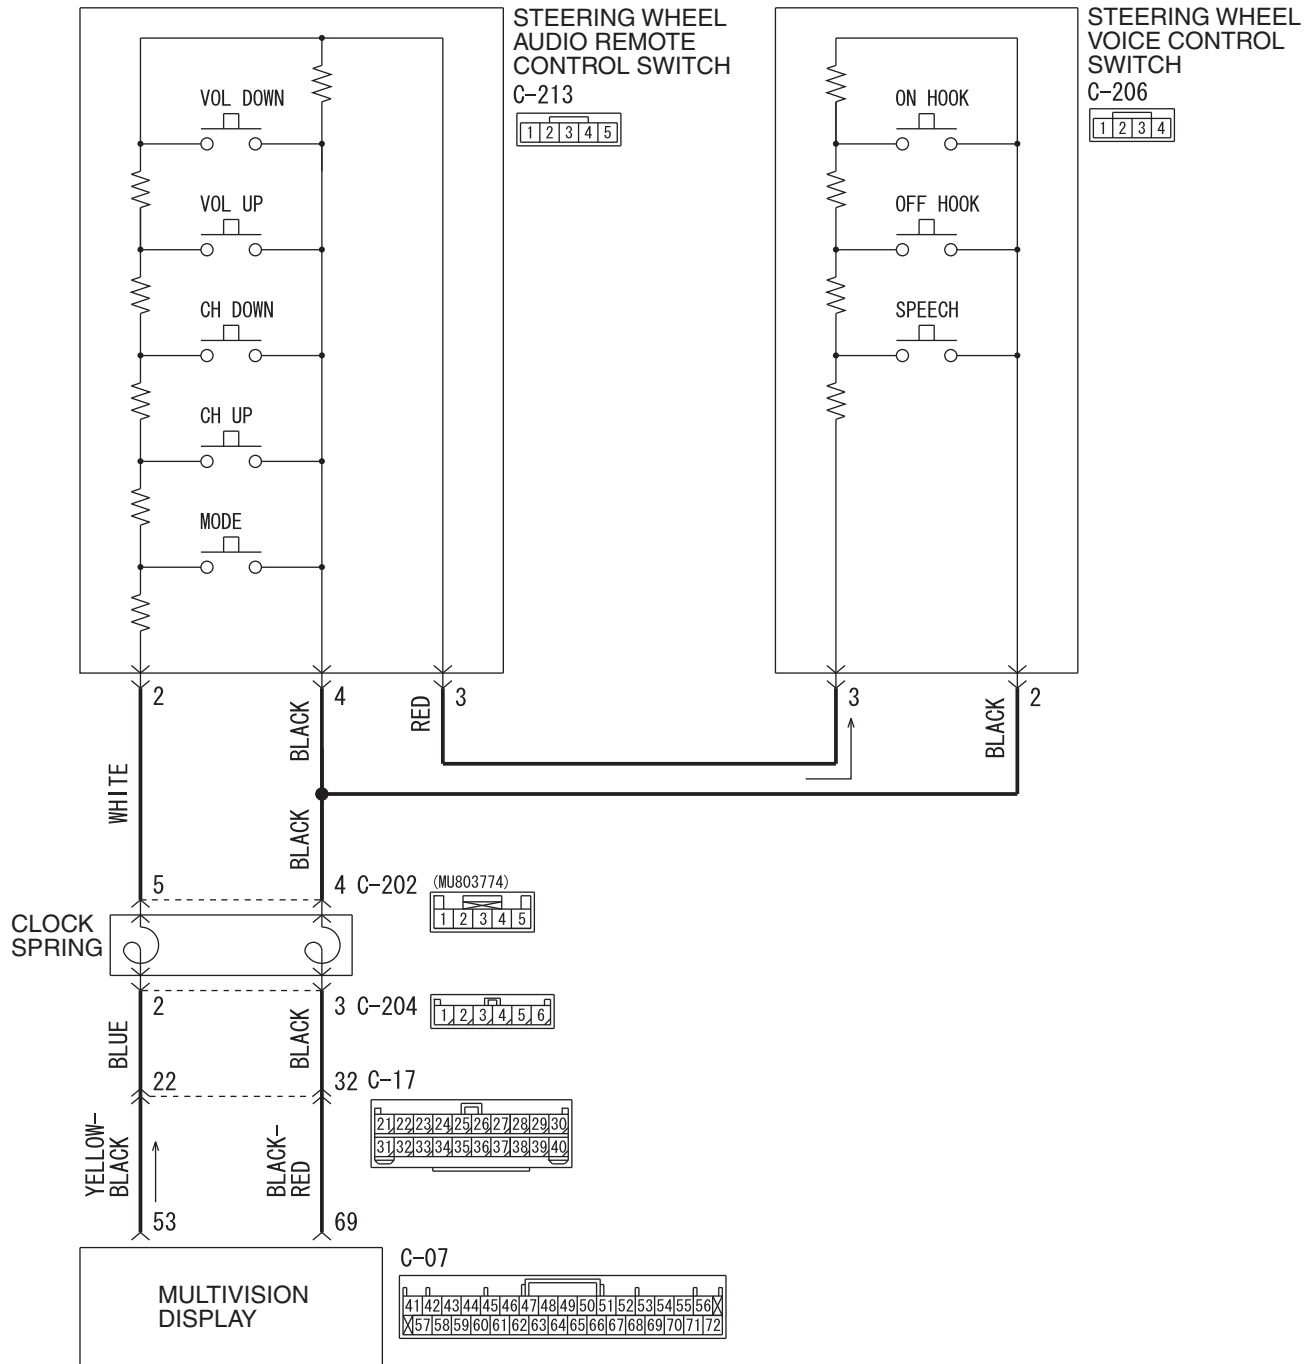

W9G54M027A

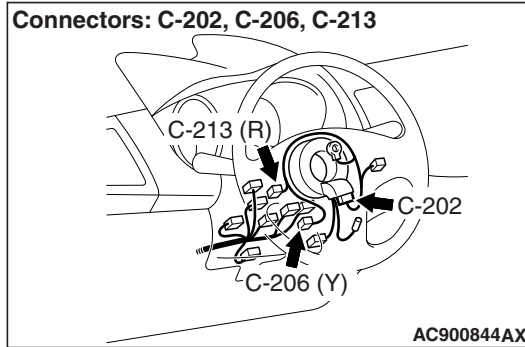

## PROBABLE CAUSES

- Damaged harness wires and connectors
- The hands free module may be defective.
- The microphone unit may be defective.
- The CAN bus line may be defective.
- The steering wheel voice control switch may be defective.
- The radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS> may be defective.

## JUDGMENT CRITERIA

When the hands free module receives any switch signal from the speech switch, pick-up switch, hang-up switch of steering wheel voice control switch for approximately 1 or 2 minutes continuously, it stores diagnostic trouble code B2471 (hang-up switch), B2472 (pick-up switch) or B2473 (speech switch) for each switch.

## DIAGNOSIS

### Required Special Tools:

- MB991223: Harness Set
- MB992006: Extra Fine Probe
- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Check the radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS>.

Check that the radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS> works normally.

#### Q: Is the check result normal?

**YES** : Go to Step 2.

**NO** : Diagnose the radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS> (Refer to radio and CD player –Diagnosis [P.54A-371](#) <vehicles without MMCS> or MMCS –Diagnosis [P.54A-493](#) <vehicles with MMCS>).


### STEP 2. Check the steering wheel audio remote control switch.

Check that the radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS> can be operated normally using the steering wheel audio remote control switch.

#### Q: Is the check result normal?

**YES** : Go to Step 3.

**NO** : Diagnose the steering wheel audio remote control switch (Refer to [P.54A-573](#) <vehicles without MMCS> or [P.54A-577](#) <vehicles with MMCS>).

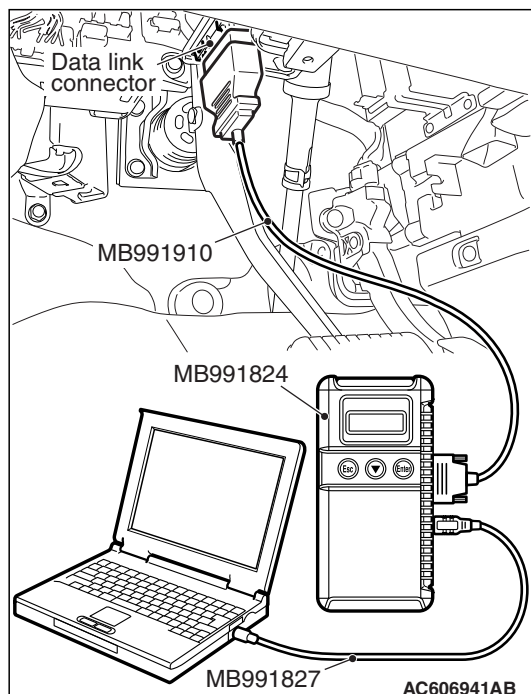

**STEP 3. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-589](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

**Q: Is the check result normal?**

**YES :** Go to Step 4.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 4. Using scan tool MB991958 read the radio and CD player <vehicles without MMCS> or CAN box unit <vehicles with MMCS> diagnostic trouble code.**

Check the diagnostic trouble code is set to the radio and CD player <vehicles without MMCS> or CAN box unit <vehicles with MMCS>.

Check whether a radio and CD player <vehicles without MMCS> or CAN box unit <vehicles with MMCS> DTCs are set or not.

- (1) Turn the ignition switch to the "ON" position.
- (2) Check for combination meter DTCs.
- (3) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Diagnose the radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS> (Refer to radio and CD player –Diagnosis [P.54A-338](#) <vehicles without MMCS> or CAN box unit – Diagnosis [P.54A-467](#) <vehicles with MMCS>).

**NO :** Go to Step 5.

**STEP 5. Check the steering wheel voice control switch.**

Refer to [P.54A-650](#).

**Q: Is the check result normal?**

**YES :** Go to Step 6.

**NO :** Replace the steering wheel voice control switch.

---

**STEP 6. Check the steering wheel audio remote control switch.**

Refer to [P.54A-585](#).

**Q: Is the check result normal?**

**YES** : Go to Step 7.

**NO** : Replace the steering wheel audio remote control switch.

---

**STEP 7. Check steering wheel audio remote control switch connector C-213 and steering wheel voice control switch connector C-206 for loose, corroded or damaged terminals, or terminals pushed back in the connector.****Q: Are steering wheel audio remote control switch connector C-213 and steering wheel voice control switch connector C-206 in good condition?**

**YES** : Go to Step 8.

**NO** : Repair the defective connector.

---

**STEP 8. Check the wiring harness between steering wheel voice control switch connector C-206 (terminal 3) and steering wheel audio remote control switch connector C-213 (terminal 3).**

- Check the communication line for open circuit and short circuit.

**Q: Is the wiring harness between steering wheel voice control switch connector C-206 (terminal 3) and steering wheel audio remote control switch connector C-213 (terminal 3) in good condition?**

**YES** : Go to Step 9.

**NO** : The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 9. Check the wiring harness between steering wheel voice control switch connector C-206 (terminal 2) and clock spring connector C-202 (terminal 4).**

- Check the communication line for open circuit and short circuit.

**Q: Is the wiring harness between steering wheel voice control switch connector C-206 (terminal 2) and clock spring connector C-202 (terminal 4) in good condition?**

**YES** : Go to Step 10.

**NO** : The wiring harness may be damaged or the connector(s) may have loose, corroded or damaged terminals, or terminals pushed back in the connector. Repair the wiring harness as necessary.

---

**STEP 10. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.

**Q: Is the DTC set?**

**YES** : Go to Step 11.

**NO** : The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 11. Temporarily replace the hands free module, and check whether the diagnostic trouble code is reset.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.

**Q: Is the DTC set?**

**YES** : Replace the radio and CD player <vehicles without MMCS> or multivision display <vehicles with MMCS>.

**NO** : Replace the hands free module.

---

**DTC B2475: VIN not programmed**

---

** CAUTION**

- If the diagnostic trouble code B2475 is set, be sure to diagnose the CAN bus line.
- When replacing the module, always check that the communication circuit is normal.

**TROUBLE JUDGMENT**


With the ignition switch at the "ON" position, if the VIN is not written to the hands free module, diagnostic trouble code B2477 is stored.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The hands free module may be defective
- The ETACS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

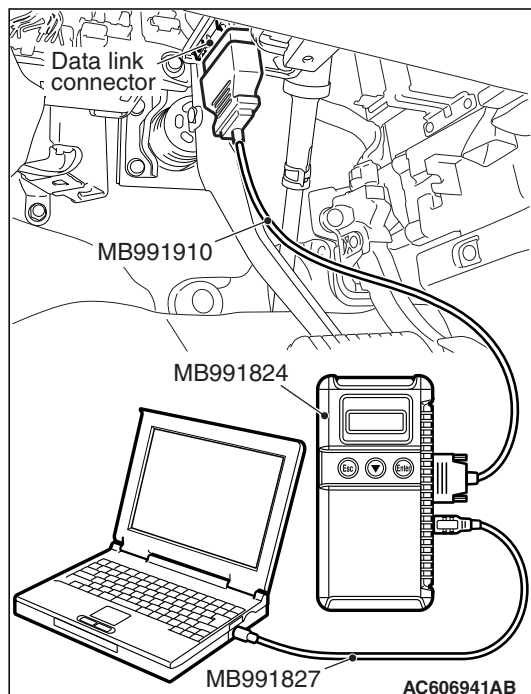

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-589](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.**

Check if the diagnostic trouble code relating to the coding error is set to the ETACS-ECU.

**Q: Is the DTC set?**

**YES :** Troubleshoot the ETACS-ECU (Refer to [P.54A-742](#)), and then go to Step 3.

**NO :** Go to Step 3.

**STEP 3. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the hands free module.

**NO :** The trouble can be an intermittent malfunction (Refer to GROUP 00, How to use Troubleshooting/inspection Service Points –How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0019: Bus off (CAN-B)**

---

 **CAUTION**

- If DTC U0019 is set, be sure to diagnose the CAN bus line.
- When replacing the module, always check that the communication circuit is normal.

**TROUBLE JUDGMENT**

When the hands free module is returned from the bus off state, or when the bus error is indicated to the hands free module state, the DTC U0019 (CAN-B) is set.

**COMMENTS ON TROUBLE SYMPTOM**

The hands free module, power supply for the hands free module, ground circuit, or CAN bus line may have a problem.


**PROBABLE CAUSES**

- The hands free module may be defective.
- The CAN bus line may be defective.

**DIAGNOSIS**

**Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

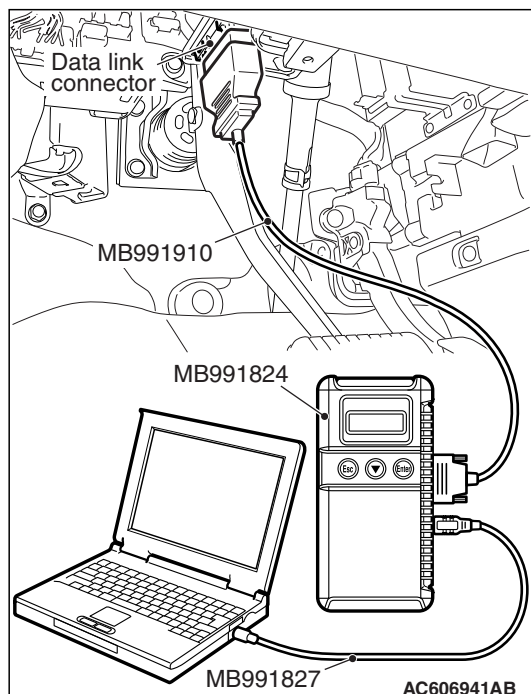**STEP 1. Using scan tool MB991958, diagnose the CAN bus line.**

Use scan tool MB991958 to diagnose the CAN bus lines.

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-589](#)."
- (2) Turn the ignition switch to "ON" position.
- (3) Diagnose the CAN bus line.

**Q: Is the check result normal?**

**YES** : Go to Step 2.

**NO** : Repair the CAN bus line. (Refer to GROUP 54C, Diagnosis [P.54C-17](#).) On completion, go to Step 2.

**STEP 2. Check whether the scan tool MB991958 can communicate with the hands free module.****Q: Is the check result normal?**

**YES** : Erase the diagnostic trouble code. This diagnosis is complete.

**NO** : Check the power supply circuit of the hands free module, and repair if necessary.

**DTC U0141: ETACS CAN timeout****⚠ CAUTION**

- If the DTC U0141 is set, be sure to diagnose the CAN bus line.
- When replacing the module, always check that the communication circuit is normal.

**TECHNICAL DESCRIPTION (COMMENT)**

If the signal from ETACS-ECU cannot be received, the hands free module sets the diagnostic trouble code No. U0141.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The hands free module may be defective
- The ETACS-ECU may be defective

## DIAGNOSIS

### Required Special Tools:

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

### STEP 1. Using scan tool MB991958, diagnose the CAN bus line.

#### **CAUTION**


To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-589](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

#### **Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

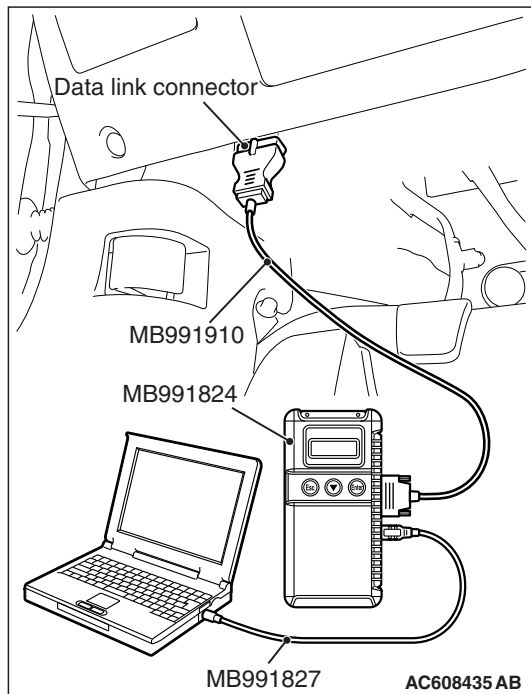

### STEP 2. Using scan tool MB991958, read the ETACS-ECU diagnostic trouble code.

Check again if the DTC is set to the ETACS-ECU.

#### **Q: Is the DTC set?**

**YES :** Diagnose the ETACS-ECU (Refer to [P.54A-742](#)).

**NO :** Go to Step 3.

### STEP 3. Using scan tool MB991958, read the A/C diagnostic trouble code.

Check if DTC U0141 is set to the A/C-ECU.

#### **Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the ETACS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the ETACS-ECU and the hands free module (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the hands free module.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the ETACS-ECU and the hands free module (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**DTC U0151: SRS-ECU CAN timeout**

---

**CAUTION**

- If DTC U0151 is set, be sure to diagnose the CAN bus line.
- When replacing the ECU, always check that the communication circuit is normal.

**TECHNICAL DESCRIPTION (COMMENT)**


If the signal from SRS-ECU cannot be received, the hands free module sets the DTC U0151.

**TROUBLESHOOTING HINTS**

- The CAN bus line may be defective
- The hands free module may be defective
- The SRS-ECU may be defective

**DIAGNOSIS****Required Special Tools:**

- MB991958: Scan Tool (M.U.T.-III Sub Assembly)
  - MB991824: Vehicles Communication Interface (V.C.I.)
  - MB991827: M.U.T.-III USB Cable
  - MB991910: M.U.T.-III Main Harness A (Vehicles with CAN communication system)

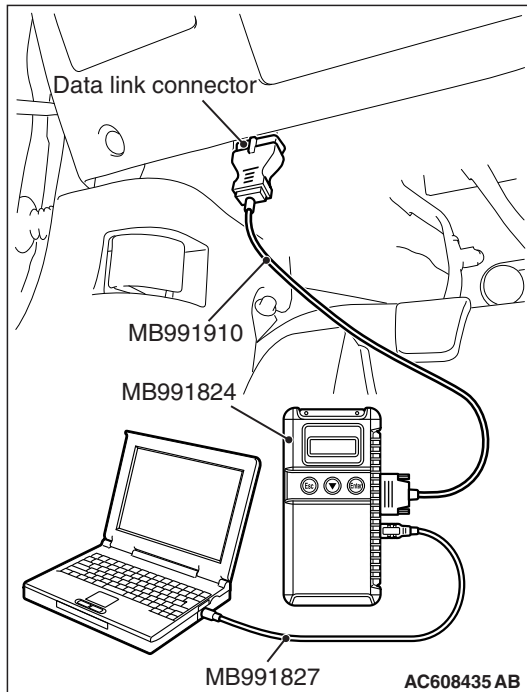

**STEP 1. Using scan tool MB991958, diagnose the CAN bus line**

**⚠ CAUTION**

To prevent damage to scan tool MB991958, always turn the ignition switch to the "LOCK" (OFF) position before connecting or disconnecting scan tool MB991958.

- (1) Connect scan tool MB991958. Refer to "How to connect the Scan Tool (M.U.T.-III) [P.54A-589](#)."
- (2) Turn the ignition switch to the "ON" position.
- (3) Diagnose the CAN bus line.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the CAN bus line found to be normal?**

**YES :** Go to Step 2.

**NO :** Repair the CAN bus line (Refer to GROUP 54C, Diagnosis [P.54C-17](#)).

**STEP 2. Using scan tool MB991958, read the SRS-ECU diagnostic trouble code**

Check again if the DTC is set to the SRS-ECU.

**Q: Is the DTC set?**

**YES :** Troubleshoot the SRS (Refer to GROUP 52B, Troubleshooting [P.52B-32](#)).

**NO :** Go to Step 3.

**STEP 3. Using scan tool MB991958, read the A/C-ECU diagnostic trouble code.**

Check if the DTC U0151 is set to the A/C-ECU.

**Q: Is the DTC set?**

**YES :** Go to Step 4.

**NO :** Go to Step 5.

**STEP 4. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the hands free module.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the SRS-ECU.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the SRS-ECU and the hands free module (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).

---

**STEP 5. Recheck for diagnostic trouble code.**

Check again if the DTC is set to the CAN box unit.

- (1) Erase the DTC.
- (2) Turn the ignition switch from "LOCK" (OFF) position to "ON" position.
- (3) Check if DTC is set.
- (4) Turn the ignition switch to the "LOCK" (OFF) position.

**Q: Is the DTC set?**

**YES :** Replace the hands free module.

**NO :** The trouble can be an intermittent malfunction such as a poor connection or open circuit in the CAN bus lines between the SRS-ECU and the hands free module (Refer to GROUP 00, How to Cope with Intermittent Malfunction [P.00-15](#)).