







SERVICE SPECIFICATIONS

Item				Standard value
Idle speed r/min (N or P range)	6G7(GDI)			600 ± 50
	4M41			750 ± 50
Idle-up speed r/min (N or P range)	6G7(GDI)	A/C	When the A/C is under low load	700 ± 50
			When the A/C is under medium load	800 ± 50
			When the A/C is under high load	1,000 ± 50
	4M41	A/C	When the A/C is under low load	800 ± 50
			When the A/C is under high load	1,000 ± 50
	Resistance value of the potentiometer for the air mix damper (front A/C) kΩ			
Resistance value of the potentiometer for the air outlet changeover damper (front A/C) kΩ				Approx. 0.96 – 5.76
Resistance of the rear air conditioner switch (temperature control switch) kΩ <except rear heater (floor console)>				0 – 3
Resistance of the potentiometer for the air mix damper kΩ <rear heater, dual A/C>				1.2 – 4.8
Resistance value of the resistor (rear A/C) Ω	Between terminals 1 and 6			4.9 ± 7%
	Between terminals 1 and 3			1.25 ± 7%
Air compressor air gap mm				0.35 – 0.65

LUBRICANTS

Item		Brand	Quantity
Compressor oil mL	Single A/C <except vehicles with rear cooler>	DENSO OIL 8	120 ± 20
	Vehicles with rear cooler	DENSO OIL 8	140 ± 20
Pipe connections		DENSO OIL 8	As required
Refrigerant g	Single A/C <except vehicles with rear cooler>	R134a (HFC-134a)	500 ± 20
	Single A/C <vehicles with rear cooler>, dual A/C	R134a (HFC-134a)	780 ± 20

SPECIAL TOOLS

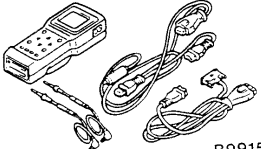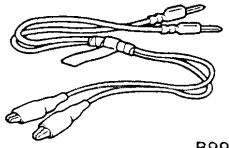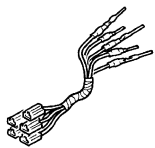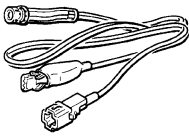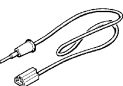Tools	No.	Name	Application
 B991502	MB991502	MUT-II sub as- sembly	Front A/C check
 B991529	MB991529	Diagnosis code checking harness	Check of the full-automatic air conditioner by using a voltmeter
<p>A</p>  <p>B</p>  <p>C</p>  <p>D</p>  C991223	<p>MB991223</p> <p>A: MB991219</p> <p>B: MB991220</p> <p>C: MB991221</p> <p>D: MB991222</p>	<p>Harness set</p> <p>A: Check harness</p> <p>B: LED harness</p> <p>C: LED harness adapter</p> <p>D: Probe</p>	<p>Continuity check and voltage measurement at harness or connector</p> <p>A: For checking connector pin contact pressure</p> <p>B: For checking the power supply circuit</p> <p>C: For checking the power supply circuit</p> <p>D: For connecting commercial tester</p>

TROUBLESHOOTING <FRONT A/C>

DIAGNOSIS TROUBLESHOOTING FLOW

Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.

DIAGNOSIS FUNCTION

METHOD OF READING DIAGNOSIS CODES

Connect the MUT-II to the 16-pin diagnosis connector.

(Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.)

METHOD OF ERASING DIAGNOSIS CODES

Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.

INSPECTION CHART FOR DIAGNOSIS CODES


Code No.	Diagnosis item	Reference page
11	Inside air temperature sensor system (open circuit)	55B-4
12	Inside air temperature sensor system (short circuit)	55B-4
13	Outside air temperature sensor system (open circuit)	55B-4
14	Outside air temperature sensor system (short circuit)	55B-4
15	Heater water temperature sensor system (open circuit)	55B-5
16	Heater water temperature sensor system (short circuit)	55B-5
21	Air thermo sensor system (open circuit)	55B-5
22	Air thermo sensor system (short circuit)	55B-5
31	Potentiometer system for the air mix damper	55B-6
32	Potentiometer system for the air outlet changeover damper	55B-7

INSPECTION PROCEDURE FOR DIAGNOSIS CODES


Code No.11, 12 Inside air temperature sensor system	Probable cause
Code No.11 is set when the inside air temperature circuit inside the A/C-ECU is open. Meanwhile, code No.12 is set when it is short.	Malfunction of the A/C-ECU

Replace the automatic A/C control panel assembly (A/C-ECU).


Code No.13, 14 Outside air temperature sensor system	Probable cause
Code No.13 is set when the outside air temperature sensor circuit is open. Meanwhile, code No.14 is set when it is short.	<ul style="list-style-type: none"> Malfunction of the outside air temperature sensor Malfunction of connector or harness Malfunction of the A/C-ECU

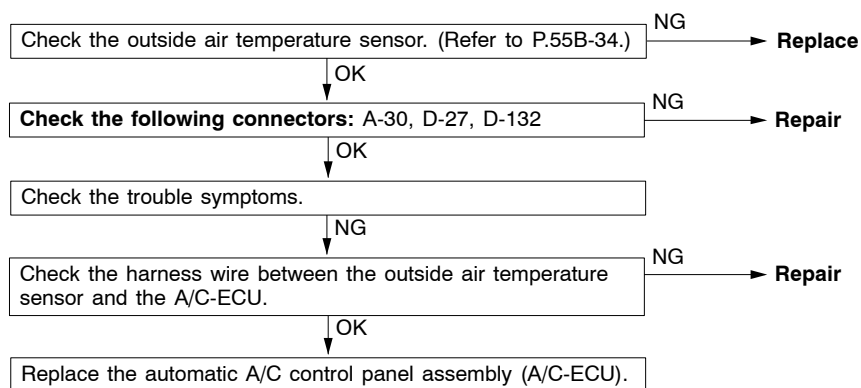


Code No.15, 16 Heater water temperature sensor system	Probable cause
Code No.15 is output when the heater water temperature sensor circuit is open. Code No.16 is output when that circuit is short.	<ul style="list-style-type: none"> ● Malfunction of the heater water temperature sensor ● Malfunction of connector or harness ● Malfunction of the A/C-ECU

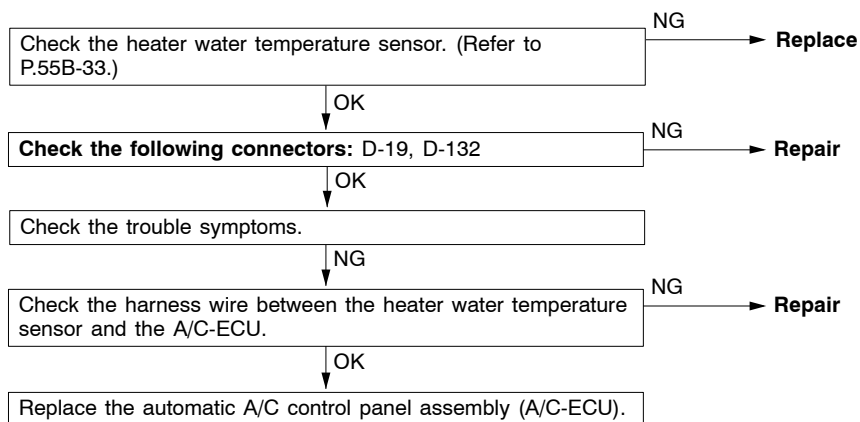


Code No.21, 22 Air thermo sensor system	Probable cause
Code No.21 is set when the air thermo sensor circuit is open. Meanwhile, code No.22 is set when it is short.	<ul style="list-style-type: none"> ● The air thermo sensor is defective. ● Malfunction of connector or harness ● Malfunction of the A/C-ECU

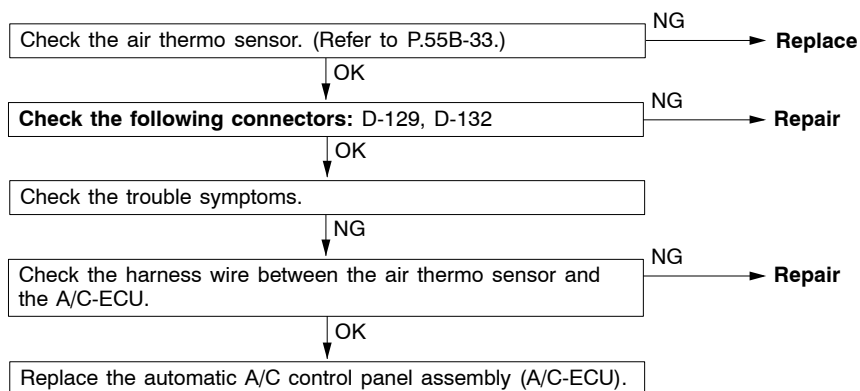

Code No.31 Potentiometer system for the air mix damper	Probable cause
This diagnosis code is set when the potentiometer for the air mix damper does not send any signal to the A/C-ECU due to short or open circuit.	<ul style="list-style-type: none"> • Malfunction of the potentiometer system for the air mix damper • Malfunction of connector or harness • Malfunction of the A/C-ECU

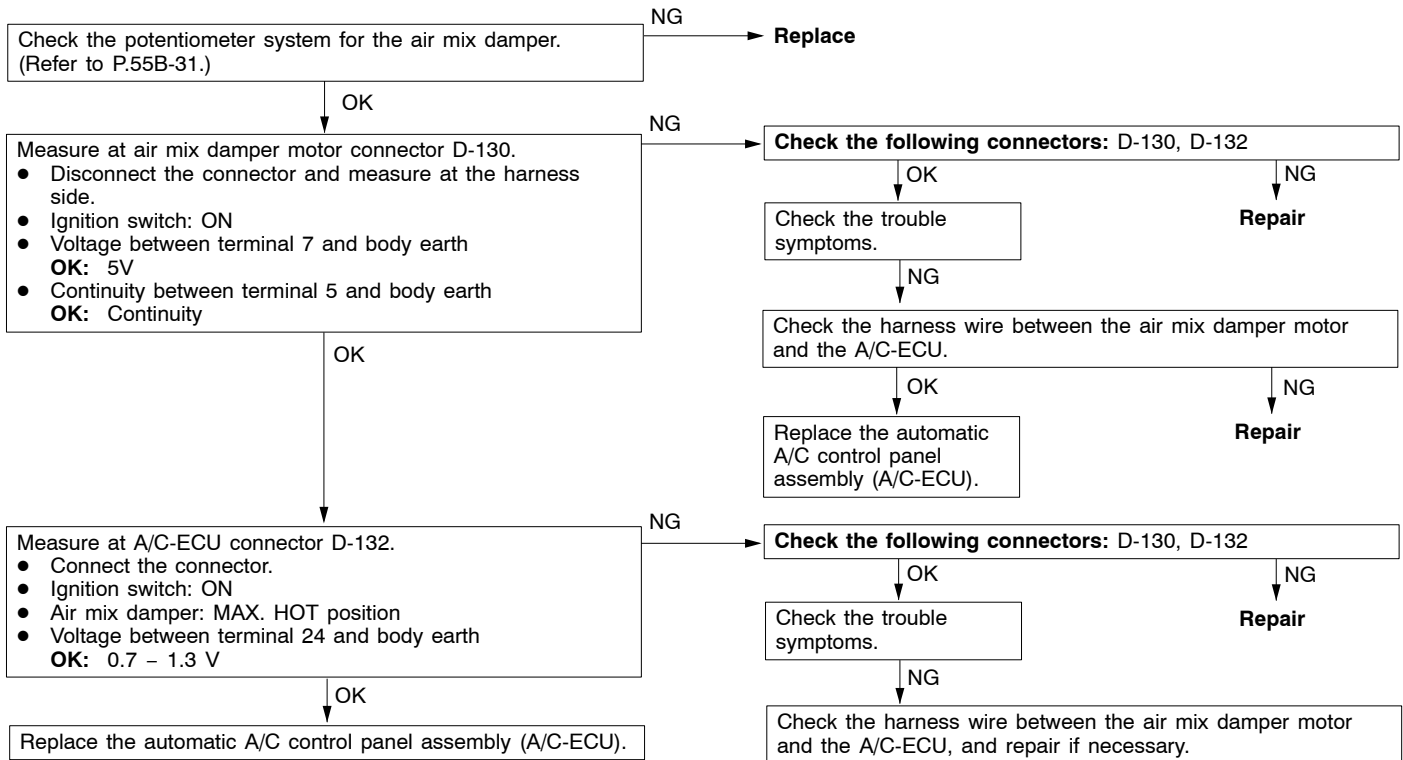

Code No.32 Potentiometer system for the air outlet changeover damper	Probable cause
This diagnosis code is set when the potentiometer for the air outlet changeover damper does not send any signal to the A/C-ECU due to open or short circuit.	<ul style="list-style-type: none"> • Malfunction of the potentiometer for the air outlet changeover damper • Malfunction of connector or harness • Malfunction of the A/C-ECU

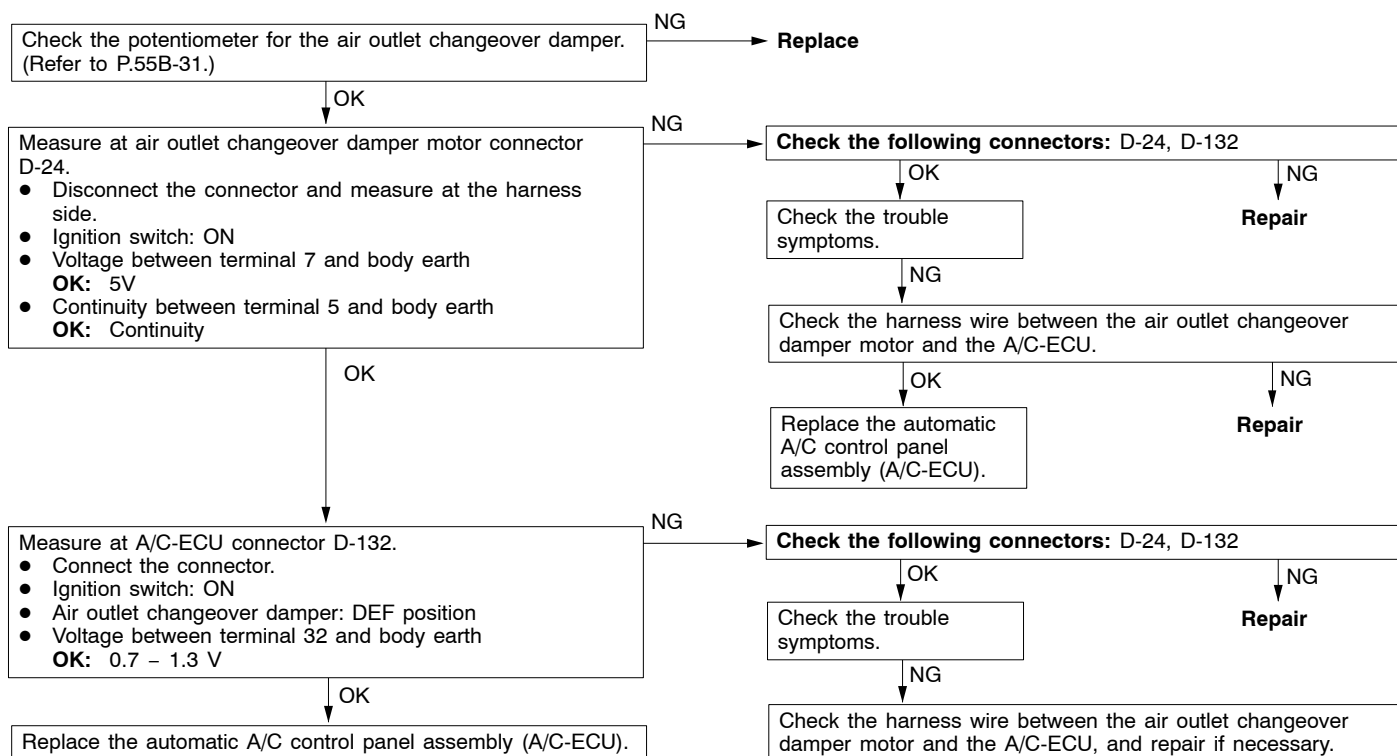


INSPECTION CHART FOR TROUBLE SYMPTOMS

TROUBLE SYMPTOM	Inspection procedure No.	Reference page
Communication with MUT-II is impossible.	1	55B-8
The air conditioner does not operate at all.	2	55B-9
The air conditioner display does not appear on the center display or the RV meter screen.	3	55B-9
A/C outlet air temperature can not be set.	4	55B-10
The blower does not operate.	5	55B-12
The blower air volume can not be changed.	6	55B-13
Air outlet vent cannot be changed.	7	55B-13
Inside/outside air changeover is not possible.	8	55B-14
The rear defogger does not operate.	9	55B-15
The condenser fan does not operate <4M40, 4M41>.	10	55B-16
The condenser fan does not operate <6G7>.	11	55B-18

INSPECTION PROCEDURES FOR TROUBLE SYMPTOMS


Inspection procedure 1

Communication with the MUT-II is not possible.	Probable cause
If communication with all other systems is not possible, there is a high possibility that there is a malfunction of the diagnosis line. If only the A/C system can not communicate with the MUT-II, the diagnosis line between the diagnosis connector and the A/C-ECU may be defective.	<ul style="list-style-type: none"> • Malfunction of harness or connector • Malfunction of the A/C-ECU

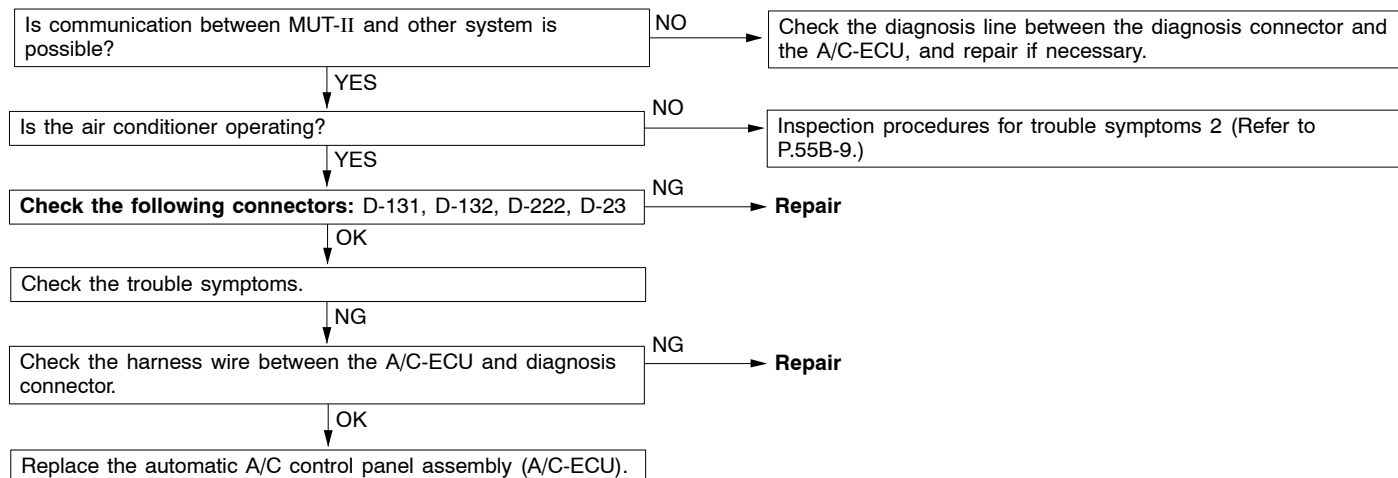


Inspection procedure 2

The air conditioner does not operate at all.	Probable cause
The power supply system (including earth) for the A/C-ECU may be defective. In addition, the A/C-ECU may be inoperative due to a defective harness (such as short).	<ul style="list-style-type: none"> • Malfunction of harness or connector • Malfunction of the A/C-ECU

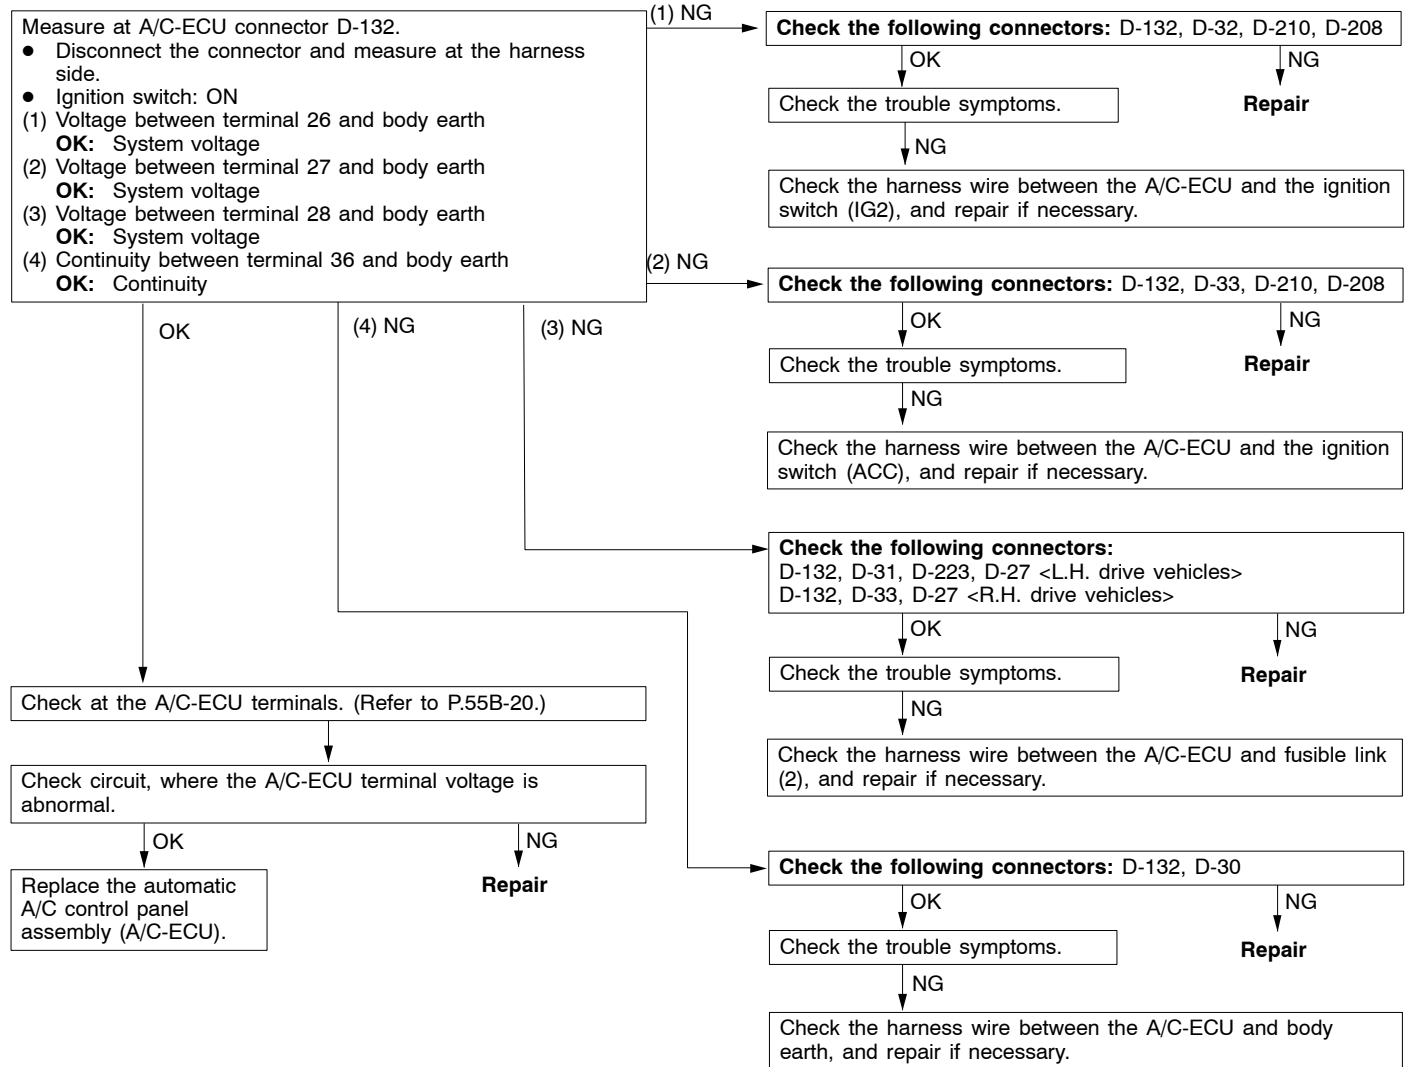


Inspection procedure 3


The air conditioner display does not appear on the center display or the RV meter screen.	Probable cause
There may be a malfunction in the harness or connector between the A/C-ECU and the center display, or between the A/C-ECU and the RV meter.	<ul style="list-style-type: none"> • Malfunction of harness or connector • Malfunction of the A/C-ECU

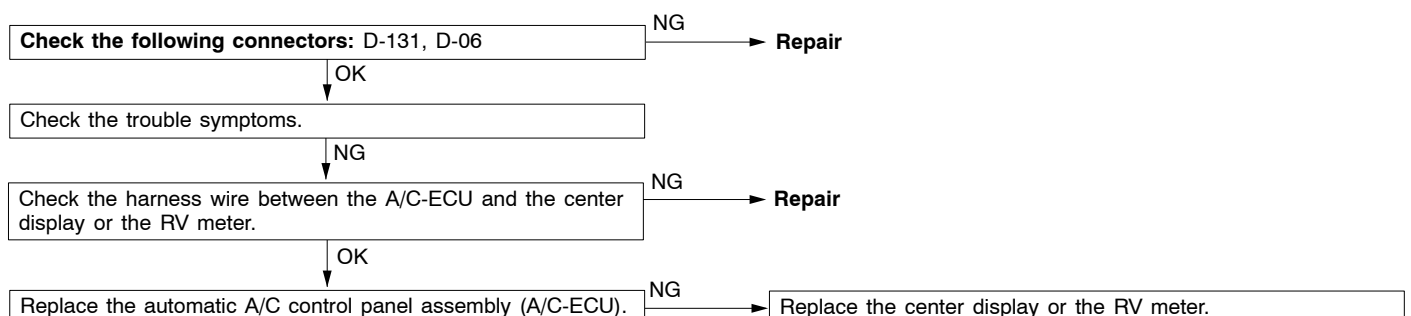

Inspection procedure 4


A/C outlet air temperature can not be set.	Probable cause
If the air outlet temperature can not be changed after a A/C temperature is set, sensor(s) or the air mix damper may be defective.	<ul style="list-style-type: none"> • Malfunction of the inside air temperature sensor • Malfunction of the outside air temperature sensor • Malfunction of the heater water temperature sensor • The air thermo sensor is defective. • Malfunction of the photo sensor • Malfunction of the electric motor for the air mix damper • Malfunction of harness or connector • Malfunction of the A/C-ECU

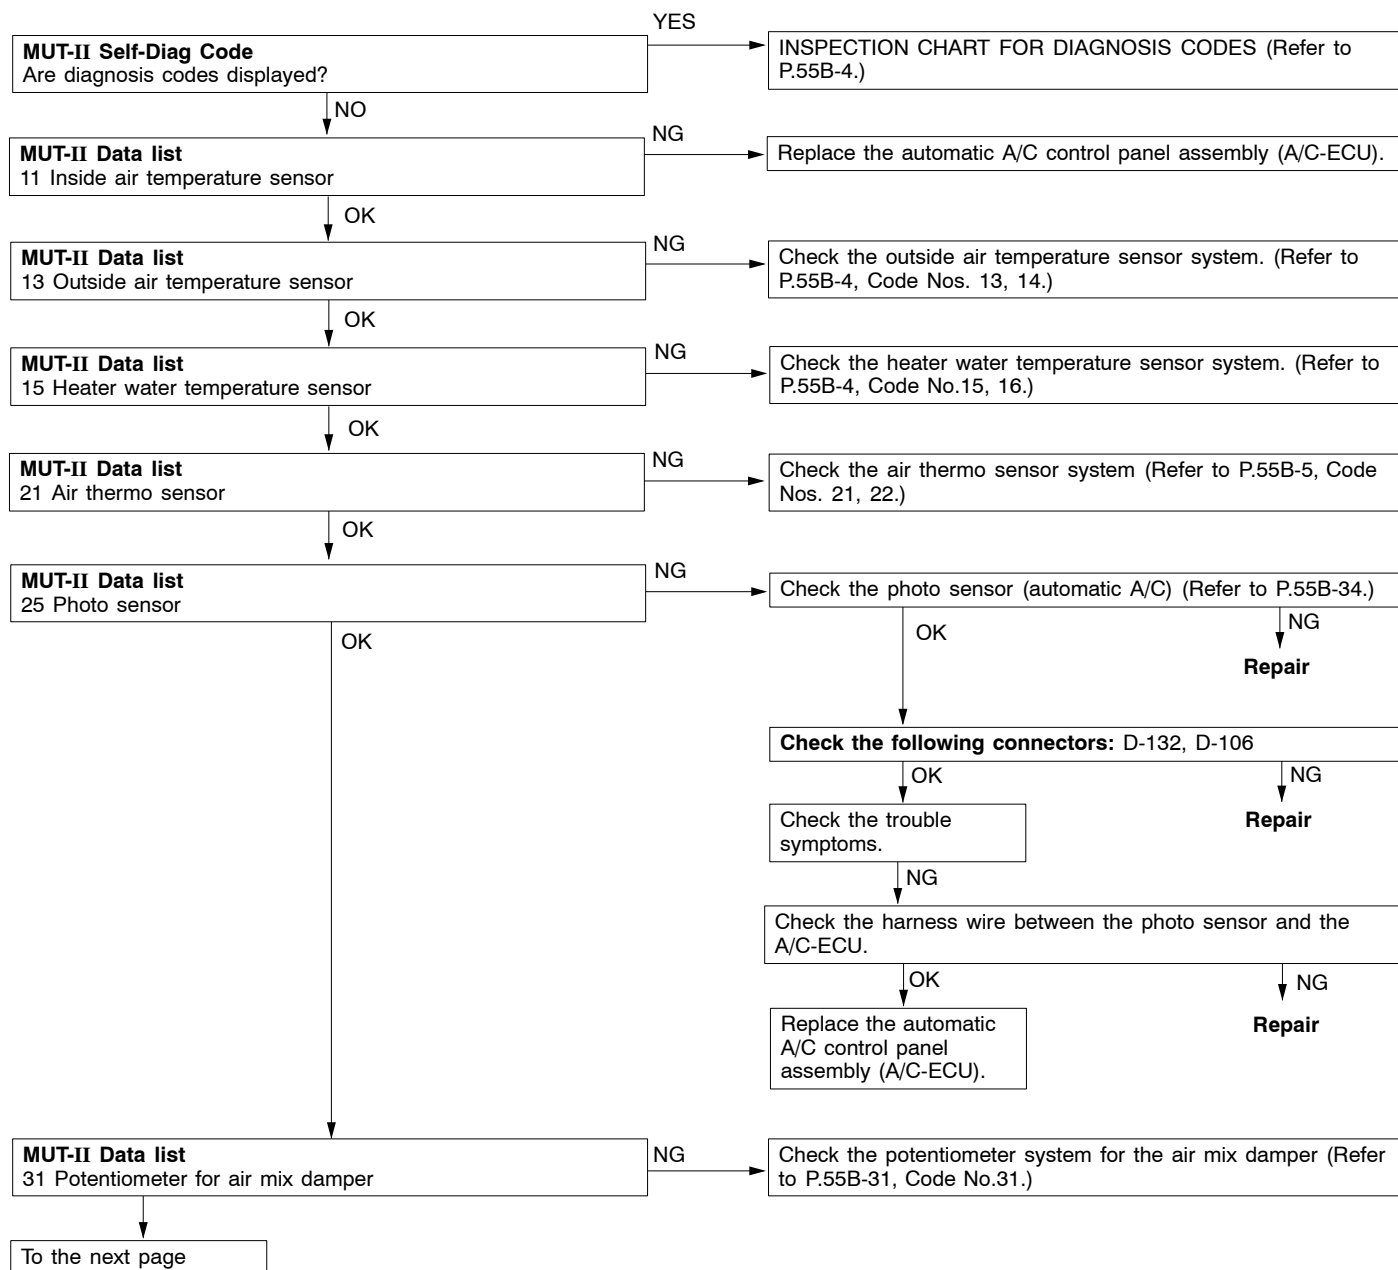

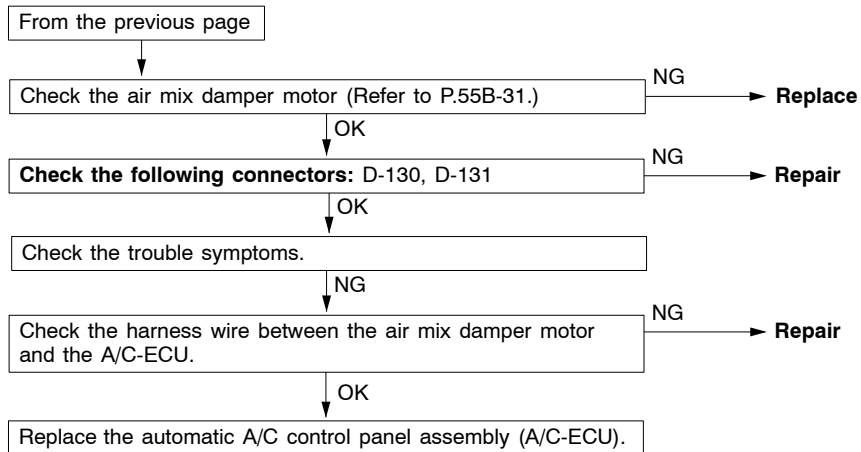


Inspection procedure 5

The blower does not operate.	Probable cause
If no air comes out of the blower even though the blower switch is on, the cause is probably a malfunction of the front blower relay circuit.	<ul style="list-style-type: none"> • Malfunction of the front blower relay • Malfunction of the blower linear controller • The blower motor is defective. • Malfunction of harness or connector • Malfunction of the A/C-ECU

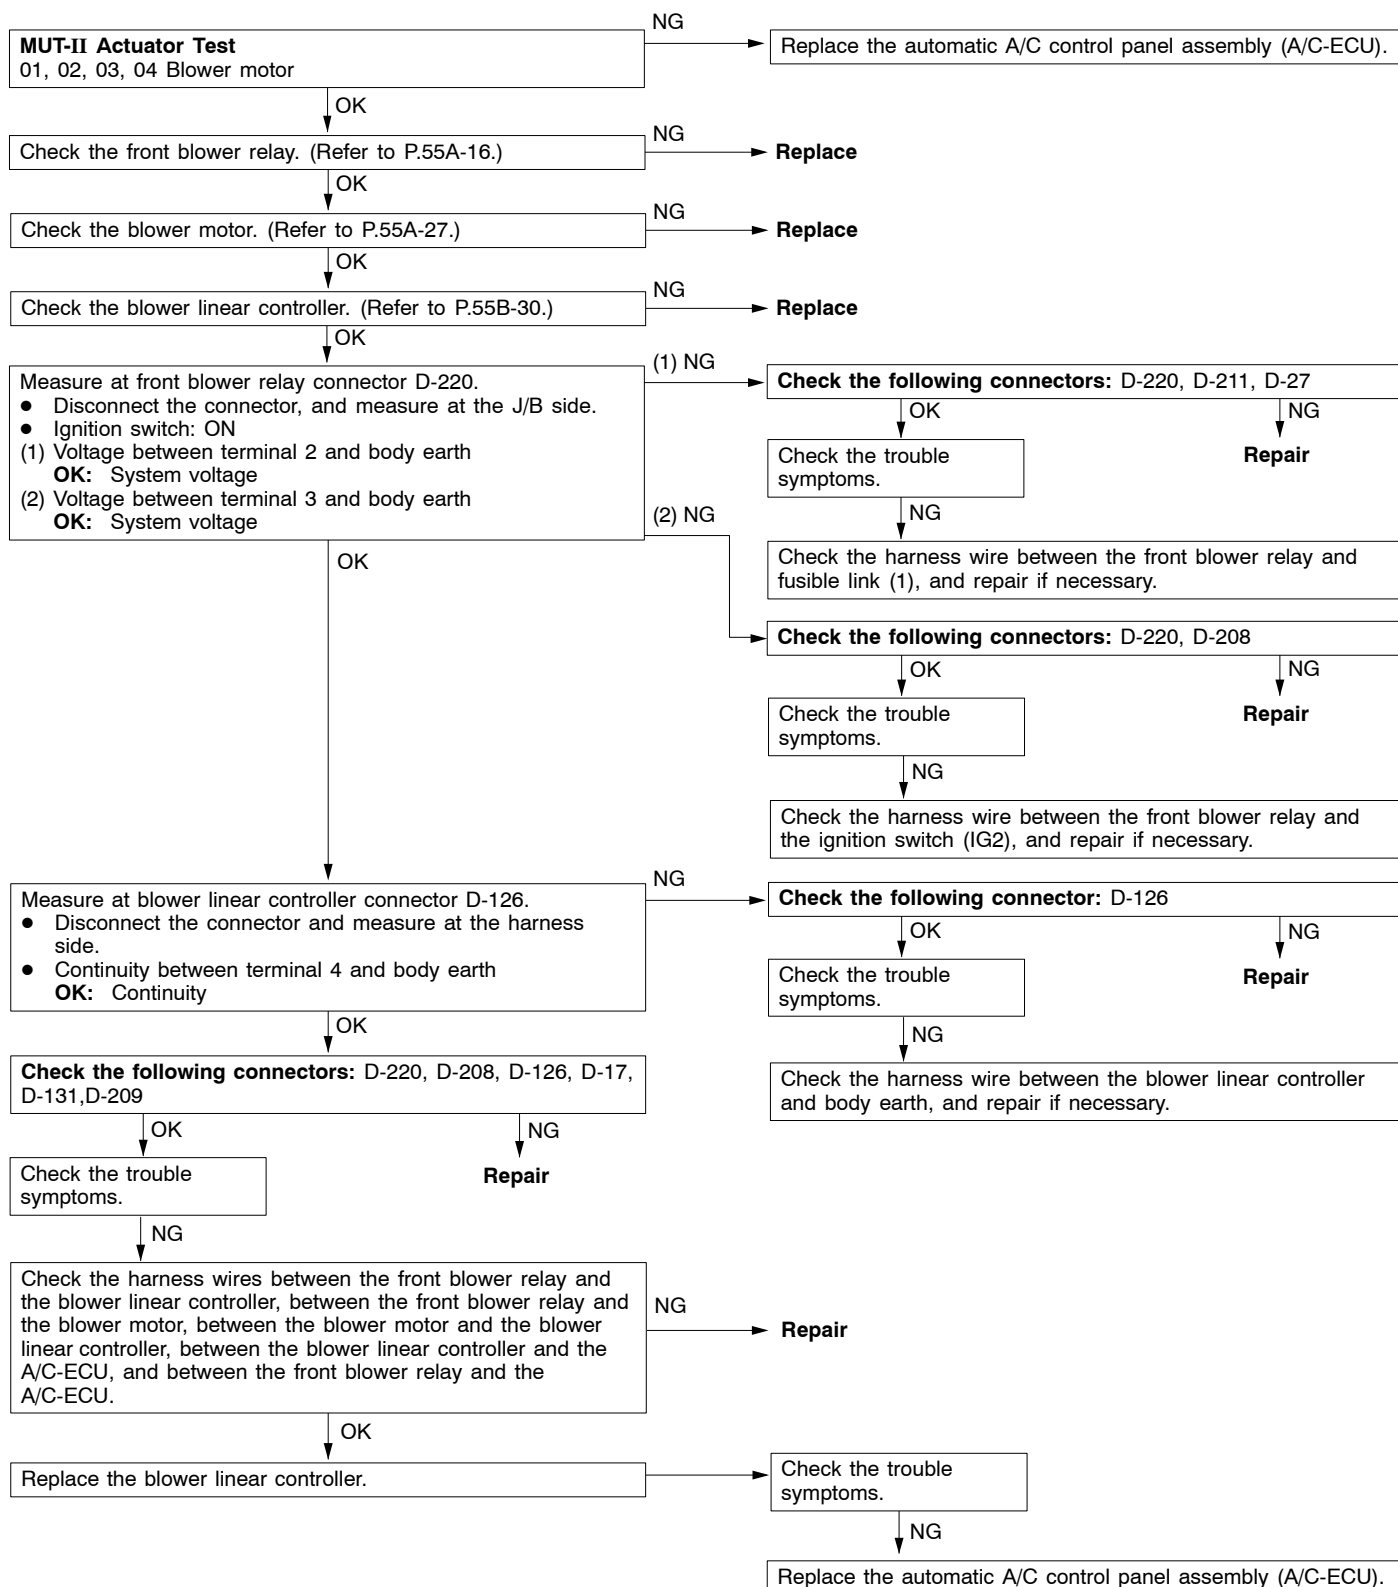


Inspection procedure 6

The blower air volume can not be changed.	Probable cause
If the air volume can not be controlled, the blower linear controller circuit may be defective.	<ul style="list-style-type: none"> • Malfunction of the blower linear controller • Malfunction of harness or connector • Malfunction of the A/C-ECU

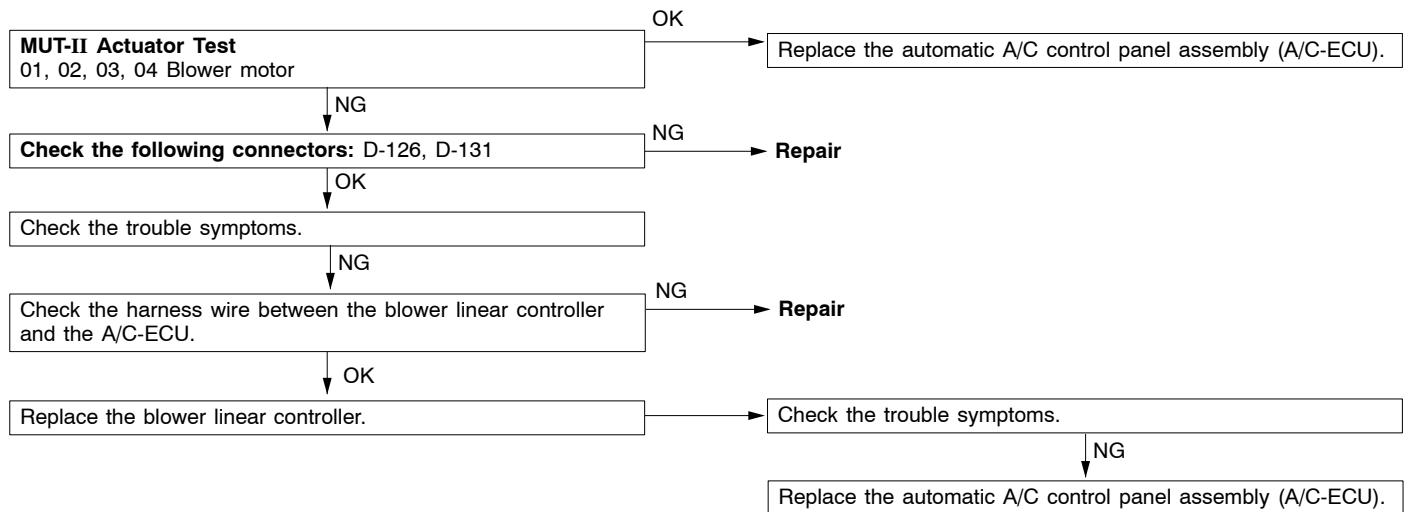


Inspection procedure 7

Air outlet vent cannot be changed.	Probable cause
When the air outlet vents cannot be changed even if the changeover switch is operated, the air outlet changeover damper motor circuit may be defective.	<ul style="list-style-type: none"> • Malfunction of the electric motor for the air outlet changeover damper • Malfunction of harness or connector • Malfunction of the A/C-ECU

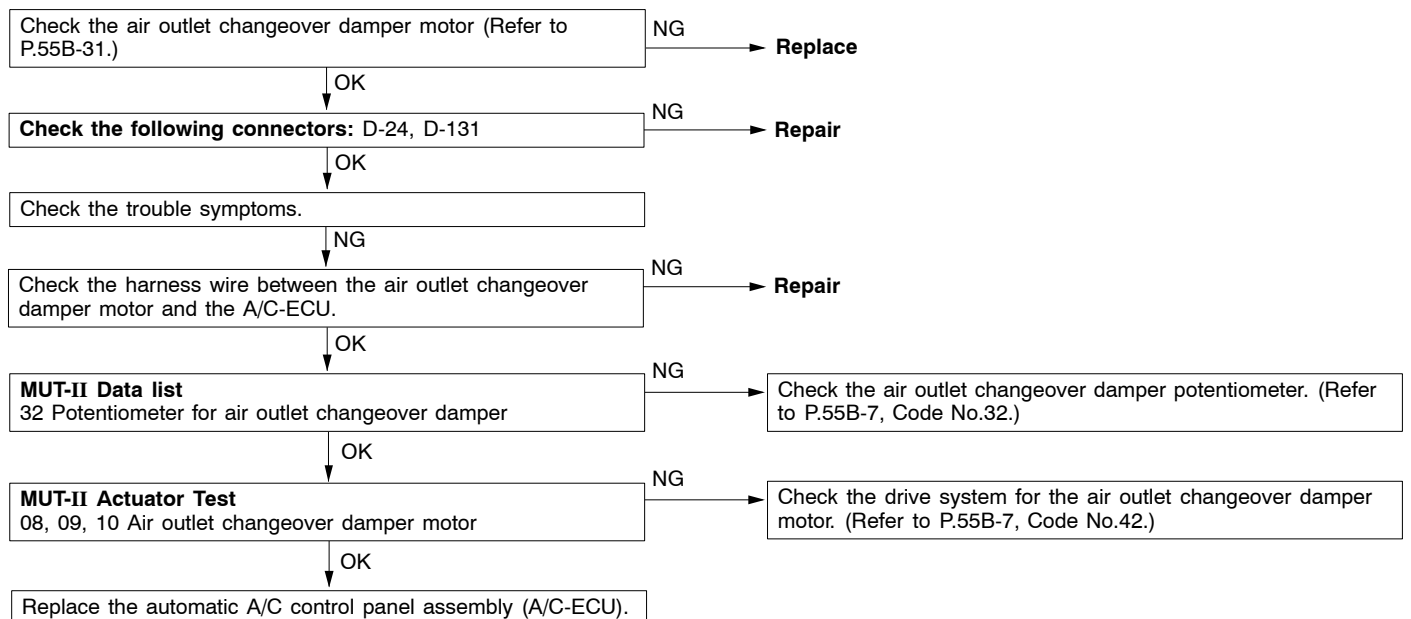


Inspection procedure 8

Inside/outside air changeover is not possible.	Probable cause
When inside air cannot be changed to outside air or vice versa even if its changeover switch is on, the inside/outside air changeover damper motor system may be defective.	<ul style="list-style-type: none"> • Malfunction of the inside/outside air changeover damper motor • Malfunction of harness or connector • Malfunction of the A/C-ECU

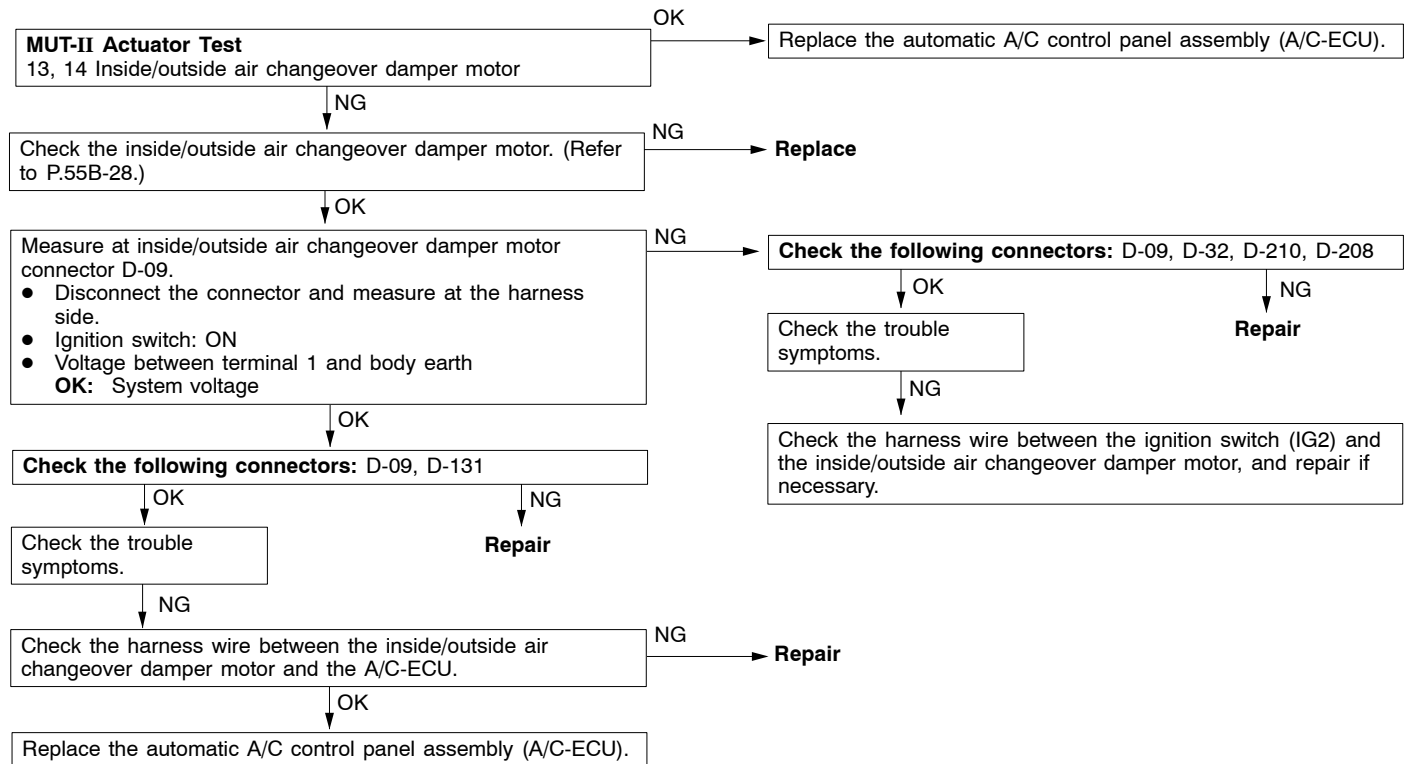


Inspection procedure 9


The rear defogger does not operate.	Probable cause
When the rear defogger does not operate even if the rear defogger switch is on (the defogger remains on for twenty minutes due to a timer function), the rear defogger relay system may be defective.	<ul style="list-style-type: none"> • Malfunction of the defogger relay • Malfunction of harness or connector • Malfunction of the A/C-ECU

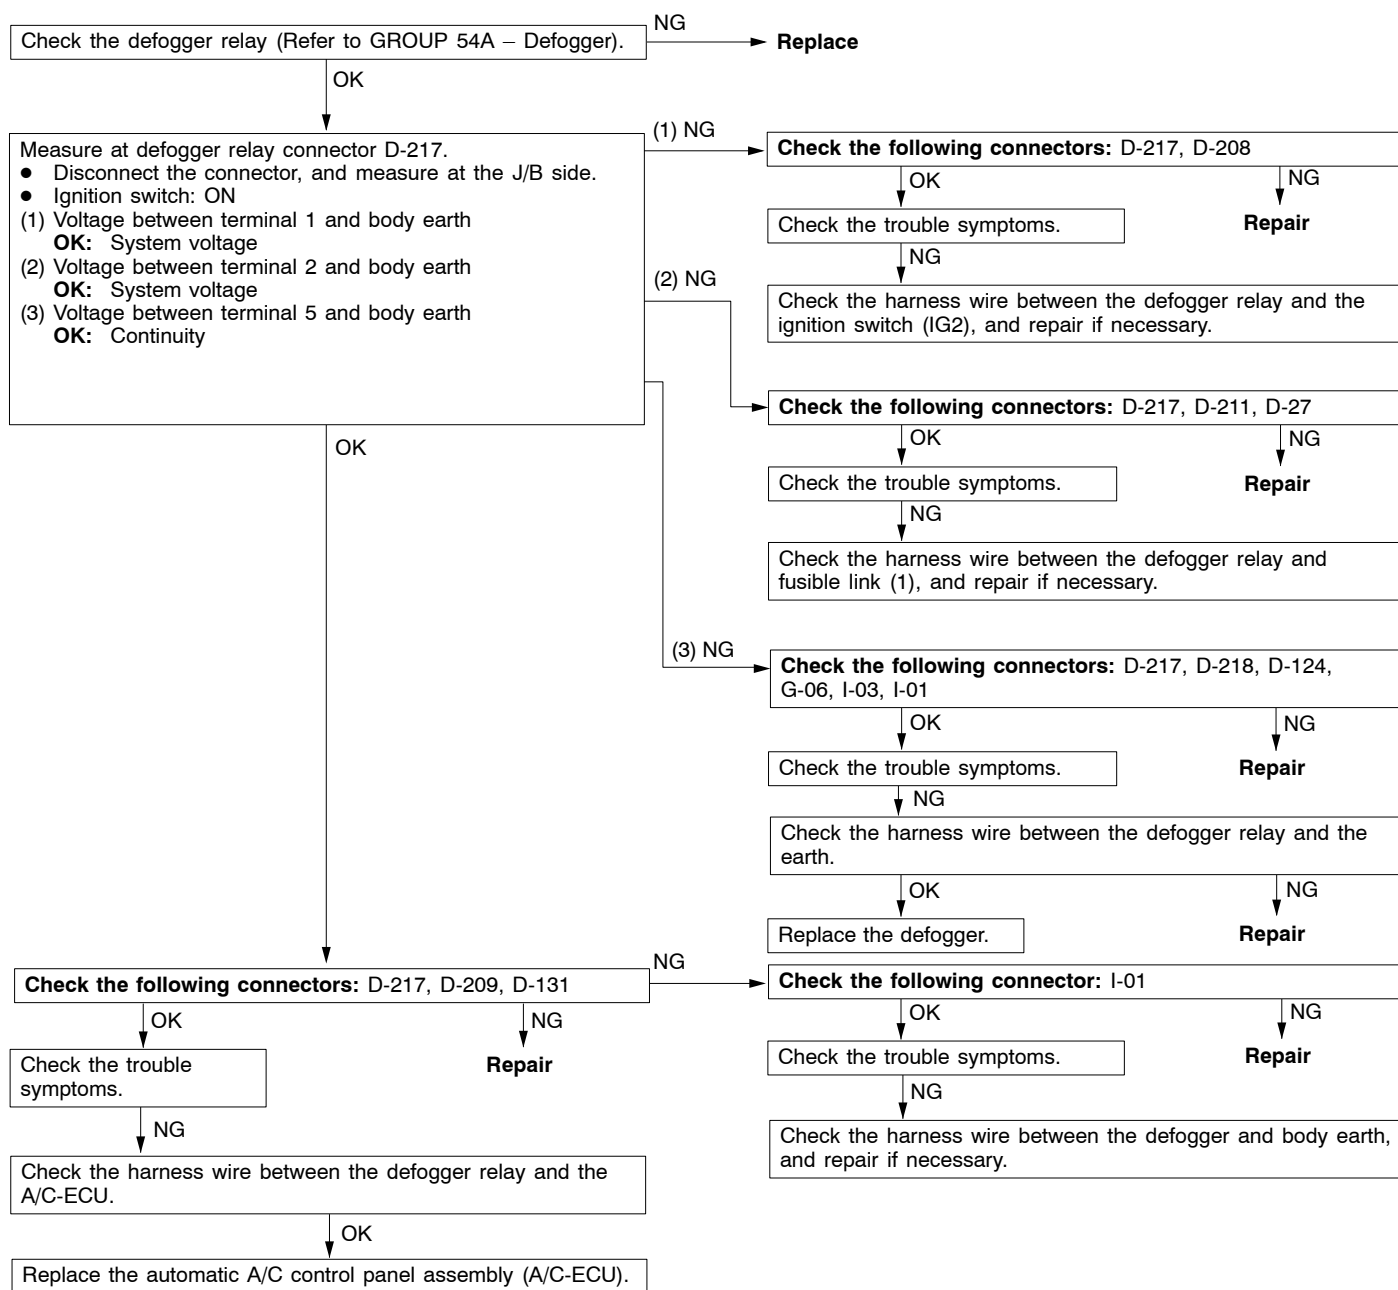

Inspection procedure 10


The condenser fan does not operate <4M40, 4M41>.	Probable cause
If the condenser fan does not operate, the condenser fan relay or motor may be defective.	<ul style="list-style-type: none"> The condenser fan relay is defective. Malfunction of harness or connector Malfunction of engine-A/T-ECU

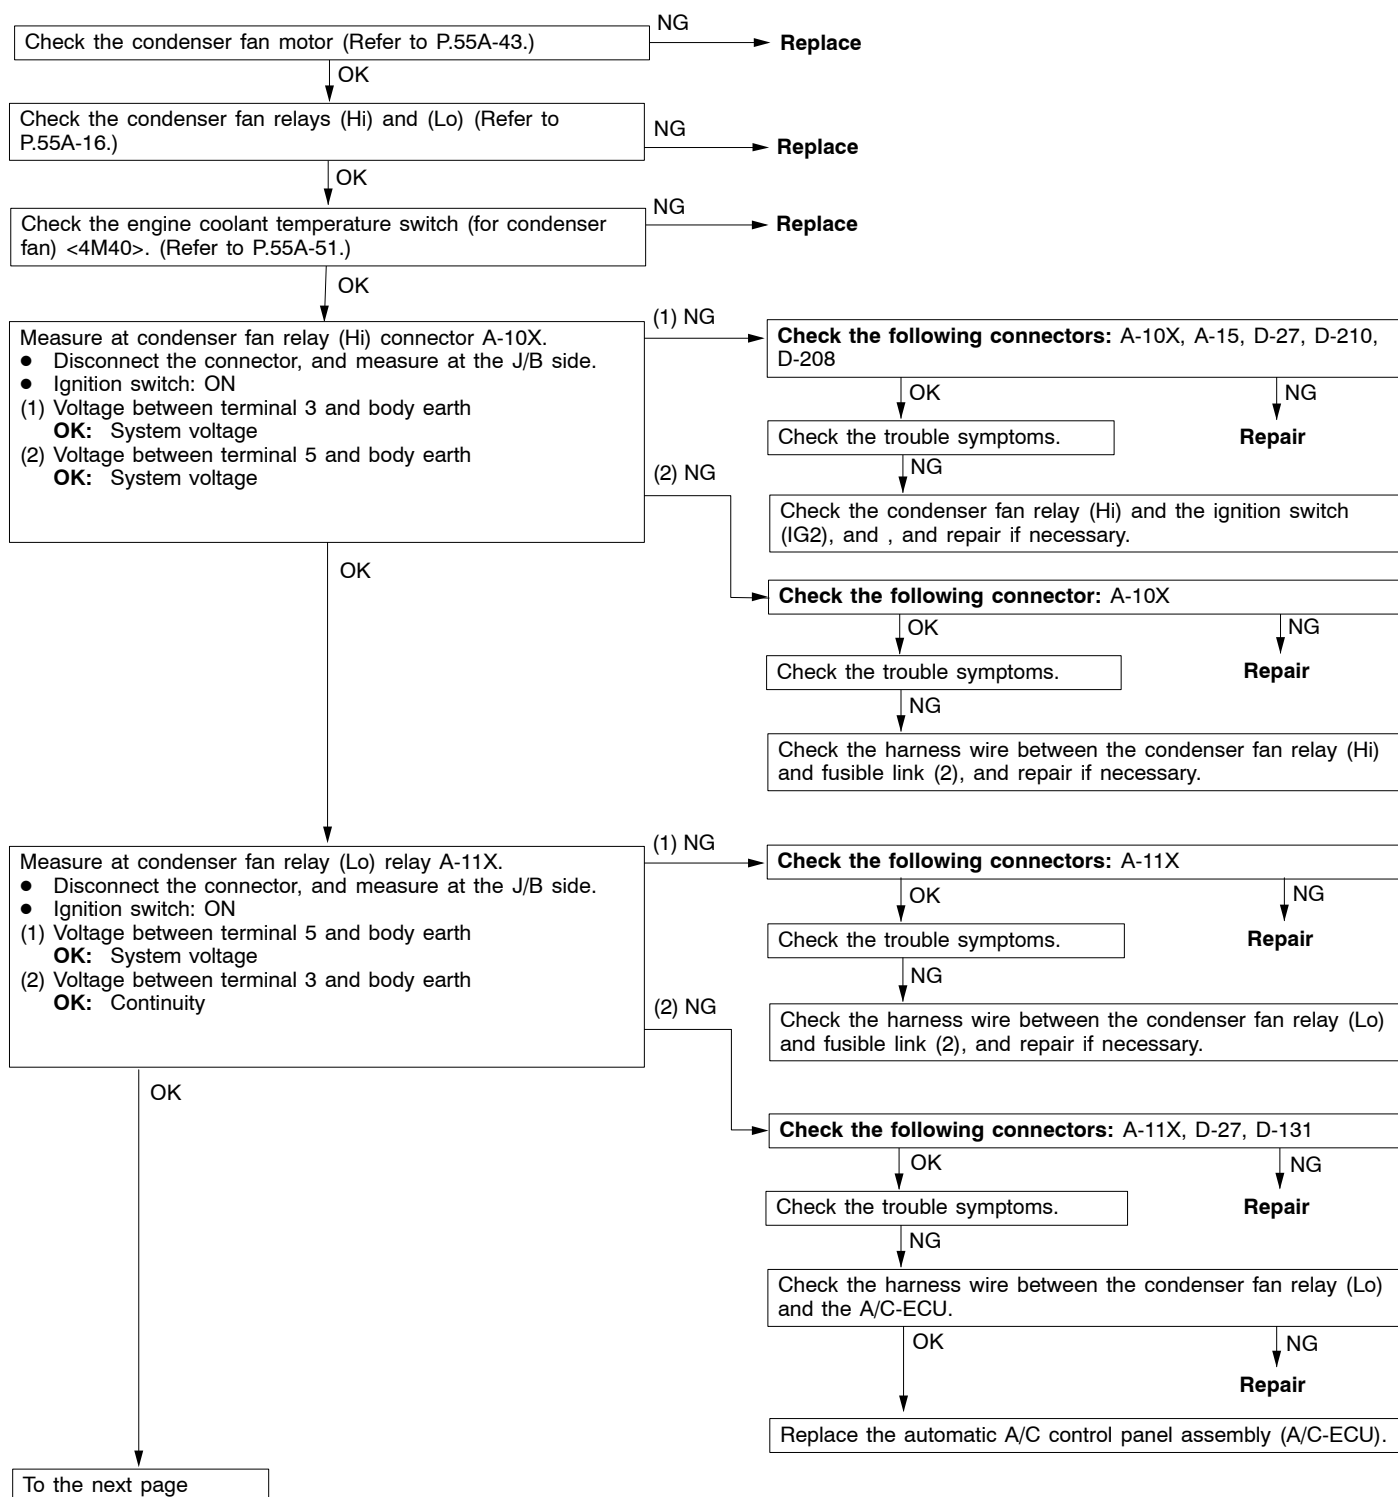

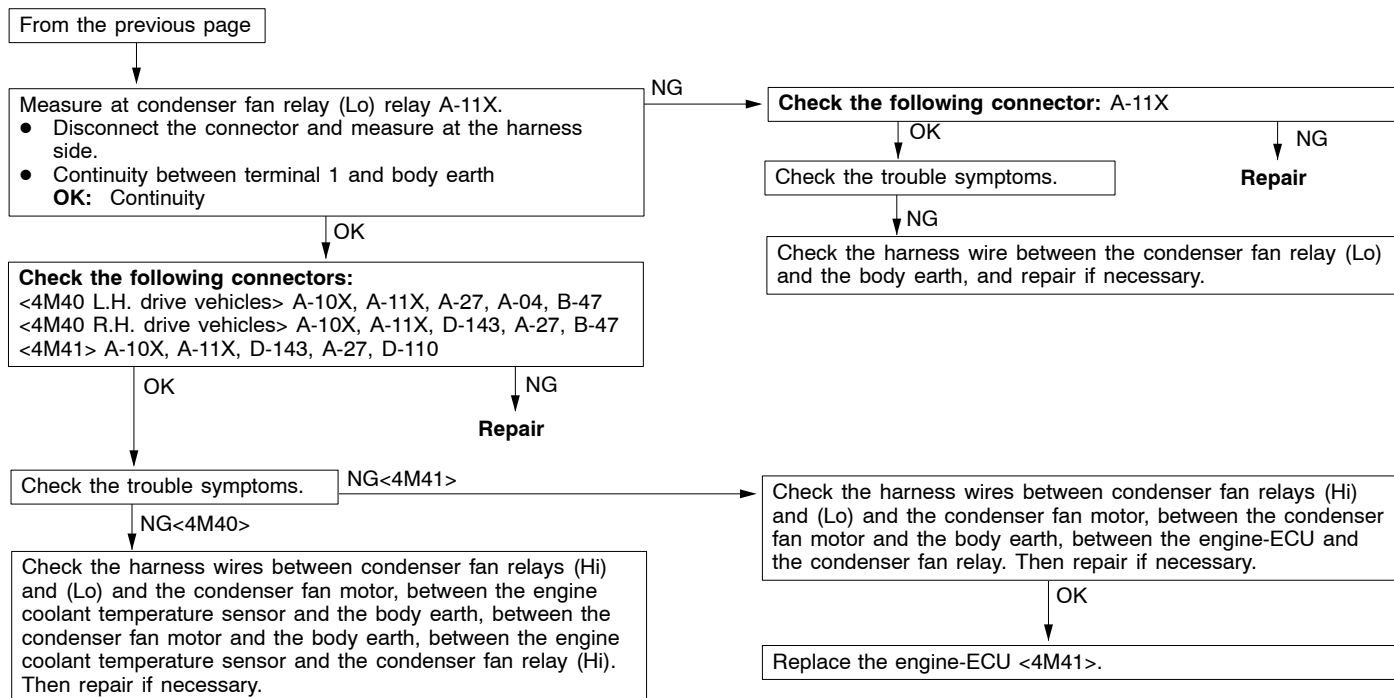

Inspection procedure 11

The condenser fan does not operate <6G7>.	Probable cause
If the condenser fan does not operate, the condenser fan relay or motor may be defective.	<ul style="list-style-type: none"> • The condenser fan relay is defective. • Malfunction of harness or connector • Malfunction of engine-A/T-ECU

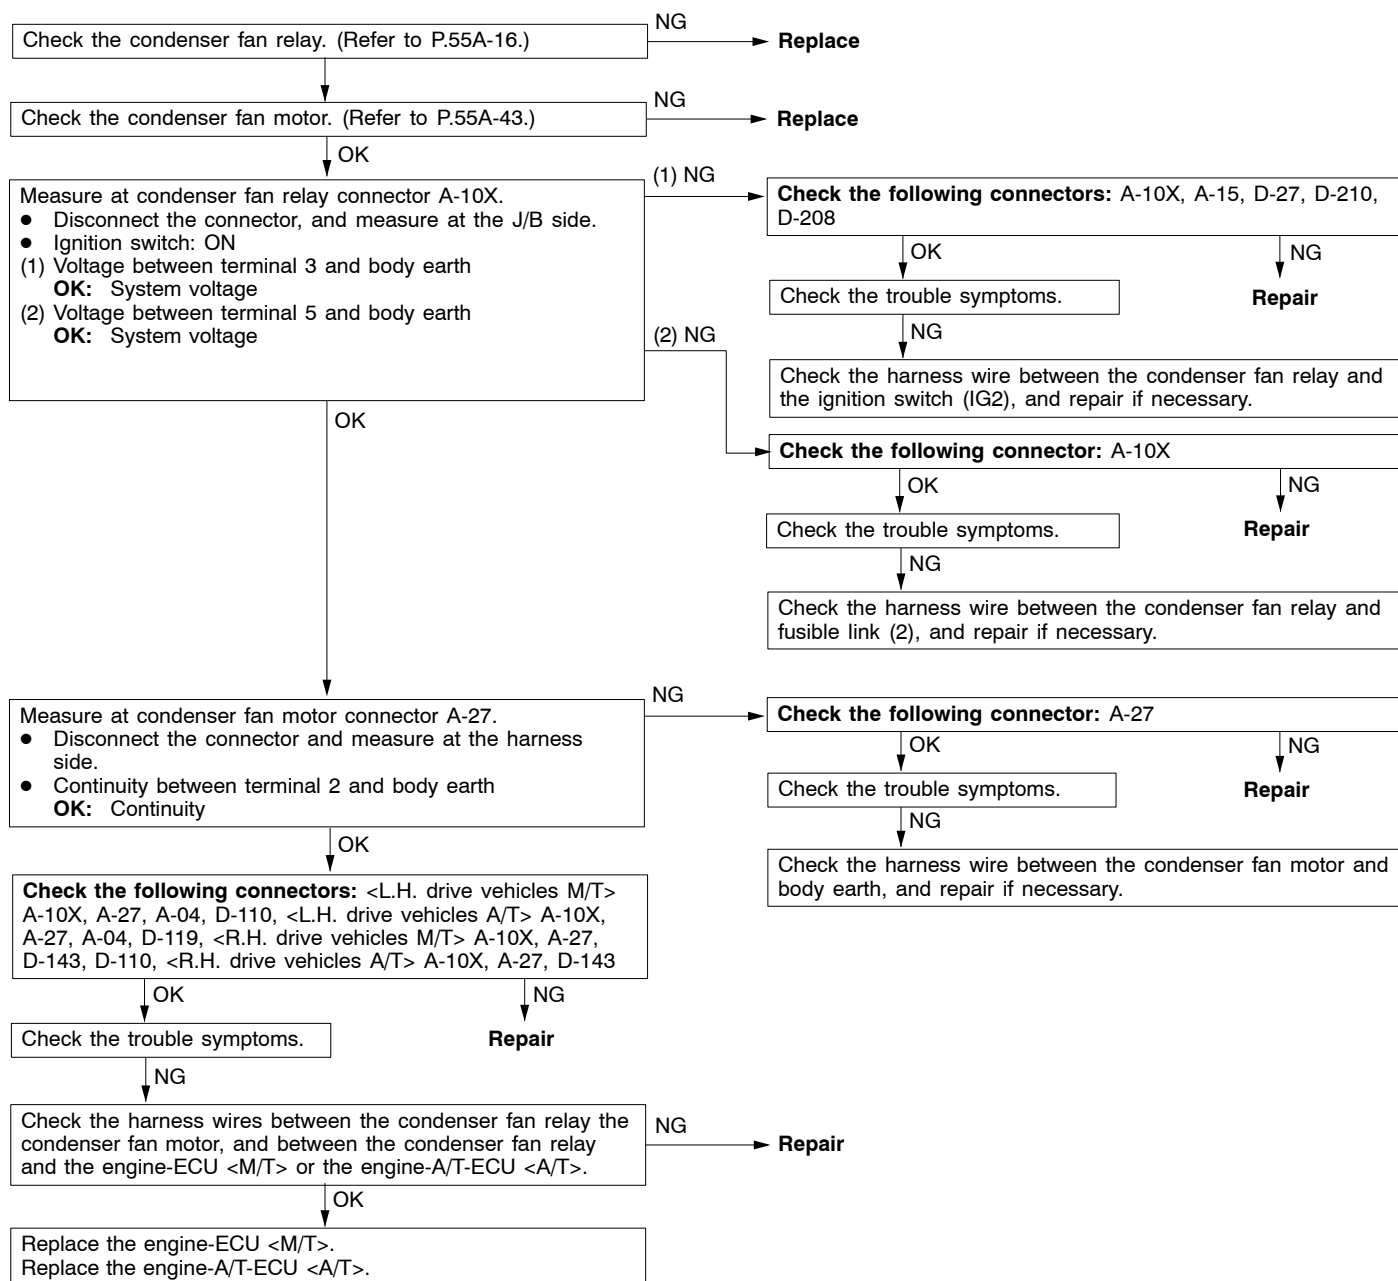



DATA LIST REFERENCE TABLE

Item No.	Check item	Inspection contents	
11	Inside air temperature sensor	Ignition switch: ON	Inside air temperature and temperature displayed on the MUT-II are identical.
13	Outside air temperature sensor	Ignition switch: ON	Outside air temperature and temperature displayed on the MUT-II are identical.
15	Heater water temperature sensor	Ignition switch: ON	Heater core surface temperature and temperature displayed on the MUT-II are identical.
21	Air thermo sensor	Ignition switch: ON	Evaporator outlet temperature and temperature displayed on the MUT-II are identical.
25	Photo sensor	Ignition switch: ON	Amount of incident light is proportional to voltage displayed on the MUT-II.
31	Potentiometer for the air mix damper	Ignition switch: ON Damper position: MAX. HOT	Opening angle: Approximately 100%
		Ignition switch: ON Damper position: MAX. COOL	Opening angle: Approximately 0%
32	Potentiometer for the air outlet changeover damper	Ignition switch: ON Damper position: FACE	Opening angle: Approximately 0%
		Ignition switch: ON Damper position: FOOT	Opening angle: Approximately 60%
		Ignition switch: ON Damper position: FOOT/DEF	Opening angle: Approximately 80%
		Ignition switch: ON Damper position: DEF	Opening angle: Approximately 100%

ACTUATOR TEST TABLE

Item No.	Check item	Drive Contents
01	Blower motor	Stopped
02		Low speed
03		Medium speed
04		High speed
05	Electric motor for the air mix damper	Opening angle: Approximately 0%
06		Opening angle: Approximately 50%
07		Opening angle: Approximately 100%
08	Electric motor for the air outlet changeover damper	FACE
09		FOOT
10		DEF
11	Compressor ON/OFF	OFF
12		ON
13	Inside/outside air changeover damper motor	Outside air
14		Inside air

CHECK AT A/C-ECU TERMINALS

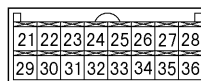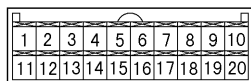

W0763AU

Terminal No.	Check item	Check conditions	Normal condition
1	Electric motor for the air mix damper (MAX. COOL)	When the damper flap is moving to the MAX. COOL position.	10 V
		When the damper flap is moving to the MAX. HOT position.	Faint voltage (0.5 V)
2	Electric motor for the air outlet changeover damper (FACE)	When the damper flap is moving to the FACE position.	10 V
		When the damper flap is moving to the DEF position.	Faint voltage (0.5 V)
3	Inside/outside air changeover damper motor (Inside air)	When the damper flap is moving to the inside air recirculation position.	Faint voltage (0.5 V)
		When the damper flap is moving to the outside air induction position.	10 V (when the motor is stopped)
4	Inside/outside air changeover damper motor (Outside air)	When the damper flap is moving to the inside air recirculation position.	10 V (when the motor is stopped)
		When the damper flap is moving to the outside air induction position.	Faint voltage (0.5 V)
5	Input signal from dual pressure switch	Dual pressure switch: OFF	0 V
		Dual pressure switch: ON	System voltage
6	Multi center display unit communication line	Ignition switch: ON	Hi: 4 – 5 V Lo: 0 – 1 V
7	Output signal to the engine-A/T-ECU	When the A/C is off.	0 V
		When the A/C is in operation. (When compressor is operating.)	System voltage
9	Input from lock sensor <petrol>	When the compressor is operating.	0 – 0.75 V (pulse signal)
10	Output to blower linear controller	When the blower is operating.	0 – 3.5 V (Effective alternating voltage)
11	Electric motor for the air mix damper (MAX. HOT)	When the damper flap is moving to the MAX. COOL position.	Faint voltage (0.5 V)
		When the damper flap is moving to the MAX. HOT position.	10 V
12	Electric motor for the air outlet changeover damper (DEF)	When the damper flap is moving to the FACE position.	Faint voltage (0.5 V)
		When the damper flap is moving to the DEF position.	10 V
13	Engine-ECU	Blower switch: ON Air outlet temperature: FOOT, FOOT/ DEF, DEF Set temperature: MAX. HOT (32°C)	System voltage

Terminal No.	Check item	Check conditions	Normal condition
14	Blower relay	When the blower is stopped	System voltage
		When the blower is operating	0 V
15	Rear defogger	Rear defogger: OFF	System voltage
		Rear defogger: ON	1.5 V or less
16	Multi center display unit communication line	Ignition switch: ON	Hi: 4 – 5 V Lo: 0 – 1 V
17	Multi center display unit communication line	Ignition switch: ON	Hi: 4 – 5 V Lo: 0 – 1 V
18	Multi center display unit communication line shield	At all times	0 V
19	Diagnosis output	Ignition switch: ON	A voltmeter needle fluctuates between 0 and 12 V.
20	Input from A/C compressor relay	When the A/C is off	0 V
		When the A/C is in operation (When compressor is operating)	System voltage
21	Power supply to potentiometer	At all times	5 V
22	Input from outside air temperature sensor	Sensor temperature: 25°C (1.7 kΩ)	1.9 V
23	Input from heater water temperature sensor	Sensor temperature: 25°C (5 kΩ)	2.8 V
24	Input from potentiometer for air mix damper	When the damper flap is moving to the MAX HOT position	0.7 – 1.3 V
25	Power supply to illumination	Lighting switch: ON	System voltage
26	Power supply to ignition switch (IG2)	Ignition switch: ON	System voltage
27	Power supply to ignition switch (ACC)	Ignition switch: ACC	System voltage
28	Backup power supply	At all times	System voltage
29	Earth to sensor and potentiometer	At all times	0 V
30	Input from air thermo sensor	Sensor temperature: 25°C (1.5 kΩ)	2.2 V
31	Photo sensor (+)	During 800 kcal/m ² ·h	1 V
32	Input from potentiometer for the air outlet changeover damper	When the damper flap is moving to the DEF position	0.7 – 1.3 V
33	Diagnosis input	Ignition switch: ON	0 V
34	Compressor lock signal (ignition signal)	Engine speed: 3,000 r/min	0.3 – 3.0
35	Illumination earth	At all times	Continuity
36	Earth	At all times	Continuity

CHECK AT ENGINE-A/T-ECU OR ENGINE-ECU TERMINALS

Refer to GROUP 13A – Troubleshooting <6G7> or GROUP 13B – Troubleshooting <4M41>.

TROUBLESHOOTING <REAR A/C>


INSPECTION CHART FOR TROUBLE SYMPTOMS

Trouble symptom	Inspection procedure No.	Reference page
The rear A/C does not operate at all.	1	55B-22
The rear A/C outlet air temperature can not be set.	2	55B-23
The rear blower does not operate.	3	55B-24
Rear blower air volume can not be changed.	4	55B-25
Air outlet vents can not be changed in proportion to the temperature adjusting switch.	5	55B-25

INSPECTION PROCEDURES FOR TROUBLE SYMPTOMS


Inspection procedure 1

The rear A/C does not operate at all.	Probable cause
The rear fan switch or front rear fan switch circuit, or the power supply system (including earth) for the rear A/C control unit may be defective. Besides that, the rear A/C control unit may not be operating correctly due to a defective harness (such as short circuit).	<ul style="list-style-type: none"> • Malfunction of the rear fan switch • Malfunction of the front rear fan switch • Malfunction of harness or connector • Malfunction of the rear A/C control unit

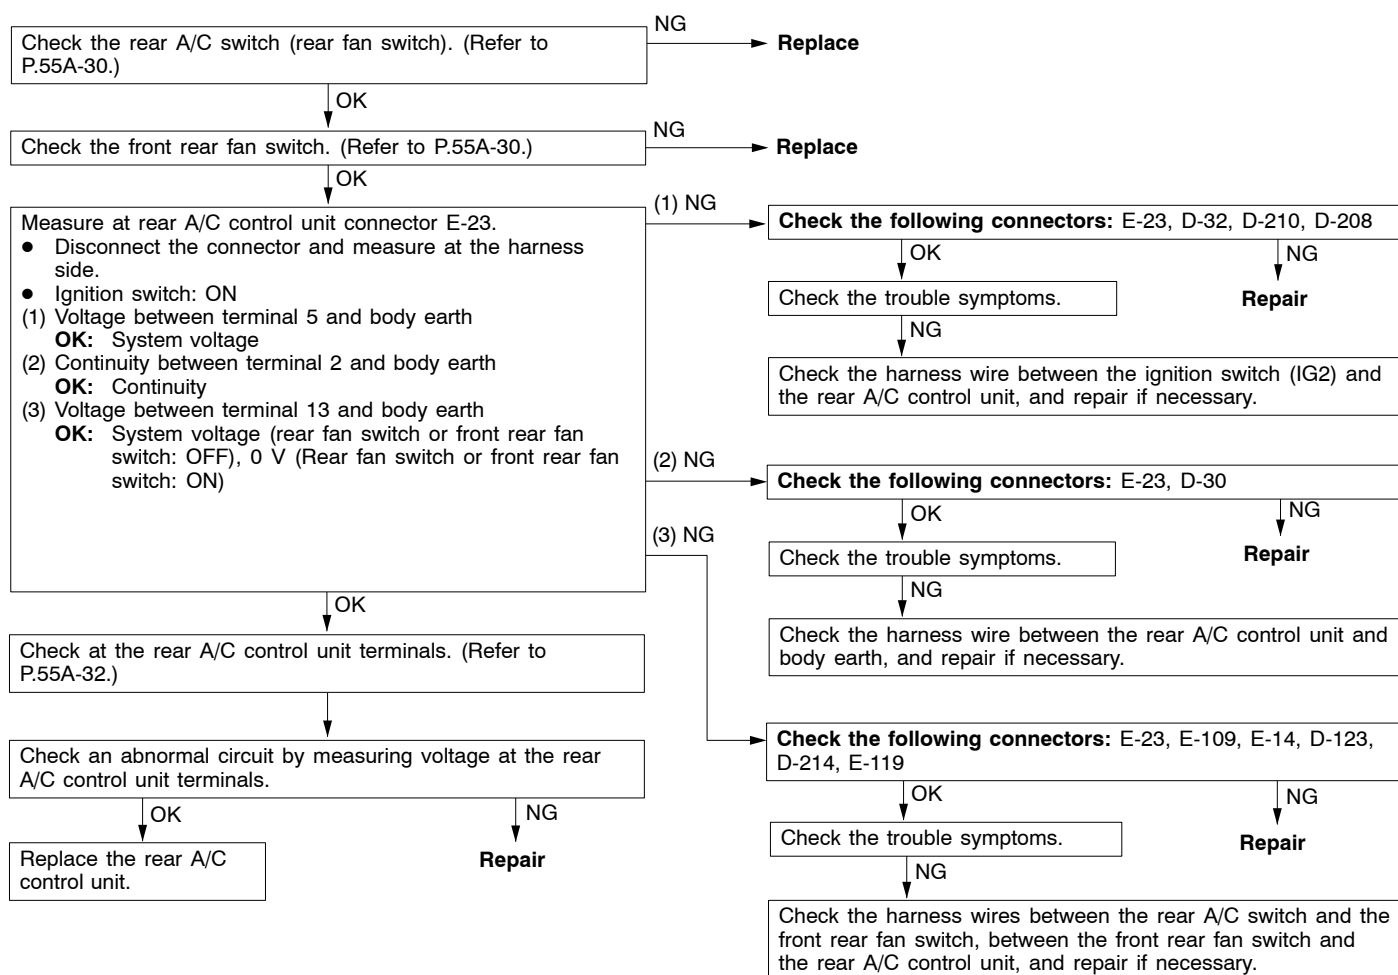


Inspection procedure 2

The rear A/C outlet air temperature can not be set.	Probable cause
If the air outlet temperature can not be changed after a temperature control switch is operated, the temperature control switch, the air thermo sensor, the magnet valve or the air mix damper maybe defective.	<ul style="list-style-type: none"> • Malfunction of the rear A/C switch • The air thermo sensor is defective. • Magnet valve • Malfunction of the electric motor for the air mix damper • Malfunction of harness or connector • Malfunction of the rear A/C control unit

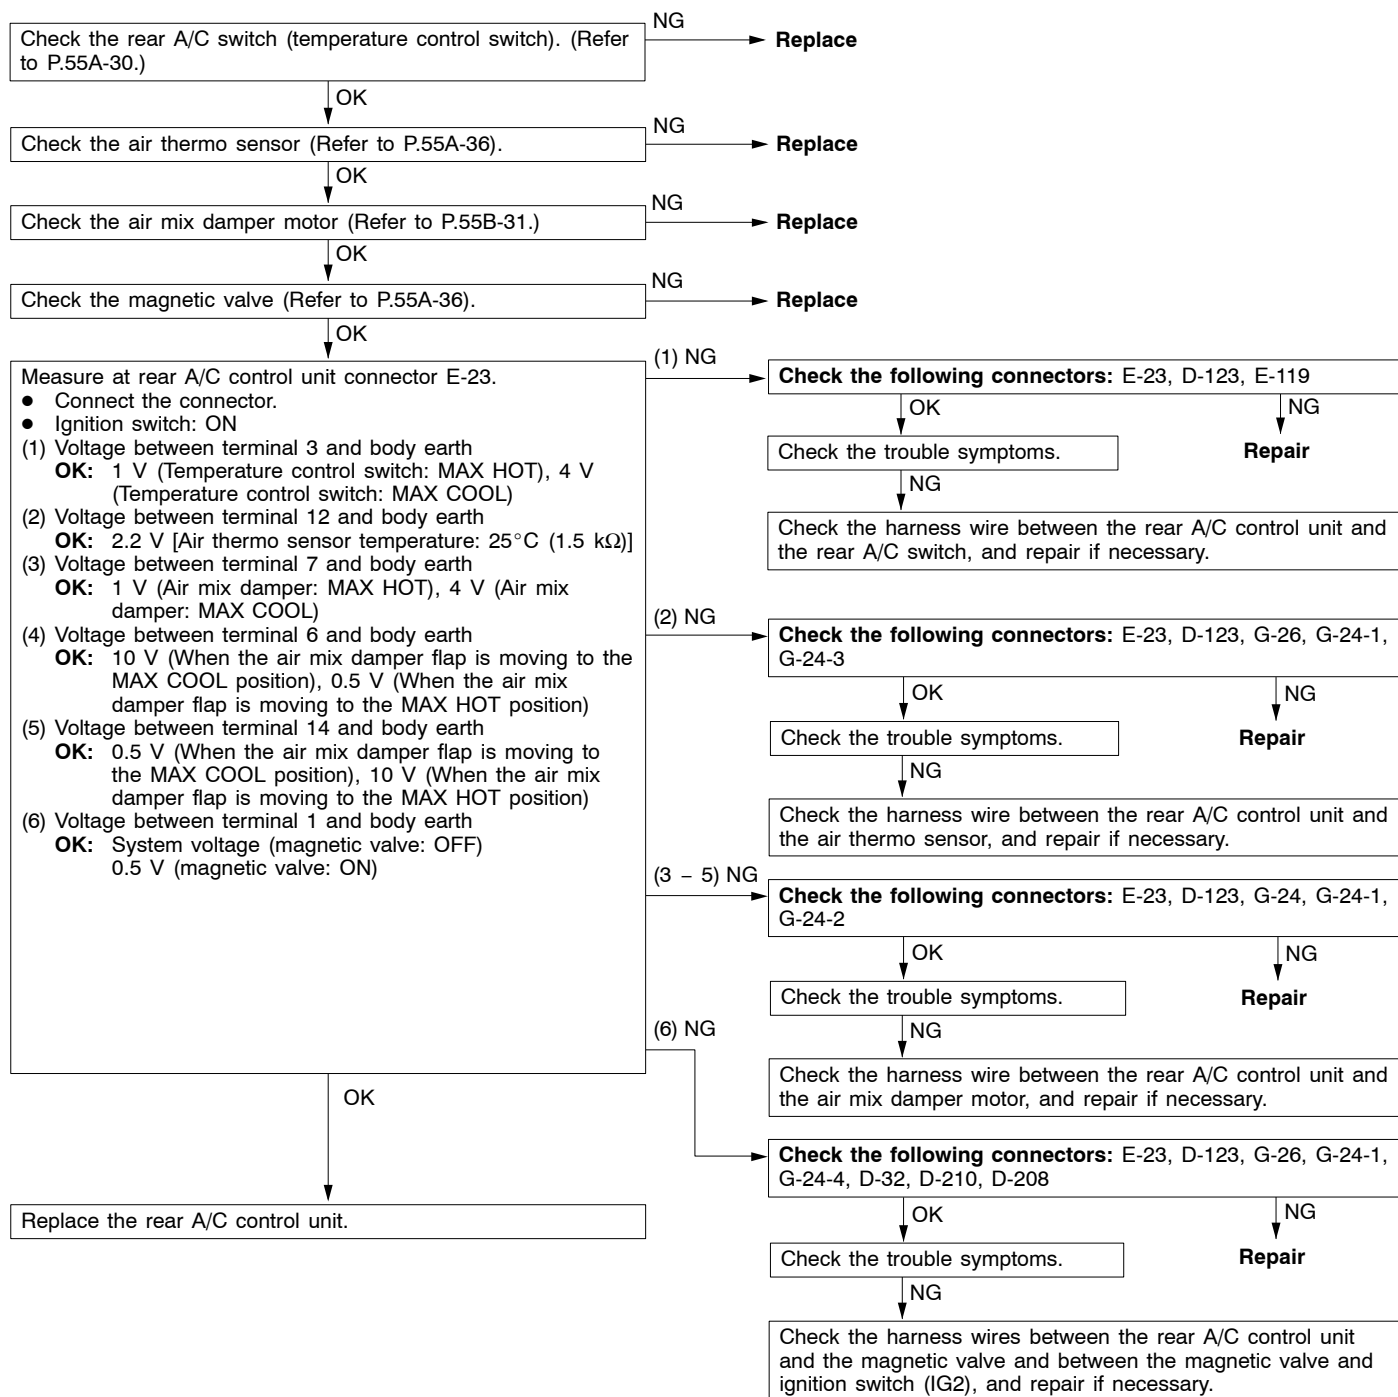


Inspection procedure 3

The rear blower does not operate.	Probable cause
If no air comes out of the air vents even if the rear fan switch or the front rear fan switch is turned on, the rear blower relay circuit may be defective.	<ul style="list-style-type: none"> • Malfunction of the rear blower relay • The blower motor is defective. • Malfunction of the rear A/C switch • Malfunction of harness or connector

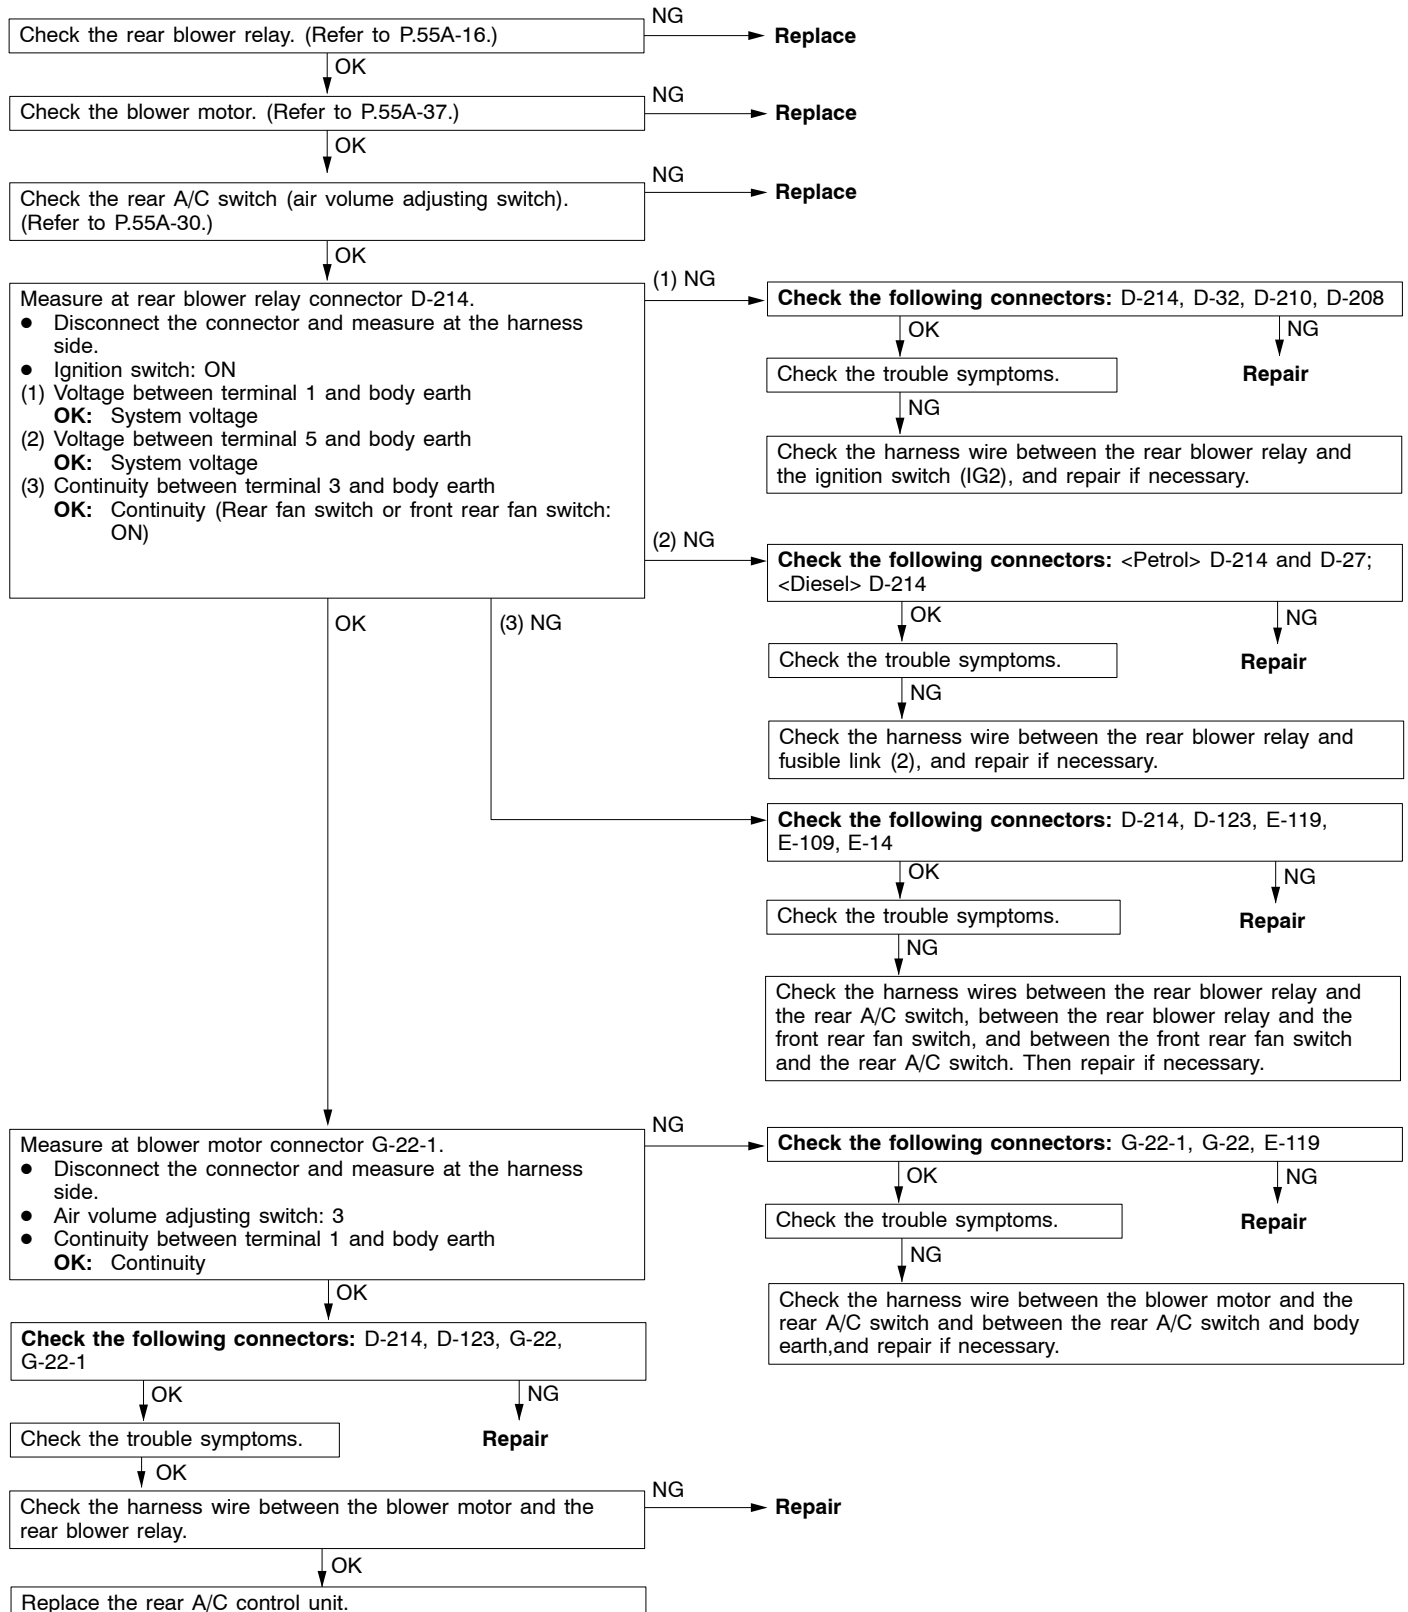


Inspection procedure 4

The rear blower air volume can not be changed.	Probable cause
If the air volume can not be controlled, the air volume adjusting switch or the resistor may be defective.	<ul style="list-style-type: none"> • Malfunction of the rear A/C switch • Malfunction of the resistor • Malfunction of harness or connector

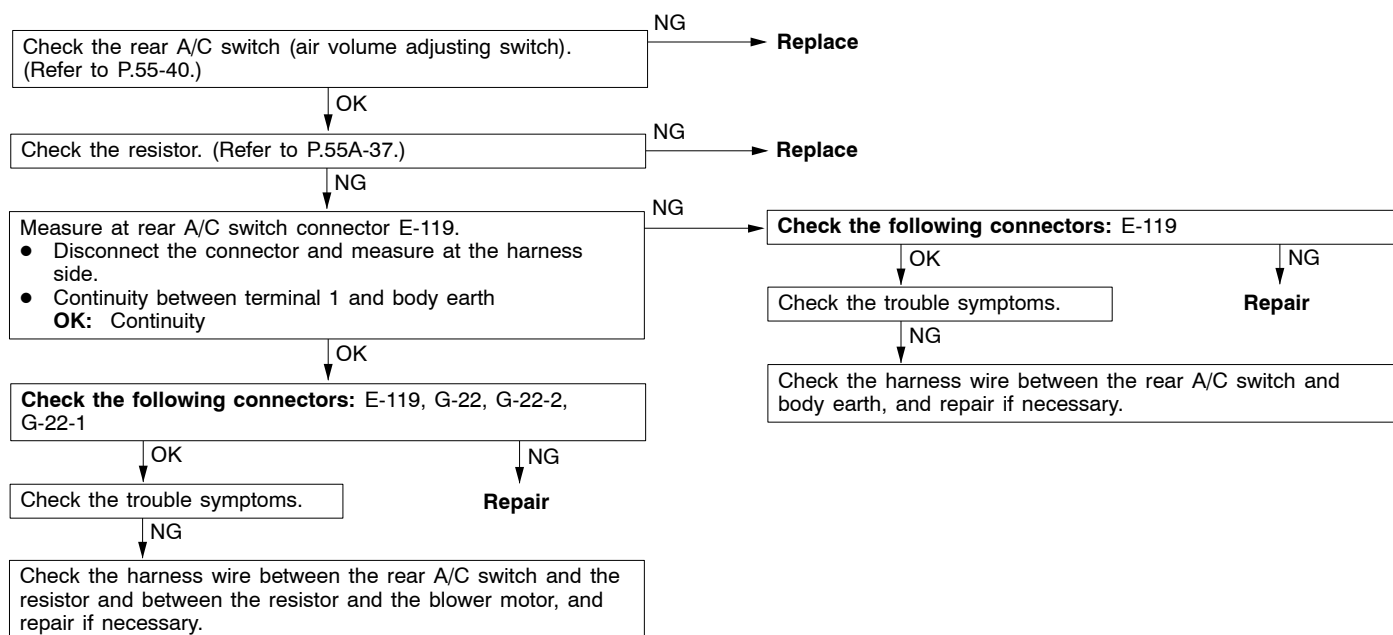


Inspection procedure 5

Air outlet vents can not be changed in proportion to the temperature adjusting switch.	Probable cause
If the air outlet temperature can not be changed after a temperature control switch is operated, the air outlet changeover damper may be defective.	<ul style="list-style-type: none"> • Malfunction of the electric motor for the air outlet changeover damper • Malfunction of harness or connector • Malfunction of the rear A/C control unit

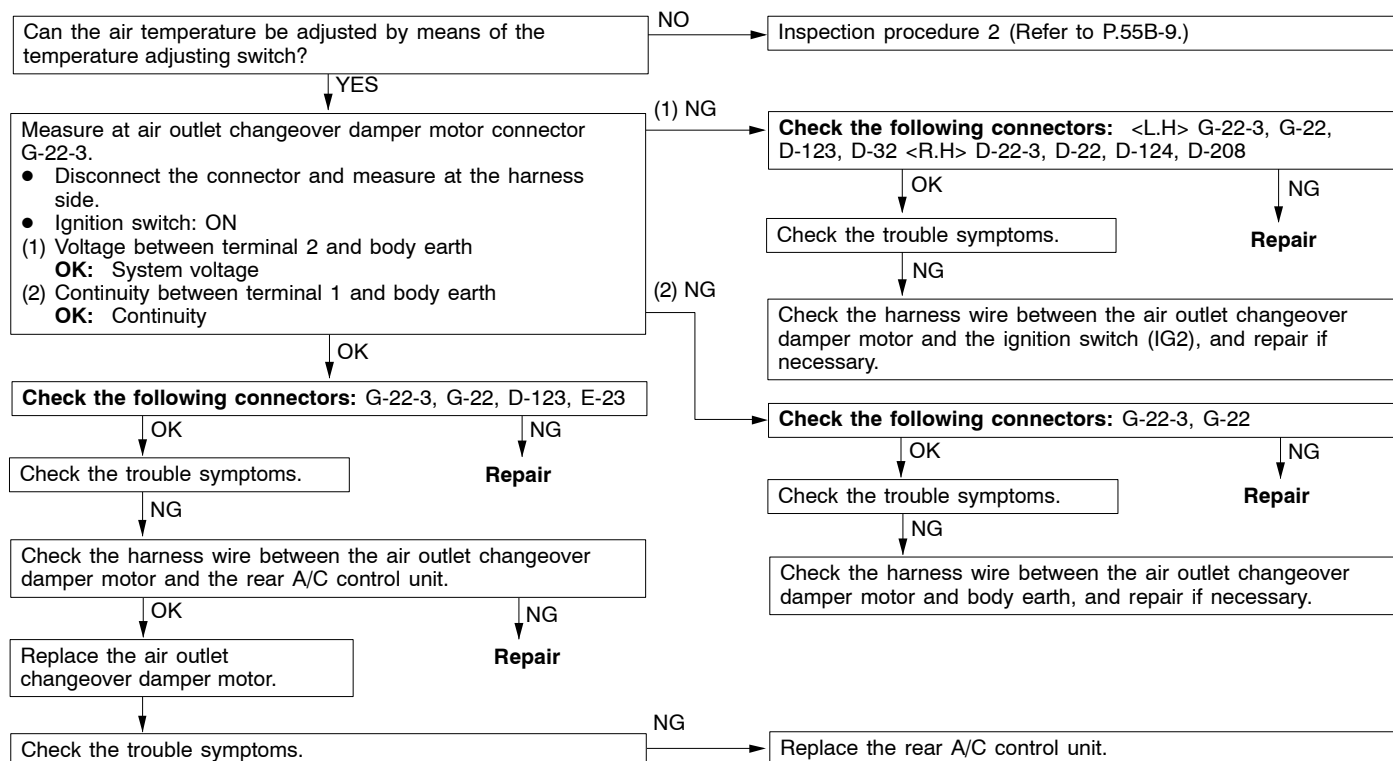


CHECK AT THE REAR A/C CONTROL UNIT TERMINALS

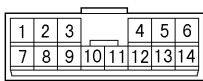

X1136CA

Terminal No.	Check item	Check conditions	Normal condition
1	Magnetic valve	Magnet valve: OFF	System voltage
		Magnet valve: ON	Faint voltage (0.5 V)
2	Earth	At all times	Continuity
3	Input from temperature adjusting switch	Temperature adjusting switch: MAX. HOT	1 V
		Temperature adjusting switch: MAX. COOL	4 V
4	Power supply to potentiometer	At all times	5 V
5	Power supply to ignition switch (IG2)	Ignition switch: ON	System voltage
6	Electric motor for the air mix damper (MAX. COOL)	When the damper flap is moving to the MAX. COOL position.	10 V
		When the damper flap is moving to the MAX. HOT position.	Faint voltage (0.5 V)
7	Input from potentiometer for air mix damper	Air mix damper: MAX. HOT	1 V
		Air mix damper: MAX. COOL	4 V
8	Earth to sensor and potentiometer	At all times	0 V
9	Signal from air outlet changeover damper motor	Ignition switch: ON	0 – 12 V
10	Signal from air outlet changeover damper motor	Ignition switch: ON	0 – 12 V
11	Signal from air outlet changeover damper motor	Ignition switch: ON	0 – 12 V
12	Input from air thermo sensor	Sensor temperature: 25°C (1.5 kΩ)	2.2 V
13	Input from rear fan switch and front rear fan switch	Rear fan switch or front rear fan switch: ON	0 V
14	Electric motor for the air mix damper (MAX. HOT)	When the damper flap is moving to the MAX. COOL position.	Faint voltage (0.5 V)
		When the damper flap is moving to the MAX. HOT position.	10 V

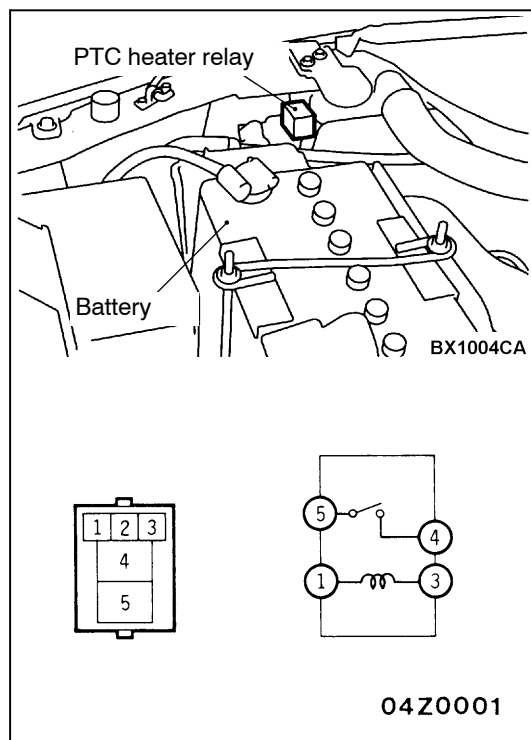

ON-VEHICLE SERVICE

PTC HEATER RELAY CONTINUITY CHECK <4M41>

System voltage	Terminal No.			
	1	3	2	5
When current is not supplied	○	○		
When current is supplied	⊕	⊖	○	○

NOTE

The PTC heater is located at the heater core.

IDLE-UP OPERATION CHECK

<6G7(GDI)>

- (1) Set the vehicle in the following condition:
- (2) Check that the idle speed is within the standard value.

Standard value: 600 ± 50 r/min

NOTE

- 1) The idle speed is controlled by the ISC system and should not be adjusted.
- 2) Run the engine at idle, and wait for at least two minutes before the check.
- (3) The idle speed should be within the standard value when the A/C switch is turned on and the A/C is operating.

Standard value:

<While the A/C is under low load>
700 ± 50 r/min

<While the A/C is under medium load>
800 ± 50 r/min

<While the A/C is under high load>
1,000 ± 50 r/min

<4M41>

- (1) Set the vehicle in the following condition:
- (2) Check that the idle speed is within the standard value.

Standard value: 750 ± 50 r/min

NOTE

If the idle speed is not within the standard value, adjust the idle speed. (Refer to GROUP 13C – On-vehicle Service.)

- (3) The idle speed should be within the standard value when the A/C switch is turned on and the A/C is operating.

Standard value:

<While the A/C is under low or medium load>

800 ± 50 r/min

<While the A/C is under high load>

1,000 ± 50 r/min

- (4) When the front A/C is set as follows, the idle speed should be within the standard value.

Blower switch: ON


Air outlet temperature: FOOT, FOOT/DEF, DEF

Set temperature: MAX. HOT (32°C)

Heat switch: ON

FRONT A/C


AUTOMATIC A/C CONTROL PANEL ASSEMBLY (A/C-ECU) REMOVAL AND INSTALLATION

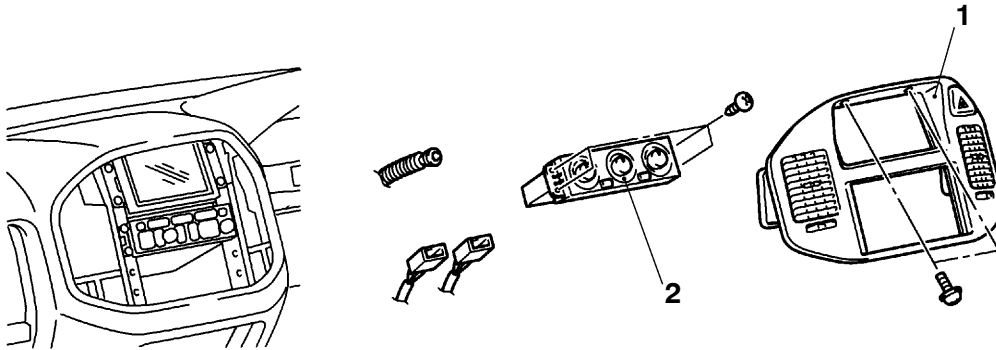


AX1027CA

Removal steps

1. Center panel (Refer to GROUP 52A – Instrument Panel.)
2. Automatic A/C control panel assembly (A/C-ECU)

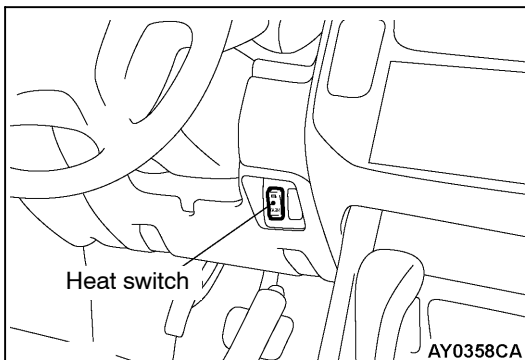

AY0358CA

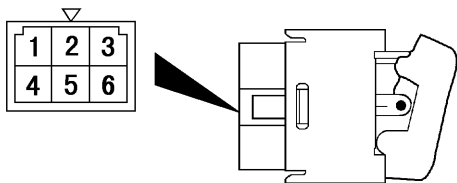


X1226CA

HEAT SWITCH <4M41>

INSPECTION

HEAT SWITCH CHECK

Switch position	Terminal No.						
	1	2	IND	6	3	ILL	4
OFF position	○	○	○	○	○	○	○
ON position	○	○	○	○	○	○	○

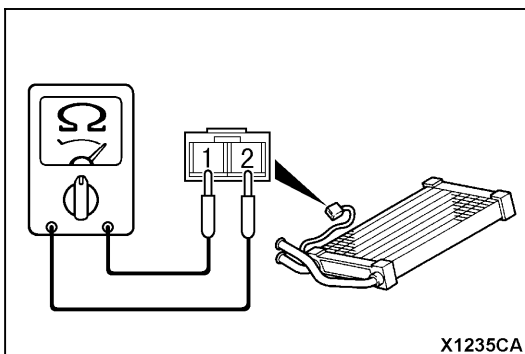

X1235CA



PTC HEATER <4M41>

INSPECTION

PTC HEATER CHECK <4M41>

Continuity should be present between the terminals.

BLOWER LINEAR CONTROLLER REMOVAL AND INSTALLATION

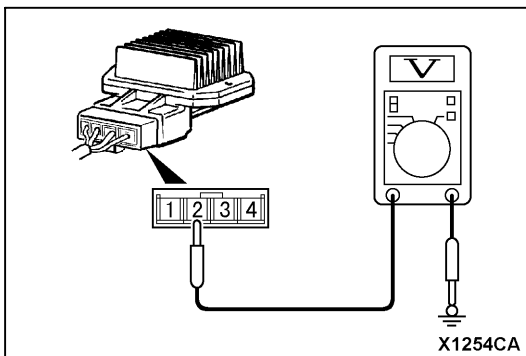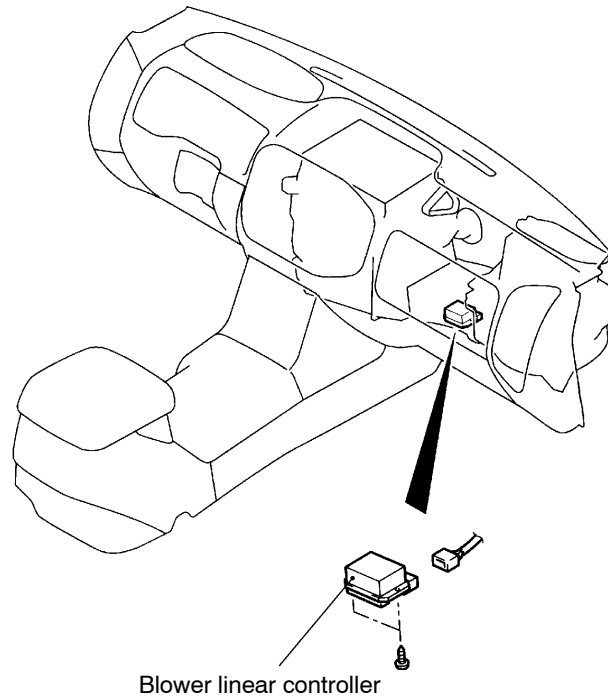


INSPECTION

BLOWER LINEAR CONTROLLER INSPECTION

When the connector is connected and the ignition switch is turned ON, the voltage at terminal 2 should meet the following table.


Blower switch position	Voltage at terminal No.2 V
Low speed	4.0
Medium speed	7.9
High speed	13.7

AIR MIX DAMPER MOTOR AND AIR OUTLET CHANGEOVER DAMPER MOTOR REMOVAL AND INSTALLATION

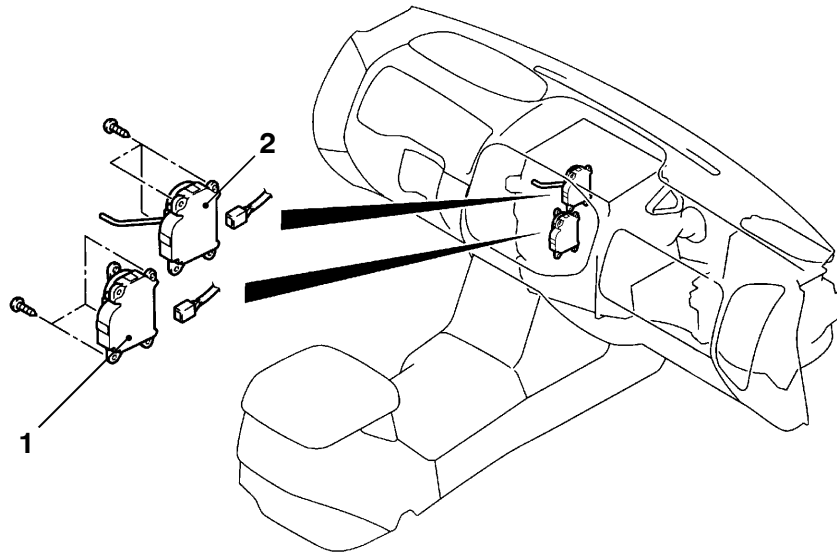

Removal steps

- Under cover (Refer to GROUP 52A – Instrument Panel.)
- 1. Electric motor for the air mix damper
- 2. Electric motor for the air outlet changeover damper

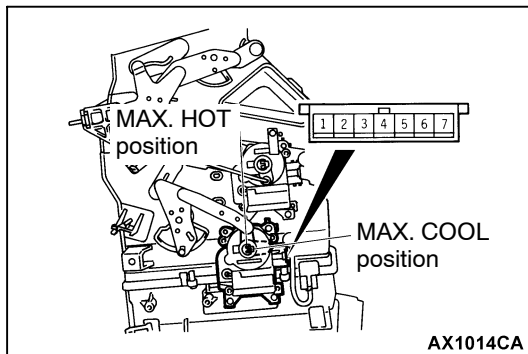

INSPECTION

AIR MIX DAMPER MOTOR INSPECTION

Motor Check

Battery connection terminal		Lever operation
1	2	
⊕	⊖	Rotate to the HOT position.
⊖	⊕	Rotate to the COOL position.


Caution

If the lever reaches the stop position, disconnect the battery voltage.

Potentiometer Check

When the resistances between terminals 3 and 5 as well as terminals 3 and 7 are measured at the previous check, the resistance value should change gradually within the standard value.

Standard value: Approximately 0.96 – 5.76 k Ω

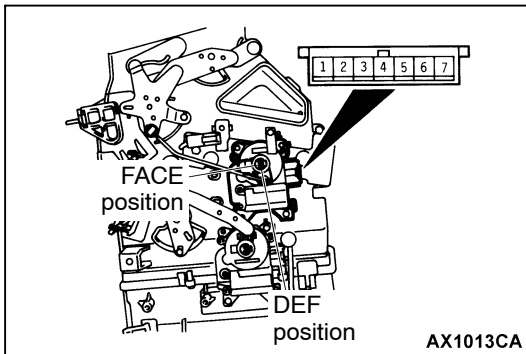**Air Outlet Changeover Damper Motor Check****Motor check**

Battery connection terminal		Lever operation
1	2	
\oplus	\ominus	Rotate to the DEF position.
\ominus	\oplus	Rotate to the FACE position.

Caution


If the lever reaches the stop position, disconnect the battery voltage.

Potentiometer check

When the resistances between terminals 3 and 5 as well as terminals 3 and 7 are measured at the previous check, the resistance value should change gradually within the standard value.

Standard value: Approximately 0.96 – 5.76 k Ω

AIR THERMO SENSOR AND HEATER WATER TEMPERATURE SENSOR REMOVAL AND INSTALLATION

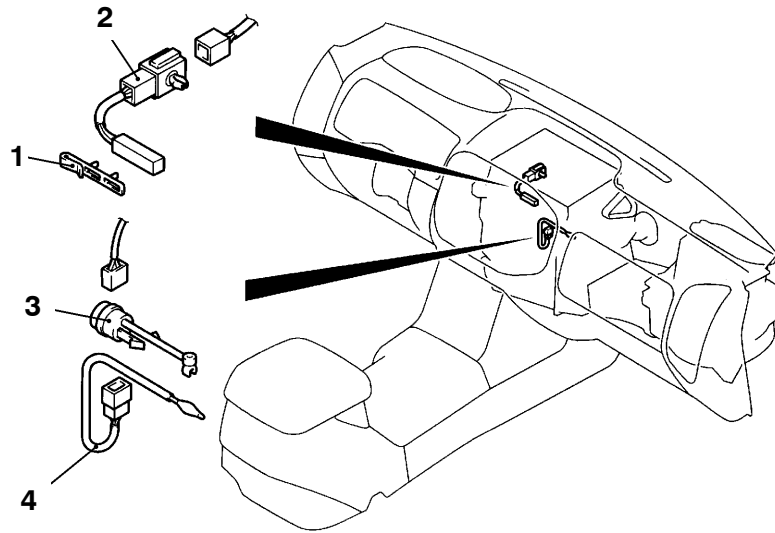

AY0359CA

Heater water temperature sensor removal steps

- Under cover (Refer to GROUP 52A – Instrument Panel.)
1. Heater water temperature sensor clip
 2. Heater water temperature sensor

Air thermo sensor removal steps


- Under cover (Refer to GROUP 52A – Instrument Panel.)
3. Air thermo sensor clip
 4. Air thermo sensor



INSTALLATION SERVICE POINTS

►A◀ HEATER WATER TEMPERATURE SENSOR CLIP INSTALLATION

Insert the heater water temperature sensor into the mounting hole on the heater unit, and secure the sensor with the clip.

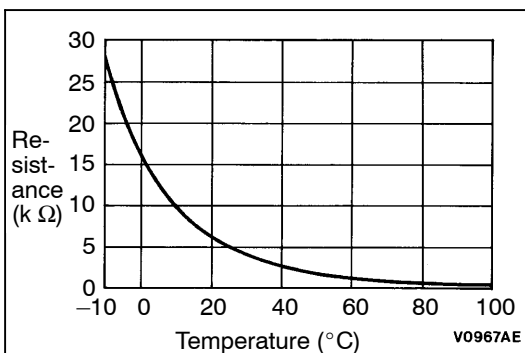

INSPECTION

HEATER WATER TEMPERATURE SENSOR CHECK

Measure the resistance between the sensor terminals under at least two temperatures. The resistance values should meet the left graph.

NOTE

The temperature should be within the shown range.

PHOTO SENSOR

REMOVAL AND INSTALLATION

(Refer to GROUP 54A – Headlamp.)

INSPECTION

REFLECTION SENSOR CHECK

The blower speed should drop when the receiver section of the photo sensor is covered with your hand. If the speed does not drop, replace the photo sensor.

OUTSIDE AIR TEMPERATURE SENSOR


INSPECTION

OUTSIDE AIR TEMPERATURE SENSOR CHECK

Measure the resistance between the sensor terminals under at least two temperatures. The resistance values should meet the left graph.


NOTE

The temperature should be within the shown range.

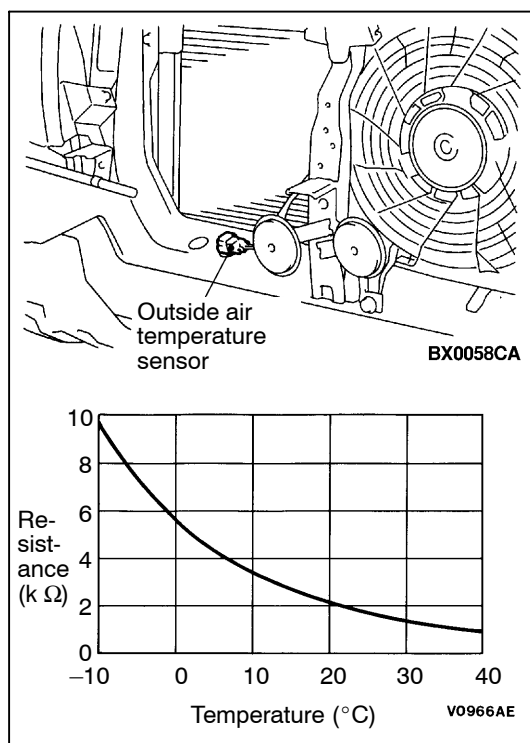

REAR A/C

ELECTRIC MOTOR FOR THE AIR OUTLET CHANGEOVER DAMPER REMOVAL AND INSTALLATION

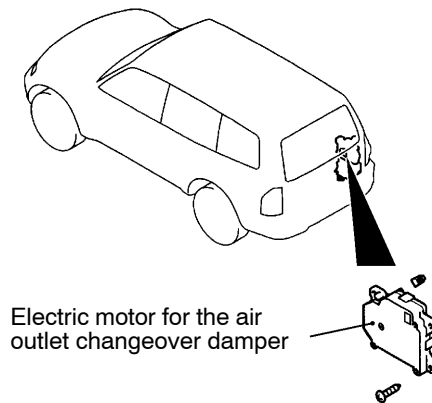

COMPRESSOR

For the 4M41 engine, refer to GROUP 55A – Compressor <4M40>. For the 6G7 (GDI) engine, refer to GROUP 55A – Compressor <6G7>.