

---

# GENERAL

## CONTENTS

<b>HOW TO USE THIS MANUAL</b> .....	<b>2</b>	Chassis Number .....	4
Model Indications .....	2	<b>MAJOR SPECIFICATIONS</b> .....	<b>5</b>
<b>VEHICLE IDENTIFICATION</b> .....	<b>3</b>	<b>PRECAUTIONS BEFORE SERVICE</b> .....	<b>7</b>
Models .....	3		

---

## HOW TO USE THIS MANUAL

### MODEL INDICATIONS

The following abbreviations are used in this manual for classification of model types.


M/T:	Indicates the manual transmission, or models equipped with the manual transmission.
A/T:	Indicates the automatic transmission, or models equipped with the automatic transmission.
SOHC:	Indicates an engine with the single overhead camshaft, or a model equipped with such an engine.
MVV:	Indicates the Mitsubishi Vertical Vortex engine, or models equipped with that engine.
MPI:	Indicates the multi-point injection, or engines equipped with the multi-point injection.
2WD:	Indicates the front wheel-drive vehicles.

**VEHICLE IDENTIFICATION****MODELS****<Hatchback>**

Model code		Engine model	Transmission model	Fuel supply system
CJ1A	MNDEL6	4G13-SOHC (1,299 ml)	F5M41 (2WD-5M/T)	MPI
	MNDGL6			
	MNDER6			
	MNJEL6			
	MNJGL6			
	MNJER6			
	MRJEL6			
	MRJER6		F4A41 (2WD-4A/T)	
CJ4A	MNJEL6	4G92-SOHC (1,597 ml)	F5M41 (2WD-5M/T)	MPI (MVV)
	MNJGL6			
	MNJER6			
	MRJEL6		F4A41 (2WD-4A/T)	
	MRJGL6			
	MRJER6			
	MNDAL6		F5M41 (2WD-5M/T)	
	MNDAR6			

**<Sedan>**

Model code		Engine model	Transmission model	Fuel supply system
CK1A	SNDEL6	4G13-SOHC (1,299 ml)	F5M41 (2WD-5M/T)	MPI
	SNDGL6			
	SNDER6			
	SNJEL6			
	SNJGL6			
	SNJER6			
	SRJEL6		F4A41 (2WD-4A/T)	
	SRJER6			

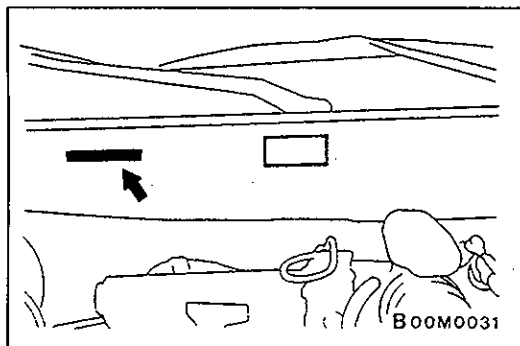**CHASSIS NUMBER**

The chassis number is stamped on the toeboard inside the engine compartment.

▲ J M B M N CJ 1 A W U 000001 ▲


1 2 3 4 5 6 7 8 9 10 11

00M0089

No.	Items		Contents
1	Fixed figure	J	Asia
2	Distribution channel	M	Japan channel
3	Destination	A	For Europe, right hand drive
		B	For Europe, left hand drive
4	Body style	M	2-door hatchback
		S	4-door sedan
5	Transmission type	N	5-speed manual transmission
		R	4-speed automatic transmission
6	Development order	CJ	COLT
		CK	LANCER
7	Engine	1	4G13: 1,299 ml petrol engine
		4	4G92: 1,597 ml petrol engine
8	Sort	A	Passenger car
9	Model year	W	1998
10	Plant	U	Mizushima Motor Vehicle Works
11	Serial number	—	—

## MAJOR SPECIFICATIONS

&lt;HATCHBACK&gt;

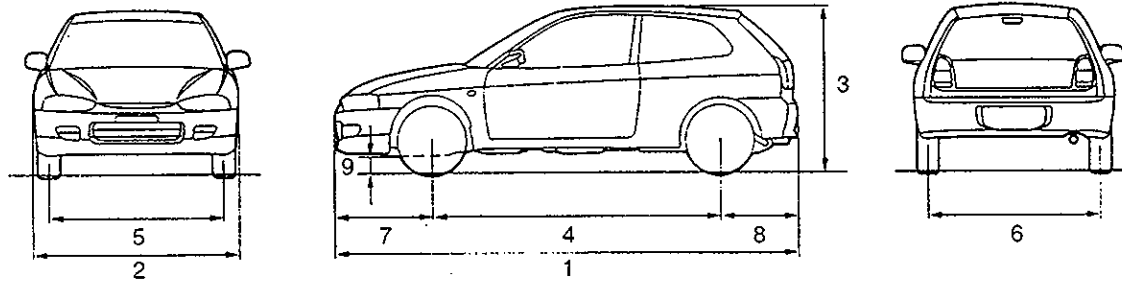

00M0035

Items			CJ1A MNDEL6, MNDGL6, MNDER6	CJ1A MNJEL6, MNJGL6, MNJER6	CJ1A MRJEL6, MRJER6	CJ4A MNJEL6, MNJGL6, MNJER6	CJ4A MRJEL6, MRJGL6, MRJER6	CJ4A MNDAL6, MNDAR6
Vehicle dimensions mm	Overall length	1	3,900	3,900	3,900	3,900	3,900	3,900
	Overall width	2	1,680	1,680	1,680	1,680	1,680	1,680
	Overall height (unladen)	3	1,365, 1,385*1	1,365, 1,385*1	1,365, 1,385*1	1,365, 1,385*1, 1,380*3, 1,400*1*3	1,365, 1,385*1, 1,380*3, 1,400*1*3	1,365, 1,385*1,
	Wheelbase	4	2,415	2,415	2,415	2,415	2,415	2,415
	Track-front	5	1,450	1,450	1,450	1,450	1,450	1,450
	Track-rear	6	1,460	1,460	1,460	1,460	1,460	1,460
	Overhang-front	7	825	825	825	825	825	825
	Overhang-rear	8	660	660	660	660	660	660
	Ground clearance (unladen)	9	150	150	150	150, 165*3	150, 165*3	150
Vehicle weight kg	Kerb weight		945	950	970	975	995	975
	Max. gross vehicle weight rating		1,445, 1,495*2	1,445, 1,495*2	1,465, 1,515*2	1,470, 1,520*2	1,480, 1,530*2	1,470, 1,520*2
	Max. axle weight rating-front		810	810	810	810	810	810
	Max. axle weight rating-rear		705, 770*2	705, 770*2	705, 770*2	705, 770*2	705, 770*2	705, 770*2
Seating capacity			5					
Engine	Model No.		4G13			4G92		
	Total displacement ml		1,299			1,597		
Transmis- sion	Model No.		F5M41		F4A41	F5M41	F4A41	F5M41
	Type		5-speed manual		4-speed automatic	5-speed manual	4-speed automatic	5-speed manual
Fuel system	Fuel supply system		Electronic controlled multipoint fuel injection					


## NOTE

\*1: Vehicles with roof spoiler

\*2: In case of towing

\*3: For vehicles with high ground suspension

## &lt;SEDAN&gt;

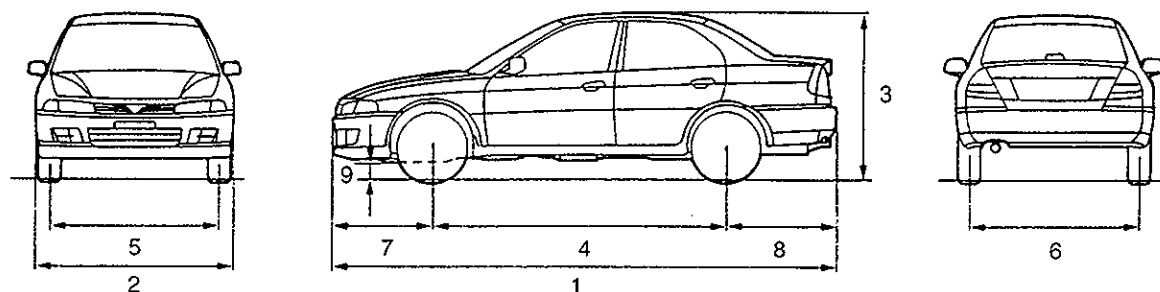

00M0036

Items		CK1A SNDEL6, SNDGL6, SNDER6	CK1A SNJEL6, SNJGL6, SNJER6	CK1A SRJEL6, SRJER6
Vehicle dimensions mm	Overall length	1 4,295	4,295	4,295
	Overall width	2 1,690	1,690	1,690
	Overall height (unladen)	3 1,395	1,395	1,395
	Wheelbase	4 2,500	2,500	2,500
	Track-front	5 1,450	1,450	1,450
	Track-rear	6 1,460	1,460	1,460
	Overhang-front	7 845	845	845
	Overhang-rear	8 950	950	950
	Ground clearance (unladen)	9 150	150	150
Vehicle weight kg	Kerb weight	995	1,000	1,020
	Max. gross vehicle weight rating	1,485, 1,535*	1,485, 1,535*	1,500, 1,550*
	Max. axle weight rating-front	820	820	820
	Max. axle weight rating-rear	720, 790*	720, 790*	720, 790*
Seating capacity		5		
Engine	Model No.	4G13		
	Total displacement ml	1,299		
Transmission	Model No.	F5M41		F4A41
	Type	5-speed manual		4-speed automatic
Fuel system	Fuel supply system	Electronic controlled multipoint fuel injection		

## NOTE

\*: In case of towing

## PRECAUTIONS BEFORE SERVICE

### SUPPLEMENTAL RESTRAINT SYSTEM (SRS), SEAT BELT WITH PRE-TENSIONER

1. Items to follow when servicing SRS
  - (1) Be sure to read GROUP 52B – Supplemental Restraint System (SRS).  
For safe operations, please follow the directions and heed all warnings.
  - (2) Wait at least 60 seconds after disconnecting the battery cable before doing any further work.  
The SRS system is designed to retain enough voltage to deploy the air bag even after the battery has been disconnected. Serious injury may result from unintended air bag deployment if work is done on the SRS system immediately after the battery cable is disconnected.
  - (3) Warning labels must be heeded when servicing or handling SRS components and seat belt with pre-tensioner. Warning labels are located in the following locations.
    - Sun visor
    - Glove box
    - SRS air bag control unit
    - Steering wheel
    - Steering gear and linkage
    - Air bag module (driver's side and front passenger's side)
    - Clock spring
    - Seat belt with pre-tensioner
    - Side air bag module
    - Side impact sensor
  - (4) Always use the designated special tools and test equipment.
  - (5) Store components removed from the SRS and seat belt with pre-tensioner in a clean and dry place.  
The air bag module and seat belt with pre-tensioner should be stored on a flat surface and placed so that the pad surface is facing upward.  
Do not place anything on top of it.
  - (6) Never attempt to disassemble or repair the SRS components (SRS air bag control unit, air bag module, clock spring and side impact sensor) and seat belt with pre-tensioner.
  - (7) Whenever you finish servicing the SRS and seat belt with pre-tensioner, check the SRS warning lamp operation to make sure that the system functions properly.
  - (8) Be sure to deploy the air bag and seat belt with pre-tensioner before disposing of the air bag module and seat belt with pre-tensioner or disposing of a vehicle equipped with an air bag and seat belt with pre-tensioner. (Refer to GROUP 52B – Air Bag Module and Seat Belt Pre-tensioner Disposal Procedures.)
2. Observe the following when carrying out operations on places where SRS components and seat belt with pre-tensioner are installed, including operations not directly related to the SRS air bag and seat belt with pre-tensioner.
  - (1) When removing or installing parts do not allow any impact or shock to the SRS components and seat belt with pre-tensioner.
  - (2) SRS components and seat belt with pre-tensioner should not be subjected to heat, so remove the SRS components and seat belt with pre-tensioner before drying or baking the vehicle after painting.
    - SRS components: 93°C or more
    - Seat belt with pre-tensioner 90°C or moreAfter re-installing them, check the SRS warning lamp operation to make sure that the system functions properly.